

NV100HD

This user manual includes detailed usage instructions for your camera. Please read this manual thoroughly. Click a button below for more information.

Quick search

Contents

1 Basic functions

2 Extended functions

3 Shooting options

4 Playback/Editing

5 Appendix

Index



Health and Safety Information

Always comply with the following precautions and usage tips to avoid dangerous situations and ensure peak performance of your camera:



Warning - situations that could cause injury to yourself or others



Caution – situations that could cause damage to your camera or other equipment



Note - notes, usage tips, or additional information



Do not use your camera near flammable or explosive gases and liquids

Do not use your camera near fuels, combustibles, or flammable chemicals. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the camera or its accessories.

Keep your camera away from small children and pets

Keep your camera and all accessories out of the reach of small children and animals. Small parts may cause choking or serious injury if swallowed. Moving parts and accessories may present physical dangers as well.

Prevent damage to subjects' eyesight

Do not use the flash in close proximity (closer than 1 m/3 ft) to people or animals. Using the flash too close to your subject's eyes can cause temporary or permanent damage.

Handle and dispose of batteries and chargers with care

- Use only Samsung-approved batteries and chargers.
 Incompatible batteries and chargers can cause serious injuries or damage to your camera.
- Never dispose of batteries in a fire. Follow all local regulations when disposing of used batteries.
- Never place batteries or cameras on or in heating devices, such as microwave ovens, stoves, or radiators. Batteries may explode when overheated.



Handle and store your camera carefully and sensibly

- Do not allow your camera to get wet—liquids can cause serious damage. Do not handle your camera with wet hands. Water damage to your camera can void your manufacturer's warranty.
- Do not expose the camera to direct sunlight or high temperatures for an extended period of time. Prolonged exposure to sunlight or extreme temperatures can cause permanent damage to your camera's internal components.
- Avoid using or storing your camera in dusty, dirty, humid, or poorly-ventilated areas to prevent damage to moving parts and internal components.

- Remove the batteries from your camera when storing it for an extended period of time. Installed batteries may leak or corrode over time and cause serious damage to your camera.
- Protect your camera from sand and dirt when using it on beaches or in other similar areas.
- Protect your camera and monitor from impact, rough handling, and excessive vibration to avoid serious damage.
- Exercise caution when connecting cables or adapters and installing batteries and memory cards. Forcing the connectors, improperly connecting cables, or improperly installing batteries and memory cards can damage ports, connectors, and accessories. Do not insert foreign objects into any of your camera's compartments, slots, or access points. Damage due to improper use may not be covered by your warranty.

Protect batteries, chargers, and memory cards from damage

- Avoid exposing batteries or memory cards to very cold or very hot temperatures (below 0° C/32° F or above 40° C/104° F).
 Extreme temperatures can reduce the charging capacity of your batteries and can cause memory cards to malfunction.
- Prevent batteries from making contact with metal objects, as this can create a connection between the + and - terminals of your battery and lead to temporary or permanent battery damage.
- Prevent memory cards from making contact with liquids, dirt, or foreign substances. If dirty, wipe the memory card clean with a soft cloth before inserting in your camera.

- Turn off the camera when inserting or removing the memory card.
- Do not bend drop, or subject memory cards to heavy impact or pressure.
- Do not use memory cards that have been formatted by other cameras or by a computer. Reformat the memory card with your camera.
- Never use a damaged charger, battery, or memory card.

Use only Samsung-approved accessories

Using incompatible accessories may damage your camera, cause injury, or void your warranty.

Protect your camera's lens

- Do not expose the lens to direct sunlight, as this may discolour the image sensor or cause it to malfunction.
- Protect your lens from fingerprints and scratches. Clean your lens with a soft, clean, debris-free lens cloth.



Allow only qualified personnel to service your camera

Do not allow unqualified personnel to service the camera or attempt to service the camera yourself. Any damage that results from unqualified service is not covered by your warranty.

Ensure maximum battery and charger life

- Overcharging batteries may shorten battery life. After charging is finished, disconnect the cable from your camera.
- Over time, unused batteries will discharge and must be recharged before use.
- Disconnect chargers from power sources when not in use.
- Use batteries only for their intended purpose.

Exercise caution when using the camera in humid environments

When transferring the camera from a cold environment to a warm and humid one, condensation can form on the delicate electronic circuitry and memory card. In this situation, wait for at least 1 hour until all moisture has evaporated before using the camera.

Check that the camera is operating properly before use

The manufacturer takes no responsibility for any loss of files or damage that may result from camera malfunction or improper use.

©2008 SAMSUNG DIGITAL IMAGING CO., LTD.

The specifications of the camera or contents of this manual may be changed without prior notice due to upgrade of camera functions.

Copyright information

- Microsoft Windows and the Windows logo are registered trademarks of the Microsoft Corporation.
- HDMI, the HDMI logo and the term "High Definition Multimedia Interface" are trademarks or registered trademarks of HDMI Licensing LLC.
- QuickTime® and QuickTime® logo are trademarks or registered trademarks of Apple Computer, Inc., used under license.

Organisation of the user manual

1	Basic functions
2	Extended functions
3	Shooting options
4	Playback/Editing
5	Appendix

Indications used in this manual

Shooting mode	Indication
AUTO	AUTO
PROGRAM	P
MANUAL	M
DUAL IS	(III)) DUAL
NIGHT	C
BEAUTY SHOT	G
SCENE	SCENE
MOVIE	,000

Shooting mode icons next to a title

These icons indicate that a function is available in the corresponding modes. The **SCENE** mode may not support functions for all scenes.

e.g.)

Preventing red-eye (AUMO P C () SCENE If the flash fires when you take a photo of a person in the dark, a red glow may appear in the eyes. To prevent this, select Red Eye or Red Eye Fix.





- Available in the AUTO, PROGRAM, NIGHT, BEAUTY SHOT, and some SCENE modes

Icons used in this manual

Icon	Function
	Additional information
\triangle	Situations where you need to be careful
[]	Camera buttons; for example: [Shutter] (represents the Shutter button)
()	Page number for reference
→	The order of options or menus you must select to perform a step; for example: Touch $\rightarrow \longrightarrow$ (represents \rightarrow , followed by \bigcirc).
*	Annotation


Abbreviations used in this manual

Abbreviation	Definition
ACB	Auto Contrast Balance
AEB	Auto Exposure Bracket
AF	Auto Focus
DIS	Digital Image Stabilisation
DPOF	Digital Print Order Format
EV	Exposure Value
OIS	Optical Image Stabilisation
WB	White Balance

Expressions used in this manual


Pressing the shutter

- Half-press [Shutter]: press and hold the shutter halfway down
- Press [Shutter]: press the shutter all the way down

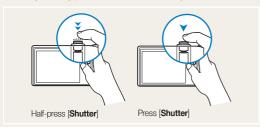

Subject, background, and composition

- Subject: the main object of a scene, such as a person, animal, or still life
- Background: the objects around the subject
- Composition: the combination of a subject and background

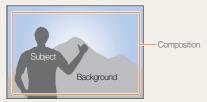

Exposure (Brightness)

The amount of light that enters your camera is called exposure. You can alter the exposure with shutter speed, aperture value, and ISO speed. By altering the exposure, your photos will be darker or lighter.





Normal exposure

Overexposure (too bright)

Quick search



Taking photos of people

- SCENE mode > PORTRAIT, CHILDREN, SELF SHOT ▶ 20
- 'n mode ▶ 21
- Red Eye, Red Eye Fix (to prevent or correct red-eye) ► 33
- Face Detection, Self Portrait, Smile Shot, Blink Detection ► 38



Taking photos at night or in the dark

- **②** mode ▶ 20
- SCENE mode > DAWN, FIREWORK ▶ 20
- Flash options ▶ 33
- ISO speed (to adjust the sensitivity to light)
 35



Taking photos of an action

- Adjust shutter speed in the **M** mode ▶ 22
- Continuous, High Speed, M. Capture ▶ 44



Taking photos of food, insects, or flowers

- **SCENE** mode > CLOSE UP, FOOD ▶ 20
- Macro, Auto Macro (to take close-up photos) ► 36
- White balance (to change the colour tone)
 42



Adjusting the exposure (brightness)

- Adjust exposure in the **M** mode ▶ 22
- ISO speed (to adjust the sensitivity to light)
 35
- EV (to adjust exposure) ▶ 40
- ACB (to compensate for subjects against bright backgrounds) ► 41
- Metering ▶ 42
- AEB (to take three photos of the same scene with different exposures) ► 44



Applying a different effect

- Photo Style (to apply a different tone) \blacktriangleright 45
- Effect (to apply a different colour filter) ▶ 45
- Adjust saturation, sharpness, or contrast
 46



Reducing camera shake

- Optical Image Stabilisation (OIS) ► 18
- ([®])) **DUAL** mode ► 21

- Deleting all files in the memory card ► 50
- Viewing files in a slide show
 ▶ 52
- Viewing files on a TV or HDTV ► 59
- Connecting your camera to a computer ► 61
- Adjusting sound and volume ► 69
- Adjusting the brightness of the display ► 69
- Changing the language displayed on the screen
 69
- Setting the date and time
 ▶ 69
- Formatting the memory card ► 70
- Troubleshooting ▶ 76


Contents

1. Basic functions	. 10
Camera layout	11
Icons	13
Turning your camera on or off	14
Using the touch screen	
Taking photos Zooming	
Reducing camera shake (OIS) ois	
2. Extended functions	. 19
Shooting modes	20
AUTO Using the Auto mode	20
🗷 Using the Night mode	20
SCENE Using the Scene mode	20
(^m)) DUAL Using the Dual IS mode	21
🐧 Using the Beauty Shot mode	21
P Using the Program mode	22
M Using the Manual mode	22
Recording a video	24
Tips for getting a clearer photo	26
Recording voice memos	28
Recording a voice memo	28
Adding a voice memo to a photo	28

3.	Shooting options	. 2
	Selecting a resolution and quality Selecting a resolution Selecting a quality	3
	Using the timer and remote control	3
	Shooting in the dark Preventing red-eye (Rad-eye Using the flash	3
	Adjusting the ISO speed (ISO speed)	
	Changing the camera's focus Using macro Macro Using auto focus (AF Using touch focus (TouchAF) Adjusting the focus area (AF area	3
	Using face detection	3
	Adjusting brightness and colour Adjusting the exposure manually COMPENSATION FOR STATE OF ST	4 4
	Using burst modes	4
	Improving your photos Applying photo styles Photostyle Applying colour Coloreffect Adjusting your photos	4
	Aujustii 19 your priotos	-4

4. I	Playback/Editing	47
	Playing back Starting Playback mode	
	Viewing photos Playing a video Playing voice memos	51 53
	Editing a photo Rotating a photo Resizing photos Editing colour	55 55 55
	Applying a special effect	56 57
	Viewing files on a TV or HDTV	59
	Transferring files to your computer For Windows users For Mac users	61
	Printing photos with a photo printer PictBridge	65


5.	Appendix	. 67
	Camera settings menu Accessing the settings menu Sound setting (1) Display setting (1) Camera setting (2) Connection setting (3)	68 69 69 70
	Error messages	72
	Camera maintenance Cleaning your camera About memory cards About the battery	73 74
	Before contacting a service centre	76
	Camera specifications	79
	Index	83

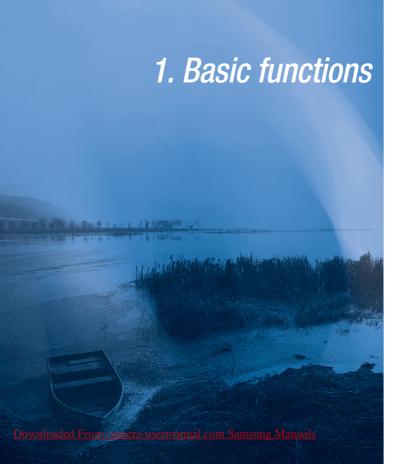

Learn about your camera's layout, icons, and basic functions for shooting.


Camera layout	1
Icons	13
Turning your camera on or off	14
Using the touch screen	
Taking photos	
Reducing camera shake (OIS)	

Camera layout

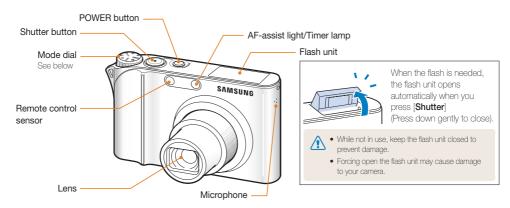

Icon	Mode	Description
AUTO	AUTO	Take a photo quickly and easily with minimal settings
P	PROGRAM	Take a photo by setting options (except for shutter speed and aperture value)
M	MANUAL	Take a photo by setting options manually
(^m)) DUAL	DUAL IS	Take a photo with options suitable for reducing camera shake


Icon	Mode	Description
¢	NIGHT	Take a photo with options for shooting at night
O.	BEAUTY SHOT	Take a photo of a person with options to hide facial imperfections
SCENE	SCENE	Take a photo with options for a preset scene
•	MOVIE	Record a video

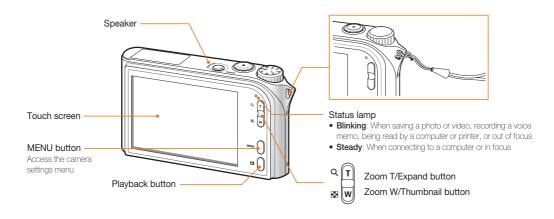



Icons

The icons displayed will change according to the selected mode or options you set.

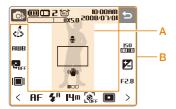

A. Main display

Icon	Description
© ₽	Selected shooting mode
(III	: Fully charged : Fully charged : Charging needed
=10	Internal memory
	Memory card inserted
2	Available number of photos
00:00:06	Available recording time
(GIS)	Optical Image Stabilisation (OIS)
10:00AM 2008/07/01	Current date and time
X5.0	Zoom ratio
•	Voice memo
	Auto focus frame
((Ш))	Camera shake
•00	Option set 1 (of 3)


B. Touch icons

Icon	Description
d.	Selected photo style
AMB	Select a white balance
₽	Adjust the exposure with ACB
	Select a display type
5	Return to the previous screen
0	Select a scene
150 8000	Select an ISO speed
, €5	Adjust the brightness of the face
Z	Adjust the exposure manually
1/30	Adjust the shutter speed
, Ø₅	Adjust imperfections of the face
F2.8	Select an aperture value
AF	Select an auto focus option
\$ ⁸	Select a flash option
280 H0	Select a video resolution
I 4m	Select a photo resolution

Icon	Description
∃ 0	Select a frame rate
COFF.	Select a face detection option
	Select a focus area option
	Select a burst type
[=]	Select a metering option
∭ F	Select photo quality
₹ <u>)</u>	Select a timer option
SOFF	Add a voice memo to a photo or record a voice memo
	Set the Optical Image Stabilisation option
4	Apply a colour effect
	Adjust sharpness
•	Adjust contrast
*	Adjust saturation
<>	Display another row of options


Turning your camera on or off

Press [POWER] to turn your camera on or off.

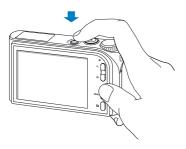

In Playback mode

Press [Playback] to view stored files.

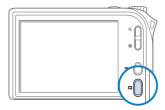



Press and hold [Playback] to mute camera sounds.

Using the touch screen


Learn basic actions to use the touch screen. The touch screen works best when touched with the soft part of your finger.



Do not use any sharp objects to touch the screen. Doing so may damage the screen.

Touching

Touch an icon to open a menu or set an option.

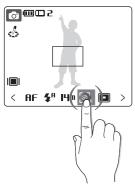



The screen may not recognise your touches correctly when:


- you touch multiple items at the same time
- you use the camera in high humidity environments or with a wet finger
- you use the camera with an LCD protection film or another LCD accessory

Dragging

Drag your finger left or right to scroll horizontally.




Drag your finger up or down to scroll vertically.

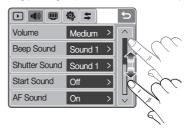

Setting the display

Selecting a display type

Select a style of display for Shooting or Playback mode.

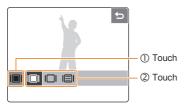


Option	Available mode	Description
Full	Shooting, Playback	Display the name of an option when you touch an icon.
I □I Hide	Shooting, Playback	Hide icons on the screen if you perform no operations for 3 seconds (touch the screen to display icons again).
I□I Basic	Playback	Display icons without the name of an option.
Function Description	Shooting	Display the name of an option and a brief description when you touch an icon.

Setting a start image

Set a start image to be displayed when the camera is turned on.

- In Playback mode, press [MENU].
- 7 Touch → Start Image → User Image.
- 3 Touch **5**.
- 4 Select a photo and touch .
 - If there are no images, you must first take a photo.
- 5 Set a start image.

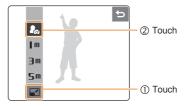



- . Only one start image will be saved in the internal memory.
- If you select a new photo as a start image or reset your camera, the current image will be deleted.
- A wide image or image in 3:2 ratio cannot be set as a start image.

Taking photos


1 Rotate the mode dial to AUTO.



2 Align your subject in the frame.



3 Half-press [Shutter] to focus.

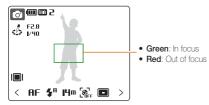

4 Press [Shutter] to take a photo.

Zooming

You can shoot close-up photos by adjusting the zoom. Your camera has a 3.6X optical zoom and 5X digital zoom. By using both, you can zoom in up to 18 times.

Press or press and hold $[{\bf T}]$ to zoom in on your subject. Press or press and hold $[{\bf W}]$ to zoom out.



Q T Zoom in ₩ Zoom out



Downloaded From camera-usermanual.com Samsung Manuals
Basic furctions 17

Digital zoom

If the zoom indicator is in the digital range, your camera is using the digital zoom. The picture quality may deteriorate when you use the digital zoom.






- The digital zoom is not available when using 🖑) SCENE (in some scenes), and P modes and when used with High Speed, M. Capture, or Face Detection
 - . It may take longer to save a photo when using the digital zoom.
 - The focus area will be set to Center AF when using the digital zoom.

Reducing camera shake (OIS)

Reduce camera shake optically in Shooting mode.

- In Shooting mode, touch $\rightarrow \Longrightarrow$. (In some modes, touch > twice.)
- 2 Set an option.
 - If you set the option to on, (iii) will appear on top of the screen.

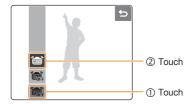



- Optical Image Stabilisation (OIS) may not function properly when:
- you move your camera to follow a moving subject
- vou use digital zoom
- there is too much camera shake
- the shutter speed is slow
- (e.g., when shooting in the & mode)
- the battery is low
- vou take a close-up shot
- . If you use the OIS function with a tripod, your images may be blurred by the vibration of the OIS sensor, Deactivate the OIS function when you use a tripod.

2. Extended functions

Learn how to take a photo by selecting a mode and how to record a video or voice memo.

Downloaded From camera usermanual.com Sainsung Manuals	

Shooting modes
AUTO Using the Auto mode
Using the Night mode
SCENE Using the Scene mode
(D)) DUAL Using the Dual IS mode
\u00e4 Using the Beauty Shot mode
P Using the Program mode
M Using the Manual mode
Recording a video
Tips for getting a clearer photo
December value manage
Recording voice memos
Recording a voice memo
Adding a voice memo to a photo

Shooting modes

Take photos or record videos by selecting the best shooting mode for the conditions.

AUTO Using the Auto mode

Select AUTO to take a photo quickly and easily with minimal settings.

- 1 Rotate the mode dial to AUTO.
- 2 Align your subject in the frame and half-press [Shutter] to focus.
- 3 Press [Shutter] to take the photo.

Using the Night mode


Select **t** to take a photo with options for shooting at night. Use a tripod to prevent your camera from shaking.

- 1 Rotate the mode dial to .
- 2 Align your subject in the frame and half-press [Shutter] to focus.
- 3 Press [Shutter] to take the photo.

SCENE Using the Scene mode

Select **SCENE** to take a photo with options for a preset scene.


- 1 Rotate the mode dial to SCENE.
- 2 Touch ().
- 3 Select a scene.

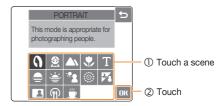

- 4 Align your subject in the frame and half-press [Shutter] to focus.
- 5 Press [Shutter] to take the photo.

(T)) DUAL Using the Dual IS mode

Reduce camera shake and prevent blurred photos with Optical and Digital Image Stabilisation functions.

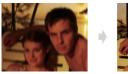



Before correction

After correction

- 1 Rotate the mode dial to (19) DUAL.
- 2 Align your subject in the frame and half-press [Shutter] to focus.
- 3 Press [Shutter] to take the photo.
 - Do not move your camera while 'Capturing!' is displayed on the screen.




- . The digital zoom will not work in this mode.
- The photo will be corrected optically only when taken with a light source that is brighter than fluorescent light.
- . If your subject is moving rapidly, the photo may be blurry.
- Set the Optical Image Stabilisation option to reduce camera shake in different shooting modes. (p. 18)


\(\) Using the Beauty Shot mode

Select \(\bar{\eta} \) to take a photo of a person with options to hide facial imperfections.

- 1 Rotate the mode dial to \u00e9n.
- 2 Adjust the brightness of the face.

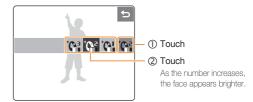

3 Adjust facial imperfections.

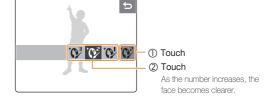


- 4 Align your subject in the frame and half-press [Shutter] to focus.
- 5 Press [Shutter] to take the photo.

P Using the Program mode

Set various options (except for shutter speed and aperture value) in the Program mode.

- 1 Rotate the mode dial to P.
- 2 Set options. (For a list of options, refer to Chapter 3 'Shooting options.')

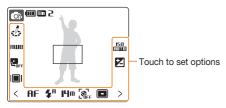

- 3 Align your subject in the frame and half-press [Shutter] to focus.
- 4 Press [Shutter] to take the photo.

M Using the Manual mode

Set options (including shutter speed and aperture value) in the Manual mode. With these two options, you can adjust exposure and represent the photo in different ways as well.

Shutter speed

Shutter speed is the length of time that a camera shutter remains open. When you use a slower shutter speed, light enters your camera for a longer time, which makes the photo brighter. You will get a darker photo with a fast shutter speed.

When using a slow shutter speed, moving subjects may appear blurry. When using a fast shutter speed, you can freeze a fast-moving subject.







Fast shutter speed

Aperture value

As the aperture value is increased, your camera lets less light in, which makes the photo darker. Alternatively, as the aperture value is reduced, your camera lets more light in, which makes the photo brighter.







Big aperture value

Small aperture value


- 1 Rotate the mode dial to M.
- 2 Select a shutter speed.

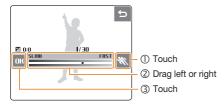

3 Select an aperture value.

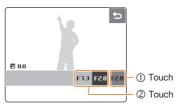

- 4 Set other options as desired. (For options, refer to Chapter 3 'Shooting options.')
- 5 Align your subject in the frame and half-press [Shutter] to focus.
- 6 Press [Shutter] to take the photo.

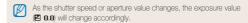


Recording a video

Record videos of up to 20 minutes in length in high definition (1280 X 720 resolution). The recorded video is saved as an H.264 (MPEG4.AVC) file.




- H.264 (MPEG4 part10/AVC) is a high-compression video format established by international standard organisations ISO/IEC and ITU-T.
- Some memory cards may not support high definition recording. In this case, set a lower resolution. (p. 30)
- When the Optical Image Stabilisation (is activated, your video may be recorded with the OIS operation sound.
- The zoom sound may be recorded if you use the zoom while recording a video.
- 1 Rotate the mode dial to \(\cdot\).
- 2 Select a frame rate (the number of frames per second).

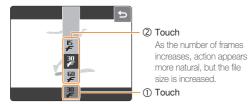



When **60 FPS** is selected, the video will be recorded at 320x240 resolution.

3 Touch > and select a sound option.

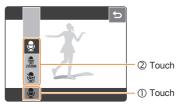

ı	Optio	on	Description
	\$	Off	Record a video without sound.
	S zoom	Zoom Mute	Record a video without sound while zooming.
	€	On	Record a video with sound.

- 4 Set other options as desired. (For options, refer to Chapter 3 'Shooting options.')
- 5 Press [Shutter].
- 6 Press [Shutter] again to stop recording.

To pause while recording a video

The camera allows you to pause temporarily while recording a video. With this function, you can record your favourite scenes as a single video.



(Touch again to resume.)

Tips for getting a clearer photo






Make sure nothing is blocking the lens.

alf-pressing the shutter button



Half-press [Shutter] and adjust the focal point. Focus and exposure will be adjusted automatically or the flash will pop up if necessary.

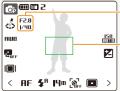

The aperture value and shutter speed are automatically set.

Focus frame


- . Press [Shutter] to take the photo if displayed in green.
- · Change the frame and half-press [Shutter] again if displayed in red.

Reducing camera shake



- · Set the Optical Image Stabilisation option to reduce camera shake optically. (p. 18)
- Select the (D) pual mode to reduce camera shake both optically and digitally. (p. 21)

When (is displayed

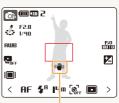

Camera shake

When shooting in the dark. avoid setting the flash option to Slow Sync or Off. The aperture remains open longer and it may be harder to hold the camera still.

- . Use a tripod or set the flash option to Fill in. (p. 33)
- Set ISO speed options. (p. 35)



Preventing your subject from being out of focus

- It is hard to get your subject in focus when:
 - there is little contrast between the subject and background
 - (When your subject is wearing a colour of clothing that is similar to the background)
 - the light source behind the subject is too bright
 - your subject is shiny
 - your subject includes horizontal patterns, such as blinds
 - the subject is not positioned in the centre of the frame



Use the focus lock

Half-press [Shutter] to focus. When the subject is in focus, you can reposition the frame to change the composition. When you are ready, press [Shutter] completely to take your photo.





. When you take photos in low light



Turn the flash on. (p. 33)

· When subjects are moving fast



Use the continuous, high speed or motion capture. (p. 44)

Recording voice memos

Record a voice memo that you can play back at any time or add a voice memo to a photo as a short reminder of shooting conditions.



You will get the best sound quality when recording 40 cm away from the camera.

Recording a voice memo

- 1 In Shooting mode (except №), touch >.
- 2 Touch 🔩 → 📆.



- 3 Press [Shutter] to record.
 - The available recording time will be displayed on top of the screen
 - You can record voice memos of up to 10 hours in length.
- 4 Press [Shutter] to stop.
 - Press [Shutter] again to record a new voice memo.
- 5 Touch to switch to Shooting mode.

Adding a voice memo to a photo

- 1 In Shooting mode (except №), touch >.
- 2 Touch → •.



- 3 Align your subject in the frame and take a photo.
 - · You will begin recording a voice memo right after taking the photo.
- 4 Record a short voice memo (10 seconds maximum).
 - Press [Shutter] to stop recording a voice memo.



Learn about the options you can set in shooting mode.

Selecting a resolution and quality	3
Using the timer and remote control	3
Shooting in the dark	3
Preventing red-eye	
Using the flash	
Changing the camera's focus	3
Using macro	3
Using auto focus	
Using touch focus	
Using face detection	
_	
Adjusting brightness and colour	
Compensating for backlighting	
Changing the metering option	
Selecting a light source (White balance)	
Using burst modes	4
Improving your photos	4
Applying photo styles	4
Applying colour	
Adjusting your photos	4


Selecting a resolution and quality

Selecting a resolution AUTO PM COLOR & G SCENE A

As you increase the resolution, your photo or video has more pixels in it, so it can be printed on larger paper or displayed on a larger screen. When you use a high resolution, the file size will also increase.

When taking a photo:

- 1 In Shooting mode, touch IIIm.
- 2 Select a resolution.

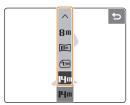

Option		Description
14 m	4384x3288	Print on A1 paper.
(I3m	4384x2920	Print on A1 paper in wide ratio (3:2).
10=	4384x2464	Print on A2 paper or playback on an HDTV.
8 m	3264x2448	Print on A3 paper.

Option		Description
5m	2592x1944	Print on A4 paper.
2m	1920x1080	Print on A5 paper or playback on an HDTV.
I m	1024x768	Attach to an email or post on a Web page.

When recording a video:

- 1 In the mode, touch 280.
- 2 Select a resolution.
 - For HD quality, select 1280x720HQ or 1280x720.



Option		Description
1280 HQ	1280x720	Playback high-quality files on an HDTV.
1280	1280x720	Playback on an HDTV.
640	640x480	Playback on a general TV.
320	320x240	Post on a Web page.

Selecting a quality AUTO P M COUNT & Y SCENE

Photos you take are compressed and saved in a JPG format. The higher quality you select, the better photos you will get, but the file size will also increase.


- In Shooting mode, touch > → □ ...
 (In some modes, touch □ ...
- 2 Select a photo quality.



Option	Description
Super Fine	Super fine quality
Fine	Fine quality
™ Normal	Normal quality

Using the timer and remote control AUTO P M COUNTY & G SCENE, AND A SCENE OF THE PROPERTY OF T

- 1 In Shooting mode, touch > → Ç
- 2 Select a timer option.

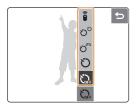

Option	Description	
€ Off	The timer is not active.	
🖒 10 Sec	Take a photo in 10 seconds.	
_ට ²⁵ 2 Sec	Take a photo in 2 seconds.	
ට ^ව Double	Take a photo in 10 seconds and take another in 2 seconds.	
Remote	Take a photo in 2 seconds each time you press the shutter button on the remote control. Remote control range	

3 Press [Shutter] to start the timer.

• The timer lamp blinks. The camera will automatically take a photo after the specified time.





- . Touch the timer icon to cancel the timer.
- When **Smile Shot** or **Blink Detection** is set, the timer is not available.

Ownloaded From camera-usermanual.com Samsung Manuals
Shooting Options 32

Shooting in the dark

Preventing red-eye AUTO P & 1) SCENE

If the flash fires when you take a photo of a person in the dark, a red glow may appear in the eyes. To prevent this, select **Red Eye** or **Red Eye Fix**.






Using the flash AUTO PM & SCENE

Use the flash when taking photos in the dark.

- 1 In Shooting mode, touch \$\mathbb{F}^\text{R}.
- 2 Select a flash option.

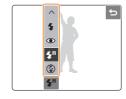

Option	Description
Off	 The flash will not fire. Camera shake warning (((**))) is displayed in the dark.
♣ Auto	The flash fires when the subject or background is dark.
Red Eye*	 The flash fires when the subject or background is dark. The camera reduces red-eye.
🕻 Fill in	The flash always fires.Light intensity is adjusted automatically.

Option	Description
\$5 Slow Sync	The flash fires and the shutter stays open longer. Select this in the evening or in the dark. It is a good idea to use a tripod to prevent your photos from blurring.
Red Eye Fix*	 The flash fires when the subject or background is dark. The camera corrects red-eye through its advanced software analysis.

The options may differ depending on the shooting mode.

* There is an interval between two bursts of the flash. Do not move until the flash fires a second time



- Flash options are not available if you set burst options or select Self Portrait or Blink Detection.
 - . Make sure that your subjects are within the recommended distance from the flash. (p. 79)
 - If there is reflected light or much dust in the air, tiny spots may appear on your photo.

How to use the flash

Half-pressing [Shutter] will pop the flash up when it is needed. Pressing [Shutter] will cause the flash to fire and will take a photo.





- · While not in use, keep the flash unit closed to prevent damage.
- . Forcing open the flash unit may cause damage to your camera.


Press down gently to close.



Adjusting the ISO speed PM

ISO speed is the measure of a film's sensitivity to light as defined by the International Organisation for Standardisation (ISO). The higher ISO speed you select, the more sensitive to light your camera becomes. With a higher ISO speed, you can get a better photo without using the flash.

- 2 Select an ISO speed option.
 - Select 50 to use an appropriate ISO speed based on the brightness of the subject and lighting.

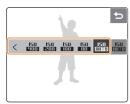



- The higher ISO speed you select, the more image noise you may
 get.
- When High Speed, M. Capture, AEB, Blink Detection, or ACB is set or M mode is selected, some ISO speed options are not available.
- When you set the ISO speed to 3200, the resolution will be set to 3M.

Changing the camera's focus

Using macro AUTO PM (1) DUAL PM

Select **Macro** or **Auto Macro** to take close-up photos of subjects, such as flowers or insects.




- Try to hold the camera very still to prevent blurry photos.
 - Turn the flash off if the distance to the subject is less than 40cm.

Using auto focus AUTO P M CODUAL A

To take sharp photos, select the appropriate focus according to your distance from the subject.

- 1 In Shooting mode, touch **AF**.
- 2 Select a focus distance option.

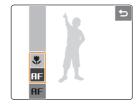


Option	Description
RF Normal (AF)	Focus on a subject farther than 80cm.
Macro	Focus on a subject between 5 to 80cm (between 50 and 80cm while using zoom).
Auto Macro	Focus on a subject farther than 5 cm (farther than 50 cm while using zoom).

The options may differ depending on the shooting mode.

Using touch focus PM (1) DUAL

You can focus on a particular part of your scene. Touch where you want to focus. Set the focus area to **Touch AF**.

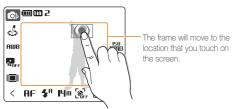




- When you do not touch any area on the screen, the frame will be in the centre of the screen.
- When you set the face detection option, this feature will not be available.

Adjusting the focus area AUTO P M COUL & SCENE

You can get clearer photos by selecting an appropriate focus area according to your subject's location in the scene.

- 1 In Shooting mode, touch ...
- 2 Select a focus area option.

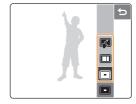


Option	Description
Center AF	Focus on the centre (suitable when subjects are located in the centre).
■ Multi AF	Focus on one or more of nine possible areas (when the digital zoom is in use, the focus will change to Center AF).
Touch AF	Focus on the point that you touch on the screen.


The options may differ depending on the shooting mode.

Using face detection AUTO PM COULT 'S SCENE

If you use face detection options, your camera can automatically detect a human face. When you focus on a human face, the camera adjusts the exposure automatically. Take photos quickly and easily by using Blink Detection to detect closed eyes or Smile Shot to capture a smiling face.

- 1 In Shooting mode, touch & ...
- 2 Select a face detection option.

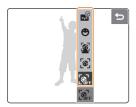

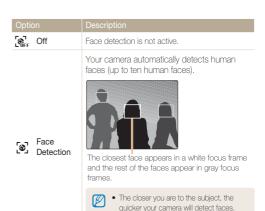

. If your camera fails to detect a face, it will

focus in the centre.

Option	Description	Option Description
Self Porti	When your hear a quick beep, press	If your camera detects closed eyes, it will take three photos in succession. Blink Detection When 'Picture taken with eyes closed' message appears, take another photo. The options may differ depending on the shooting mode.
	[Shutter]. To turn the beep on or off, select Self Portrait in the sound settings. (p. 69) The camera automatically releases the shutter	Face detection may not be effective when: the subject is far from the camera (The focus frame will appear orange for Smile Shot and Blink Detection) it is too bright or too dark the subject is not facing the camera
Smile	when it detects a smiling face. When your subject smiles broadly, your camera can detect the	 the subject is wearing sunglasses or a mask Face detection is not available when using a photo effect or photo style. When you use the face detection option, the digital zoom will not work. When Smile Shot or Blink Detection is set, the timer is not available. When you use the face detection option, the focus area will be set to Center AF.

Adjusting brightness and colour

Adjusting the exposure manually P On Manually

Depending on the intensity of the ambient light, your photos may be too bright or dark. In these cases, you can adjust the exposure to get a better photo.








Darker (-) Neutral


Brighter (+)

- 1 In Shooting mode, touch 2.
- 2 Drag left or right to adjust the exposure.
 - +: brighter, -: darker

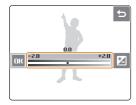

3 Touch OK.

• The adjusted exposure value will appear as shown below.

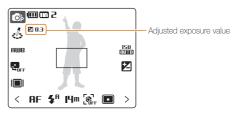



- Once you adjust the exposure, the setting will remain the same. You
 may need to change the exposure value to avoid overexposure or
 underexposure.
- If you cannot decide on an appropriate exposure, select AEB (Auto Exposure Bracket). The camera takes photos with different exposures: normal, underexposed, overexposed. (p. 44)

Compensating for backlighting PM

When the light source is behind your subject or there is high contrast between your subject and the background, your subject is likely to appear dark in the photo. In this case, set the Auto Contrast Balance (ACB) option.





Without ACB

With ACB

- 1 In Shooting mode, touch ...
- 2 Select an ACB option.



Option	Description
COFF Off	ACB is off.
• On	ACB is on.




- The ACB feature is always on in the AUTO mode.
- When the ACB feature is on, High Speed, M. Capture, AEB, or some ISO speed options are not available.

Changing the metering option PM () DUAL A

The metering mode refers to the way in which a camera measures the quantity of light. The brightness and lighting of your photos will vary depending on the metering mode you select.

- 1 In Shooting mode, touch > → [■].
 (In the \\ \mathref{m}\) mode, touch [■].)
- 2 Select a metering option.

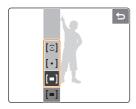

Option	Description
[■] Multi	Your camera divides the scene into several areas, and then measures the light intensity of each area. Suitable for general photos.
[•] Spot	Your camera measures only the light intensity of the very centre of the frame. If a subject is not in the centre of the scene, your photo may come out too bright or dark. Suitable for a subject with backlighting.

Option	Description
[:] Center Weighted	Your camera averages the meter reading of the entire frame with emphasis placed on the centre. Suitable for photos with subjects in the centre of the frame.

Selecting a light source (White balance) PM ODDER, AS

The colour of your photo depends on the type and quality of the light source. If you want the colour of your photo to be realistic, select an appropriate lighting condition to calibrate the white balance, such as Auto WB, Daylight, Cloudy, or Tungsten.



AWB (Auto WB)



(Cloudy)




(Daylight)



- (Tungsten)

- 1 In Shooting mode, touch **AWB**.
- 2 Select a white balance option.
 - Drag left or right to preview.

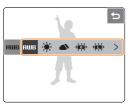

Icon	Description
АШВ Auto WB	Use automatic settings depending on the lighting conditions.
- Daylight	Select when taking outdoor photos on a sunny day.
Cloudy	Select when taking outdoor photos on a cloudy day or in shadows.
Fluorescent_H	Select when shooting under a daylight fluorescent or three-way fluorescent light.
Fluorescent_L	Select when shooting under white fluorescent light.


Icon	Description
	Select when taking indoor photos under incandescent bulbs or halogen lamps.
Custom Set	Use your pre-defined settings.



You can set colour effect options to **Normal** or **Negative** when you select a white balance option (except for **Auto WB**). (p. 45)

Defining your own white balance

- 1 From the white balance options, touch $\rightarrow \blacksquare$.
- 2 Aim the lens at a piece of white paper.

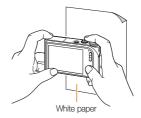


- 3 Press [Shutter].
 - Touch **FORMER** or **5** to cancel.

Using burst modes PM SCENE

It can be difficult to take photos of fast-moving subjects or capture natural facial expressions and gestures of your subjects in photos. In these cases, select one of the burst modes.



- 2 Select a burst option.

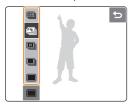

Ориоп	Description
Single	Take a single photo.
Continuous	While [Shutter] is fully pressed down, the camera takes photos continuously. The maximum number of photos depends on the capacity of your memory card.

Option	Description
High Speed	While [Shutter] is fully pressed down, the camera takes three photos every two second. The shooting speed may slow depending on the shooting conditions and the number of photos taken.
M. Capture	While [Shutter] is fully pressed down, the camera takes 1 megabyte photos (15 photos per two second; maximum of 30 photos). The camera automatically shows you the photos just taken and then saves them.
Œ AEB	Take three photos with different exposures: normal, underexposed, and overexposed. It is best to use a tripod because it takes some time to save photos taken with AEB.

The options may differ depending on the shooting mode.



- You cannot use the flash and timer unless you select Single.
- When you select High Speed, M. Capture, or AEB, the ACB or some ISO speed options are not available.
- When you select High Speed or M. Capture, the digital zoom is not available.
- When you select M. Capture, the resolution will be set to 1M.

Improving your photos

Applying photo styles AUTO PM COULL

Apply different style to your photos, such as Soft, Vivid, or Forest.








Soft Vivid

Forest

- 2 Select a photo style.
 - · Drag left or right to preview.

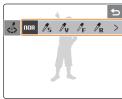



When you select a photo style, the white balance will be set to Auto WB

Applying colour PM SCENE PM

Apply different effects to your photos, such as B & W, Sepia, or Blue.








B&W

Sepia

Blue

- 1 In Shooting mode, touch \gt twice \rightarrow \P . (In some modes, touch \mathbb{R}.)
- 2 Select a colour effect.
 - . Drag up or down to preview.

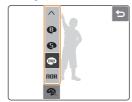




- . Select Normal if you want to use face detection options, or any white balance settings.
- . If you select a photo style (except for Normal), this feature is not available.

Downloaded From camera-usermanual.com Samsung Manuals Shooting Options 45

Adjusting your photos PM

Adjust the sharpness, saturation, and contrast of your photos.

- 1 In Shooting mode, touch > twice.
- 2 Select an adjustment option.
 - 🖪: Sharpness
 - **●**: Contrast
 - 🔥: Saturation
- 3 Select an option (e.g. Sharpness).

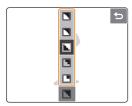

Sharpness option	Description
Vivid+/ Vivid	Sharpen the edges to improve the clarity of your photos. This may also increase the noise on your photos.
Normal	Do not apply any effect (suitable for printing).
Soft/ Soft+	Soften the edges on your photos (suitable for editing the photos on your computer).

Contrast option	Description
O +	Increase the colour and brightness.
O -	Decrease the colour and brightness.
Saturation option	Description
Saturation option	Description Increase the saturation.



If you select a photo style (except for **Normal**), you cannot adjust contrast or saturation.



Learn how to play back photos, videos, or voice memos and edit photos or videos. You will also learn how to connect your camera to your computer, photo printer, TV, or HDTV.

Playing back	4
Starting Playback mode	4
Viewing photos	5
Playing a video	5
Playing voice memos	5
Editing a photo	5
Rotating a photo	5
Resizing photos	5
Editing colour	5
Applying a special effect	5
Correcting exposure problems	5
Creating a print order	5
Viewing files on a TV or HDTV	5
Transferring files to your computer	6
For Windows users	6
For Mac users	6
Printing photos with a photo printer	6


Playing back

Starting Playback mode

View photos or play videos and voice memos stored in your camera.

1 Press [Playback].


- The most recent file you have taken or recorded will be displayed.
- If the camera is off, it will turn on.
- 2 Drag your finger left or right to scroll through files.

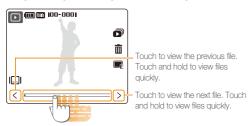



- If you want to view files stored in the internal memory, remove your memory card.
- You can use an optional remote control to play back files. (See the 'HDMI Cradle Manual')

Display in Playback mode

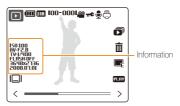


Icon	Description
100-0001	Folder name – File name
,00	Video file
π€	Protected file
•	Photo includes a voice memo
	Print order has been set (DPOF)
I I	Select a display type (p. 16)
	Slide show (p. 52)
â	Delete files (p. 50)
	Edit menu for photos (p. 55)
PLAY	Play videos or voice memos (Video p. 53/Voice memo p. 54)

Viewing files by date

View files by the date they were saved.

- 1 In Playback mode, press [MENU].
- 2 Touch View → Date.
 - . Touch All to view all files.
- 3 Select the date the file was saved.

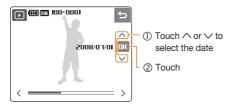


- 4 Drag your finger left or right to scroll through files.
 - Touch to change the date.

Viewing files as thumbnails

Scan through files using thumbnails.



In Playback mode, press $[\mathbf{W}]$ to enter the thumbnail view (press $[\mathbf{T}]$ to exit the thumbnail view).

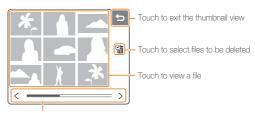


To scroll through files:

- touch < or >
- drag the scrollbar left or right

Protecting files

Protect your files from accidential deletion.

- 1 In Playback mode, press [MENU].
- 2 Touch Protect.
- 3 Touch Select or All.
 - If you touch All, skip to step 5.
- 4 Select a file.

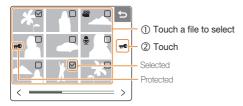

- 5 Touch Lock.
 - To unlock the file, touch Unlock.

Deleting files

Delete single files or all files at once. You cannot delete protected files.

To delete a single file,


- 1 In Playback mode, select a file and touch 贏.
- 2 Touch **Yes** to delete the file.

To delete all files,

- In Playback mode, press [MENU].
- 2 Touch Delete → All.
- 3 Touch Yes to delete all files.

Alternate way to delete a file

While viewing a file in Playback mode, draw an X on the screen. Touch **Yes** to delete the file.

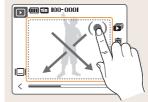

Restoring photos from the recycle bin

If you activate the recycle bin, files you delete will be sent to the recycle bin instead of being deleted permanently (p. 70). This applies to single files or selected files only-if you choose to delete all files, those files will not be sent to the recycle bin.

The recycle bin will hold up to 10MB of files. Once you exceed the 10MB limit, files will be automatically deleted (the oldest file in the recycle bin will be deleted first).

- 1 In Playback mode, press [MENU].
- 2 Touch ♦ → Recycle Bin → Recycle Folder.
 - The restoration starts.
 - Touch

 to cancel the restoration.



- This function does not work for videos or voice memos.
- . It may take longer to delete files when using the recycle bin function.
- If you format the internal memory, all files in the recycle folder will be deleted.
- To view files in the RECYCLE folder, connect your camera to your computer without a memory card.

Copying files to the memory card

You can copy files from the internal memory to a memory card.


- 1 In Playback mode, press [MENU].
- 2 Touch Copy to Card.
- 3 Touch Yes to copy files.

Viewing photos

View a photo by changing the orientation by touch, zoom in on part of a photo, or view photos in a slide show.

Rotating a photo by touch

While viewing a single file, drag your finger as shown below to rotate the photo 90°.

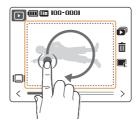


Enlarging a photo



In Playback mode, press [T] to enlarge a photo (press [W] to reduce a photo).

Enlarged area

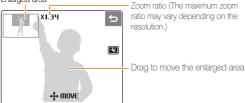

Icon	Description
4	Crop the enlarged photo (it will be saved as a new file).
5	Go back to the original view.

Starting a slide show

You can apply effects and audio to your slide show.

- 1 In Playback mode, touch 🔊.
- 2 Set a slide show effect.



Option		Description
OFF	Effect	Select a transition effect.Select Off for no effect.
•	Interval	Set the interval between photos. This will not be available when Off or Basic is selected in the Effect menu.
OFF	Music	Select background audio.
\rightarrow	Play Mode	Select whether or not to loop the slide show.


- 3 Touch ▶ to start the slide show.
 - Touch | to pause the show.
 - Touch **5** to switch to Playback mode.

Playing a video


You can play a video, capture an image from a video, or crop a video.

- 1 In Playback mode, select a video and touch PLRY.
- 2 Use the following icons to control playback.



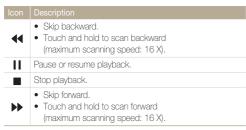

Cropping a video

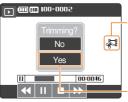

- ① Touch at the point where you want the new video to begin and touch again at the point where you want it to end.
- 2 Touch



- . The original video should be at least 5 seconds long.
- The edited video will be saved as a new file.

Capturing an image during playback



- Touch at the point where you want to save a still image.
- ② Touch
 (It will appear when you touch
- A captured image will have the same file size as the original video file and will be saved as a new file.

Playing voice memos

Playing a voice memo


- 1 In Playback mode, select a voice memo and touch PLRY.
- 2 Use the following icons to control playback.



Icon	Description
44	Skip backward. Touch and hold to scan backward.
П	Pause or resume playback.
	Stop playback.
>>	Skip forward. Touch and hold to scan forward.

Playing a voice memo added to a photo

- 1 In Playback mode, select a photo that includes a voice memo and touch pray.
- 2 Use the following icons to control playback.

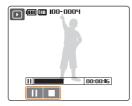


Icon	Description
Ш	Pause or resume playback.
	Stop playback.

Editing a photo

Perform photo editing tasks such as rotating, resizing, eliminating red eyes, and adjusting brightness, contrast, or saturation.

Rotating a photo

- 1 In Playback mode, select a photo and touch E.
- 2 Rotate the photo.

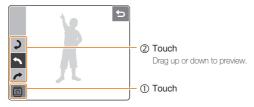


3 Touch **DK** to save the change.

Resizing photos

You can reduce the size of a photo and save it as a new file.

- 1 In Playback mode, select a photo and touch .
- 2 Select a resolution.
 - Your change will be saved automatically.

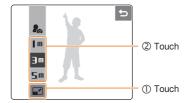

Editing colour

Apply a different colour tone to the photo, such as B & W, Sepia, or Blue and save it as a new file.








B&W

Sepia

Blue

- 1 In Playback mode, select a photo and touch -
- 2 Select a colour tone.

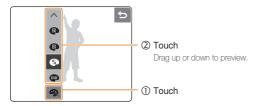


3 Touch **OK** to save the change.

Applying a special effect

Apply special effects to the photo, such as colour filters or vignette effects.

- 1 In Playback mode, select a photo and touch 📭.
- 2 Select a special effect.

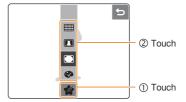

Optio	on	Description
©	Color Filter	Change background colours to black and white to make the main subject stand out.
	Shaded	Apply a vignette effect that darkens the outer edges of an image in comparison to the centre of the image.
	Elegant	Apply effects to the photo to make it brighter and softer.
	Add Noise	Add noise to the photo to give it an aged look.

3 Touch **DK** to save the change.

Correcting exposure problems

Adjust ACB (Auto Contrast Balance), brightness, contrast, or saturation; remove red eyes; or hide facial imperfections. Edited photos will be saved as new files.

Adjusting ACB (Auto Contrast Balace)

- 1 In Playback mode, select a photo and touch E.
- 2 Touch $\square \rightarrow \land \rightarrow \square$.
- 3 Touch **DK** to save the change.

Removing red eyes

- 1 In Playback mode, select a photo and touch .
- 2 Touch $\square \rightarrow \land \rightarrow \checkmark$.
- 3 Touch **DK** to save the change.

Adjusting Brightness/Contrast/Saturation

- 1 In Playback mode, select a photo and touch -
- 2 Touch IIII and select an adjustment option:
 - 🔅 : Brightness
 - • Contrast
 - 🎎: Saturation
- 3 Select a value. (-: less or +: more)
 - · Drag left or right to preview.
- 4 Touch **OK** to save the change.

Hiding facial imperfections

- 1 In Playback mode, select a photo and touch .
- 2 Touch $\longrightarrow \heartsuit$.
- 3 Adjust a level.
 - · As the number increases, the face becomes clearer.
- 4 Touch **OK** to save the change.

Creating a print order

Define which photos are to be printed and information about the number of copies or paper size.



- The memory card can be taken to a print shop that supports DPOF (Digital Print Order Format) or you can print out photos directly through a DPOF-compatible printer at home.
- The wide photos may print with the left and right edges cut off, so check whether or not they are wide images when ordering prints.
- You cannot set a DPOF for the photos stored in the internal memory.
- 1 In Playback mode, select a photo and press [MENU].
- 2 Touch DPOF.
- 3 Set DPOF options.



Option	Description
Images	Select a photo to be printed. • ONE: print the current photo only. • RLL: print all photos in the memory card.
Size	Specify the size of the print. • ONE: specify the size of the current photo. • RLL: specify the size of all photos.
Ⅲ Index*	Select whether to print the photos as thumbnails.






You can print specific-sized photos only with DPOF 1.1-compatible printers.

Viewing files on a TV or HDTV

Play back photos or videos by connecting your camera to a TV using the provided A/V cable.

- 1 Select a video signal output according to your country or region. (p. 71)
- 2 Turn off your camera and TV.
- 3 Connect your camera to your TV using the A/V cable.

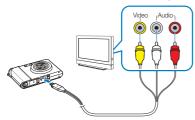

- 4 Turn on your TV and select the video output mode using the TV remote control.
- 5 Turn on your camera and press [Playback].
- 6 View photos or play videos using the touch screen on your camera.




- Digital noise may occur or part of an image may not appear on some TVs.
- The images may not appear centred on the TV screen depending on your TV settings.
- You can capture a photo or video while the camera is connected to a TV

Viewing files on an HDTV

You can view high-quality and uncompressed photos or videos on an HDTV using the optional HDMI cradle. HDMI (High Definition Multimedia Interface) is supported by most HDTVs. For details, see the 'HDMI cradle manual'.

- 1 In Shooting or Playback mode, press [MENU].
- 2 Set HDMI resolution.

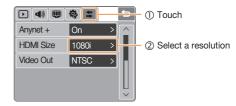


3 Turn off your camera and HDTV.

Downloaded From camera-usermanual.com Samsung Manuals Playback/Editing 59

4 Insert your camera into the cradle and plug the HDMI cable into the HDTV and the cradle.



Disconnect the A/V cable if it is connected to the cradle.

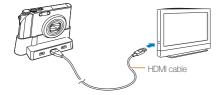

- 5 Turn on your camera.
 - . The HDTV will be powered on automatically and the camera screen will be displayed.
- 6 View files using the touch screen on your camera or a remote control of your camera or HDTV.



If your HDTV supports the Anynet+(CEC) profile, turn the Anynet+ on in the settings menu (p. 71) to control all connected Samsung AV devices with the TV remote control. For details, see the 'HDMI cradle manual'.

Transferring files to your computer

For Windows users

Transfer files by connecting your camera to your PC. Use the supplied USB cable after installing any programs you need from the CD.

Installing programs

Hardware and software requirements

Item	Requirements
CPU	Pentium III 500MHz or better (Pentium III 800MHz or better recommended)
RAM	256 MB or more (512MB or more recommended)
OS	Windows 2000 / XP / Vista
Hard disk capacity	250MB or more (1GB or more recommended)
Others	USB port CD-ROM drive 1024x768 pixels, 16-bit colour display compatible monitor (24-bit colour display recommended) Microsoft Direct X 9.0 or later



Requirements for QuickTime Player 7.4

- Intel Pentium 4, 3.2GHz or higher / AMD Athlin 64FX, 2.6GHz or higher
- Windows XP service pack2 or Vista
- Minimum 512MB RAM (1GB and above recommended)
- 64MB or greater video card (nVIDIA Geforce 7600GT or higher / ATI X1600 series or higer recommended)



- Using a self-assembled PC or a PC and OS that are not supported may void your warranty.
- For 64bit Edition of Windows XP and Vista, the programs may not work properly.

Programs contained on the CD

Item	Requirements
Samsung Master	Edit photos and videos.
QuickTime Player 7.4	View videos (MPEG-4 AVC/H.264 files) on a PC.
Adobe Reader	View the user manual.

- 1 Insert the installation CD in a CD-ROM drive.
- When the setup screen is displayed, click Samsung Digital Camera Installer to start installation.



- 3 Select programs to install and follow the onscreen instructions.
- 4 Click **OK** to complete the installation.

Transferring files to your PC

Once you connect the camera to your PC, the camera will be recognised as a removable disk.



The battery will be charged while the camera is connected to a PC with the USB cable.

1 Connect the camera to your PC.



You must plug the end of the cable with the indicator light (A) into your camera. If the cable is reversed, it may damage your files. The manufacturer is not responsible for any loss of data.



- 2 Turn on the camera.
- 3 Touch Computer.
- 4 On your PC, select My Computer → Removable Disk → DCIM → 100SSCAM.
- 5 Select the files you want and drag or save them to your PC.

Disconnecting the camera (for Windows XP)

The way to disconnect the USB cable for Windows 2000/Vista is similar.

- 1 Wait until your PC stops reading from the camera.
 - If the status lamp on your camera is blinking, wait until it is off.
- 2 Click on the tool bar at the bottom right of your PC screen.



- 3 Click the pop-up message.
- 4 Remove the USB cable.

Using Samsung Master

You can download files or edit photos or videos stored on your PC. For details, see Help in the program.




This program does not support editing of video files (H.264 (MPEG4. AVC)) on the camera.

Downloading files using Samsung Master

A window for downloading files automatically appears when the camera is connected. Select the files you want to download.


Click Next and follow the onscreen instructions.

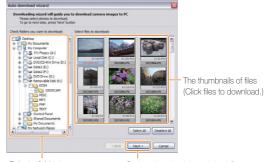

Select a folder to save downloaded files Click to download the selected files

Using the Samsung Master Interface

View mode

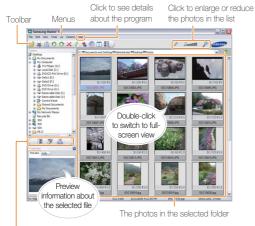

Change the mode



For Mac users

Once you connect the camera to a Macintosh computer, the computer will recognise the device automatically. You can transfer files directly from the camera to the computer without installing any programs.



Mac OS X version 10.3 or more is supported.

- 1 Connect your camera to a Macintosh computer with the USB cable.
- 2 Turn on your camera.
 - The computer recognises the device automatically and a removable disk icon will be displayed.
- 3 Double-click the removable disk icon.
- 4 Transfer photos or videos to the computer.

Printing photos with a photo printer


Print photos with a PictBridge-compatible printer by connecting your camera directly to the printer.

1 With the printer on, connect your camera with the USB cable.



- 2 Press [POWER] or [Playback] to turn on your camera.
- 3 Touch Printer.


4 Select a print mode.

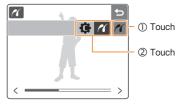



Printing with custom settings

1 Set printing options.

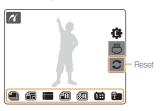

Option	Description
Images	Select whether to print the current photo or all photos.
Size	Specify the size of the print.
Layout	Create thumbnail prints.
Type	Select the type of paper.
Quality	Set the printing quality.
Date Date	Set to print the date.
File Name	Set to print the name of the file.



Some options are not supported by some printers.

- 2 Touch 🖨 to print.
- 3 Touch Yes to confirm.
 - Printing starts. Touch **5** to cancel printing.



Refer to settings, error messages, specifications, and maintenance tips.


Camera settings menu	68
Accessing the settings menu	
Sound setting (1)	69
Display setting	69
Camera setting 🌼	70
Connection setting \$\frac{1}{2}\$	71
Error messages	72
Camera maintenance	73
Cleaning your camera	73
About memory cards	74
About the battery	75
Before contacting a service centre	76
Camera specifications	79
Index	83

Camera settings menu


Accessing the settings menu

- 1 In Shooting or Playback mode, press [MENU].
- 2 Select a menu.



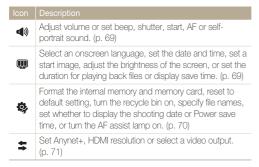

3 Select a menu and save your settings.

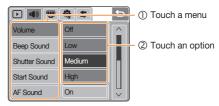

4 Touch to return to the previous screen.

Sound setting (4)

* Default

Description
Adjust the volume of any sound. (Off, Low, Medium*, High)
Select a sound to be emitted when touching the screen or switching modes. (Off, Sound1*, Sound2, Sound3)
Select a sound to be emitted when pressing the shutter button. (Off, Sound1*, Sound2, Sound3)
Select a sound to be emitted when turning on your camera. (Off*, Sound1, Sound2, Sound3)
Set to emit a sound to be emitted when half- pressing the shutter button. (Off, On*)
Set to emit a sound when the camera detects your face. (Off, On*)

Display setting ...

* Default

	5
Item	Description
Language	Select a language for the display text.
Date & Time	Select a region, set the time and date, and set the date format. (yyyy/mm/dd, mm/dd/yyyy, dd/mm/yyyy, Off*) Select a city to set the local time when using the camera in a different country.
Start Image	Set a start image to display when the camera is switched on. Off*: Display no start image. LOGO: Display a default image stored in the internal memory. User Image: Display an image that the user selects. (p. 55)
Display Bright	Adjust the brightness of the screen. (Auto*, Dark, Normal, Bright) Normal is fixed in Playback mode even if Auto is selected.
Quick View	Set the duration for reviewing a captured image or video before returning to Shooting mode. (Off, 0.5 sec*, 1 sec, 3 sec)
Display Save	If you perform no operations for 30 seconds, the camera switches to Power save mode automatically (touch the screen to deactivate the Power save mode). (Off*, On)

Camera setting 🌼

* Default

Item	Description	
Format	Format the internal memory and the memory card (all files-including the protected files-will be deleted). (No*, Yes)	
	When you use a memory card use with cameras from different manufacturers or a memory card reader, or one formatted on a computer, your camera may read the card incorrectly. Format the card before using it.	
Reset	Reset menus and shooting options (date and time, language, and video output settings will not be reset). (No*, Yes)	
Recycle Bin	Set the recycle bin option or restore deleted files. (Off*, On, Recycle Folder) • Select Recycle Folder to restore files.	

Specify how to name files. Reset: Set the file number to start from 0001 when inserting a new memory card, formatting a memory card, or deleting all files. • Series*: Set the file number to follow the previous file number when inserting a new memory card, formatting a memory card, or deleting all files. • The default name of the first folder is 100SSCAM and the default name of the first file is SDC10001. File . The file number increases one by one from SDC10001 to SDC19999. . The folder number increases one by one from 100SSCAM to 999SSCAM. . The maximum number of files that can be stored in one folder is 9999 • The camera defines file names according to the Digital rule for Camera File system (DCF) standard. If you change the names of files intentionally, the camera may not play back the files.

* Default

Item	Description
Imprint	Set whether to display date and time on the photos when printing. (Off*, Date, Date & Time)
	The date and time will be displayed on the bottom-right comer of the photo in yellow. The date and time may not be printed on some printer models. If you select T in the SCENE mode, the date and
	time will not be displayed.
Power Off	Turn off your device when not being used. (Off, 1 min, 3 min*, 5 min, 10 min)
	Your settings will not change after changing the battery.
	This will not function when: the camera is connected to a computer or printer you play a slide show or videos you record a voice memo
AF Lamp	Set an assistant light to help you focus in the dark. (Off, On*)

Connection setting \$

* Default

		eraun
Item	Description	
Anynet+	Set to control the camera connected to a Samsung HDTV that supports Anynet+(CEC) with the TV remocontrol. • Off: View files without using an HDTV remote control. • On*: Control the camera with an HDTV remote control.	
HDMI Size	Select the resolution of photos when playing back fi on an HDTV with the HDMl cradle. (NTSC: 1080i*, 720p, 480p / PAL: 1080i*, 720p, 576p) If the HDTV does not support the selected resolution, HDTV automatically selects the next lower resolution.	, the
Video Out	Set the video signal output according to your region NTSC*: USA, Canada, Japan, Korea, Taiwan, Mexico, etc. PAL (supports only BDGHI): Australia, Austria, Belgium, China, Denmark, Finland, Germany, England, Italy, Kuwait, Malaysia, New Zealand, Singapore, Spain, Sweden, Switzerland, Thailand Norway, etc.	

Error messages

When the following error messages appear, try these remedies.

Error message	Suggested remedies		
Card Error!	Turn off your camera and turn it on again. Remove your memory card and insert it again. Format your memory card. (p. 70)		
Low Battery!	Insert a charged battery or recharge the battery.		
No Image!	Take photos or insert a memory card that has some photos.		
Low Light!	Turn the flash on. (p. 33)		
File Error!	Delete the damaged file or contact a service centre.		
Memory Full!	Delete unnecessary files or insert a new memory card.		

Error message	Suggested remedies	
Card Locked!	Unlock the memory card.	
DCF Full Error	File names do not match the DCF standard. Transfer the files on the memory card to your computer and format the card. (p. 70)	

Camera maintenance

Cleaning your camera

Camera lens and touch screen

Use a blower brush to remove dust and wipe the lens gently with a soft cloth. If any dust remains, apply lens cleaning liquid to a piece of cleaning paper and wipe gently.



Camera body

Wipe gently with a soft, dry cloth.






- Never use benzene, thinners, or alcohol to clean the device. These may cause damage or malfunctions.
- Do not press on the lens cover or use a blower brush on the cover.



About memory cards

Memory cards you can use

You can use SD (Secure Digital), SDHC (Secure Digital High Capacity), or MMC (MultiMedia Card) memory cards.

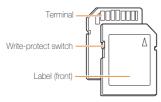

You can prevent files from being deleted by using a write-protect switch on the SD or SDHC card. Slide the switch down to lock or slide it up to unlock. Unlock the card when shooting.

Memory card capacity

The memory capacity may differ depending on shooting scenes or shooting conditions. For 1GB SD card:

	Size	Super fine	Fine	Normal	60FPS	30FPS	15FPS
	14 m	136	265	386	-	-	-
		153	296	430	-	-	-
P	IOm	180	347	501	-	-	-
o t	8m	240	457	653	-	-	-
O S	5m	370	685	957			
Ü	2m	807	1374	1794	-	-	-
	l m	1655	2438	2894	-	-	-
* Videos	HQ 280	-	-	-	-	Approx. 12' 38"	Approx. 20min
	1580	-	-	-	-	Approx. 20min	Approx. 20min
	640	-	-	-	-	Approx. 20min	Approx. 20min
0	320	-	-	-	Approx. 20min	Approx. 20min	Approx. 20min

^{*} The recordable time may vary if you use the zoom.

About the battery

Use only Samsung-approved batteries.

Battery specifications

Mode	SLB-1137D
Туре	Lithium-ion battery
Cell capacity	1100mAh
Voltage	3.7V
Charging time (when the camera is switched off)	Approx. 150min

Battery life

Shooting time / Number of photos		Shooting conditions (when the battery is fully charged)		
		This is measured under the following conditions: in the AUTO mode, 14M resolution, Fine quality, OIS on.		
Photos	Approx. 100min/ Approx. 200	Set the flash option to Fill in , take a single shot, and zoom in or out. Set the flash option to Off , take a single shot, and zoom in or out. Perform steps 1 and 2 for 30 seconds and repeat for 5 minutes. Then turn off the camera for 1 minute.		

Shooting Number	g time / of photos	Shooting conditions (when the battery is fully charged)
Videos	Approx. 90min	Record videos at 640x480 resolution and 30fps.

- The figures above are measured by Samsung's standards and may differ depending on usage.
- Several videos were recorded in succession to determine the total recording time.

Notes about charging the battery

- If the indicator light is off, make sure that the battery is inserted correctly.
- · Turn off your camera when charging.
- Turn on your camera after charging the battery for more than 10 minutes.
- Using flash or recording videos depletes the battery quickly. Charge the battery until the indicator light turns green.
- If the indicator light blinks in red or does not illuminate, reconnect the cable, or remove the battery and insert it again.
- If you charge the battery when it is warm, the indicator light may turn orange. Charging will start when the battery cools down.

Notes about charging with a computer connected

- · Use only the provided USB cable.
- . The battery may not be charged when:
 - you use a USB hub
 - other USB devices are connected to your computer
 - you connect the cable to the port on the front side of your computer
 - the USB port of your computer does not support the Power output standard (5V, 500mA)

Before contacting a service centre

If you are having trouble with your camera, try these troubleshooting procedures before contacting a service centre. If you have attempted the troubleshooting solution and are still having problems with your device, contact your local dealer or service centre.

Situation	Suggested remedies		
Cannot turn on the camera	Make sure the a battery is inserted. Make sure the battery is inserted correctly. Charge the battery.		
The power turns off suddenly	Charge the battery. Your camera may be in Power save mode. (p. 69) The camera may turn off to prevent the memory card from being damaged due to an impact. Turn on your camera again.		
The camera is losing battery power quickly	The battery may lose power more quickly in low temperatures (below 0°C). Keep the battery warm by putting it into your pocket. Using the flash or recording videos depletes the battery quickly. Recharge if needed. Batteries are consumable parts that must be replaced over time. Get a new battery if the battery life is diminishing quickly.		

Situation	Suggested remedies
Cannot take photos	There is no space on the memory card. Delete unnecessary files or insert a new card. Format the memory card. (p. 70) The memory card is defective. Get a new memory card. The memory card is locked. Unlock the card. (p. 72) Make sure the camera is switched on. Charge the battery. Make sure the battery is inserted correctly.
The camera freezes	Remove the battery and insert it again.
The flash does not work	The flash option may be set to Off. (p. 33) You cannot use the flash in the DOUBL, CONTROL OF SCENE modes.
The camera fires the flash suddenly	The flash may fire due to static electricity. This is not a malfunction of the camera.

Situation	Suggested remedies	
The date and time are incorrect	Set the date and time in the display settings menu.	
The touch screen or buttons do not work	Remove the battery and insert it again.	
The memory card has an error	The memory card has not been reset. Format the card. (p. 70)	
Cannot play back files	If you change the name of a file, your camera may not play the file (the name of the file should meet the DCF standard). If you encounter this situation, play back files on your computer.	
The photo is blurry	Make sure the focus option you set is suitable for close-up shots. (p. 36) Make sure that the subject is within range of the flash. (p. 79) Make sure the camera lens is clean. If not, clean the lens. (p. 73)	
The colours in the photo do not match the actual scene	An incorrect white balance can create unrealistic colour. Select the proper white balance option to suit the light source. (p. 42)	

Situation	
The photo is too bright	Your photo is overexposed. Adjust the exposure value. (p. 40) Turn the flash off. (p. 33)
The TV does not display your photos	Make sure the camera is correctly connected to the external monitor with the A/V cable. Make sure your memory card contains photos.
Your computer does not recognise your camera	Make sure the USB cable is connected correctly. Make sure your camera is switched on. Make sure you are using a supported operating system.
Your computer disconnects the camera while transferring files	The file transmission may be interrupted by static electricity. Disconnect the USB cable and connect it again.

Situation				
	The codec installed in your computer may not be compatible with the video files you want to play. Use QuickTime® Player or install Codec Pack Full.			
	Using QuickTime® Player 7.4 Install QuickTime® Player 7.4 which supports MP4 (H.264 (MPEG.AVC)). Play videos using QuickTime® Player			
Your computer cannot play videos	Using Codec Pack Full I. Install the latest version of Codec Pack Full. Play videos using the media player (Media Player Classic or Windows Media Player 11 recommended).			
	Install QuickTime® Player 7.4 or K-Lite Codec Pack Full on Windows XP SP2 or later. Depending on your computer environment, the video playback may be intermittent.			

Camera specifications

	Type	1/1.72" (1/1.72" (1.49 cm) CCD		
Image sensor	Effective pixels	Approx. 1	Approx. 14.7 mega-pixels		
301301	Total pixels	Approx. 15.0 mega-pixels			
	Focal length	Schneider - KREUZNACH lens f = 6.0 - 21.6 mm (35 mm film equivalent: 28 - 102 mm)			
Lens	F-stop range	F2.8 (W)	- F5.9 (T)		
Digital zoom		Still Image mode: 1.0X - 5.0X Play mode: 1.0X - 13.7X (depending on image size)			
LCD monitor		3.0" (7.62 cm) hVGA colour TFT LCD (460,000 pixels) (Touch)			
	Туре	TTL auto focus (Multi AF, Center AF, Touch AF, Face Detection AF)			
	Range		Wide (W)	Tele (T)	
Focusing		Normal	80 cm - infinity		
		Macro	5 cm - 80 cm	50 cm - 80 cm	
		Auto macro	5 cm - infinity	50 cm - infinity	
Shutter speed		AUTO: 1 - 1/2,000 sec. MANUAL: 16 - 1/2,000 sec. NIGHT: 8 - 1/2,000 sec. FIREWORK: 4 sec.			

Exposure	Control	Program AE			
	Metering	Multi, Spot, Center Weighted, Face Detection AE			
	Compensation	±2EV (1/3EV steps)			
	ISO Equivalent	Auto, 80, 100, 200, 400, 800, 1600, 3200 (Photo size of 3200 is fixed as 3M)			
Flash	Mode	Off, Auto, Red Eye, Fill in, Slow Sync, Red Eye Fix			
	Range	Wide: 0.3 m - 5.4 m (ISO Auto) Tele: 0.5 m - 2.7 m (ISO Auto)			
	Recharging time	Approx. 5 sec.			
Shake reduction		Dual IS [Optical Image Stabilisation (OIS) + Digital Image Stabilisation (DIS)]			
Sharpness		Soft+, Soft, Normal, Vivid, Vivid+			
Effect	Shooting mode	Photo Style Selector: Normal, Soft, Vivid, Forest, Retro, Cool, Calm, Classic Color: Normal, B & W, Sepia, Blue, Red, Green, Negative Image adjust: Sharpness, Contrast, Saturation			
	Playback mode	Image edit: Resize, Rotate, Trimming Color effect: Normal, B & W, Sepia, Blue, Red, Green, Negative Special color: Color Filter, Shaded, Elegant, Add Noise Image adjust: Face retouch, Brightness, Contrast, Saturation, Red Eye Fix, ACB			

White Balance		Auto WB, Daylight, Cloudy, Fluorescent_H, Fluorescent_L, Tungsten, Custom Set		
Voice recording		Voice Recording (Max 10 hours)		
		Voice Memo in Still Image (Max. 10 sec.)		
Date Imprinting		Date & Time, Date, Off (user selectable)		
Shooting	Photos	Modes: AUTO, PROGRAM, MANUAL, DUAL IS, NIGHT, BEAUTY SHOT, SCENE (PORTRAIT, CHILDREN, LANDSCAPE, CLOSE UP, TEXT, SUNSET, DAWN, BACKLIGHT, FIREWORK, BEACH & SNOW, SELF SHOT, FOOD, CAFÉ) Continuous: Single, Continuous, High Speed, M. Capture, AEB Timer: 10 sec, 2 sec, Double, Remote		
	Videos	With Audio or without Audio (Max Recording time: 20 min) Size: 1280 x 720 (30FPS, 15FPS) High Quality, 1280 x 720 (30FPS, 15FPS) Standard Quality, 640 x 480 (30FPS, 15FPS), 320 x 240 (60FPS, 30FPS, 15FPS), 320 x 240 (60FPS, 30FPS, 15 FPS) 3.6X Optical Zoom and Mute in Zooming (sound is muted when operating the zoom function) Color Effect & WB selectable Video Editing (embedded): Pause during recording, Still Image Capture, Time Trimming Due to the noise while optical zooming, user can select to record sound or not.		

Storage	Media	Internal memory: approx. 40MB External memory (Optional) SD card (up to 4GB guaranteed) SDHC card (up to 8GB guaranteed) MMC Plus (up to 2GB guaranteed, 4bit 20MHz) Internal memory capacity may not match these specifications.				
	File format	Still image: JPEG (DCF), EXIF 2.21, DPOF 1.1, PictBridge 1.0 Video: MP4 (H.264(MPEG4.AVC)) Audio: WAV				
	Image size	For 1GB SD				
				Super fine	Fine	Normal
		14 m	4384x3288	136	265	386
		(13m	4384x2920	153	296	430
		IDm	4384x2464	180	347	501
		8 m	3264x2448	240	457	653
		5m	2592x1944	370	685	957
		2 m	1920x1080	807	1374	1794
		I m	1024x768	1655	2438	2894
		These figures are measured under Samsung's standard conditions and may vary depending on shooting conditions and camera settings.				
Image Play		Adva	e image, Thur nced slide sho effect and mu	DW.		

Interface Power source	Digital output	Connector: USB 2.0 (30 pin)		
	Audio output	Mono (Internal speaker), Stereo (Microphone)		
	Video output	AV: NTSC, PAL (selectable) HDMI 1.2: NTSC, PAL (selectable)		
		HDMI is available when it is connected to the optional cradle.		
	DC power input connector	30 pin, 4.2V		
	Rechargeable battery	Lithium-ion battery SLB-1137D (1100m		
	AC adapter	Power adapter (SAC-47), USB cable (SUC-C4)		
	Cradle (Optional)	SCC-NV5 HD		
	The power source may differ depending on your region.			
Dimensions (W x H x D)		94.9 x 59.5 x 19.9 mm (without projection part)		
Weight		138g (without battery and memory card)		
Operating temperature		0 - 40°C		
Operating humidity		5 - 85%		
Software		Samsung Master, QuickTime® Player 7.4, Adobe Reader		

Specifications are subject to change without prior notice.



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.



Correct disposal of batteries in this product

(Applicable in the European Union and other European countries with separate battery return systems.)

This marking on the battery, manual or packaging indicates that the batteries in this product should not be disposed of with other household waste at the end of their working life. Where marked, the chemical symbols Hg, Cd or Pb indicate that the battery contains mercury, cadmium or lead above the reference levels in EC Directive 2006/66. If batteries are not properly disposed of, these substances can cause harm to human health or the environment.

To protect natural resources and to promote material reuse, please separate batteries from other types of waste and recycle them through your local, free battery return system.

The rechargeable battery incorporated in this product is not user replaceable. For information on its replacement, please contact your service provider.



Samsung Eco-mark

It is Samsung's own symbol mark is used to effectively communicate Samsung's environmental friendly product activities to the consumers. The mark represents Samsung's continuous effort on development of environmental conscious products.

Index

Α B Colour tone 56 F Cropping 53 ACB 41.57 Batterv Face Detection 38 Charging 75 Adiustina Filter Life 75 Brightness 57 D Add noise 56 Specifications 75 Contrast Colour filter 56 Date & Time 69 in Playback mode 57 Beauty Shot mode 21 Elegant 56 in Shooting mode 46 Deleting files 50 Shaded 56 Blink Detection 39 Saturation Digital Image Stabilisation 21 Flash in Playback mode 57 Burst in Shooting mode 46 Auto 33 Digital zoom 18 Auto Exposure Bracket Sharpness 46 Fill in 33 (AEB) 44 Disconnecting the device 63 Off 33 Adobe Reader 61 High Speed 44 Display bright 69 Red Eve 33 Motion Capture 44 AF-assist light 11 Red Eye Fix 34 DPOF 58 AF Lamp 71 Slow Sync 34 Dragging 15 AF Sound 69 Flash unit 11 Dual IS mode 21 Camera shake 26 Anvnet+ 71 Focus area Capturing an image 53 Center AF 37 Aperture value 23 Е Multi AF 37 Cleaning Auto Contrast Balance Touch AF 37 Body 73 Editing 55 (ACB) 41.57 Display 73 Focus distance Enlarging 52 Auto mode 20 Lens 73 Auto Macro 36 Error messages 72 Colour effects 45 Macro 36 Exposure 40 Normal (AF) 36

<u>Downloaded From camera-usermanual.com Samsung Manuals</u>
Appendix 8

Format 70
Frame rate 24

Н

HDTV 59

Icons 13

Image Restoration 70

Imprint 71

ISO speed 35

L

Light source (White balance) 42

M

Maintenance 73

Manual mode 22

Memory card

Capacity 74 MMC 74 SD 74 SDHC 74

Menu button 12

Metering

Center 42 Multi 42 Spot 42

Mode dial 11

Muting

Camera 14 Video 24

N

Night mode 20

0

Optical Image Stabilisation (OIS) 18, 21

P

Photo quality 31 Photo styles 45

Playback button 12, 14

Playback mode 48

Printing photos

Date 66
File name 66
Images 66
Layout 66
Quality 66
Size 66
Type 66

Print order

Index 58 Size 58

Program mode 22

Protecting files 50

Q

QuickTime Player 61
Quick View 69

R

Recording

Video 24 Voice memo 28

Recycle bin 51 Red-eve 33

Remote control 32

Remote control sensor 11

Resizing 55

Resolution Photo 30

Video 30

Rotating 55

S

Samsung Master

Installing 61 Using 63

Scene mode 20

Self Portrait 39

Service centre 76

Shutter button 11

Shutter speed 22

Slide show 52

Smile Shot 39

Start image 69

Т

Timer 32

Timer lamp 11

Touching 15

Touch screen 12

Transferring files

for Mac 64 for Windows 61

Tripod mount 12

U

USB and A/V port 12

V

Video

Playing 53 Recording 24

Video Out 71

Viewing files

as thumbnails 49 by date 49

on TV 59 Voice memo

> Playing 54 Recording 28

Volume 69

W

White Balance 42

Z

Zooming 17

Zoom T/Expand button 12

Zoom W/Thumbnail button 12



Please refer to the warranty that came with your product or go to our website http://www.samsungcamera.com/ for after-sales

<u>Dowservide.ohfinquiriesmera-usermanual.com Samsung Manuals</u>

