

**TATA DOCOMO Walky**

**Groove Station**

**Frequently Asked Questions**

## **Table of Contents**

1. Before You Start.....	1
Safety Instruction .....	1
Optimal Phone Performance.....	1
Care and Service .....	1
Safety Information.....	1
2. Getting to Know Your Phone.....	3
Phone View .....	3
Handset Menus Overview .....	5
3. Getting Started .....	5
4. Basic Handset Operation .....	6
5. Using Phone Menus.....	8
5.1 Messages .....	8
5.1.1 New Message.....	8
5.1.2 Inbox .....	9
5.1.3 Outbox.....	9
5.1.4 Voice Mail.....	9
5.2 Contacts .....	9
5.2.1 Find .....	9
5.2.2 Add New.....	9
5.3 Call History .....	9
5.4 Sound.....	9
5.4.1 Ring Alert.....	9
5.4.2 Message Alert.....	10
5.4.3 Volume Setting .....	10
5.4.4 Minute Alert .....	10
5.4.5 Missed Alert.....	10
5.4.6 Service Alert .....	10
5.5 Display.....	10
5.5.1 LCD Backlight.....	10
5.5.2 Time Format .....	10

## Model :Groove Station

---

5.6	Settings .....	10
5.6.1	Restrict Outgoing Call .....	10
5.6.2	Lock Mode.....	10
5.6.3	Change Lock Code.....	11
5.6.4	Reset Settings .....	11
5.6.4	Version .....	11
5.7	Supp. Service .....	11
5.7.1	Call Waiting .....	11
5.7.2	Call Forward .....	11
5.8	Extras .....	11
5.8.1	Stopwatch.....	11
5.8.2	Alarm.....	11

## **1. Before You Start**

### **Safety Instruction**

#### **⚠ Warning / Caution**

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

Do not use this product near swimming pools or other water bodies.

#### ***Important***

Read this information before installing or operating this product.

### **Optimal Phone Performance**

- If this phone does cause harmful interference to radio or television reception, which can be determined by turning the phone off and on, user try to correct the interference by one or more of the following measures:
  - Increase the distance between the radio or television and the phone.
  - Connect the equipment into an outlet on a circuit different from that to which the phone is connected.
- Use the authorized battery and AC power only. Using other type may damage the instrument and will not be treated under warranty.
- Do not use the unit in designated “no cellular phone use” area.
- Do not make calls when connect the charge with the phone.
- We recommend you to fully charge the handset battery before initial use. Backup battery may be got discharged during delivery.

### **Care and Service**

- If any of the following conditions exist; unplug the unit from the wall plug, remove battery, and call the authorized service center.
  - The power supply cord is damaged or frayed.
  - Liquid has been spilled into the unit.
  - The unit has been exposed to rain or water.
  - The unit has been dropped or damaged.
  - The unit does not work normally by the operating instructions.

### **Safety Information**

- Do not use with car battery. It may cause an electric shock, fire, breakdown or transformation.
- Avoid exposure to high temperature or humidity.
- Avoid exposure of the unit with any liquid. If the unit gets wet, remove the backup batteries and AC power supply immediately.
- Keep it dry. Precipitation, humidity, and liquids contain minerals that will

## **Model : Groove Station**


---

corrode electronic circuits.

- Do not use or keep it in dusty/dirty areas as its parts can be damaged.
- Do not keep it in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not keep it in cold areas. When the phone returns to its normal operating temperature, it may result in moisture getting formed inside the phone, which could damage the phone's electronic circuit boards.
- Do not attempt to open it. It may damage the instrument or cause fire, electric shock and breakdown. Consult your authorized dealer for help.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- Do not paint it. Paint can clog the device's moving parts and prevent proper operation.
- When lightning, do not touch power plug or phone line, it may cause an electric shock.
- Do not install the unit in places where there is direct sunlight. Also do not put the unit on carpets or cushions. It may cause fire or breakdown.
- Before plugging the adapter, check the home power voltage. Inaccurate power voltage may cause fire and damage.
- Do not install in a non-ventilated place. It may cause fire or electric shock.
- Do not peel off or short-circuit the battery. Doing this may result in fire or instrument getting heated.
- Do not throw and break the battery. Do not dispose of batteries by putting them in fire. It may explode.

## 2. Getting to Know Your Phone

### Phone View

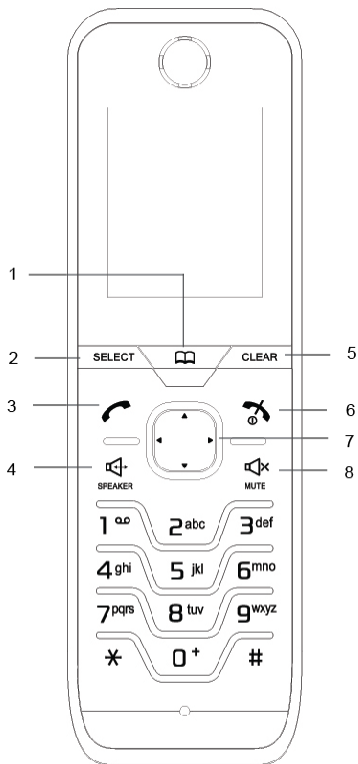

**Model : Groove Station**

No.	Function Key	Description
1	Contacts key	<ul style="list-style-type: none"><li>● Open the phonebook.</li></ul>
2	Select key	<ul style="list-style-type: none"><li>● Display Menu in the standby mode.</li><li>● Select menu.</li></ul>
3	Talk key	<ul style="list-style-type: none"><li>● Dial a call and receive a call.</li><li>● View dialed calls.</li></ul>
4	Hands free key	Switch between earpiece and hands free mode.
5	Clear key	<ul style="list-style-type: none"><li>● Return the previous Menu</li><li>● Delete when input context</li><li>● Press and hold the key to lock the keypad.</li></ul>
6	End/Power key	<ul style="list-style-type: none"><li>● Power on/off your phone.</li><li>● End a call.</li><li>● Return to the idle screen.</li></ul>
7	Scroll Key	<ul style="list-style-type: none"><li>● Scroll key include 4 keys: Up, Down, Right, Left In the standby interface, “up”to SMS Menu, “down”to set key volume, “left”to Received calls, “right”to Missed calls.</li><li>● During a call: use “up” to increase volume; use “down” to decrease volume</li></ul>
8	Mute key	<ul style="list-style-type: none"><li>● When talking on a call, press to mute the voice.</li></ul>

## Model : Groove Station

### Handset Menus Overview

<b>Messages</b>	New Message	<b>Sound</b>	Ring Alert
	Inbox		Message Alert
	Outbox		Volume Setting
	Voice Mail		Minute Alert
	Templates		Missed Alert
	Drafts		Service Alert
	Erase Msgs	<b>Display</b>	LCD Backlight
	Msg Settings		Time Format
	Memory State		Restrict Outgoing Call
<b>Contacts</b>	Find	<b>Settings</b>	Lock Mode
	Add New		Change Lock Code
	My Number		Reset Settings
	Erase All		Version
	Memory State		Call Waiting
<b>Call History</b>	Missed	<b>Supp.Service</b>	Call Forward
	Received		Stopwatch
	Dialed	<b>Extras</b>	Alarm
	Call Info		
	Erase History		

### 3. Getting Started

#### STEP1. Check Component

- Delta is supplied with the following standard accessories:
  1. one Handset
  2. one Base stand
  3. one Adapter
  4. one Li-on Battery for handset
  5. one Ni-Mh Batteries for Base stand
  6. one User Manual
  7. one Warranty Manual.

#### STEP2. Installing the base stand

- Set up the base at a convenient position within the house.
- Connect the adapter to the charger jack at the back of base stand.
- Keep the power supply for the base stand in at all times.
- Keep the handset in the cradle of the base stand to charging.

#### STEP3. Setting up the handset




## Model : Groove Station

---

- Open the battery cover.
- Connect the battery with correct polarity
- Place the battery cover and push down until it is in the right position.
- Placing the handset in the charging cradle of the base stand with its display facing forward.
- The battery of the handset will keep in charge in the base stand.


### STEP4. Activate the phone

- Press and hold  to POWER ON the phone
- Press Select key [Activating], and wait for the voice guide from system.
- Make operation according to voice guide to activate your phone.


## 4. Basic Handset Operation

### Making a call



- **Making a call using the keypad**

To make a call, enter the phone number, press  talk key to call the number. Scroll up to increase or down to decrease the volume of the earpiece or hands-free speaker during the call.



To answer the incoming call, press the  talk key.

To reject the call, press the  power key.


- **Making a call from phonebook**

In standby mode, press  to enter Phone Book to find the name you want. Press  talk key to call the Number.



### Answering a Call

In standby mode, press  talk key to answer. To divert or reject the call without answering, press  power key.

### Activating Phone Speaker

During a call, press  to activate phone speaker.

### Mute/Unmute

Mute or unmute your voice during a call. Press  , the other party during the call cannot hear you anymore. Again press  , the other party can hear you again.

### Missed Call Message

If a call is received and not answered, you are informed that you have

## Model : Groove Station

---

missed a call. The latest missed call is displayed on LCD, you can press **Select key** to read the details of the missed calls.

## 5. Input operation

### 5.1 Input mode

Your phone provides four modes for entering text, numbers, special characters, and punctuation.

#### **T9English (T9) Mode**

Type text using one keystroke per letter in English with the help of T9 English dictionary function.

#### **Abc (Multi-tap) Mode**

Use Abc mode to input text in English language.

#### **123 (Numbers) Mode**

Type numbers using one keystroke per number.

#### **Symbol Mode**

Insert special characters, punctuation. Select < Option > - < Symbol > to view the symbol list.

Press [Left] / [Right] Key to view the next page symbol., Press the assigned number key to select item.

Initial Cap (T9En/Abc) Only the first letter is capitalized.

Caps Lock (T9EN/ABC) All subsequent letters are capitalized.

Lowercase (T9en/abc) All subsequent letters are lowercase.

### 5.2 Typing In T9 Mode

When you want to use T9 Mode, check that T9 is shown at the Right-top of the screen. To write the desired word, press each key once for one letter.

1. Press [ 2 ]-[ 9 ] to start entering a word.
2. Enter the whole word before editing or deleting characters.
3. When the word displays correctly, Press [ # ] to insert a space. Otherwise, press [ 0 ] to display alternative word choices.

## Model : Groove Station

---

### 5.3 Other operations

Press [ 1 ] to enter functions marks or special characters in ABC mode and T9 Mode

Press [ \* ] to change other input Mode quickly.

Press [ # ] to insert a space.

Press [ Navigation ] keys to move the cursor.

Press [ Clear ] Key to delete characters one by one.

Press and hold [ Clear ] Key to clear the entire display

## 6. Using Phone Menus

### 5.1 Messages

#### 5.1.1 New Message

Allow you to send a text message at a time. If there is any interruption by a call while composing a message, messages automatically will get saved.

1. Select **Menu > Messages > New Message**.
2. Type your message, refer to the **Text entry** section in this guide.

When you press **Select key**, some options are as below:

- **Symbol:** Select special characters, punctuation. You may use any of the special characters. When the cursor is located where you want the special character, switch to Symbol mode.
  - **Entry Mode:** Select three modes for entering text, numbers, special characters, and punctuation.
  - **Send:** Use to send the message.
  - **Save:** Save the new message in Drafts.
  - **Templates:** Provide 9 predefined phrases included in the Templates
  - **Insert Number:** Insert Phone Number from phone book for the message
  - **Priority:** Set Message Normal, Urgent, Emergency
  - **Save Sent Msg:** Set Sending Msg save or not
3. Finish the text of the message, select **Send** in the options. Then enter the phone number you want to send to. You can add up to 10 recipients.
  4. Press **Select key** and choose **Send** to send the message.

### 5.1.2 Inbox

Received messages are sorted in an order of urgent unread messages, unread messages and read messages.

1. Select **Menu > Messages > Inbox**.
2. Selecting the desired message, press **Select key** and choose **View** to view the message.

### 5.1.3 Outbox

All your sent messages will store here if you select **Save Sent Msg** option 'On' in new Message.

### 5.1.4 Voice Mail

Voice mail notification indicates the number of new voice mail message in your mailbox. Only the most recent voice mail notification will be stored in your phone, previous message will be overwritten.

**Check with service provider for availability of this feature.**

## 5.2 Contacts

Keep records of your contacts, search, add, modify or delete.

### 5.2.1 Find

To find phone numbers you have stored in the Phone.

1. Select **Menu > Contacts > Find**.
2. You can search the contact as following:
  - (1) Press [ **Up/ Down** ] to scroll through your Contacts alphabetically.
  - (2) Enter full or initial character of contact name.
  - (3) Enter full or part number of contact phone number
3. Select the contact, press **Select key** and choose **View** to view.

### 5.2.2 Add New

You can store multiple contact details under a name: Group ID, Mobile Number, Office Number, Home Number, Other Number, E-mail address and Memo.

Input the details, press **Select key** to save the new contact.

## 5.3 Call History

In Call history, you can find the detail Missed, Received, and Dialed calls.

## 5.4 Sound

### 5.4.1 Ring Alert

Select the ring alert type for a call.

1. **Ring Type**

## Model : Groove Station

---

Select the Ring Type from Ring .

### 2. Ring Tones

You can select the various ring tone for the received call. You must set the Ring Type for Ring to perform the ring tone in coming call.

Select Ring Tones you want, then press **Select key** to set.

#### 5.4.2 Message Alert

##### 1. Message Type

Select the **Message** Type from Ring or Key Light.

##### 2. Message Tones

Select Ring Tones you want, then press **Select** key to set.

#### 5.4.3 Volume Setting

Adjust the volume with **Left/Right key**, then press **Select key** to set.

#### 5.4.4 Minute Alert

When the talk time is over 50 seconds, the phone will automatically remind you.

#### 5.4.5 Missed Alert

When there was missed call, the phone will automatically remind you.

#### 5.4.6 Service Alert

Enable **Service Alert** on, it will indicate service on/off in your area.

## 5.5 Display

### 5.5.1 LCD Backlight

Select the **LCD Backlight** time you want and then press **Select key** to save.

### 5.5.2 Time Format

You can choose the time format as **12 Hours** Style or **24 Hours** Style.

## 5.6 Settings

### 5.6.1 Restrict Outgoing Call

Enable restrict outgoing call, the phone can't make out-going calls.

You need to input the Lock Code to enable/disable this function.

**Note:** The default Lock code is 0000.

### 5.6.2 Lock Mode

Enable this function, you can keep the phone from unauthorized use.

Select Lock Mode, the options are **Off/Now/On Power Up**.

1. Select **Now**, the phone will be locked immediately. You need to input the correct Lock Code to activate the phone.

2. Select **On Power Up**, the phone will be locked after powered on,

## Model : Groove Station

---

and you need to input the correct Lock Code to activate the phone.

### 5.6.3 Change Lock Code

Allow you to enter a new four-digit lock code number.

The lock code/password is commonly **0000** by default. Enter the new four digit Lock code twice to confirm.

### 5.6.4 Reset Settings

Enter the lock code, select Yes to reset all settings.

### 5.6.4 Version

Check the H/W,PRL,S/W in this function.

## 5.7 Supp. Service

### 5.7.1 Call Waiting

Enable this function, you will receive a voice reminder if there is another coming call when you are keeping a current call.

And you can switch to different call connection by **Talk key**.

1. Select **Menu > Supp.Service > Call Waiting**.
2. Select Enable/Disable and follow the voice guide.

### 5.7.2 Call Forward

Allow you to configure the call forward service which diverts incoming calls to a user-specified number.

**Note:** To activate call waiting and call forward, consult your service provider.

## 5.8 Extras

### 5.8.1 Stopwatch

Allow you to measure time and take intermediate times or lap times using the stopwatch.

### 5.8.2 Alarm

Alarm will sound at the time designated and the icon "Alarm" will be displayed on the screen.

1. Select **Menu > Extras > Alarm > Alarm1**.
2. You can change the alarm mode using **Left/Right key**.
3. Set alarm time by using number key.
4. Press **Select key** to save.