



HWABN1

HI-GAIN™ WIRELESS-300N ACCESS POINT/BRIDGE

website www.hawkingtech.com
e-mail techsupport@hawkingtech.com

© COPYRIGHT 2010 HAWKING TECHNOLOGIES, INC. ALL RIGHTS RESERVED.

USER'S MANUAL ►►

COPYRIGHT

Copyright ©2010 by Hawking Technologies, Inc. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of this company.

This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Any software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not this company, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software. Further, this company reserves the right to revise this publication and to make changes from time to time in the contents thereof without obligation to notify any person of such revision or changes.

LIMITED WARRANTY

Hawking Technology guarantees that every HWABN1 Hi-Gain Wireless-300N Access Point/Bridge is free from physical defects in material and workmanship under normal use for one (1) year from the date of purchase. If the product proves defective during this one-year warranty period, call Hawking Customer Service in order to obtain a Return Authorization number. Warranty is for repair or replacement only. Hawking Technology does not issue any refunds. **BE SURE TO HAVE YOUR PROOF OF PURCHASE. RETURN REQUESTS CAN NOT BE PROCESSED WITHOUT PROOF OF PURCHASE.** When returning a product, mark the Return Authorization number clearly on the outside of the package and include your original proof of purchase.

IN NO EVENT SHALL HAWKING TECHNOLOGY'S LIABILITY EXCEED THE

PRICE PAID FOR THE PRODUCT FROM DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THE PRODUCT, ITS ACCOMPANYING SOFTWARE OR ITS DOCUMENTATION. Hawking Technology makes no warranty or representation, expressed, implied or statutory, with respect to its products or the contents or use of this documentation and all accompanying software, and specifically disclaims its quality, performance, merchantability, or fitness for any particular purpose. Hawking Technology reserves the right to revise or updates its products, software, or documentation without obligation to notify any individual or entity. Please direct all inquiries to: techsupport@hawkingtech.com

Federal Communication Commission Interference Statement

FCC Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio technician for help.

FCC Caution

This equipment must be installed and operated in accordance with provided instructions

and a minimum 20 cm spacing must be provided between computer mounted antenna and person's body (excluding extremities of hands, wrist and feet) during wireless modes of operation.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the authority to operate equipment.

Federal Communication Commission (FCC) Radiation Exposure Statement

This equipment complies with FCC radiation exposure set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

R&TTE Compliance Statement

This equipment complies with all the requirements of DIRECTIVE 1999/5/EC OF THE EUROPEAN PARLIAMENT AND THE COUNCIL of March 9, 1999 on radio equipment and telecommunication terminal Equipment and the mutual recognition of their conformity (R&TTE).

The R&TTE Directive repeals and replaces in the directive 98/13/EEC (Telecommunications Terminal Equipment and Satellite Earth Station Equipment) As of April 8, 2000.

Safety

This equipment is designed with the utmost care for the safety of those who install and use it. However, special attention must be paid to the dangers of electric shock and static electricity when working with electrical equipment. All guidelines of this and of the computer manufacture must therefore be allowed at all times to ensure the safe use of the equipment.

EU Countries Intended for Use

The ETSI version of this device is intended for home and office use in Austria, Belgium,

Denmark, Finland, France, Germany, Greece, Ireland, Italy, Luxembourg, the Netherlands, Portugal, Spain, Sweden, and the United Kingdom.

The ETSI version of this device is also authorized for use in EFTA member states: Iceland, Liechtenstein, Norway, and Switzerland.

EU Countries Not intended for use

None.

CONTENTS

Chapter I: Product Information	7
1-1 Product Introduction.....	7
1-2 Safety Information.....	3
1-3 System Requirements.....	5
1-4 Package Contents.....	6
1-5 Product Overview.....	7
Chapter II: System and Network Setup	9
2-1 Installing the access point to your Network.....	9
2-2 Connecting to the Wireless Access point by web browser.....	10
2-2-1 Windows 95/98/Me IP address setup.....	11
2-2-2 Windows 2000 IP address setup.....	13
2-2-3 Windows XP IP address setup.....	14
2-2-4 Windows Vista/7 IP address setup.....	17
2-2-5 Mac OS X IP Address Setup.....	19
2-2-6 Connecting to Web Management Interface.....	21
2-3 View System Status and Information.....	23
2-4 Selecting an Operating Mode for your Wireless Access Point.....	25
2-4-1 Bridge Client Mode (Station-Infrastructure).....	27
2-4-1-1 Wireless Site Survey.....	30
2-4-2 AP Bridge-Point to Point Mode.....	31
2-4-3 AP Bridge-Point to Multi-Point Mode.....	33
2-4-4 AP Bridge-WDS Mode.....	35
2-5 WPS Setting.....	38
2-6 Wireless Security.....	41
2-6-1 Disable Security.....	43
2-6-2 WEP.....	44
2-6-3 WPA Pre-shared Key.....	47
2-6-4 WPA RADIUS.....	49
2-6-5 802.1x Authentication.....	51
2-7 Mac Address Filtering.....	53
Chapter III Advanced Settings	55
3-1 Advanced Wireless Settings.....	55
3-2 System Utilities.....	59

3-2-1 Change Password	59
3-2-2 IP Address of the Wireless Access Point	60
3-2-3 DHCP Server	62
<i>Chapter IV: Advanced Configuration</i>	64
4-1 Configuration Backup and Restore	64
4-2 Firmware Upgrade	66
4-3 System Reset	67
<i>Chapter V: Appendix</i>	68
5-1 Hardware Specification	68
5-2 Troubleshooting	69
5-3 Glossary	72

Chapter I: Product Information

1-1 Product Introduction

Thank you for purchasing this wireless access point!

Easy install procedures allow any computer user to setup a network environment in very short time - within minutes, even inexperienced users. Just follow the instructions given in this user manual, you can complete the setup procedure and release the power of this access point all by yourself!

Other features of this access point include:

- Compatibility with IEEE 802.11b/g/Draft-N wireless network standard - works with other 802.11b/g/Draft-N wireless devices.
- High speed wireless network, six times faster than conventional 802.11g wireless network (up to 300Mbps).
- Supports DHCP server function.
- Supports 64/128-bit WEP, WPA, and WPA2 wireless data encryption.
- Supports MAC address filtering (Only allow specific wireless device of your choice to connect to this access point).

- Supports RADIUS server, only allow users listed in your authorization server to use wireless network.
- Easy to use web-based GUI (Graphical User Interface) for network configuration and management purposes.

1-2 Safety Information

In order to keep the safety of users and properties, please follow the following safety instructions:

1. This access point is designed for indoor use only; **DO NOT** place this access point outdoors.
2. **DO NOT** put this access point at or near hot or humid places, like a kitchen or bathroom. Also, do not leave this access point in the car in hot weather.
3. **DO NOT** pull any connected cable with force; disconnect it from the access point first.
4. If you want to place this access point at high places or hang on the wall, please make sure the access point is firmly secured. Falling from high places could damage the access point and its accessories and will void your warranty.
5. Accessories of this access point, like antennas and power supply, are dangerous to small children under 3 years old. They may put the small parts in their nose or mouth and it could cause serious damage to them. **KEEP THIS ACCESS POINT OUT THE REACH OF CHILDREN!**
6. The access point will become hot when used for a long time (***This is normal and is not a malfunction***). **DO NOT** put this access point on paper, cloth, or other flammable materials.
7. There's no user-serviceable part inside the access point. If you find that the access point is not working properly, please contact your dealer or Hawking Technologies and ask for help. **DO NOT** disassemble the access point or warranty will be void.
8. If the access point falls into water when it's powered, **DO NOT** use your hand to pick it up. Switch the electrical power off before you do anything, or contact an experienced electrical technician for help.
9. If you smell something strange or even see smoke coming out from the access point or power supply, remove the power supply or switch the

electrical power off immediately, and call dealer of purchase for help.

1-3 System Requirements

- One computer (PC) with an available CD or DVD-ROM drive
- Internet Web Browser (Internet Explorer, etc.)
- A Wired or Wireless networking adapter (e.g. Airport card, built-in Ethernet adapter, etc.)
- Wireless-B, G, or N Access Point or Router


1-4 Package Contents

Before you start to use this access point, please check if there's anything missing in the package, and contact your dealer of purchase to claim for missing items:


- Hi-Gain Wireless Access Point/Bridge (main body, 1 pcs)
- 3dBi Dipole Antenna (2 pcs)
- Quick Installation Guide (1 pcs)
- A/C power adapter (1 pcs)
- Ethernet cord (1 pcs)
- Setup CD (1 pcs)

1-5 Product Overview

Top Panel

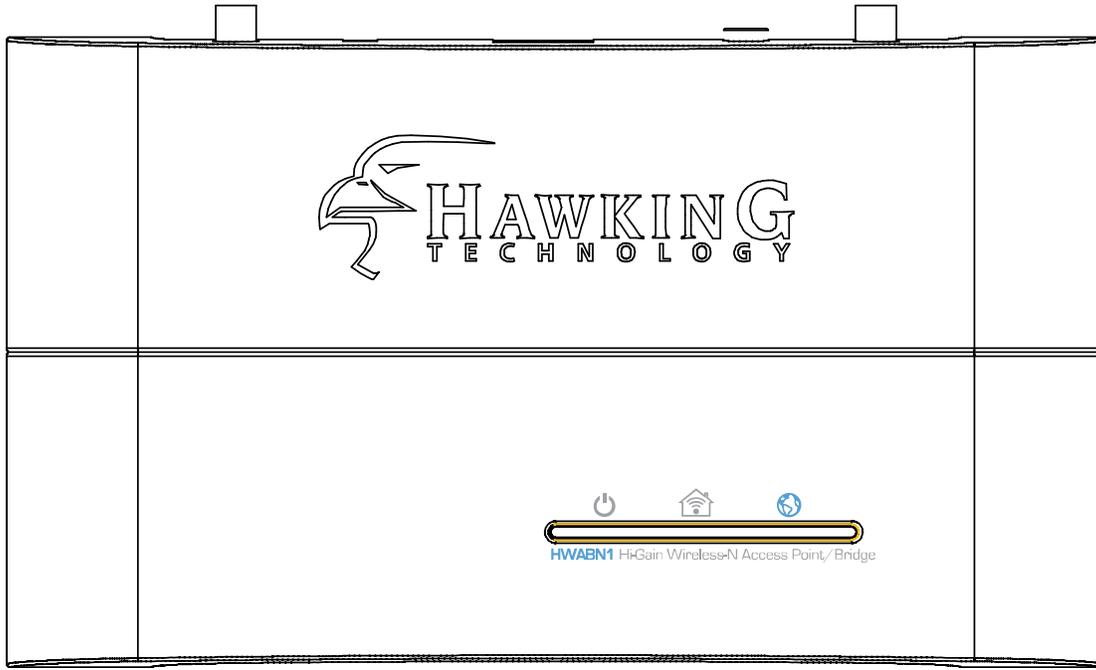

LED Name (Left to Right)	Light Status	Description
PWR 	On	The access point is switched on and correctly powered. WPS slow pulse: Enrollee mode WPS quick pulse: Registrar Mode
WLAN 	On	Wireless mode is enabled.
	Off	Wireless network is switched off.
	Flashing	Wireless LAN activity (transferring or receiving data).
LAN 	On	LAN port is connected
	Off	LAN port is not connected
	Flashing	LAN activity (transferring or receiving data)

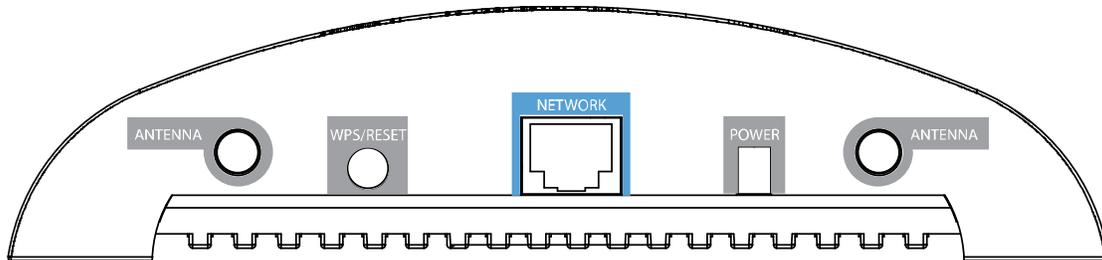Back Panel

Item Name	Description
Antennas	Two reserve SMA antenna connectors for screwing 3dBi detachable antennas enclosed with the product.
Power (5VDC/1A)	Power connector, connects to A/C power adapter.
WPS/Reset	WPS: refer to section 2-5 Reset: Reset the router to factory default settings (clear all settings). Press this button and hold for 30 seconds to restore all settings to factory defaults.
NETWORK	Local Area Network (LAN) port.

Chapter II: System and Network Setup

2-1 Installing the access point to your Network

Please follow the following instruction to build the network connection between your new wireless access point and your computers, network devices:

1. Connect the access point to the wireless router in your network through the LAN port of the access point by Ethernet cable.
2. Connect the A/C power adapter to the wall socket, and then connect it to the 'Power' socket of the access point.
3. Please check all LEDs on the front panel. 'PWR' LED should be steadily on, LAN LEDs should be on if the access point is correctly connected to the router. If PWD LED is not on, or any LED you expected is not on, please recheck the cabling, or jump to '**4-2 Troubleshooting**' for possible reasons and solution.

2-2 Connecting to the Wireless Access point by web browser

After the network connection is built, the next step you should do is setup the access point with proper network parameters, so it can work properly in your network environment.


Before you can connect to the access point and start configuration procedures, your computer must be able to get an IP address automatically (use dynamic IP address). If it's set to use static IP address, or you're unsure, please follow the following instructions to configure your computer to use dynamic IP address:

If the operating system of your computer is...

Windows 95/98/Me	- please go to section 2-2-1
Windows 2000	- please go to section 2-2-2
Windows XP	- please go to section 2-2-3
Windows Vista/7	- please go to section 2-2-4
Mac OS X	- please go to section 2-2-5

2-2-1 Windows 95/98/Me IP address setup

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Double-click **Network** icon, and **Network** window will appear. Select 'TCP/IP', then click 'Properties'.

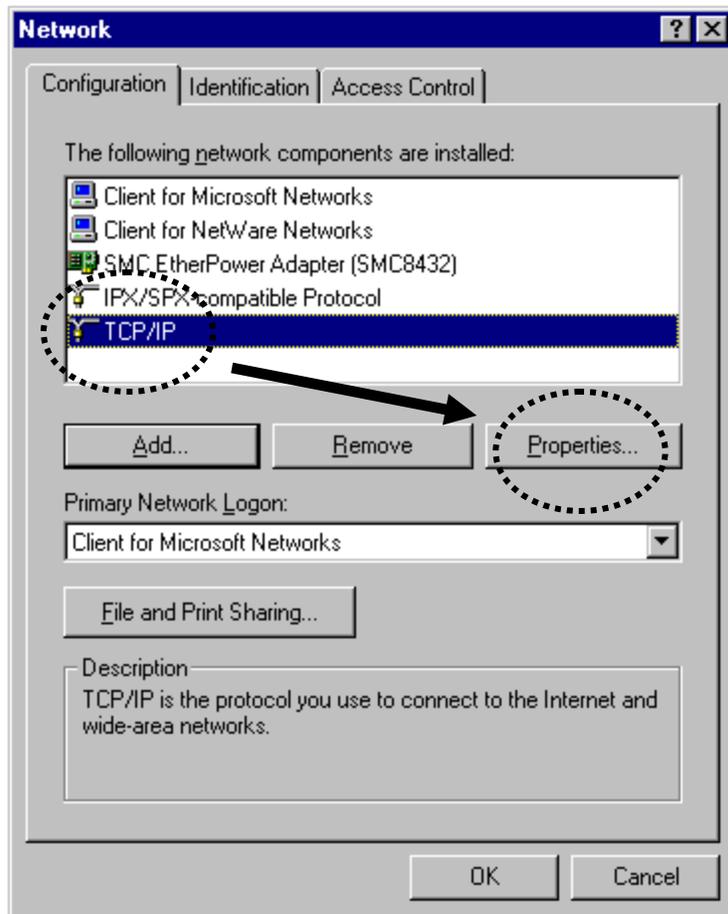


2. Select 'Specify an IP address', then input the following settings in respective field:

IP address: 192.168.1.2


Subnet Mask: 255.255.255.0

click 'OK' when finished.

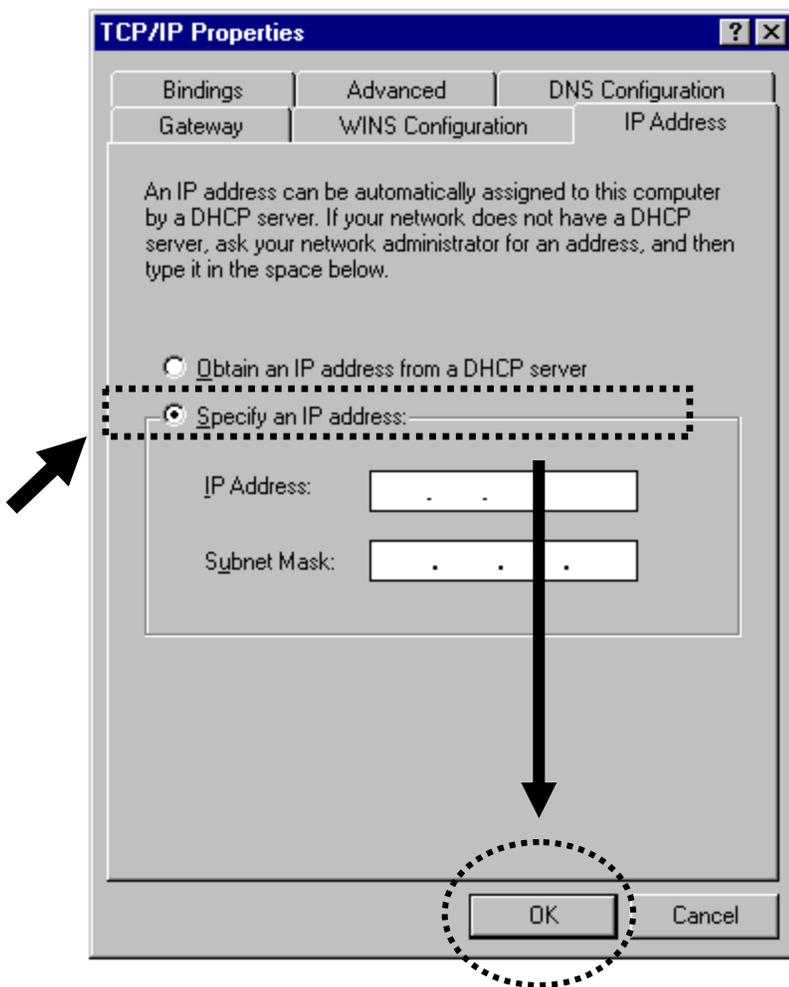

2-2-2 Windows 2000 IP address setup

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Double-click **Network and Dial-up Connections** icon, double click **Local Area Connection**, and **Local Area Connection Properties** window will appear. Select 'Internet Protocol (TCP/IP)', then click 'Properties'

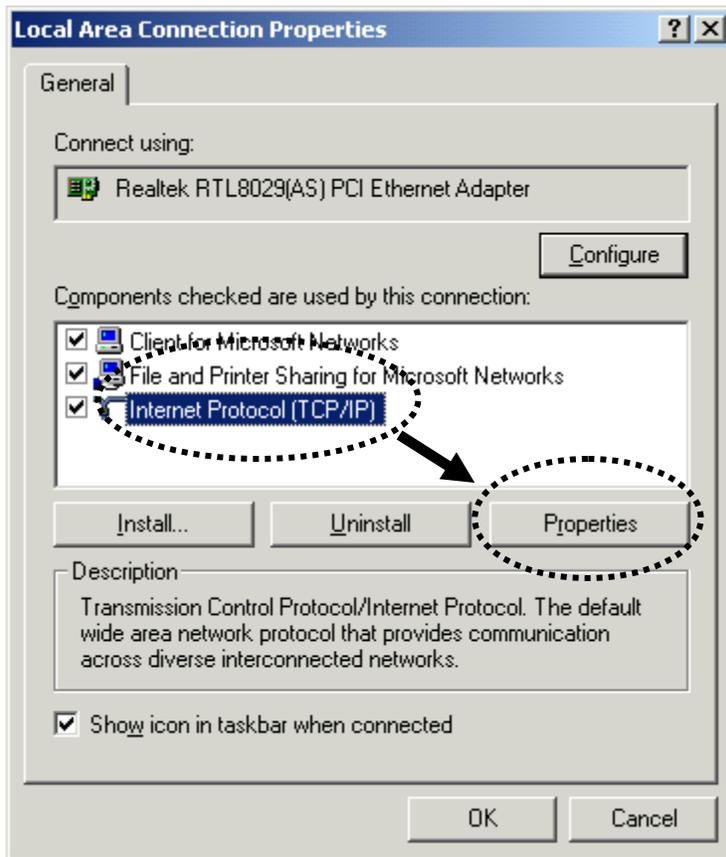


2. Select 'Use the following IP address', then input the following settings in respective fields:

IP address: 192.168.1.2

Subnet Mask: 255.255.255.0


click 'OK' when finished.

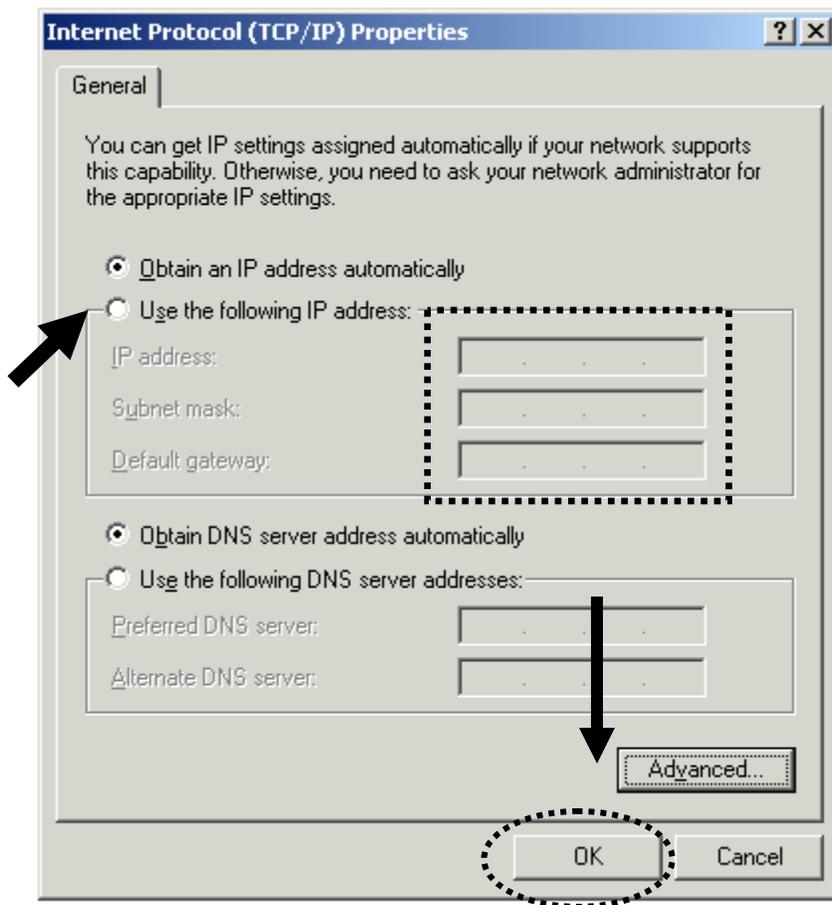

2-2-3 Windows XP IP address setup

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Double-click **Network and Internet**

Connections icon, click *Network Connections*, and then double-click *Local Area Connection*, *Local Area Connection Status* window will appear, and then click 'Properties'

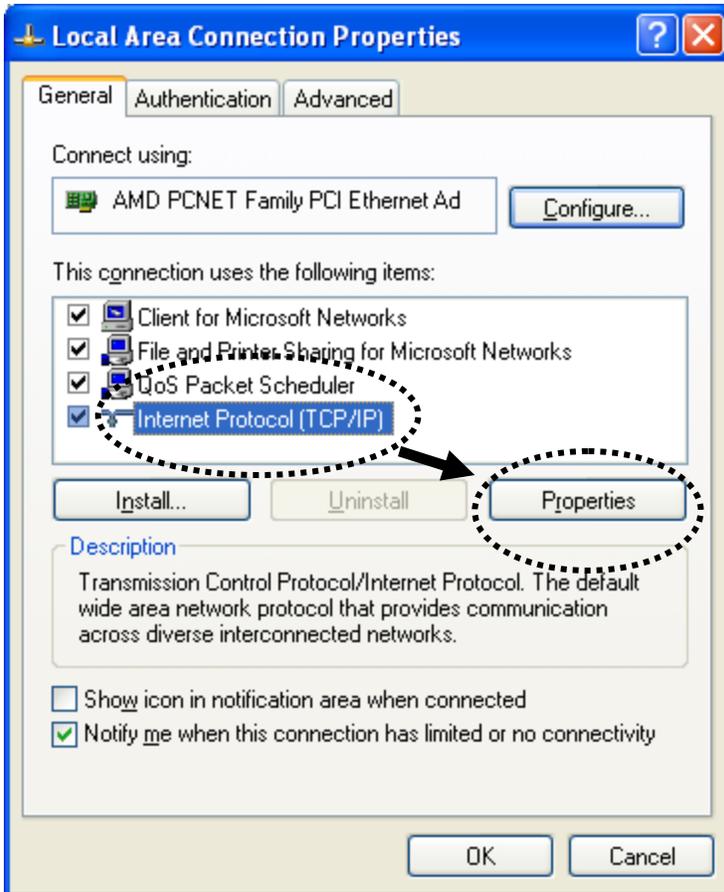


2. Select 'Use the following IP address', then input the following settings in respective field:

IP address: 192.168.1.2


Subnet Mask: 255.255.255.0

click 'OK' when finished.

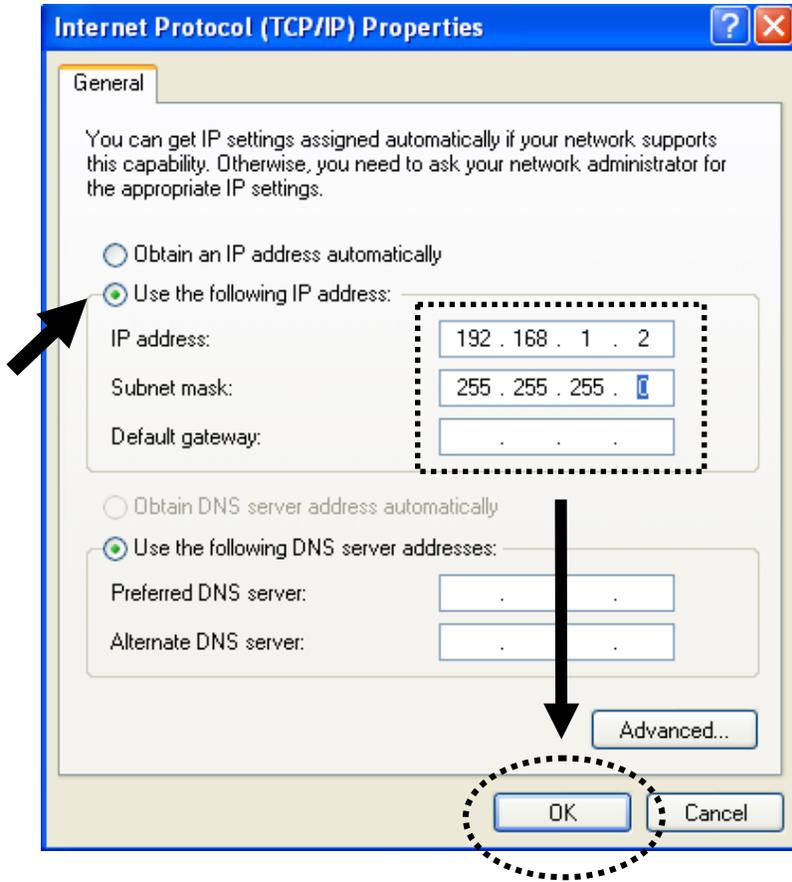

2-2-4 Windows Vista/7 IP address setup

1. Click 'Start' button (it should be located at lower-left corner of your computer), then click control panel. Under **Network and Internet**, Click **View Network Status and Tasks**, then click **Manage Network Connections/Change Adapter Settings** on the right hand column. Right-click **Local Area Network**, then select '**Properties**'. **Local Area Connection Properties** window will appear, select 'Internet Protocol Version 4 (TCP / IPv4), and then click 'Properties'

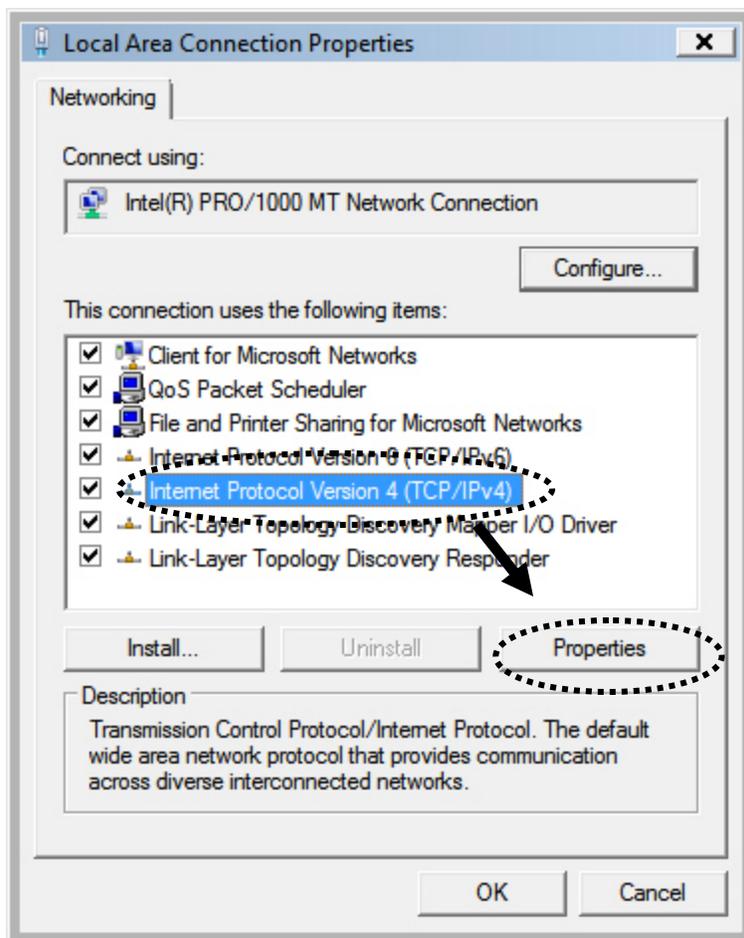


2. Select 'Use the following IP address', then input the following settings in respective field:

IP address: 192.168.1.2


Subnet Mask: 255.255.255.0

click 'OK' when finished.

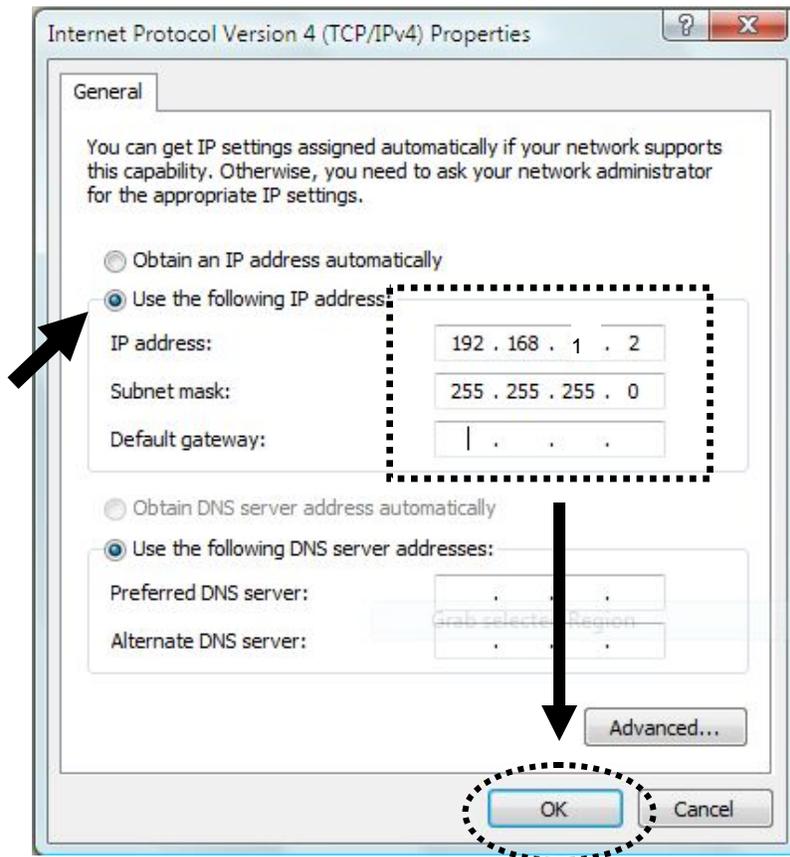


2-2-5 Mac OS X IP Address Setup


- 1) Go to your system preferences, go to network. Select your network connection. Click on “Advanced”.

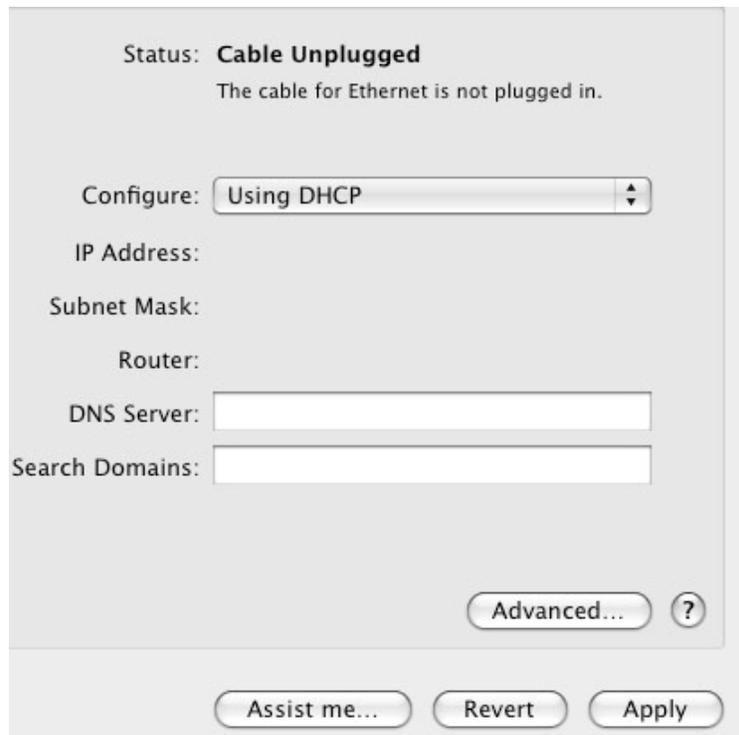

- 2) Next to configure IPv4, change to “Manually” in the drop down box. Input the following settings in respective field:
IPv4 address: 192.168.1.2
Subnet Mask: 255.255.255.0

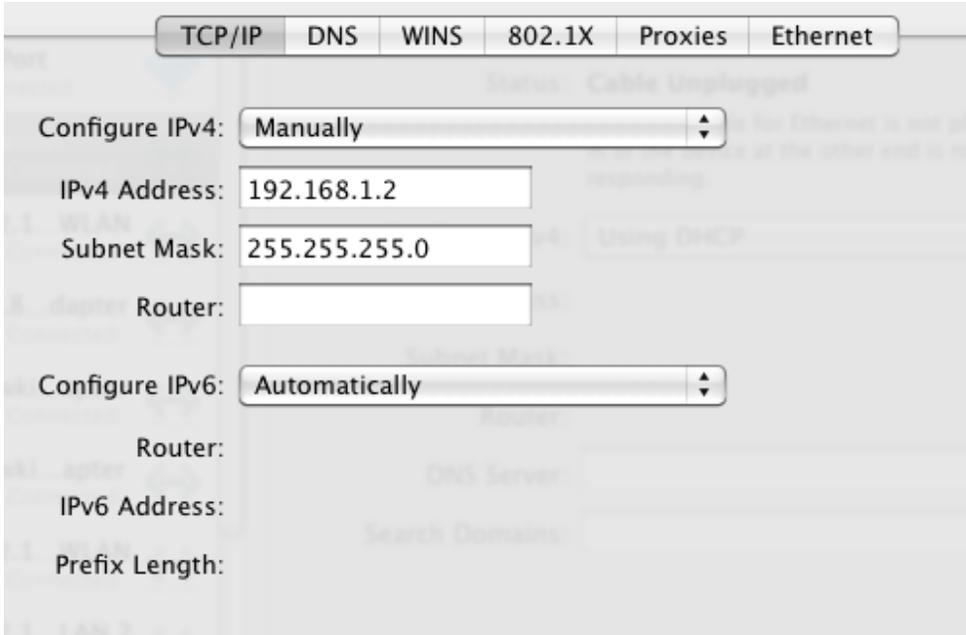


3) Click “Save” and then click “Apply” on the next page to finish.

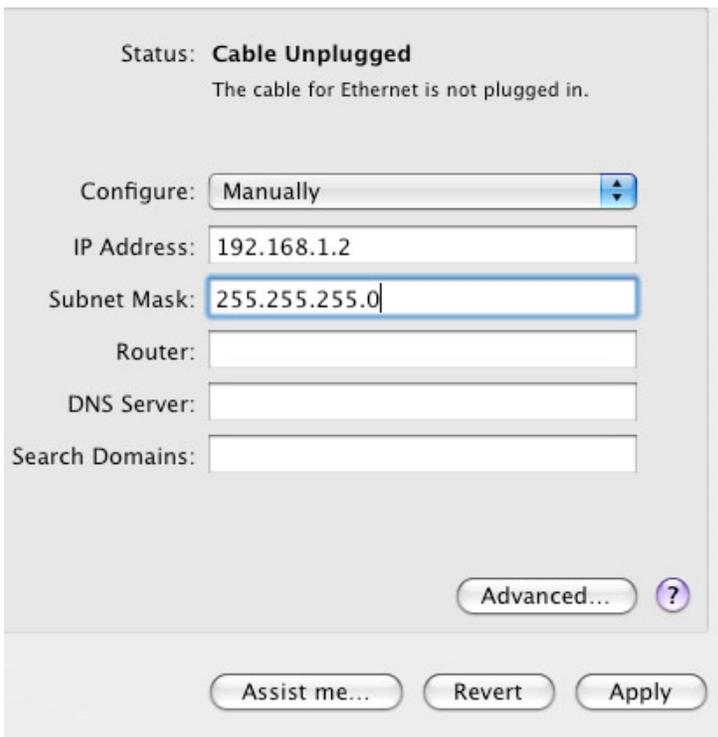

2-2-6 Connecting to Web Management Interface

All functions and settings of this access point must be configured via web management interface. Please start your web browser, and input '192.168.1.241' in address bar, then press 'Enter' key. The following message should be shown:

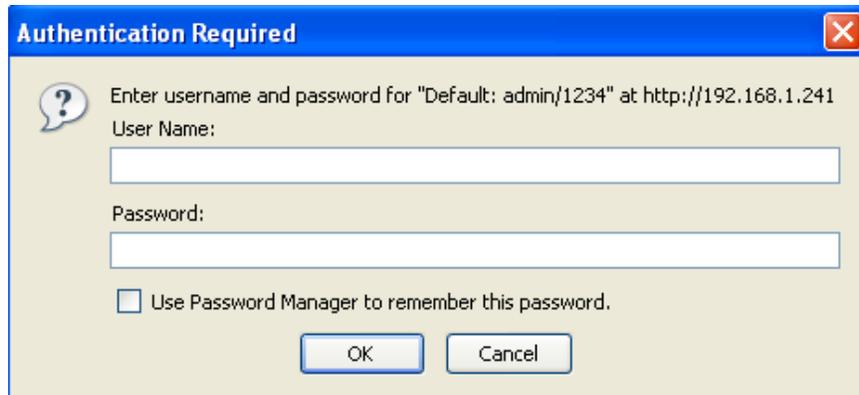

The image shows a standard Windows-style dialog box titled "Authentication Required". The title bar is blue with a red close button (X) on the right. The main area has a light beige background. On the left, there is a question mark icon in a speech bubble. To the right of the icon, the text reads: "Enter username and password for 'Default: admin/1234' at http://192.168.1.241". Below this text are two input fields: "User Name:" followed by a white text box, and "Password:" followed by a white text box. Below the password field is a checkbox with the label "Use Password Manager to remember this password." At the bottom of the dialog are two buttons: "OK" and "Cancel".

Please input user name and password in the respective fields, default user name is 'admin', and default password is '1234', then press 'OK', and you can see the web management interface of this access point:

The screenshot displays the web management interface for a Hi-Gain™ Wireless-300N Access Point/Bridge (HWABN1). The interface features a top navigation bar with tabs for Status, Basic Settings, Security, Advanced Settings, Configuration, Upgrade, and Reset. The main content area is titled "System Status" and includes a sub-section for "System" with the following details:

- Up Time: Oday:0h:10m:7s
- Hardware Version: Rev. A
- Runtime Code Version: 1.01

Below the System section is the "Wireless Configuration" section, which shows:


- Mode: AP
- ESSID: Hawking_300N_AP
- Channel Number: 11

NOTE: If you can't see the web management interface, and you're being prompted to input user name and password again, it means you didn't input username and password correctly. Please retype user name and password again. If you're certain about the user name and password you type are correct, please go to '4-2 Troubleshooting' to perform a factory reset, to set the password back to default value.

2-3 View System Status and Information

After you connected to the access point by web browser, the first thing you see is 'Status and Information' page. All system and network related information of this access point will be displayed here. The information is very helpful when you want to know the detailed information of your access point, and when you try to fix the communication problem between this access point and other wired / wireless computer / devices.

You can click 'Status' on the top-left, and the system status and information will be displayed, as shown below:

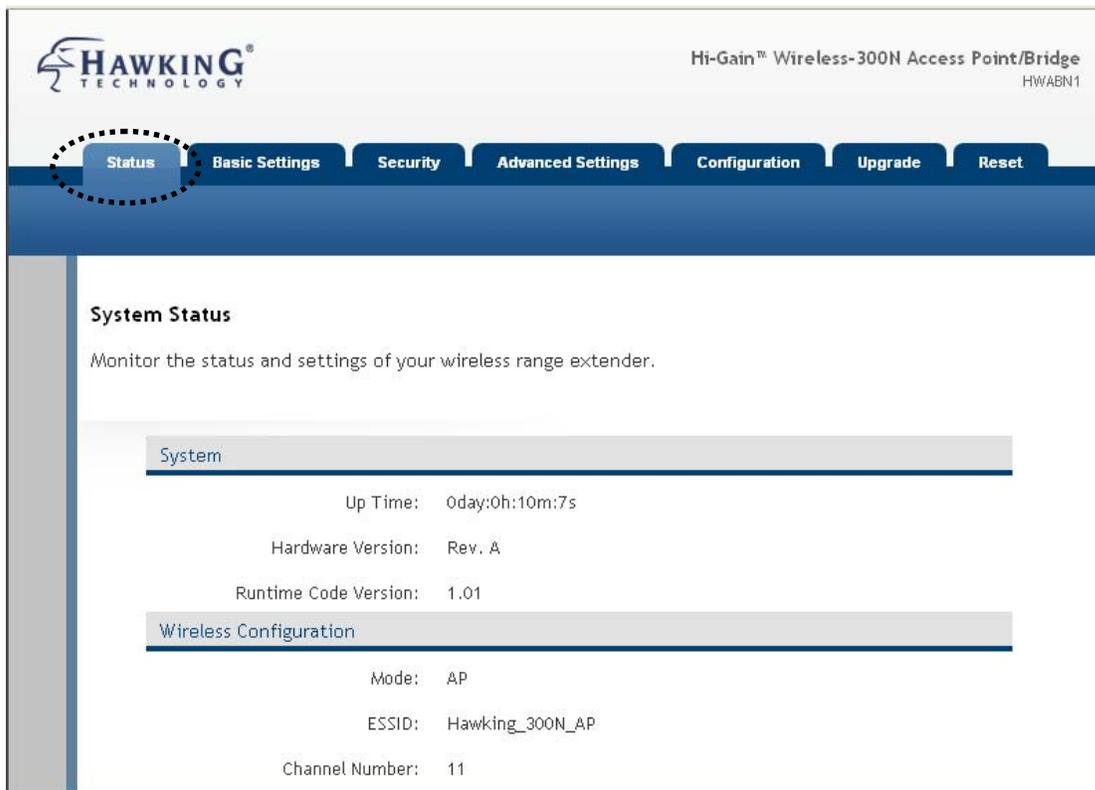

Here are descriptions of every item:

<i>Up time</i>	<i>Displays the total passed time since the wireless access point is powered.</i>
<i>Hardware Version</i>	<i>Displays hardware version. This information is</i>

	<i>helpful when you need online help from the dealer of purchase.</i>
<i>Runtime Code Version</i>	<i>Displays current firmware version. If you want to perform firmware upgrade, this number will help you to determine if you need such upgrade.</i>
<i>Mode</i>	<i>Displays current wireless operating mode (see next Section)</i>
<i>ESSID</i>	<i>Displays current ESSID (the name used to identify this wireless access point)</i>
<i>Channel Number</i>	<i>Displays current wireless channel number</i>
<i>Security</i>	<i>Displays current wireless security setting</i>
<i>BSSID</i>	<i>Displays current BSSID (a set of unique identification name of this access point, it can not be modified by user)</i>
<i>Associated Clients</i>	<i>Displays the number of connected wireless client</i>
<i>IP Address</i>	<i>Displays the IP address of this wireless access point</i>
<i>Subnet Mask</i>	<i>Displays the net mask of IP address</i>
<i>Default Gateway</i>	<i>Displays the IP address of default gateway</i>
<i>MAC address</i>	<i>Displays the MAC address of LAN interface</i>

2-4 Selecting an Operating Mode for your Wireless Access Point

When in Access Point mode, this access point acts as a bridge between 802.11b/g/Draft-N wireless devices and wired Ethernet network, and exchanges data between them.

When you select 'Access Point', the following options will be displayed:

The screenshot shows a configuration interface for a wireless access point. At the top, there is a tab labeled 'System'. Below the tab, the following settings are visible:

- Mode : AP (dropdown menu)
- Band : 2.4 GHz (B+G+N) (dropdown menu)
- MAIN ESSID : Hawking_300N_AP (text input field)
- Channel Number : 11 (dropdown menu)
- Associated Clients : Show Active Clients (button)


At the bottom right of the configuration area, there are two buttons: 'Apply' and 'Cancel'.

Here are descriptions of every setup item:

<p><i>Band</i></p>	<p><i>Please select the wireless band you wish to use. By selecting different band setting, you'll be able to allow or deny the wireless client of a certain band.</i></p> <p><i>If you select 2.4GHz (B), 2.4GHz (N), or 2.4GHz (G), only wireless clients using the wireless band you select (802.11b, 802.11 Draft-N, or 802.11g) will be able to connect to this access point.</i></p> <p><i>If you select 2.4GHz (B+G), then only wireless clients using 802.11b and 802.11g band will be able to connect to this access point.</i></p> <p><i>If you want to allow 802.11b, 802.11g, and 802.11</i></p>
--------------------	--

	<i>Draft-N clients to connect to this access point, select 2.4GHz (B+G+N).</i>
<i>Main ESSID</i>	<i>Please input the ESSID (the name used to identify this wireless access point) here. You can input up to 32 alphanumerical characters. PLEASE NOTE THAT ESSID IS CASE SENSITIVE.</i>
<i>Channel Number</i>	<i>Please select a channel number you wish to use. If you know a certain channel number is being used by other wireless access points nearby, please refrain from using the same channel number.</i>
<i>Associated Clients</i>	<i>Click 'Show Active Clients' and a new popup window will appear which contains the information about all wireless clients connected to this access point. You can click 'Refresh' in the popup window to keep information up-to-date.</i>


Select an AP from the left and click “Connect” and close the window. After you finish with settings, please click ‘Apply’, and the following message will be displayed:

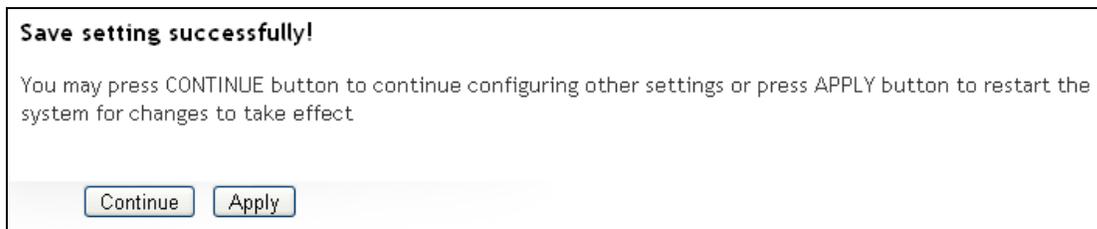

When you see this message, the settings you made have been successfully saved. You can click the ‘Continue’ button to go back to previous page and continue on other setting items, or click ‘Apply’ button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-4-1 Bridge Client Mode (Station-Infrastructure)

In this mode, you can connect the access point to Ethernet device such as TV or gaming console to enable the Ethernet device to be a wireless station and join to a wireless network through an access point or AP router.

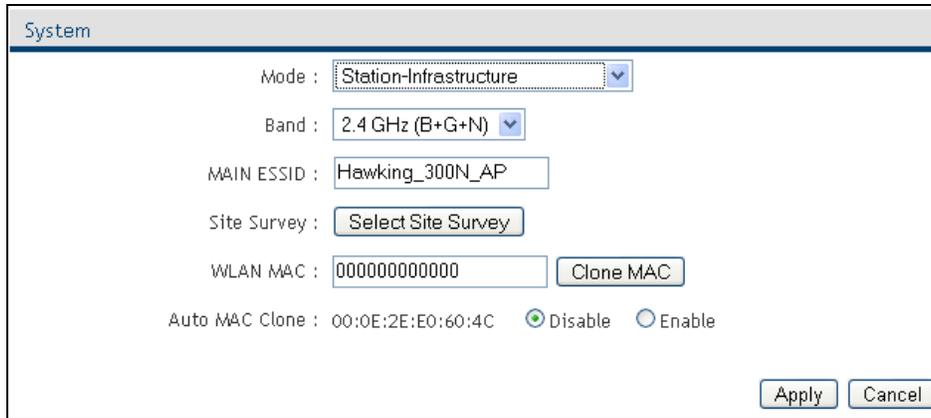

Here are descriptions of every setup item:

<p><i>Band</i></p>	<p><i>Please select the wireless band you wish to use. By selecting different band setting, you'll be able to allow or deny the wireless client of a certain band.</i></p> <p><i>If you select 2.4GHz (B), 2.4GHz (N), or 2.4GHz (G), only wireless clients using the wireless band you select (802.11b, 802.11 Draft-N, or 802.11g) will be able to connect to this access point.</i></p> <p><i>If you select 2.4GHz (B+G), then only wireless clients using 802.11b and 802.11g band will be able to connect to this access point.</i></p> <p><i>If you want to allow 802.11b, 802.11g, and 802.11 Draft-N clients to connect to this access point, select 2.4GHz (B+G+N).</i></p>
<p><i>Main ESSID</i></p>	<p><i>Please input the ESSID (the name used to identify</i></p>

	<i>this wireless access point) here. You can input up to 32 alphanumerical characters. PLEASE NOTE THAT ESSID IS CASE SENSITIVE.</i>
<i>Site Survey</i>	<i>When you use this access point as a wireless station for Ethernet network device to have wireless capability, you have to associate it with a working access point. Click 'Select Site Survey' button, then a "Wireless Site Survey Table" will pop up. It will list all available access points near by. You can select one access point in the table and it will join wireless LAN through this access point. Please go to Section 2-4-2-1 for more information about the 'Wireless Site Survey Table'.</i>
<i>WLAN MAC</i>	<i>For some applications, you may need to designate a specific MAC address for the access point. Please enter the MAC address here. If you are connecting the access point to a computer, you can simply press 'Clone Mac address' button to fill the MAC address field with the MAC address of your computer.</i>
<i>Auto MAC Clone</i>	<i>If this function is enabled, the access point will automatically clone the MAC address of the wireless clients which is the first one to associate to the access point while the access point is powered on.</i>

After you finish with setting, please click 'Apply', and the following message will be displayed:

Save setting successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point and the changes will take effect after about 30 seconds.

2-4-1-1 Wireless Site Survey

The table will list the access points nearby as the access point is set to Station mode; you can select one of the access points to associate.

Wireless Site Survey

This page provides a tool to scan the wireless networks in your area. If any Access Point or IBSS is found, you can choose to connect to it manually by selecting it and clicking "Connect" below.

	Select Channel	SSID	BSSID	Encryption	Authentication	Signal	Mode
<input type="radio"/>	2	pm	00:0E:3B:08:66:AC	NONE	OPEN	96	11b/g
<input type="radio"/>	8	Hawking_300N	00:0E:2E:44:82:6C	NONE	OPEN	100	11b/g/n
<input type="radio"/>	10	439	00:1C:10:66:B4:B0	TKIP	WPA	29	11b/g

Here are descriptions of every setup item:

<i>Select</i>	<i>Click the radio button to select the access point.</i>
<i>Channel</i>	<i>Display to channel number of the access point.</i>
<i>SSID</i>	<i>Display the SSID name of the access point.</i>
<i>BSSID</i>	<i>Display the BSSID (MAC Address) of the access point.</i>
<i>Encryption</i>	<i>Display the encryption setting of the access points. If you have selected the access point with security setting, you have to go to '2-7 Wireless Security' to set the same security with the access point you want to associate.</i>
<i>Authentication</i>	<i>Display the authentication type of the access point.</i>
<i>Signal</i>	<i>The signal strength of each access point will be displayed here. The signal strength is stronger, the connection quality is better.</i>
<i>Mode</i>	<i>Display the wireless modes include 11b, 11b/g or 11b/g/n or 11n only of the access points.</i>
<i>Refresh</i>	<i>Click this button to refresh the table.</i>

<i>Connection</i>	<i>Select an access point and click this button to choose the network. The SSID name of the access point you have selected will be displayed in the Main SSID in the Basic Setting page.</i>
-------------------	--

2-4-2 AP Bridge-Point to Point Mode

In this mode, this wireless access point will connect to another wireless access point which uses the same mode, and all wired Ethernet clients of both wireless access points will be connected together. You can use this mode to connect a network to another network which is physically isolated.

Please note that when you set your access point to this mode, it will not accept regular wireless clients anymore.

When you select 'AP Bridge-Point to Point', the following options will be displayed:

The screenshot shows a configuration window titled 'System'. It contains the following fields and controls:


- Mode: A dropdown menu set to 'AP Bridge-Point to Point'.
- Band: A dropdown menu set to '2.4 GHz (B+G+N)'.
- Channel Number: A dropdown menu set to '11'.
- MAC address 1: A text input field containing '000000000000'.
- Set Security: A button labeled 'Set Security'.
- Apply and Cancel: Two buttons at the bottom right of the window.

Here are descriptions of every setup item:

<i>Band</i>	<p><i>Please select the wireless band you wish to use. By selecting different band setting, you'll be able to allow or deny the wireless client of a certain band.</i></p> <p><i>If you select 2.4GHz (B), 2.4GHz (N), or 2.4GHz (G), only wireless clients using the wireless band</i></p>
-------------	---

	<p><i>you select (802.11b, 802.11 Draft-N, or 802.11g) will be able to connect to this access point.</i></p> <p><i>If you select 2.4GHz (B+G), then only wireless clients using 802.11b and 802.11g band will be able to connect to this access point.</i></p> <p><i>If you want to allow 802.11b, 802.11g, and 802.11 Draft-N clients to connect to this access point, select 2.4GHz (B+G+N).</i></p>
<i>Channel Number</i>	<i>Please select a channel number you wish to use. The channel number must be same with another wireless access point you wish to connect</i>
<i>MAC address 1</i>	<i>Please input the MAC address of the wireless access point you wish to connect</i>
<i>Set Security</i>	<i>Click this button to select an encryption mode for this wireless link, a new popup window will appear. Please refer to Section 2-7 for detailed descriptions.</i>

After you finish with setting, click 'Apply', and the following message will be displayed:

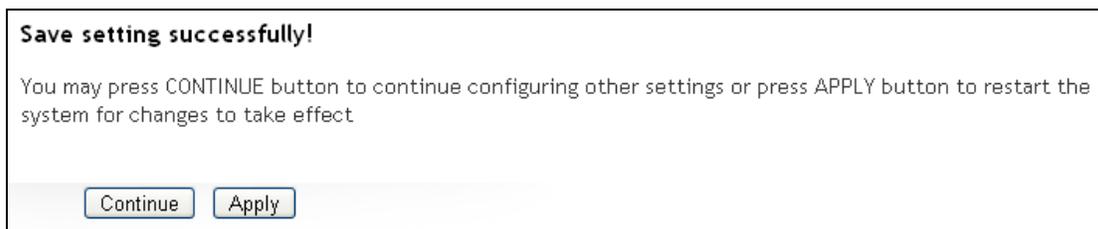

When you see this message, the settings you made are successfully saved, you can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-4-3 AP Bridge-Point to Multi-Point Mode

In this mode, this wireless access point will connect to up to four wireless access points which uses the same mode, and all wired Ethernet clients of every wireless access point will be connected together. You can use this mode to connect a network to other networks which are physically isolated.

Please note that when you set your access point to this mode, it will not accept regular wireless clients anymore.

When you select 'AP Bridge-Point to Multi-Point', the following options will be displayed:

The screenshot shows a configuration window titled "System". The "Mode" dropdown is set to "AP Bridge-Point to Multi-Point". The "Band" dropdown is set to "2.4 GHz (B+G+N)". The "Channel Number" dropdown is set to "11". There are four "MAC address" fields, each containing "000000000000". A "Set Security" button is located below the MAC address fields. At the bottom right, there are "Apply" and "Cancel" buttons.

Here are descriptions of every setup item:

<i>Band</i>	<p><i>Select the wireless band you wish to use. By selecting different band setting, you'll be able to allow or deny the wireless client of a certain band.</i></p> <p><i>If you select 2.4GHz (B), 2.4GHz (N), or 2.4GHz (G), only wireless clients using the wireless band you select (802.11b, 802.11 Draft-N, or 802.11g) will be able to connect to this access point.</i></p>
-------------	---

	<p><i>If you select 2.4GHz (B+G), then only wireless clients using 802.11b and 802.11g band will be able to connect to this access point.</i></p> <p><i>If you want to allow 802.11b, 802.11g, and 802.11 Draft-N clients to connect to this access point, select 2.4GHz (B+G+N).</i></p>
<i>Channel Number</i>	<i>Please select a channel number you wish to use. The channel number must be same with another wireless access point you wish to connect</i>
<i>MAC address 1-4</i>	<i>Please input the MAC address of the wireless access point you wish to connect</i>
<i>Set Security</i>	<i>Click this button to select an encryption mode for this wireless link, a new popup window will appear. Please refer to Section 2-7 for detailed descriptions.</i>

After you finish with setting, please click ‘Apply’, and the following message will be displayed:

Save setting successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect

When you see this message, the settings you made are successfully saved. You can click the ‘Continue’ button to return to the previous page and change other settings, or click the ‘Apply’ button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-4-4 AP Bridge-WDS Mode

In this mode, this wireless access point will connect up to four wireless access points which use the same mode, and all wired Ethernet clients of every wireless access point will be connected together. You can use this mode to connect a network to other networks that are physically isolated.

When you use this mode, this access point is still able to accept wireless clients.

When you select 'AP Bridge-WDS', the following options will be displayed:

The screenshot shows a configuration window titled "System" with the following fields and controls:

- Mode: (dropdown menu)
- Band: (dropdown menu)
- MAIN ESSID:
- Channel Number: (dropdown menu)
- Associated Clients:
- MAC address 1:
- MAC address 2:
- MAC address 3:
- MAC address 4:
- Set Security:

Buttons for "Apply" and "Cancel" are located at the bottom right of the window.


Here are descriptions of every setup item:

<p><i>Band</i></p>	<p><i>Please select the wireless band you wish to use. By selecting different band setting, you'll be able to allow or deny the wireless client of a certain band.</i></p> <p><i>If you select 2.4GHz (B), 2.4GHz (N), or 2.4GHz (G), only wireless clients using the wireless band</i></p>
--------------------	---

	<p><i>you select (802.11b, 802.11 Draft-N, or 802.11g) will be able to connect to this access point.</i></p> <p><i>If you select 2.4GHz (B+G), then only wireless clients using 802.11b and 802.11g band will be able to connect to this access point.</i></p> <p><i>If you want to allow 802.11b, 802.11g, and 802.11 Draft-N clients to connect to this access point, select 2.4GHz (B+G+N).</i></p>
<i>MAIN ESSID</i>	<p><i>Please input the ESSID (the name used to identify this wireless access point) here. You can input up to 32 alphanumerical characters. PLEASE NOTE THAT ESSID IS CASE SENSITIVE.</i></p>
<i>Multiple ESSID</i>	<p><i>The access point supports multiple SSID function; up to four SSIDs can be set. If you want to configure additional SSIDs, please click this button. For detailed descriptions of the function, please refer to Section 2-4-1-1.</i></p>
<i>Channel Number</i>	<p><i>Please select a channel number you wish to use. The channel number must be same with another wireless access point you wish to connect</i></p>
<i>Associated Clients</i>	<p><i>Click 'Show Active Clients' button and a new popup window will appear which contains the information about all wireless clients connected to this access point. You can click 'Refresh' button in popup window to keep information up-to-date.</i></p>
<i>MAC address 1-4</i>	<p><i>Please input the MAC address of the wireless access point you wish to connect</i></p>
<i>Set Security</i>	<p><i>Click this button to select an encryption mode for this wireless link, a new popup window will appear. Please refer to Section 2-7 for detailed descriptions.</i></p>

After you finish with setting, please click 'Apply', and the following

message will be displayed:

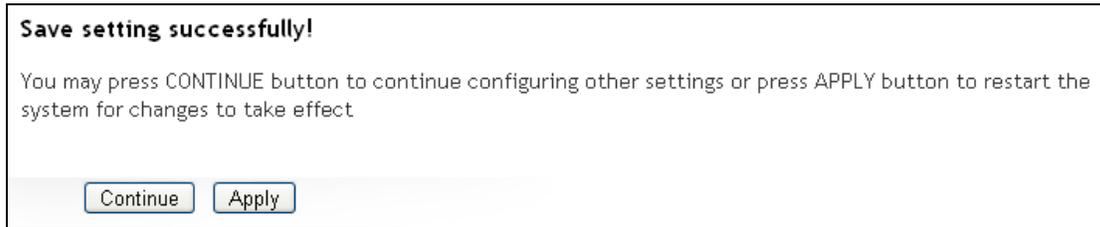


When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-5 WPS Setting

Wi-Fi Protected Setup (WPS) is the simplest way to build connection between wireless network clients and this access point. You don't have to select encryption mode and input a long encryption passphrase every time when you need to setup a wireless client, you only have to press a button on wireless client and this access point, and the WPS will do the setup for you.

This access point supports two types of WPS: Push-Button Configuration (PBC), and PIN code. If you want to use PBC, you have to switch this access point to WPS mode and push a specific button on the wireless client to start WPS mode. You can push Reset/WPS button of this access point, or click 'Start PBC' button in the web configuration interface to do this; if you want to use PIN code, you have to provide the PIN code of the wireless client you wish to connect to this access point and then switch the wireless client to WPS mode. The detailed instructions are listed follow:

Note: WPS function of this access point will not work for those wireless clients that do not support WPS.

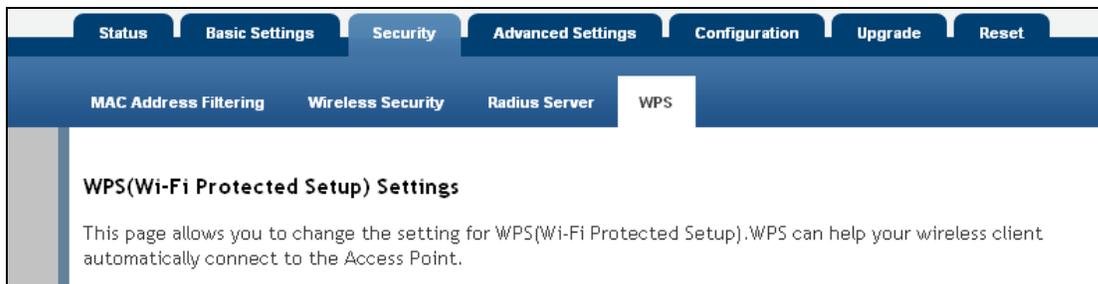

To use WPS function to set encrypted connection between this access point and WPS-enabled wireless client by WPS, click 'WPS Setting' in the web management menu, and the following information will be displayed:

WPS(Wi-Fi Protected Setup) Settings

This page allows you to change the setting for WPS(Wi-Fi Protected Setup).WPS can help your wireless client automatically connect to the Access Point.

Enable WPS

Wi-Fi Protected Setup Information

WPS Status: unConfigured
 Self PinCode: 47047167
 SSID: Hawking_300N_AP
 Authentication Mode: Disable
 Passphrase Key:

Device Configure

Config Mode:

Configure via Push Button:

Configure via Client PinCode:

Here are descriptions of every setup item:

<i>Enable WPS</i>	<i>Check this box to enable or disable WPS function</i>
<i>Wi-Fi Protected Setup Information</i>	<p><i>All information related to WPS will be displayed here, they're helpful when you're setting up connections by WPS.</i></p> <p><i>WPS Status: Displays WPS status. If data encryption settings of this access point has never been set, an 'unConfigured' message will be displayed here. (see Section 2-7 for detailed information); if data encryption settings have been set before, a 'Configured' message will be displayed here.</i></p> <p><i>Self PinCode: This is the WPS PIN code for this access point. This code is useful when you need to build wireless connection by WPS with other</i></p>

	<p><i>WPS-enabled wireless devices.</i></p> <p><i>SSID: Displays the SSID (ESSID) of this access point.</i></p> <p><i>Authentication Mode: The wireless security authentication mode of this access point will be displayed here. If you don't enable the security function of the access point before WPS is activated, the access point will auto set the security to WPA (AES) and generate a set of passphrase keys for WPS connection.</i></p> <p><i>Passphrase Key: Displays the WPA passphrase here, all characters will be replaced by asterisk for security reasons. If encryption is not set on this access point, nothing will be displayed here.</i></p>
<i>Config Mode</i>	<p><i>There are 'Registrar' and 'Enrollee' modes for the WPS connection. When 'Registrar' is enabled, the wireless clients will follow the access point's wireless settings for WPS connection. When 'Enrollee' mode is enabled, the access point will follow the wireless settings of wireless client for WPS connection.</i></p>
<i>Start PBC</i>	<p><i>Click 'Start PBC' to start Push-Button style WPS setup procedure. This access point will wait for WPS requests from wireless clients for 2 minutes. The 'WLAN' LED on the access point will be steady on for 2 minutes when this access point is waiting for incoming WPS request.</i></p>
<i>Start PIN</i>	<p><i>Please input the PIN code of the wireless client you wish to connect, and click 'Start PIN' button. The 'WLAN' LED on the access point will be steady on when this access point is waiting for incoming WPS request.</i></p>

NOTE: When you're using PBC type WPS setup, you must press 'PBC' button (hardware or software) of wireless client within 120 seconds; if you didn't press PBC button of wireless client within this time period, please press 'PBC' button (hardware or software) of this access point again.

2-6 Wireless Security

This wireless access point provides many types of wireless security (wireless data encryption). When you use data encryption, data transferred by radio signals in the air will become unreadable for those people who don't know correct encryption key (encryption password).

NOTE: All Security settings for the Access point must be identical to the original root Access Point's (source) security settings.

1. Click the 'Security' tab and then click 'Wireless Security' sub-tab in the web management interface.



There are four types of security levels you can select: Disable (no security - data encryption disabled), WEP, WPA Pre-shared Key, and WPA Radius. Please refer to the following sections for detailed instructions.

Please remember it's very important to set wireless security settings properly! Without a proper setting, hackers and intruders may gain access to your local network and could cause serious problems.

There are several things you can do to improve wireless security:

1. Always enable data encryption. Only disable it when you want to open your wireless access point to the public.
2. Never use simple words as encryption password. Using random combinations of symbols, numbers, and alphabets will greatly improve security.
3. Use WPA when possible - it's much safer than WEP.
4. Change encryption password when you've used it for a long time.

2-6-1 Disable Security

When you select 'Disable', wireless encryption for the network is disabled.

Wireless Security

This section allows your data to be transmitted over the wireless network securely. If this function is enabled, please make sure your wireless Range Extender is using the same encryption keys as the original root Access Point.

Encryption :

Enable 802.1x Authentication

After you finish with setting, please click 'Apply', and the following message will be displayed:

Save setting successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-6-2 WEP

WEP (Wired Equivalent Privacy) is a common encryption mode, it's safe enough for home and personal use. But if you need higher level of security, please consider using WPA encryption (see next Section).

However, some wireless clients don't support WPA, but only support WEP, so WEP is still a good choice for you if you have such a client in your network environment.

When you select 'WEP' as encryption type, the following messages will be displayed:

Here are descriptions of every setup item:

<i>Key Length</i>	<i>There are two types of WEP key length: 64-bit and 128-bit. Using '128-bit' is safer than '64-bit', but will reduce some data transfer performance.</i>
<i>Key Format</i>	<i>There are two types of key format: ASCII and Hex. When you select a key format, the number of</i>

	<i>characters of key will be displayed. For example, if you select '64-bit' as key length, and 'Hex' as key format, you'll see the message at the right of 'Key Format' is 'Hex (10 characters)', which means the length of WEP key is 10 characters.</i>
<i>Default Tx Key</i>	<i>You can set up to four sets of WEP key, and you can decide which key is being used by default here. If you don't know which one you should use, select 'Key 1'.</i>
<i>Encryption Key 1 to 4</i>	<i>Input WEP key characters here, the number of characters must be the same as the number displayed at 'Key Format' field. You can use any alphanumerical characters (0-9, a-z, and A-Z) if you select 'ASCII' key format, and if you select 'Hex' as key format, you can use characters 0-9, a-f, and A-F. You must enter at least one encryption key here, and if you entered multiple WEP keys, they should not be same with each other.</i>
<i>Enable 802.1x Authentication</i>	<i>Check this box to enable 802.1x user authentication. Please refer to Section 2-7-5 for detailed instructions.</i>

After you finish with setting, please click 'Apply', and the following message will be displayed:

Save setting successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect

When you see this message, the settings you made are successfully saved. You can click 'Continue' button to back to previous page and continue on other setting items, or click 'Apply' button to restart the wireless access point and the changes will take effect after about 30 seconds.

2-6-3 WPA Pre-shared Key

WPA Pre-shared key is the safest encryption method currently, and it's recommended to use this encryption method to ensure the safety of your data.

When you select 'WPA pre-shared key' as encryption type, the following messages will be displayed:


The screenshot shows a configuration window with the following fields and options:

- Encryption : WPA pre-shared key (dropdown menu)
- WPA Unicast Cipher Suite : WPA(TKIP) WPA2(AES) WPA2 Mixed
- Pre-shared Key Format : Passphrase (dropdown menu)
- Pre-shared Key : (empty text input field)
- Buttons: Apply, Cancel

Here are descriptions of every setup item:

<i>WPA Unicast Cipher Suite</i>	<i>Available options are: WPA (TKIP), WPA2 (AES), and WPA2 Mixed. You can select one of them, but you have to make sure your wireless client supports the cipher you selected.</i>
<i>Pre-shared Key Format</i>	<i>Please select the format of your pre-shared key here. Available options are 'Passphrase' (8 to 63 alphanumerical characters) and 'Hex (64 hexadecimal characters – 0 to 9 and a to f).</i>
<i>Pre-shared Key</i>	<i>Please input pre-shared key according to the key format you selected here. For security reasons, don't use simple words).</i>

After you finish with setting, click 'Apply', and the following message will be displayed:

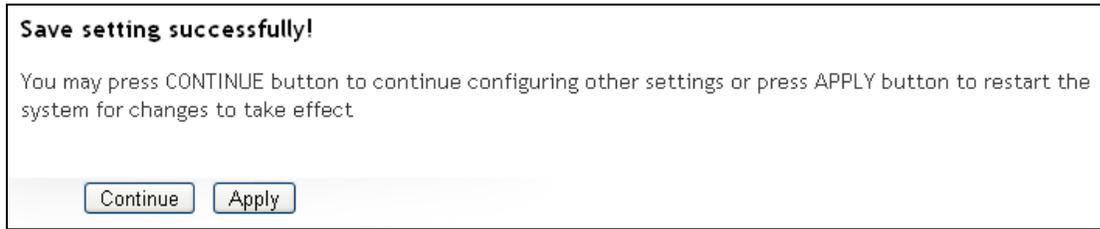

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-6-4 WPA RADIUS

WPA Radius is the combination of WPA encryption method and RADIUS user authentication. If you have a RADIUS authentication server, you can check the identity of every wireless client by user database.

When you select 'WPA RADIUS' as encryption type, the following messages will be displayed:

Encryption : WPA RADIUS

WPA Unicast Cipher Suite : WPA(TKIP) WPA2(AES) WPA2 Mixed

Use internal MD5/PEAP RADIUS Server

RADIUS Server IP address :

RADIUS Server Port : 1812

RADIUS Server Password :

Apply Cancel

Here are descriptions of every setup item:

<i>WPA Unicast Cipher Suite</i>	<i>You can select WPA encryption type here. AES is safer than TKIP, but not every wireless client supports it. Please refer to the specification of your wireless client to decide which encryption type you should use.</i>
<i>Use internal MD5 RADIUS Server</i>	<i>Uses built-in RADIUS Server (refer to Section 2-8) instead of external RADIUS server. If you check this box, the value in following three fields will be ignored.</i>
<i>RADIUS Server IP address</i>	<i>Please input the IP address of RADIUS authentication server here.</i>
<i>RADIUS Server Port</i>	<i>Please input the port number of RADIUS authentication server here. Default value is 1812.</i>

<i>RADIUS Server Password</i>	<i>Please input the password of RADIUS authentication server here.</i>
-----------------------------------	--

After you finish with setting, click 'Apply', and the following message will be displayed:

Save setting successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-6-5 802.1x Authentication

You can enable 802.1x user identification (based on RADIUS user authentication server) by checking the 'Enable 802.1x Authentication' box when you select 'Disable' or 'WEP' as encryption type, and the following message will be displayed:

Encryption :

Use internal MD5/PEAP RADIUS Server

Enable 802.1x Authentication

RADIUS Server IP address :


RADIUS Server Port :

RADIUS Server Password :

Here are descriptions of every setup item:

<i>Use internal MD5 RADIUS Server</i>	<i>Uses built-in RADIUS Server (refer to next Section) instead of external RADIUS server. If you check this box, the value of internal RADIUS server fields will be ignored.</i>
<i>Enable 802.1x Authentication</i>	<i>Enable or disable the use of 802.1x user authentication.</i>
<i>RADIUS Server IP address</i>	<i>Please input the IP address of RADIUS authentication server here.</i>
<i>RADIUS Server Port</i>	<i>Please input the port number of RADIUS authentication server here. Default value is 1812.</i>
<i>RADIUS Server Password</i>	<i>Please input the password of RADIUS authentication server here.</i>

After you finish with setting, click 'Apply', and the following message will be displayed:

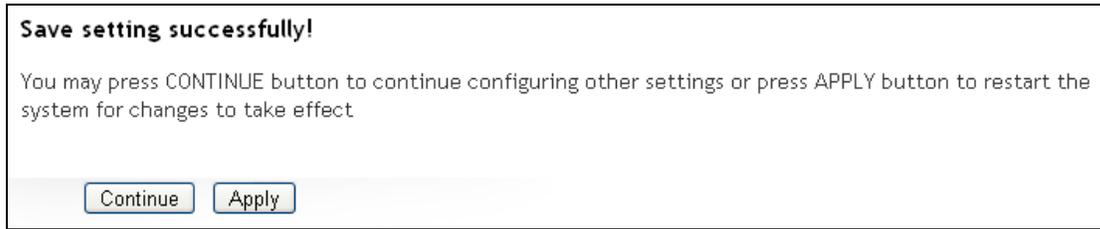

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

2-7 Mac Address Filtering

Another security measure you can use to keep hackers and intruders away is 'MAC filtering'. You can pre-define a so-called 'white-list', which contains MAC addresses of the wireless clients you trust. All other wireless clients with a MAC address that are not on your list will be denied by this wireless access point.

To setup MAC filtering, please click 'MAC Filtering' sub-tab under the 'Security' tab in the web management interface and the following messages will be displayed:

MAC Address Filtering

For security reasons, the Access Point/Bridge features MAC Address Filtering that only allows authorized MAC Addresses to associate with the Access Point/Bridge.

Enable Wireless Access Control

MAC Address	Comment
<input type="text"/>	<input type="text"/>

MAC Address Filtering Table

NO.	MAC Address	Comment	Select
-----	-------------	---------	--------

Add new address here (1)

Address filtering table (2)

This page contains two parts of MAC filtering information. All allowed MAC addresses will be listed in upper part (1), and you can add new MAC addresses by components in lower part (2).

Here are descriptions of every setup item:

<i>Select</i>	<i>Check this box to select one or more MAC addresses to delete.</i>
<i>Delete Selected</i>	<i>Click this button to delete all selected MAC addresses.</i>
<i>Delete All</i>	<i>Delete all MAC address entries.</i>
<i>Reset</i>	<i>Uncheck all selected MAC address entries.</i>
<i>Enable Wireless Access Control</i>	<i>Check this box to enable MAC address restriction, if unchecked, no restriction will be enforced (any wireless client with proper encryption setting will be able to connect to this wireless access point).</i>
<i>MAC address</i>	<i>Input MAC address allowed using this wireless access point here. You don't have to add colon (:) or hyphen (-) by yourself, just input 0 to 9 and a to f here, like 112233445566 or aabbccddeeff.</i>
<i>Comment</i>	<i>You can input any text here as the comment of this MAC address, like 'ROOM 2A Computer' or anything. You can input up to 16 alphanumerical characters here. This is optional and you can leave it blank, however, it's recommended to use this field to write a comment for every MAC address as a memory aid. This is optional.</i>
<i>Add</i>	<i>When you finish inputting MAC address and (optional) Comment, click this button to add the MAC address to the list.</i>
<i>Clear</i>	<i>Remove all characters in 'MAC address' and 'Comments' field.</i>

After you finish with setting, please click 'Apply', and the following message will be displayed:

Save setting successfully!

You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect


When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

Chapter III Advanced Settings

3-1 Advanced Wireless Settings

This wireless access point has many advanced wireless features. Please note that all settings listed here are for experienced users only, if you're not sure about the meaning and function of these settings, please don't modify them, or the wireless performance will be reduced.

You can click 'Advanced Setting' tab at the top of web interface to enter advanced settings menu, and the following page will be displayed:

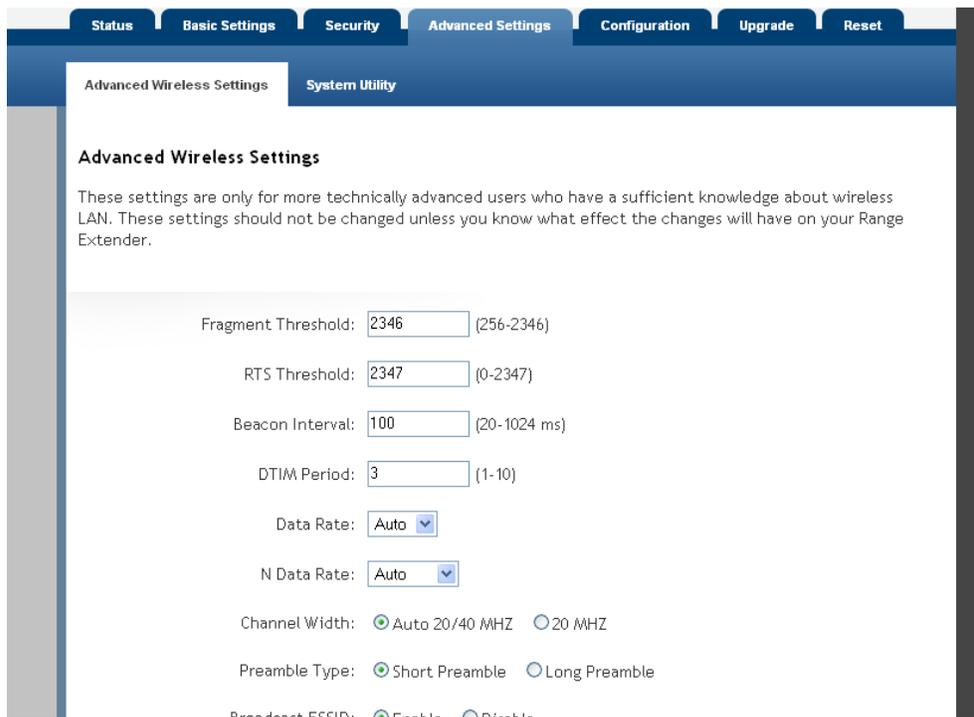


Here are descriptions of every setup item:

<i>Fragment Threshold</i>	<i>Set the Fragment threshold of wireless radio. Do not modify default value if you don't know what it is, default value is 2346</i>
<i>RTS Threshold</i>	<i>Set the RTS threshold of wireless radio. Do not modify default value if you don't know what it is, default value is 2347</i>
<i>Beacon Interval</i>	<i>Set the beacon interval of wireless radio. Do not modify default value if you don't know what it is, default value is 100</i>
<i>DTIM Period</i>	<i>Set the DTIM period of wireless radio. Do not modify default value if you don't know what it is, default value is 3</i>
<i>Data Rate</i>	<i>Set the wireless data transfer rate to a certain value. Since most of wireless devices will negotiate with each other and pick a proper data transfer rate automatically, it's not necessary to change this value unless you know what will happen after modification.</i>
<i>N Data Rate</i>	<i>Set the data rate of 802.11 Draft-N clients, available options are MCS 0 to MCS 15, it's safe to set this option to 'Auto' and it's not necessary to change this value unless you know what will happen after modification.</i>
<i>Channel Width</i>	<i>Select wireless channel width (bandwidth taken by wireless signals of this access point). It's suggested to select 'Auto 20/40MHz'. Do not change to '20 MHz' unless you know what it is.</i>
<i>Preamble Type</i>	<i>Set the type of preamble of wireless radio, Do not modify default value if you don't know what it is, default setting is 'Short Preamble'.</i>
<i>Broadcast ESSID</i>	<i>Decide if the wireless access point will broadcast its own ESSID or not. You can hide the ESSID of your wireless access point (set the option to</i>

	<i>'Disable'), so only people those who know the ESSID of your wireless access point can get connected.</i>
<i>WMM</i>	<i>WMM (Wi-Fi Multimedia) technology, which can improve the performance of certain network applications, like audio/video streaming, network telephony (VoIP), and others. When you enable WMM function, the access point will define the priority of different kinds of data, to give higher priority to applications which require instant responding. Therefore you can improve the performance of such network applications.</i>
<i>CTS Protect</i>	<i>Enabling this setting will reduce the chance of radio signal collisions between 802.11b and 802.11g wireless access points. It's recommended to set this option to 'Auto'.</i>
<i>TX Power</i>	<i>You can set the output power of wireless radio. Unless you're using this wireless access point in a really big space, you may not have to set output power to 100%. This will enhance security (malicious / unknown users in distance will not be able to reach your wireless access point).</i>

After you finish with setting, click 'Apply', and the following message will be displayed:

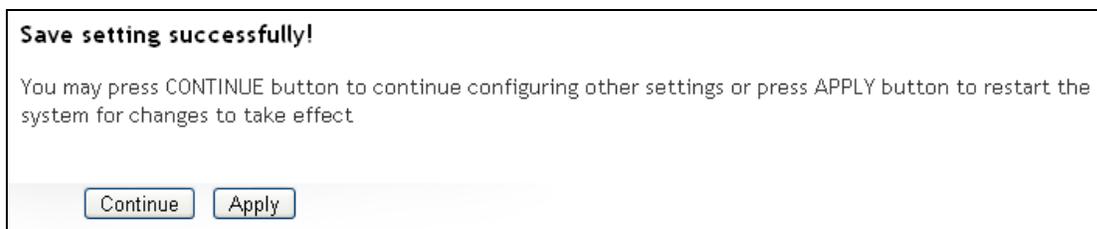

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.


3-2 System Utilities

This access point provides some control functions including password, IP address management, and DHCP server function. Click 'Advanced Settings' tab and then click 'System Utility' sub-tab beneath it in the web management interface to access these functions. Below are detailed descriptions of every control function.

3-2-1 Change Password


You can change the password used to enter the web configuration menu of this wireless access point.

Click 'System Utility' on the left, and the following message will be displayed:

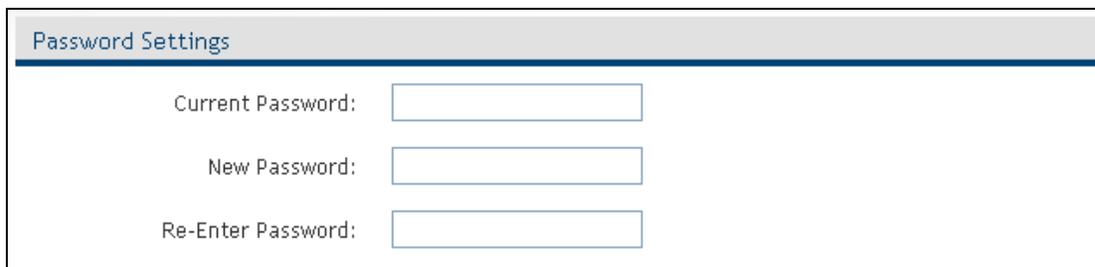

The screenshot shows a web form titled "Password Settings". It contains three input fields: "Current Password:", "New Password:", and "Re-Enter Password:". Each field is represented by a rectangular text box.

Input your current password in the 'Current Password' field, then input the new password in both the 'New Password' and the 'Re-Enter Password' fields. After you finish, go to the bottom of the page and click 'Apply', and the following message will be displayed:

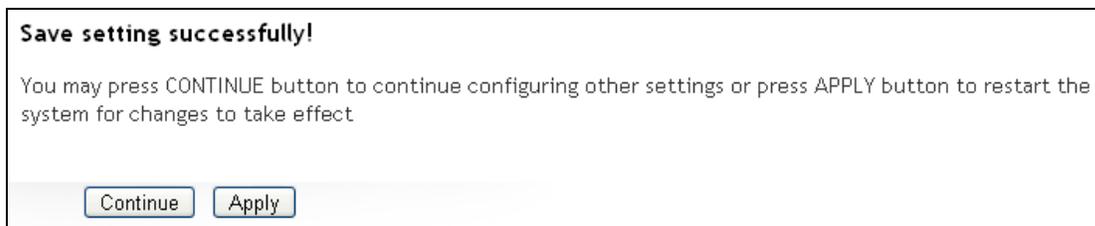

The screenshot shows a message box with the title "Save setting successfully!". The text inside reads: "You may press CONTINUE button to continue configuring other settings or press APPLY button to restart the system for changes to take effect". At the bottom of the message box, there are two buttons: "Continue" and "Apply".

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

3-2-2 IP Address of the Wireless Access Point

You can change the IP address of this wireless access point, so it can become a part of your local network. Please remember this address or you will not be able to connect to the configuration menu of this wireless access point.

Default IP address is: 192.168.1.241 / Subnet Mask 255.255.255.0, you can press and hold 'Reset' button over 10 seconds to change the IP address back to default value if you forget the IP address you set.


To change IP address, click 'System Utility' sub-tab, and the following message will be displayed:

Management IP	
IP Address:	<input type="text" value="192.168.1.240"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
Gateway Address:	<input type="text" value="0.0.0.0"/>
DHCP Server:	<input type="button" value="Disabled"/> ▼

Please input IP address and Subnet Mask in the corresponding fields, and you can input the IP address of your gateway in 'Gateway Address' field, if you need to manage this wireless access point from another network (like the Internet).

If you want to activate the DHCP server function of this wireless access point, please select 'Enabled' in 'DHCP Server' option, and see next Section for detailed instructions; if you don't want to use DHCP server function of this wireless access point, or there's another DHCP server on the network this access point connects to, please select 'Disable'.

After you finish, please go to the bottom of the page and click 'Apply', and the following message will be displayed:

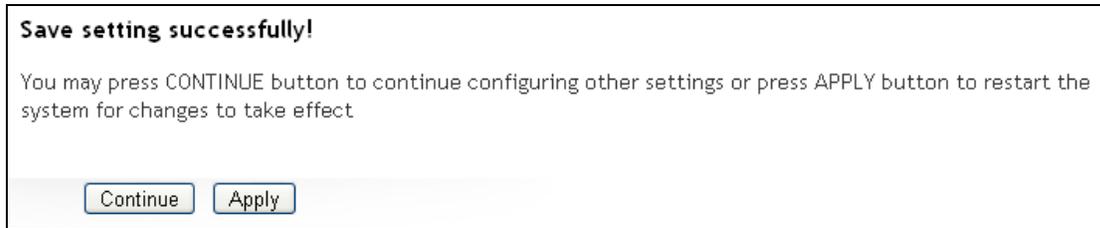

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

3-2-3 DHCP Server

This wireless access point is capable of acting as a DHCP server for your network, but it's disabled by default. If you want to activate this function, click 'System Utility' sub-tab and the following message will be displayed:

DHCP Server

Default Gateway IP:	<input style="width: 150px;" type="text" value="0.0.0.0"/>
Domain Name Server IP:	<input style="width: 150px;" type="text" value="0.0.0.0"/>
Start IP:	<input style="width: 150px;" type="text" value="192.168.2.100"/>
End IP:	<input style="width: 150px;" type="text" value="192.168.2.200"/>
Domain Name:	<input style="width: 150px;" type="text"/>
Lease Time:	<input style="width: 100px;" type="text" value="Forever"/> <input style="width: 20px;" type="button" value="v"/>


NOTE: Please remember to select 'Enable' in 'DHCP Server' option as described in last Section or all DHCP-related fields will be grayed out, and you will not be able to input any DHCP parameters.

Here are descriptions of every setup item:

Default Gateway IP	Please input the IP address of default gateway of your network here.
Domain Name Server IP	Please input the IP address of domain name server (DNS) here.
Start IP	Please input the start IP address of the IP range.
End IP	Please input the end IP address of the IP range.
Domain Name	If you wish, you can also optionally input the domain name for your network. This is optional.

Lease Time	Please choose a lease time (the duration that every computer can keep a specific IP address) of every IP address assigned by this access point from dropdown menu.
------------	--

After you finish, click 'Apply', and the following message will be displayed:

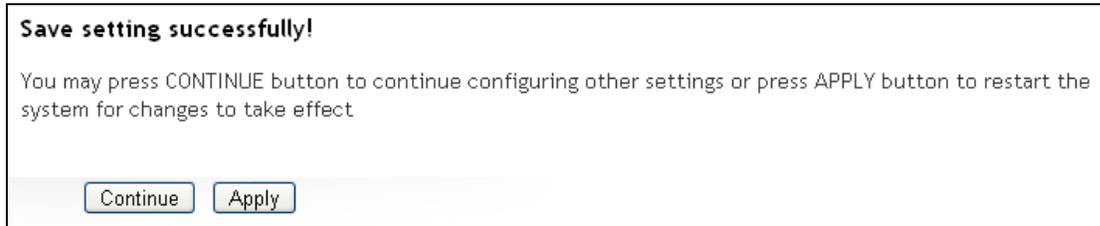

When you see this message, the settings you made are successfully saved. You can click the 'Continue' button to return to the previous page and change other settings, or click the 'Apply' button to restart the wireless access point. The changes will take effect after about 30 seconds.

Chapter IV: Advanced Configuration

4-1 Configuration Backup and Restore

You can backup all configurations of this access point to a file, so you can make several copies of access point configuration for security reasons.

To backup or restore access point configuration, please follow the following instructions:

Please click 'Configuration' tab in the web management interface, and the following message will be displayed on your web browser:

The screenshot shows a web management interface with a navigation bar at the top containing tabs for Status, Basic Settings, Security, Advanced Settings, Configuration, Upgrade, and Reset. The Configuration tab is selected. Below the navigation bar, the main content area is titled "Backup Tool". It contains a paragraph of text explaining the backup and restore process. Below the text, there are three rows of controls: "Backup Settings" with a "Save..." button; "Restore Settings" with a text input field, a "Browse..." button, and an "Upload" button; and "Restore to Factory Default" with a "Reset" button.

Here are descriptions of every button:


<i>Backup Settings</i>	<i>Press 'Save...' button, and you'll be prompted to download the configuration as a file, default filename is 'config.bin', you can save it as another filename for different versions, and keep it in a safe place.</i>
<i>Restore Settings</i>	<i>Press 'Browse...' to pick a previously-saved</i>

	<i>configuration file from your computer, and then click 'Upload' to transfer the configuration file to access point. After the configuration is uploaded, the access point's configuration will be replaced by the file you just uploaded.</i>
<i>Restore to Factory Default</i>	<i>Click this button to remove all settings you made, and restore the configuration of this access point back to factory default settings.</i>

4-2 Firmware Upgrade

If there is new firmware available for this wireless access point, you can upload the firmware to the access point to update the firmware. This may give extra functions or fix problems in your access point.

To perform firmware upgrade, click the 'Upgrade' tab on the top-right of web management interface, and the following message will be displayed:

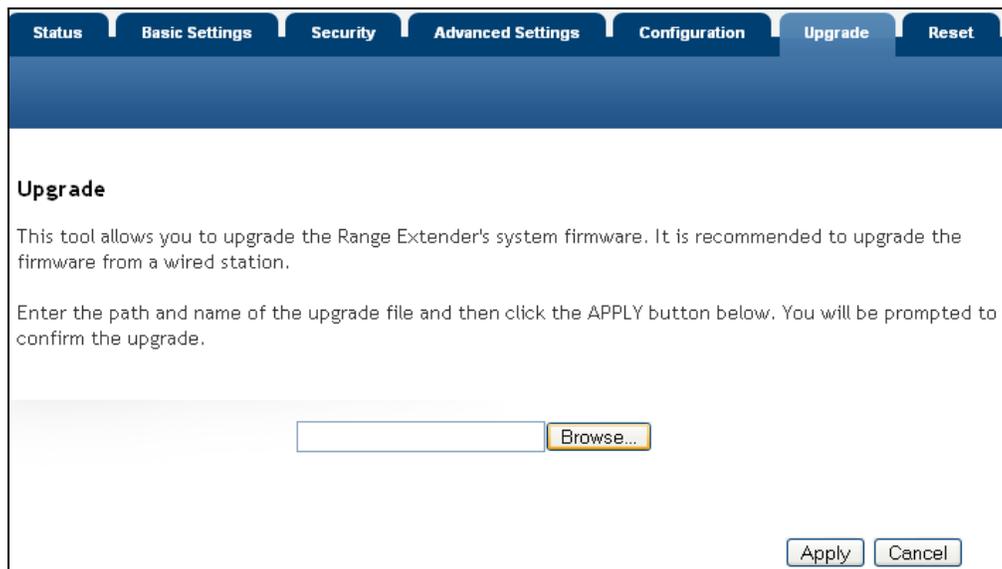

The screenshot shows a web management interface with a navigation bar at the top containing tabs for Status, Basic Settings, Security, Advanced Settings, Configuration, Upgrade, and Reset. The 'Upgrade' tab is selected. Below the navigation bar, the page title is 'Upgrade'. The main content area contains the following text: 'This tool allows you to upgrade the Range Extender's system firmware. It is recommended to upgrade the firmware from a wired station.' Below this, it says: 'Enter the path and name of the upgrade file and then click the APPLY button below. You will be prompted to confirm the upgrade.' There is a text input field followed by a 'Browse...' button. At the bottom right of the form, there are 'Apply' and 'Cancel' buttons.

Click the 'Browse' button, you will be prompted to provide the filename of the firmware upgrade file. Please download the latest firmware file from our website (<http://hawkingtech.com/>), and use it to upgrade your access point.

After a firmware upgrade file is selected, click 'Apply' button, and the access point will start the firmware upgrade procedure automatically. The procedure may take several minutes.


NOTE: Never interrupt the upgrade procedure by closing the web browser or physically disconnect your computer from access point. If the firmware you uploaded is corrupt, the firmware upgrade will fail, and you may have to return this access point to the dealer of purchase to ask for help. (Warranty is void if you interrupt the upgrade procedure).

4-3 System Reset


When you think the access point is not working properly, you can use this function to restart the access point; this may help and solve the problem.

This function is useful when the access point is far from you or unreachable. However, if the access point is not responding, you may have to switch it off by unplugging the power plug and plugging it back again after 10 seconds.

To reset your access point, please click 'Reset' tab in the web management interface, and the following message will be displayed:

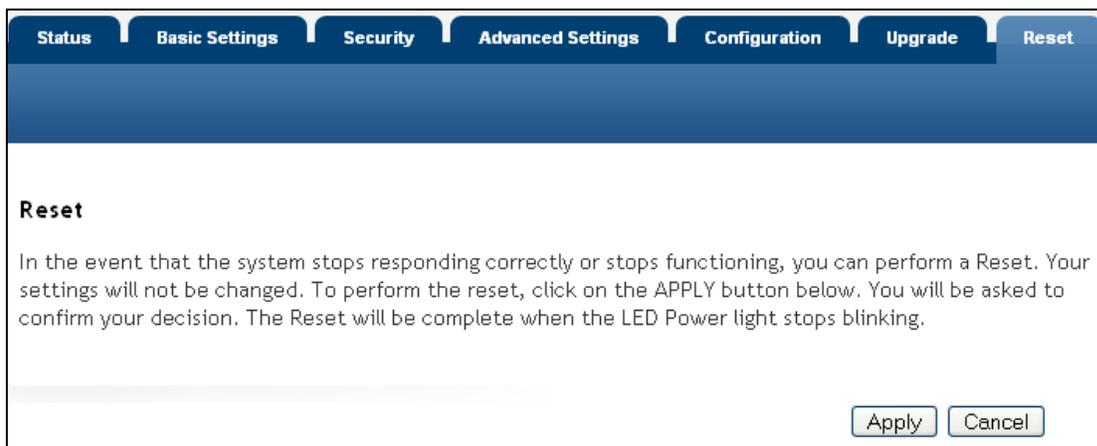

Please click 'Apply', and a popup message will ask you again, to make sure you want to reset the access point:

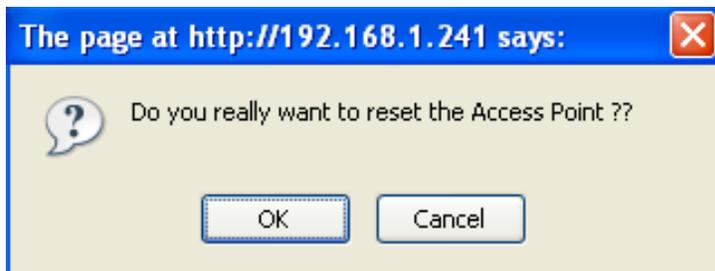

Click 'OK' to reset the access point, or click 'Cancel' to abort. Please remember all connections between wireless client and this access point will be disconnected.

Chapter V: Appendix

5-1 Hardware Specification

Flash: 4MB

SDRAM: 16MB

LAN Port: 10/100M UTP Port x 1

Antenna: 3dBi Detachable Dipole Antenna x 2 (2T2R Spatial Multiplexing MIMO configuration. These 2 antennas are for signal transmitting and receiving)

Power: 5VDC, 1A Switching Power Adapter

Dimension: 30(H) x 127(W) x 96(D) mm

Transmit Power: 11n:15dBm \pm 1dBm, 11g:15dBm \pm 1dBm, 11b:17 \pm 1dBm

Temperature: 32~104°F (0 ~ 40°C)

Humidity: 10-90% (Non-Condensing)

Certification: FCC, CE

5-2 Troubleshooting

If you found the access point is working improperly or stops responding to you, don't panic! Before you contact your dealer of purchase for help, please read this troubleshooting first.

Scenario	Solution
<p>Access point is not responding to me when I want to access it by web browser</p>	<ul style="list-style-type: none"> a. Please check the connection of power cord and network cable of this access point. All cords and cables should be correctly and firmly inserted to the access point. b. If all LEDs on this access point are out, please check the status of A/C power adapter, and make sure it's correctly powered. c. You must use the same IP address section which access point uses. d. Are you using MAC or IP address filter? Try to connect the access point by another computer and see if it works; if not, please perform a hard reset (pressing 'reset' button). e. Set your computer to obtain an IP address automatically (DHCP), and see if your computer can get an IP address. f. If you did a firmware upgrade and this happens, contact your dealer of purchase for help. g. If all above solutions don't work, contact the dealer of purchase for help.
<p>Can't get connected to wireless access point</p>	<ul style="list-style-type: none"> a. If encryption is enabled, please re-check WEP or WPA passphrase settings on your wireless client. b. Try to move closer to wireless access point. c. Unplug the power plug of access point, and

	<p>plug it back again after 10 seconds.</p> <p>d. If all LEDs on this access point are out, please check the status of A/C power adapter, and make sure it's correctly powered.</p>
I can't locate my access point by my wireless client	<p>a. 'Broadcast ESSID' set to off?</p> <p>b. Is the Antenna properly installed and secured?</p> <p>c. Are you too far from your access point? Try to get closer.</p> <p>d. Please remember that you have to input ESSID on your wireless client manually, if ESSID broadcast is disabled.</p>
File download is very slow or breaks frequently	<p>a. Try to reset the access point.</p> <p>b. Try to know what computers do on your local network. If someone's transferring big files, other computers will be negatively affected.</p> <p>c. Change the channel number and see if this works.</p>
I can't log onto web management interface: password is wrong	<p>a. Make sure you're connecting to the correct IP address of the access point!</p> <p>b. Password is case-sensitive. Make sure the 'Caps Lock' light is not illuminated.</p> <p>c. If you really forget the password, do a hard reset.</p>
Access point becomes hot	<p>a. This is not a malfunction, if you can keep your hand on the access point's case.</p> <p>b. If you smell something wrong or see the smoke coming out from access point or A/C power adapter, disconnect the access point and A/C power adapter from utility power (make sure it's safe before you're doing this!), and call your dealer of purchase for help.</p>

5-3 Glossary

Default Gateway (Access point): Every non-access point IP device needs to configure a default gateway's IP address. When the device sends out an IP packet, if the destination is not on the same network, the device has to send the packet to its default gateway, which will then send it out towards the destination.

DHCP: Dynamic Host Configuration Protocol. This protocol automatically gives every computer on your home network an IP address.

DNS Server IP Address: DNS stands for Domain Name System, which allows Internet servers to have a domain name (such as www.Broadbandaccesspoint.com) and one or more IP addresses (such as 192.34.45.8). A DNS server keeps a database of Internet servers and their respective domain names and IP addresses, so that when a domain name is requested (as in typing "Broadband access point.com" into your Internet browser), the user is sent to the proper IP address. The DNS server IP address used by the computers on your home network is the location of the DNS server your ISP has assigned to you.

DSL Modem: DSL stands for Digital Subscriber Line. A DSL modem uses your existing phone lines to transmit data at high speeds.

Ethernet: A standard for computer networks. Ethernet networks are connected by special cables and hubs, and move data around at up to 10/100 million bits per second (Mbps).

Idle Timeout: Idle Timeout is designed so that after there is no traffic to the Internet for a pre-configured amount of time, the connection will automatically be disconnected.

IP Address and Network (Subnet) Mask: IP stands for Internet Protocol. An IP address consists of a series of four numbers separated by periods that identifies a single, unique Internet computer host in an IP network. Example: 192.168.2.1. It consists of 2 portions: the IP network address, and the host

identifier.

The IP address is a 32-bit binary pattern, which can be represented as four cascaded decimal numbers separated by “.”: aaa.aaa.aaa.aaa, where each “aaa” can be anything from 000 to 255, or as four cascaded binary numbers separated by “.”: bbbbbbbb.bbbbbbbb.bbbbbbbb.bbbbbbbb, where each “b” can either be 0 or 1.

A network mask is also a 32-bit binary pattern, and consists of consecutive leading

1's followed by consecutive trailing 0's, such as

11111111.11111111.11111111.00000000. Therefore sometimes a network mask can also be described simply as “x” number of leading 1's.

When both are represented side by side in their binary forms, all bits in the IP address that correspond to 1's in the network mask become part of the IP network address, and the remaining bits correspond to the host ID.

For example, if the IP address for a device is, in its binary form,

11011001.10110000.10010000.00000111, and if its network mask is,
11111111.11111111.11110000.00000000

It means the device's network address is

11011001.10110000.10010000.00000000, and its host ID is,
00000000.00000000.00000000.00000111. This is a convenient and efficient method for access points to route IP packets to their destination.

ISP Gateway Address: (see ISP for definition). The ISP Gateway Address is an IP address for the Internet access point located at the ISP's office.

ISP: Internet Service Provider. An ISP is a business that provides connectivity to the Internet for individuals and other businesses or organizations.

LAN: Local Area Network. A LAN is a group of computers and devices connected together in a relatively small area (such as a house or an office). Your home network is considered a LAN.

MAC Address: MAC stands for Media Access Control. A MAC address is

the hardware address of a device connected to a network. The MAC address is a unique identifier for a device with an Ethernet interface. It is comprised of two parts: 3 bytes of data that corresponds to the Manufacturer ID (unique for each manufacturer), plus 3 bytes that are often used as the product's serial number.

NAT: Network Address Translation. This process allows all of the computers on your home network to use one IP address. Using the broadband access point's NAT capability, you can access the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.

Port: Network Clients (LAN PC) uses port numbers to distinguish one network application/protocol over another. Below is a list of common applications and protocol/port numbers:

Application	Protocol	Port Number
Telnet	TCP	23
FTP	TCP	21
SMTP	TCP	25
POP3	TCP	110
H.323	TCP	1720
SNMP	UCP	161
SNMP Trap	UDP	162
HTTP	TCP	80
PPTP	TCP	1723
PC Anywhere	TCP	5631
PC Anywhere	UDP	5632

PPPoE: Point-to-Point Protocol over Ethernet. Point-to-Point Protocol is a secure data transmission method originally created for dial-up connections; PPPoE is for Ethernet connections. PPPoE relies on two widely accepted

standards, Ethernet and the Point-to-Point Protocol. It is a communications protocol for transmitting information over Ethernet between different manufacturers

Protocol: A protocol is a set of rules for interaction agreed upon between multiple parties so that when they interface with each other based on such a protocol, the interpretation of their behavior is well defined and can be made objectively, without confusion or misunderstanding.

Access point: An access point is an intelligent network device that forwards packets between different networks based on network layer address information such as IP addresses.

Subnet Mask: A subnet mask, which may be a part of the TCP/IP information provided by your ISP, is a set of four numbers (e.g. 255.255.255.0) configured like an IP address. It is used to create IP address numbers used only within a particular network (as opposed to valid IP address numbers recognized by the Internet, which must be assigned by InterNIC).

TCP/IP, UDP: Transmission Control Protocol/Internet Protocol (TCP/IP) and Unreliable Datagram Protocol (UDP). TCP/IP is the standard protocol for data transmission over the Internet. Both TCP and UDP are transport layer protocol. TCP performs proper error detection and error recovery, and thus is reliable. UDP on the other hand is not reliable. They both run on top of the IP (Internet Protocol), a network layer protocol.

WAN: Wide Area Network. A network that connects computers located in geographically separate areas (e.g. different buildings, cities, countries). The Internet is a wide area network.

Web-based management Graphical User Interface (GUI): Many devices support a graphical user interface that is based on the web browser. This means the user can use the familiar Netscape or Microsoft Internet Explorer to Control/configure or monitor the device being managed.