

dge Access

Model 2346 T3 Fiber Optic Modem User Manual



This product may contain a laser diode emitter operating at a wavelength of 1300 nm - 1600 nm. Use of optical instruments (for example: collimating optics) with this product may increase eye hazard. Use of controls or adjustments or performing procedures other than those specified herein may result in hazardous radiation exposure.

Under normal conditions, the radiation levels emitted by this product are under the Class 1 limits in 21 CFR Chapter 1, Subchapter J.

ATTENCION!

Cet équipement peut avoir une diode laser émettant à des longueurs d'onde allant de 1300nm à 1600nm. L'utilisation d'instruments optiques (par exemple : un collimateur optique) avec cet équipement peut s'avèrer dangereuse pour les yeux. Procéder à des contrôles, des ajustements ou toute procédure autre que celles décrites ci-après peut provoquer une exposition dangereuse à des radiations.

Sous des conditions normales, le niveau des radiations émises par cet équipement est en dessous des limites prescrites dans CFR21, chapitre 1, sous chapitre J.



This device contains static sensitive components. It should be handled only with proper Electrostatic Discharge (ESD) grounding procedures.

NOTE!

Cet équipement contient des composants sensibles aux décharges électro-statiques. Il doit absolument être manipulé en respectant les règles de mise à la terre afin de prévenir de telles décharges.

NOTICE

Canoga Perkins has prepared this users manual for use by customers and Canoga Perkins personnel as a guide for the proper installation, operation and/or maintenance of Canoga Perkins equipment. The drawings, specifications and information contained in this document are the property of Canoga Perkins and any unauthorized use or disclosure of such drawings, specifications and information is prohibited.

Canoga Perkins reserves the right to change or update the contents of this manual and to change the specifications of its products at any time without prior notification. Every effort has been made to keep the information in this document current and accurate as of the date of publication or revision. However, no guarantee is given or implied that the document is error free or that it is accurate with regard to any specification.

CANOGA PERKINS CORPORATION

An Inductotherm Company

20600 Prairie Street
Chatsworth, California 91311-6008
Business Phone: (818) 718-6300
(Monday through Friday 7 a.m. - 5 p.m. Pacific Time)

FAX: (818) 718-6312 (24 hrs.)

Web Site: www.canoga.com Email: fiber@canoga.com

Copyright © 2003 - 2005 Canoga Perkins Corporation All Rights Reserved

EdgeAccess®
Universal Chassis System
2346 T3 Modem
Users Manual
Model Number 2346-UM
Part Number 6912680
Rev. E 01/2008

To reference Technical Advisories and Product Release Notes, go to Canoga Perkins' website: http://www.canoga.com/

Table of Contents

Chapter 1 Overview	1-1
Chapter 2 Hardware Installation and Functions	2-1
Set Up and Installation	
Power Up and Front Panel Functions	2-3
Alarm Functions	2-4
Chapter 3 Software Management	3-1
Setting Up for Network Management	3-1
Set Up the Network Management Platform	3-1
Set Up the PC for Terminal Operation	3-1
Management User Interface	3-2
General Screen Format	3-2
User Interface Organization	3-3
Login and Main Menu	3-3
Manage the 2346	3-4
View the Hardware Setup	3-4
Set the Date and Time	3-5
Set Up SNMP Access	3-5
Manage and Check Traps and Alarms	3-6
Set Up Baud Rates and Modem/SLIP/PPP Parameters	
Update Software	3-9
Manage Security	3-10
Set Up Host Access	3-10
Change Your Password	3-11
Manage the Modem	3-11
Set Up Functions and Check Status	3-11
Monitor Modem Performance	3-12
Chapter 4 Maintenance and Troubleshooting	4-1
General Maintenance	4-1
Manage Cable Links	4-1
Check Optical Power Levels	4-1
Troubleshooting	
Check a New Installation	4-3
Alarms	4-3
Problems With Configuration	
SW2 (Software Control) Setting Ignored	
Problems With Fiber Optics	
PING	
Loopback	4-5
Chapter 5 Specifications	5-1
2346 Specifications	

EdgeAccess[®] Universal Chassis System

2346 Models	5-2
Appendix A Warranty Information	A-1
Appendix B Acronym and Abbreviation List	
Index	
List of Figures	
Figure 1. The 2346 Front Panel	1-1
Figure 2. Switch and Jumper Locations	2-2
Figure 3. General Screen Format	3-2
Figure 4. Normal Operation	4-6
Figure 5. Local Loopback	4-6
Figure 6. Local Bidirectional Loopback	4-6
Figure 7. Local Loopback at Both Ends	4-6
Figure 8. Remote Loopback	4-7
Figure 9. Remote Bidirectional Loopback	4-7
List of Tables	
Table 1. 2346 LED Functions	2-3
Table 2. Main Menu Selections	3-4
Table 3. Hardware Configuration Report	3-5
Table 4. Trap Configuration Options	3-6
Table 5. Alarm Output Options	3-7
Table 6 System Alarms Definitions	1_3

Chapter 1 Overview

The 2346 Managed T3 Fiber Optic Modem converts and extends T3/DS3 signals between devices located up to 100 Km apart. Use the modem to extend a PBX, router, video codec, M13 multiplexer, or ATM switch. The 2346 receives and transmits 44.736 Mbps data on single mode or multimode fiber optic cable.

The 2346 front panel, shown in Figure 1, includes:

- Electrical and optical connectors
- Reset switch
- LEDs for:
 - System status
 - Configuration
 - Electrical signal
 - Optical signal



Figure 1. The 2346 Front Panel

The 2346 can be used in a variety of chassis. To install a 2346 in a UCS 1000 or UCS 1001 chassis, you must use a Model 1230 Bus Access Module (BAM); however, you can install a 2346 directly in a UCS 1002 or standalone enclosure.

- The UCS 1000 Chassis can hold up to 15 model 1230 BAMs with up to two 2346 modems per BAM. This allows a total of 30 2346 modems per UCS 1000.
- The UCS 1001 Chassis can hold up to two model 1230 BAMs with up to two 2346 modems per BAM. This allows a total of four 2346 modems per UCS 1001.
- The UCS 1002 Chassis directly hosts up to fourteen 2346 modems, or thirteen 2346 modems with the optional Domain Management Module (DMM) installed.
- Each standalone enclosure, such as a Model 1020 or 1030E, holds one 2346 modem.

The 2346 is hot swappable; you can insert or remove it at any time without disrupting the data transfer of other modules in the chassis.

EdgeAccess[®] Universal Chassis System

Chapter 2 Hardware Installation and Functions

Before setting up the 2346, make sure the chassis or enclosure is installed and its User Manual is available for reference. If the system includes an optional DMM and CIM(s), make sure these are available:

- Serial cable (required to connect to a VT100 type terminal or PC)
- VT100 type terminal or PC to run the User Interface Manager software
- The DMM and CIM manuals

Set Up and Installation

Unpack and inspect all components. Save the shipping carton and packing materials in case you need to return the equipment to the manufacturer. Appendix A provides information for Return Material Authorization (RMA).

- 1. Before inserting the 2346, check the front panel to verify that the 2346 provides the wavelength that matches its link partner; see Figure 1.
- 2. Set SW2-1 and 2-2; see Figure 2.
 - SW2-1, Line Buildout (LBO): Off (default) for Short LBO, <225 ft (68 m), or On for Long LBO, >225 ft; when software control is enabled at the Functional Configuration screen, SW2-1 is ignored.
 - SW2-2, Software override: Off (default) is software, On is hardware; set to Hardware in unmanaged environment, only. For installation in a managed environment where you plan to use software control (see page 3-11), set SW 2-2 to Off.

Note: If the 2346 was previously installed in a managed environment and set in the User Interface to software control, follow these steps to set it to hardware control when installing it in an unmanaged environment:

- a. Set SW2-2 to On.
- b. Insert the 2346 in a slot with the power on, then remove it.
- c. Set SW2-2 to Off.
- d. Insert the 2346 in a slot with the power on, then remove it.
- e. Set SW2-2 as needed.
- 3. Set jumper W10 as needed for normal (to NP) or wide pulse (to WP); see Figure 2. NP is the default.

EdgeAccess[®] Universal Chassis System

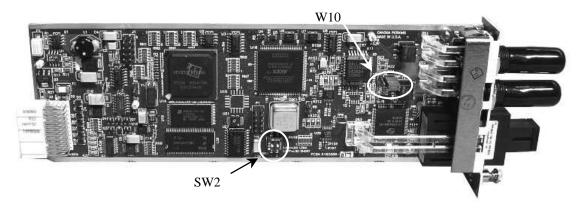


Figure 2. Switch and Jumper Locations

- 4. To install a 2346 in a UCS 1000 or 1001 chassis, you must use a Model 1230 BAM; each BAM can hold up to two 2346 modems. Follow these steps to install the BAM and the 2346:
 - a. Insert a BAM into an available slot in a UCS 1000 or 1001. Slide the BAM into the rails and push it firmly into the backplane, then tighten the captive screws. If you encounter resistance, check that no connector pins are bent.
 - b. Insert a 2346 into an unused slot in the BAM. Slide the 2346 into the rails and push it firmly into the backplane, then tighten the captive screw. If you encounter resistance, check that no connector pins are bent.
- 5. To install a 2346 directly in a UCS 1002 or standalone enclosure, insert the 2346 into an unused slot. Slide the 2346 into the rails and push it firmly into the backplane, then tighten the captive screw. If you encounter resistance, check that no connector pins are bent.

If you encounter more difficulty, contact Canoga Perkins at (818) 718-6300 for technical assistance.

Note: The BAM and 2346 are hot-swappable and can be inserted or removed without disrupting data transfer in other application modules.

6. If the 2346 is in a standalone enclosure, set the switch on the enclosure for loopback to Normal.

The 2346 uses electrical cables to connect to the local site and fiber optic cables to connect to the remote modem. Follow these steps to connect the electrical and optical cables:

7. To connect to the local site, plug the BNC cables from the local equipment into the Rx and Tx connectors using Tx to Rx, and Rx to Tx orientation.

Dirty optical connectors are a common source of link loss or attenuation problems, especially for single mode fiber (SMF). Clean the connectors before plugging in a cable and whenever there is a significant or unexplained light loss. To prevent contamination, always install protective dust covers on unused fiber optic connectors.

- 8. Wipe the ferrule and the end-face surface of the male fiber coupler with a lint-free isopropyl alcohol pad from a fiber cleaning kit.
- 9. Use canned air to blow out any dust from the female fiber coupler.

Caution: To avoid damaging the fiber end-surface or connector, use extreme care when installing or removing cables.

- 10. Plug in the optical cables:
 - If you have a simplex optical connector, use a single strand, single mode fiber cable between a pair of 2346 modems, one at 1310 nm wavelength and the other at 1550 nm wavelength.
 - If you have a duplex connector, use Tx to Rx, and Rx to Tx orientation.
- 11. Label each cable and connector with a signal name and direction.
- 12. For cable connections to other modules in the chassis, see the appropriate user manual for details.
- 13. Measure and record fiber link attenuation and transmission power before starting normal link traffic in order to identify potential problems with links near the lower limit of receiver limitations. For details on link attenuation and transmission power, see Chapter 4.

Power Up and Front Panel Functions

During the initial power-up sequence, all LEDs light amber. When start-up is complete and data is transmitting normally across the link, the STA LED lights green and the CFG/TST, LOS, and CLS LEDs are off. During normal operation, the LED colors change according to system and port conditions. The STA and CFG/TST LEDs show the module condition. The LOS and CLS LEDs show the electrical and optical signal conditions. Table 3 shows the LED states for various conditions.

Table 1. 2346 LED Functions

LED	Status	Description	
STA	Off	No power	
	Green	Normal operation	
	Amber	System self-test	
	Amber blinking	Downloading file or in power-up cycle	
	Red	Failed system self-test	
CFG/TST	Off	Normal operation	
	Red	Software or line coding mismatch between local and remote modems or improperly connected fiber optic cable	
	Amber	Local or local bidirectional loopback	
	Amber blinking	Remote or remote bidirectional loopback	
LOS	Off	Normal operation	
	Red	Local loss of electrical signal	
	Red blinking	Remote loss of electrical signal	
CLS	Off	Normal operation	
	Red	Local loss of optical sync	
	Red blinking	Remote loss of optical sync	

Alarm Functions

The 2346 can generate Major and Minor Alarms.

- UCS 1000 and 1001: a BAM is required and holds up to two 2346 modems. On the BAM, the Status (STA) LED lights green if either 2346 is operating normally. If both modems have errors, the BAM STA LED lights amber.
- UCS 1001: the alarm outputs are forwarded to the chassis motherboard.
- UCS 1000 and 1002: the alarms are forwarded over the backplane to the CIM and appear on the Major (MAJ) and Minor (MIN) CIM LEDs and then are forwarded to the DMM for monitoring and transfer to the Network Manager as traps.
- Model 1020 enclosure: the alarm information is forwarded to the management session.
- Model 1030 enclosure: alarms are not supported.

For details about setting up the Alarms, see Chapter 3; for viewing the Alarm Log, see Chapter 4.

Chapter 3 Software Management

You can manage the 2346 through VT100 Terminal Emulation, which is accessible by a Telnet session, HyperTerminal or similar terminal emulation software, a standard SNMP network manager, and CanogaView. If the 2346 is in UCS 1000 or 1002 with a CIM within a domain that includes a DMM, you can access the 2346 through the DMM. If the 2346 is a standalone or in a UCS 1001, you must access the 2346 directly through the serial port for the enclosure or BAM.

Setting Up for Network Management

Typically, the 2346 runs within the network on an Ethernet connection, communicating with your Network Management Platform.

Set Up the Network Management Platform

You must run several Management Information Bases (MIBs) on your Network Management Platform in order to successfully manage this module. Before you start, check that Standard MIB (the industry-standard mib) is loaded. In addition, download Cp.mib, a private mib that supports all Canoga Perkins products, available from the Canoga Perkins web site. Go to www.Canoga.com, click Support, then click Software Download, and follow the prompts on screen.

Set Up the PC for Terminal Operation

Connect the VT100 terminal emulation session to the DMM or directly to a 2346, either standalone or in a UCS chassis. Setting up the VT100 session depends on which connection, serial port or Ethernet, you have available for access to the VT100 management program. Canoga Perkins suggests that you use HyperTerminal for your first session.

You must set up TCP/IP for the DMM or directly-managed 2346 before you can use Telnet; for details, see the manual for the DMM or go to page 3-7.

Note: For details on the DMM, see the Model 1500 Domain Management Module User Manual (for UCS 1000) or the Model 1502 Domain Management Module User Manual (for UCS 1002).

These steps briefly describe how to set up your PC for a terminal connection. For details on using Windows, see your Windows documentation.

- 1. Turn on your PC.
- 2. Accessories, the HyperTerminal Folder, and click HyperTerminal.
- 3. At the Connection Description dialog, select an icon, enter a name for the connection to the system, and click OK.
- 4. At the Connect To dialog, pull down the Connect using menu, select the COM port, and click OK.

5. At the COM Properties dialog, on the Port Settings tab, check for these selections:

• Bits per second: 19200 bps

Data bits: 8Parity: NoneStop bits: 1

Flow control: None

6. `Click OK. HyperTerminal connects to the system and the VT100 terminal emulation starts.

Management User Interface

The Management User Interface for the 2346 provides screens for setup, monitoring, and diagnostics. These sections discuss the screens for the 2346, using a Telnet session for access. If you connect through the DMM in the chassis, see the User Manual for your DMM for details about the DMM screens.

General Screen Format

A typical screen, shown in Figure 3, includes standard descriptions and reference designations. Use this and other screens to configure the system, set operational parameters, and verify the system status. All screens use a common method for navigation.

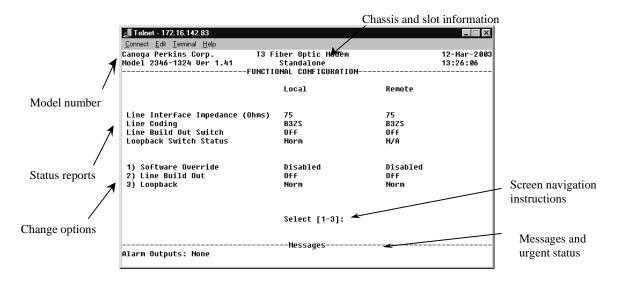


Figure 3. General Screen Format

Not all screens and menus provide options that you can change. Some menu items reach screens that only report status, such as revision numbers, module type, or alarms. On other screens, you can move through and select options, and enter data.

Use these keys to navigate the screens:

- Space bar When a menu item is highlighted, press <Space> to cycle through all options for that item.
- Tab Press <Tab> to move the highlight to the next column to the right.
- Enter Press <Enter> to select the highlighted option for a menu item.
- Escape Press <Esc> once to cancel changes for the selected item or to return to the previous screen; press <Esc> two or more times to return to the Main Menu from two or more menu levels deep.

User Interface Organization

The user interface consists of selectable, nested screens, available in this order:

Main Menu

- 1. System Configuration
 - 1. Hardware Configuration
 - 2. Functional Configuration
 - 3. Trap Configuration
 - 4. Alarm Output Configuration
 - 5. SNMP Configuration Parameters
 - 8. Host Table
- 2. Link Error Counters
- 3. System Alarms
- 4. Utilities
 - 8. PING Generation
- 5. Software Upgrade

Login and Main Menu

The first screen is the Login Menu. If this is your initial setup and no password has been set, press <Enter> at the prompt for the password. Otherwise, type your password and press <Enter>.

After you log in, the Main Menu for the DMM appears. This is the main management screen for the DMM. For details on all menu options, see the manual for your DMM. From this screen, you can access the 2346 by either of two methods.

- To reach the 2346 directly, follow these steps:
 - a. Type 4, "Manage or access a specific Module," and press <Enter>.
 - b. Type the slot and chassis numbers with a slash, such as "1/4" for chassis 1, slot 4, and then press <Enter>.
 - c. At the Module Menu, type 4, "Access User Interface," then press <Enter> to reach the Main Menu screen for the 2346.
- To reach the chassis, and then select the 2346, follow these steps:
 - a. Type 3, "Manage or access a specific Chassis," and press <Enter>, press <Space> to cycle through the chassis in the domain, and then press <Enter> to select the chassis.
 - b. At the Chassis Management screen, press <Space> to cycle to the slot number for the 2346, then press <Enter> to reach the Main Menu screen for the 2346.

Note: In a UCS 1000 chassis, the slots in the BAM appear as A and B for the slot that the BAM is in

You can reach all configuration options from the Main Menu; see Table 2.

Table 2. Main Menu Selections

Menu Item	Description
1. System Configuration	View and set values for the system information and communications parameters
2. Link Error Counters	View number of errors that occur on the link
3. System Alarms	View current conditions for local and remote alarms
4. Utilities	View and set values for general parameters and run the diagnostic PING
5. Software Update	Download and install new firmware

Manage the 2346

You can manage the hardware and software for the module, including communication access.

View the Hardware Setup

To check information about both the local and remote 2346s, including the hardware setup, with model and serial numbers, and basic system status, go to the Hardware Configuration report. See Table 3. To view the Hardware Configuration screen, follow these steps:

- 1. At the Main Menu, type 1, "System Configuration," and press <Enter>.
- 2. At the System Configuration menu, type 1, "Hardware Configuration," and press <Enter>. The Hardware Configuration screen appears.
- 3. To return to the Main Menu, press <Esc>.

Table 3. Hardware Configuration Report

Item	Shows
Chassis/Slot, Type, Temperature	Where the modem is installed and status, if available
Modem Model, Type, Revision, Serial No.	Data for the modem and optical interface
Power Supply Pri, Sec	Type(s) and status for the power supply(s)
Fan Installed	Status if a fan is installed

Set the Date and Time

An accurate date and time in the assures accuracy for traps and alarms sent to the system administrator, as well as for all listed events. If the 2346 is in a system with a DMM, the date and time for the DMM overrides any date and time set in the 2346.

To set the date and time, follow these steps:

- 1. At the Main Menu, type 4, "Utilities," and press <Enter>; the Utilities menu appears.
- 2. At the Utilities menu, type 1, "Set Date and Time," and press <Enter>, then at the prompt to enter the current date and time, type the current information in DD/MM/YYYY HH: MM format.
- 3. To return to the Main Menu, press <Esc>.

Set Up SNMP Access

SNMP access is available for a modem in a standalone enclosure, only. To set values for basic system parameters, including some SNMP parameters, go to the SNMP Configuration Parameters menu. To access the SNMP Configuration Parameters menu, follow these steps:

- 1. At the System Configuration menu, type 5, "SNMP Configuration," and press <Enter>. The SNMP Configuration Parameters screen appears.
- 2. At the prompt, type the number for an item and follow the prompts on the screen to set values for these items:
 - System Contact: Who is responsible for the 2346, up to 50 characters
 - System Name: What you call the 2346, up to 50 characters
 - System Location: Where the 2346 is located, up to 50 characters
 - Read Community: Name for the people who can view the reports, up to 10 characters; default is public
 - Write Community: Name for the people who can set values for parameters, up to 10 characters; default is public
 - SLIP/PPP IP Address: Enter the IP address for access through SLIP or PPP
 - Ethernet IP Address: Enter the IP address for access through the Ethernet network
 - Ethernet Subnet Mask: Enter the mask that sets the network ID part of the IP address
 - Ethernet Default Gateway: Enter the address of the network node that connects to another network

- BOOTP Enabled: Enable this if the module needs to obtain its IP address from a BOOTP server; when the unit has an IP address, disable BOOTP
- Serial Port Config: Set the type of serial port connection: VT100, SLIP, or PPP
- Telnet Timeout: Set the time with no activity until a Telnet connection automatically logs out
- 3. To return to the System Configuration menu, press <Esc>.

Manage and Check Traps and Alarms

Traps are messages that require management attention and are routed to the Network Manager, but do not trigger alarms. Conditions that generate an alarm require immediate attention. Enable or disable traps on the Trap Configuration screen and enable or disable alarms on the Alarm Output Configuration screen.

Use the Trap Configuration screen to view the current configuration and to enable or disable traps for the 2346. For a list of events that trigger traps, see Table 4. To set up the traps, follow these steps:

- 1. At the System Configuration menu, type 3, "Trap Configuration," and press <Enter>.
- 2. At the Trap Configuration screen, type the number for a trap and press <Enter>. See Table 4.
- 3. Press <Space> to cycle to Enabled or Disabled and press <Enter>.
- 4. To return to the Main Menu, press <Esc>.

These selections do not affect how the Major and Minor LEDs on the CIM report alarms.

Table 4. Trap Configuration Options

Type of Trap	When enabled, sends a Trap if	
2) LOS/CLS	Loss of Signal (electrical)/Composite Loss of Signal (optical); one or both received signals fail	
3) SQL	Squelch occurs (for received signal)	
4) Configuration	The 2346 is set up incorrectly, including mismatches with other modems	
5) Diagnostic	Loopback is enabled or disabled	
6) Authentication	An unauthorized host attempts SNMP access to the 2346	
7) Power/Fan Malfunction	Power is low or fan is off	
8) Cold Start	The 2346 is reset by a power failure or forced reset	
9) Alarm Input	UCS 1001 function; see the UCS 1001 User Manual	
10) Security Violation	Not used	

Use the Alarm Output Configuration screen to view the current configuration and to enable or disable alarms for the 2346. For a list of events that trigger alarms, see Table 4. To set up the alarms, follow these steps:

1. At the System Configuration menu, type 4, "Alarm Output Configuration," and press <Enter>.

- 2. At the Alarm Output Configuration screen, type the number for an alarm and press <Enter>. See Table 5.
- 3. Press <Space> to cycle to Enabled or Disabled and press <Enter>.
- 4. To return to the Main Menu, press <Esc>.

These selections do not affect how the CIM Major and Minor LEDs report alarms.

Table 5. Alarm Output Options

Alarm	When enabled, sends an alarm if
2) LOS/CLS	Loss of Signal (electrical)/Composite Loss of Signal (optical); one or both received signals fail; default is Off
3) SQL	Squelch occurs (for received signal); default is Off
4) Configuration	The 2346 is set up incorrectly or the local and remote software versions do not match; default is Off
5) Power/Fan	Power is low or fan is off; default is Minor
6) Power-On Self Test	Modem failed when power was turned on; default is Major
7) BERT	Bit Error Rate Test (BERT) detects data errors; for details on BERT results, see page 3-12; default is Off

Note: The Bit Error Rate Test (BERT) sends a continuous 127-bit sequence within the optical data stream to check for bit errors while the optical signal remains in sync.

Set Up Baud Rates and Modem/SLIP/PPP Parameters

Although the default values for the communication parameters meet requirements for most systems, you may need to change them for your particular situation.

To reset the VT100 baud rate, follow these steps:

- 1. At the Main Menu, type 4, "Utilities," and press <Enter>.
- 2. At the Utilities menu, type 3, "VT100 Baud Rate," and press <Enter>, then press <Space> to cycle between 9600 and 19200 bps.
- 3. To return to the Main Menu, press <Esc>.

To access the Modem/SLIP/PPP Configuration menu, follow these steps:

- 1. At the Main menu, type 4, "Utilities," and press <Enter>.
- 2. At the Utilities menu, type 4, "Modem/SLIP/PPP Configuration," and press <Enter>.
- 3. To select the baud rate for the serial port, type 4, "Modem/SLIP/PPP Configuration," and press <Enter>, then press <Space> to cycle through the baud rate options; options include 9600, 19200, 38400, 57600, or 115200 bps.

4. To enter a new Modem Initialization String, type 5, type the new string, and press <Enter>; the default string is "AT".

Note: For details on a different initialization string, see the documentation for your modem.

5. To return to the Main Menu, press <Esc>.

Because the DMM defaults to VT100 mode when booting, you cannot see the screens and commands used to switch to SLIP or PPP mode when you exit VT100 mode. Use a script file to successfully exit VT100 mode and switch to SLIP or PPP.

1. To create a script on your PC, open Notepad and type the steps you would follow to enter SLIP or PPP mode. On the last line, press <Space> once to select SLIP mode or twice for PPP mode

proc main

```
waitfor "Password :"
  transmit $PASSWORD, raw
transmit "^M"

transmit "1^M"
transmit "5^M"
transmit "11^M"
transmit "11^M"
```

endproc

- 2. Save the Notepad document with a .SCP file extension in the folder where the Dialup Connection application looks for scripts. The script will be available in the Dialup script menu. This file is typically in the Windows\System32\ras\ folder.
- 3. To run the script, reach the Phonebook Entry dropdown menu and select either the PPP or the SLIP script.

If you do not have a script file, you dial in through a modem, and the networking option is set to VT100 operation, you will not see the screens, but the 2346 responds to the commands normally. Follow these steps:

- 1. Dial in through a modem, then type your user name and password and press <Enter>.
- 2. Type 1 and press <Enter>.
- 3. Type 5 and press <Enter>.
- 4. Type 11 and press <Enter>.
- 5. Press <Space> once for SLIP mode or twice for PPP mode, then press <Enter> to confirm the port choice.

The 2346 is ready to run TCP/IP applications.

Update Software

Each module in the Universal Chassis System has two flash memory banks that store software:

- The Active Flash Memory holds the software currently in use
- The Inactive Flash Memory holds the new software from a download or the older version of software

Software is downloaded to the inactive region to avoid disrupting service. Resetting the module and swapping banks does not affect module operation and is transparent to user traffic.

Use the Software Upgrade report and menu screen to check the current version of the 2346 firmware and to upgrade software for any module in the domain or a managed module partner, if necessary.

To access the Software Upgrade screen, follow these steps:

- 1. At the Main Menu, type 5, "Software Upgrade," and press <Enter>.
- 2. At the Software Upgrade screen, record the numbers for the Active and Inactive Firmware.
- 3. Access the Canoga Perkins Web site, click Downloads, scroll to the 2346 filename, and compare the version number listed there with the version numbers you recorded. The 2346 firmware file name is similar to 23460106.zip, where "2346" indicates the module and "0106" indicates the version.

Caution: To insure compatibility when a system includes two or more of the same module, you must upgrade all those modules with the same software.

If the firmware for the 2346 is outdated, Canoga Perkins recommends that you upgrade it.

- 4. You can download the software through the DMM (for details, see the manual for your DMM) or, if the 2346 is in a UCS 1001 or a standalone enclosure, follow these steps to start the software upgrade:
 - a. Go to the Host Access Table (see page 3-10) and verify that the entry for the host you will use for the file transfer allows FTP or SFTP access, depending on the method you plan to use.
 - b. Log in to the FTP or SFTP server from the account that allows access.

Note: You can run only one FTP or SFTP session at a time.

- c. Download the new firmware from the Canoga Perkins web site to your TFTP server; put the firmware in the "/BURNING" directory. For FTP, enable binary transfer mode. When the transfer is complete, the file is moved automatically to the "/INACTIVE" directory.
- d. At the Main Menu, type 5, "Upgrade Software," and press <Enter>.
- e. At the Software Upgrade menu, type 4, "Get New File with TFTP," and press <Enter>.
- f. Follow the prompts on the screen to enter the IP address for the TFTP server and the file name for the new firmware, then start the upgrade.

- 5. When the file transfer is complete:
 - a. At the Software Upgrade menu, type 2, "Swap Bank," and press <Enter>.
 - b. Type 1, "Software Reset," and press <Enter>. The 2346 resets and starts using the new firmware.
- 6. To update a remote partner, type 3, "Copy Software from Source modem to Destination modem," and press <Enter>. The 2346 writes the software to the remote partner, which then resets and starts using the new firmware.

Manage Security

To provide system security, the 2346 includes username and password access, as well as SNMP with Read and write communities and a Host table. To set up values for various security parameters on your 2346, you must typically have supervisor access.

Set Up Host Access

The SNMP agent allows access to up to 24 Host IP addresses listed in the Host Access Table. Set up the Host information for access to the 2346 on the Host Access Table screen. When a host attempts to access the 2346, the IP address is authenticated against the entries on the host table. If a user attempts SNMP access from a host or network that is not listed in this table, the 2346 rejects that host and generates an authentication trap. To access the Host Table, follow these steps:

- 1. At the SNMP Configuration Parameters menu, type 13, "Host Access Table," and press <Enter>. The Host Table screen appears.
- 2. To add a host, type 1 and press <Enter>, then follow the prompts to enter values for these parameters:
 - a. IP Address: for the Host
 - b. Access Level: Read, Read/Write Read/Trap, or Read/Write/Trap
 - c. Trap Community: the community name for requests from the host or network
- 3. To delete a host, type 2 and press <Enter>, then at the prompt, type the IP Address for that Host and press <Enter>. The host table appears again with your changes.
- 4. To return to the SNMP Configuration Parameters menu, press <Esc>.

Change Your Password

You can update your password for the 2346 in order to maintain security. You cannot change the password for any other users, especially those who are not logged in. To update your password, follow these steps:

- 1. From the Utilities menu, type 2, "Change Password," and press <Enter>.
- 2. To change your password, follow the prompts on the screen.
- 3. To return to the Main Menu, press <Esc>.

Manage the Modem

After you set up modem functions, you can monitor those functions and the data transmission.

Set Up Functions and Check Status

You can set up the modem functions and check status on the Functional Configuration screen. To work with modem functions, follow these steps:

- 1. At the System Configuration menu, type 2, "Functional Configuration," and press <Enter>.
- 2. To set a value for a parameter, type a number and press <Enter>, then follow the prompts on screen. To move to the next column, for a secondary or remote modem, press <Tab>.
 - Software Override: Set to software, following this menu, or hardware, following SW2 for LBO and software/hardware control (see page 2-1)
 - Line Build Out: Set to Off, Short LBO <225 ft (68 m); or On, Long LBO, >225 ft
 - Loopback: Set to Norm for normal operation; for details on Loopback and troubleshooting, see page 4-5
- 3. To return to the Main Menu, press <Esc>.

To ensure that both the local and remote modems use compatible configuration options, you can copy the configuration for the local modem to the remote modem; follow these steps:

- 1. At the Main menu, type 4, "Utilities," and press <Enter>.
- 2. At the Utilities menu, type 7, "Copy Configuration," and press <Enter>, then follow the prompts on screen to confirm.
- 3. To return to the Main Menu, press <Esc>.

Monitor Modem Performance

You can monitor the performance of both the local and remote modems at the Link Errors report. The report includes timers and checks for signal errors. In addition, the 2346 uses the Bit Error Rate Test (BERT), which sends a continuous 127-bit sequence within the optical data stream to check for bit errors while the optical signal remains in sync. The link Errors screen monitors these conditions:

- Timer: Number of days, hours, minutes, and seconds since the last reset
- Composite LOS Errors (CLS): Number of optical loss of signal errors
- Electrical LOS Errors: Number of electrical loss of signal errors
- Errored Seconds (BPVs): Number of seconds with at least one BiPolar Violation (BPV)
- SQL Rx Errors: Number of received squelch occurrences
- BERT Sync Status: Reports loss if CLS occurs or OK if signal is good
- BERT Sync Count: Number of good to faulty patterns
- BERT Bit Errors: Number of bits with errors in the received pattern
- BERT BER (1E-9): Number of bit errors during this BERT up time
- BERT Up Time: How long BERT is available and running

To view the modem performance, follow these steps:

- 1. At the Main Menu, type 4, "Link Error Counters," and press <Enter>.
- 2. At the Link Error Counters screen, press <Tab> to reset all counters, press <Tab>.
- 3. To return to the Main Menu, press <Esc>.

Chapter 4 Maintenance and Troubleshooting

Well-maintained modules and cabling can help ensure trouble-free operation.

General Maintenance

Well-maintained components and clearly identified cables help assure optimum system operation. Damaged fiber cables and dirty connectors are a common source of signal loss or attenuation. Single mode and multimode fiber optics are especially sensitive to contamination. Inspect, clean, and test all components to maintain optimum performance.

Note: To avoid damage and signal loss, do not over-tighten or force-fit optical connectors.

- To clean the ferrules and end-face surfaces of male fiber couplings, use a lint-free pad saturated with isopropyl alcohol.
- To clean the female fiber connectors, use canned air.
- To prevent damage and contamination, place protective dust caps on all unused optical connectors.

Manage Cable Links

Manage the cables to ensure trouble-free operation and maintenance tasks.

 Position and secure the fiber optic cables to prevent excessive bends and damage. Follow the guidelines for the bend radius for specific fiber cables.

Note: If no minimum bend radius is specified, the typical long-term, low-stress radius is not less than 15 times the cable diameter (based on Federal Standard FS-1037C).

- Always connect the fiber optic cables in the standard Tx to Rx and Rx to Tx scheme; reversing this can cause transmission conflicts.
- Label each fiber cable near each end with the signal direction, source, and destination to minimize connection errors.

Check Optical Power Levels

To ensure the proper performance levels, measure the fiber link loss, or link attenuation, for all fiber links. Each 2346 is shipped with a document that lists the output power for each laser transmitter. To determine link attenuation, use either the 2346 Tx source or a hand-held 1310/1550 nm laser source, a fiber optic test jumper cable (with known loss), and an optical power meter.

Measure optical fiber links at the shortest wavelength of operation to determine the limiting factor in the loss budget. Each device that transmits to a 2346 has a loss budget that is specified by the manufacturer and recorded on a data sheet provided with the equipment. That loss budget must be greater than the total of the measured loss of the fiber link and the attenuation of the 2346.

Note: For accurate results, warm up each unit for at least 30 minutes before checking power levels.

The transmission laser in a 2346 turns on automatically when the chassis receives power.

To measure the output power, follow these steps:

- 1. Clean the connectors on the fiber optic test cable before plugging it in to the Tx connector on the 2346.
- 2. Warm up each component for at least 30 minutes.
- 3. Set the optical power meter to the proper wavelength.
- 4. Wait two or three minutes for the power reading to stabilize, and then read the output power.
- 5. Subtract out the test cable loss, then record the power level and compare it to the value on the performance sheet for that particular 2346. Measurement tolerance is +/- 0.5 dBm.

Note: When referencing optical power levels with numerical values less than zero, the reading closer to zero is the greater value; for example, -17 dBm is greater than -20 dBm.

6. If the reading is incorrect, repeat the measurement with a different test cable. If the power level is still not within range, call Technical Support.

If you know the link attenuation, subtract that value from the 2346 Tx output value to determine the power expected at the remote cable end, which is the input power at the remote receiver, and skip this section. Otherwise, continue these steps to use the 2346 to measure the link attenuation.

- 7. At the local site, connect the fiber link cable to Tx on the 2346.
- 8. At the remote site, set the optical power meter to the proper wavelength and connect it to the fiber link cable.
- 9. Record the optical power level and compare it with the sensitivity level listed on the data sheet for the link fiber type.
- 10. Subtract the remote power level from the value for the transmitter output power at the local site. The result provides the link loss, in dB. This power level must not exceed the limit for Rx sensitivity listed on the data sheet for the remote unit.

Note: If you cannot determine the Rx sensitivity, contact Canoga Perkins Technical Support Department for assistance.

11. Repeat this process at the other site.

Troubleshooting

This section describes fault conditions and corrective action. As a rule, whenever there is a significant signal loss, check the fiber path and the minimum bend radius for potential problems. Remove and inspect the cable connectors, being careful not to damage the fiber end-face surface or the connector housing. Clean all optical connectors before reinstalling them.

The front panel LEDs show both normal and fault conditions. Typically, if a LED is steady red, the fault is in the local 2346; if it blinks red, the fault is in the remote modem. Additional information about fault conditions appears in the System Alarms and System Configuration screens. To aid troubleshooting, Table 1 lists the functions of the front panel LEDs. For details on the LED status during normal start-up and operation, see Chapter 2.

Additional information about fault conditions appears in the System Alarms, Hardware Configuration, and Functional Configuration screens.

Check a New Installation

On new installations, make sure that all steps in Chapter 2 are complete, then make these checks:

- The STA LED is green
- The fiber type (multimode or single mode) matches the 2346 optical mode
 - All fiber cabling is of the same type; do not mix multimode and single mode cables
 - The fiber optic cable is within the specifications and loss budget of the optic interface module
 - The line length between the 2346 and the remote link does not exceed the allowable loss budget or overdrive limit
 - All host modules in the link are turned on
 - All fiber cables are connected Tx to Rx and Rx to Tx

Alarms

The System Alarms screen reports alarms and faults on the 2346. To view current alarm status, follow these steps:

- 1. From the Main Menu, type 3, Alarms, and press <Enter>. The System Alarms report appears.
- 2. To return to the Main Menu, press <Esc>.

Table 6. System Alarms Definitions

Item	Reports
Configuration Errors	If the local and remote modems have incompatible set ups, including software version
Fiber/Electrical Loss of Signal	If optical or electrical loss of signal occurs
SQL Rx	If squelch occurs
Chassis Management	OK if 2346 is in managed chassis or N/A if in standalone
Alarm Relay Inputs	Loss if CLS occurs or OK if signal is good; UCS 1001, only
Power Supply Primary/Secondary	Function of main/second power supply
Chassis Temperature	Excessive temperature
Fan	Failure
Power-On Self Test	OK or faulty hardware or software

Problems With Configuration

If a configuration error appears and you have difficulty isolating the fault, you can reset all configurable settings to default except for the time and date, password, BOOTP setting, and Telnet timeout. You can then restart your configuration process. To update reset to default, follow these steps:

- 1. At the Main menu, type 4, "Utilities," and press <Enter>.`
- 2. At the Utilities menu, type 6, "Reset Configuration To Default," press <Enter>, and then follow the prompts on the screen.
- 3. To return to the Main Menu, press <Esc>.

SW2 (Software Control) Setting Ignored

If the 2346 was installed in a UCS 1000 or 1002 and set in the User Interface to software control, it ignores the line buildout switch setting when placed in a UCS 1001 or Model 1030. For details on setting the 2346 to hardware control before installing, see Chapter 2.

Problems With Fiber Optics

If the CLS LED lights Red or the System Alarms screen shows a Fiber Loss of Signal, inspect and clean the cables and connectors, then replace any damaged fiber. Retest the 2346 after cleaning.

PING

Use the PING Generation screen to test the connection to a specific IP address; follow these steps:

- 1. From the Main Menu, type 3, Diagnostics, and press <Enter>.
- 2. From the Utilities menu, type 8, PING Generation, and press <Enter>.
- 3. At the prompt, type the IP address to PING and press <Tab>.
- 4. At the prompt, type the number of times to send a PING, from 1 to 256, or type 0 to PING continuously every 3 seconds, and press <Enter>.

```
"PING response received..." indicates a good connection;
```

5. To stop the PING and return to the Utilities menu, press <Esc>.

[&]quot;TIMEOUT: Unable to reach [IP address]..." indicates a faulty connection.

Loopback

Use loopback to diagnose a fault on the optical link, either on a modem or with a cable. The 2346 supports both local and remote loopback in one or both directions. Set loopback either in software for a managed 2346 or at the loopback function switch on a standalone enclosure See Figures 4 through 9.

- Local loopback returns the received electrical signal to the local site and ignores the received optical signal; turn on Local Loopback at the local modem. The remote modem returns All Ones to the remote site. Faulty data can indicate that the local 2346 is faulty.
- Remote loopback returns the received optical signal to the remote modem and ignores the received electrical signal; turn on Remote Loopback at the local modem. The remote modem returns All Ones to the remote site. Faulty data can indicate that either the fiber optic cable link or the remote 2346 is faulty.
- Bi-directional loopback returns the received electrical signal to its local site and the received optical signal to the modem that sent it; turn on Local loopback at one modem and Remote Loopback at the other modem. Faulty data can isolate the faulty equipment to indicate that either the fiber optic link or a 2346 is faulty.

To set up the software and start or stop loopback, follow these steps:

- 1. From the Main Menu, type 1, "System Configuration," and press <Enter>.
- 2. At the System Configuration menu, type 2, "Functional Configuration," and press <Enter>. The Functional Configuration screen appears.
- 3. Enable Software Override, if needed. Type 1 and press <Enter>, then press <Space> to cycle between Enabled and Disabled, and press <Enter> to select Enabled. To move to the next column for a remote modem, press <Tab>.
- 4. To set and start Loopback, type 3 and press <Enter>, then press <Space> to cycle through the options. To move to the next column for a remote modem, press <Tab>. When you finish making selections, press <Enter>; loopback starts.
- 5. To stop Loopback, type 3 and press <Enter>, then press <Space> to cycle to Norm. To move to the next column for a remote modem, press <Tab>. When you finish making selections, press <Enter>; loopback ends.
- 6. To return to the Main Menu, press <Esc>.

Alternately, if the 2346 is in a standalone enclosure that includes loopback support, such as a 1020, you can set the Loopback function switch on the front panel for local or remote loopback; for details, see the manual for the enclosure.

EdgeAccess[®] Universal Chassis System

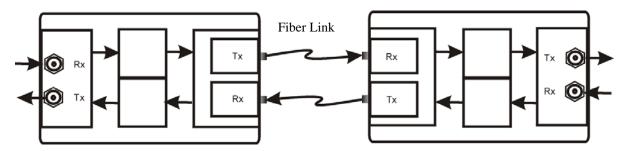


Figure 4. Normal Operation

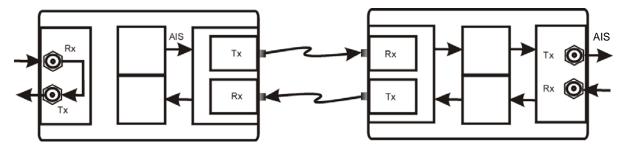


Figure 5. Local Loopback

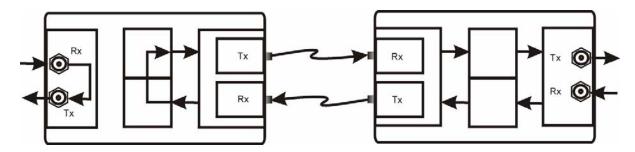


Figure 6. Local Bidirectional Loopback

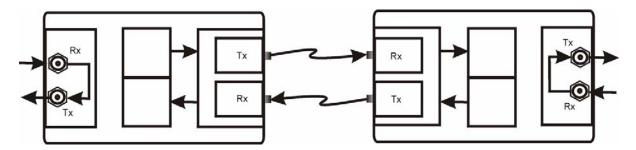


Figure 7. Local Loopback at Both Ends

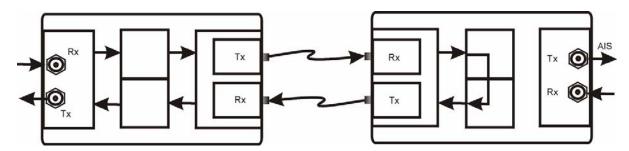


Figure 8. Remote Loopback

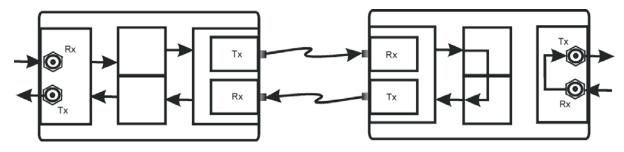


Figure 9. Remote Bidirectional Loopback

EdgeAccess[®] Universal Chassis System

Chapter 5 Specifications

See also the specifications for the chassis or standalone enclosure.

2346 Specifications

Data Rates: 44.736 Mbps

Physical Specifications

Dimensions 3.0"H x 1.0"W x 9.0"D (76.2 mm x 25.4 mm x 228.6 mm)

Weight: 0.3 lb. (0.136 Kg)

Operating Temperature, rackmount 0° to 50° C Operating Temperature, standalone 0° to 50° C

Operating Humidity: Up to 90% (non-condensing)

Copper Connectors: BNC
Optical Connectors: ST or SC

Regulatory Compliance

• ETL, ETLc (UL 60950/CSA C22.2 No. 60950)

• EN 60950, EN 60825-1

• FCC Part 15B (U.S.)/ICES-003 (CAN)

• EN 55022, EN 55024

• EN 61000-3-2

• EN 61000-3-3

NEBS Level 3 Tested and Certified

CE Mark

EIA-232 Pinout

Pin Number	Signal Name	Source	I/O
1	RI	DCE	Output
2	DCD	DCE	Output
3	DTR	DCE	Input
4	SIG GND		
5	RXD	DCE	Output
6	TXD	DCE	Input
7	CTS	DCE	Output
8	RTS	DCE	Input

EdgeAccess[®] Universal Chassis System

2346 Models

Model	Fiber Optic Option
2346-1121	1310 nm MM ST, 11 dB
2346-1321	1310 nm SM ST, 10 dB
2346-1331	1310 nm SM ST 26 dB
2346-1531	1550 nm SM ST 30 dB
2346-1124	1310 nm MM SC 11 dB
2346-1324	1310 nm SM SC 10 dB
2346-1334	1310 nm SM SC 26 dB
2346-1534	1550 nm SM SC 30 dB
2346-1374	Single Fiber 1310 nm SM SC 40 Km
2346-1584	Single Fiber 1550 nm SM SC 40 Km
2346-1354	Single Fiber 1310 nm SM SC 20 Km
2346-1564	Single Fiber 1550 nm SM SC 20 Km
2346-1070	CWDM 1470 nm SM 22 dB SC
2346-1071	CWDM 1490 nm SM 22 dB SC
2346-1072	CWDM 1510 nm SM 22 dB SC
2346-1073	CWDM 1530 nm SM 22 dB SC
2346-1074	CWDM 1550 nm SM 22 dB SC
2346-1075	CWDM 1570 nm SM 22 dB SC
2346-1076	CWDM 1590 nm SM 22 dB SC
2346-1077	CWDM 1610 nm SM 22 dB SC

EIA-232 Pinout

Pin Number	Signal Name	Source	I/O
1	RI	DCE	Output
2	DCD	DCE	Output
3	DTR	DCE	Input
4	SIG GND		
5	RXD	DCE	Output
6	TXD	DCE	Input
7	CTS	DCE	Output
8	RTS	DCE	Input

Appendix A Warranty Information

Current Warranty information is available on-line in the Client Login Area of the Canoga Perkins web site (www.canoga.com) or by contacting Technical Support at 800-360-6642 (voice) or fiber@canoga.com (email).

Appendix B Acronym and Abbreviation List

AMI Alternate Mark Inversion B3ZS Bipolar 3-Zero Substitution

BAM Bus Access Module

CIM Chassis Interconnect Module
DMM Domain Management Module

LNK Link

MM Multimode

MMF Multimode Fiber SMF Single Mode Fiber

SM Single Mode

SNMP Simple Network Management Protocol

TFTP Trivial File Transfer Protocol
UCS Universal Chassis System

EdgeAccess[®] Universal Chassis System

Index

A	P		
Alarm Configuration screen, 3-6	PING Generation screen, 4-4		
alarms, 2-4	R		
В	remote configuration, 3-11		
baud and Modem/SLIP/PPP, 3-7	reset and swap firmware, 3-10		
\mathbf{c}	\mathbf{S}		
change Password, 3-11	screen		
copy configuration, 3-11	Alarm Configuration, 3-6		
D	Domain Management Module menu, 3-4 Edit Host Access screen, 3-10 Functional Configuration, 3-11		
Domain Management Module menu, 3-4			
E	Link Error Counters, 3-12		
Edit Host Access screen, 3-10	PING Generation, 4-4 SNMP Configuration, 3-5		
F			
	Software Upgrade, 3-9		
Functional Configuration screen, 3-11	Trap Configuration, 3-6		
Н	security		
Hardware Configuration report, 3-5	host access, 3-10 password, 3-11		
host access, 3-10			
I	set Date and Time, 3-5		
IP address, Host, 3-10	set up		
	baud and Modem/SLIP/PPP, 3-7 modem functions, 3-11		
L			
LEDs and functions, 2-3	SNMP Configuration screen, 3-5		
Link Error Counters screen, 3-12	software download, FTP or SFTP, 3-9		
loopback for troubleshooting, 4-5	Software Upgrade screen, 3-9		
M	software version, 3-9		
maintaining	T		
cables and connectors, 4-1	Trap Configuration screen, 3-6		
optical power and link loss, 4-1	troubleshooting		
mibs, network managment, 3-1	and loopback, 4-5 and PING, 4-4		
modem functions set up, 3-11			
N	and reset to default, 4-4		
network managment mibs, 3-1	${f U}$		
-	Utilties menu, 3-5, 3-7, 3-11, 4-4		

CANOGA PERKINS CORPORATION



20600 Prairie Street Chatsworth, California 91311-6008 USA Phone: (818) 718-6300 FAX: (818) 718-6312

Web Site: www.canoga.com Email: fiber@canoga.com