 




5 piece drum set

*FD-514 / FD-515 / FD-517 / FD-520

5 piece drum set with fully tunable drumheads
Hardwood drumsticks • *Drum seat

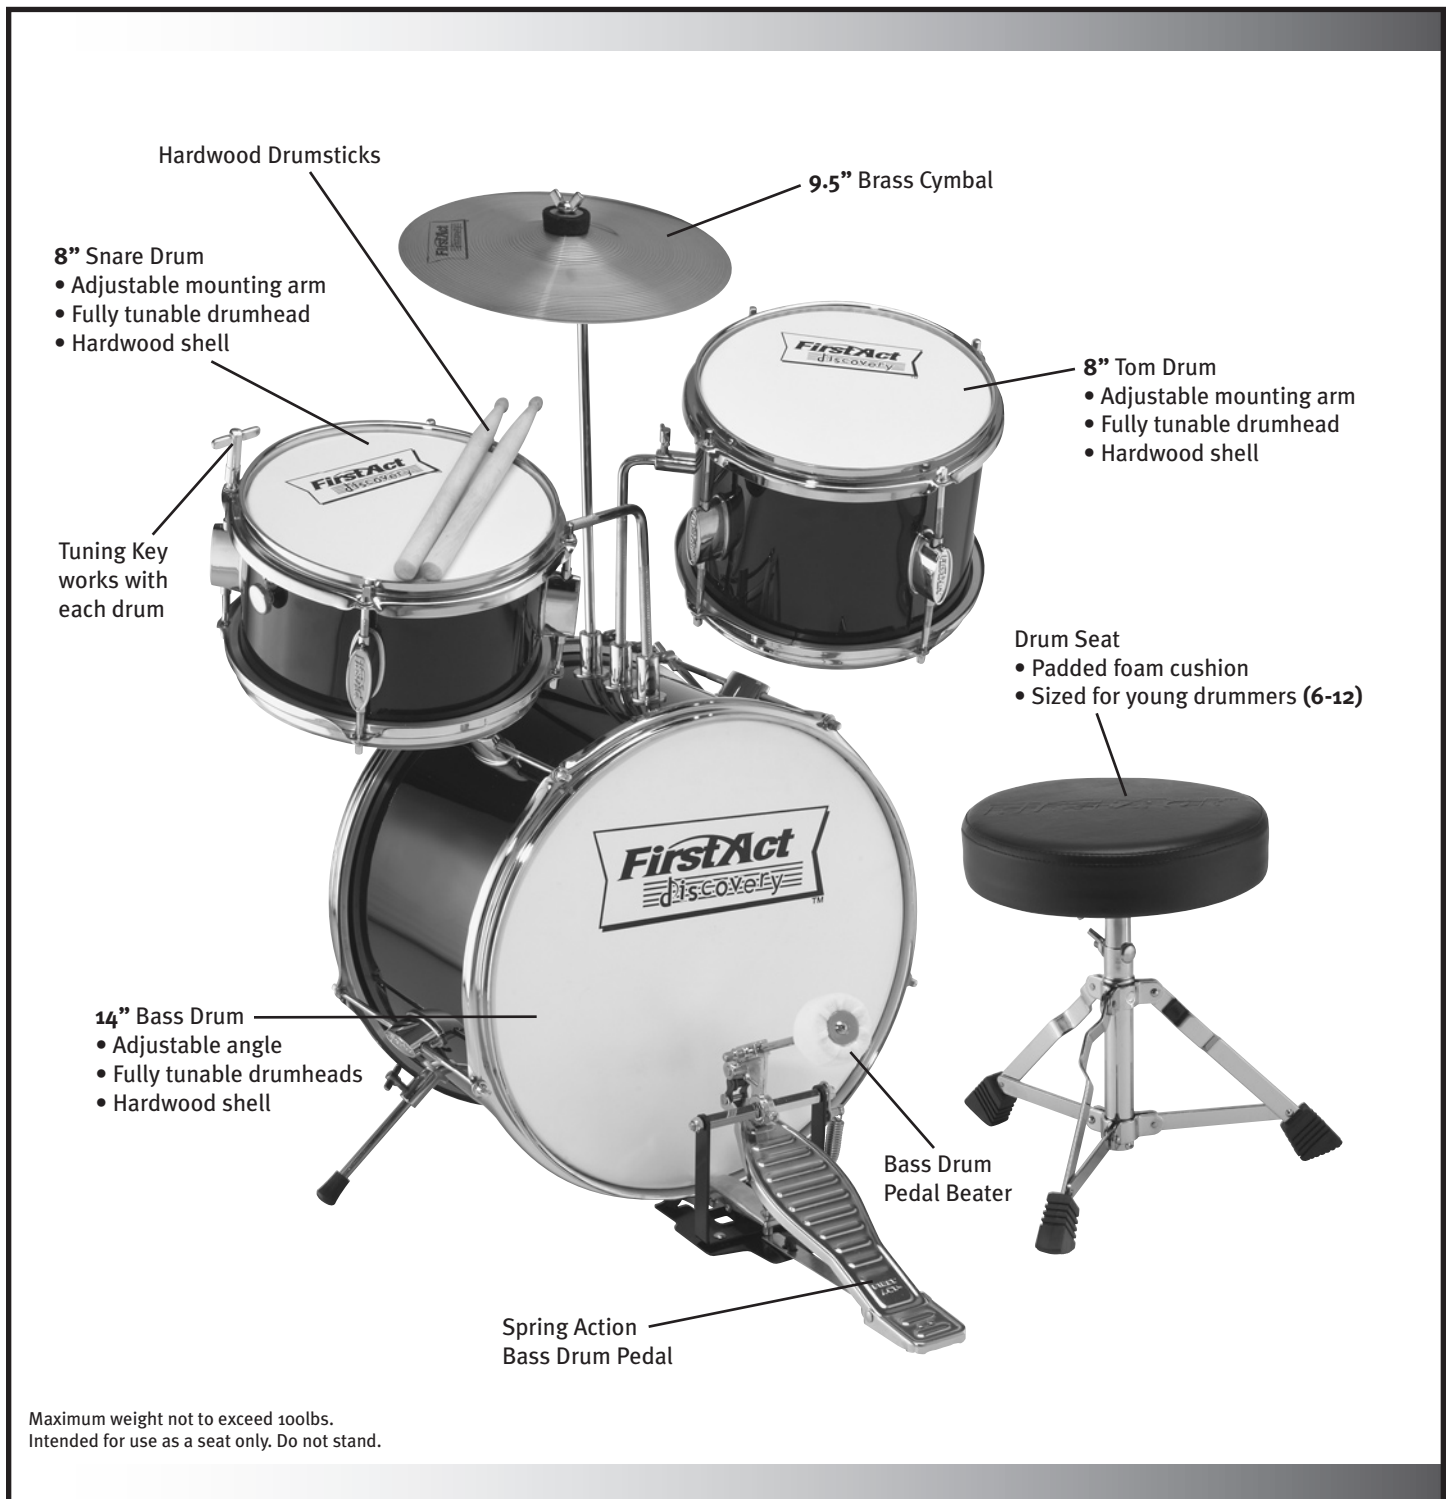




Maximum weight not to exceed 100lbs.
Intended for use as a seat only. Do not stand.

* 4 piece drum set does not include seat

5 piece drumset *FD-514 / FD-515 / FD-517 / FD-520

CONTENTS


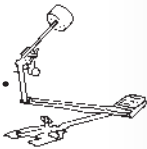 
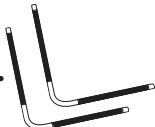 

 

 

DRUMS

- (A) Snare Drum.....
- (B) Tom Drum.....
- (C) Bass Drum.....

CYMBALS

- (D) Cymbal

STANDS / HARDWARE

- (E) Cymbal Arm
- (F) Bass Drum Pedal w/ Felt Beater
- (G) L Mounting Arms (2)
- (H) Bass Drum Spurs (2)
- (I) Drum Tuning Key
- (J) Seat *(not included with FD-514)
- (K) Cowbell *(FD-520 only)
- (L) Drumsticks (2)

Thank you for purchasing a First Act Discovery™ 500 series Drum Set! This drum set is ready to go right out of the box and will have anxious young drummers playing in no time! You'll need no tools to assemble the drums. Keep the drum-tuning key in a safe place, as you'll need it to tune or change the heads periodically. Enjoy!

ASSEMBLY

Open the box and remove the seat top (*not included with model FD-514)

Then take out the snare drum (A) tom drum (B) and cymbal (D) and put aside.

The pedal, stands and accessories are located in the side compartment. Open up the package and inspect the items with the contents page.

Take out the bass drum (C) and place upright on the floor.

Insert the two bass drum spurs (H) to the front half of the bass drum on the bottom. The spurs should extend out from the drum just enough to steady the drum on the floor.

Attach the bass drum pedal (F) by sliding the bottom plate under the flanged rim of the bass drum. Tighten the top clamp located under the footboard just enough to “grab” the top of the flanged rim.

Place the bass drum felt beater into the top of the bracket and adjust so the felt beater hits the middle of the drum.

Make sure the spring on the side of the pedal is tensioned to the top and bottom of the bracket of the bass drum pedal.

Stand behind the bass drum and insert the two L mounting arms (G) into the two closest mounts on the top of the drum.

Point one L mounting arm to the left and insert into the mount on the bass drum that is closest to you. Tighten. Then point the other L mounting arm to the right and insert on the middle bass drum mount. Tighten.

(*For model FD-520 only, insert bottom half of L mounting arm through the cowbell (K) and tighten wing nut on cowbell bracket before inserting into first mount on bass drum.)

Place the snare drum on the left L arm mount.

Place the tom drum on the right L arm mount.

ASSEMBLY (cont.)

You can now adjust the position, height, and angle of the drums.

Remove the wing nut and top felt of the cymbal arm (E) and place the cymbal over the threaded rod on top of the bottom felt. Replace the top felt and wing nut.

Place the cymbal arm into the mount furthest away to you at the front of the bass drum. You can now adjust the height and tighten.

Place the drum seat (J) behind the drum set. (*Not included with model FD-514)
Now grab the pair of drumsticks (L) and play. Have fun!

Use the drum-tuning key (I) to make any small changes in tuning. Turning the tension rods to the right will raise the pitch of the drum. Turning the tension rods to the left will loosen or lower the pitch.

Remember to only turn one-quarter turn at a time and don't over tighten.

Good luck and drum on!



FIRST ACT
P.O. Box 811
Needham, MA 02494 USA
www.firstact.com

Info@firstact.com
CUSTOMER SERVICE 888-551-1115

FD-500 SERIES WINDOW BOX
© ALL RIGHTS RESERVED FIRST ACT INC.