
# PCR210: User Manual

01/20/2011

Polaroid

**Alarm** Clock AM/FM Clock Radio **PCR210** 

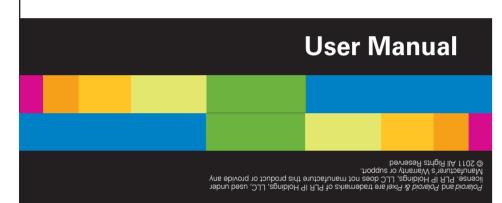






**OPERATING INSTRUCTIONS** 

AM/FM ALARM CLOCK RADIO

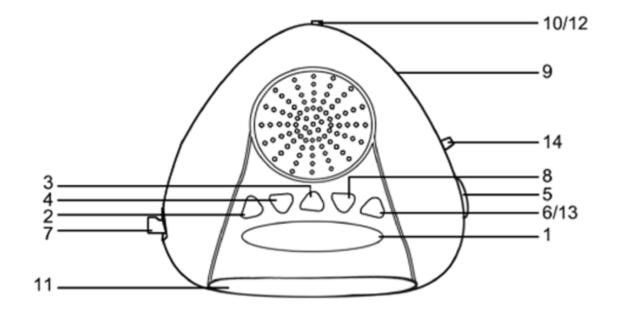

- 1. SNOOZE/SLEEP OFF BUTTON
- 2. SLEEP SET BUTTON
- 3. MINUTE SET BUTTON
- 4. HOUR SET BUTTON
- 5. TUNING CONTROL
- 6. ALARM SET BUTTON 7. ON/OFF/AUTO/ALARM SELECTOR
- 8. TIME SET BUTTON
- 9. VOLUME CONTROL
- 10. FM ANTENNA (FOR EXTERNAL ANTENNA)
- 11. AUTO INDICATOR
- 12. MAIN PLUG (AC CORD)
- 13. ALARM OFF BUTTON
- 14. AM/FM SELECTOR

### **AC POWER OPERATION**

Before connecting to the power supply ensure that the supply corresponds to the information on the rating label on the bottom of the apparatus.

Disconnect the mains plug from the supply socket when not in use. To prevent fire of shock hazard do not expose the apparatus to rain or moisture.

## SETTING THE CLOCK

- 1. Set the On/Off/Auto/Alarm Switch (7) to "OFF". Connect the Main Lead to the power supply. The clock display will flash on and off indicating a power interruption and that the display time is incorrect.
- 2. To set the correct time, press the Time Set Button(3) and Minute Set Button (6), or Hour Set Button (5), together, until the correct time is displayed.

## SETTING THE ALARM/SNOOZE CONTROL

- 1. To set the alarm time, press the Alarm Set Button (2) and Minute Set Button (6), or Hour Set Button (5), together, until the required alarm time is displayed.
- 2. Switch the On/Off/Auto/Alarm Switch (7) to either "AUTO" or "ALARM" position for choice of wake by radio or wake by buzzer respectively. The Auto Indicator (11) will illuminate and alarm is now set to activate at the required time.
- 3. The alarm can be temporarily stopped for 9 minutes by pressing the Snooze/Sleep Off Button (1).

- 4. The alarm will switch off automatically after 120 minutes, or can be cancelled by pressing the Alarm Off Button(13) once.
- 5. The alarm will activate again after 24 hours unless the On/Off/ Auto/Alarm Switch (7) is set to "OFF".
- NOTE: When setting alarm time always remember to release the Minute Set or Hour Set or Hour Set Button before releasing the Alarm Set Button to ensure that the real time will not be affected.

## SLEEP CONTROL

- 1. Set the On/Off/Auto/Alarm Switch (7) to "OFF", "AUTO" or "ALARM"
- 2. Press the Sleep Set Button (4) and Minute Set Button(6) together. The sleep time will be displayed and count down from 59 minutes to zero. Release the button when the required sleep time is displayed.
- 3. The radio will now operate until the sleep time has elapsed or may be switched off by pressing the Snooze/Sleep Off Button (1).

## PLAYING THE RADIO

The FM band required the AC cord for FM ant., this should be uncoiled and positioned for best reception. Set the On/Off/Auto/Alarm Switch (7) to "ON" position.

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment

radio or television reception, which can be determined by turning the equipment off and on, the user is

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for

compliance could void the user's authority to operate the equipment.
"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

check with local authorities or the retailer where you purchased this product to determine a location where you

Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and reference About /

encouraged to try to correct the interference by one or more of the following measures:

• Connect the equipment into an outlet on a circuit different from that to which the receiver

(2) this device must accept any interference received, including interference that may cause undesired operation."

- 1. Adjust the Tuning Control (8) to select the desired station.
- 2. Adjust the Volume Control (9) as required.

3. To turn off the radio, set the On/Off/Auto/Alarm Switch (7) to "OFF" If the radio does not switch off this may be caused by

inadvertent operation of the Sleep Set Button (4). To cancel

this press the Snooze/Sleep Off Button (1) once. 4. Adjust the Switch (15) to the required waveband.

### CLEANING

Clean the cabinet with a soft cloth moistened with water or mild detergent. Do not use solvents such as alcohol, benzene or thinner, as the may damage the cabinet finish. Make sure to disconnect the main lead from the supply before cleaning. Please retain these instructions for future reference.

## **SPECIFICATIONS**

AM 530-1700KHz Frequency Range: FM 88 -108 MHz

AC 110V ~ 60 Hz 6 W

Power Source Power Output 300 mW

## Safety precautions

## WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.



## symbol, within an equilateral triangle intended to alert the user to the sence of uninsulated "dangero voltage" within the product's enclosu that may be of sufficient magnitude to

onstitute a risk of electric shock to

RISK OF ELECTRIC SHOCK DO NOT OPEN WARNING: TO REDUCE THE RISK OF

ELECTRIC SHOCK, DO NOT REMOVE

CAUTION

COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



uilateral triangle is intended to ale user to the presence of important perating and maintenance (servicin ompanying the product

When using your product, basic safety precautions should always be followed to reduce the risk of fire,

- electric shock and injury, including the following:
- Read and understand all instructions and safety precautions Follow all warnings and instructions marked on the product.
- If the LCD display breaks, do not touch the glass or liquid, and contact customer support. • The use of a NON- RECOMMENDED accessory may cause fire, electric shock, or injury. For approved
- accessories, please contact customer support. • Do not expose the Alarm Clock to rain or moisture
- Clean only with a dry cloth. Make sure the Alarm Clock is turned off before cleaning. Do not use a liquid cleanser.
- Do not use this product near water (for example, near a bath tub, kitchen sink or swimming pool).
- Do not place this product on an unstable surface.
- Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed.
- This product should never be placed near or over a radiator or heat register
- This product should not be placed in any area where proper ventilation is not provided. Never push objects of any kind into the ventilation slots of this product as they may touch dangerous voltage points or create a short circuit that could result in a risk of fire or electric shock. Never spill liquid of
- any kind on the product. • Use only the power cord included with this product.
- This product should be operated only from the type of power source indicated on the marking label. If you
- Plug the adaptor to the socket outlet that is closest to the equipment and which is easily accessible. • To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility.
- Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used. • Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- The power adapter is intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling or an under-the-table/cabinet outlet.
- are not sure of the type of power supply in your home, consult your dealer or local power company.
  - If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local

recycling facility to determine their data sanitization procedures during the recycling process.

## **Legal information**

Re-orient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver

Do not attempt to repair or modify this equipment

can appropriately dispose of the product.

(1) this device may not cause harmful interference, and

• Consult the dealer or an experienced radio/TV technician for help.

## This product as supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser is warranted by AIT against defects in material and workmanship for a period of 90 days from your date of

n the unlikely event that this product is defective, or does not perform properly, you may within one year from your generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to original date of purchase return it to the authorized service center for repair or exchange

## TO OBTAIN WARRANTY SERVICE:

**Limited Warranty** 

Provide proof of the date of purchase within the package (Dated bill of sale)
 Prepay all shipping costs to the authorized service center, and remember

Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.

Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

# AIT, Inc. ATTN: Returns Department

Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please Should you have any questions or problems concerning this product, please contact our customer service

# Customer Support: 2 1-877-768-8483 (Toll Free)

polaroidsupport@southerntelecom.com

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)