

## **INSTRUCTION MANUAL**

# **CU-4SMART**

**RGBW-LED-DMX Controller** 

Best. Nr.: 38.6090



### 1. Safety Introductions

Please read the User Manual carefully as it includes important information regarding details of operation, maintenance and technical data. Keep this manual with unit for future consultation.

#### **WARNING!**

- Avoiding any flammable liquids, water or metal objects enter into the unit.
- If any liquid spill on the unit, disconnect the power supply immediately.
- When serious operation problem happen, stop using the unit immediately and contact your local dealer for service.
- Do not open the unit because there are no user serviceable parts inside.
- Never try to repair the unit yourself. Repairs by unqualified people could cause damage or faulty operation. Please contact your nearest dealer for any service.

#### **CAUTION!**

• After removed the package, make sure the unit is not damaged in any way.

Don't use it with doubt and contact an authorized dealer.

- Never use the unit under the excessive humidity and a temperature over 40°C.
- Do not try to dismantle or modify the unit.

### 2. Features:

CU-4SMART is an ideal solution for dimming constant voltage LED fixtures, especially LED strips. Multiple strips can be connected on CU-4SMART and be dimmed individually (single color) or simultaneously.

- 4 independent constant voltage output. Each output can be dimmed individually.
- Various input controlling protocol: 0-10v, DMX, DALI.
- User can setup CU-4SMART to Manual Mode, various channel modes (RGB/RGBD,RGBW/RGBWD,D(4CH),WWWW,CW+WW,CT+D)
- Can adjust the white balance.

Specifications:

Input Voltage: DC12V=/10A or 24V=/10A


Maximum 5A per line, Max. 10A in Total

Power consumption: 240W

**Dimension:** 210.5X51.6X33.2mm

Weight: 0.250kg

### 3. Main Functions

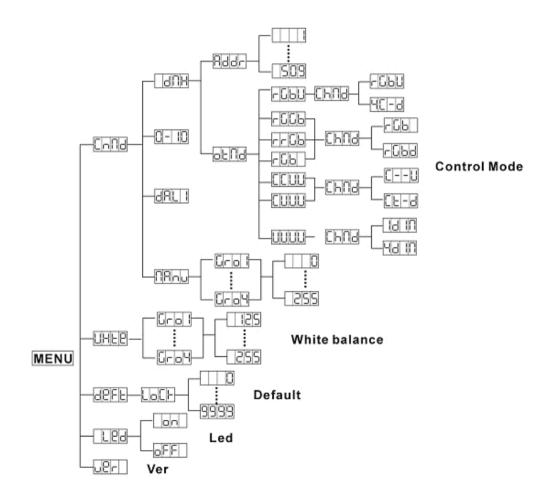



Control Mode: Under this menu you can choose four operation mode: MANUAL MODE, DMX MODE, DALI CONTROL MODE, 0/1-10V

Press the MENU button up to when the Cond is showing on the display. Pressing "d"button and the display will blink. Use "▲"and"▼" button to select Cond (manual control mode), Control mode), Control mode), Control mode).

# 

Manual control mode: In this mode you can adjust the brightness for the four groups of the luminaries.

Pressing "delignoup and "button to select delignoup and "button to adjust the valve 0-255. Press the "button to setup. Or automatically exit menu mode without any change after 60 seconds. To go back to the functions without any change press the MENU button.



# DMX control mode: In this mode you can set address and channel mode

Pressing "→"button enter, use "▲"and"▼" button to select door (DMX address) or oblid, once the door has been selected, Pressing "→"button enter, use "▲"and"▼" button to adjust the valve 0-509. once the has been selected ,Press the "→"button to enter, Use "▲"and"▼" button to select (RGBW), wwww), could (CWWW), could (CCWW), could (CCWW)

OUTPUT MODE	CHANNEL MODE
RGB/RRGB/RGGB	RGB(FGb)
	RGBD(FGbd)
RGBW	RGBW( <u>LCbU</u> )
	4C+D(4C-d
CWWW/CCWW	C+W( <u>  </u> )
	CT+D(CC-d)
www	Dimmer(III)
	4D(40111)



# Default: In this function you can factory reset the driver.

Press the MENU button up to when the ☐☐☐E is showing on the display.

Pressing "☐" to enter, Use "▲"and"▼" button to select the ☐☐☐...or

☐☐☐. Once you selected, press the "☐" button to setup. Or automatically exit menu mode without any change after 60 seconds. To go back to the functions without any change press the MENU button.

# UhE|2

## White balance: In this mode you can adjust the brightness

Press the MENU button up to when the is shown on the display.

Pressing " button, and Use "▲"and"▼" button to select ...or .

IMG Stageline LC-4DIM/ LC-4COL 5 IMG Stageline LC-4DIM/ LC-4COL




# ON/OFF the LED display according to your real requirement


Press the MENU button up to when the LPd is shown on the display. Pressing " button, and Use" ▲ "and" ▼ " button to select ....or FF , press "d" button to confirm. When is select, the Led display will light up all the time, when the Led display will be off after 60 seconds. To go back to the last function press the MENU button.



# Version: show you the firmware version of the driver

Press the MENU button up to when the Pressing "I button, the firmware version will be showed on the Led display. E.g. V00,means version 00.

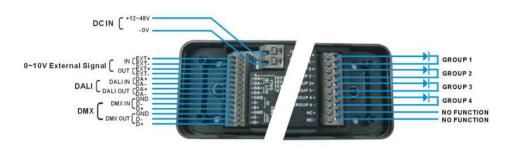

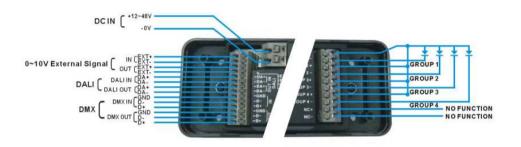



If the unit is to be put out of operation definitively, take it to a local recycling plant for a disposal which is not harmful to the environment



Do not put exhausted batteries into the household rubbish. Always take them to a special waste disposal (e.g. collecting container at your retailer).





MONACOR INTERNATIONAL GmbH & Co. KG • Zum Falsch 36 • 28307 Bremen • Germany Copyright<sup>©</sup> by MONACOR INTERNATIONAL. All rights reserved.

IMG Stageline LC-4DIM/ LC-4COL 7 IMG Stageline LC-4DIM/ LC-4COL 8