

Live Video Broadcasting over BGAN

Version 01
05.10.06

www.inmarsat.com/bgan

Whilst the information has been prepared by Inmarsat in good faith, and all reasonable efforts have been made to ensure its accuracy, Inmarsat makes no warranty or representation as to the accuracy, completeness or fitness for purpose or use of the information. Inmarsat shall not be liable for any loss or damage of any kind, including indirect or consequential loss, arising from use of the information and all warranties and conditions, whether express or implied by statute, common law or otherwise, are hereby excluded to the extent permitted by English law. INMARSAT is a trademark of the International Mobile Satellite Organisation, Inmarsat LOGO is a trademark of Inmarsat (IP) Company Limited. Both trademarks are licensed to Inmarsat Global Limited. © Inmarsat Global Limited 2006. All rights reserved.



Contents

1.0.	Introduction	3
1.1.	About this guide	3
1.2.	Other sources of information	3
2.0.	Introducing audio/video over BGAN	4
2.1.	Introducing broadcasting solutions	4
2.2.	Setting up and using broadcasting solutions	5
3.0.	Understanding audio/video protocols	6
3.1.	Selecting the right terminal and Quality of Service	6
3.2.	Understanding codecs	7
3.3.	Understanding bit rates	8
3.4.	Introducing protocols	8
3.5.	Protocol requirements	10
4.0.	Introducing broadcast solutions	10
4.1.	Performance over BGAN	11
4.2.	General recommendations	11
5.0.	Setting up Streambox ACT-L3	12
5.1.	Setting up the client for Live broadcast	14
5.2.	Setting up the IFB client	15
5.3.	Setting up the client for Store and Forward broadcast	15
5.4.	Setting up the server	15
5.5.	Recommendations/Optimizations	16
6.0.	Setting up QuickLink	16
6.1.	Setting up the client encoder	17
6.2.	Setting up a server address	18
6.3.	Making a Live broadcast	18
6.4.	Making a Store and Forward broadcast	19
6.5.	Recommendations/Optimisation:	20
7.0.	Setting up Livewire M-Link	20
7.1.	Setting up the M-Link client encoder	21
7.2.	Setting up the server	22
7.3.	Recommendations/Optimization	22
8.0.	Setting up Clipway (Store and Forward)	22
8.1.	Setting up the client	23
9.0.	Setting up the Canon WiFi camera (Store and Forward)	25
9.1.	Setting up the Camera	26
10.0.	Setting up the Nikon D2H WiFi camera (Store and Forward)	29
10.1.	Configuring the camera	29
10.2.	Setting up the BGAN terminal	31
11.0.	Setting up a video broadcast connection in LaunchPad	31
12.0.	Support and feedback	34



I.0. Introduction

I.1. About this guide

This document describes the use of Live audio/video broadcasting applications over the BGAN network, explains the protocols used and how to optimize them, and introduces some common off-the-shelf and professional solutions. It also explains how to set up a dedicated streaming IP connection using BGAN LaunchPad.

This document is intended for end users, Distribution Partners and Service Providers who either want to integrate an existing solution or looking for new audio/video solution over BGAN. A previous knowledge of satellite communications is useful, but not essential.

The sections include:

- Introducing audio/video over BGAN – introduces broadcasting solutions, and lists the pre-requisites, and the tested solutions.
- Understanding audio/video protocols – lists the terminals and connection types available over BGAN, and explains codecs, bit rates and IP protocols.
- Introducing broadcast solutions – details performance over BGAN, and provides general recommendations.
- Setting up Streambox ACT-L3 – setting up the client and server for Live or Store and Forward broadcasting.
- Setting up Quicklink – setting up the client and server for Live or Store and Forward broadcasting.
- Setting up Livewire M-Link - setting up the client and server for Live or Store and Forward broadcasting.
- Setting up ClipWay – setting up the client for Store and Forward broadcasting.
- Setting up the Canon WiFi camera – setting up the camera for Store and Forward images.
- Setting up Nikon D2H WiFi camera – setting up the camera for store and forward images
- Setting up a video broadcast connection in LaunchPad – describes how to set up a dedicated streaming IP data connection for use with your video broadcasting application.

I.2. Other sources of information

- This is one of a series of PDF documents that make up the BGAN Solutions Guide. The Solutions Guide is designed to help you make the most of your BGAN terminal. Other documents in the series are available for download from www.inmarsat.com/bgan. Click on **BGAN support**, then click on **How to guides**.

This Web site also gives further information on the BGAN service, including Industry solutions.

- Refer to “BGAN LaunchPad Help” for details on using BGAN LaunchPad.
 - Refer to the documentation supplied with your audio/video broadcasting application for details on changing configuration and settings.
-



2.0. Introducing audio/video over BGAN

The BGAN service enables remote offices or users to establish audio/video communications with company headquarters or business partners anywhere in the world.

Audio/Video solutions are divided into 3 main categories. This guide covers Live audio/video broadcasting only. Each of the other categories is covered by its own Solutions Guide; refer to the appropriate guide for details on the other categories.

- Broadcasting solutions (Encoder & Decoder based)
 - Typically one-way broadcast of live audio/video from the field.
 - Includes a high quality Store-and-Forward option for near real-time breaking news coverage.
- Video conferencing solutions (Hardware or Software based) – typically, two-way video conferencing between remote and fixed office.
- Remote surveillance solutions (Remote IP camera) – typically, a one-way JPEG or motion video clip from field to fixed office when motion is detected; alternatively, the fixed office can access a live video stream remotely.

IMPORTANT: It is important that you select the correct BGAN terminal and streaming IP quality of service for the solution you want to use. Refer to the appropriate Solutions Guide for details.

Symmetrical QoS over BGAN

It is important to note that BGAN streaming IP offers symmetrical QoS. For instance 256kbps streaming IP offers 256kbps in the up direction, and 256kbps in the down direction. Normally, broadcast solutions only use the uplink (return channel) for live broadcast and the downlink (forward channel) for audio feed from news room studio. You can also use BGAN 4K voice channel simultaneously, but it is more efficient and cost effective to use BGAN streaming IP channel for both audio and video transmission.

2.1. Introducing broadcasting solutions

The arrival of BGAN, which utilises Internet Protocol (IP) and has a bandwidth capacity of up to seven times that of the Inmarsat GAN service, has started a revolution in television coverage of breaking news. BGAN certainly presents a compelling proposition to the professional broadcaster, because the terminals are small and as easily portable as a laptop computer, while the BGAN streaming IP service delivers high quality live video back to studio room from anywhere within the satellite foot print.

Typically BGAN service offers two core options for broadcasters:

- Live video, which is typically transmitted one-way from the field, using Streaming IP data rates of up to 256Kbit or 64K ISDN
- Store-and-forward video, using Streaming IP, ISDN or Standard IP.

The BGAN IP service allows you to use some of the latest broadcasting compression protocols, such as H.264, MPEG 4 and Windows Media 9, for live broadcasting over BGAN.

The BGAN IP service also plays a bigger role in broadcasting store-and-forward video, giving you the ability to transmit high quality video at a variety of connection rates, including standard IP.

The flexibility of the BGAN service when compared to GAN is another highly attractive feature for video broadcasting. On Class I terminals, such as the HNS 9201, multi-user functions allow users to



perform more than one task simultaneously. For instance, it is possible to send store-and-forward video via Standard IP, while simultaneously using Streaming IP for a live broadcast. In this way, important footage can be received by the studio and edited ready for broadcast at the earliest opportunity. The level of compression determines the quality of picture received at the other end and the time taken to transmit.

Typical setup requires a laptop-based encoder with firewire camera connected to a BGAN terminal over the Ethernet interface.

2.2. Setting up and using broadcasting solutions

Audio/Video broadcasting solutions introduce additional requirements over the ordinary transfer of data. For example, latency must be guaranteed to ensure that frames are transmitted in the form of a moving image, and sound must be synchronized with image. Audio/video solutions require the following:

- A large amount of information to be sent simultaneously, requiring a consistent bandwidth with guaranteed end-to-end QoS. Typically, a BGAN streaming IP connection is required (refer to “Selecting the right terminal and Quality of Service” on page 6).
- Some form of data compression (refer to “Understanding codecs” on page 7).
- The selection of a bit rate type (refer to “Understanding bit rates” on page 8).
- A number of protocols to be used alongside the streaming IP connection to control data flow and provide additional conferencing capabilities (refer to section “Introducing protocols” on page 8 and “Protocol requirements” on page 10).
- End-to-end QoS for the required data rate. This is particularly important for UDP-based applications running over Streaming IP connections. To maintain throughput and quality it is important that QoS is maintained across the terrestrial ‘last mile’ link as well as the satellite interface. BGAN Distribution Partners and Service Providers can provide details of available interconnect last mile options.

When these requirements are met, you can further optimize your applications based on Inmarsat’s recommended settings. Refer to “Introducing broadcast solutions” on page 10, and any of the following sections based on your preferred video broadcasting application:

- “Setting up Streambox ACT-L3” on page 12.
- “Setting up QuickLink” on page 16.
- “Setting up Livewire M-Link” on page 20.
- “Setting up Clipway (Store and Forward)” on page 22.
- “Setting up the Canon WiFi camera (Store and Forward)” on page 25.
- “Setting up the Nikon D2H WiFi camera (Store and Forward)” on page 29.

In addition, you can set up a streaming IP connection in BGAN LaunchPad, dedicated to your video conferencing application. Refer to “Setting up a video broadcast connection in LaunchPad” on page 31”.



3.0. Understanding audio/video protocols

This section explains IP data connections over BGAN, data compression algorithms, and the data transfer protocols and audio/video protocols used to ensure effective audio/video solution over BGAN.

3.1. Selecting the right terminal and Quality of Service

The BGAN terminal provides two classes of connection: standard IP and streaming IP.

On a standard IP connection, traffic throughput varies depending on terminal and network usage. Streaming IP differs from standard IP in that it offers a guaranteed, consistent connection rate, provided network resources are available end to end.

TIP: Inmarsat strongly recommends that you use a streaming IP connection for live audio/video applications

The streaming rates provided by the BGAN terminals differ, as shown in the following table:

Terminal	Standard IP (up to...)	Streaming IP
HNS 9201 Thrane & Thrane EXPLORER 700	492kbps send 492kbps receive	32kbps, 64kbps, 128kbps, 256kbps
Thrane & Thrane EXPLORER 500	464 kbps send 448 kbps receive	32kbps, 64kbps, 128kbps
Nera WorldPro 1000/1010 Thrane & Thrane EXPLORER 300	384kbps send 240kbps receive	32kbps, 64kbps


You can also link your audio/video application to a particular streaming class connection. To do this, you must configure a dedicated streaming IP connection, and use a traffic flow template to ensure that only the AV traffic is transmitted over that particular connection. All other traffic uses the standard IP connection.

To set up this connection, refer to 11.0 “Setting up a video broadcast connection AV connection”.

Last mile connectivity

If you want to use BGAN for live video and audio streaming traffic using UDP-based applications, Inmarsat recommends that you investigate and implement ‘last mile’ routing arrangements which guarantee end-to-end QoS. This is particularly important for UDP-based applications running over a Streaming IP connection on BGAN. To maintain throughput and quality it is important that QoS is maintained across the terrestrial ‘last mile’ link as well as the satellite interface.

BGAN Distribution Partners and Service Providers can provide details of available interconnect options.

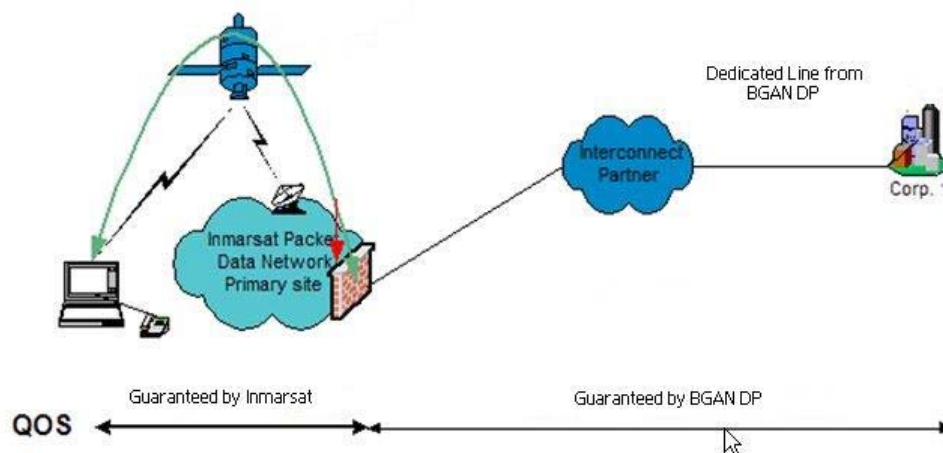

Last mile connectivity

3.2. Understanding codecs

A codec is the name given to the encoding/decoding algorithm that compresses and decompresses audio video data. The effectiveness of a streaming IP connection is determined partly by the codec. A high compression codec will provide the data stream quickly, but at low quality. In general, compression schemes can be classified as "lossy" and "lossless."

- **Lossy compression** schemes reduce the size of the data stream by discarding some data during the encoding process before it is sent over the BGAN network. Once received on the client side, the codec attempts to reconstruct the information that was lost or discarded. Lossy compression offers data savings of around 10:1. If a voice file was compressed using lossy compression, silence would be removed, and both high and low frequency data may be lost from the data stream. The resultant file could sound different to the original (depending on how aggressive the codec was).
- **Lossless compression** simply squeezes data into smaller packets of information without permanently discarding any of the data. Lossless compression algorithms usually require more computing power to compress and decompress the data stream, and do not give the same data savings as lossy compression. If a voice file was compressed using lossless compression, it could still be encoded, in order to reduce the size, but no data would be lost. The resultant file would sound exactly the same as the original.

Codecs typically used combine elements of both compression schemes; in this way, for example, silence can be discarded from a voice file, but all non-silent parts retained and compressed.

Streaming IP applications over BGAN must therefore choose a codec that will provide the necessary quality of stream, whilst reducing the data rate as much as is possible.

The tested applications described in this document all come with their own coding schemes. Some allow you to change various settings which can make a difference in the way the application works over BGAN.



3.3. Understanding bit rates

Audio/Video solutions are designed to use either Constant bit rate or Variable bit rate depending upon the network behaviour. BGAN's streaming IP connection is different to ADSL-type IP networks, as the BGAN network supplies the requested Quality of Service (QoS) from the time you request the connection until you disconnect

It is important to understand the difference between Constant bit rate and Variable bit rate, as the quality of the audio/video solution over BGAN may vary depending upon whether the solution uses Constant or Variable bit rate.

Constant Bit Rate

Constant bit rate is recommended for use with streaming applications over the BGAN streaming IP service as the output from the codec is sent in a steady stream with a fixed bit rate. Since the BGAN streaming IP service is assigned to a specific QoS (32kbps, 64kbps, 128kbps and 256kbps, depending on the terminal), Constant bit rate performs better than Variable bit rate. This is because on a defined BGAN channel, a Constant bit rate takes advantage of all the capacity of the streaming IP connection.

Variable Bit Rate

Variable bit rate is designed to cope with variable network bandwidth, such as that provided by ADSL or the BGAN standard IP connection, which adjust audio/video quality according to the available bandwidth. A Variable bit rate solution has the capability to throttle back when it detects any packet drop or loss, which typically occurs when IP traffic travels through a series of Internet routers. This throttling back reduces the speed of data transmission and results in loss of video quality. Variable bit rate solutions are therefore more suitable for a standard IP connection than a streaming IP connection.

3.4. Introducing protocols

Inmarsat recommends that you use a streaming IP connection to send and receive video data. A number of protocols can be used alongside the streaming connection to control the data flow and provide additional video broadcasting capabilities.

The following two transport protocols are for the general transmission of data over IP:

- TCP
- UDP

Protocols that are specific to video solutions over IP are relatively new, and still evolving. The following two main sets of call control protocol are in use by the Internet at the time of publication:

- H.323
- SIP

All these protocols are described below.

TCP and UDP

TCP and UDP are transport protocols that are used to transmit data over IP connections. The TCP protocol is configured to deliver data from end to end in a reliable manner. It is connection-oriented, and provides flow control and retransmission of lost packets. The UDP protocol is connectionless and designed for speedy delivery, but does not guarantee reliability, flow control or detection of lost packets.



TCP/IP application will be more effective over Standard IP due to the nature of BGAN Standard IP service. Typical corporate application i.e. Email, Web browsing, FTP etc uses TCP

UDP is more suited to Streaming IP because if packets are lost, they are ignored and packet transmission continues. This may cause a slight loss of quality in the transmission, but the transmission is not interrupted. If the same packets were lost over a TCP connection, TCP would stop delivery of further packets until the lost packets are successfully been retransmitted. This would cause an unacceptable break in the flow of the application.

Therefore, UDP thus gives streaming applications greater control over the data flow than TCP.

These characteristics mean that majority of the audio video applications use a combination of TCP and UDP where needed. Typically, call set-up and data flow control is carried out using TCP. The audio and video data is sent using UDP.

TIP: BGAN LaunchPad allows the configuration of error correction. Inmarsat recommends that you disable error correction for UDP applications. Refer to “BGAN LaunchPad Help” for details.

H.323

The H.323 protocol is defined by the ITU-T (International Telecommunications Union). It describes how real-time multimedia communications can be exchanged on packet-based networks. The standard was drawn up following collaboration between traditional telephony experts and those from the computer communications arena. In addition to fully-interactive media communications such as video conferencing, H.323 also has provisions for other forms of communication, such as multi-media streaming.

The complete specification documents can be found at <http://www.itca.org>.

During a point to point H.323 call, an initial TCP connection is made (using default port 1720). Data is exchanged over this connection (using Q.931 packets) to determine which port will be used for the actual multi-media connection. Once this port has been decided, an H.245 connection is made, to the new port.

The H.245 protocol handles all of the call parameter negotiations, such as which codecs to use. H.245 also has commands that make UDP connections. Once the audio and video codecs and parameters have been negotiated, the H.245 session starts the underlying data stream.

The data stream consists of an RTCP (Real-Time Transport Connection Protocol) connection (UDP), and the actual data stream which uses the RTP (Real Time Protocol).

The H.323 protocol covers all aspects of telephony and conferencing, including capability exchange, conference control, basic signalling, Quos, registration, service discovery, gateways etc.

SIP

SIP (Session Initiation Protocol) is defined by the IETF (Internet Engineering Task Force) and is a relatively simple protocol when compared to H.323. It is designed to be modular, allowing the protocol to be extended to cover specific applications.

SIP is defined as being responsible for basic call signalling, user location, and registration.

Whereas H.323 can operate in a peer to peer mode, two SIP users require a SIP server in order for them to communicate. SIP clients send a series of messages (defined in the Session Description



Protocol) to the server in order to set-up a call with another user. The client must first register with the server, then invite the other user to join a call. The SDP message will detail what is to be included in the call; audio, video, Codecs etc.

Once the call recipient has accepted the call by responding to messages from the SIP server, the actual data connection is set-up directly between the two SIP users. The data connection uses the RTCP and RTP protocols, as for H.323.

3.5. Protocol requirements

Both H.323 and SIP use the same data transport protocols to send and receive data across the BGAN network.

The applications that use these protocols use different encoding techniques however. In addition, the applications normally impose a higher level protocol to control the user session. For instance, whilst Yahoo Messenger and iChat may both use the SIP protocol for audio and video, the applications must first initiate a session using their respective Instant Messaging (IM) protocols with the IM servers.

In order to use either the H.323 or SIP protocols through a firewall, based on your computer or corporate servers, the following ports must be open. Due to the dynamic nature of the lower protocols, it may be necessary to allow the whole application access through the firewall, rather than rely on specific port entries.

Protocol	Ports
H.323	UDP ports 1718 and 1719 (discovery and registration of gatekeepers) TCP/UDP 1720 (call signalling) TCP 1300 (secure call signalling) TCP dynamic port 1024-65535 (H.245) UDP dynamic port 1024-65535 (RTCP) UDP dynamic port 1024-65535 (RTP)
SIP	TCP port 5060 (SIP) UDP dynamic port 1024-65535 (RTCP) UDP dynamic port 1024-65535 (RTP)

NOTE: When using a streaming IP connection from a mobile client to a fixed server, the above ports refer to the firewall protecting the fixed server (any firewall on the client must be correctly configured for outbound traffic).

4.0. Introducing broadcast solutions

This section details the setup of some of the professional broadcast solution tested over the BGAN network.

The solutions tested over the BGAN network include:

- Streambox ACT-L3 – Live and Store and Forward
- QuickLink – Live and Store and Forward
- Livewire M-Link – Live and Store and Forward
- Clipway – Store and Forward
- Canon WiFi Camera – Store and Forward Images (off the shelf)

- Nikon WiFi Camera – Store and Forward Images (off the shelf)

Each of the above applications is described in greater detail in the following sections.

4.1. Performance over BGAN

The solutions were all tested to ensure that they work over the BGAN network. Then a typical configuration was set up, and the application data stream examined to see how much bandwidth is required to run the application.

TIP: All these applications operate more effectively over a streaming IP connection than a standard IP connection. Note the following:

- Ensure that you choose a streaming IP connection that matches the data requirements or settings of your application. Leave some capacity for IP overheads when selecting the bandwidth. Some of these solutions now have a built-in BGAN profile for ease of use.
- Do not leave the application (or the streaming IP connection) active when not in use.

In addition to Live broadcast, some of these solutions also offer Store and Forward capability for sending high quality video in highly compressed format without compromising on picture quality.

File sizes and transmission times

The following table shows the typical file sizes and approximate transmission times of a 250MB, 1 minute DV file, using different encoding rates.

Encoding rate used to compress file	Approx. compressed file size *	Approx. transmission time over BGAN 256kbps connection
750kbps	6MB	4-5 minutes
1Mbps	8MB	5-6 minutes
1.5Mbps	12MB	7-8 minutes
2Mbps	16MB	9-10 minutes

* May vary from solution to solution.

Note that the actual transmission time is fundamentally determined by a number of factors including data channel rate, video sequence length, physical signalling overhead, Layer 4 transport and transmission protocol overhead (i.e. TCP overhead), error checking, protocol headers and handshaking negotiation procedures like "TCP slow start". Also, the transmission speed varies between solution to solution due to the different type of compression and transport protocols used.

4.2. General recommendations

The following recommendations apply to all video broadcasting solutions over BGAN:

- Make sure that you have pointed the terminal correctly – the terminal must have unobstructed line of sight and maximum possible signal strength before network registration
- Make sure you are using a higher streaming IP class QoS for higher quality video.
- Make sure your Distribution Partner has a dedicated last mile connection to ensure end-to-end QoS,
- Use the Ethernet Interface to achieve high transmission speed.



- Make sure that you have chosen the correct protocol. Inmarsat recommends UDP.
- Make sure that for a UDP-based live broadcast, you use BGAN LaunchPad to switch off packet retransmission for your streaming IP connection before you open the streaming IP connection.
- Make sure you switch off any windows or MAC auto download while doing live broadcast
- Test your solution before take it out in the field.
- Use a correct format camera, that is PAL or NTSC
- Configure your decoder with a static IP address that can be accessed from the BGAN terminal.
- Inmarsat recommends that you do not use any VPN connection for live broadcast as it can add extra VPN overhead of between 10-40% based on your VPN application

5.0. Setting up Streambox ACT-L3


Streambox® ACT-L3™ and Inmarsat BGAN provides the ideal mobile solution for live satellite news gathering. The high compression, low latency video transport system delivers unrivalled quality over the BGAN network. Streambox enables you to deliver live or stored video whenever and wherever it is needed.

The Streambox BGAN News Gathering solution consists of the following:

- Streambox Portable Encoder(s).
 - Streambox Portable Encoder (laptop format).
 - Streambox SBT3-7500 Encoder.
- Streambox Distribution Server(s).
- Streambox SBT3 Decoder(s).
 - Streambox SBT3-5100 Decoder.
 - Streambox SBT3-7100 Decoder.
- Streambox IFB Client(s).
- Streambox IFB Server(s).
- Streambox Store and Forward.

The Servers and Decoders are typically located at the studio. The Portable Encoders, or the SBT3-7500 Encoders, are located on the client side. The camera is connected to the Portable Encoder via a firewire (IEEE 1394) cable. The SBT3-7500 Encoder features SDI and composite analogue video input. The Encoders use any standard user interface to connect with the BGAN terminal, for example Ethernet, USB or WiFi.

The video is captured, compressed, and transported using Streambox's advanced video compression codec, ACT-L3, which is ideal for transmission over the BGAN network. In a simple configuration, the studio receives the stream, which is decoded by the Streambox Decoder(s) for live on-air broadcast.

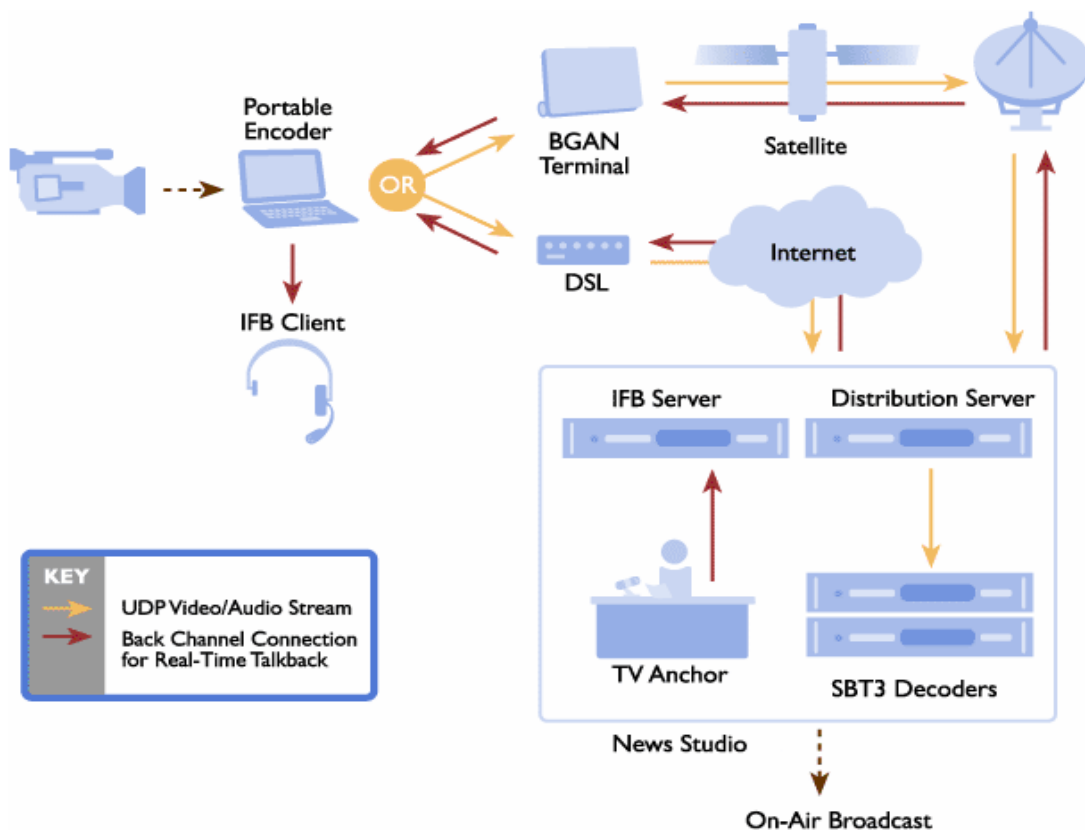

Streambox end-to-end configuration

The Streambox Distribution Server is capable of receiving multiple streams from multiple BGAN terminals located at separate locations around the world, and of delivering video to several Streambox Decoders. The Streambox® IFB Server is used to provide a real-time low latency talkback channel from studio to field reporters, using the BGAN back channel.

Prerequisites

To get the highest quality from live streaming, Inmarsat recommends that you use a dedicated streaming IP connection directly from the distribution partner to your Headquarters/Global Network. Inmarsat only guarantees BGAN streaming connections up to the distribution partners' point of presence (POP). There is no control of quality if the stream is routed over the public Internet.

For the highest quality video, use the 256kbps streaming IP connection, which is offered on both the HNS 9201 and the Thrane & Thrane EXPLORER 700.

Inmarsat recommends that you use BGAN LaunchPad to interfacing with the terminal of your choice.



Equipment Required

- Streambox Portable Encoder (MAC or Windows compatible), or Streambox STB3-7500 Encoder.
- DV camera for Portable Encoder, or Analogue/SDI camera for STB3-7500 Encoder.
- BGAN terminal.
- Streambox STB3-5100 or Streambox STB3-7100 Decoder.
- Optional components:
 - Streambox Distribution Server.
 - Streambox IFB Server.
 - Streambox Store and Forward

5.1. Setting up the client for Live broadcast

To set up the client for live broadcast:

1. Install BGAN LaunchPad on the Streambox Encoder.
2. Launch the Streambox Encoder. Streambox video transport solutions enable you to customize settings. This optimises live video streaming over the BGAN streaming class service. The recommended settings are usually preloaded as 'Presets' on the Streambox Encoder.
3. The chart below lists the recommended settings for optimal quality over the BGAN streaming IP connection. Please configure your Streambox Encoder as follows:

Settings	M4 Phone 64kbps	BGAN 128kbps	BGAN 256kbps	BGAN 256kbps - CIF
Target Bitrate	55kbps	110kbps	220kbps	220kbps
VBR Buffer Size	0.8s	0.8s	0.5s	0.8s
FEC	Off	Off	Off	Off
Video Resolution	QVGA	QVGA	QVGA	CIF
Color Profile	4:2:0	4:2:0	4:2:0	4:2:0
Closed Captions	Off	Off	Off	Off
Prefer Quality o/Frame Rate *	300/40	300/40	300/40	300/40
Frame rate	1/3	1/2	1/2	1/2
Change Key Frame	300	300	300	300
Min-Max Filter	Off	Off	Off	Off
Soft Filter	Off	Off	Off	Off
Overlapped DCT Filter *	On	On	On	On
De-interlace **	Off	Off	Off	Off
Swap Field Order	Off	Off	Off	Off
Monitor CPU Usage	Off	Off	Off	Off



Live Preview	Off	Off	Off	Off
Audio Codec	CELP	CELP	CELP	CELP
Audio Channels	Mono	Mono	Mono	Mono
Audio Capture Frequency	48000kHz	48000kHz	48000kHz	48000kHz

* - these options require progressive video. QVGA and CIF are progressive (half-field).

** - 1/2.... DI requires de-interlacing with (*)-options ON.

4. Open the **Presets** menu, and store the settings for your 256 Kbps BGAN connection.
5. Enter a destination IP address (Decoder or Server), in the **Network** menu. It is also recommended that you change the packet size to 1360 in the same menu.
6. Open a BGAN streaming IP connection using BGAN LaunchPad. The video will automatically stream to the Decoder (destination IP address). However, the local image will not get updated unless you select **Live Preview** from the Encoder's video menu.

NOTE: Make sure that you are using the correct broadcast standard for your camera. You can toggle between PAL, NTSC and NTSC-Japan. An inappropriate setting could result in black and white or scrolling video.

5.2. Setting up the IFB client

To set up Streambox IFB client:

1. Launch Streambox IFB Client.
2. To setup IFB Client for the first time:
 - Click on IFB Server button.
 - Type in the Server's IP address.
 - Type in a password (default password is **empty** word).
 - Click on **OK**.
3. Select the appropriate IFB channel to listen to audio. You can select additional audio devices, such as USB or Bluetooth, from the **Audio** menu. Audio devices/drives should be installed separately using Windows or Mac OSX standard procedures.

5.3. Setting up the client for Store and Forward broadcast

To set up the client for store and forward:

1. Select **Store to file** from the Encoder's **File** menu to start recording live video. You can use higher bandwidth than 256 Kbps for store and forward recording; usually 1 to 3 Mbps bandwidth is used for Full DI.
2. Click **Stop Recording** when the video is captured.
3. Open the Streambox File Transfer Tool (FTT).
4. Select **Remote Server IP** using the FTT interface.
5. Select **Recorded File**, and click **Upload** to start data transfer.
6. Once file is transferred, use **Playback Remote** to play out the video file.

Refer to the Streambox Store & Forward User Manual for details.

5.4. Setting up the server

The set up of the Streambox Distribution Server is beyond the scope of this document. Please note that video and audio is sent via the IP/UDP port. Usually, Streambox uses UDP port 1770 for direct



streaming to the Decoder. The UDP port range 3700-5100 is used when streaming to the Distribution Server. This means that multiple Encoders can send video to a single IP, but to different port numbers. The Distribution server interface enables you to monitor which Encoder(s) are sending video, and to redirect to the appropriate Decoder(s). A user-friendly web interface is provided for this purpose.

5.5. Recommendations/Optimizations

- Remember to switch off error correction in BGAN LaunchPad before you open a streaming IP data connection using LaunchPad.
- Use the 256kbps streaming IP connection, if available, for the best video quality.

6.0. Setting up QuickLink

QuickLink® News Broadcaster is the network-efficient and cost-effective way of transcoding and delivering high quality media for both Live and Store and Forward broadcasts over BGAN. The unique design of the Quicklink system when combined with BGAN enables you to choose the functionality and features to meet your precise media-encoding transmission requirements.

Prerequisites

As a minimum, you must have the following equipment:


- DV Camera, or Analogue camera with DV converter.
- QuickLink Encoder (Windows laptop).
- BGAN terminal.
- QuickLink Decoder (studio room).

To get the best possible quality from live video streaming, Inmarsat recommends that you use an end-to-end, dedicated streaming IP connection directly from your Distribution Partner to your headquarters/global network. Inmarsat only guarantees streaming connections up to the Distribution Partner's point of presence (POP). Inmarsat cannot control quality of service if the stream is routed over the public Internet.

For the highest quality video, use the 256kbps streaming IP connection, offered on both the HNS 9201 and the Thrane & Thrane EXPLORER 700.

Inmarsat recommends that you use BGAN LaunchPad to interface with the terminal of your choice.

Network and Connectivity Options

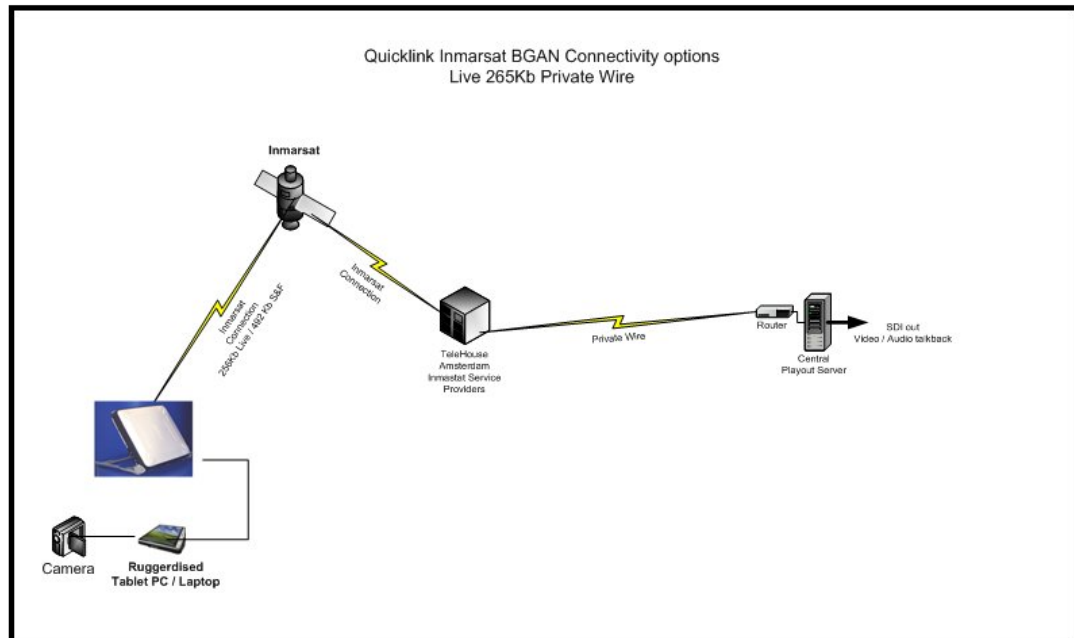

The solution consists of a decoder box which is kept at the studio, and a software encoder which can be loaded onto a laptop (at the client side). Connect the camera to the software encoder using a firewire cable. Connect the laptop to the BGAN terminal using any standard interface, such as Ethernet (recommended), USB and WiFi.

The video is captured and compressed using QuickLink's proprietary codecs, optimized for transmission over the BGAN network. The studio then receives the stream which is decoded in the QuickLink server, ready for a Live ON AIR broadcast. The decoding server is capable of receiving multiple streams from multiple BGAN terminals, which could be located at a number of locations around the world.

6.1. Setting up the client encoder

Before you start, make sure that BGAN LaunchPad is installed on the Streambox encoder.


To set up your QuickLink encoder:

1. Connect the camera to the computer, and ensure that it is configured properly.
2. Start up QuickLink.
3. Select the **Creation and Transmission** Application on the computer.
4. Select one of the following options:
 - **Capture Video** – for Store and Forward. Captures a video, encodes it, and then sends it to the server immediately, or later. Refer to Store and Forward, below.
 - **Import Video File** – imports a video file (pre-encoded) from the hard disk, and sends it to server.
 - **Send/View File** – sends a previously recorded video, or enables viewing before sending.
 - **Live Broadcast** – starts a Live broadcast to the server.

6.2. Setting up a server address

Before sending a video or live broadcast, you must specify the server address. To do this:

1. Select **Settings > Connections** on the main toolbar. The following window is displayed.

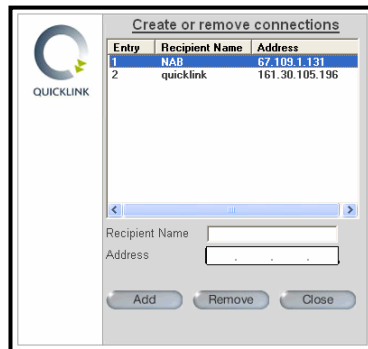


2. Add the name for the recipient server (your QuickLink decoder), and its IP address.

6.3. Making a Live broadcast

To make a live broadcast:

1. Select the **Live Broadcast** option. The following screen is displayed:

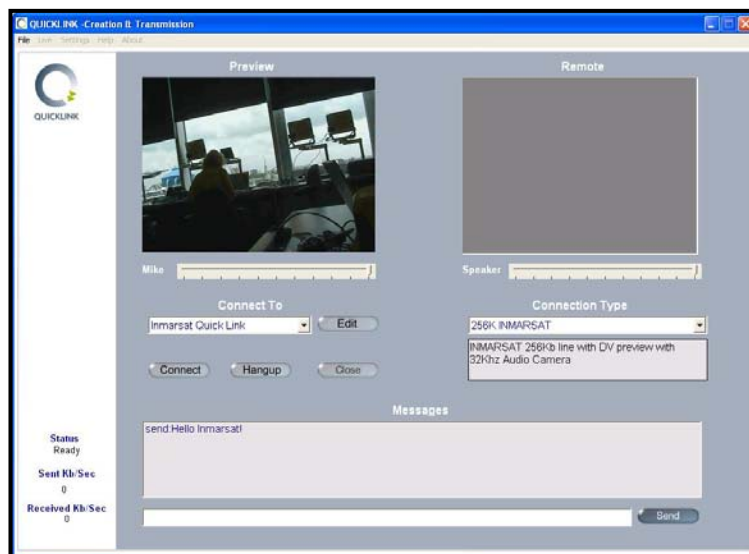


2. Select the appropriate **Connection Type**.
3. Select the recipient.
4. Click **Connect** to start your live broadcast. You can also send messages to server using the text box at the bottom of the window.
5. Once the broadcast is complete click **Hangup** to disconnect, and **Close** to return to the main screen.

To receive live broadcasts or video feeds, start up the server application **QuickLink Live Start**.



QuickLink Live Start is used for live broadcasts and must be active before a broadcast is started from the remote (BGAN terminal) end. The following screen shot shows the interface on the server side. BGAN

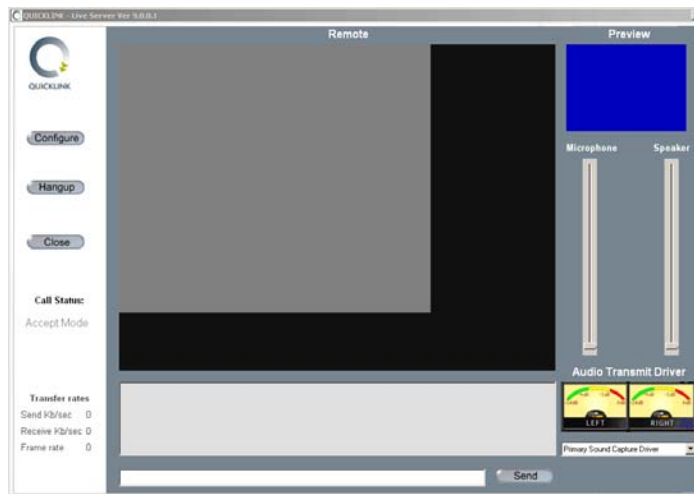

6.4. Making a Store and Forward broadcast

To store and forward a video to the server, you must first either capture a video or import one.


To import a video, simply select **Import Video File**.

To capture a video:

1. Make sure your camera is connected to the computer.
2. Select **Capture Video** to display the capture window.
3. Change the **Capture Mode** on the main toolbar to **Capture** (instead of Preview), and click on the red **Record** button on the video toolbar.
4. Once recording is complete, click on **Stop** and exit the window via the **File** menu on the main toolbar. You are now prompted to select the encoding rate for compression.
5. Inmarsat recommends **2 MB 2 Pass** for general broadcast quality but you can select another option if it is more appropriate.
6. Once encoding finishes, you are prompted to enter information about the clip, as shown below:

7. Complete the required fields, and select **Continue**. You are prompted to select the recipient (decoder) for the video if you want to send it immediately.

If you want to send it later, use the **Send/View Video** option. To use this option, select the file to be transmitted (you can also play it in the viewer to double check), and then select the recipient (decoder IP address) in the **Send To** option. Then simply click **Send**.

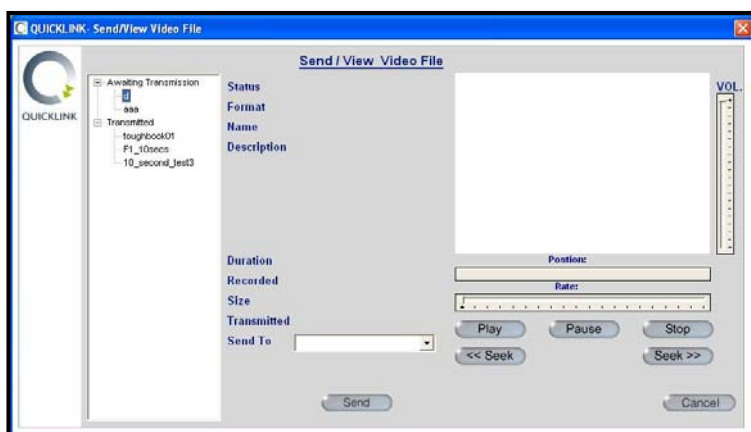


6.5. Recommendations/Optimisation:

Remember to switch off error correction before you establish a streaming IP connection

7.0. Setting up Livewire M-Link

Livewire M-Link solution is based on the latest H.264 AVC codec, an industry standard video codec that has seen a steady rise in adoption by companies such as Apple, Sony, Intel, Motorola and Tandberg. H.264/AVC is key to the delivery of High-Definition TV and offers stunning performance over limited bandwidth connections. Livewire has an integral support for establishing the requisite BGAN IP service for Live and Store and forward workflows. This provides a simple one click operation through one single M-Link user interface.

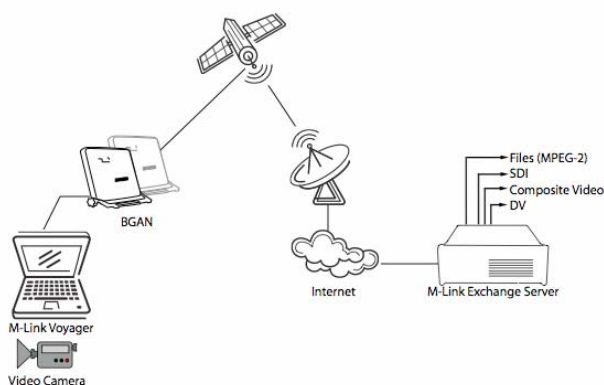

Livewire M-Link end-to-end configuration

The solution consists of a decoder box which is kept at the studio, and a software encoder which can be loaded onto a laptop (at the client side). Connect the camera to the software encoder using a



firewire cable. Connect the laptop to the BGAN terminal using any standard interface, such as Ethernet (recommended), USB and WiFi.

The video is captured and compressed using Livewire H.264 AVC codecs, optimized for transmission over the BGAN network. The studio then receives the stream which is decoded in the Livewire server, ready for a Live ON AIR broadcast. The decoding server is capable of receiving multiple streams from multiple BGAN terminals, which could be located at a number of locations around the world.

Prerequisites

As a minimum, you must have the following equipment:

- DV Camera, or Analogue camera with DV converter.
- Livewire M-Link[®] Encoder (Windows laptop).
- BGAN terminal.
- Livewire[®] Decoder (studio room).

To get the best possible quality from live video streaming, Inmarsat recommends that you use an end-to-end, dedicated streaming IP connection directly from your Distribution Partner to your headquarters/global network. Inmarsat only guarantees streaming connections up to the Distribution Partner's point of presence (POP). Inmarsat cannot control quality of service if the stream is routed over the public Internet.


For the highest quality video, use the 256kbps streaming IP connection, offered on both the HNS 9201 and the Thrane & Thrane EXPLORER 700.

Inmarsat recommends that you use BGAN LaunchPad to interface with the terminal of your choice.

7.1. Setting up the M-Link client encoder

To set up your computer and BGAN terminal for M-Link:

1. Install M-Link onto your computer.
2. Use a Firewire cable to connect your camera to the computer running M-Link.
3. The M-Link interface detects your BGAN terminal and will automatically register the terminal on the network
4. For Store and Forward:
 - a. Click on **Capture and acquire the video**, then click on **Encode** (make sure you select correct encoding rate for the transmission speed), select the BGAN service required and then click on **Transmit**.
5. For Live broadcast:
 - a. Click on the **Live** icon.
 - b. Select your destination
 - c. Select the encoding profile and the Streaming IP service, at one of the following data rates: 32kbps, 64kbps, 128kbps or 256kbps. (The available data rates depend on the terminal you are using.)

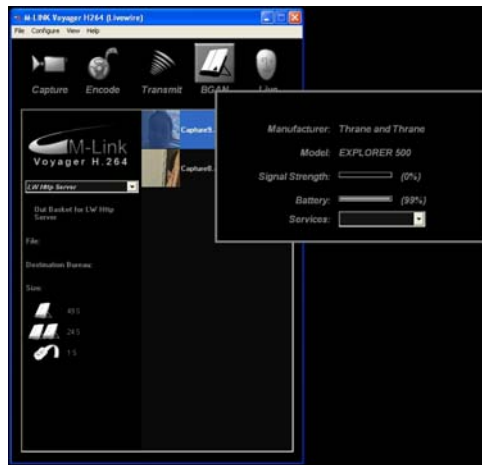

7.2. Setting up the server


To receive live broadcasts or video feeds from the remote side you just start up the server side applications

7.3. Recommendations/Optimization

Remember to switch off error correction before you establish streaming class connection.

8.0. Setting up Clipway (Store and Forward)

Clipway is a Store and Forward application which has built-in capture, compress and transfer capability integrated into one streamline application. Clipway differs from other off-the-shelf applications in that it not only works with terrestrial networks and existing satellite products, but is also customized for optimal performance over BGAN.

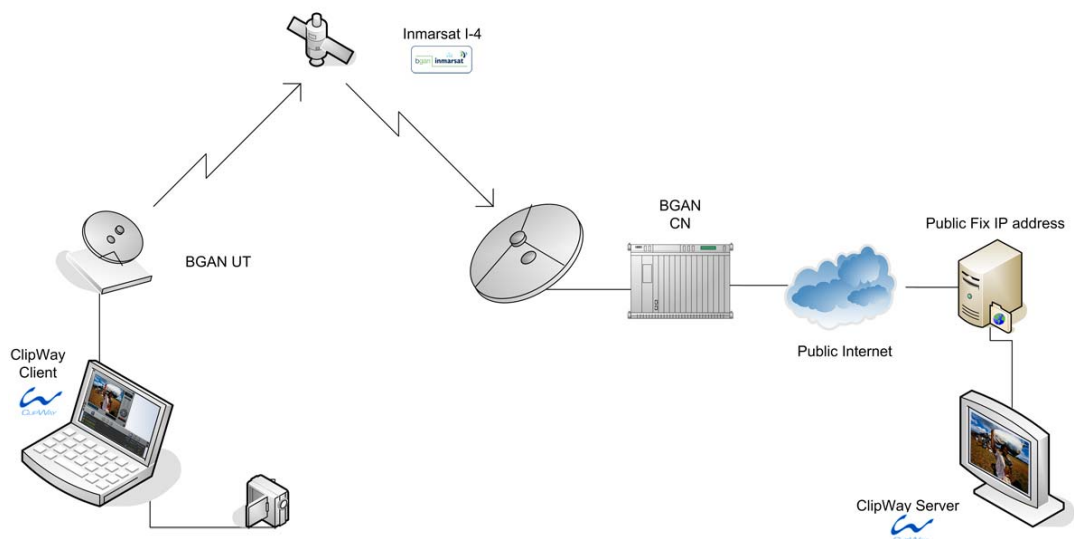

The solution consists of a server side software application which is kept at the studio, and a software encoder which can be loaded onto a laptop (at the client side). Connect the camera to the software encoder using a firewire cable. Connect the laptop to the BGAN terminal using any standard interface, such as Ethernet (recommended), USB and WiFi.

The video is captured and compressed using Clipway WinMedia 9 codecs, optimized for transmission over the BGAN network. The studio then receives the file on Clipway server for editing.

Prerequisites

As a minimum, you must have the following equipment:

- DV Camera, or Analogue camera with DV converter.
- Clipway client (Windows laptop).
- BGAN terminal.
- Clipway server (studio room).


Inmarsat recommends that you use BGAN LaunchPad to interface with the terminal of your choice, and that you open your IP data connection using BGAN LaunchPad.

8.1. Setting up the client

The following is the main interface of Clipway:



To set up Clipway client

1. If you haven't done already, connect your DV camera to the PC. If the camera is not connected or has not been detected the camera icon will remain greyed out.
2. Once the camera is connected to the computer, click the capture button . This will open up the capture window. You can control the video in the capture window by using standard video controls.



3. Once you are ready to capture, press **Play** and then press the **Record** button on the bottom right. The button will display a red light to show that it is actively recording. The timers will only work when there is a cassette in the camera.







4. Once you have finished recording, press the **Record** button again to stop recording. The captured file will appear on the main interface window with a filename in green text meaning that it is a raw DV capture.
You can change the filename by double-clicking on it, and you can also add a short description of the video.

Note the following:

- Clipway gives an estimate of the transmission time, based on a connection speed of 250kbps (you can change this on the transmit screen once the video is encoded/compressed).
- To see the estimated size of the file, or to see the size of any file or attachment, click on the **Transmission duration** column. This will toggle to show the File sizes instead.

Now that the video is captured it needs to be compressed and encoded. To do this:

1. Select the raw video that you want to encode and click the Compress button . The 'Compression' window is displayed.
Note the following:
 - Clipway has four compression rates for you to select from depending on your desired quality of service, and makes two passes to ensure quality. The higher the quality the larger the file will be and the longer it will take to transfer the file. The estimated transmission time will adjust accordingly to your selection.
 - Clipway will automatically detect the video standard of the video input i.e. NTSC/PAL, the video standard will be denoted with an N or a P.
2. Click the **Compress** button on the compression window to compress the file. On the main window another video displays in blue to indicate that video has been compressed. You can now transmit the video.
3. To transmit the video click on the **Transmit button** . The transmit window is displayed.
4. To configure where to transmit the video click the settings button .
You can now enter a name for the server and an IP address. Select the BGAN radio button and enter one of the following into the **Speed Kbits/s** text box. The speed entered here is only to give you an estimate of the transmission time and will not affect the actual throughput of your transfer.
 - 230k for a 256kbps streaming connection
 - 110k for a 128kbps streaming connection
 - 56k for a 64kbps streaming connection
 - Xx for a standard connection.
 Once the settings have been entered press the settings () button again to close the screen.
5. Click the **Transmit** button on the transmit window to begin the transfer. You can view what the estimated remaining time is by clicking on **Connected time** to toggle to remaining time. The Speed reported is the average over the entire transfer. To see current throughput you must view the throughput reported on the server side.



Note the following:

- If the connection does not connect make sure that the server side application is open.
- Clipway supports multiple input streams simultaneously. If the connection fails or needs to be terminated prematurely for whatever reason you can resume the transfer from where you left off.
- The Clipway server also allows you to play out incomplete or mid transfer files. So you can preview a file as it is still coming in or play out the amount of video that has been received. This means that a video transmission that fails in the last few seconds does not need to be scrapped, it can still be used with full quality.

9.0. Setting up the Canon WiFi camera (Store and Forward)

The combination of the Canon Digital IXUS Wireless camera and BGAN is the ultimate low cost solution for journalists. You can take Super High Quality 5 Mega Pixel pictures and transmit them anywhere in the world, instantly. There is no need to manually FTP or email back to HQ, the pictures are automatically uploaded to the destination seconds after you press the shoot button.

Prerequisites

As a minimum, you must have the following equipment:

- BGAN terminal with WiFi.
- WiFi 802.11x compatible computer.
- Canon camera and memory card.
- Third party, auto-upload software

Resources used over BGAN

Inmarsat tested this solution over a Standard IP data connection. The cost of transmission depends on the resolution and quality you choose.

Resolution	Quality	Approx JPG file size	Approx images on 512MB card
Large (2816 x 2112)	Superfine	2.7MB	176
	Fine	1.6MB	292
	Normal	780KB	603
Wide (16:9) 2816 x 1584	Superfine	2.0MB	235
	Fine	1.2MB	392
	Normal	585KB	794



Medium 1 (2272 x 1704)	Superfine	2.0MB	237
	Fine	1.1MB	425
	Normal	556KB	839
Medium 2 (1600 x 1200)	Superfine	1002KB	471
	Fine	558KB	839
	Normal	278KB	1590
Small (640 x 480)	Superfine	249KB	1777
	Fine	150KB	2747
	Normal	84KB	4317

Recommendations

- The Canon WiFi Camera only works with Windows XP SP2 at the moment.
- Inmarsat recommends a standard IP data connection to send images.
- Use TCP/PEP for faster uploads, in particular when sending small individual files.

9.1. Setting up the Camera

You can only connect the Cannon WiFi camera through Wireless connections to HP-compatible printers or computers. So you also must have a computer connected to the BGAN terminal. The camera transfers the images to your computer, then a third-party application automatically uploads the images over BGAN.

There are a number of applications that you can buy that will automatically sync files. Inmarsat has found two freeware/shareware applications:

- Goodsync, available from: <http://www.goodsync.com/>
- Netdrive, available from: <http://www.acs.uwosh.edu/novell/netdrive.htm>

Currently, Goodsync does not support FTP natively. However, you can use third-party software adapters that transform Internet folders into local drives on your computer. Inmarsat recommends using the free utility available from Novell, Inc called NetDrive.

To set up this software for use with the camera:

1. Download both these pieces of software, and install them.
2. Configure Netdrive as follows:
 - a. Launch Netdrive and click on **New Site**.
 - b. Enter the information for your FTP Server, and select a free Drive letter. Netdrive will create a virtual drive on your computer which is your FTP server.
3. Configure the camera as described below. A description of how to configure Goodsync is given later.


Configuring the Camera

The first time you use the camera to upload data over BGAN, you must configure the camera. To do this:

1. Connect the camera to your computer using the USB cable.
2. Turn on the camera in Playback mode.
3. Once the camera is turned on, press the **Menu** button on the back of the camera. This opens the display menu.



4. Press the right button (labelled Set Flash in the image below) to display the wireless menu.

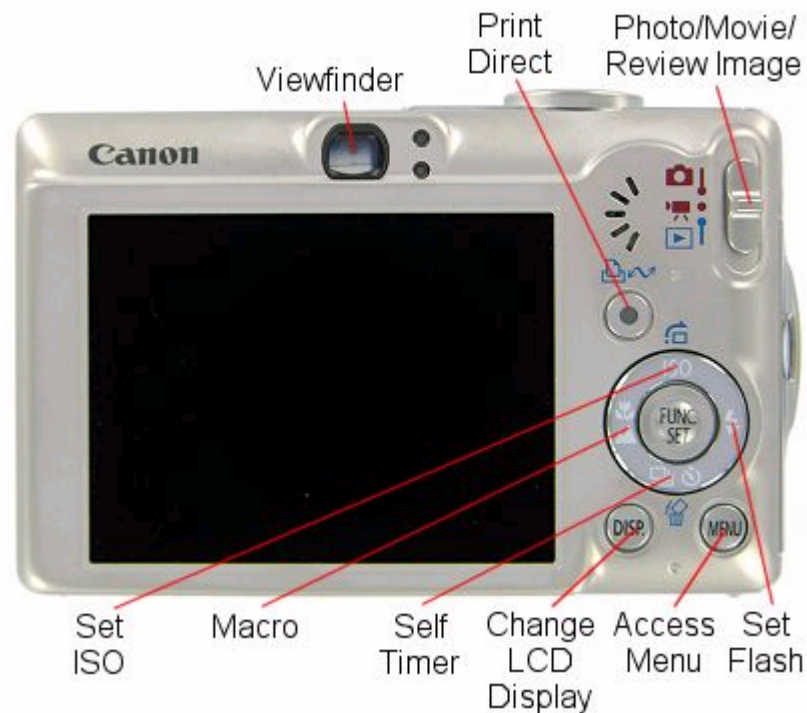


5. In the wireless menu, click **Reg. Target Device...** This launches the Wireless setup Program on your computer.
6. Follow the on-screen instructions for setting up your connection. Name your connection and enter the SSID of your BGAN device. Remember also to select an **Infrastructure** connection and not an **Adhoc** connection. Also choose a suitable location where the files will be stored on your computer.
7. Once this is done the camera's LCD display returns to the wireless menu. Select the **Auto transfer** option, and switch on the camera. The Auto transfer option is only available when you have successfully connected to your chosen SSID.

Now, when you take a picture, it is instantly transferred to your computer.


NOTE: Each time you want to use the camera in wireless mode you will need to return to the Wireless menu and connect the camera to the SSID.

The camera configuration is complete. The last thing to do is setup Goodsync for automatic transfer. To do this:

1. Open up Goodsync.
2. Click on **Browse**, and select the local directory that receives the camera images (you selected this directory as part of the camera set up process, described above).

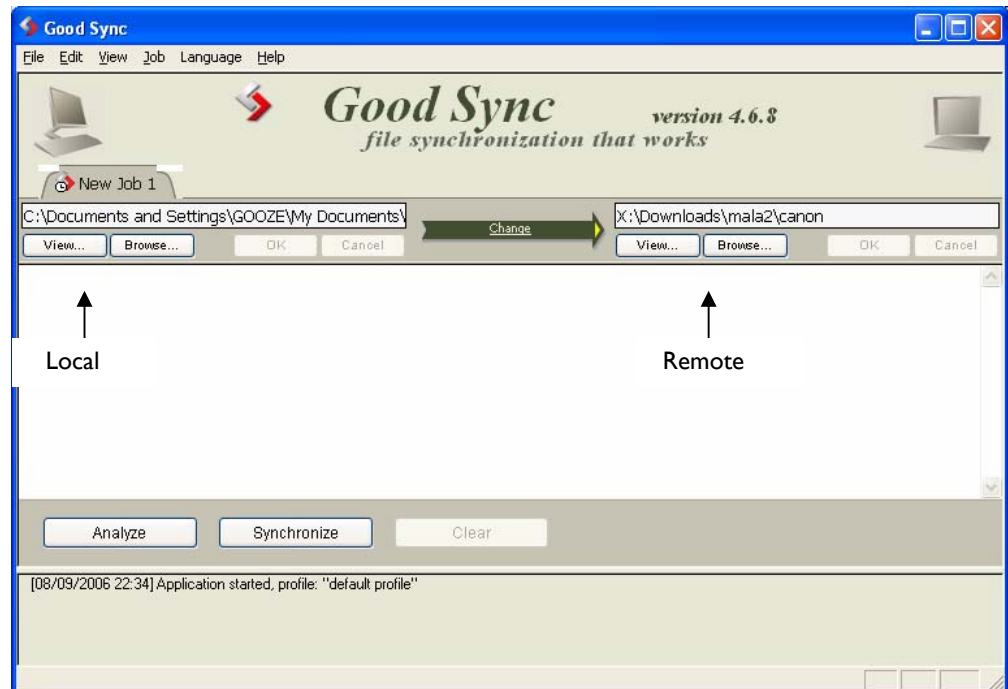

3. Click on the remote **Browse** button, and select the virtual drive that you created at the start of this guide using Netdrive.
4. Enter the directory on the FTP server that you want to upload your images to.
5. Click on the large green arrow in the centre of the screen. Change the radio buttons so that the arrow points from the local to the remote side exclusively.
6. From the menu at the top click on **view >>options**.
7. From the options page click on **Automatic Synchronization**.
8. Check the box next to "When file changes are detected", and from the drop down box select **minute**.

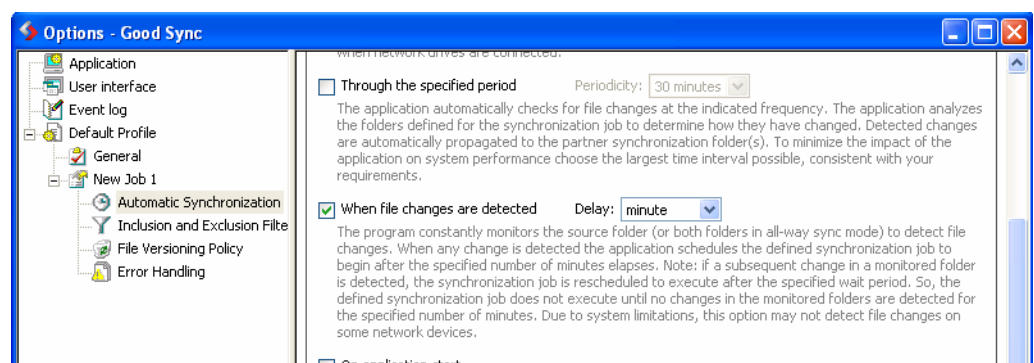

9. Click **Apply**, then **OK** to finalise the changes.
10. Open BGAN LaunchPad, and open the required IP data connection.

You can now start taking pictures. Goodsync automatically checks the server, and uploads any new images every minute.

10.0. Setting up the Nikon D2H WiFi camera (Store and Forward)



Nikon's Professional D2H SLR camera over BGAN can keep you on top of breaking news with the click of a camera. BGANs WiFi connectivity enables you to use the Nikon D2H to transfer images directly from the camera immediately after taking the shot, so that you can be among the first to get your images back to the office and into the press. As long as you are within the 300m (depending on environmental conditions) wireless range of the BGAN terminal, you can continue taking pictures knowing that they are automatically getting sent back to headquarters.

NOTE: You must have the Flash card (memory) in the camera for this solution to work.

Prerequisites

As a minimum, you must have the following equipment:

- BGAN terminal with WiFi.
- Nikon D2H camera with WiFi pack.
- Memory card.
- FTP server address.

10.1. Configuring the camera

To set up the Nikon D2H WiFi camera

1. Turn on the Nikon Camera, and press **Menu** on the back of the camera.
2. Go to the **Setup** menu, select **USB**, and change the USB option to **FTP**.
3. Turn off the camera, and connect the WT-1 wireless access point pack.
4. Plug in the USB cable, remove the protecting rubber cover on the bottom of the camera and secure the locking wheel on the WT-1. If the WT-1 wireless access point is connected properly the Power light on the access point should go green.
5. Turn the camera back on and return to the setup menu. There will now be a 'Wireless LAN' option in the setup menu.
6. Select **Wireless LAN**, and make sure that
 - The 'Transceiver' is on
 - Auto send is switched on
 - You have selected the type of file you want to send

NOTE: Sending Images as NEF produces very large File sizes, which take longer to send.

Network Settings – Camera Wireless Settings

You will also need to set up the camera to talk to the HNS 9201 or the Thrane & Thrane EXPLORER 700. You can do this by going to **Network Settings** in the **Wireless LAN** menu.



NOTE: Make sure that you have turned on the wireless interface on the BGAN terminal, and that you know the SSID

To set up the camera wireless settings, select the **Wireless** option, and make sure that you:

- Change the Communication mode to 'Infrastructure'.
- Change the SSID to the SSID of the BGAN terminal.
- Enter encryption the information under the **Encryption** menu, if encryption is set on the BGAN terminal.

You do not need to enter any information under **Channel**.



Network Settings - TCP/IP Settings

- Under **IP Address**, enter an IP address for the Camera.
 - For the HNS 920I, this must be in the 192.168.128.101 range.
 - For the EXPLORER 700, this must be in the 192.168.0.2 range. It is recommended that you use DHCP, and check the **Obtain Automatically** check box.
- Enter 255.255.255.0 for the subnet mask.
- Enter the gateway address for the BGAN terminal.
 - For the HNS 920I, enter 192.168.128.100.
 - For the EXPLORER 700, enter 192.168.0.1.
- If you are not using an IP address for you FTP server, you must enable DNS and enter a DNS address.
 - For the HNS 920I, open BGAN LaunchPad, and from the main menu select **Terminal > IP configuration**. Enter the address listed in upper field.
 - For the EXPLORER 700, the DNS address is 192.168.0.1.





Network Settings - FTP Settings

- **Server:** Enter the FTP server address that you want to upload the images to.
- **User:** Enter a username and password for the FTP server.
- **Proxy:** If you need to connect to the FTP server through a proxy, you must enter the details here
- **Advanced:** Enter Port information, and if you want to use Passive mode check the box next to PASV mode.

You are now ready to begin taking pictures with automatic transfers. As long as you are in range of the BGAN terminal, your pictures will be automatically be uploaded to your desired FTP site as you take them.

NOTE: Your BGAN terminal must be set to register and activate a standard IP data connection automatically

NOTE: As the WT-I Access Point draws its power directly from the camera, the battery will not last as long as you may be used to.

10.2. Setting up the BGAN terminal

This section explains how to set up the BGAN terminal for use with the Nikon D2H WiFi camera.

Equipment needed

- Nikon D2H camera.
- Nikon WT-I Wireless Access Point.
- HNS 9201 terminal, or EXPLORER 700 terminal.

HNS 9201

Set up the terminal to establish a Standard IP data connection automatically

EXPLORER 700

Point and register the terminal on the BGAN network, as normal.

When you take the picture, the camera should automatically open a PDP data connection and start to transfer your images. This is indicated by the blinking busy light on the WT-I access point.

11.0. Setting up a video broadcast connection in LaunchPad


Inmarsat recommends that you configure a data connection in BGAN LaunchPad that is dedicated to your video broadcasting application. You can then open a video broadcasting connection when required by clicking on an icon in BGAN LaunchPad.

To do this:


1. Open BGAN LaunchPad, and click on the **Data** icon:



A screen similar to the following is displayed:

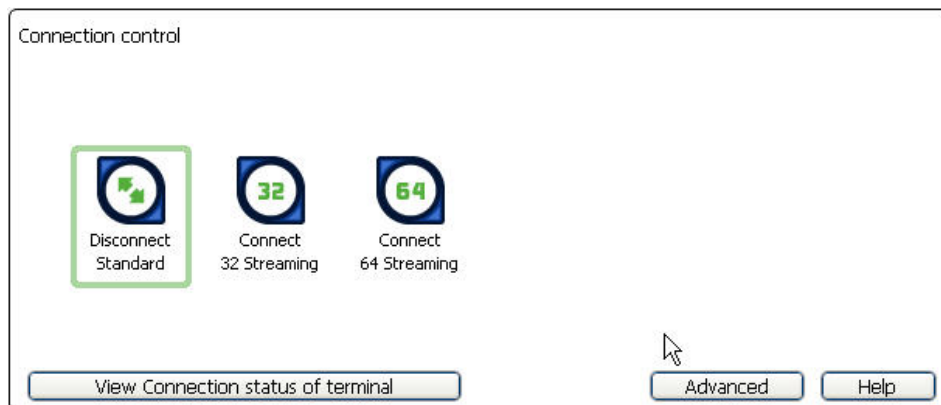

2. Click on **Advanced**. The following screen is displayed:

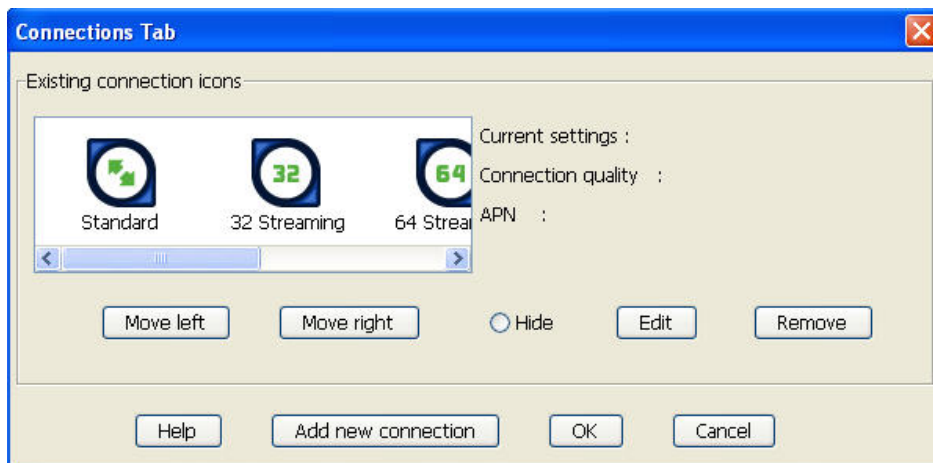

3. Click on **Add new connection**. The Connection Configuration screen is displayed.
4. Select Create new Dedicated IP Data connection, and click on **OK**. The Dedicated Connection Tab screen is displayed, as shown below:

5. From the **Icon** menu, select an icon to associate with your video broadcasting application. In the **Icon label** text box, enter a name for this connection, e.g. Quicklink, Streambox and so on.
6. Select the video broadcasting application you want to associate with this icon and icon label from the **Application Traffic Flow Template** check box. The traffic flow template ensures that only traffic associated with the application can use this dedicated connection.
NOTE: TFTs for Streambox and QuickLink are supplied with BGAN LaunchPad. Contact your Service Provider if you require a TFT for any other video broadcasting application.
7. Select the **Desired Rate** from the drop-down list. This is the QoS that you want to use for this connection.
8. Select the **Minimum Rate** from the drop-down list. This is the minimum QoS that you will accept for this connection. Inmarsat recommends that you set the Minimum Rate to the same as the Desired Rate, to ensure that you are allocated the data rate that you require.
9. If required, change the error correction setting. By default, error correction is switched off because UDP applications do not require re-transmission.



10. Click on **OK** to save these settings.

The new icon is displayed in the Data connections screen in BGAN LaunchPad. This connection is associated exclusively with your video broadcasting application. Your video broadcasting application does not share the connection with any other traffic.

To open the video broadcasting connection from BGAN LaunchPad, click on the icon that you created.

To close the data connection and the video broadcasting application (and therefore your broadcasting call), click on the video conferencing icon again.

NOTE: If you close your video broadcasting application only, the BGAN data connection remains open.

NOTE; You can also start a video broadcast call by connecting to the BGAN network using one of the pre-configured data connections, and then opening the video broadcasting application in the normal way. However, the video broadcasting application has to share this connection with other terminal traffic.

12.0. Support and feedback

For help with the BGAN service, contact:

Customer_Care@inmarsat.com

For feedback on this document, and suggestions for improvement, contact:

Nadeem_Khan@inmarsat.com
