



Centronics Drive

PC Card Drive for PC

with parallel interface

Thank you for deciding to buy an altec product. In order to ensure correct functioning and to avoid problems when installing this high-quality German-made product, please read the entire manual and carefully observe the following points:

- Observe the general guidelines when handling components or modules which can be damaged by electrostatic charge or discharge (this applies to the products described in this manual).
- If you should encounter any problems during the installation or use of this product, please contact our service department and ask for advice. If you do not do this, your guarantee rights may be impaired. Hotline: **+49-511-9 83 81-70** or **support@altec-computersysteme.com**

All rights reserved. No part of this manual may be reproduced, duplicated, transcribed, distributed or translated into another language without express written permission from altec ComputerSysteme GmbH.

The right is reserved to change specifications without prior notice. All trademarks mentioned are the property of the respective owners.



altec ComputerSysteme GmbH disclaims all liability for errors in this manual. Liability for direct or consequential damages which arise in connection with the use of this documentation is specifically excluded insofar as this does not contradict the law.

The Centronics Drive is manufactured to EMC guideline 89/336/EEG and is CE compliant and CE certified to EMVG.

Table of contents

1.	Introduction	4
1.1	Product description	4
1.2	Features	4
1.3	Scope of delivery	4
2.	Hardware installation	4
2.1	Power supply	5
2.2	Data interface	5
2.3	Connecting a printer to the same parallel port	5
3.	Connectors	6
4.	Software installation	6
4.1	Installation under DOS	6
	a) Loading the driver with an entry in CONFIG.SYS	6
	b) Loading the driver from a DOS command line	6
4.2	Installation under Windows	7
4.2.1	Installation under Windows 95/98	7
4.2.2	Installation under Windows NT	8
5.	Using the Centronics Drive	9
5.1	Inserting/removing a PC Card	9
6.	Technical specifications	10
7.	PC Card memory media	11

1. Introduction

1.1 Product description

The altec Centronics Drive makes it easy to read from and write to PC card storage media and is suitable for use in industrial environments. It supports all popular card PC Card ATA or SRAM storage media and PC Card hard disks and has a single PC Card Type III slot at the front. CompactFlash and MultiMediaCards are also supported with an optional adapter.

The Centronics Drive is connected to your PC using the standard parallel printer port.

The Centronics Drive is manufactured as an external device and features fast data transfer. It is ideal for exchanging data between portable and desktop computers and for easy access to image files produced by digital cameras.

1.2 Features

- ◆ External device with robust aluminium desktop case fitted with 50-pin HD socket
- ◆ Fast data transfer at up to 1 MByte/s
- ◆ 1 PC Card slot for Type I and II PC Cards or Type III hard disks
- ◆ Supports SRAM and ATA Flash cards of any storage capacity
- ◆ Drivers supplied for MS-DOS, Windows 95/98, Windows NT
- ◆ Automatic detection of ATA and standard SRAM/Flash cards
- ◆ Automatic memory size detection of unformatted PC cards

1.3 Scope of delivery

- ◆ PC Card Drive in desktop case, external plug-in power supply
- ◆ User manual
- ◆ Support Diskette with drivers for DOS, Windows 95/98 and Windows NT
- ◆ Optional: Keyboard adapter for the power feed as an alternative to using the external power supply

2. Hardware installation

Please note the following when installing the Centronics Drive:

2.1 Power supply

Power is either provided by the supplied external plug-in power supply with mini DIN 6 connector or is taken from the PC's keyboard using the keyboard adapter (available as an accessory).

2.2 Data interface


Connect the supplied Y-cable to the parallel port of the PC (25-pin Sub-D female socket). Connect the middle of the cable to the 50-pin HD connector on the rear of the Centronics Drive. The third connector on the shorter side of the cable can be connected to a printer if required (see below).

The Centronics Drive can be connected to the PC at any time, even when the power is switched on. Under Windows 95/98 and NT, it is then necessary to restart the computer in order to load the driver. The driver can be loaded under DOS without restarting the computer (see below). You should first connect the Centronics Drive to the power supply before connecting it to the parallel port of the computer.

The Centronics Drive can be operated either with the slower (but more compatible) SPP mode of the parallel port or with the faster EPP mode. The latter mode requires an EPP-compatible parallel interface in the PC; most modern PCs now have EPP parallel ports. Make sure that the operating mode of the parallel port is configured for "EPP" or "EPP+ECP" in the PC's BIOS Setup program. The driver detects the configured mode automatically and uses the faster option if available.


2.3 Connecting a printer to the same parallel port

The supplied Y-cable allows you to connect the Centronics Drive and a second device with a parallel interface, e.g. a printer, to the same parallel port of the PC. With this arrangement, the Centronics Drive is connected between the PC and the printer as shown in the figure.

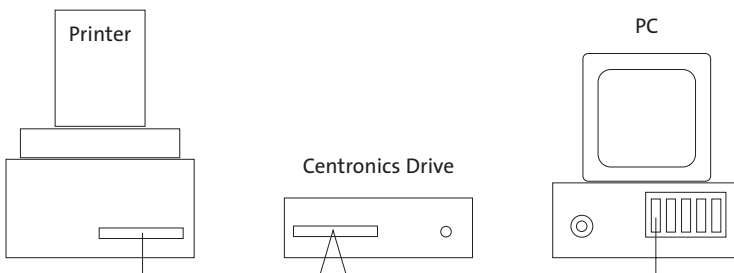

3. Connectors

As shown in the figure, all connectors are available on the rear panel of the device:
(switches S1 to S6 are currently unused)

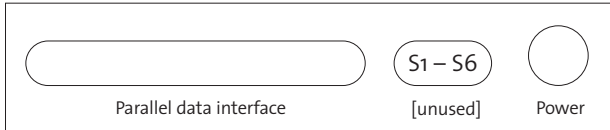

4. Software Installation

The Centronics Drive is installed in the operating system using the supplied driver and appears as an exchangeable drive with logical drive letter. When the driver loads, it checks all parallel interfaces in the PC for the presence of a Centronics Drive. The Centronics Drive must be supplied with power during this time.

4.1 Installation under DOS

Create a directory "altec" on the boot drive of the PC and copy all files from the DOS directory of the supplied Parallel Drive Support Diskette to the "altec" directory.

The driver "cdrive.com" can then be loaded in one of two ways:

a) Loading the driver with an entry in CONFIG.SYS

Use a text editor to add the following entry at any position in the CONFIG.SYS file on the boot drive of the PC:

```
device = \altec\cdrive.com
```

Now reboot the PC. This method has the advantage that the driver is automatically loaded each time the PC is rebooted.

b) Loading the driver from a DOS command line

Enter the following command line under DOS and press ENTER:

```
\altec\cdrive.com
```

This immediately installs an additional logical drive for the Centronics Drive.

- ⌘ The advantage of this method is that it is not necessary to reboot the computer. However, this procedure must be repeated each time the PC is rebooted because the driver is not automatically loaded in this case.

4.2 Installation under Windows

Under Windows 95/98 and Windows NT, the driver is installed using the hardware manager. The driver for Windows 95/98 and/or Windows NT allows the PC Card slot of the Centronics Drive to be accessed as a logical drive for exchangeable media (PC Cards). In addition to Type II ATA PC Cards and Type III hard disks, it is also possible to read, write and format SRAM PC Cards.

Prerequisites

If the Centronics Drive has already been installed under DOS, remove all entries for the Centronics Drive from the following files:

"config.sys" and/or "autoexec.bat".

4.2.1 Installation under Windows 95

Step 1: Start Windows 95

Step 2: Install the driver file as follows:

- ◆ Insert the supplied Parallel Drive Support Diskette in drive A:
- ◆ Start the hardware manager from the Control Panel.
- ◆ Choose the option "Do not search for new hardware".
You will now see a list of device classes such as modems, hard disk controllers etc.
- ◆ Choose the device class "SCSI Controller".
After a short delay, you will see a list of SCSI controller types which are already known to Windows.
- ◆ Click "Diskette" and confirm the prompt "A:" by clicking "Next".
You should now see the device listed as a virtual SCSI Controller as a single entry with the name "Parallel Drive Virtual SCSI Controller".
- ◆ Click "Next" to confirm that you want to install the driver.
- ◆ Click "Next" to confirm the prompt for the file "cdrive.mpd" with the default setting of "A:".



Windows will now copy the driver to the following subdirectory:

WINDOWS\SYSTEM\IOSUBSYS

Windows will now prompt you to reboot the computer. You should normally confirm this prompt with "Yes".

Step 3: Reboot the computer:

- ◆ After installing the driver, you must reboot Windows 95/98 in order for the driver to load. Make sure that the Centronics Drive is supplied with power, close all programs which are running and reboot Windows using the Start button.

4.2.2 Installation under Windows NT

Step 1: Start Windows 95

Step 2: Install the driver file as follows:

- ◆ Insert the supplied Parallel Drive Support Diskette in drive A:..
- ◆ Choose "SCSI Adapter" in the Control Panel of Windows NT.
You will now see a list of installed SCSI adapters. Click the "Drivers" tab and click "Add".
After a short delay, you will see a list of SCSI adapter types which are already known to Windows.
- ◆ Click "Diskette" and type the text "A:\WINNT" in the field "Copy manufacturer file from".
- ◆ Click "OK" to confirm your entry.
- ◆ Type the text "A:\WINNT" once again in the field "Copy file from" and click "OK" to confirm your entry.
Windows NT will now copy the driver "cdrive.sys" from the diskette to the subdirectory "WINNT\SYSTEM32\DRIVERS". This subdirectory contains the drivers from all manufacturers.
- ◆ Windows NT will now prompt you to reboot the computer. You should normally confirm this prompt with "Yes".

Step 3: Reboot the computer:

- ◆ After installing the driver, you must reboot Windows NT in order for the driver to load. Make sure that the Centronics Drive is supplied with power, close all programs which are running and reboot Windows NT using the Start button.

5. Using the Centronics Drive

5.1 Inserting/removing a PC Card

After completing installation of the Centronics Drive, insert a Type I, II or III PC Drive into the slot with the connector end first. The correct way of inserting the card is also shown by a small arrow or triangle on the label of the card.

You must only insert or remove PC cards when the LED is not lit. If you try to access the drive when there is no PC card inserted, you will get the error message "Not ready", analogously to a diskette drive when the diskette is missing.

Both the size and the type of the inserted memory media are detected automatically.

- ⌘ The Centronics Drive supports ATA cards of all types (Type III, Type II, CompactFlash card with adapter, Smart Media card with adapter, MultiMediaCard with adapter). It also detects SRAM cards automatically. Linear Flash cards can only be read if they have been formatted with a DOS file system. The Centronics Drive cannot write to Linear Flash cards.

Press the eject button to eject the PC card from the slot.

6. Technical Specifications

Hardware

– Interface	Parallel port (Centronics)
Parallel port connector	25-pin Sub-D socket
Drive connector	50-pin HD socket
PC Card slot	1 slot, Type III

Performance

- Data transfer rate max. 1 MB/s
- The effective data transfer rate depends on the storage media used.

Software

Operating systems	Windows 95/98, Windows NT, MS-DOS
Driver	
– automatic detection of ATA and standard SRAM/Flash cards	
– automatic memory size detection of unformatted PC cards	

Mechanical

- Case Desktop case, metal
125 mm x 43 mm x 184 mm (W x H x D)

Environment

- Temperature: Operation: -0°C to +70°C
Storage: -40°C to +75°C
- Humidity: Operation: 0 to 90% (no condensation)
Storage: 0 to 90% (no condensation)

Electrical

- Power feed: 5 V +/-5 % via external power supply

Accessories

Keyboard adapter for the power feed

7. PC Card memory media

- ◆ SanDisk Type II ATA PC Cards
Capacities: 8 MByte – 1.0 GByte
- ◆ SanDisk CompactFlash memory cards Type I and Type II (requires appropriate adapter); IBM Microdrives (requires Type II CompactFlash adapter)
Capacities : Type I from 8 – 192 MByte; Type II from 256 – 300 MByte
- ◆ SmartMedia memory cards
Requires SmartMedia adapter
Capacities : 8 – 64 MByte
- ◆ SanDisk MultiMedia memory cards
Requires MultiMediaCard adapter
Capacities : 8 – 32 MByte
- ◆ altec Full Metal Cards (ATA PC Cards Type II)
Capacities : 8 MByte – 1.0 GByte
- ◆ altec Full Metal Cards IP54 (ATA PC Cards Type II)
Splash-proof, dust-proof, industrial temperature range
Operation: –40°C to +85°C; 5 V
Capacities : 8 MByte – 1.0 GByte
- ◆ altec Full Metal Cards IP68 (ATA PC Cards Type II)
Immersion-proof, industrial temperature range,
Operation : –40°C to +85°C; 5 V
Capacities : 8 MByte – 1.0 GByte
- ◆ altec Full Metal Cards Hermetic Military (ATA PC Cards Type II)
Suitable for aerospace applications, certified with Mil standard shock, vacuum and vibration tests, corrosion-proof, resistant to fungus, splash-proof, dust-proof, industrial temperature range
Operation : –40°C to +85°C; 5 V
Capacities : 8 MByte – 1.0 GByte

Please ask for our product overview or visit our website for information on further storage products, drives and solid state disks from altec:

<http://www.altec-computersysteme.com>