

GVTV REMOTE CONTROL USER GUIDE



800-448-8260

USING THE REMOTE

DEVICE CONTROLS

CBL - is your Entone set-top box

***PAUSE/PLAY** recorded program or live TV

***RECORD** to record a program

***LIST** of your recorded & saved programming

MENU displays the on-screen menu

GUIDE channel listings

LAST tune to previous channel


VOLUME ADJUST

MUTE turn sound on & off

SOFT KEYS A-red, B-yellow & C-blue

NUMBER PAD enter a channel or PIN

N/A

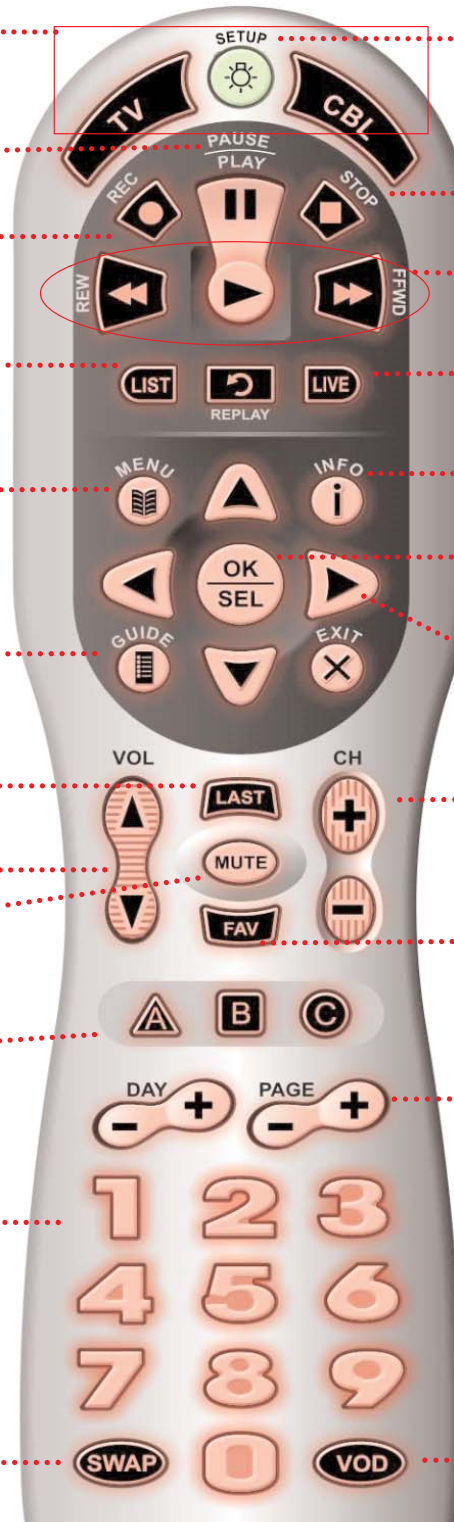

SETUP

press twice to enable backlighting of all your keys on the remote. Also used to program your remote control.

***STOP** recorded program

***FAST FORWARD / REVERSE** recorded program or live TV

LIVE displays live TV programming

INFO gets additional information

OK / SEL choose the highlighted option

NAVIGATION ARROWS move right, left, up or down in the on-screen guide or menu

CHANNEL NAVIGATION changes channel up or down

FAV access GV Apps (local weather, community events)

PAGE NAVIGATION changes guide up or down, page by page

* DVR service required

N/A



Garden Valley Telephone Company
800-448-8260

GUIDE OVERVIEW

1. Press **GUIDE**.

A channel guide will appear, showing the current channel you're watching, plus the channels above and below. Each time you press the "Guide" button, it will toggle through the different guides.

There are 3 guides available:

1. **All:** displays all channels in the guide.
 2. **Subscribed:** displays all channels you have purchased.
 3. **Favorite:** only displays channels you have programmed into your favorite list.
2. Press **▲ ▼** or **◀ ▶** in the middle of the remote to navigate through the program listings, while your current channel continues to play in the top right corner of your screen.
 3. Highlight the program you would like to watch and press **OK**.
If you select a show that will air at a later time, you will be given the option to set a reminder or record the program.

COLOR CODING ON GUIDE

<u>Color</u>	<u>Meaning</u>
Aqua Blue	Normal Programming
Purple.....	Movies
Red.....	Sports
Green	News

INFO button can be pressed at any time while you are watching a program to read a summary. You can also press **INFO** while searching the guide to read a summary of the upcoming show, to record the program or set a reminder.

SETTING REMINDERS - If you have selected a program that is not currently airing, you will be given the option to set a reminder for when the show is about to begin.

TURNING YOUR TV AND SET-TOP BOX (STB) ON AND OFF USING YOUR REMOTE

TURNING YOUR TV & STB ON:

1. Press the **TV** button on your remote. This will turn your TV on.
2. You should see programming, which means the STB is on, or a black screen with "Press to Activate" on the screen, which means the STB is off.
If your STB is off, you will need to press the **CBL** button. This will turn your STB on and a picture should appear. (If you do not see either of these screens, your TV is on an incorrect channel, source, or input.)
3. You are now ready to select a channel to view.

TURNING YOUR STB & TV OFF:

1. To turn your STB off, press the **CBL** button on your remote.
2. To turn your TV off, press the **TV** button on your remote.

TURN THE BACKLIGHTING ON & OFF YOUR REMOTE CONTROL

When backlighting is turned on, the keys to your remote control are lit when you press them.

To enable backlighting, do the following:

1. Press **SETUP** twice. *All the keys to your remote control are lit for a few seconds, allowing you to easily see them in low light conditions.*
After you have activated backlighting, anytime you press a key, the selected device key (either **TV** or **CBL**) blinks once. After the device blinks, all the keys on your remote control are lit for a few seconds.

To disable backlighting, do the following:

1. Press **SETUP** twice. Keys no longer are lit when you press them.

DIGITAL VIDEO RECORDING

You must subscribe to DVR service and upgrade to a DVR set top box to record programming.

Your universal remote has a **LIST** button that enables you to record television shows and events. Using the buttons on your remote, you can pause, rewind and fast forward content, giving you total control over your television. Programming is stored for instant recall at any time, and until you choose to erase it.

If you would like to record the program you are currently watching, simply press the **RECORD** button on your remote.

If you would like to select a program to record using the **GUIDE**:




1. Press **GUIDE**.
2. Press **▲ ▼** or **◀ ▶** to navigate through the program listings.
3. Highlight the program you want to record and press **REC** or press **OK** or **INFO**.
4. Press **▲** or **▼** to navigate to **Record Program**.
5. Press **OK**.

If you have selected to record a program at the same time as another recording, you will need to select which program you would like recorded.

Notes: The program you selected to record is shown with a red record icon next to the program in the program guide.

If you have recorded programming that is normally restricted by parental controls, you will have to enter your settings PIN and adjust parental controls prior to viewing.

Legend:

-  to be recorded
-  currently recording
-  failed recording

If you would like to record a program series using the **GUIDE**:

1. Press **GUIDE**.
2. Press **▲ ▼** or **◀ ▶** to navigate through the program listings.
3. Highlight the program you want to record and press **REC** or press **OK** or **INFO**.
4. Press **▲** or **▼** to navigate to **Record Series**.
5. Press **OK**. A box with the following message will appear “Please wait, scheduling your series.”

Note: The program you selected to record is shown with a red record icon next to the program in the program guide.

If you would like to delete a scheduled or finished recording:

1. Press **LIST** button on the remote.
2. Select **Scheduled** or **Finished**.
3. Press **▲** or **▼** to navigate through the list.
4. Select program you wish to delete.
5. Select **Delete**, a box will appear with the following message: Confirm “Are you sure you want to delete the program (name)?” Highlight **Yes | No**.
6. Press **OK**.

If you would like to view your finished recordings:

1. Press **LIST** button on the remote.
2. Select **Finished**.
3. Press **▲** or **▼** to navigate through the program listing.
4. Press **OK** then **Play**.

*Note: You can also view your scheduled / finished recordings by going to **Menu** and selecting **Recordings**.*

FINISHED: Includes recorded programs that are ready for playback.

SCHEDULED: Allows you to manage upcoming events and future recordings.

SERIES: Allows you to manage all program series / episodes recording.

NEW: Allows you to set up options for timed recordings and recurring recordings.

SYSTEM SETTINGS AND CUSTOMIZATION

The Account Info/Settings feature allows you to define parental controls, change system settings, select favorites and change PIN options. Your default PIN number is 0000.

If you would like to change your parental control:

1. Press **Menu**.
2. Go to **Account Info/Settings**.
3. Enter your PIN number to proceed (default pin # is 0000).
4. Press **Parental Control**, then **Settings**.
5. You have the option to change the following:
 - Enable Parental Control?**- Select **Yes** or **No** to activate Parental Control features throughout the system.
 - Movie Rating** - Control viewing level of programming.
Press arrows on the remote to navigate, press **OK** to adjust rating. (Selected rating or higher will be blocked.)
 - Television Rating** - Control viewing level of programming. Press arrows on the remote to navigate, press **OK** to adjust rating. (selected rating or higher will be blocked.)
 - Lock Unrated Shows?** - Select **Yes** or **No**.
 - Show titles under parental control?** - Select **Yes** or **No**
6. When finished making changes, select **OK**.

If you would like to change your PIN options:

1. Press **Menu**.
2. Go to **Account Info/Settings**.
3. Enter your PIN number to proceed (default pin # is 0000).
4. Press **PIN Options**.
5. Press arrows on remote to navigate, press **OK** to enter a new PIN number.
Enter numbers using the remote to change the Settings PIN.
6. Press **OK** to return to the Menu.

If you would like to create a personal guide:

Favorites allows you to create, edit and delete a list of your most frequently viewed channels.

1. Press **Menu**.
2. Go to **Account Info/Settings**.
3. Enter your PIN number to proceed (default pin # is 0000).
4. Press **Favorites**.
5. Press **New Favorite**.
6. The Favorites screen will appear, use the ▲ ▼ or ◀ ▶ to select letters and/or numbers to insert the favorite list name.
7. Select **OK**.
8. Select the channels to be included in the New Favorite List.
9. Select **OK**.

*Note: You can use the **GUIDE** button on your remote to toggle between the guide and your favorite list(s).*

If you would like to Search for your favorite show or music:

1. Press **MENU**.
2. Go to **SEARCH**.
3. Press ▲ or ▼ to navigate through the list. Select the option you would like to search by.
 - Program Guide:** Use the ▲ ▼ or ◀ ▶ to select the category you would like to search.
 - By Category:** Use the ▲ or ▼ to select the category you would like to search.
 - By Title:** The Content Search screen will appear, use the ▲ ▼ or ◀ ▶ to select letters and/or numbers to spell out a term, word or number you would like to search.
 - By Keyword:** The Content Search screen will appear, use the ▲ ▼ or ◀ ▶ to select letters and/or numbers to spell out a term, word or number you would like to search.
4. Press **OK**.

PROGRAMMING THE REMOTE TO OPERATE YOUR TV

AUTO SCAN GVTV REMOTE TO YOUR TV:

1. Turn on your TV.
2. Press the **TV** button on your remote, then press & hold down the **SETUP** button until it blinks twice. Enter **9 9 1**. The TV button will blink twice.
3. Aim the remote at the TV and press **TV** once.
4. Press and release either the **CHANNEL UP** or **CHANNEL DOWN** button to start the auto scan search. The remote control will start searching in 5-second intervals for each code set. (The TV button will blink every 5 seconds while the device is in scan mode.) When it finds the right code, your TV will shut off.
5. Press the **SETUP** button to lock in the code. The TV button will blink twice.
6. You may now begin watching TV.

MANUALLY PROGRAM GVTV REMOTE TO YOUR TV:

1. Locate the device code(s) for your TV*. If you cannot find the device code for your device or the code does not work, follow the steps above for the auto scan.
2. Turn on your TV.
3. Press the **TV** button on your remote, then press & hold down the **SETUP** button until it blinks twice.
4. Enter the **4-DIGIT DEVICE CODE***. If you enter a valid TV code, the TV button will blink twice.
Note: If the selected mode key emits a long blink, the entry is invalid. Repeat steps 3 through 4 and try entering the same code again.
5. Aim the remote at the TV and press the **TV** button once. The device should turn off. Press the **TV** button again to begin watching TV. If the TV doesn't respond, repeat the above steps.

* A complete list of device codes can be found in your Polaris User Manual and on GVTC's website at www.gvtel.com.