 




# cascade

*A new element in pleasure.....*

## ***Flow / Wave / Ripple User Manual***







***Congratulations, you are now in possession of everything you need to experience the ultimate pleasure.***

Inspired by the beauty of a cascading waterfall, Cascade products embody the power and purity of water. Bringing together ergonomically designed silicone sheaths to fit the inner curves of the female form, powerful vibrations and the ability to release sensuous lubricant at the push of a button.


Cascade products will fulfill your every desire allowing you to drift into ecstasy.


But before you get more closely acquainted please take moment to read through this user manual.

1


## Wave / Flow / Ripple Overview

Wave, flow and Ripple are the first generation of pleasure products to be released by Cascade. Equipped with powerful motors and an intuitive control system, you now have full control over the vibration settings whilst being able to release the perfect amount of your favorite lubricant from the changeable cartridge.

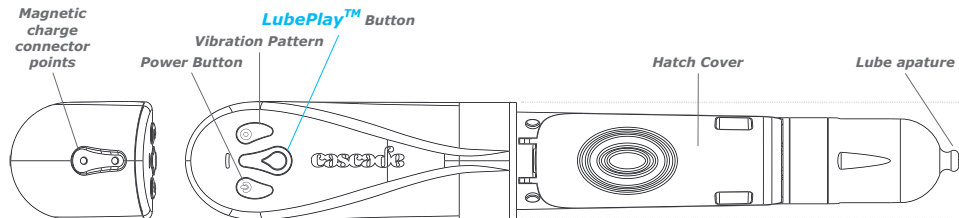

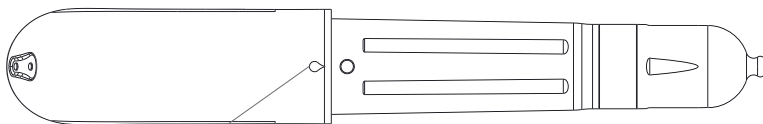

*Lock / unlock indicator*

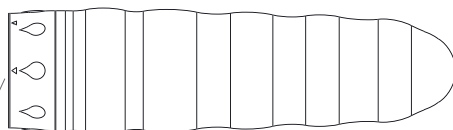


*Wave*

**141 Long**



 *Flow*

**142 Long**

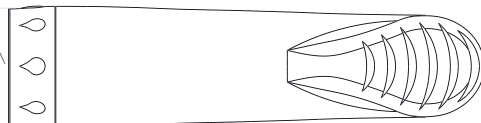

*Ripple*

**150 Long**

*Sheath  
Collar*

*Silicone  
aperture*

3

## ***Charging your product***

Cascade products are rechargeable via the USB cable provided, you can charge via the mains using an adaptor or via an electronic device with a USB port.

- 1 – Plug the mini USB end of the cable into the magnetic charging hub provided.
- 2 – Now attach the magnetic charging hub to the two small magnets located on the base of the toy.
- 3 – Connect the USB end of the cable to either a high speed USB port on an electronic device such as a computer or to USB mains adaptor
- 4 – The control panel will glow red when charging and green once fully charged.



*charging hub*

*USB plug connector*

5



## ***Loading Cartridge***

Your cascade toy has an infinite amount of play possibilities thanks to the changeable cartridge enclosed within the base.

### ***Adding a new sensation is simple.***

- 1 - Remove the silicone sheath by holding the collar between forefinger and thumb and twisting anti clockwise to the unlock position. The sheath will now be free to slide off from the base.
- 2 - With the inner shaft exposed, lift at the two grips on the hatch cover to expose the cartridge loading bay.
- 3 - Remove your new cartridge from its packaging but do not remove the foil from the top, this will be pierced when you close the loading bay hatch.
- 4 - Place the cartridge in the empty cavity of your product. The cascade label needs to be visible and the cartridge will sit flush in the body of the toy.





- 6 – Close the loading bay cover and lock into position. This will automatically engage the cartridge and break the foil seal.
- 7 - Replace the silicone sheath by sliding back onto the shaft and lining up the marks on the toy and collar. Once the collar is flush to the body of the toy, grip the collar and twist clockwise into the locked position.
- 8 - You are now ready for play.



7



## ***Using your Cascade toy...***

The intuitive controls on your Cascade toy give you freedom to play however you want. With three power settings that can be used in conjunction with either a constant, pulse or escalating vibration pattern and all the while having control over the flow of lubricant at the end of your fingertips.

### ***Power Button***

Press the power button once and the toys control panel will glow blue; in this mode you use the LubePlay button. Press the power button again to begin the tip vibration at its lowest setting, press a second time for medium power, and a third for the highest vibration setting. To turn off your toy after play simply hold down the power button for three seconds.

### ***LubePlay button***

Adding just the right amount of your favorite lubricant couldn't be easier, just the press of a button. A single press will dispense a small measure, enough to cover the silicone shaft. Hold down the LubePlay button for a constant flow of lubricant.



### ***Vibration Pattern***

Your Cascade toy has three vibration patterns; constant, pulse and an escalating pulse. Each pattern can be used with each vibration power setting, meaning you have complete control.

### ***Travel Lock***

To engage the travel lock, hold down the function button then the power button for 5 seconds. Once locked the control panel will flash 2 times.

To disengage the travel lock, hold down the function button then the power button for 5 seconds. Once unlocked the control panel will flash 3 times.



9



## ***Cleaning, Storage and Safety***

We recommend only using Cascade approved cartridges and accessories. We only use the highest quality certified water based lubricants to ensure your favorite pleasure product stays in perfect condition.

We recommend that you clean your cascade toy after every use. To clean the sheath you must first remove it from the base by gripping at the collar and twisting anti clockwise into the unlock position then sliding off the shaft.

The Sheath can then be cleaned in warm soapy water or using an antibacterial toy cleaner and lint free cloth. Please ensure sheath is completely dry before re attaching.

The body of the toy can be cleaned using a cloth and antibacterial toy cleaner.

Avoid leaving your Cascade toy in direct sunlight and never expose to extreme heat.

Store your Cascade toy in a dust free place and be sure to keep away from toys of other materials.



## ***Troubleshooting***

*Your toy does not activate when the power button is pressed?*

- Battery is empty, recharge your toy. If battery is fully depleted then you will be required to fully recharge before functions are available.
- Panel is locked, unlock by holding down the function button and then the power button for 5 seconds.

*Control panel is flashing and button functions are not working?*

- Battery is too low to function, place on charge. If battery is fully depleted then you will be required to fully recharge before functions are available.

*Control panel does not glow red when charging?*

- If panel glows green then your toy is already fully charged.
- Battery is fully drained and will require several minutes to acknowledge charger.
- Charger is not properly connected, check USB and magnetic connection.



### *I'm unable to remove the sheath?*

- Check the underside of your product that you have twisted the collar fully to the unlock position.
- Twist at the collar, back to lock and then all the way back to unlock then slide off.

### *No lube is coming out when I press the dispense button?*

- Your Cascade product will only dispense lubricant when the power is on; press the power button once and the LubePlay button will become active.
- Hold button for several seconds as the system may need time to charge.
- Remove the sheath and ensure that cartridge is engaged.
- Ensure your silicone sheath free from any blockage.

### *Your toy cannot be turned off or interface dial does not respond?*

- Connect to the charger as this will reset the microprocessor.

If you have any other issues or questions regarding your cascade product then please feel free to contact us via our website or email us at [enquiries@cascade-toys.com](mailto:enquiries@cascade-toys.com).





## ***Disposal Information***

Disposal of old electronic equipment (Applicable in the EU and other European countries with separate waste collection systems)

The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for recycling of electrical and electronic equipment. By ensuring this toy is disposed of correctly, you will help prevent the potential negative consequences for the environment and human health which could be caused by the inappropriate waste handling of this product.



### ***Disclaimer***

*Users of this pleasure product use it at their own risk. Neither Love Life products nor its retailers assume any responsibility or liability for the use of this product.*

*Model may be changed without notice*



## Specifications

Materials	ABS/body safe silicone/TPR
Finish	glossy and satin
Size	256 x 45 x 36 mm
Weight	
Battery	NiMH 850 mAh 3.6v
Charging	4 hours at 5V 300Ma
User time	Up to 4 hours
Standby	90 days
Max Noise level	<50Db
Interface	Variable interface with push button scroll through pulse patterns and push button lubricant pump control

**cascade**  
*A new element in pleasure.....*

  
**LOVE LIFE**  
*Products Ltd*

Love Life Products Ltd, Unit 8 First Floor,  
Eversley Way, Thorpe Industrial Estate,  
Egham, TW20 8RG, United Kingdom