

TOSHIBA

OWNER'S MANUAL

LCD Colour TV



15CL7A
15CL7E
15CL7T
20CL7A
20CL7E
20CL7T

Owner's Record

You will find the model number and serial number on the back of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your TOSHIBA dealer regarding this product.

Model number:

Serial number:

Introduction

Getting started

Basic operation

Using the TV's features

Viewing teletext

Equipment connections

Reference section

Welcome to Toshiba

Thank you for purchasing this Toshiba LCD Colour Television. This manual will help you use the exciting features of your new TV.

Instructions in this manual are based on using the remote control.

You can also use the controls on the TV if they have the same name as those on the remote control.

Please read all the safety and operating instructions carefully, and keep the manual for future reference.

Contents

Introduction

Important Safety Instructions	3
Installation	3
Use	5
Service	6
Cleaning	7
Important information	7
Important information	7

Getting started

Installation	9
Connecting an aerial	9
Installing the remote control batteries	9
Exploring your new TV	10
TV top	10
TV front	10
TV back	11
Learning about the remote control	12
Location of controls	12
Watching TV programmes	13
Turning the TV on or off/Volume/ Sound Mute	13
Changing programme positions/Programme return/On-screen information	14
Learning about the menu system	15
Menu overview	15
Selecting a language	16
Programming channel memory	17
System selection/Auto programme	17
Manual programme	18
MFT/AFT	20

Basic operation

Picture quality adjustment	21
Picture quality adjustment	21
Sound adjustment	22
Sound quality adjustment	22
Using the AVL function	23
WOW surround setting	23
Stereo/Bilingual selection	24

Using the TV's features

Input selection/Sleep Timer	25
Input selection	25
Sleep Timer	25
Blue screen function/ Activating the Auto off function	26
Blue screen function	26
Activating the Auto off function	26

Viewing teletext

Teletext - Control buttons	27
To view normal text	27
Teletext buttons on the remote control	28
Teletext - Auto and List modes	30
Using Auto mode	30
Using List mode	31

Equipment connections

Side panel connections	32
Connection example	32
Back panel connections	33
Connection example	33
Connecting a computer	34
To connect a computer	34
PC Setting	35
Picture position/Clock/Phase adjustments	35
Auto configure/To reset	36

Reference section

Troubleshooting	37
Symptom and solution	37
Broadcast systems/Specifications	38
Broadcast Transmission Systems of Each Country or Region	38
LCD Colour Television Specifications	38

Exemptions

- Toshiba is not liable for any damage caused by fires, natural disaster (such as thunder, earthquake, etc.), acts by third parties, accidents, owner's misuse, or uses in other improper conditions.
- Toshiba is not liable for incidental damages (such as profit loss or interruption in business, modification or erasure of record data, etc.) caused by use or inability to use of product.
- Toshiba is not liable for any damage caused by neglect of the instructions described in the owner's manual.
- Toshiba is not liable for any damage caused by misuse or malfunction through simultaneous use of this product and the connected equipment.

Important Safety Instructions

Be sure to observe the following instructions and precautions to ensure safe use of this TV.
The exact power cord will vary according to the country or region.

Installation

Always connect the power plug to an electrical outlet equipped with the following:

For 15CL7A, 15CL7E, 15CL7T: Use 100–240V AC 50/60 Hz

For 20CL7A, 20CL7E, 20CL7T: Use 100–240V AC 50/60 Hz


Never use the TV outside the specified voltage range. It may cause a fire or an electric shock.

WARNING ABOUT THREE-WIRE GROUNDING-TYPE PLUG:

Never remove the grounding pin on the power plug. This system is equipped with a three-pin grounding-type power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace the wall outlet.

Never defeat the purpose of the grounding plug.

Check!

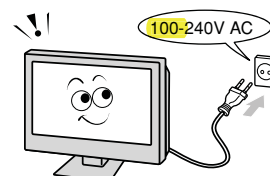


About the fuse

In a three-pin grounding-type plug, the fuse fitted in this plug is approved by ASTA or BSI to BS1362. It should only be replaced by a correctly rated and approved type and the fuse cover must be refitted.


Never insert or remove the power plug with wet hands.

This may cause electric shock.

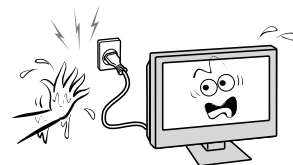

Never place the TV in an unstable location, such as on a shaky table or incline or in a location subject to vibration.


The TV may drop or fall down, which may cause injury or damage.

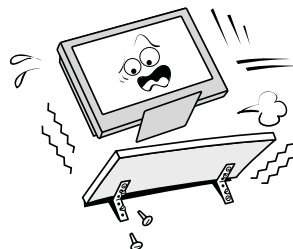

Never block or cover the slots and openings in the cabinet.

- Never place the TV so that it is facing upward or on its side.
- Never place the TV in a closet, bookcase, or other similar area where the ventilation is poor.
- Never drape a newspaper, tablecloth, or curtain on the TV.
- When installing the TV near a wall, always keep the TV at least 10 cm away from the wall.
- Never place the TV on a soft, unstable surface, such as carpet or a cushion.

The inside of this TV will overheat if the ventilation holes are covered, blocked, or sealed, which may result in a fire.

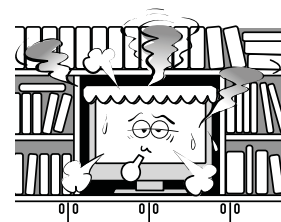

Never place the TV near a heater or in direct sunlight.

The surface of the cabinet or power cord may melt and result in fire or electric shock.



Important Safety Instructions (continued)

Installation (continued)

Never place the TV in an area exposed to high humidity levels, such as in a bathroom or close to a humidifier.

This may cause a fire or an electric shock.





Never place the TV next to a stove where it will be exposed to oil, smoke, or steam, or in a location where there is a large quantity of dust.

This may cause a fire or an electric shock.



Install the TV in a horizontal, stable location. Connect between the two clips on the back of the TV and a wall, pillar, etc., with a sturdy tie and clip of supplied accessories.

- Use as short a tie as possible to ensure the TV is stable.
- If the TV is not installed securely, it may lean or fall over and cause an injury.

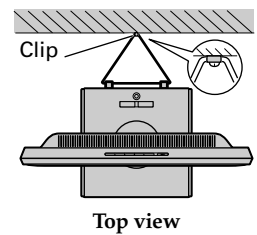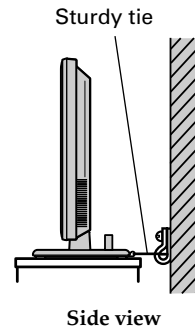

Precautions for moving the TV

- When moving the TV, be sure to remove the power plug from the wall outlet and disconnect the aerial cable, audio/video cables, and any ties. Fire or electric shock may result if the power cord is damaged.
- Never carry the TV with the screen facing up or down.



Precautions for installing an outdoor aerial


An outside aerial system should not be located in the vicinity of overhead power lines or other electric light or power circuits. If the aerial falls down or drops, it may cause injury or electric shock.



Use


Never place hot objects or open flame sources, such as lighted candles or nightlights, on or close to the TV.

High temperatures can melt plastic and lead to fires.

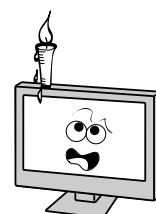

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

When liquids are spilled or small items are dropped inside the TV, this may cause a fire or an electric shock. If small objects drop inside the TV, turn off the TV and remove the power plug from the outlet immediately and contact a service technician.

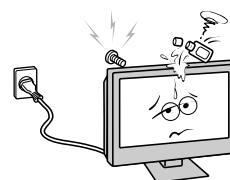

Never insert objects (metal or paper) or pour water inside the TV through ventilation holes or other openings.

These items may cause a fire or an electric shock.

If these objects are inserted inside the TV, turn off the TV, remove the power plug from the outlet immediately and contact a service technician. Be especially careful that children do not insert objects in the TV.




Never stand or climb on the TV.

Be especially careful in households with children to prevent them from climbing on top of the TV.

It may move, fall over, break, become damaged or cause an injury.



When the TV will not be used for a long period of time, such as during vacation or travel, remove the power plug from the wall outlet for safety.

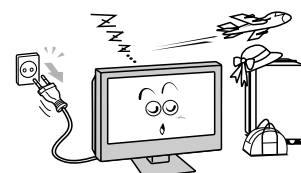


Important Safety Instructions (continued)

Use (continued)


Never pull on the power cord when removing the plug from the wall outlet.

Always hold the plug firmly when removing it. If the power cord is yanked, the cord may become damaged and fire or electric shock may occur.

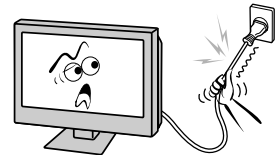

Never cut, break, modify, twist, bunch up or bend the power cord or apply excessive force or tension to it.

Never place heavy objects on the cord or allow it to overheat as this may cause damage, fire or electric shock. Contact a service technician if the power cord is damaged.

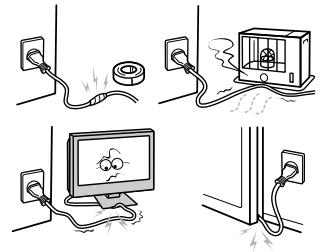

If there is thunder or lightning, never touch the aerial cable or other connected cables.


You may suffer an electric shock.



Service


Never repair, modify or disassemble the TV by yourself.

If it may cause a fire or an electric shock. Consult a service technician for inspection and repairs.

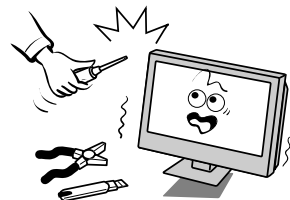

When a malfunction occurs, or if smoke or an unusual odor comes from the TV, turn off the TV and remove the power plug from the outlet immediately.

Make sure that the smoke or smell has stopped, then contact a service technician. If the TV is still used in this condition, it may cause a fire or an electric shock.

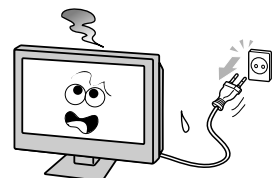


Important Safety Instructions (continued)

Important information

Service (continued)

If the TV is dropped or the cabinet is damaged, turn off the TV and remove the power plug from the outlet immediately.

If the TV is powered on in this condition, it may cause a fire or an electric shock. Contact a service technician for inspection.

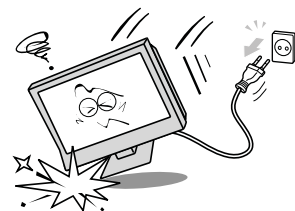

Cleaning


Always remove the power plug before cleaning.

Never use solvents such as benzine or thinner to clean the TV.

- These solvents may warp the cabinet or damage its finish.
- If rubber or vinyl products remain in contact with the TV for a long time, a stain may result.


If the cabinet becomes dirty, clean it with a soft, dry cloth.

When cleaning the surface of the LCD display, wipe the panel surface gently with a soft, dry cloth.

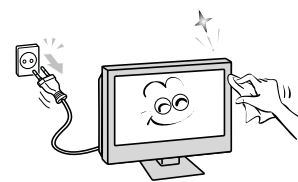

Periodically disconnect the power plug from the outlet and check it. If dust has collected on the power plug connectors, clean off the dust.

This dust may cause a fire due to reduced insulation on the plug.

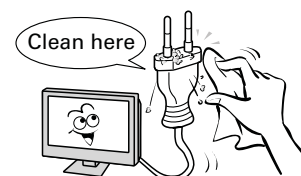

Important information

Following information is only for EU-member states:

The use of the symbol indicates that this product may not be treated as household waste. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



Important information (continued)

Important information (continued)

About the LCD screen

- If you have the LCD screen facing to the sun, the LCD screen will be damaged. Be aware of locating the TV in the place such as window side or outside of the room.
- Do not press the LCD screen strongly or scratch it, and do not put anything on it. These actions will damage the LCD screen.

About the cabinet

Do not spray volatile compounds such as insecticide on the cabinet. This may cause a discolouration or damage the cabinet.

Some parts of the screen do not light up

The LCD display panel is manufactured using an extremely high level of precision technology, however sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.

About Interference

The LCD display may cause interference in image, sound, etc. of other electronic equipment that receives electromagnetic waves (e.g. AM radios and video equipment).

About using the TV in low-temperature conditions

If you use the TV in a room of 0°C or less, the picture brightness may vary until the LCD monitor warms up. This is not a sign of a malfunction.

About disposal

The cold cathode fluorescent lamp in the LCD panel contains a small amount of mercury. Please follow local ordinances or regulations for disposal.

About after-image

If a still picture is displayed, an after-image (ghost) may remain on the screen; however, it will disappear. This is not a sign of malfunction.


Installation

Connecting an aerial

Optimum reception of colour requires a good signal and will generally mean that an outdoor aerial must be used. The exact type and positioning of the aerial will depend upon your particular area. Your Toshiba dealer or service personnel can best advise you on which aerial to use in your area. Before connecting the aerial cable, remove the back terminal cover (see page 11).

Caution:

Never plug in the power cord until you have finished connecting the aerial.

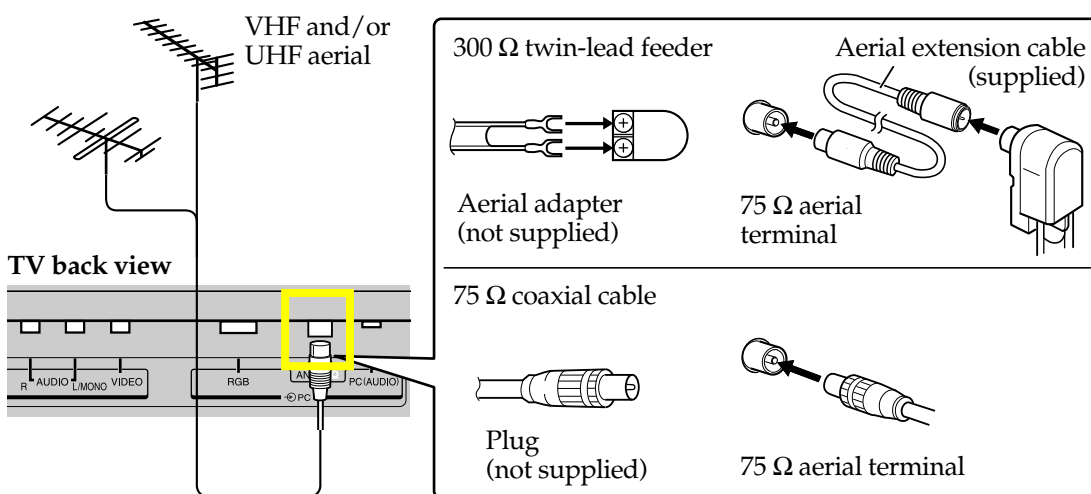


Note:

It is recommended that the 75 Ω coaxial cable be used to eliminate interference and noise which may occur due to radio wave conditions.

Installing the remote control batteries

Remove the battery cover.


Insert two R6 (AA) batteries, matching the -/+ polarities of the battery to the -/+ marks inside the battery compartment.

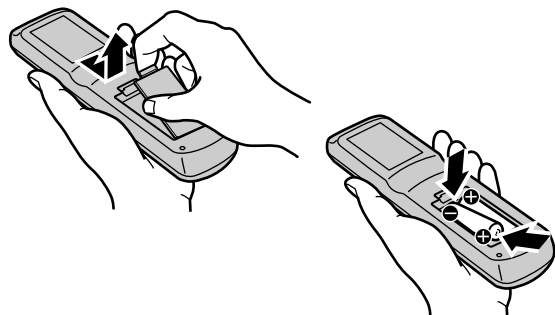

Caution:

- Dispose of batteries in a designated disposal area. Do not throw batteries into a fire.
- Attention should be drawn to the environmental aspects of battery disposal.
- Do not mix battery types or combine used batteries with new ones.

Effective range

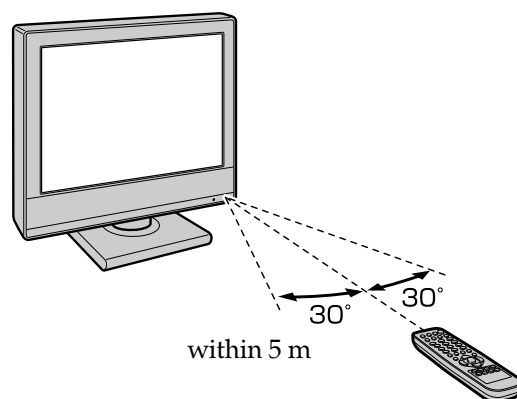

Note:

- If the remote control does not operate correctly, or if the operating range becomes reduced, replace both batteries with new ones.
- If the batteries are dead or if you will not use the remote control for a long time, remove the batteries to prevent battery acid from leaking into the battery compartment.


Exploring your new TV

- You can operate your TV using the buttons on the top panel or remote control. The back and side panels provide the terminal connections to connect other equipment to your TV. See "Equipment connections" on pages 32 - 34.
- Model 20CL7 series is used in this manual for illustration purposes.

TV top


For the use of each control, see the pages in brackets.

TV top view

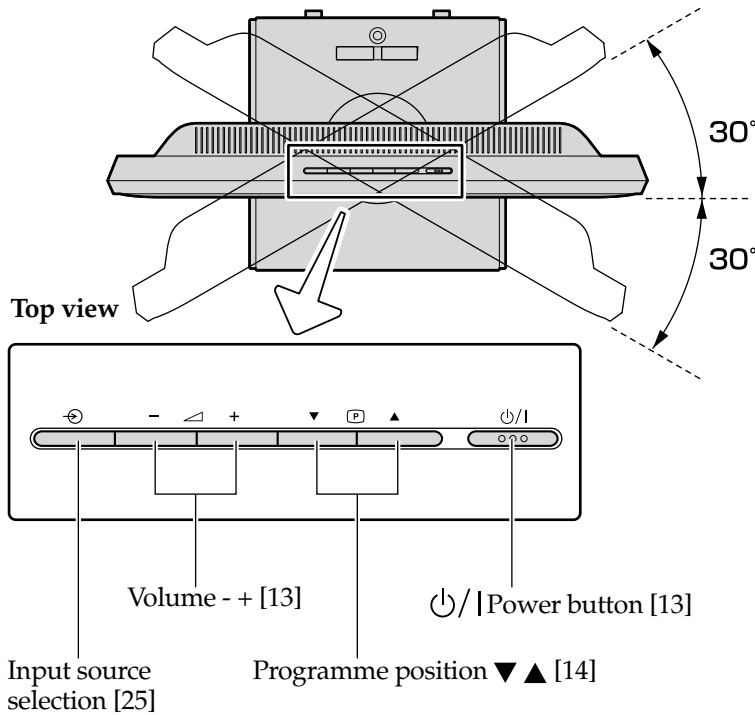


You can adjust the angle of the TV screen.
 Swivel angle: 30 degrees to left and right.
 Tilt angle: 3 degrees forward or 12 degrees backward from vertical angle.

TV side view

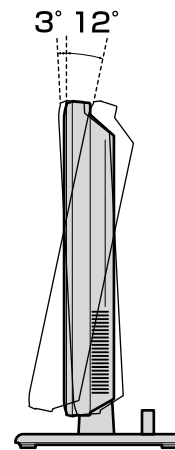


TV front

TV front view

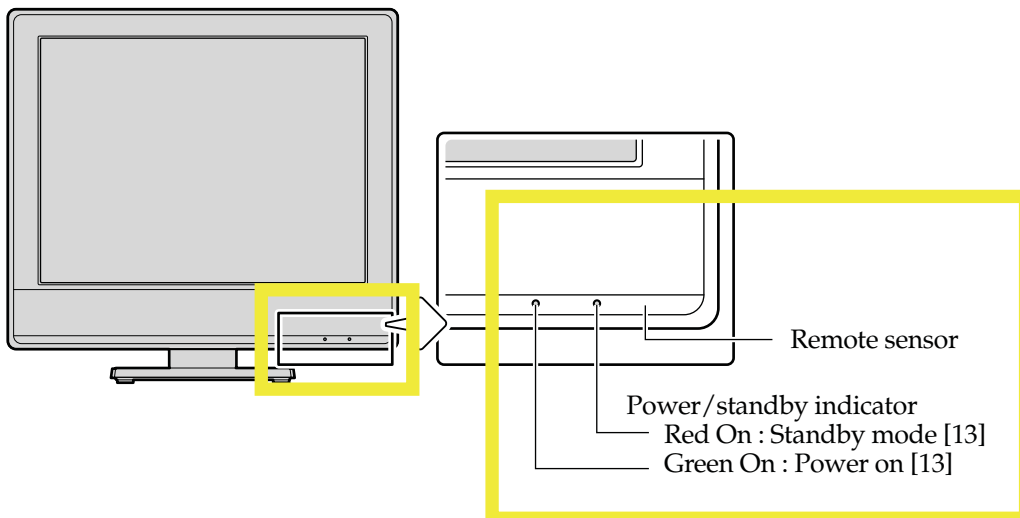

TV back

Before the connecting the aerial and audio/video cables, remove the terminal panel cover (see "Rear terminal cover" below).

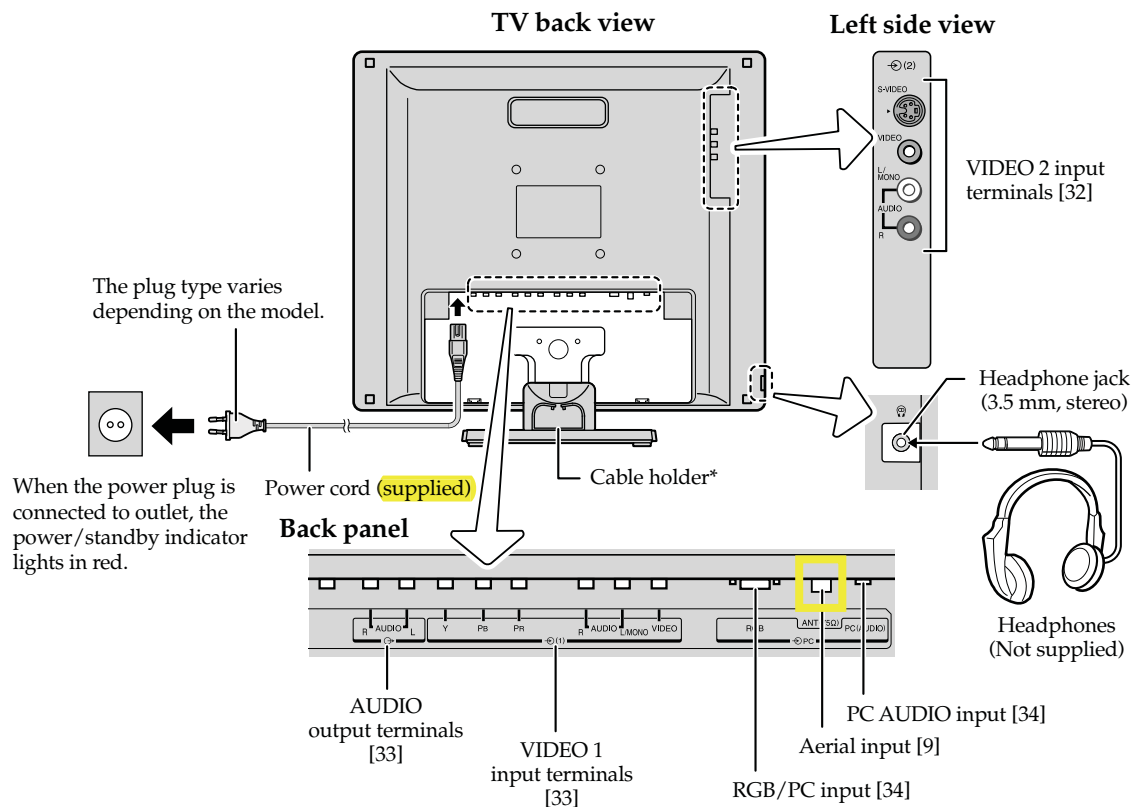

* You can use the cable holder to hold the aerial and audio/video cables. **Never use the cable holder to carry the TV when moving it.**

Note:

Inserting headphones into the Headphone jack will mute the sound from all speakers and deliver normal stereo left and right signals.


Rear terminal cover

The connection panel is hidden behind the terminal cover.

1. Remove the cover. Release the two hooks on the bottom of the cover.
2. Install cables as necessary.
3. Reinstall the cover. Align the holes on the TV back with the three tabs on the rear terminal cover as shown.
4. Close the cover.

Cable holder


The cable holder can be used to bundle the connection cables.

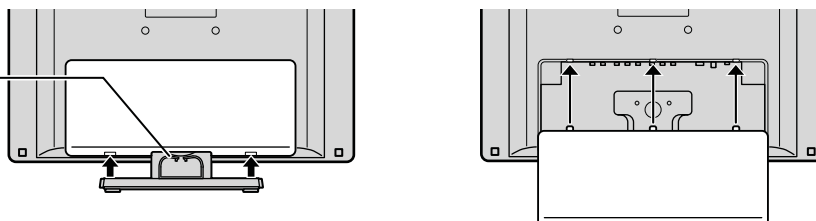

Learning about the remote control

Location of controls


For the use of each control, see the pages in brackets.

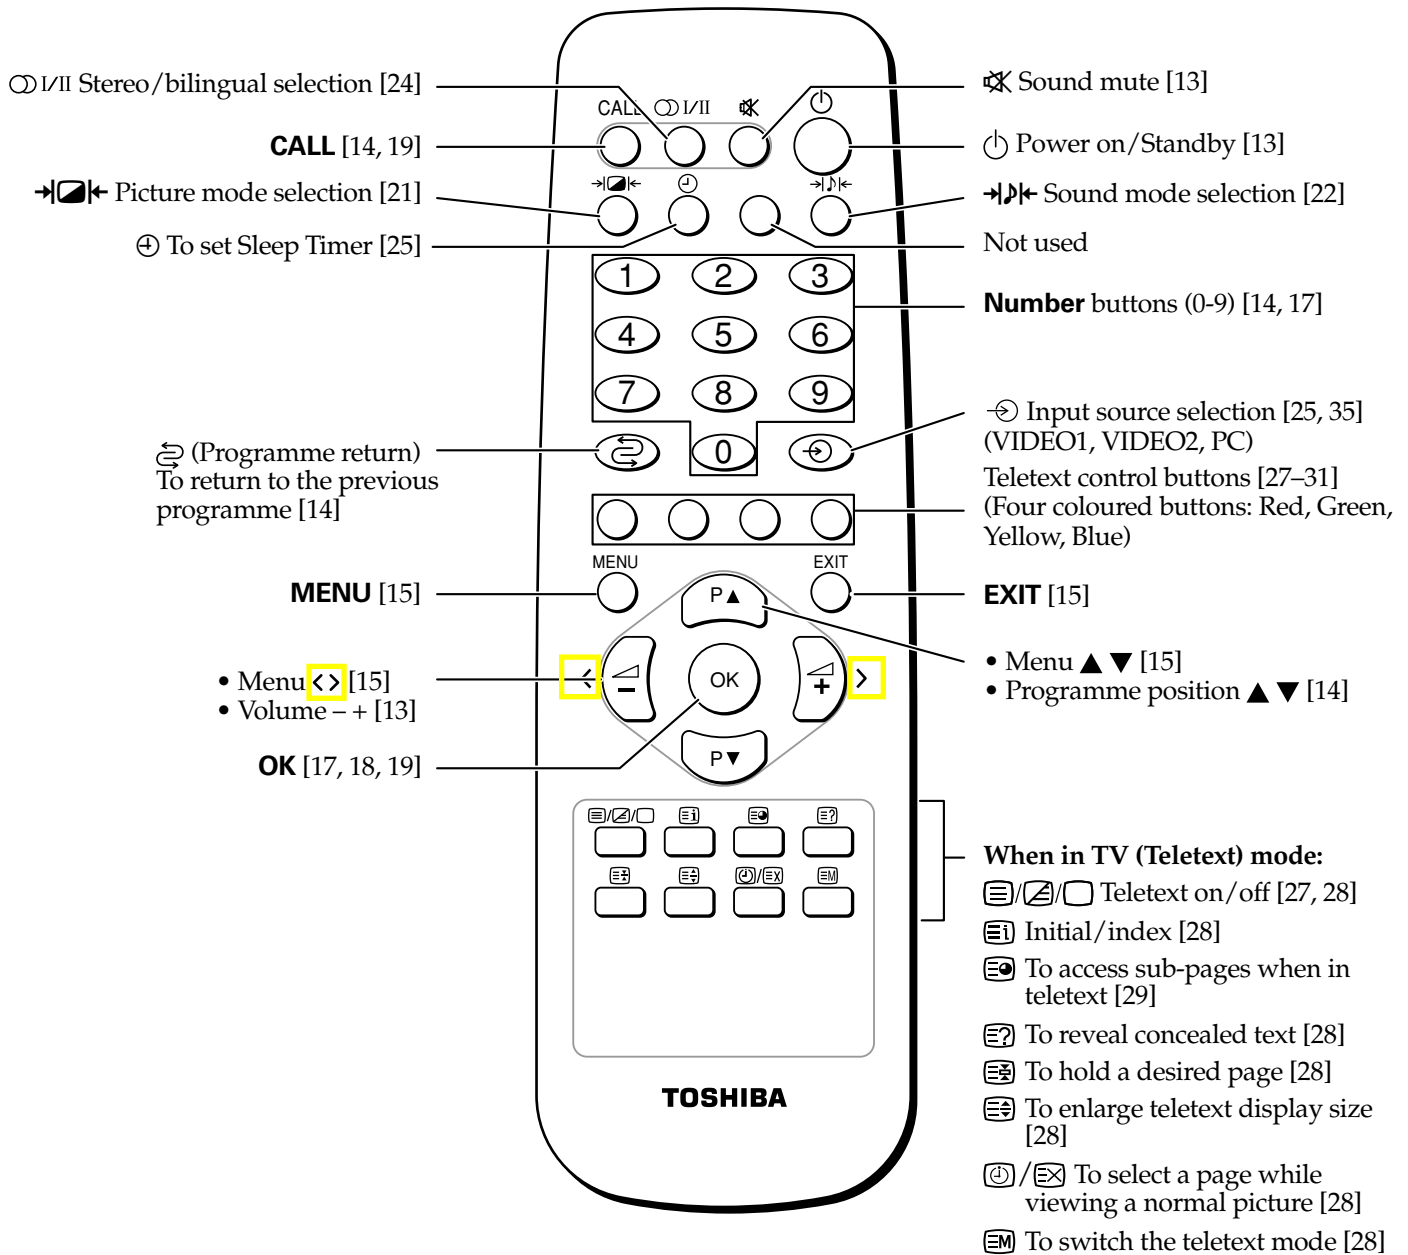



Watching TV programmes

Turning the TV on or off/Volume/Sound Mute

TV top view

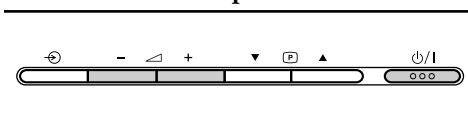

TV front view

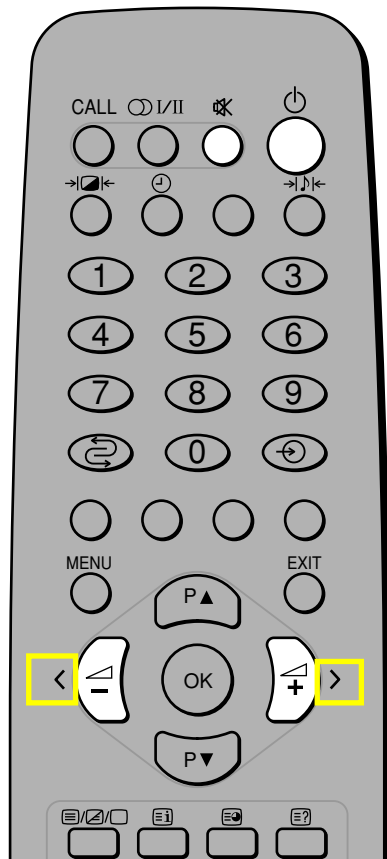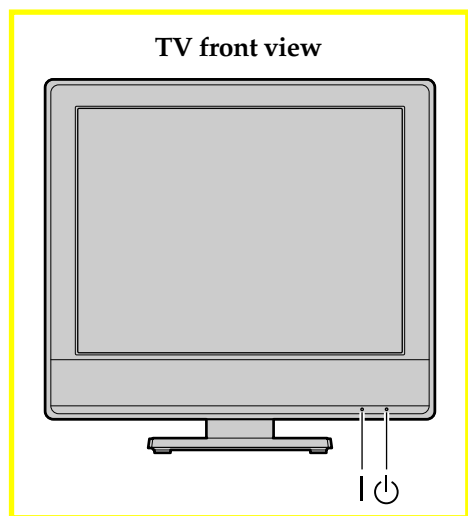

Switching on the TV:

Press the Power button on the TV or press the button on the remote control.

The | power on indicator lights in green.

Switching off the TV (standby mode):

Press the Power button on the TV or press the button on the remote control.

The standby indicator lights in red.

Note:

- When the TV is turned off but remains plugged into the electrical outlet, a minute amount of current is still consumed.
- When the TV will not be used for a long period of time, such as during vacation or travel, remove the power plug from the electrical outlet.
- When Auto off is set to On, the TV will automatically turn itself off after approximately 15 minutes if it is tuned to a vacant channel or a station that completes its broadcast for the day (see page 26).
- If the power is cut off while you are viewing the TV, the Last Mode Memory feature turns the TV on automatically when the power is resupplied.

To adjust the volume:

Press the + or - button to increase or decrease the volume.



To mute the sound:



- 1 Press the button. appears on the screen.
- 2 Press the button again to restore the sound.



Watching TV programmes (continued)

Changing programme positions/Programme return/On-screen information

TV top view

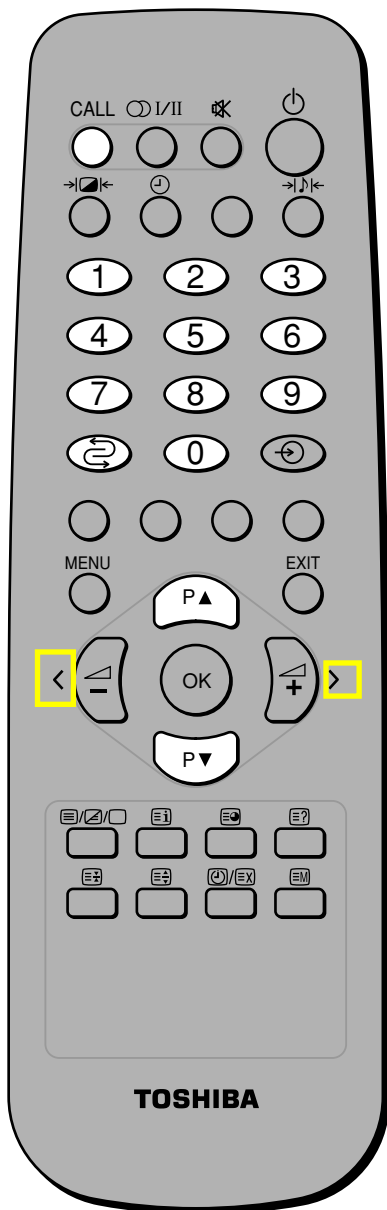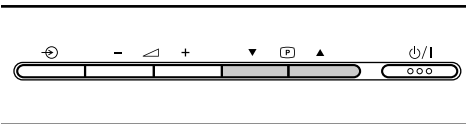

To change programme position:

- Enter the desired programme position number using the **Number** buttons on the remote control. You can also change the programme position by using the **P▲** or **P▼** button.




For programme positions below 10, use 0 and the required number (e.g., for programme position 1, press 0, 1).

The position number will be displayed in the top right of the screen.

To switch between two programme positions:

You can switch between two programme positions without entering the actual position number each time.

- Select the first programme position you want to view.
- Select the second programme position using the **Number** buttons (0-9).
- Press the **⇄** button. The previous channel will be displayed.

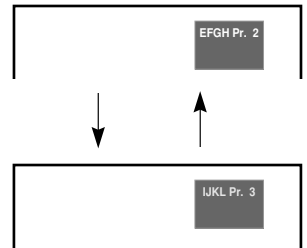

Each time you press the **⇄** button, the TV will switch back and forth between the two programme positions.

To display the on-screen information:

- Press the **CALL** button to display the following on-screen information. The information will disappear in 4 seconds.
 - Selected programme position or external input mode
 - Programme skip on information
 - Station name (if set)
 - Mono/Stereo/Dual audio status



Learning about the menu system

To use the menu system:

Press the **MENU** button to open the menu system, then press the **< or >** button to select a main menu.


Press the **OK** button, then press the **▼** or **▲** button to select an item.

Press the **OK** button, and then press the **▼** or **▲** button to select or adjust a setting.


Press the **OK** button to display the next menu.

Menu overview


Picture menu

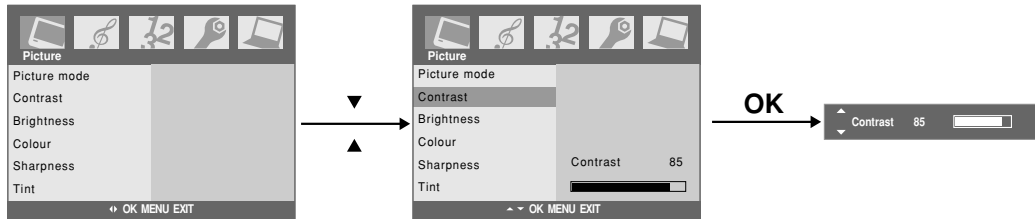


Sound menu

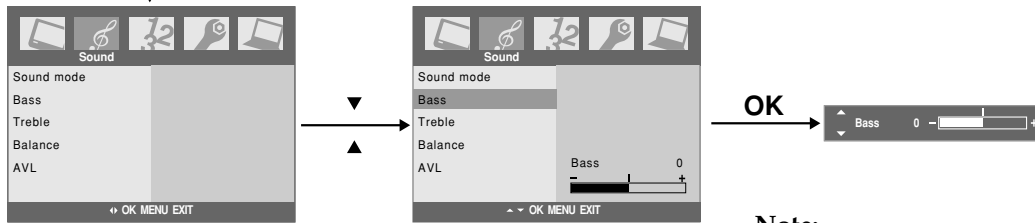


Channel menu

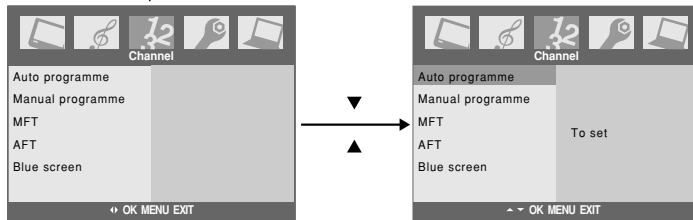

Setup menu

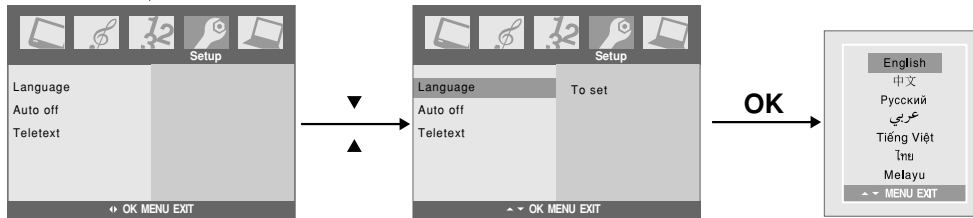

PC menu

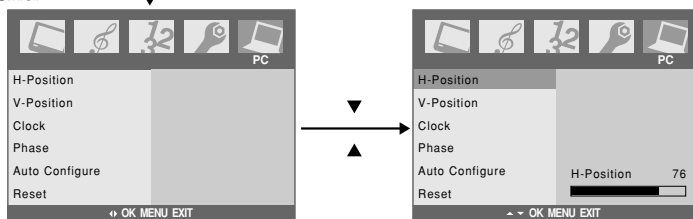


Note:

- If you do not make a selection for a while, the menu display closes automatically.
- If you want to close an on-screen display instantly, press the **MENU** button.
- To return to the previous menu, press the **EXIT** button.
- In TV or video mode, the PC menu will not appear.

Learning about the menu system (continued)

Selecting a language

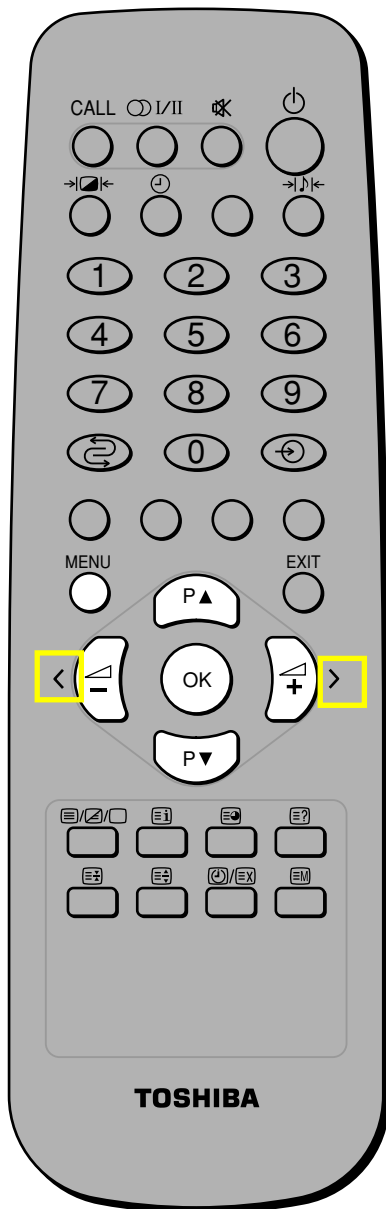


Choose from seven different languages (English, Chinese (CS), Russian, Arabic, Vietnamese, Thai and Malay) for the on-screen display.

- 1 Press the **MENU** button, then press the **<** or **>** button to display the Setup menu.



- 2 Press the **OK** button, then the **▼** or **▲** button to select Language.

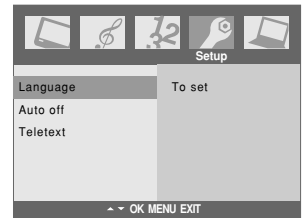


- 3 Press the **OK** button, then press the **▼** or **▲** button to select the desired language.



Programming channel memory

- First, use the Auto Programme function to preset all the active channels in your area automatically. Then, arrange the preset channels with the Manual Programme function so that you can tune into only desired channels.
- Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the < or > buttons to scan the stations you have programmed. Stations can be tuned using automatic or manual modes.

System selection/Auto programme

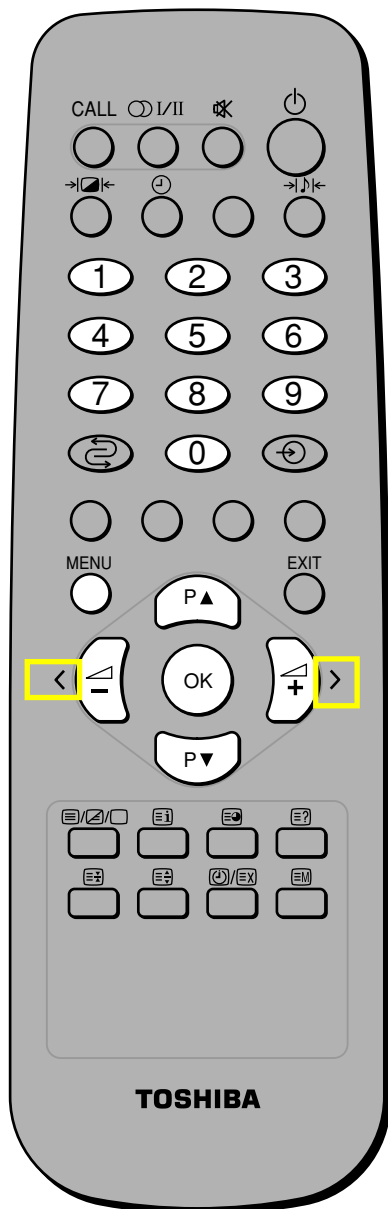

Note:

In Australia, if no station name can be assigned to a station, the channel number is assigned and stored as ----- followed by a number. See "To change or create station labels:" on page 19 to assign the station name.

1 Press the **MENU** button, then press the **< or >** button to display the Channel menu.




2 Press the **OK** button, then press the **▼** or **▲** button to select Auto programme.

3 Press the **OK** button to display the Auto programme menu. Continue to set each item following the steps described below.

System:

1 Press the **▼** or **▲** button to select System, then press the **OK** button.

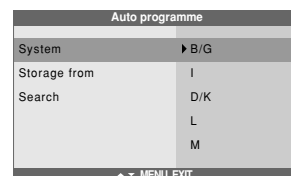

2 Select a TV system with the **▼** or **▲** button on the System menu;

B/G: PAL B/G, SECAM B/G (Europe/East Europe)

I: PAL I/II (U.K./Ireland)

D/K: PAL D/K, SECAM D/K (East Europe)

L: SECAM L/L' (France)

M: NTSC

3 Press the **OK** button.

Storage from:

1 Press the **▼** or **▲** button to select Storage from, then press the **OK** button.

2 Select the beginning programme position with the **< or >** button or **Number** button. Any number under 10 is entered with a numeric "0" in front of it, i.e. "05" for 5.

3 Press the **OK** button.


Search:

1 Press the **▼** or **▲** button to select Search.

2 Press the **OK** button to begin auto programming.

All receivable stations are stored.


To stop auto programming, press the **MENU** button.

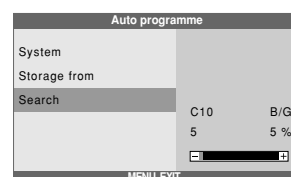


3 When auto programming is completed, the Channel menu appears on the screen automatically.

Programming channel memory (continued)

Manual programme

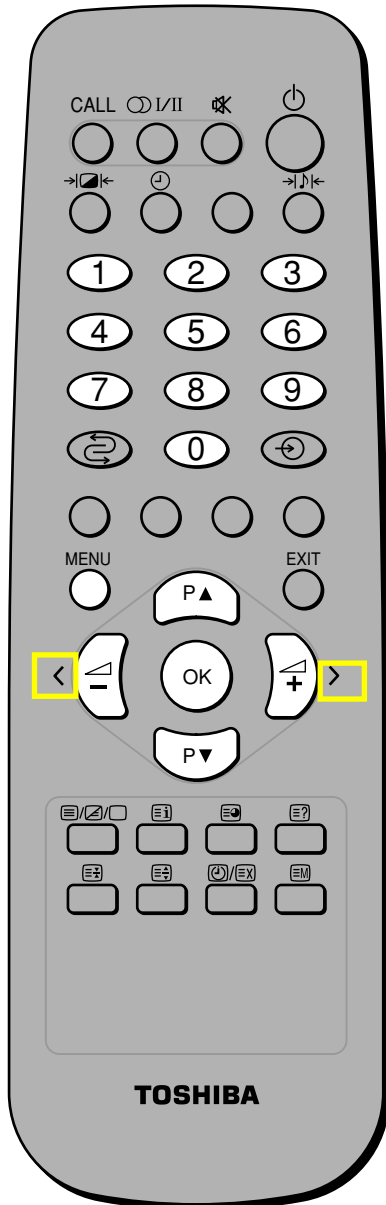

- 1 Select the programme position you want to arrange with the **P▲** or **P▼** button or Number buttons.
- 2 Press the **MENU** button, then press the **< or >** button to display the Channel menu.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select Manual programme.

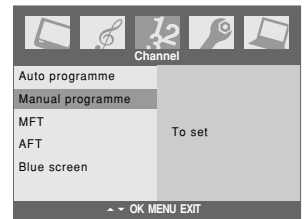


- 4 Press the **OK** button to display the Manual programme menu. Continue to set each item following the steps described below.

Storage:

With this function, a specific channel can be stored to another programme position of your choice.

- 1 Press the **▼** or **▲** button to select Storage, then press the **OK** button.
- 2 Select the desired programme number (0 to 99) with the **< or >** button or **Number** buttons on the Storage menu.
- 3 Press the **OK** button.

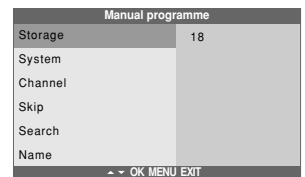


System:


- 1 Press the **▼** or **▲** button to select System, then press the **OK** button.
- 2 Select a TV system with the **▼** or **▲** button on the System menu;
 - B/G: PAL B/G, SECAM B/G (Europe/East Europe)
 - I: PAL I/II (U.K./Ireland)
 - D/K: PAL D/K, SECAM D/K (East Europe)
 - L: SECAM L/L' (France)
 - M: NTSC
- 3 Press the **OK** button.


Channel:

- 1 Press the **▼** or **▲** button to select Channel, then press the **OK** button.
- 2 Press the **▼** or **▲** button to select VHF/UHF or Cable on the Channel menu. If possible, select the channel number directly with the **Number** buttons.
- 3 Press the **OK** button.


Manual programme (continued)

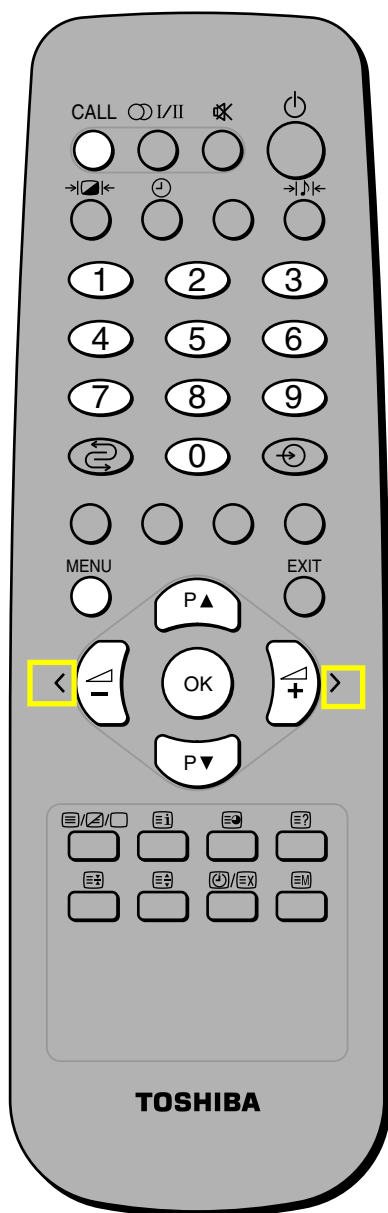**Skip:**

 - 1 Press the ▼ or ▲ button to select Skip, then press the **OK** button.
- 2 Press the ▼ or ▲ button to select On.
The programme position will then be skipped when you select channels with the **P▲** or **P▼** button.
The “” mark will appear beside a programme position number when you use the **Number** button.
- 3 Press the **OK** button.

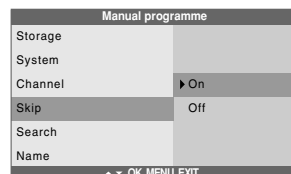
**Search:**

- 1 Press the ▼ or ▲ button to select Search, then press the **OK** button.
- 2 Press the < or > button to begin searching. If a station is found, the search will stop.
- 3 Press the **OK** button.

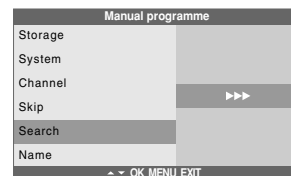**Name:**

Station names appear with the programme position display each time you turn on the TV, select a channel, or press the **CALL** button.


To change or create station labels:

- 1 Press the ▼ or ▲ button to select Name, then press the **OK** button.
- 2 Press the ▼ or ▲ button repeatedly to select a character for the first space, then press the > button.


*(blank space)
- 3 Repeat step 2 to enter the rest of the characters. If you would like a blank space in the label name, you must choose a blank space from the list of characters.
- 4 Press the **OK** button.

Programming channel memory (continued)

MFT/AFT

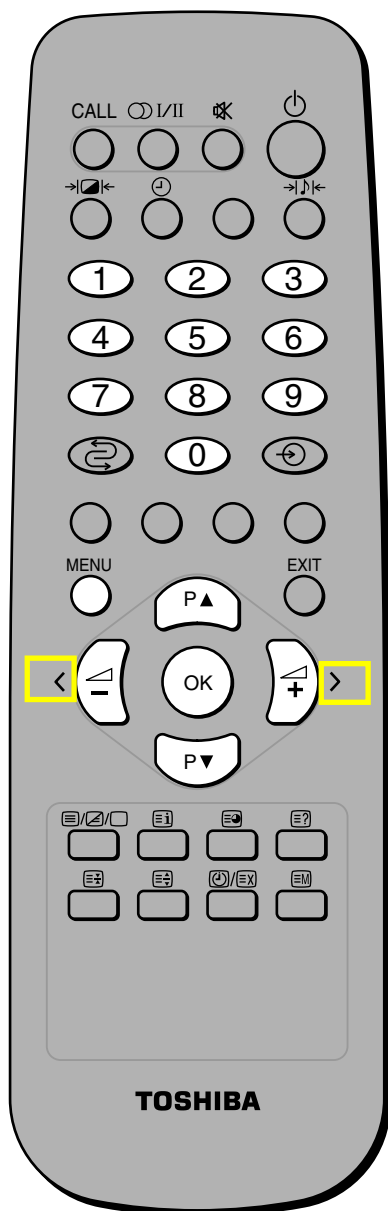

MFT (Manual Fine Tuning):

The adjustments below are not necessary under normal receiving conditions. However, in areas of inferior broadcast conditions where adjustment is necessary for a better picture, perform the MFT function.



- 1 Select the programme position you want to fine-tune with the **P▲** or **P▼** button or **Number** buttons.
- 2 Press the **MENU** button, then press the **< or >** button to display the Channel menu.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select MFT.
- 4 Press the **OK** button, then press the **< or >** button until a clear picture and sound are obtained.



AFT (Automatic Fine Tuning):

The AFT function automatically corrects slight fluctuations when receiving signals.

- 1 Select the channel you want to fine-tune with the **P▲** or **P▼** button or **Number** buttons.
- 2 Press the **MENU** button, then press the **< or >** button to display the Channel menu.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select AFT.
- 4 Press the **OK** button, then press the **▼** or **▲** button to select On.

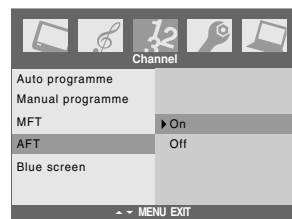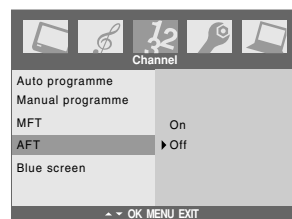


Note:

When operating the MFT function, the AFT status is automatically set to Off.

Picture quality adjustment

Picture quality adjustment

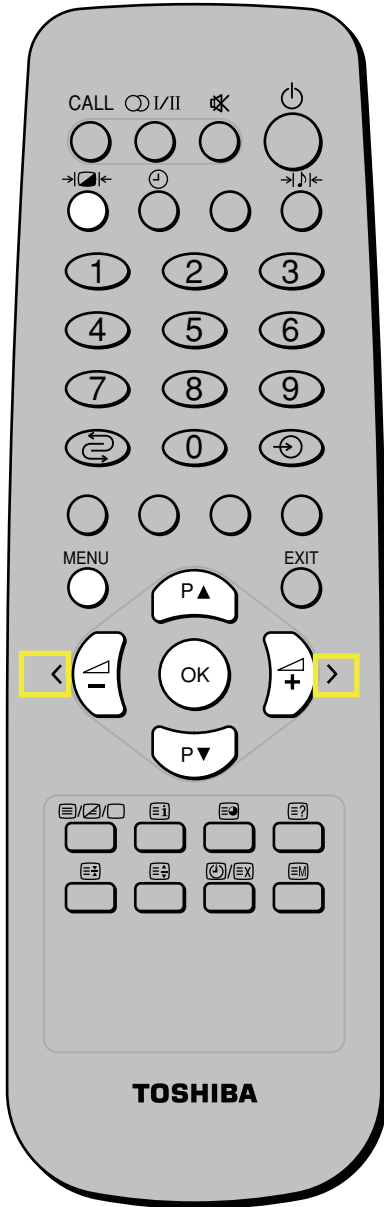


Note:
To continue adjusting the other picture qualities, press the ▼ or ▲ button in step 3.

To select the picture mode using the remote control:
You can select the picture quality instantly among three preset modes and one user-set mode.

- Repeatedly press the button to select one of the following picture qualities:

 Dynamic, Standard, Movie and Memory (user-set).




Mode	Picture quality
Dynamic	bright and dynamic picture
Standard	standard picture
Movie	movie-like picture setting
Memory	the picture qualities you set

Note:

In the PC input mode (see page 25), the picture mode is not available.

To select the picture mode using the Picture menu:



- Press the **MENU** button, then press the < or > button to display the Picture menu.
- Press the **OK** button, then press the ▼ or ▲ button to select Picture mode.
- Press the **OK** button, then press the ▼ or ▲ button to select the mode you prefer.

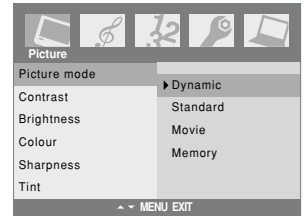

To adjust the picture quality:

The adjusted level is stored in the picture Memory.

 - Press the **MENU** button, then press the < or > button to display the Picture menu.
- Press the **OK** button, then press the ▼ or ▲ button to select Contrast, Brightness, Colour, Sharpness or Tint.
- Press the **OK** button, then press the < or > button to adjust the level.

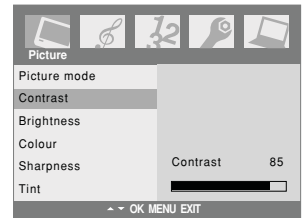


Selection	Pressing
Contrast	lower higher
Brightness	darker lighter
Colour	paler deeper
Sharpness	softer sharper
Tint*	reddish greenish

* for NTSC system only

Sound adjustment

Sound quality adjustment

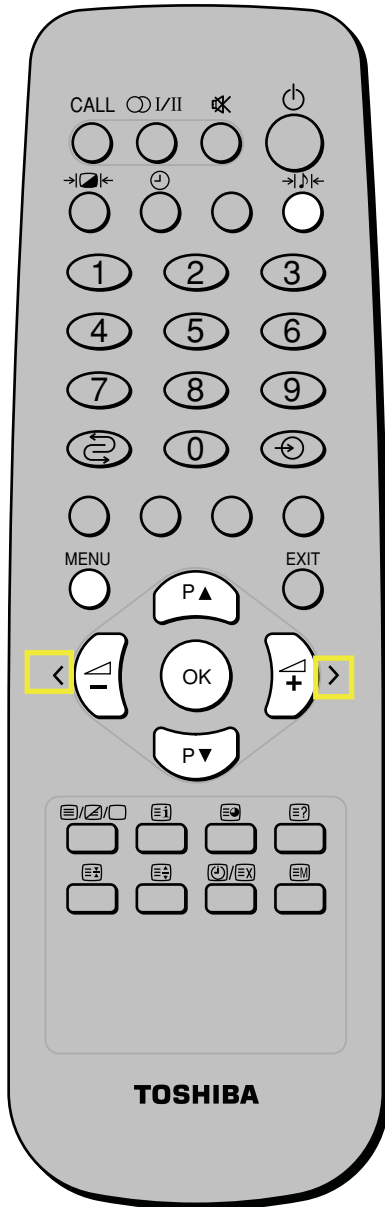

Note:
To continue adjusting the other sound qualities, press the ▼ or ▲ button in step 3.

To select the sound mode using the remote control:

You can select the sound quality instantly among five preset modes and one user-set mode.

- Repeatedly press the button to select one of the following sound qualities:

WOW, Flat, Hall, Theater, News and Memory (user-set).



Mode	Sound quality
WOW	see page 23
Flat	flat sound
Hall	a concert hall filled with a rich, warm sound
Theater	a movie theater filled with a dynamic sound
News	news/dialogue
Memory	the sound qualities you set

To select the sound mode using the Sound menu:


- Press the **MENU** button, then press the button to display the Sound menu.
- Press the **OK** button, then press the ▼ or ▲ button to select Sound mode.
- Press the **OK** button, then press the ▼ or ▲ button to select the mode you prefer.



To adjust the sound quality:


The adjusted level is stored in the sound Memory.

- Press the **MENU** button, then press the button to display the Sound menu.
- Press the **OK** button, then press the ▼ or ▲ button to select Bass, Treble or Balance.
- Press the **OK** button, then press the button to adjust the level.

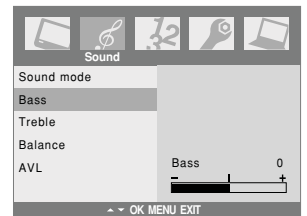

Selection		Pressing
Bass	weaker	stronger
Treble	weaker	stronger
Balance	decreases the right channel	decreases the left channel


Using the AVL function

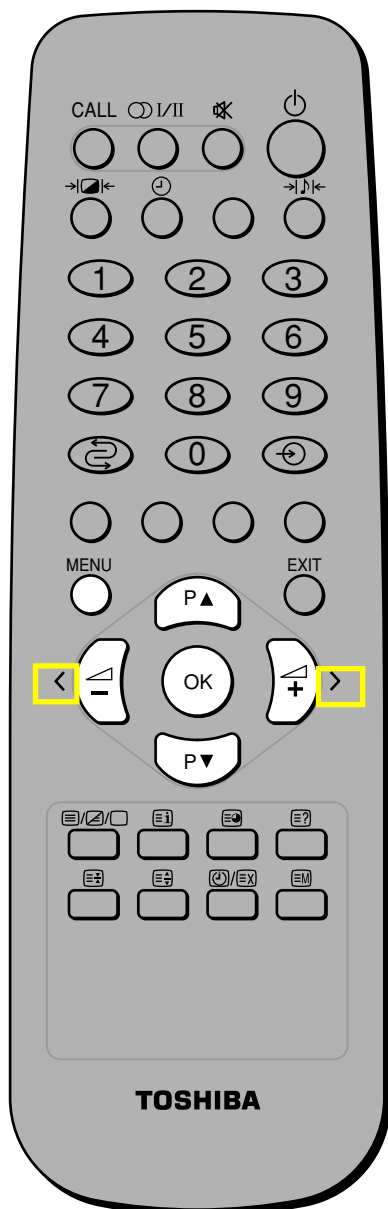

AVL maintains an equal volume level automatically, even if the channel is changed.

To activate the AVL:

- 1 Press the **MENU** button, then press the **< or >** button to display the Sound menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select AVL.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select On.

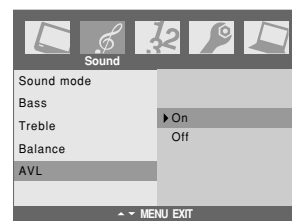

To deactivate the AVL:


Select Off in step 3 above.

WOW surround setting

To turn on the WOW surround:

WOW widens and deepens the audio listening field to deliver exceptional sound from the TV's speakers. The function uses stereo signals from a TV broadcast or video input.

- 1 Press the **MENU** button, then press the **< or >** button to display the Sound menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select Sound mode.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select WOW.

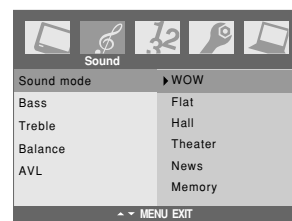


Note:

- If the broadcast is monaural, the WOW effect does not work.
- WOW, SRS and (●)® symbol are trademarks of SRS Labs, Inc.
- WOW technology is incorporated under license from SRS Labs, Inc.

Sound adjustment (continued)

Stereo/Bilingual selection

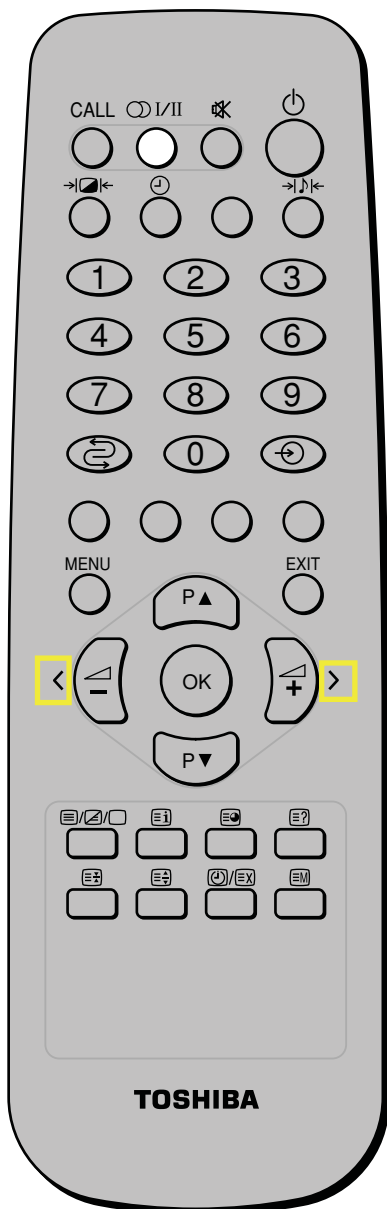

To select the stereo programmes:

- 1 When a stereo programme is received, \odot STEREO appears.
- 2 Repeatedly press the \odot /I/II button to toggle between stereo and monaural modes.



Display	Reception mode
\odot STEREO	Stereo
▽ MONO	Monaural

To select the bilingual programmes:

- 1 When a bilingual programme is received, DUAL I appears.
- 2 Repeatedly press the \odot /I/II button to select the sound to be heard. The sound differs according to the transmission system: NICAM or German stereo/bilingual broadcast. You can toggle among DUAL I, DUAL II and DUAL I:II modes.





Display	Sound to be heard	
	NICAM	German stereo/bilingual broadcast
DUAL I	Sub I sound	Main sound
DUAL II	Sub II sound	Sub sound
DUAL I:II	Sub I + Sub II sound	Main and Sub sound
▽ MONO	Main sound	-

Note:
These settings are not stored in the TV memory.

 
Input selection/Sleep Timer


 

Input selection

TV top view

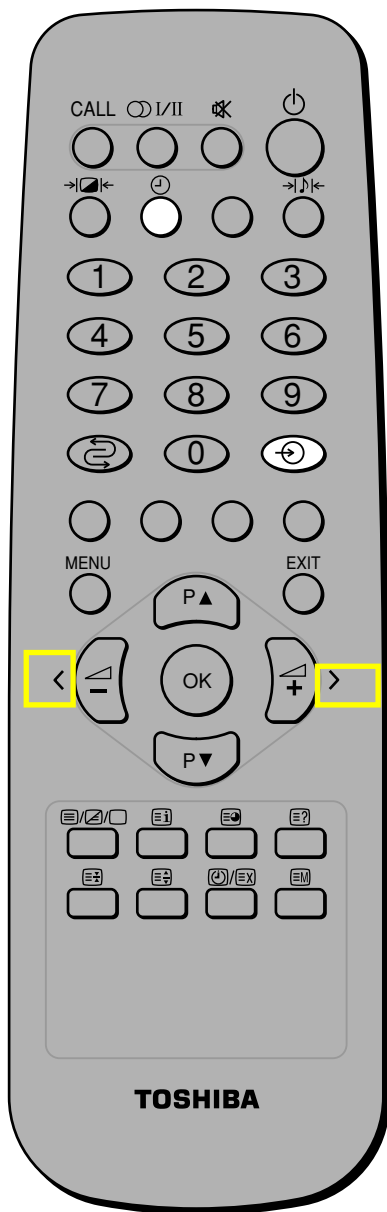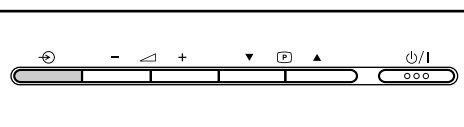

To select the input source:

Repeatedly press the  button on the TV or the remote control until you see the appropriate input indicator on the screen:

 
 
VIDEO 1 ( (1), VIDEO 1 input),
VIDEO 2 ( (2), VIDEO 2 input),
PC ( RGB/PC, PC input)




Sleep Timer

To set the Sleep Timer:




You don't have to remember to switch the TV off before you go to sleep. The sleep timer automatically switches the TV to standby after the preset time has elapsed.

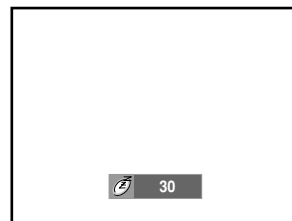Repeatedly press the  button to select the period of time. " 30" will appear on the screen, followed by, 60, 90, 120 and Off.



 
The timer begins to count down from the period of minutes selected.

Note:

- To view the remaining sleep time, press the  button once.
- To cancel the sleep time, repeatedly press the  button until the display " Off" appears.
- When you switch the TV off, the preset sleep time is cancelled.

Blue screen function/ Activating the Auto off function

Blue screen function

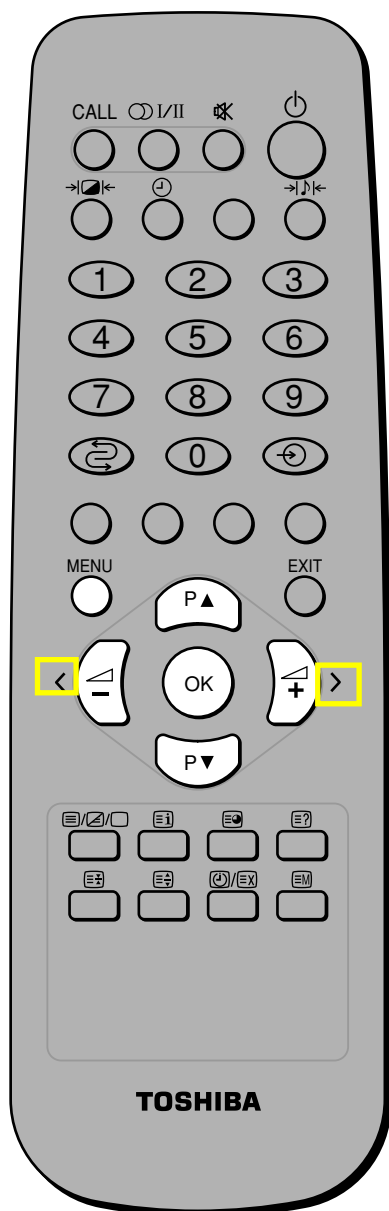

With the blue screen function On, if the TV does not receive a signal, the screen will automatically turn blue and the sound will be muted.

To turn on the blue screen:

- 1 Press the **MENU** button, and then press the **< or >** button to display the Channel menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select Blue screen.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select On.




Note:

- If the blue screen function does not operate properly due to unstable signal strength or frequency, select Off in step 3.
- In the PC input mode, the blue screen function is not available.
- In the VIDEO 1 input mode using the component video jacks, the blue screen function is not available.

Activating the Auto off function

With the Auto off function On, the TV automatically turns off if no signal is received for approximately 15 minutes.

- 1 Press the **MENU** button, then press the **< or >** button to display the Setup menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select Auto off.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select On.

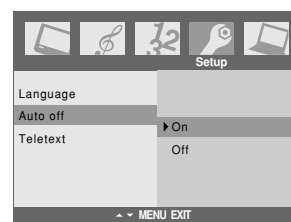


To turn off the Auto off function:

Select Off in step 3 above.







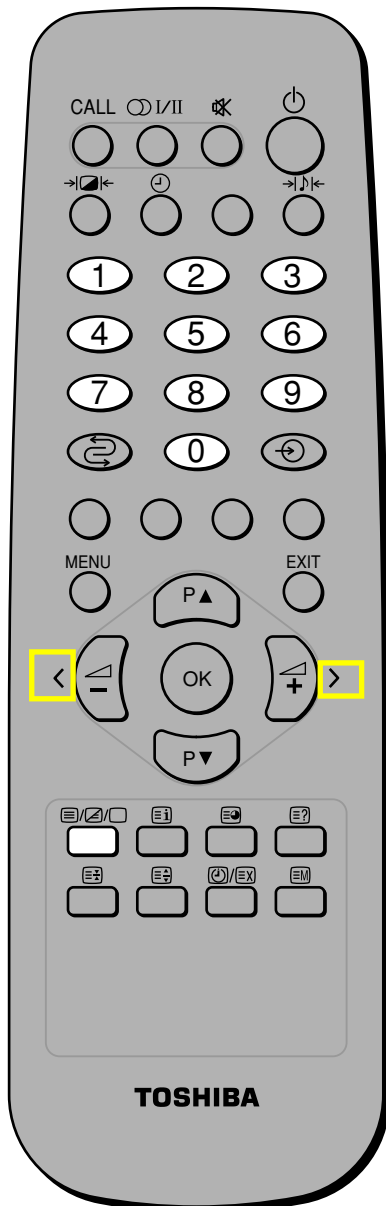


Teletext - Control buttons

The TV is capable of showing both normal text and the text information selected by Auto mode and List mode. The Teletext buttons on the remote control have the same function for both text information types.

To view normal text



To display a page of text (/ /):

 
- 1 Select a desired TV station with the text service.
- 2 Press the  /  /  button.
The index page will appear.
- 3 Enter the 3-digit page number using the **Number** buttons (0 - 9).
Ex. Page 100: Press 1, 0 and 0.
- 4 Press the  /  /  button again to superimpose the teletext over a normal broadcast picture.
- 5 Press the  /  /  button again to return to normal TV mode.


Teletext - Control buttons (continued)

Below is an introduction to the teletext buttons on your remote control and their functions.



Teletext buttons on the remote control


Note:

It will not be possible to change programme position while in Teletext mode. You will have to cancel the teletext first by pressing the  button to return to a normal TV mode.

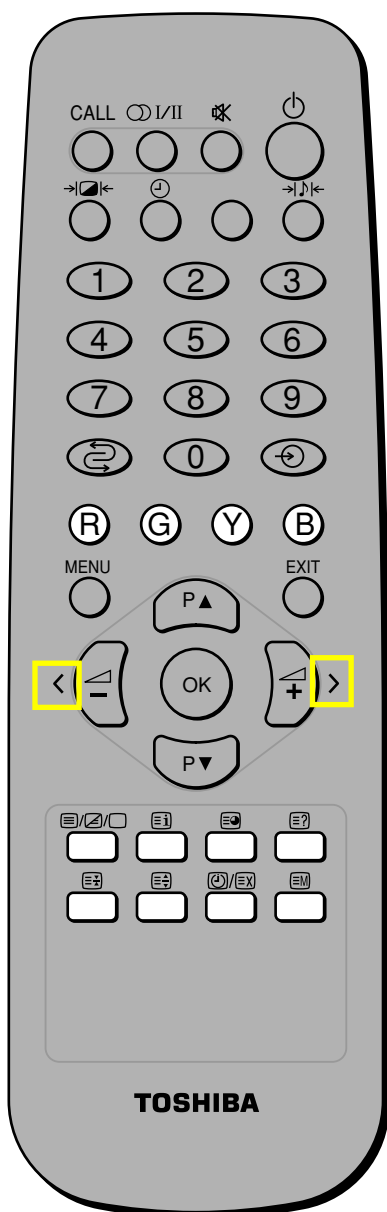

To display a page of teletext:

  Press the  button to display teletext. Press again to superimpose the teletext over a normal broadcast picture. Press the  button again to return to normal TV mode. You need to return to normal viewing if you wish to change channels.


When you first press the  button to access the text service, the first page you see will be the initial page.

In **Auto** mode, this displays the main subjects available and their relevant page numbers.


In **List** mode, you will see whichever page number is currently stored on **each coloured** button.

To display an index/initial page:

 
In Auto-mode

Press the  button to access the index page. The one displayed is dependant on the broadcaster.

In List-mode



Press the  button to return to your page currently stored on each coloured button.

To reveal concealed text:

Some pages cover topics such as quizzes and jokes. To discover the solutions, press the  button.


To hold a desired page:

   When a page is divided into sub pages, it is convenient to hold a given page.


 
Press the  button to hold the page. "

 will appear in the top left of the screen. Press again to release the hold mode.

To enlarge the teletext display size:

Press the  button once to enlarge the top half of the page. Press again to enlarge the bottom half of the page. Press a third time to revert to the normal size.


To select a page while viewing a normal picture:

When in teletext mode, if a page selection is made and then the  button is pressed, a normal picture will be displayed. The TV will indicate when the page is present by displaying the number of the text page at the top of the screen. Press the  button to view the page.

To switch the teletext mode:

While the teletext mode, press the  button to switch between List mode and another mode.

Teletext buttons on the remote control (continued)

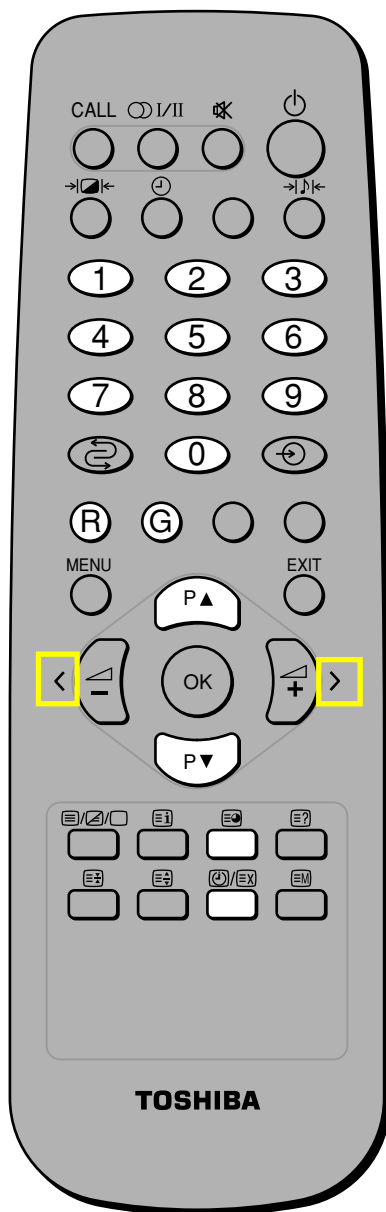


To select the time display (with the Teletext service only):

If you press the button while watching a normal TV broadcast, you will see a time display from the broadcaster.

To erase the time display, press the button again.

9:56 and 25 seconds p.m.

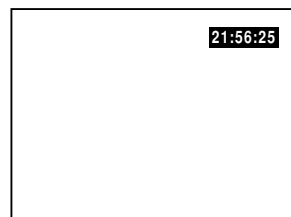

Sub-pages:

If there are sub-pages, you can access the sub-pages by using the button.


Press the button to select a sub-page number. The sub-page number is displayed at the bottom of the screen. To change the sub-page, press the **R**, **G**, **▲**, **▼** or **Number** buttons. Press the button again to exit this function.

Teletext - Auto and List modes

Auto mode

Auto mode is a method of viewing Teletext pages by related subjects grouped by the broadcast studio. You can access any given topic shown on the screen simply by pressing the corresponding coloured text select button on the remote control.


Using Auto mode

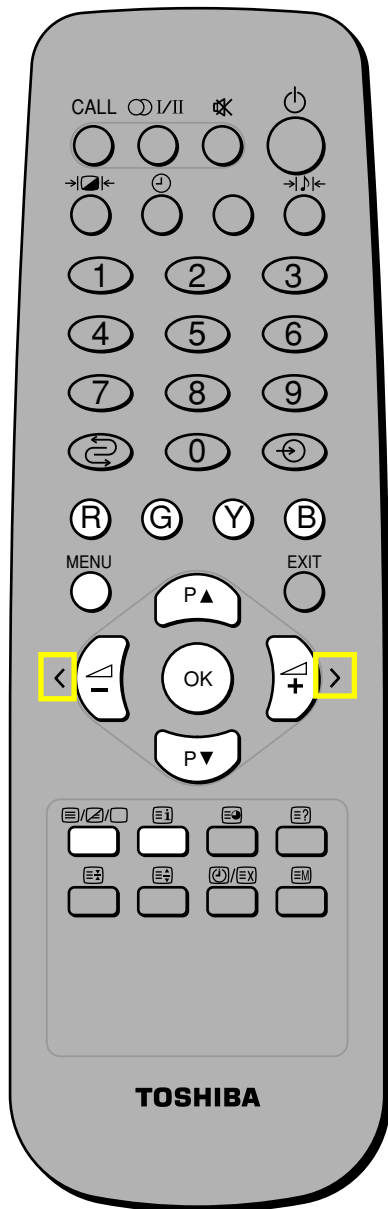

To select the Auto mode:


When you select the Auto mode, four coloured prompts appear at the bottom of the screen. The colours correspond to those of the text select buttons on the remote control. Press the corresponding coloured button to go to the desired topic page instantly.

- 1 Select a TV channel with the desired FASTEXT service.
- 2 Press the **MENU** button, then press the **< or >** button to display the Setup menu.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select Teletext.
- 4 Press the **OK** button, then press the **▼** or **▲** button to select Auto (Fastext mode).

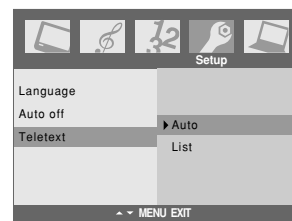


To view Fastext:

- 1 Press the **≡/≡/□** button to select the text mode. Four coloured prompts will appear at the bottom of the screen.

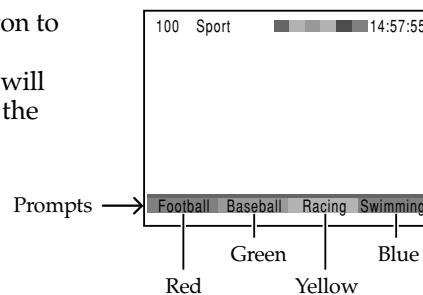

- 2 Press the coloured button that corresponds to your desired topic. The display will switch to the selected page.
- 3 Repeat step 2 to switch to the next topic you want to view.

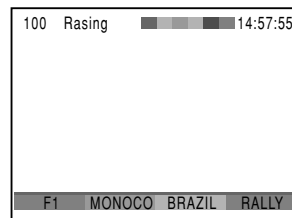


To return to the normal TV mode:

Press the **≡/≡/□** button twice.
Press the **≡** button to display an index page.

List mode


You can preset up to four of the most frequently used text pages to select these pages easily.

Using List mode

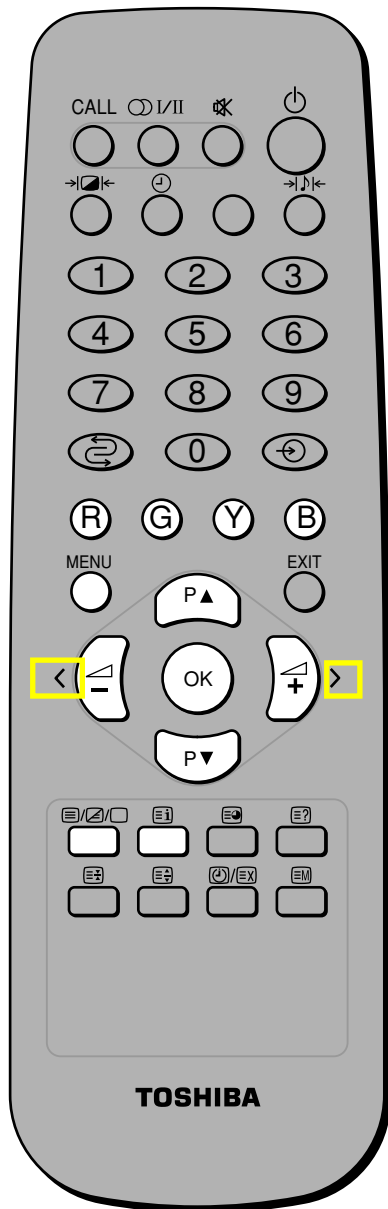

To select the List mode:


- 1 Press the **MENU** button, then press the **< or >** button to display the Setup menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select Teletext.
- 3 Press the **OK** button, then press the **▼** or **▲** button to select List (List mode).
- 4 Select a TV channel with the normal text service.

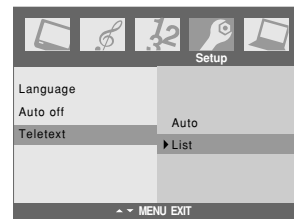

To preset desired pages:

- 1 Press the **≡/□/□** button to select the text mode.
- 2 Press the **R** button to select the red page.

EX. Factory presetting

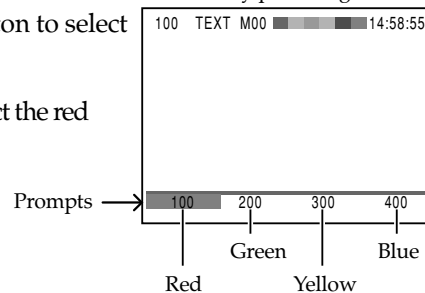

- 3 Press the **Number** buttons to enter the 3-digit page number that you want to preset the red page.
Ex. page 120 : Press 1, 2 and 0.

The preset page is displayed on the screen.

- 4 Press the **OK** button to store your choice.
- 5 Repeat steps 2 - 4 to preset the other three pages using the **G**, **Y**, and **B** buttons.

To display a desired page:

Press the desired coloured button according to the four coloured prompts on the screen.

To display an initial page:


Press the **≡** button.

Side panel connections

You can connect a wide variety of auxiliary equipment via the inputs located on the TV's side panel. The side panel connections are referred to as "VIDEO 2."

Connection example


Always refer to the owner's manual of the equipment to be connected for full details.

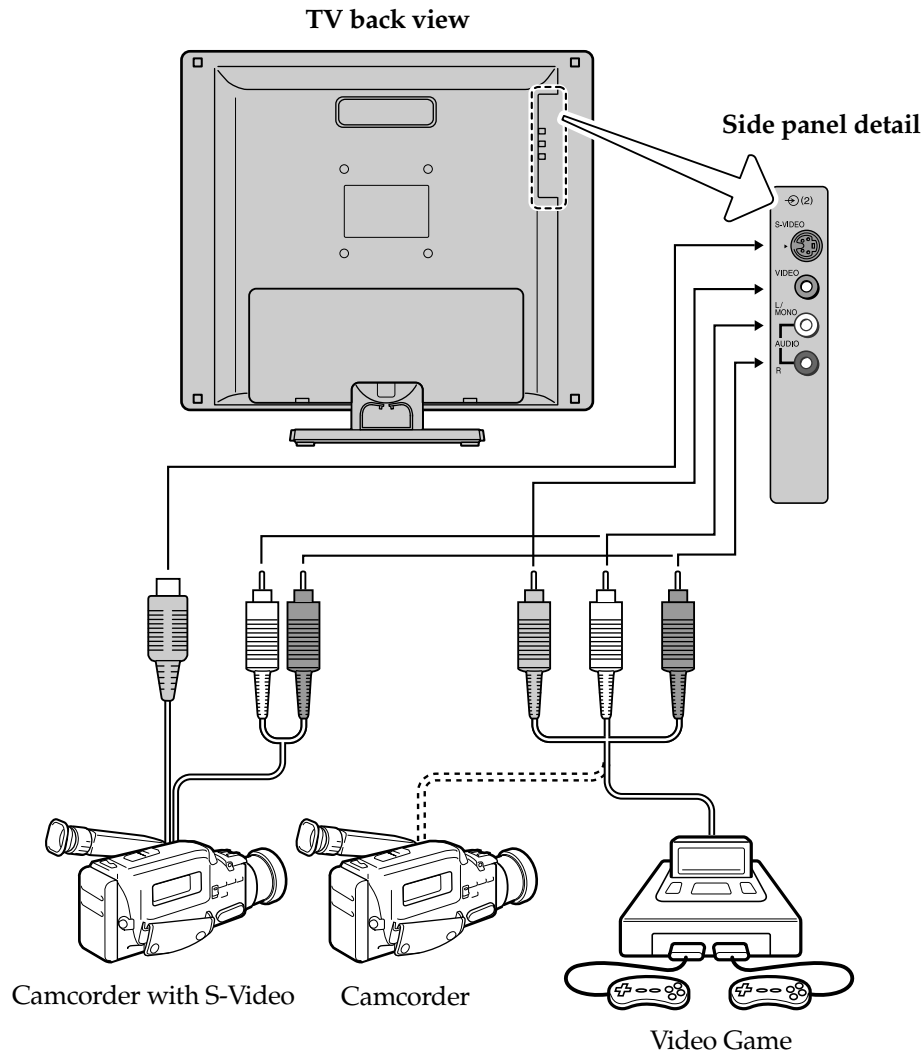

- To select the side inputs, press the button repeatedly to select VIDEO 2 (see page 25).
- Never plug in any power cords until you have finished connecting all equipment.
- Connect either the S-VIDEO input terminal or VIDEO input terminal, whichever terminal is used. Do not connect to both of these terminals at the same time.
- If you connect mono sound equipment to VIDEO 2, connect the audio output of the equipment to the L/MONO jack on the TV.
- You can enjoy video games with this TV; however, games that involve shooting at a target on the TV screen with a light gun may not work because of the LCD colour TV properties.

Back panel connections

Connection example

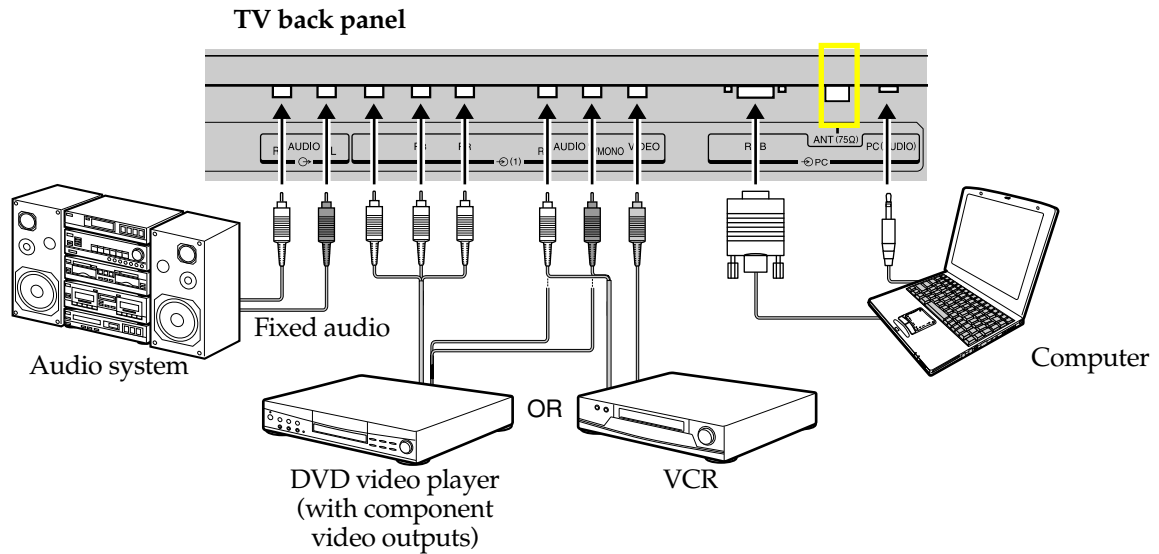


- Do not plug in any power cords until you have finished connecting all equipment.
- Before connecting any external equipment, remove the TV back terminal panel cover (see page 11).
- Connect to either the component video jacks or the standard VIDEO jack, depending on your video cable(s).
- The VIDEO 1 inputs include three component video jacks (Y, P_B/C_B, P_R/C_R). Component video provides better picture performance than standard video or S-video. Three jacks can only be used with component video compatible equipment (e.g., a Toshiba DVD video player with component video outputs).
- Additional equipment and cables shown are not supplied with this TV.

Connecting a computer

Before connecting PC and audio cables, remove the back terminal panel cover (see page 11).
An analogue RGB (15-pin) computer cable can be connected.

To connect a computer

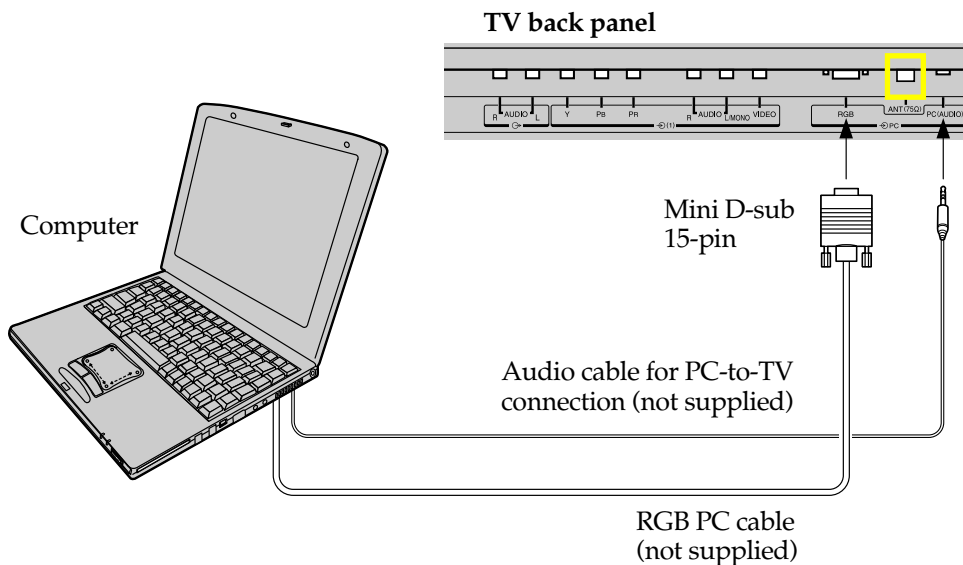

Connect a PC cable from the computer to the RGB/PC input terminal on the back of the TV.

The following signal can be displayed:

- 20CL7A/20CL7E/20CL7T : • VGA: VESA 640 x 480 @ 60 Hz
- 15CL7A/15CL7E/15CL7T : • XGA: VESA 1024 x 768 @ 60Hz
- SVGA: VESA 800 x 600 @ 60 Hz
- VGA: VESA 640 x 480 @ 60 Hz

Other formats or non-standard signals may not be displayed correctly.

Note:

- The colour blur on the picture may occur according to input signals.
- Some PC models cannot be connected to this TV.
- Computers with a DOS/V compatible mini D-sub 15-pin terminal do not require an adapter.
- Some input signals may cause a bar to appear in the upper, lower, right, or left side of the screen, or may obscure parts of the picture. This is not a malfunction.
- If the edges of the picture are stretched, readjust the picture position adjustments in the PC's menu.
- Depending on the DVD's title and the specification of the PC on which you are playing the DVD-Video, some scenes may be skipped or you may not be able to pause during multi-angle scenes. This is not a malfunction.

Signal names for mini D-sub 15 pin connector


Pin No.	Signal name	Pin No.	Signal name
1	R	9	NC
2	G	10	Ground
3	B	11	NC
4	NC (not connected)	12	NC
5	Ground	13	H-sync
6	Ground	14	V-sync
7	Ground	15	NC
8	Ground		

Pin assignment for RGB/PC terminal

PC Setting

You can adjust the horizontal/vertical picture position, clock (to minimize vertical stripes on the screen), and phase (to remove horizontal noise and sharpen the picture). You can auto-configure and reset these settings.

Picture position/Clock/Phase adjustments

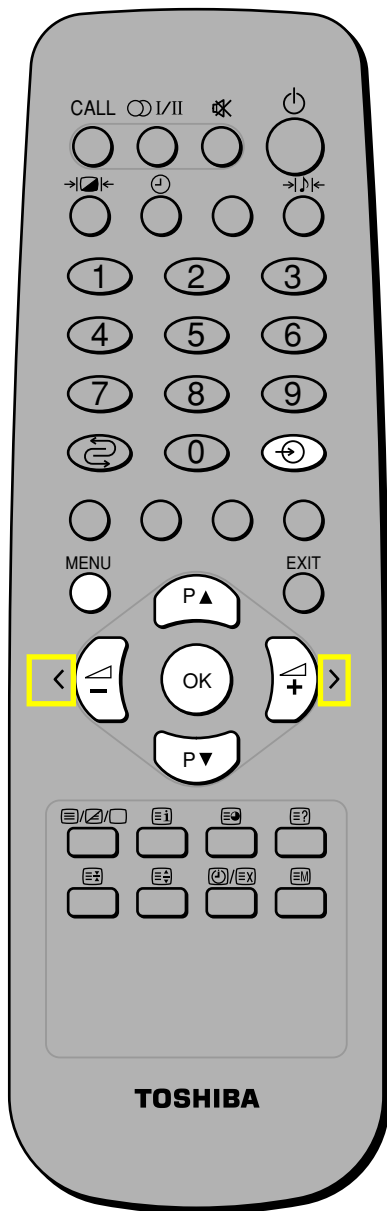


Note:


The optimum points of the clock and phase adjustments will vary according to the input signals.

First, start up the computer connected to the TV, then press the button repeatedly to select the PC input mode (see page 25).

- 1 Press the **MENU** button, then press the **< or >** button to display the PC menu.

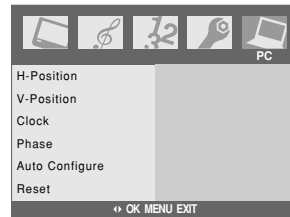

- 2 Press the **OK** button, then press the **▼** or **▲** button to select the desired item.

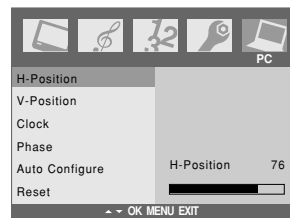

- 3 Press the **OK** button, then press the **< or >** button to make appropriate adjustments.

- H-Position / V-Position

Use this function to adjust the picture to the left/right and up/down as you prefer.

- Clock

Use this function to minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.


- Phase

Use this function to remove any horizontal noise and sharpen the image of characters.

PC Setting (continued)


- The Auto configure function allows you to automatically adjust the screen position, clock, and phase.
- The reset function allows you to return to the picture settings programmed at the factory.

Auto configure/To reset

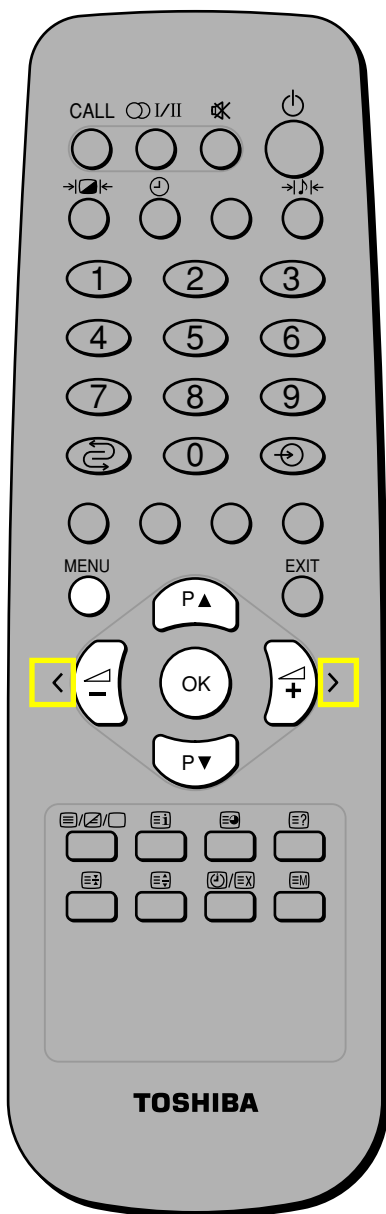

To auto configure:

- 1 Press the **MENU** button, then press the **< or >** button to display the PC menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select Auto configure.
- 3 Press the **OK** button. The automatic adjustment will start.

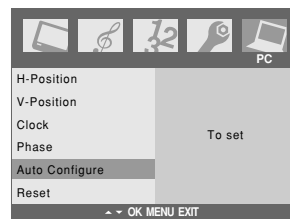

Note:

The displayed image will disappear for a few seconds while the Auto configuration is in progress.

To reset the PC setting:

- 1 Press the **MENU** button, then press the **< or >** button to display the PC menu.
- 2 Press the **OK** button, then press the **▼** or **▲** button to select Reset.
- 3 Press the **OK** button.



Note:

Some graphics boards' signals may not display properly. If the results are unsatisfactory, adjust your monitor's position, clock and phase manually.

Troubleshooting

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

Symptom and solution

Symptom	Solution
TV will not turn on	<ul style="list-style-type: none"> • Make sure the power cord is plugged in, then press \mathcal{O}/I. • The remote control batteries may be dead. Replace the batteries.
No picture, no sound	<ul style="list-style-type: none"> • Check the aerial connections.
No sound, picture OK	<ul style="list-style-type: none"> • The sound may be muted. Press \triangleleft +, \triangleleft - or \mathcal{O}. • The station may have broadcast difficulties. Try another channel.
Poor sound, picture OK	<ul style="list-style-type: none"> • The station may have broadcast difficulties. Try another channel.
Poor picture, sound OK	<ul style="list-style-type: none"> • Check the aerial connections. • The station may have broadcast difficulties. Try another channel. • Adjust the Picture menu.
Poor reception of broadcast channels	<ul style="list-style-type: none"> • Check the aerial connections. • The station may have broadcast difficulties. Try another channel.
Teletext problems	<ul style="list-style-type: none"> • Check the aerial connections. <p>Good performance of text depends on a clear, strong broadcast signal.</p>
Multiple images	<ul style="list-style-type: none"> • The station may have broadcast difficulties. Try another channel. • Reorient aerial. • Aerial reception may be poor. Use a highly directional outdoor aerial.
Poor colour or no colour	<ul style="list-style-type: none"> • The station may have broadcast difficulties. Try another channel. • Adjust the Tint and/or Colour in the Picture menu.
The remote control does not operate	<ul style="list-style-type: none"> • Remove all obstructions between the remote control and the remote control sensor in the TV. • The remote control batteries may be dead. Replace them with new ones.
Some parts of the screen do not light up	<ul style="list-style-type: none"> • The LCD display panel is manufactured using an extremely high level of precision technology; however, sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of a malfunction.
The picture brightness is reduced, the screen flickers, or some parts of the screen do not light up	<ul style="list-style-type: none"> • When you first buy and start to use this TV, the screen may flicker. If this happens, turn off the TV, then turn it on again. • The cold cathode fluorescent lamp used for the back light on this TV has a limited service life. When the picture brightness fades, the screen flickers, or some parts of the screen do not light up, the lamp may be at the end of its useful life.
The picture brightness varies when you turn on the TV	<ul style="list-style-type: none"> • If you turn on the TV in an area with a temperature of 0°C or lower, wait until the display warms up.

Broadcast systems/Specifications

Broadcast Transmission Systems of Each Country or Region

Area	Country or Region	System	
		Colour	Sound
Asia M. E.	Bahrain, Kuwait, Israel, Oman, Qatar, United Arab Emirates, Yemen, etc. Indonesia, Malaysia, Singapore, Thailand, etc.	PAL	B/G
	China	PAL	D/K
	China Hong Kong	PAL	I
	Iraq, Islamic Republic of Iran, Lebanon, Saudi Arabia, etc.	SECAM	B/G
	Russian Federation, etc.	SECAM	D/K
	Myanmar, etc.	NTSC	M
Oceania	Australia, New Zealand, etc.	PAL	B/G
Africa	Republic of South Africa, etc.	PAL	I
South America	Argentina, Paraguay, Uruguay, etc.	PAL	N
	Brazil	PAL	M
	Chile, Colombia, etc.	NTSC	M

Note:

PAL, SECAM and NTSC 3.58 (MHz) are different colour signal broadcast transmission systems applicable to different countries or regions. NTSC 4.43 (MHz) is used in special VCRs to play NTSC-recorded video tapes through PAL television equipment.

LCD Colour Television Specifications

- This model complies with the specifications listed below.
- Design and specifications are subject to change without notice.
- Never service or remodel the TV by yourself. It may expose you to a fire hazard or dangerous voltages.

Model	15CL7A/E/T, 20CL7A/E/T		
Power source	15CL7A/E/T: 100 - 240V AC, 50/60 Hz 20CL7A/E/T: 100 - 240V AC, 50/60 Hz		
Power consumption	15CL7A/E/T: 50 W (average), 0.8 W (standby mode) 20CL7A/E/T: 65 W (average), 0.8 W (standby mode)		
Dimensions (Including TV stand)	15CL7A/E/T: 379 mm (W)	388 mm (H)	203 mm (D)
	20CL7A/E/T: 491 mm (W)	469 mm (H)	228 mm (D)
Mass (Weight)	15CL7A/E/T: 5.6 kg 20CL7A/E/T: 9.1 kg		
Television system (Aerial input)	Channel coverage:		
	PAL	B/G	VHF 2 - 12 UHF 21 - 69 CATV X - Z+2, S1 - S41
	PAL	I	VHF - UHF 21 - 69 CATV -
	PAL	D/K	VHF 1 - 12 UHF 13 - 57 CATV Z1 - Z38

LCD Colour Television Specifications (continued)

	SECAM B/G	VHF 2 - 12 UHF 21 - 69 CATV X - Z+2, S1 - S41
	SECAM D/K	VHF 1 - 12 UHF 21 - 69 CATV X1 - X19
	SECAM L	VHF 2 - 10 UHF 21 - 69 CATV B - Q
	NTSC M	VHF 2 - 13 UHF 14 - 69 CATV A6 - A1, A - W, AA - ZZ, AAA, BBB
	NTSC M	VHF 1 - 12 UHF 13 - 62 CATV M1 - M10, S1 - S41
	Special RF signal:	
	NTSC 4.43 colour system	5.5/6.0/6.5 MHz sound system
	PAL 60 Hz colour system	5.5/6.0/6.5 MHz sound system
COMPONENT VIDEO INPUT terminals (the signal format)	480i, 480p, 576i, 576p	(These signal formats are converted to match the number of pixels in the LCD panel.)
Colour system	PAL, SECAM, NTSC 3.58/4.43	
Aspect ratio	4 : 3	
Visible size (diagonal)	15CL7A/E/T: 38.0 cm 20CL7A/E/T: 51.0 cm	
Number of pixels	15CL7A/E/T: 1024 (H) dots × 768 (V) dots 20CL7A/E/T: 640 (H) dots × 480 (V) dots	
Audio power	5 W + 5 W (10% THD)	
Speakers	40 × 70 mm 2pcs.	
Input/Output terminals	VIDEO 1 Input	Component video (Y, P _B /C _B , P _R /C _R) Composite video Audio L/Mono + R
	VIDEO 2 Input	S-video Composite video Audio L/Mono + R
	PC Input	Analogue RGB (Mini D-sub 15-pin) Audio (3.5 mm stereo mini)
	Audio Output Headphone jack	L, R (Fixed audio) 3.5 mm stereo mini
Operating condition	Temperature	0°C - 35°C
	Humidity	20% - 80% (No moisture condensation)
Supplied accessories	Owner's manual, Remote control, Batteries (2), Power cord, Aerial extension cable, Clip	

TOSHIBA CORPORATION