

BioStar 1.8

Administrator Guide

BioStar 1.8 Administrator Guide

Suprema Warranty Policy.....	vii
Disclaimers.....	vii
Copyright Notice	viii
01 About the BioStar System	9
1.1 Logical Configuration	12
1.2 Access Control Features	14
1.2.1 User Authentication	14
1.2.2 User Management	16
1.2.3 Access Group Management	16
1.2.4 Device Management.....	16
1.2.5 Door and Elevator (Lift) Management	17
1.2.6 Zone Management	17
1.2.7 Time and Attendance.....	17
1.2.8 IP Camera and NVR Server Management.....	17
02 Install the BioStar Software	19
2.1 System Requirements	19
2.2 Run the BioStar Installer	20
2.3 Install the BioStar Server Application	23
2.3.1 Configure the MySQL Database	25
2.3.2 Configure the BioStar Server	25
2.4 Install the BioStar Client Application	27
2.4.1 Log in to BioStar for the First Time.....	29
2.4.2 BioStar Interface	30
2.5 Customize the BioStar Interface	31
2.5.1 Change the Theme	31
2.5.2 Customize the Toolbar	32
2.5.3 Change Event Views.....	33
2.6 Migrate a Database from BioAdmin to BioStar	33
03 Setup the BioStar System	35
3.1 Create Administrative Accounts	35
3.1.1 Administrative Levels	35

BioStar 1.8 Administrator Guide

3.1.2	Add and Customize Administrative Accounts	36
3.2	Setup Devices	39
3.2.1	Search for and Add Devices	39
3.2.2	Search for and Add Slave Devices	41
3.2.3	Add an RF Device.....	42
3.2.4	Connect a Device via Wireless LAN	43
3.2.5	Configure a BioStation Device.....	45
3.2.6	Configure a BioEntry Plus or BioEntry W Device.....	47
3.2.7	Configure a BioLite Net Device	49
3.2.8	Configure an Xpass or Xpass Slim Device	50
3.2.9	Configure a D-Station Device	52
3.2.10	Configure an X-Station Device	54
3.2.11	Configure a BioStation T2 Device	55
3.2.12	Configure a FaceStation Device	58
3.2.13	Change Wiegand Formats.....	59
3.3	Setup Doors	63
3.3.1	Add a Door.....	63
3.3.2	Associate a Device With a Door	63
3.3.3	Configure a Door	64
3.3.4	Create a Door Group.....	64
3.4	Setup Elevators (Lifts)	65
3.4.1	Add an Elevator	65
3.4.2	Associate a Device With an Elevator	65
3.4.3	Configure an Elevator.....	66
3.4.4	Add Users to an Elevator.....	66
3.4.5	Transfer Settings to an Elevator	67
3.5	Setup Zones	68
3.5.1	Determine Which Zones to Use.....	68
3.5.2	Add and Configure Zones	70
3.6	Setup Users	75
3.6.1	Create a User Account	76
3.6.2	Register Fingerprints.....	77
3.6.3	Capture Face Images.....	80
3.6.4	Issue Access Cards	82
3.6.5	Transfer User Data.....	90
3.6.6	User Data Encryption	93

BioStar 1.8 Administrator Guide

3.7	Setup Timezones	94
3.7.1	Create a Timezone	94
3.7.2	Create a Holiday Schedule	95
3.8	Setup Access Groups	97
3.8.1	Add an Access Group.....	97
3.8.2	Add Users to Access Groups	98
3.8.3	Assign Access Groups to Users.....	98
3.8.4	Transfer Access Groups to Devices	99
3.8.5	Check for Access Rules by Device.....	99
3.9	Setup Time and Attendance	100
3.9.1	Add a Time Category	100
3.9.2	Add a Daily Schedule	102
3.9.3	Add a Shift.....	104
3.9.4	Assign Users to Shifts	105
3.9.5	Choose a Device for T&A	107
3.10	Setup Alarms	108
3.10.1	Configure Alarm Settings and Sounds.....	109
3.10.2	Configure email notifications	111
3.10.3	Configure Settings for External Devices.....	113
3.11	Setup Cameras	115
3.11.1	Add an NVR Server	116
3.11.2	Add an IP Camera	118
3.11.3	Configure an IP Camera	120
04	Manage the BioStar System	121
4.1	Monitor Events in Real Time.....	121
4.1.1	Monitor Muster Zones in Real Time	123
4.1.2	Monitor Areas with Cameras in Real Time	124
4.2	View Event Logs	124
4.2.1	Upload Logs to BioStar	125
4.2.2	View Logs in User, Door, and Zone Panes	126
4.2.3	View Logs from the Monitoring Pane	126
4.2.4	View Access Logs	127
4.3	Monitor Door Events via a Visual Map	128
4.3.1	Create a Visual Map	128

BioStar 1.8 Administrator Guide

4.3.2	Monitor Doors on a Visual Map	129
4.4	Control Doors, Alarms, and Devices Remotely	132
4.4.1	Open or Close Doors	132
4.4.2	Release Alarms.....	132
4.4.3	Lock or Unlock Devices	132
4.5	Manage Users	135
4.5.1	Delete Users	135
4.5.2	Transfer Users to Other Departments.....	137
4.5.3	Customize User Information Fields.....	137
4.5.4	Export User Data.....	138
4.5.5	Import User Data	139
4.6	Manage Time and Attendance	140
4.6.1	Monitor T&A Status via the IO Board	140
4.6.2	Generate T&A Reports.....	141
4.6.3	Modify T&A Reports.....	144
4.6.4	Print or Export T&A Report Data.....	145
4.7	Manage Devices	146
4.7.1	Remove Devices.....	146
4.7.2	Upgrade Device Firmware	146
4.7.3	Downgrade Device Firmware	147
4.8	Activate Fingerprint Encryption	147
4.9	Change the Fingerprint Template	148
05	Customize Settings	149
5.1	Customize Device Settings	149
5.1.1	Customize Settings for BioStation Devices	149
5.1.2	Customize Settings for BioEntry Plus or BioEntry W Devices	162
5.1.3	Customize Settings for BioLite Net Devices	173
5.1.4	Customize Settings for Xpass Devices	186
5.1.5	Customize Settings for Xpass Slim Devices.....	197
5.1.6	Customize Settings for D-Station Devices	207
5.1.7	Customize Settings for X-Station Devices.....	221
5.1.8	Customize Settings for BioStation T2 Devices.....	232
5.1.9	Customize Settings for FaceStation Devices	248



BioStar 1.8 Administrator Guide

5.2	Customize Door Settings.....	262
5.2.1	Details tab	262
5.2.2	Alarm tab.....	264
5.3	Customize Zone Settings.....	265
5.3.1	Customize Settings for Anti-Passback Zones	265
5.3.2	Customize Settings for Entrance Limit Zones	267
5.3.3	Customize Settings for Alarm Zones	269
5.3.4	Customize Settings for Fire Alarm Zones.....	271
5.3.5	Customize Settings for Access Zones	273
5.3.6	Customize Settings for Muster Zones.....	274
5.3.7	Customize Settings for Interlock Zones	276
5.4	Customize User Settings	276
5.4.1	Details Tab	277
5.4.2	Fingerprints Tab	278
5.4.3	Face Tab.....	278
5.4.4	Face (Fusion) Tab.....	279
5.4.5	Card Tab	279
5.4.6	T&A Tab.....	280
06	Technical Support	281
	Glossary	282

BioStar 1.8 Administrator Guide

Warranty and Disclaimers

Suprema Warranty Policy

Suprema warrants to Buyer, subject to the limitations set forth below, that each product shall operate in substantial accordance with the published specifications for such product for a period of one (1) year from the date of shipment of products ("Warranty Period"). If Buyer notifies Suprema in writing within the Warranty Period of any defects covered by this warranty, Suprema shall, at its option, repair or replace the defective product that is returned to Suprema within the Warranty Period, with freight and insurance prepaid by Buyer. Such repair or replacement shall be Suprema's exclusive remedy for breach of warranty with respect to the Product. This limited warranty shall not extend to any product that has been: (i) subject to unusual physical or electrical stress, misuse, neglect, accident or abuse, or damaged by any other external causes; (ii) improperly repaired, altered or modified in any way unless such modification is approved in writing by the Supplier; (iii) improperly installed or used in violation of instructions furnished by Suprema.

Suprema shall be notified in writing of defects in the RMA (Return Material Authorization) report supplied by Suprema not later than thirty days after such defects have appeared and at the latest one year after the date of shipment of the Product. The report should include full details of each defective product, model number, invoice number, and serial number. No product without an RMA number issued by Suprema may be accepted and all defects must be reproducible for warranty service. Except as expressly provided herein, the products are provided "as is" without warranty of any kind, either express or implied, including, but not limited to, warranties or merchantability and fitness for a particular purpose.

Disclaimers

The information in this document is provided in connection with Suprema products. No license, express or implied, by estoppels or otherwise, to any intellectual property rights is granted by this document, except as provided in Suprema's Terms and Conditions of Sale for such products.

Suprema assumes no liability whatsoever and Suprema disclaims any express or implied warranty, relating to sale and/or use of Suprema products, including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright, or other intellectual property right.

Suprema products are not intended for use in medical, lifesaving, or life sustaining applications or other applications in which the failure of the Suprema product could create a situation where personal injury or death may occur. Should Buyer purchase or use Suprema products for any such unintended or unauthorized application, Buyer shall indemnify and hold Suprema and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Suprema was negligent regarding the design or manufacture of the part.

BioStar 1.8 Administrator Guide

Suprema reserves the right to make changes to specifications and product descriptions at any time without notice to improve reliability, function, or design. Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Supreme reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Please contact Suprema, local Suprema sales representatives or local distributors to obtain the latest specifications before placing your order.

Copyright Notice

This document is copyrighted © 2008-2013 by Suprema, Inc. All rights reserved. All other product names, trademarks, or registered trademarks are property of their respective owners.

About the BioStar System

BioStar is Suprema's next-generation access control system, based on IP connectivity and biometric security. Most system devices integrate fingerprint scanners and card readers for multiple levels of user authentication. However, Suprema's biometric devices, installed at each door, work not only as card or fingerprint scanners and card readers, but also as intelligent access controllers.

The licensed standard edition of BioStar is unlocked by a USB dongle. Without the dongle, BioStar functions as a free, but limited-capability version. With the dongle, BioStar offers greater versatility and additional features, as shown in the table below:

	Standard Edition	Free Version
Maximum # of doors	512	20
Maximum # of clients	32	2
Zone support	Yes	No
Email notifications	Yes	No
Server matching	Yes	No
Shift types	Daily and Weekly	Weekly only
IO board	Yes	No
Visual Map	Yes	No

1. About the BioStar System

BioStar V1.8 supports the following devices:



- **BioStation (V1.5 or later):** BioStation is a multifunctional terminal with a keypad and a 2.5-inch color LCD monitor that allows you to perform user enrollment and administration functions directly from the device. BioStation can be connected to a network via a wireless LAN or Ethernet and includes USB host and device interfaces for easy data transfer. BioStation MIFARE (BSM) models also support entry control via smart cards.



- **BioStation T2:** BioStation T2 is a multifunctional, IP-based access control terminal with a camera, 5-inch touchscreen, fingerprint scanner, card reader, and built-in video phone feature.



- **D-Station:** D-Station is a multifunctional, IP-based access control terminal with a camera, touchscreen, and dual fingerprint scanners that allows for multiple authorization combinations via fingerprint recognition (single or dual), MIFARE access cards, user IDs, and face detection. D-Station can be powered directly via an Ethernet connection to eliminate the need for additional wiring or power connections.



- **FaceStation:** FaceStation is a multifunctional, IP-based access control terminal with an LCD touchscreen and a camera for face recognition and videophone functions. FaceStation supports multiple interfaces for connecting to computers or networks and access controls via Wiegand and I/O ports. In addition, the device allows for authorization via multiple access cards.



- **BioEntry Plus (V1.2 or later):** BioEntry Plus is an IP-based access control device that includes both fingerprint recognition and entry via access card. The device can be controlled independently via command cards or managed entirely via the BioStar interface. BioEntry Plus can be connected to electric door strikes via an internal relay or used with the Secure I/O device for extra security and expanded capability.

1. About the BioStar System



- **BioEntry W** : The BioEntry W includes all of the features of the BioEntry Plus in a vandal-resistant, IP65-rated structure. BioEntry W is ideal for outdoor installation, with exceptional durability in harsh environments. It features extensive communication interfaces and PoE capability.



- **BioLite Net (V1.0 or later)**: BioLite Net is IP-based fingerprint terminal designed specifically for outdoor use. With a rugged, IP65-rated waterproof structure, it offers extra durability to withstand the elements. As either a simple door control or part of a complex, networked environment, BioLite Net supports the full functionality of BioStar's time and attendance and access control features.



- **Xpass**: Xpass is an IP-based access reader/controller designed exclusively for use with RF cards. It provides many similar functions to the BioEntry Plus device, but is waterproof for outdoor use and can be connected and powered by a single CAT5/6 cable.



- **Xpass Slim**: The XPass Slim device is a slimmer version of the Xpass that supports FeliCa and ISO 15693 cards. Its low profile allows it to be installed in tight spaces and it features access control to floors when connected with a LIFT I/O device via RS485 slave.



- **X-Station**: X-Station is an easy-to-use smart IP terminal with a 3.5-inch touchscreen LCD that supports ID and card access only. The device supports face detection with a built-in camera. X-Station allows you to store up to 200,000 users with 1GB of internal flash memory and 256MB of RAM.



- **BioMini/BioMini Plus**: The BioMini and BioMini Plus devices are fingerprint scanners that can be used for convenient user enrollment. Installing the device is simple: plug them into a USB connection on any computer that is connected to the BioStar server and install a driver.

1. About the BioStar System



- **Secure I/O:** The Secure I/O device provides a convenient way to increase the security of externally mounted devices or expand the capabilities of your system. When doors are controlled by a secure I/O device, intruders cannot open doors even if they succeed in uninstalling external devices. To further increase security, the secure I/O device provides encrypted communications between door components. The Secure I/O device has four input switches and two output relays to allow control of multiple components with a single device.




- **LIFT I/O:** The LIFT I/O supports 0-9 device IDs and 12 output ports (12 input ports are not currently supported). Each output can be connected to an elevator button to control access to floors. The LIFT I/O can be connected via RS485 as a slave to Xpass and Xpass Slim devices. Up to 10 LIFT I/O devices can be connected to an Xpass or Xpass Slim device to control up to 120 floors.

1.1 Logical Configuration

BioStar is a distributed intelligence system. Instead of the complex wiring and centralized control required by conventional access control systems, Suprema's access control devices can be connected via TCP/IP or wirelessly to a local area network or connected directly via serial connections. User information, access rules, and other data can be distributed to each device to speed up authorization time and provide continual operation even when the connection to the network is lost.

As the following graphic illustrates, the BioStar system does not require separate access controllers. This feature provides a distinct advantage over other access control systems, because BioStation, BioEntry Plus, or BioEntry W devices act simultaneously as both a controller and a reader. As a result, Suprema's distributed intelligence approach requires less hardware and less wiring than conventional, centralized access control systems.


1. About the BioStar System

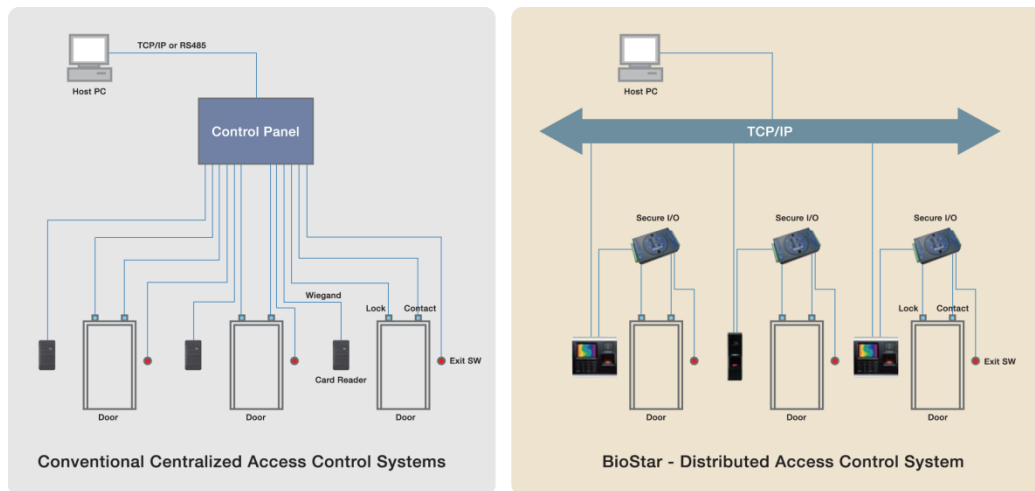

BioStar is a server-client application that supports up to 32 clients (2 clients maximum in the free version). A typical configuration consists of numerous access control devices connected to a central server via Ethernet, WLAN, and/or RS485. BioStar is compatible with MS SQL Server and MySQL databases.

1. About the BioStar System

Overall, the system supports a maximum of 512 doors and 512 devices (20 doors and devices in the free version). Networked devices can be easily grouped together to create various combinations of anti-passback or alarm zones, as illustrated by the graphic that follows.

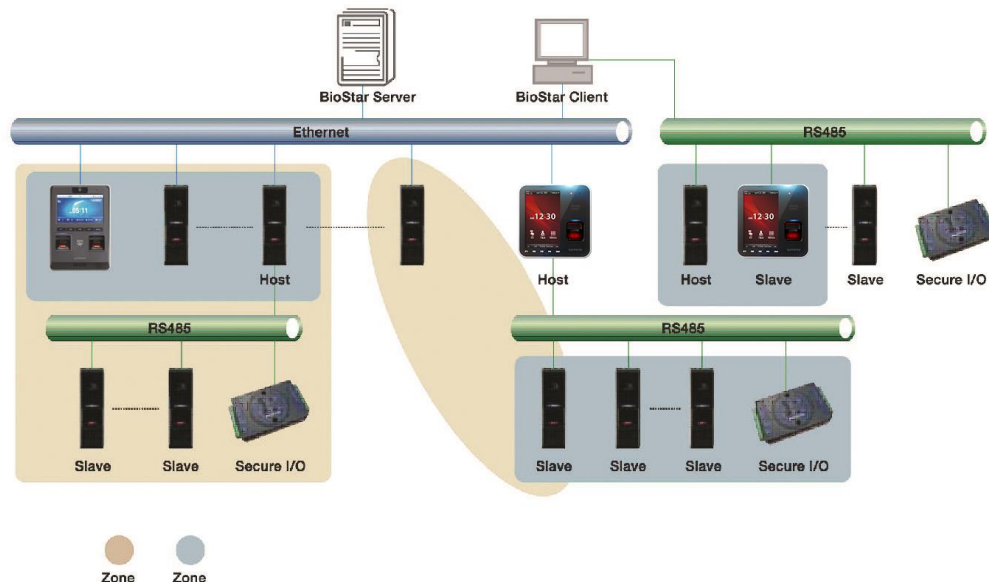

1.2 Access Control Features

The BioStar system goes a step beyond conventional access control systems, by combining unique biometric identification with configurable access card capabilities.

1.2.1 User Authentication

Suprema's access control devices incorporate advanced, award-winning fingerprint recognition algorithms to provide secure access control. When used with the numerical keypads on BioStation terminals or the face detection features of the D-Station, X-Station, BioStation T2, and FaceStation devices, the system allows for a wide variety of user authentication modes:

- **Fingerprint or access card:** either a fingerprint scan or access card may be used to gain entry.
- **Fingerprint + access card:** both fingerprint scan and access card are required for access.
- **User ID + fingerprint:** a user ID and fingerprint scan are used in combination; the user ID identifies the user and the fingerprint scan is used for authorization.
- **User ID + password:** a user ID and password are used in combination; the user ID identifies the user and the password is used for authorization.

1. About the BioStar System

- **User ID + card + fingerprint:** a user ID, access card, and fingerprint scan are used in combination.
- **Fingerprint only:** authentication via a fingerprint scan is the only method to gain entry.
- **Card only:** authentication via an access card is the only method to gain entry.

[D-Station Only]

- **Fingerprint + fingerprint:** dual fingerprints are used in fusion.
- **Fingerprint + face detection:** a fingerprint and face detection are used in fusion.
- **Fingerprint + fingerprint + face detection:** dual fingerprints and face detection are used in fusion.

[FaceStation Only]

- **Face:** authentication via face recognition is the only method to gain entry.
- **Face + Password:** authentication via face recognition plus password.
- **Face + Card:** authentication via face recognition plus access card.
- **Face + Card or Password:** authentication via face recognition plus access card or password.
- **Face + Card + Password:** authentication via face recognition plus card plus password.
- **User ID + Face:** authentication via user ID plus face recognition.
- **User ID + Face or Password:** authentication via user ID plus face recognition or password.
- **User ID + Face + Password:** authentication via user ID plus face recognition plus password.

[D-Station, X-Station, BioStation T2, and FaceStation]

- **Detect face:** upon successful authentication, a face image is captured.

BioStar stores two templates of each fingerprint and up to two fingerprints per user (four templates total). If desired, one fingerprint can be used as a duress signal, to activate alarms or send alerts in situations where a user is required to gain access under duress. Duplicate templates of each print enhance authentication performance by reducing the likelihood of false rejections. For more information about registering fingerprints, see section 3.6.2.

BioStar also provides administrators with the ability to read EM4100 and HID proximity cards and read, issue, and format MIFARE® and iCLASS® access cards. For more information about access cards, see section 3.6.4.

1. About the BioStar System

D-Station devices allow the system to store images of users and control access via face detection, in addition to fingerprint, access card, and user ID authentication. D-Station, X-Station, BioStation T2 and FaceStation devices are equipped with cameras to allow for face detection and recording of face images for enhanced security. For more information about face detection, see section 3.6.3.

1.2.2 User Management

BioStar supports both manual and automatic modes for user management. Manual synchronization is available for enrolling different subsets of users to particular devices or when the total number of users in the BioStar database exceeds the limits of a BioStation, BioEntry Plus, BioEntry W, BioLite Net, Xpass, Xpass Slim, D-Station, X-Station, BioStation T2 or FaceStation device. Automatic synchronization is available when managing user records at the device is not required or desired.

BioStar collects log records from devices and allows the data to be exported to a delimited text file (.CSV) for custom reporting. The software supports an unlimited number of user records—the maximum amount of data stored is subject only to the capabilities of the underlying database and hardware configuration. For more information about user management, see sections 4.1, 4.2, 4.3, 4.5, and 4.6.

1.2.3 Access Group Management

BioStar allows administrators to build custom access groups by combining permissions for timezones and doors. With this capability, BioStar provides customizable, scheduled access control.

BioStar supports up to 128 timezones that consist of a seven day schedule, plus two holiday schedules. Each day in a timezone can include as many as five distinct time periods.

In total, BioStar supports up to 128 access groups that can be transferred to all connected devices. For more information about access groups, see section 3.8.

1.2.4 Device Management

Administrators can control multiple aspects of devices via the BioStar software. In addition to authentication behaviors, BioStar supports the configuration of inputs, output relays, actions, and sounds. The system includes options for customizing sound and display settings for BioStation, D-Station, X-Station, BioStation T2 and FaceStation devices, and LED & Buzzer settings for other devices.

The system provides configuration options for controlling external devices, such as door strikes and alarm sirens. BioStar can also connect to and communicate with third-party devices via a Wiegand interface. For more information about device management, see sections 3.2 and 4.7.

1. About the BioStar System

1.2.5 Door and Elevator (Lift) Management

BioStar allows for comprehensive control of doors and connected devices, such as door relays, alarm relays, door sensors, and exit switches. Each door can be operated by up to two devices and, when two devices are connected to a door, administrators can apply anti-passback controls. BioStar also allows for control of elevators (lifts) via Xpass and Xpass Slim devices, with Secure I/O devices connected as slaves.

BioStar allows specific configuration of alarm events for doors that are forced open or held open longer than a specified interval, including activating alarm sounds from individual devices, sending signals to external alarm sirens, displaying warnings in the BioStar user interface, and sending e-mail notifications (not available in the free version). In addition, administrators or operators can remotely lock and unlock doors or reset alarms. For more information about door management, see sections 3.3, 4.3, and 4.4. For more information about elevator management, see section 3.4.

1.2.6 Zone Management

The BioStar system gives administrators complete control of various zones (not available in the free version). Zones can be created with devices connected via Ethernet or RS485 and can include a master device and up to 65 member devices. In addition, individual devices can be included in up to four zones.

BioStar supports zones for increased access control, such as anti-passback and entrance limit zones, as well as zones that provide control for alarm or fire alarm outputs and actions. BioStar also allows administrators to synchronize time, event logs, and user data for all devices in a specified zone. For more information about zone management, see section 3.5.

1.2.7 Time and Attendance

BioStar versions 1.2 and higher include time and attendance features to allow administrators to define time categories, shifts, daily schedules, and holiday settings. The T&A capabilities of BioStar can be used to enforce compliance with check-in and check-out procedures, restrict access to off-duty personnel, and report attendance data.

BioStar allows administrators to customize T&A functions for BioStation, D-Station, X-Station, BioStation T2 and FaceStation devices and to specify how events are recorded. The BioStar interface also allows administrators to monitor a user's check-in and check-out status in real time. For more information about time and attendance, see sections 3.9 and 4.6.

1.2.8 IP Camera and NVR Server Management

BioStar versions 1.5 and higher support internet protocol (IP) cameras and network video recorder (NVR) servers, to allow administrators to monitor areas and be notified of specific

1. About the BioStar System

events with real-time still images transferred from the IP cameras. By interoperating with the NVR servers, the BioStar system can also display time-sorted event logs, together with recorded videos stored on the servers. From the BioStar interface, administrators can add and customize IP cameras and their functions. For more information about the IP cameras and NVR servers, see sections 3.11 and 4.1.

Install the BioStar Software

Installing BioStar is a fairly simplistic process, provided that you address a few prerequisites before beginning the installation:

- First, you must select a PC that can remain running constantly to function as the BioStar server. The server will receive and store log data from connected devices in real time.
- Second, you must choose a type of database to use. The BioStar server supports either MySQL or MS SQL Server (including the scaled-down, free MS SQL Server Express). Regardless of which database you choose, you must have sufficient access rights and privileges to connect to the database and create new tables.
- Third, ensure that the PCs you will use for both server and client applications meet the minimum requirements listed in section 2.1.

The BioStar installation CD includes the BioStar installer. By default, the installer will install both the server and client applications with minimal input (see section 2.2). However, you may choose to install the server and client applications independently if you need to specify additional database options or desire to install the applications on separate PCs (see sections 2.3 and 2.4).

2.1 System Requirements

BioStar supports the following operating systems:

- Windows 8 (32-bit and 64-bit system)
- Windows 7 (32-bit or 64-bit platform)
- Windows Server 2008 R2
- Windows Vista
- Windows XP, Service Pack 1 or later

2. Install the BioStar Software

- Windows Server 2003
- Windows 2000, Service Pack 4 or later

The minimum system requirements for installing and operating the BioStar software include the following:

- **CPU:** Intel Pentium or similar processor, capable of processing speeds of 1GHz or faster
- **RAM:** 512MB
- **HDD:** 5GB

However, Suprema recommends the following hardware configuration for optimal performance:

- **CPU:** Intel Pentium Dual Core or similar processor, capable of processing speeds of 2GHz or faster
- **RAM:** 1GB for Windows XP; 2GB for other operating systems
- **HDD:** 10GB

2.2 Run the BioStar Installer

You should run the BioStar installer when you desire to install both the server and client applications on the same PC and are willing to use the MS SQL Server Express database with default settings. You will be required to intervene in the express installation process only when MS SQL Server or a variation is already installed. In this case, you will be asked whether or not you wish to install MS SQL Server Express. If you choose not to install the express version, you will be required to provide the correct authentication details, as described in step 7 of section 2.3.

! Attention: If you have installed a previous installation on the machine with BioStar installer, remove the old version before running the BioStar Installer.

The installer will install the following components:

- BioStar server application
- Auxiliary libraries: OpenSSL and Microsoft Visual C++ Redistributable
- MS SQL Server Express
- BioStar client application
- BADB Conv (database migration tool)


2. Install the BioStar Software

Before you run the BioStar installer, close all other open applications. If you have previously installed BioAdmin on the same machine, ensure that you stop the BioAdmin server before beginning the installation.


2. Install the BioStar Software

To run the installer:

1. Insert the BioStar installation CD into a compatible media drive.
2. Locate the installation directory and run *BioStar 1.8 Setup*.
3. Follow the on-screen prompts to begin the installation.
4. During the installation, you will be asked to select the language of your preference. Select a language, then click **Next** to proceed.

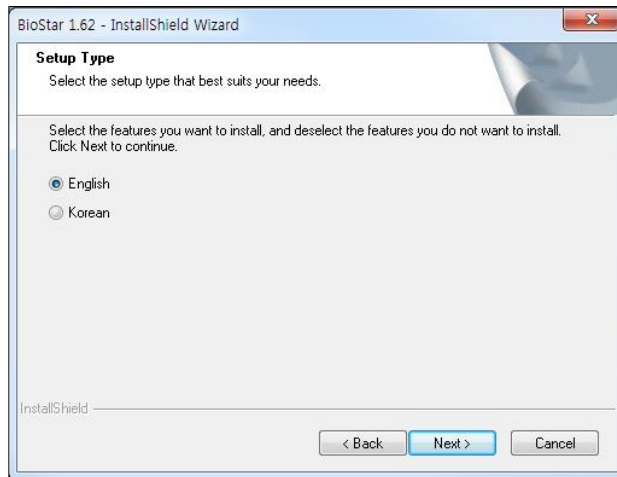

5. Make sure that both the Server and Client applications are selected in the **Select Features** dialog box, then click **Next** to proceed.

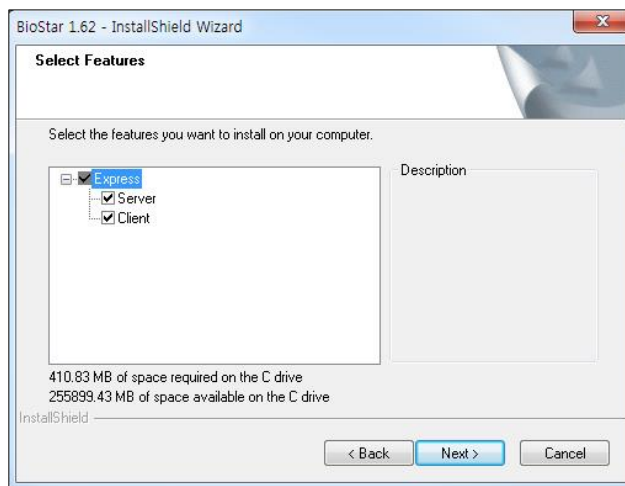

6. Follow the instructions on the screen to finish the installation.

Note: BioStar versions 1.3 and higher include drivers for connecting BioStation and D-Station devices via USB in Windows 7. These drivers will not work with older versions of BioStar. If you are using an older version of BioStar be sure to install the correct USB drivers.

2. Install the BioStar Software

2.3 Install the BioStar Server Application

If you do not choose to install the BioStar server and client applications together, you need to select only the application you would like to install at the Select Features dialog box during the installation of the BioStar Setup. After you ensure that your system meets the minimum requirements listed in section 2.1 and address the prerequisites mentioned in the introduction to this chapter, close all other open applications. If you have previously installed BioAdmin on the same machine, ensure that you stop the BioAdmin server before beginning the installation.


Attention: If you have installed a previous installation on the machine with BioStar installer, remove the old version before running the BioStar Installer.

The installer includes the following components:

- BioStar server application
- Auxiliary libraries: OpenSSL and Microsoft Visual C++ Redistributable
- MS SQL Server Express
- BioStar client application
- BADB Conv (database migration tool)


To install the BioStar server application:

1. Insert the BioStar installation CD into a compatible media drive.
2. Locate the installation directory and run *BioStar 1.8 Setup*.
3. Follow the on-screen prompts to begin the installation.
4. During the installation, you will be asked to select the language of your preference. Select a language, then click **Next** to proceed.

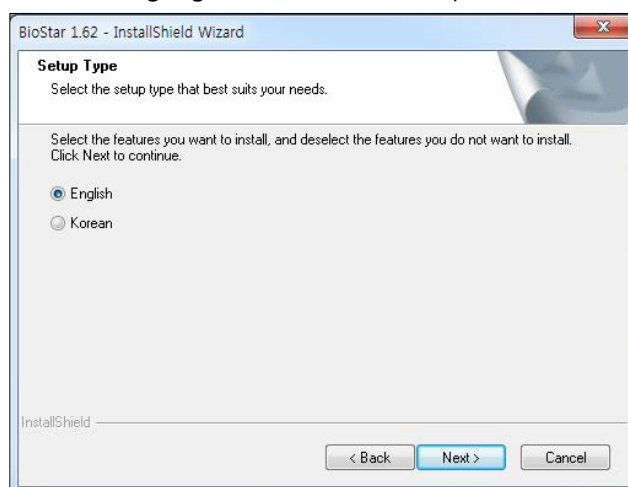


2. Install the BioStar Software

- At the **Select Features** dialog box, click the Client checkbox to uncheck it and exclude the Biostar client application in the installation (both the server and client applications are checked by default), then click **Next** to proceed.

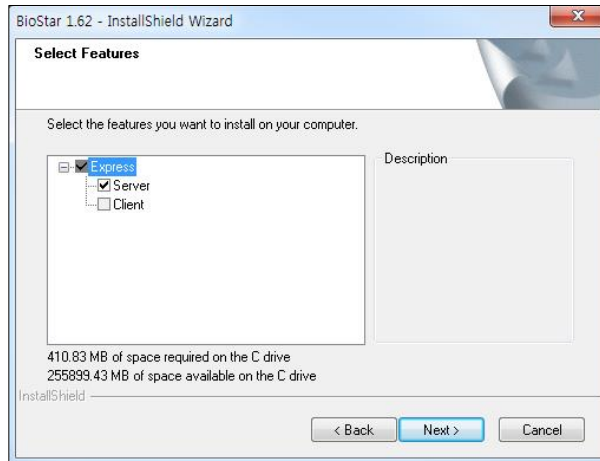

- Follow the instructions on the screen to finish the installation.
- During the installation, you will be required to accept the OpenSSL license agreement and select a destination folder for the OpenSSL program files.
- You will also be asked whether or not you wish to install the MS SQL Server Express edition. If you will use a pre-installed version of MS SQL Server, MySQL or Oracle, you may click **No** when this message appears. If you decide to use the express edition in this step, you can skip to step 10. The database setup process will be automated when you install the express edition.
- When the **Create Database [BioStar]** dialog box appears, select a database type (MS SQL Server, MySQL or Oracle). The database server address and port numbers will be automatically populated, but you should verify that they are correct.

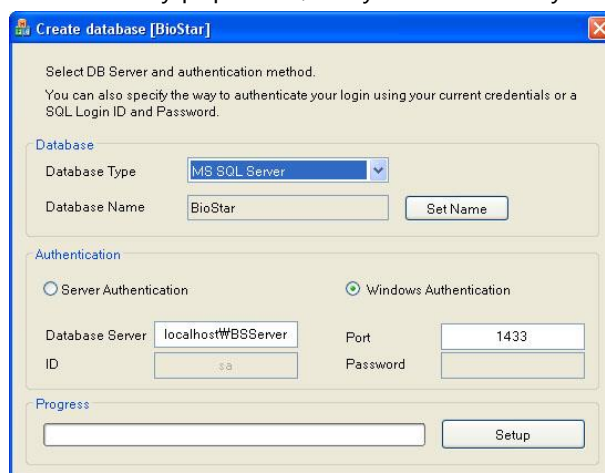

Note: The default name for the database is always “BioStar,” to prevent unintentional installation of multiple databases on the same system or database server. The database

2. Install the BioStar Software

name can be changed by editing the DBSetup.exe file. When patching the database server, you will have the option to manually select a database.

10. If you choose MS SQL Server, you must configure the authentication method as well (MySQL allows only server authentication):
 - **Server authentication:** this option uses login IDs and passwords to authenticate users that are created by and stored on the SQL Server. These credentials are not based on Windows user accounts. Users connecting via server authentication must provide their credentials every time that they connect.
 - **Windows authentication:** this option uses Windows users accounts for authentication. When users connect through a Windows user account, the SQL Server validates the account name and password using the Windows principal token in the operating system. The SQL Server does not ask for a password and does not independently validate user identification. Windows authentication is the default authentication mode for MS SQL Server.

Note: You must choose the authentication mode that is supported by the database. You must also provide the proper credentials to create new tables in the database.

11. Click **Setup** to create the SQL database.
12. When the SQL database setup is complete, click **Finish**.
13. The setup program will perform a few remaining processes before the server installation is complete. Click **Finish**.

Note: BioStar versions 1.3 and higher include drivers for connecting BioStation and D-Station devices via USB in Windows 7. These drivers will not work with older versions of BioStar. If you are using an older version of BioStar be sure to install the correct USB drivers.

2.3.1 Configure the MySQL Database

BioStar cannot use the MySQL database if the maximum packet size is less than 16MB. To configure the maximum packet size in MySQL server, locate and open a configuration file for the MySQL server ("my.ini" for a Windows system or "my.cnf" for a Linux system). Under [mysqld], add or edit the packet size to 16M or bigger (for example: max_allowed_packet=16M). After you have changed and saved the file, restart the BioStar Server for the changes to take effect.

2.3.2 Configure the BioStar Server

In some cases, you may require manual configuration of the BioStar server. If you are having trouble connecting to the server from the client application, for example, you may need to alter your server settings. In addition, you must stop and restart the server application to apply any changes you have made to server configurations or database settings.

2. Install the BioStar Software

On desktop, click BioStar Server Config to start BioStar Server setting program. Or, in Windows, Start > All programs > BioStar 1.8 > Server Service > BioStar Server Config

- Server matching: When matching servers, system is supported to be improved according to numbers of the system CPU cores as matcher features have been enhanced. So, the more core numbers, it is able to expect the faster matching speed. Server matching item of BioStar Server Config supports the settings as belows:
- Number of Core shows the numbers of cores to be used by matcher, and default is 2.

The screenshot shows the 'BioStar Server Config' window with the following sections:

- Status:** Shows a green checkmark icon, a text box, and buttons for 'Stopped' and 'Start'.
- Connection:** Includes 'TCP Port' (1480), 'Thread Count' (32), and a 'Client List ...' button.
- Server Matching:** Includes 'Number Of Core' (2 / 4).
- Database:** Includes 'Database Type' (ORACLE), 'Database Name' (BioStar), 'Server Authentication' (selected), 'Database Server' (localhostBSServer), 'Port' (49258), 'ID', 'Max Connection' (1), and 'Password'.
- SSL:** Includes 'OpenSSL Path' (C:\OpenSSL\bin\openssl.exe) and 'Pass Phrase' (*****).

At the bottom are buttons for 'Refresh', 'Apply', 'OK', and 'Cancel'.

The server configuration utility allows you to monitor and control the following:

- **Status:** view and modify the current status of the BioStar server (*Stopped* or *Started*). You can stop and start the server by clicking the **Start** or **Stop** button on the right.
- **Connection:** view and modify the details for the connection between the server and devices.
 - **TCP Port:** enter the port that devices and client applications use to connect to the server. You should use a port that is not shared with any other software applications. In most cases, you can use the default port (1480).

2. Install the BioStar Software

- **Thread Count:** enter the maximum thread count that the BioStar server can create. You can enter any number between 32 and 512; however, keep in mind a larger thread count will consume more system resources.
- **Client List:** click this button to view a list of devices that are connected to the BioStar server. The list shows the IP address of each device and whether or not a SSL certificate has been issued to the device. You can issue or remove SSL certificates directly from the utility.
- **Database:** view and modify database settings. For more information about how to alter these settings, see the procedure for setting up the BioStar server in section 2.3.
 - **Max Connection:** specify the maximum number of connections between the server and the database. In most cases, the default value (1) is appropriate.
- **SSL:** view or modify the settings for OpenSSL. Click Browse to locate the path for the OpenSSL application or click Change to change the pass phrase.

2.4 Install the BioStar Client Application

If you do not choose to install the BioStar server and client applications together, you need to select only the application you would like to install at the **Select Features** dialog box during the installation of the Biostar Setup.

Before you install the BioStar client application, close all other running applications.


The installer includes the following components:

- BioStar server application
- Auxiliary libraries: OpenSSL and Microsoft Visual C++ Redistributable
- MS SQL Server Express
- BioStar client application
- BADB Conv (database migration tool)

To install BioStar client application:


1. Insert the BioStar installation CD into a compatible media drive.
2. Run *BioStar 1.8 Setup* to launch the installation wizard.
3. Follow the on-screen prompts to install the BioStar Client.
4. During the installation, you will be asked to select the language of your preference. Select a language, then click **Next** to proceed.

2. Install the BioStar Software

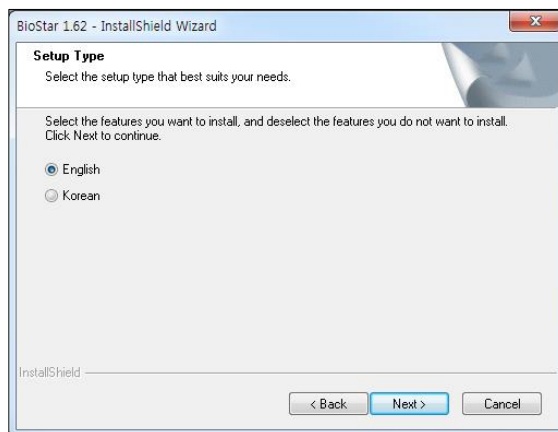

2. Install the BioStar Software

5. At the **Select Features** dialog box, click the Server checkbox to uncheck it and exclude the Biostar server application in the installation (both the server and client applications are checked by default), then click **Next** to proceed.

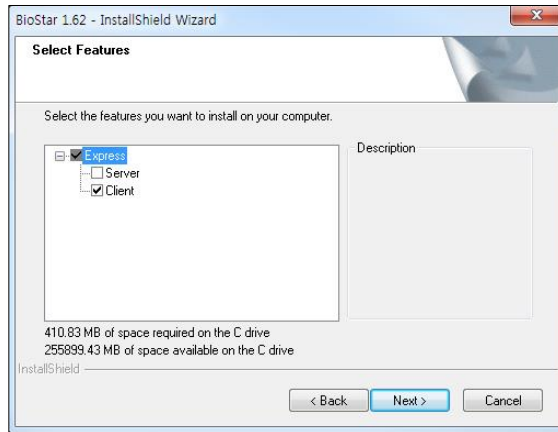

6. Follow the instructions on the screen to finish the installation.


Note: BioStar versions 1.3 and higher include drivers for connecting BioStation and D-Station devices via USB in Windows 7. These drivers will not work with older versions of BioStar. If you are using an older version of BioStar be sure to install the correct USB drivers.

2.4.1 Log in to BioStar for the First Time

If you restarted the system after installation, the BioStar server should run automatically in the background. If you have not restarted the system, you may be required to manually connect to the server before proceeding (see section 2.3.2). When logging in to BioStar for the first time, you will be prompted to create an administrator account.


To log in for the first time:

7. Launch the BioStar program. If BioStar successfully connects to the server, the **Add New Administrator** dialog box will open. In this case, skip to step 6. If BioStar cannot connect to the server, the **Login** dialog box will open and display the message "Cannot connect to server."

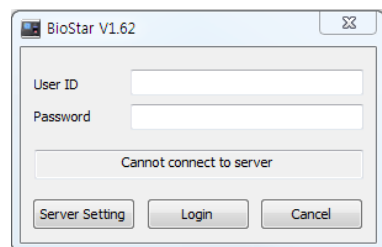


2. Install the BioStar Software

2. Click **Server Setting**. This will open the **Connect Server** dialog box.

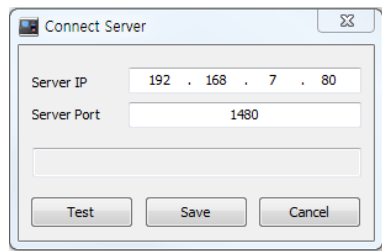A screenshot of the 'Connect Server' dialog box. It has a title bar with a close button. Inside, there are two input fields: 'Server IP' with the value '192 . 168 . 7 . 80' and 'Server Port' with the value '1480'. Below these is an empty text area. At the bottom are three buttons: 'Test', 'Save', and 'Cancel'.

3. Enter the IP address and port number of the BioStar server.
4. Click **Test** to verify the connection.
5. Click **Save** to store the connection settings. This will open the **Add New Administrator** dialog box.

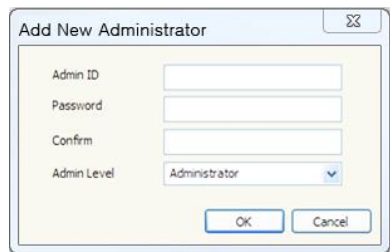
A screenshot of the 'Add New Administrator' dialog box. It has a title bar with a close button. Inside, there are four input fields: 'Admin ID', 'Password', 'Confirm', and 'Admin Level'. The 'Admin Level' field is a dropdown menu currently showing 'Administrator'. At the bottom are two buttons: 'OK' and 'Cancel'.

6. Enter an Admin ID and password, confirm the password, and choose an administration level from the drop-down level.
7. Click **OK**. This will return you to the **Login** dialog box.
8. Enter a User ID and password and click **Login**.

2.4.2 BioStar Interface

BioStar is composed of various interface elements. Each element uses a standard name, please check names of each element before you read this manual.

2. Install the BioStar Software

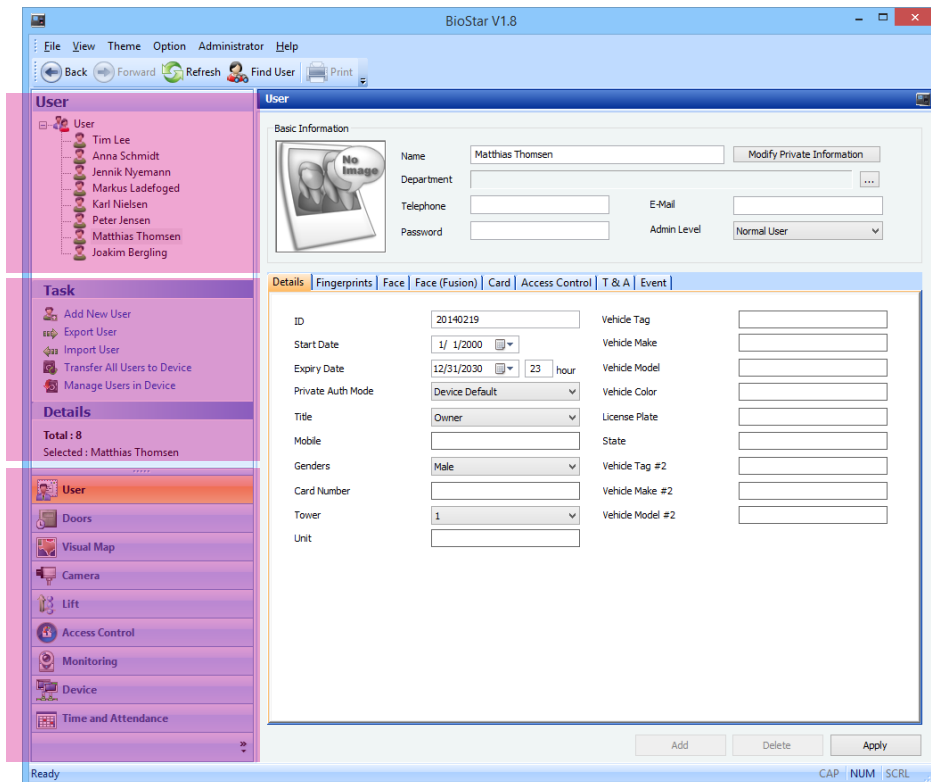

Each element is named as what is displayed in the title. For example, it is called User window, Customize dialog box, Additional Information tab, Basic Information area.

2.5 Customize the BioStar Interface

You do not have to make any changes to the interface to use the BioStar system—the default settings are sufficient for setup and operation. However, BioStar allows you to customize various settings to control the appearance and functionality of the interface.

2.5.1 Change the Theme

The BioStar interface includes two preset themes based on MS Office styles:


- Office 2003
- Office 2007

To change the theme, click **Theme** from the menu bar and select a theme.

2. Install the BioStar Software


2.5.2 Customize the Toolbar

The BioStar interface includes a standard toolbar near the top left of the screen. Standard toolbar buttons provide functions similar to a typical web browser: Back, Forward, Refresh, Find User (search), and Print.

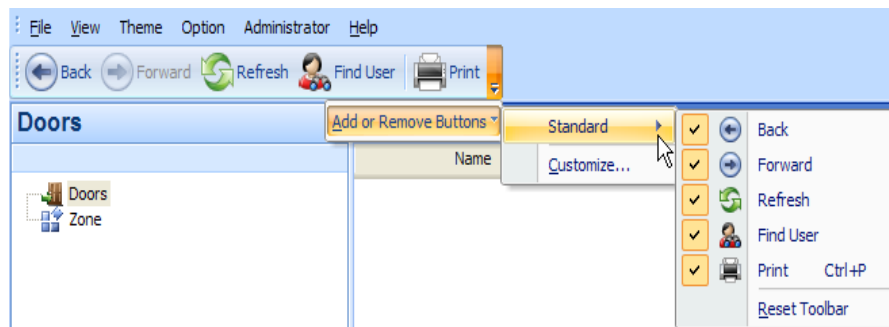

To customize the toolbar:

1. Click the drop-down arrow at the right of the toolbar.
2. Click **Add or Remove Buttons > Customize**. This will open the **Customize** dialog box.
3. Click the **Commands** tab.
4. Click *All Commands* to display a list of available buttons.

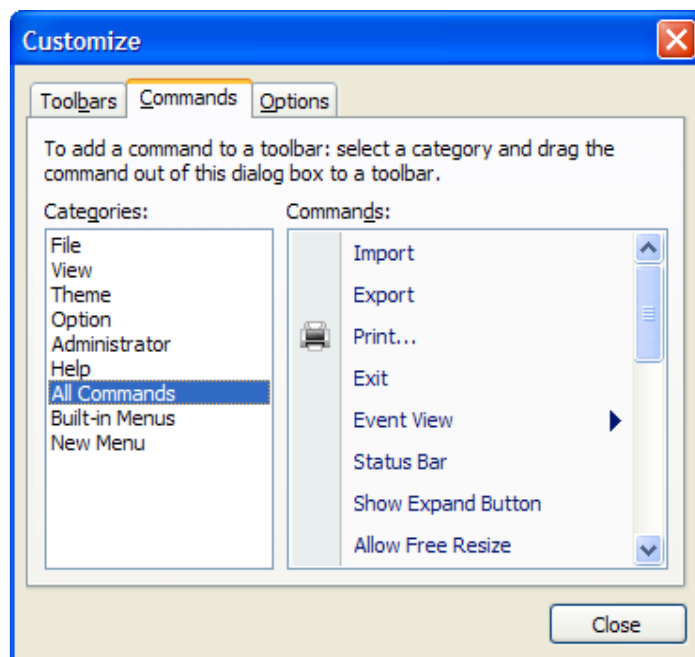

5. Drag a command to the toolbar. This will add a new button for the command.

2. Install the BioStar Software

2.5.3 Change Event Views

BioStar allows you to change the default period of events to show in the Event tab for users or doors and zones. You can set the interface to show event details for 1 day, 3 days, or 1 week by default.

To change the event view:

1. From the menu bar, click **View > Event View**.
2. Click type of event view to change (*User* or *Doors/Zone*).
3. Click a default event period (*1 day*, *3 day*, or *7 day*).


2.6 Migrate a Database from BioAdmin to BioStar

The BioStar installation program includes a database migration tool called *BADB Conv*. This tool allows you to migrate an existing BioAdmin database to your new BioStar system.

When migrating a database, any identical information that exists in the BioStar database will be overwritten. For example, if you have added a user to BioStar that previously existed in BioAdmin, the user data will be overwritten with the information from the BioAdmin database. For this reason, you should migrate your old database to BioStar before creating new user accounts.

To migrate your information from BioAdmin to BioStar:

1. Locate and run the migration program, *BADBConv.exe*. The location of this program is Window's Start > All Programs > BioStar 1.8 > Server Service > BADBConv.
2. Click **Yes** to acknowledge the warning dialogue that appears to remind you that identical information in BioStar will be overwritten.
3. Click **Start** to begin the migration. When the process is complete, the **Convert DB** dialog box will show the types of data that have been migrated.

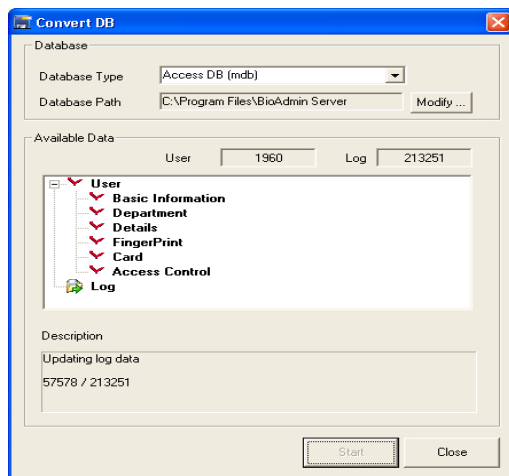

2. Install the BioStar Software

4. Click **Close** to exit the migration tool.

Setup the BioStar System

This section describes how to add administrator accounts, devices, doors, zones, departments, users, and access groups and setup time and attendance within the BioStar software. This administrator's guide does not cover procedures for installing physical components, wiring doors and devices, or connecting devices to networks. For more information about hardware installation and physical configuration of your access control system, please refer to the installation guides that accompany your access control devices.

3.1 Create Administrative Accounts

Before adding users, it is a good idea to add and configure accounts for system administrators and operators. It is also useful to understand some general concepts regarding administration of the BioStar system.

3.1.1 Administrative Levels

BioStar allows for multiple levels of administration, operation, and interaction with the system. Each administrative level has varying degrees of privileges and access to the system menus (User, Doors, Visual Map, Access Control, Monitoring, Devices, and Time & Attendance). The BioStar system includes three preset administrator levels in addition to custom administrator levels:

- Administrator
- Operator
- Manager
- Custom administrator levels

3. Setup the BioStar System

Administrators are capable of adding and configuring devices, users, doors, zones, and access groups. They also can manage time and attendance functions, including setting up time categories, daily schedules, shifts, holiday rules, and leave periods, as well as creating, modifying, and viewing time and attendance reports. In addition, administrators can create custom administrator levels that are granted various privileges for the BioStar system menus.

Operators can monitor and manage the BioStar system via a remote client terminal.

Operators have the same privileges with administrators, other than the privileges to create and delete other administrator or operator accounts. Like administrators, operators are capable of adding and configuring devices, users, doors, zones, and access groups. They also can manage time and attendance functions, including setting up time categories, daily schedules, shifts, holiday rules, and leave periods, as well as creating, modifying, and viewing time and attendance reports.

Managers have privileges to read all information in the menus. However, they cannot create, modify, or delete anything in the menus. Depending on your organization's requirements, the capability to view events may be useful for other management purposes.

The custom administrator level can be assigned full or limited privileges on the seven menus. On each menu, you can assign one of three privileges: All Rights, Modify, or Read. Depending on your organization's requirements, the BioStar system can be managed more effectively by adding custom administrator levels.

A typical setup will consist of one administrator (or more, depending on the size of your organization) who has full access to the system. Below the administrator level, several operators may perform various functions, such as remotely controlling doors and locks, adding users, registering fingerprints, issuing access cards, adding access groups, defining timezones, and configuring alarm events.

3.1.2 Add and Customize Administrative Accounts

By default, BioStar includes one administrator account, which is added when you install the software (see section 2.3). You may choose to use this account as the sole administrator and grant operator privileges to all other users who will manage the system or you may choose to add multiple administrators to the system.

3.1.2.1 Add an administrative account

To add an administrative account:

1. From the menu bar, click **Administrator > Admin Account** to open the **Admin Account List** dialog box.
2. Click **Add New Administrator**.
3. In the **Add New Administrator** dialog box, enter an Admin ID and password.
4. Confirm the password by retyping it and select an Admin Level from the drop-down list:

3. Setup the BioStar System

- **Administrator:** all privileges.
- **Operator:** all privileges, other than creating or deleting administrator or operator accounts.
- **Manager:** privilege to read all information.


5. Click **OK**.

3.1.2.2 Change an administrative account level or password

If you accidentally set the wrong level for an administrative account or need to change or reset a password, you can do so from the Administrator menu.

To change an administrative level or password:

1. From the menu bar, click **Administrator > Admin Account** to open the **Admin Account List** dialog box.
2. Click an admin account in the list on the left side of the dialog box.
3. Click **Modify Level/Password**. This will open the **Modify Administrator** dialog box.

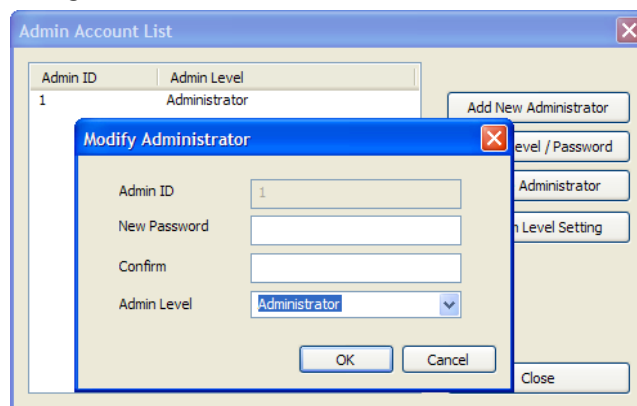

4. Edit the account information as required:
 - To change the administrative level, choose a new level from the drop-down list.
 - To change the password, type a new password in both the New Password and Confirm boxes.
5. Click **OK** to save the changes.

3.1.2.3 Create a custom administration level

If you need to define a specific administrator role with particular privileges, you can add a custom administrator level. You can allow full or limited access to any of BioStar's seven menus for the custom administrator level: User, Doors, Visual Map, Access Control, Monitoring, Devices, and Time & Attendance.

3. Setup the BioStar System

The custom administrator level can be assigned privileges for specific users and devices. A custom administrator will have the privileges you assign (All Rights, Modify, or Read) only for those users or devices that you specify and will not be allowed to view or modify other users or devices. While you are creating a custom administrator level, in the User menu, you can grant privileges for users in a department and its sub departments. However, ensure that you do not select individual users, but rather the first-level or second-level departments they belong to.

In the Device menu, you can grant privileges for specific devices. If a device has a slave device connected, the privileges for the host device will also apply to the slave device. Users and devices that are not selected in the User and Device menus will not appear in the Doors, Visual Map, Access Control, Monitoring, and Time and Attendance menus. If a door or zone is associated with devices that are not granted privileges, the door or zone will not appear in the Door menu.

To create a custom administrator level:

1. From the menu bar, click **Administrator > Admin Account** to open the **Admin Account List** dialog box.
2. Click **Custom Level Setting**.
3. From the **Custom Level List** dialog box, click **Add Custom Level**. This will open the **Add/Modify Custom Level** dialog box.

Menu	Item	Permission
Doors Menu		All right
Monitoring Menu		All right
Device Menu	11936[192.168.100...	All right
Device Menu	23044[192.168.100...	All right
User Menu	Sales	All right

3. Setup the BioStar System

4. Type a name for the custom level in the Name field.
5. If desired, add an additional description in the Description field.
6. Select a menu from the drop-down list.
7. When selecting the User Menu or Device Menu, select users or devices to grant access privileges by clicking the checkboxes in the users or devices list.
8. Select a permission level (All Rights, Modify, or Read) by clicking the checkbox next to an option.
9. Click **Add** to include the permission in the custom level.
10. Repeat steps 6-9 as necessary to add other permissions.
11. When you are finished customizing the level, click **Save**.

You can now create new administrative accounts with any of the custom administrator levels you have created.

3.2 Setup Devices

This section describes how to use BioStar's device wizard to search for and add new devices, as well as how to add 3rd party RF devices. In addition, the procedures that follow describe basic configuration of devices within the BioStar system. For more information about configuring devices, see sections 3.10.3 and 5.1.

3.2.1 Search for and Add Devices

BioStar includes a handy wizard for finding and adding devices. Before starting a search for new devices, verify the device connections. If you have multiple devices to add, it may be helpful to prepare a list of device locations, IDs, and IP addresses prior to adding them.

To search for devices and add them to the BioStar system:

1. Click **Device** in the shortcut pane.
2. In the Task pane, click *Add Device*.
3. When the wizard appears, click the radio button next to a connection type:
 - **LAN:** Choose this option to search for devices connected via Ethernet or Wireless LAN.
 - **Serial:** Choose this option to search for devices connected to a client PC via RS485 and RS232 or slave devices connected via RS485 to another device that is connected to a client PC (see section 3.2.2).
 - **USB Device:** Choose this option to search for devices connected via USB ports.
 - **Note:** BioStar versions 1.3 and higher include drivers for connecting BioStation and D-Station devices via USB in Windows 7. These drivers will not work with

3. Setup the BioStar System

older versions of BioStar. If you are using an older version of BioStar be sure to install the correct USB drivers.

- **Virtual USB Device:** choose this option to search for virtual devices that you have added to a USB drive.

4. Click **Next**.

5. For USB or Virtual USB searches, skip to step 7. If you are searching for devices connected via LAN or serial ports, set advanced search criteria:

- **LAN:** Select whether to search for devices using TCP or UDP protocols. When you select TCP, you can specify an IP address range, the type of device you are searching for (BioStation/D-Station/X-Station/BioStation T2/FaceStation: 1470, BioEntry Plus/BioEntry W/BioLite Net/Xpass/Xpass Slim: 1471, or Custom: enter manually), and the port to search with. If you select UDP, you can search for devices only in the same subnet.
- **Serial:** Specify a COM port (or select *All port*) and a baud rate. You can connect up to 31 devices per COM port via RS485. If the RS485 cable is too long, the signal may be weakened. In this case, you should install a terminating resistance at both ends of the bus by turning on the Dip Switch on your device for normal signal transmission. On the other hand, if the cable is too short, the resistance may interrupt signal transmission. Therefore, by considering the length of the cable and the signal status, select whether to turn on or off the terminating resistance switch.

6. Click **Next**.

7. When BioStar completes the search, you can specify network settings as described below. Click a device name in the list on the left and then configure the settings as required:

Note: If you change the network settings for a device at this point, the device will be removed from the device list. To add the device in the following steps, you must search for the device again.

You need not and should not add devices with server mode. The devices will connect to the server by themselves, and will be listed under the BioStar Server on the **Device Tree** dialog box. If you are trying to add devices with server mode, the process will fail.


- **DHCP or Static IP:** If you choose to use the DHCP option, the device will automatically acquire network settings from the DHCP server. If you do not use DHCP, you must configure the network settings manually.
- **Direct connection:** This is the default connection option. With this option, the BioStar client will connect directly to the device. If you choose this type of connection, the BioStar client must be running to retrieve the log records from the device.

3. Setup the BioStar System

- **Server connection:** If you choose this option, the device will automatically connect to the BioStar server. If you configure the server IP address and port correctly, log records from the device will be gathered at the server, regardless of whether or not the BioStar client is online. This option may also be useful if your network configuration requires you to connect devices with private IP addresses (for example, over a WAN) to a server with a public IP address. This option also provides SSL encryption for BioStation devices.

8. Click **Next**.

9. Select the device or devices to add by clicking the checkboxes next to the device IDs.

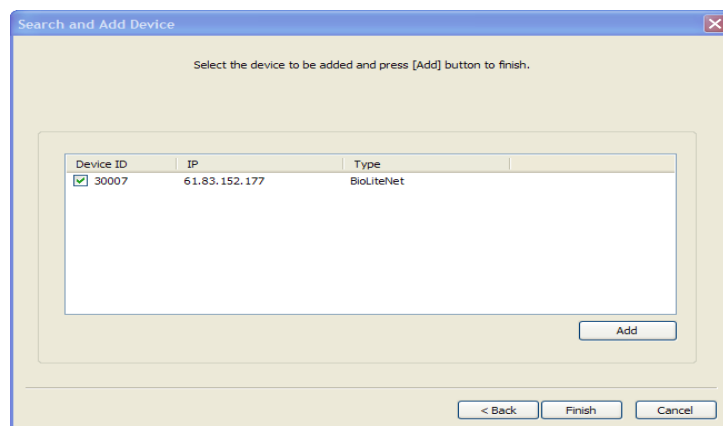

10. Click **Add** to add the devices to the BioStar system.

11. Close the confirmation message that appears and click **Finish** to exit the wizard.

Note: You can manage devices by group by creating a tree hierarchy of named groups and assigning devices into one of the groups. Groups are created by right-clicking on the desired position in the device tree and selecting **Add Group**. You can drag and drop devices between different locations of groups. Groups can be nested four levels deep and a pair of host-slave devices moves together.

3.2.2 Search for and Add Slave Devices

A distinctive feature of BioStar is that it supports host and slave devices in RS485 networks. With this feature, only the host device must be connected to a PC via the LAN. The network can then be easily expanded by adding slave devices via RS485 connections. This feature also allows for controlling elevator (lift) access with Xpass and Xpass Slim devices that are connected to LIFT I/O devices.

If your configuration includes slave devices, you must perform an additional search to locate and add those devices.

First, configure the host device:


1. Search for and add the host device as described in section 3.2.1.
2. Click **Device** in the shortcut pane.

3. Setup the BioStar System

3. In the navigation pane, click the host device.
4. In the device pane, click the Network tab.
5. Change the RS485 serial setting by selecting *Host* from the Mode drop-down list.
6. Click **Apply** to save the change.

Next, search for and add slave devices:

1. In the navigation pane, right-click the host device and click **Add Device (Serial)**. This will open the **Search and Add Device** dialog box.

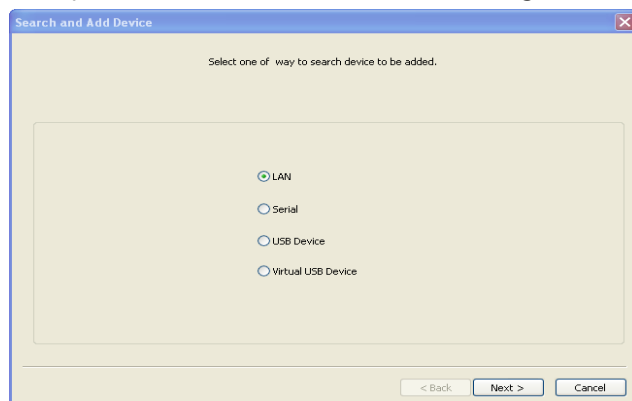

2. Click **Next** to begin the search.
3. When BioStar completes the search, click **Next**.
4. Select the device or devices to add by clicking the checkboxes next to the device IDs.
5. Click **Add** to add the device
6. Close the confirmation message that appears and click **Finish** to exit the wizard.
7. In the navigation pane, click the slave device.
8. In the device pane, click the Network tab.
9. Change the RS485 serial setting by selecting *Slave* from the Mode drop-down list.
10. Click **Apply** to save the change.

3.2.3 Add an RF Device

Prior to BioStar 1.2, third-party RF devices connected to Suprema devices (BioStation, BioEntry Plus, BioEntry W, and BioLite Net devices), operated only as physical extensions to the Suprema devices. As of BioStar 1.2, third-party RF devices connected to Suprema devices function independently and can be associated with doors and included in zones.

To add an RF device:

1. Connect the RF device to a Suprema device.
2. Ensure that the Suprema device is added to the BioStar system (see section 3.2.1).

3. Setup the BioStar System

3. Click **Device** in the shortcut pane.
4. In the navigation pane, click the Suprema device name.
5. Click the Wiegand tab and specify Wiegand settings as described below.

- b. Select **Extended** in the Wiegand Mode drop-down list.
 - c. Select **Wiegand (Card)** in the Wiegand Input drop-down list.
 - d. Click **Apply** at the bottom of the pane.
6. In the navigation pane, right-click the BioStation device name and then click *Add RF Device*.

Note: For more information about using your third-party RF device, consult the user guidance for the RF device. The Wiegand format must be configured properly to ensure compatibility with third-party RF devices.

3.2.4 Connect a Device via Wireless LAN

Certain BioStation devices (BSTW-OC, BSTW-TC, BSRW-OC, BSRW-TC) and BioStation T2, D-Station, FaceStation support wireless LAN connections.


To configure the settings for a wireless LAN connection:

1. Click **Device** in the shortcut pane.
2. Click a device name in the navigation pane.
3. Click the Network tab in the Device pane.
4. Select "Wireless LAN" in the Lan Type drop-down list.
5. Select one of the preset configurations in the WLAN section (*Preset #1 ~ Preset #4*).

3. Setup the BioStar System

6. Click **Change Setting** in the WLAN section. If you choose to use 'Preset #1 or #2, the following figures will appear.

[Wireless LAN-supported BioStation models and D-Station]

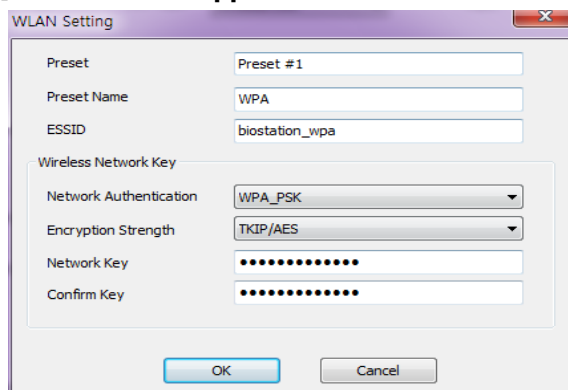

WLAN Setting

Preset: Preset #1

Preset Name: WPA

ESSID: biostation_wpa

Wireless Network Key


Network Authentication: WPA_PSK

Encryption Strength: TKIP/AES

Network Key:

Confirm Key:

OK Cancel

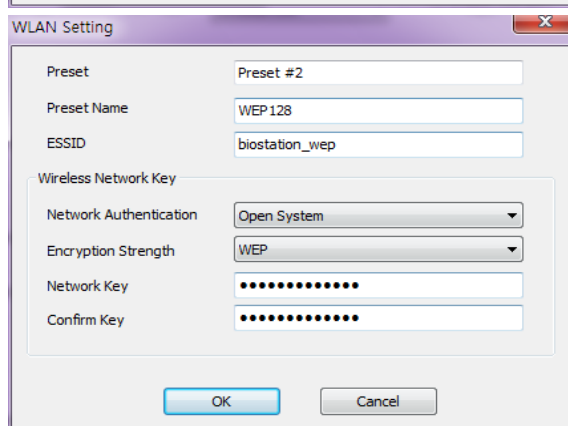

WLAN Setting

Preset: Preset #2

Preset Name: WEP128

ESSID: biostation_wep

Wireless Network Key

Network Authentication: Open System


Encryption Strength: WEP

Network Key:

Confirm Key:

OK Cancel

[BioStation T2 and FaceStation]

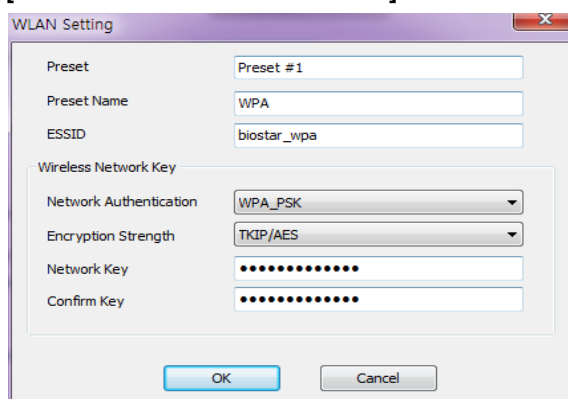

WLAN Setting

Preset: Preset #1

Preset Name: WPA

ESSID: biostar_wpa

Wireless Network Key

Network Authentication: WPA_PSK


Encryption Strength: TKIP/AES

Network Key:

Confirm Key:

OK Cancel

3. Setup the BioStar System

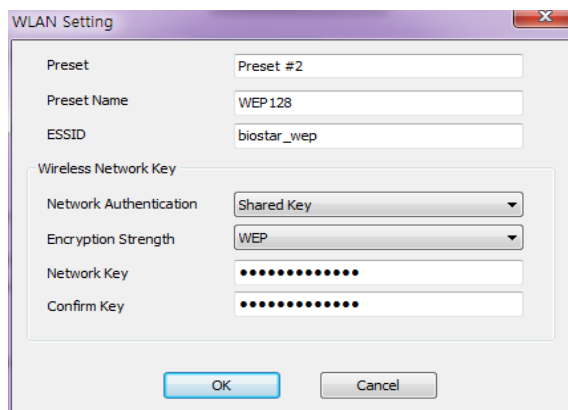

7. Optional: If you choose to configure your own wireless LAN by selecting Preset #3 or #4, then specify the following options.
 - **Preset Name:** Enter a name for the wireless LAN that the device will be connected to.
 - **ESSID:** Enter the unique ID of the access point.
 - **Network Authentication:** Select a network authentication mode from the drop-down list (*Open System*, *Shared Key*, or *WPA-PSK*). The authentication mode must be the same for the device and the access point.
 - **Encryption Strength:** Select an encryption strength from the drop-down list (available options depend on network authentication setting).
 - **Network Key:** Enter the network key. '_suprema_wpa_' is a pre-defined value for Preset #1 networks (biostation_wpa, biostar_wpa), and '_suprema_wep_' is for Preset #2 networks (biostation_wep, biostar_wep).
 - **Confirm Key:** re-enter the network key.
8. Click **OK** to save your changes.

3.2.5 Configure a BioStation Device

This section provides an overview of configuring BioStation devices to work with the BioStar software. For more information, refer to the installation guides that accompany your devices.

3. Setup the BioStar System

To configure a BioStation device:

1. Click **Device** in the shortcut pane.
2. Double-click a BioStation device name in the navigation pane. This will open a Device pane similar to the one below:

3. Configure device information on the following tabs. For an explanation of device settings, please see section 5.1.1.
 - **Operation mode:** Use this tab to set the device time or retrieve it from a host PC and adjust settings for operation modes.
 - **Fingerprint:** Use this tab to specify security, quality, matching, and timeout settings for fingerprint recognition.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits and default access groups for an individual device.
 - **Input:** Use this tab to add, modify, or delete input settings for the device.
 - **Output:** Use this tab to add, modify, or delete output settings for the device.
 - **Black List:** Use this tab to block access through a particular card, e.g. a card which has been stolen or used by a former employee. You can use this feature only when the card mode of the device is set to 'Template on Card'. Adding a user ID or card ID denies access from the users with the matching ID or card.
 - **Display/Sound:** Use this tab to adjust display or sound settings and add background images and sounds.
 - **T&A:** Use this tab to configure time and attendance settings.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.

3. Setup the BioStar System

5. To apply the same settings to other devices, click **Apply to Others** and select other devices from the **Device Tree** dialog box.

3.2.6 Configure a BioEntry Plus or BioEntry W Device

To configure a BioEntry Plus or BioEntry W device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

The screenshot shows the 'Device' configuration window for a BioEntry Plus device. The window has a title bar 'Device' and a 'Basic Information' section with fields for Name (46195[192.168.0.169]), Device ID (46195), Firmware (V1.6_140213), and Device Type (BEPM-OC). Below this is a tabbed interface with tabs: Operation Mode (selected), Fingerprint, Network, Access Control, Input, Output, Black List, Command Card, Display/Sound, T & A, and Wiegand. The 'Operation Mode' tab contains sections for 'BioEntry Plus Time' (with Date 4/3/2014 and Time 6:04:57 PM), 'Operation Mode' (with dropdowns for All, Card + Fingerprint, Fingerprint Only, Card Only, and Private Auth, and checkboxes for Double Mode), 'Mifare/CLASS' (with Card Reading Mode set to Mifare CSN only), and 'Card ID Format' (with Format Type set to Normal). At the bottom are buttons for Add, Modify, Delete, Apply to Others, and Apply.

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.2.
 - **Operation mode:** Use this tab to set the device time or retrieve it from a host PC, adjust settings for operation modes, and adjust options for fingerprint recognition.
 - **Fingerprint:** Use this tab to specify security, quality, matching, and timeout settings for fingerprint recognition.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits, access groups, and time and attendance mode settings.
 - **Input:** Use this tab to add or modify inputs to the device.
 - **Output:** Use this tab to add or modify outputs from the device.

3. Setup the BioStar System

- **Black List:** Use this tab to block access through a particular card, e.g. a card which has been stolen or used by a former employee. You can use this feature only when the card mode of the device is set to 'Template on Card'. Adding a user ID or card ID denies access from the users with the matching ID or card.
 - **Command Card:** Use this tab to issue command cards that can control BioEntry Plus or BioEntry W devices. For more information about issuing command cards, see section 3.2.6.1.
 - **Display/Sound:** Use this tab to configure LED & Buzzer settings according to the event or status.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others** and select other devices from the **Device Tree** dialog box.

3.2.6.1 Issue command cards

Command cards allow you to enroll and delete users directly from a BioEntry Plus or BioEntry W device. For more information about enrolling users via command cards, see section 3.6.2.3. For more information about delete an individual or all users via command cards, see section 4.5.1.1 and 4.5.1.2.

To issue command cards:

1. Click **Device** in the shortcut pane.
2. In the navigation pane, click the name of a BioEntry Plus or BioEntry W device.
3. Click the Command Card tab in the Device pane.

Card ID	Command

Card ID: 0 - 0

Command Type: **Enroll Card**

☐ Need Authentication by Administrator

Buttons: Delete, Delete All, Read Card, Add

4. Click **Read Card**.
5. Place a command card on the device.

3. Setup the BioStar System

6. Select a command type from the drop-down list.
7. If desired, set the command card to require administrator authentication by clicking the checkbox next to the option.
8. Click **Add**.

3.2.7 Configure a BioLite Net Device

To configure a BioLite Net device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

The screenshot shows the 'Device' configuration window for a BioLite Net device. The window has a title bar 'Device' and a tabbed interface. The 'Basic Information' tab is active, showing fields for Name (41991[192.168.0.73]), Device ID (41991), Firmware (V1.4_140206), and Device Type (BLNM-OC). Below this is the 'Operation Mode' tab, which is also active. It contains sections for 'BioLiteNet Time' (Date: 4/3/2014, Time: 6:18:27 PM, buttons for Get/Set Device Time), 'Sensor Mode' (Always On: Always, ID Entered: Always, OK Pressed: No Time), 'Operation Mode' (Fingerprint Only: Always, Password Only: No Time, Fingerprint / Password: No Time, Fingerprint + Password: No Time, Card Only: No Time, Double Mode checkboxes, Private Auth: Disable, DoubleMode Option: Not Use), 'Mifare' (Not Use Mifare, Use Template on Card, View Mifare Layout), 'Wiegand' (Use Wiegand Card Bypass), and 'Card ID Format' (Format Type: Normal, Byte Order: MSB, Bit Order: MSB). At the bottom are buttons for Add, Modify, Delete, Apply to Others, and Apply.

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.3.
 - **Operation mode:** Use this tab to set the device time or retrieve it from a host PC, adjust settings for operation modes, and adjust options for fingerprint recognition.
 - **Fingerprint:** Use this tab to specify security, quality, matching, and timeout settings for fingerprint recognition.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits and access groups.
 - **Input:** Use this tab to add or modify inputs to the device.
 - **Output:** Use this tab to add or modify outputs from the device.

3. Setup the BioStar System

- **Black List:** Use this tab to block access through a particular card, e.g. a card which has been stolen or used by a former employee. You can use this feature only when the card mode of the device is set to 'Template on Card'. Adding a user ID or card ID denies access from the users with the matching ID or card.
 - **Display/Sound:** Use this tab to configure LED & Buzzer according to the event or status.
 - **T&A:** Use this tab to configure time and attendance settings.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others**, select other devices from the **Device Tree** dialog box, and click **Apply**.

3.2.8 Configure an Xpass or Xpass Slim Device

To configure an Xpass or Xpass Slim device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

The screenshot shows the 'Device' configuration window for an Xpass Slim device. The window has a title bar 'Device' and a menu bar with tabs: Operation Mode, Network, Access Control, Input, Output, Command Card, Display/Sound, and Wiegand. The 'Operation Mode' tab is selected. The main area contains the following settings:

- Name:** 33335[192.168.0.210]
- Device ID:** 33335
- Firmware:** V1.0_111212
- Device Type:** XPSM

Below the tabs, the 'Operation Mode' section includes:

- Xpass Slim Time:** A checkbox for 'Sync with Host PC Time' is checked. Below it are fields for 'Date' (1/ 2/2012) and 'Time' (11:31:19 AM), with 'Get Time' and 'Set Time' buttons.
- Operation Mode:** A dropdown menu is set to 'Always', and a checkbox for 'Double Mode' is checked.
- Server Matching:** A dropdown menu is set to 'Disable'.
- Mifare:** Two checkboxes, 'Not use Mifare' and 'Use Data Card', are both unchecked. A 'View Mifare Layout' button is present.
- Card ID Format:** Three dropdown menus are set to 'Normal', 'MSB', and 'MSB' respectively.

At the bottom of the window are five buttons: 'Add', 'Modify', 'Delete', 'Apply to Others', and 'Apply'.

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.4 (Xpass) or 5.1.5 (Xpass Slim).

3. Setup the BioStar System

- **Operation mode:** Use this tab to set the device time or retrieve it from a host PC, adjust settings for operation modes, and adjust settings for card ID formats. Xpass Slime devices do not support the Mifare template cards.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits and access groups.
 - **Input:** Use this tab to add or modify inputs to the device.
 - **Output:** Use this tab to add or modify outputs from the device.
 - **Command Card:** Use this tab to issue command cards that can control Xpass or Xpass Slim devices. For more information about issuing command cards, see section 3.2.8.1.
 - **Display/Sound:** Use this tab to configure LED & Buzzer according to the event or status.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others**, select other devices from the **Device Tree** dialog box, and click **Apply**.

3.2.8.1 Issue command cards

Command cards allow you to enroll and delete users directly from an Xpass or Xpass Slim device. For more information about enrolling users via command cards, see section 3.6.2.3. For more information about deleting an individual or all users via command cards, see section 4.5.1.1 and 4.5.1.2.

To issue command cards:

1. Click **Device** in the shortcut pane.
2. In the navigation pane, click the name of an Xpass device.
3. Click the Command Card tab in the Device pane.

3. Setup the BioStar System

The screenshot shows the 'Command Card' tab in a software interface. At the top, there is a navigation bar with tabs: Operation Mode, Network, Access Control, Input, Output, Command Card (selected), Display/Sound, and Wiegand. The main area contains a table with two columns: 'Card ID' and 'Command'. The table is currently empty. To the right of the table are two buttons: 'Delete' and 'Delete All'. Below the table, there is a section for adding a new command card. It includes a 'Card ID' field with a value of '0', a range indicator '-', and another 'Card ID' field with a value of '0'. Below this is a 'Command Type' dropdown menu currently set to 'Enroll Card'. At the bottom of this section is a checkbox labeled 'Need Authentication by Administrator' which is currently unchecked. To the right of these fields are two buttons: 'Read Card' and 'Add'.

4. Click **Read Card**.
5. Place a command card on the device.
6. Select a command type from the drop-down list.
7. If desired, set the command card to require administrator authentication by clicking the checkbox next to the option.
8. Click **Add**.

3.2.9 Configure a D-Station Device

To configure a D-Station device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

3. Setup the BioStar System

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.6.
- **Operation mode:** Use this tab to set the device time or retrieve it from a host PC and adjust settings for operation modes.
 - **Fingerprint:** Use this tab to specify security, quality, matching, and timeout settings for fingerprint recognition.
 - **Camera:** Use this tab to assign events, by timezone, that can be performed via the camera and the face detection feature.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits and default access groups for an individual device.
 - **Input:** Use this tab to add, modify, or delete input settings for the device.
 - **Output:** Use this tab to add, modify, or delete output settings for the device.
 - **Black List:** Use this tab to block access through a particular card, e.g. a card which has been stolen or used by a former employee. You can use this feature only when the card mode of the device is set to 'Template on Card'. Adding a user ID or card ID denies access from the users with the matching ID or card.
 - **Display/Sound:** Use this tab to adjust display or sound settings and add background images and sounds.
 - **T&A:** Use this tab to configure time and attendance settings.

3. Setup the BioStar System

- **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others** and select other devices from the **Device Tree** dialog box.

3.2.10 Configure an X-Station Device

To configure an X-Station device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

The screenshot shows the 'Device' configuration window for an X-Station device. The window has a title bar 'Device' and a 'Basic Information' section with fields for Name (65500[192.168.0.182]), Device ID (65500), Firmware (V1.21_121106), and Device Type (XSE). Below this is a tabbed interface with tabs: Operation Mode, Camera, Network, Access Control, Interphone, Input, Output, Black List, Display/Sound, T & A, and Wiegand. The 'Operation Mode' tab is active, showing 'X-Station Time' settings (Date: 3/2014, Time: 6:49:46 PM, buttons for Get Device Time and Set Device Time, and a checkbox for Get Host PC Time). It also shows '1:1 Operation Mode' settings for Card Only (Always), ID/Card + Password (No Time), Double Mode (Always), and DoubleMode Option (Not Use). There are also settings for Private Auth (Disable), Server Matching (Disable), Auth Timeout (10 sec), and Detect Face (Use). The 'Mifare' section has checkboxes for 'Not use Mifare' and 'Use Data Card', and a 'View Mifare Layout' button. The 'Wiegand' section has a checkbox for 'Use Wiegand Card Bypass'. At the bottom, there is a 'Card ID Format' section with 'Format Type' (Normal), 'Byte Order' (MSB), and 'Bit Order' (MSB). At the very bottom of the window are buttons for Add, Modify, Delete, Apply to Others, and Apply.

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.7.
- **Operation mode:** Use this tab to set the device time or retrieve it from a host PC and adjust settings for operation modes.
 - **Camera:** Use this tab to assign events, by timezone, that can be performed via the camera and the face detection feature.
 - **Network:** Use this tab to specify settings for LAN or serial connections.

3. Setup the BioStar System

- **Access Control:** Use this tab to specify entrance limits and default access groups for an individual device.
 - **Input:** Use this tab to add, modify, or delete input settings for the device.
 - **Output:** Use this tab to add, modify, or delete output settings for the device.
 - **Black List:** Use this tab to block access through a particular card, e.g. a card which has been stolen or used by a former employee. You can use this feature only when the card mode of the device is set to 'Template on Card'. Adding a user ID or card ID denies access from the users with the matching ID or card.
 - **Display/Sound:** Use this tab to adjust display or sound settings and add background images and sounds.
 - **T&A:** Use this tab to configure time and attendance settings.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others** and select other devices from the **Device Tree** dialog box.

3.2.11 Configure a BioStation T2 Device

To configure a BioStation T2 device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

3. Setup the BioStar System

The screenshot displays the 'Device' configuration window. The 'Basic Information' section at the top contains fields for Name (30344[192.168.0.152]), Device ID (30344), Firmware (V1.12_120502), and Device Type (BST2M-OC). The 'Operation Mode' tab is active, showing various settings for time, ID operation, fingerprint operation, card operation, Mifare, Wiegand, and card ID format. The 'BioStation T2 Time' section shows a date of 3/2014 and a time of 7:11:12 PM. The 'ID Operation Mode' section has four options: ID + Fingerprint (No Time), ID + Password (No Time), ID + Fingerprint/Password (Always), and ID + Fingerprint + Password (No Time). The 'Fingerprint Operation Mode' section has four options: Fingerprint (Always), Fingerprint + Password (No Time), Func Key + Fingerprint (No Time), and Func Key + Fingerprint + Password (No Time). The 'Card Operation Mode' section has six options: Card Only (No Time), Card + Fingerprint (No Time), Card + Password (No Time), Card + Fingerprint/Password (Always), Card + Fingerprint + Password (No Time), and Private Auth (Disable). The 'Mifare' section has two options: Not use Mifare (checked) and Use Template on Card (unchecked). The 'Wiegand' section has one option: Use Wiegand Card Bypass (checked). The 'Card ID Format' section has three options: Format Type (Normal), Byte Order (MSB), and Bit Order (MSB). At the bottom are buttons for Add, Modify, Delete, Apply to Others, and Apply.

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.8.
- **Operation mode:** Use this tab to set the device time or retrieve it from a host PC and adjust settings for operation modes.
 - **Fingerprint:** Use this tab to specify security, quality, matching, and timeout settings for fingerprint recognition.
 - **Camera:** Use this tab to assign events, by timezone, that can be performed via the camera and the face detection feature.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits and default access groups for an individual device.
 - **Interphone:** Use this tab to set the device to act as an interphone which allows communication between people on either side of the door.
 - **Input:** Use this tab to add, modify, or delete input settings for the device.
 - **Output:** Use this tab to add, modify, or delete output settings for the device.
 - **Black List:** Use this tab to block access through a particular card, e.g. a card which has been stolen or used by a former employee. You can use this feature only when the card mode of the device is set to 'Template on Card'. Adding a user ID or card ID denies access from the users with the matching ID or card.

3. Setup the BioStar System

- **Display/Sound:** Use this tab to adjust display or sound settings and add background images and sounds.
 - **T&A:** Use this tab to configure time and attendance settings.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others** and select other devices from the **Device Tree** dialog box.

3. Setup the BioStar System

3.2.12 Configure a FaceStation Device

To configure a FaceStation device:

1. Click **Device** in the shortcut pane.
2. Double-click a device name in the navigation pane. This will open a Device pane similar to the one below:

The screenshot shows the 'Device' configuration window for a FaceStation. The 'Basic Information' tab is active, displaying fields for Name (23456781[192.168.0.207]), Device ID (23456781), Firmware (V1.1_120914), and Device Type (FSM). Below this is the 'Operation Mode' tab, which is selected. It contains several sections: 'FaceStation Time' with date and time fields and buttons for 'Get Device Time' and 'Set Device Time'; 'ID Operation Mode' with dropdowns for 'ID + Face', 'ID + Password', 'ID + Face/Password', and 'ID + Face + Password'; 'Face Operation Mode' with dropdowns for 'Face', 'Face + Password', 'Func Key + Face', 'Func Key + Face + Password', 'Face + Func Key', and 'Face + Password + Func Key'; 'Card Operation Mode' with dropdowns for 'Card Only', 'Card + Face', 'Card + Password', 'Card + Face/Password', and 'Card + Face + Password'; 'Private Auth' set to 'Disable'; 'Double Mode' set to 'No Time'; 'Detect Face' set to 'Not Use'; and 'Matching Timeout' set to '7 sec'. At the bottom, there are sections for 'Mifare' (with 'Not use Mifare' and 'Use Template on Card' checkboxes) and 'Wiegand' (with 'Use Wiegand Card Bypass' checkbox). The 'Card ID Format' section includes 'Format Type' (Normal), 'Byte Order' (MSB), and 'Bit Order' (MSB). At the very bottom are buttons for 'Add', 'Modify', 'Delete', 'Apply to Others', and 'Apply'.

3. Configure device information on the following tabs. For an explanation of device settings, see section 5.1.8.
 - **Operation mode:** Use this tab to set the device time or retrieve it from a host PC and adjust settings for operation modes.
 - **Face** – Use this tab to specify security level and enrollment sensitivity settings for face recognition.
 - **Camera:** Use this tab to assign events, by timezone, that can be performed via the camera and the face detection feature.
 - **Network:** Use this tab to specify settings for LAN or serial connections.
 - **Access Control:** Use this tab to specify entrance limits and default access groups for an individual device.
 - **Interphone** : Use this tab to set the device to act as an interphone which allows communication between people on either side of the door.
 - **Input:** Use this tab to add, modify, or delete input settings for the device.

3. Setup the BioStar System

- **Output:** Use this tab to add, modify, or delete output settings for the device.
 - **Display/Sound:** Use this tab to adjust display or sound settings and add background images and sounds.
 - **T&A:** Use this tab to configure time and attendance settings.
 - **Wiegand:** Use this tab to configure the Wiegand format. For more information about Wiegand formats, see section 3.2.133.
4. When you are finished configuring the device, click **Apply** to save your changes.
 5. To apply the same settings to other devices, click **Apply to Others** and select other devices from the **Device Tree** dialog box.

3.2.13 Change Wiegand Formats

From the BioStar interface, you can configure the Wiegand format of a device to control device inputs and outputs.

To configure the Wiegand format:

1. Click **Device** in the shortcut pane.
2. In the navigation pane, click a device name.
3. Click the Wiegand tab in the Device pane.

The screenshot shows the 'Wiegand' configuration tab in the BioStar interface. At the top, there is a navigation bar with tabs: Operation Mode, Fingerprint, Network, Access Control, Input, Output, Black List, Display/Sound, T & A, and Wiegand. Below the navigation bar, there are three dropdown menus: 'Wiegand Mode' set to 'Legacy', 'Wiegand Input' set to 'Disabled', and 'Wiegand Output' set to 'Disabled'. The main section is titled 'Wiegand Format'. It contains a 'Format' dropdown set to '26 bit Standard' with a 'Change Format' button next to it. Below this is a visual representation of the 26-bit format: 'EAAA AAAA AIII IIII IIII IIII IO'. A legend below the visual representation explains the bit definitions: 'I : ID bit / C : Custom ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / X : Undefined'. To the right of the visual representation, there are three fields: 'Total Bits' (26), 'ID Bits' (16), and 'Custom ID Bits' (0). At the bottom, there are several configuration options: 'FC Code' set to 'Disable', 'Pulse Width(us)' set to '40' (with a range of '20 ~ 100 (us)'), 'Field Default Values' (a dropdown), 'Pulse Interval(us)' set to '10000' (with a range of '200 ~ 20000 (us)'), 'Fail Code Value' set to '0000...', and a checkbox for 'Use Fail Code' which is currently unchecked.

4. Click **Change Format**. This will open the Wiegand Configuration wizard.
5. Click a radio button to select one of the following formats:
 - **26-bit Standard:** This format is the most widely used and consists of an 8-bit FC code and a 16-bit ID. You cannot change the bit definition of the format or the parity bits of this format.


3. Setup the BioStar System

- **Pass-through:** Use this format to customize only the ID bits. During verification, if the ID is recognized, the Wiegand input string will pass through in its original form. You cannot set the parity bits or alternative values of this format. By definition, the pass-through format is useful only when the operation mode is one-to-one (1: 1). In one-to-many (1: N) mode, non-ID bits are set to 0.
 - **Custom:** With a custom format, you can define the ID bits, parity bits, and alternative values.
6. Use the Wiegand Configuration wizard to customize the Wiegand format to your specifications (see the subsections that follow for more information).
 7. When you have completed making changes with the wizard, click **Apply** to save your changes.

3.2.13.1 Configure a 26-bit Wiegand format

When you select a 26-bit format, the only thing you can customize is the FC Code:

1. After selecting the format in the wizard, click **Next** until you reach the **Alternative Value** dialog box.

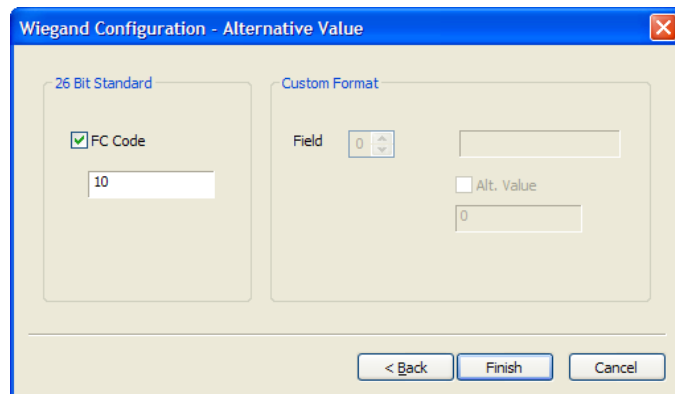


2. Click the FC Code checkbox and enter a new FC Code.
3. Click **Finish** to close the wizard.

3. Setup the BioStar System

3.2.13.2 Configure a pass-through Wiegand format

When you select a pass-through format, you can alter the total number of bits and assign the ID bits:

1. After selecting the format in the wizard, click **Next** to advance to the **Wiegand Configuration - Format** dialog box.

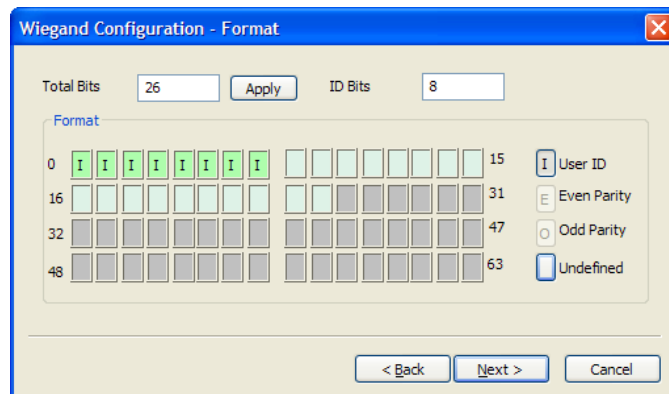


2. If desired, enter a new total number of bits and click **Apply**.
3. Click the User ID button (I) on the right.
4. Assign ID bits by clicking the appropriate squares.
5. Click Next until you reach the **Wiegand Configuration - Alternative Value** dialog box.
6. Click **Finish** to close the wizard.

3.2.13.3 Configure a custom Wiegand format

It is able to change entire bit numbers and parity bit numbers, allocate ID bit and custom ID bit section, define parity bit, and set alternative values for specific output data section by selecting user custom Wiegand type.

Configure a custom Wiegand format


1. After selecting the format in the wizard, click **Next** to advance to the **Wiegand Configuration - Format** dialog box.

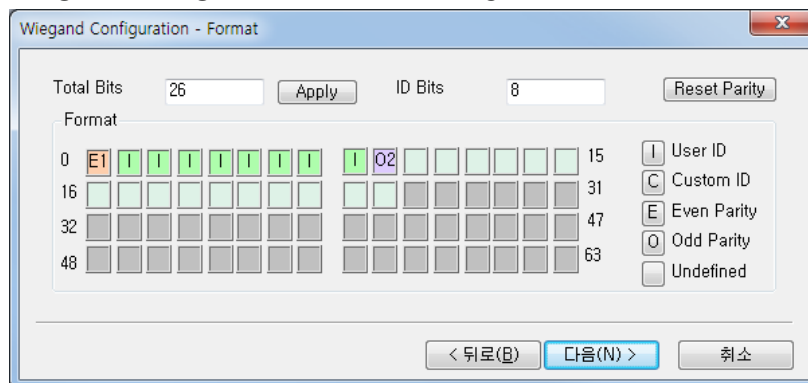


2. If desired, enter a new total number of bits and click **Apply**.
3. If parity settings have changed, click the Reset parity button.

3. Setup the BioStar System

4. Click the User ID button (I) on the right and assign ID bits by clicking the appropriate squares.
5. Click the Custom ID button on the right, and then click the square, and set the area for custom ID bit.
6. Click the Even Parity button (E) on the right and assign an even parity bit by clicking on the appropriate squares.
7. Click the Odd Parity button (O) on the right and assign an odd parity bit by clicking on the appropriate squares.
8. Click **Next**.
9. In the **Wiegand Configuration - Parity** dialog box, select the bits that will be used to calculate the first parity bit.

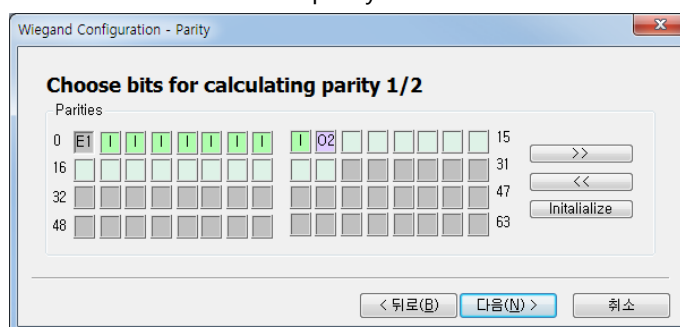

10. As necessary, click >> and select the bits that will be used to calculate additional parity bits. You must perform this step for each parity bit you assigned in steps 4 and 5. If necessary, you can click **Initialize** to reset the selection.
11. Click **Next**.
12. In the **Wiegand Configuration - Alternative Value** dialog box, select a field to customize (non-ID bits only).

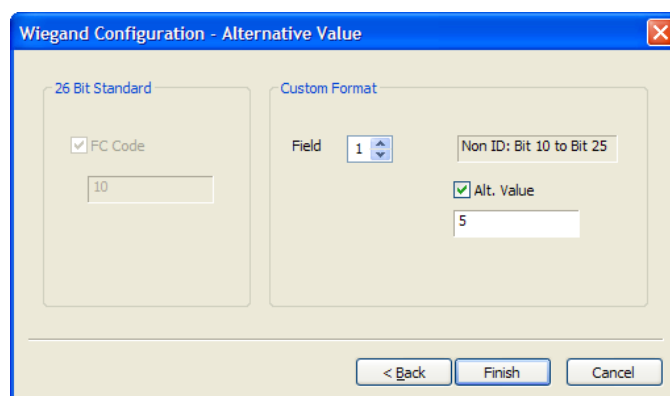

13. Click the Alt Value checkbox and enter a new value for the output string.
14. Repeat steps 10-11 as necessary to customize the rest of the output string.
15. Click **Finish** to close the wizard.

3. Setup the BioStar System

3.3 Setup Doors

This section describes how to setup doors within the BioStar system. For information about installing physical devices and integrating them with door components, refer to the user guide that accompanies each device.

3.3.1 Add a Door

To add a door:


1. Click **Doors** in the shortcut pane.
2. In the task pane, click **Add New Door**.
3. Right-click **New Door**, click **Rename**, and type a name for the door.

3.3.2 Associate a Device With a Door

BioStar allows you to associate a maximum of two devices with each door. When using two devices on a door, the devices should be connected to each other via RS485. See section 5.2 for an explanation of door settings.

To associate a device with a door:

1. Click **Doors** in the shortcut pane.
2. Right-click a door and click **Add Device**.
3. Select a device from the **Device Tree** dialog box by clicking the checkbox next to a device name.

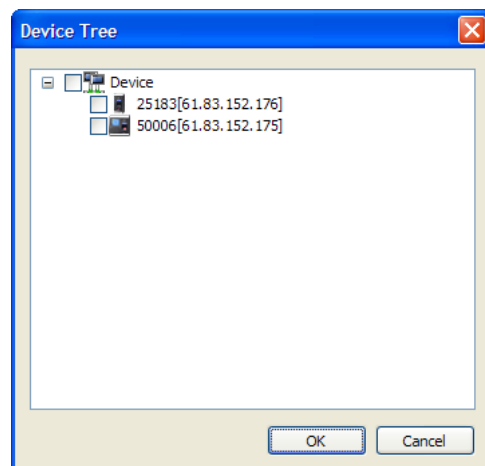

4. Click **OK**.

3. Setup the BioStar System

3.3.3 Configure a Door

1. Click **Doors** in the shortcut pane.
2. Click the name of a door in the navigation pane. This will open a Doors pane similar to the one below:

The screenshot shows the 'Doors' configuration window. The 'Basic Information' section at the top has a 'Name' field with 'New Door' and an empty 'Description' field. Below this is a tabbed interface with four tabs: 'Details', 'Alarm', 'Access Group', and 'Event'. The 'Details' tab is selected and active. It contains two columns of settings. The left column includes: 'Inside Device' (Disable), 'Unlock Time' (No Time), 'IO Device' (Disable), 'Exit Button' (Disable), '(Switch Type)' (N/O), 'Door Open Period(sec)' (3), and 'Driven By' (All Events). The right column includes: 'Outside Device' (Disable), 'Lock Time' (No Time), 'Door Relay' (Disable), 'Door Status' (Disable), '(Switch Type)' (N/O), 'Door Open Alarm(sec)' (0), and 'Closed By' (Open period). Each setting is represented by a dropdown menu or a text input with increment/decrement buttons. At the bottom right of the window is an 'Apply' button.

3. Configure door information on the following tabs. For an explanation of door settings, see section 5.2.
 - **Details:** Use this tab to control the interaction between doors, devices, locks, and exit buttons. If you add two devices to a door, you can also use this tab to configure anti-passback settings.
 - **Alarm:** Use this tab to specify what actions to take when the door is forced open or held open.
 - **Zone:** Use this tab to see the zones associated with a door.
 - **Access Control:** Use this tab to see the access groups associated with a door.
 - **Event:** Use this tab to retrieve and monitor an event log for the door.
4. When you are finished configuring the device, click **Apply** to save your changes.

3.3.4 Create a Door Group

You can create groups of doors for easier management.

1. Click **Doors** in the shortcut pane.
2. In the navigation pane, right-click *Doors* and click *Add Door Group*.
3. Type a name for the group and press Enter.
4. To add a door to the group, click and drag a door to the group.

3. Setup the BioStar System

3.4 Setup Elevators (Lifts)

This section describes how to setup elevators within the BioStar system. For information about installing physical devices and integrating them with elevator components, refer to the user guide that accompanies each device. BioStar supports up to 128 elevators (lifts).

3.4.1 Add an Elevator

To add an elevator:


1. Click **Lift** in the shortcut pane.
2. In the task pane, click **Add New Lift**.
3. Right-click **New Lift**, click **Rename**, and type a name for the elevator.

3.4.2 Associate a Device With an Elevator

BioStar allows you to associate Xpass or Xpass Slim devices with a LIFT I/O device to control access to elevators. The LIFT I/O device must be connected to the Xpass or Xpass Slim device via RS485.

To associate an Xpass or Xpass Slim device with an elevator:

1. Click **Lifts** in the shortcut pane.
2. Right-click an elevator name and click **Add Reader**.
3. Select an Xpass or Xpass Slim device from the **Device Tree** dialog box by clicking the checkbox next to a device name.

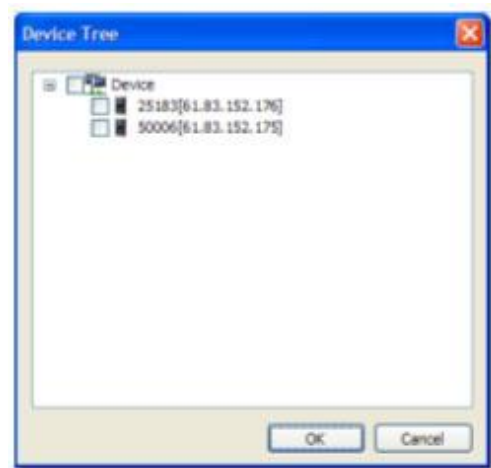

4. Click **OK**.

3. Setup the BioStar System

3.4.3 Configure an Elevator

1. Click **Lifts** in the shortcut pane.
2. Click the name of an elevator in the navigation pane. This will open a Lifts pane similar to the one below:

The screenshot shows the 'Lift' configuration window. The 'Basic Information' tab is active, showing fields for 'Name' (New Lift) and 'Description'. Below this is the 'Detail' tab, which contains an 'IO Reader' dropdown set to 'Disable'. The 'Detail' tab is divided into two main sections: 'LIFT IO' and 'OUTPUT'. The 'LIFT IO' section contains a large empty box. The 'OUTPUT' section contains a table with 12 rows, each representing an output (OUT 0 to OUT 11). Each row has a 'Floor' dropdown menu and a checkbox labeled 'not use'. All checkboxes are currently checked. At the bottom of the window are 'Add', 'Delete', and 'Apply' buttons.

OUTPUT	Floor	not use
OUT 0		<input checked="" type="checkbox"/>
OUT 1		<input checked="" type="checkbox"/>
OUT 2		<input checked="" type="checkbox"/>
OUT 3		<input checked="" type="checkbox"/>
OUT 4		<input checked="" type="checkbox"/>
OUT 5		<input checked="" type="checkbox"/>
OUT 6		<input checked="" type="checkbox"/>
OUT 7		<input checked="" type="checkbox"/>
OUT 8		<input checked="" type="checkbox"/>
OUT 9		<input checked="" type="checkbox"/>
OUT 10		<input checked="" type="checkbox"/>
OUT 11		<input checked="" type="checkbox"/>


3. Configure elevator information in the following fields:
 - **LIFT IO:** Select a LIFT I/O device to view and change settings.
 - **Relay Duration:** Relay Duration is supported in the Detail tab of Lift IO. Default setting range is 10 seconds, and you can set min. 1 second to max. 60 seconds. Supported by latest regular firmware among Xpass and BioEntry Plus supporting LIFT IO.
Note: Supported Firmware Versions: BioEntry Plus 1.6, Xpass 1.3
 - **OUTPUT:** This field lists the available outputs of the LIFT I/O device.
 - **Floor:** Use this tab to see the zones associated with a door.
 - **Not use:** Select the checkbox when you do not use the output port of the LIFT I/O device. Clear the checkbox to control access to floors by associating outputs with floors.
4. When you are finished configuring the elevator, click **Apply** to save your changes.

3.4.4 Add Users to an Elevator

1. Click **Lifts** in the shortcut pane.

3. Setup the BioStar System

2. Click the name of an elevator in the navigation pane.
3. Click *Lift Manage Users* in the shortcut pane. This will open the **Lift Manage User** dialog box.

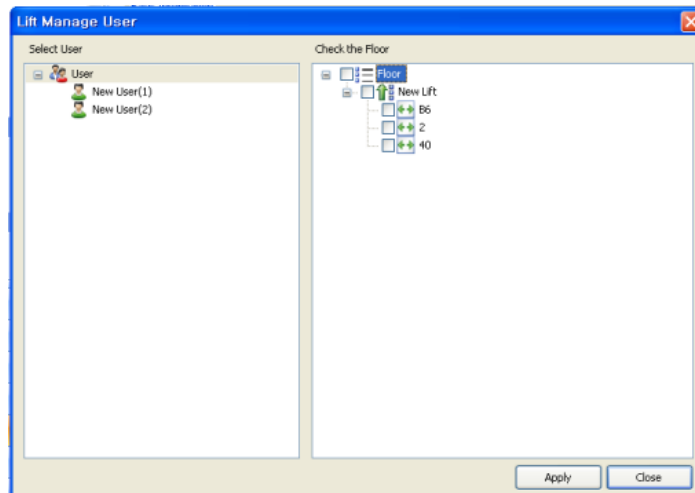

4. In the left pane, click a user's name.
5. In the right pane, click the checkboxes next to floors that you wish to assign the user to.
6. Click **Apply** to save your changes.


3.4.5 Transfer Settings to an Elevator

Attention: When using Xpass or Xpass Slim devices as lift readers, transferring settings to the device with the User menu will reset all of the settings and user data stored on the device. To preserve the settings, use the *Transfer to Device* function in the Lift menu instead.

To send settings and user data to an Xpass or Xpass Slim device:

1. Click **Lifts** in the shortcut pane.
2. Click **Transfer to Device** in the task pane. This will open the **Lift Tree** dialog box.

3. Setup the BioStar System

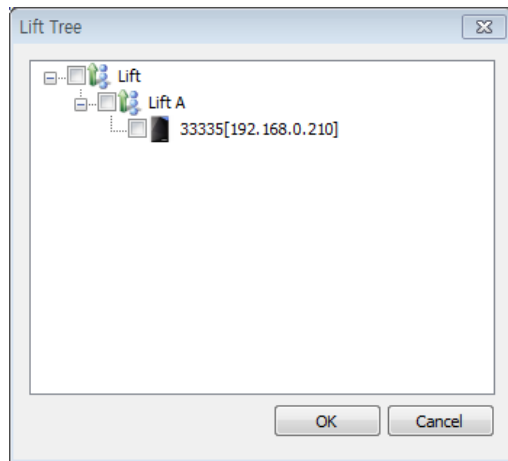

3. In the lift tree, select a device or devices by clicking the checkboxes next to device names.
4. Click **Apply** to send the elevator settings to the selected devices.

3.5 Setup Zones

BioStar allows you to provide sophisticated access control with multiple zones. Zones can be used to control the behavior of devices, doors, and other components. In addition, zones can be configured to provide different types of restrictions, such as anti-passback, timed anti-passback, and entrance limits. The sections below describe how to determine which zones to use and how to add and configure zones.

3.5.1 Determine Which Zones to Use

In total, the BioStar system supports seven types of zones:

- **Access zone:** Use this zone to synchronize user or log information. If you select the user synchronization option, user data enrolled at the devices will be automatically propagated to other connected devices. If you select the log synchronization option, all log records will be written to the master device (in addition to the server), so that you can check log records of member devices. For information about customizing access zones, see section 5.3.5.
- **Anti-passback zone:** Use this zone to prevent a user from passing his or her card back to another person or using his or her fingerprint to allow someone else to gain entry. The zone supports two types of anti-passback restrictions: soft and hard. When a user violates the anti-passback protocol, the soft restriction will record the action in the user's log. The hard restriction will deny access and record the event in the log when the anti-passback protocol is violated. For information about customizing anti-passback zones, see section 5.3.1.

3. Setup the BioStar System

- **Entrance limit zone:** Use this zone to restrict the number of times a user can enter an area. The entrance limit can be tied to a timezone, so that a user is restricted to a maximum number of entries during a specified time span. You can also set time limits for reentry to enforce a timed anti-passback restriction. For information about customizing entrance limit zones, see section 5.3.2.
- **Alarm zone:** Use this zone to group inputs from multiple devices into a single alarm zone. Devices in the alarm zone can be simultaneously armed or disarmed via an arm or disarm card or a key. For more information about configuring alarm zones, see sections 3.5.2.4, 3.5.2.5, 3.5.2.6 and 5.3.3.
- **Fire alarm zone:** Use this zone to control how doors will respond during a fire. External inputs can be fed into the BioStar system to automatically trigger door releases or perform other actions. For more information about customizing fire alarm zones, see section 5.3.4.

3. Setup the BioStar System

- **Muster zone:** Use this zone to monitor and track employees during an emergency or to perform a “roll call” where employees are required to be present in a particular area at a particular time. Muster zone allows administrators to determine if any employee has not reported to the muster area and, if any employee is unaccounted for, take the necessary actions to locate them. For more information about customizing muster zone, see section 5.3.6.
- **Interlock zone:** Use this zone to create an interlock area with two doors equipped with devices. When an external input indicates that one door is open, the other door is automatically locked to provide a secure interlock area. A reader-equipped door that does not belong to any other zone can be used to create up to four interlock zones (four zones maximum per reader). For more information about configuring an interlock zone, see section 5.3.7.

3.5.2 Add and Configure Zones

When you add a zone, you can use the four tabs in the Zone pane to configure the zone. For an explanation of zone settings, see section 5.3.

- **Details:** Add devices and specify inputs or other parameters for a zone.
- **Alarm:** Specify alarm actions and outputs.
- **Access Group:** Apply access groups to a zone (not available for fire alarm zones).
- **Event:** View events associated with a zone.

3.5.2.1 Add a zone


To add a new zone:

1. Click **Doors** in the shortcut pane.
2. In the navigation pane, right-click *Zone*.
3. Click *Add Zone*.
4. Type a name for the zone in the Name field.
5. Select a zone type from the drop-down list (see section 3.5.1 for zone descriptions).
6. Press **OK**. The Zone pane will appear on the right side of the screen.

3. Setup the BioStar System

3.5.2.2 Add a device to a zone


To implement the protocols of a zone, you must associate devices with the zone. The Details tab (in the Zone pane) contains a Device List that shows each device associated with a zone (see below).

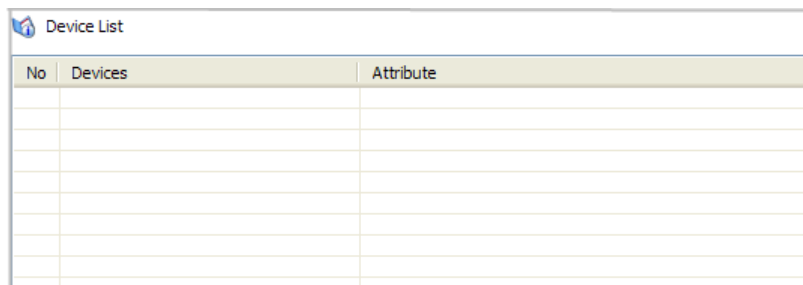

No	Devices	Attribute

To add a device to a zone:

1. Click **Doors** in the shortcut pane.
2. In the navigation pane, click the name of a zone.
3. In the Zone tab, at the bottom of the Device List, click **Add Device**. This will open the **Add Device** dialog box.

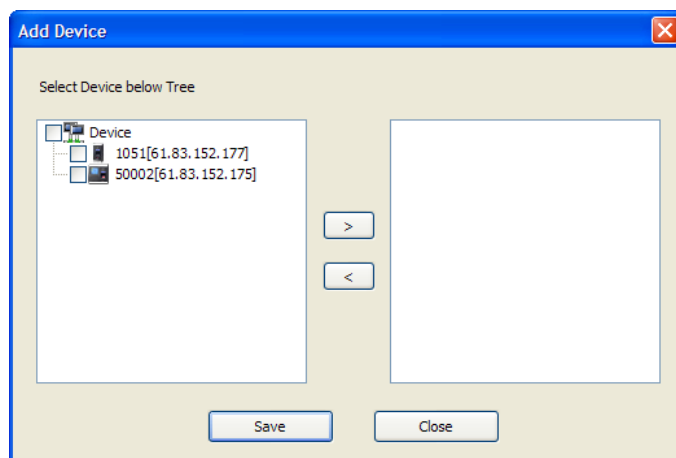

4. Select a device (or multiple devices) from the list and click >.
 - **Anti-passback zones:** When the Select Zone Attribute pop-up appears, select an attribute from the drop-down list (*In Device* or *Out Device*).
 - **Alarm zones:** When the Select Zone Attribute/Type pop-up appears, select a device attribute from the drop-down list (*General*, *Arm*, *Disarm*, or *Arm/Disarm*). If you select an arm or disarm attribute (or *Arm/Disarm*), click the *Card* or *Key* radio button to specify how to arm or disarm zones, and then press **OK**. For more information about arming or disarming zones, see section 3.5.2.5.
5. Press **Save** to add the devices to the list.


3. Setup the BioStar System

3.5.2.3 Configure zone inputs

When adding devices to an alarm or fire alarm zone, you must also configure the zone inputs.

To configure inputs:

1. Click **Doors** in the shortcut pane.
2. In the navigation pane, click the name of a zone.
3. In the Zone tab, at the bottom of the Device List, click **Add Input**. This will open the **Add Zone Input** dialog box.

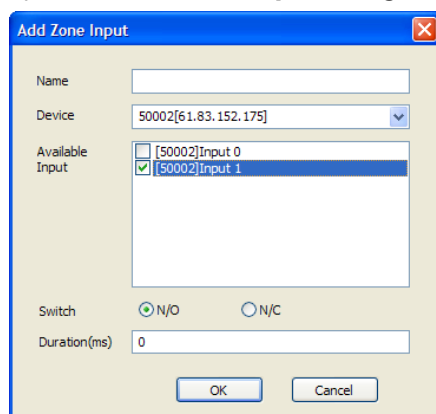

4. Type a name for the input in the Name field.
5. Select a device from the drop-down list.
6. Select one of the available inputs by clicking the checkbox next to the appropriate input.
7. Select the normal position of the input (*N/O-normally open* or *N/C-normally closed*).
8. Set the duration (in milliseconds) of the input signal.
9. Click **OK** to add the input to the Input List.

3.5.2.4 Configure alarm actions and outputs

Configure alarm actions to specify what alerts to receive, if any, and which ports and relays to use for alarm outputs. The Alarm tab (in the Zone pane) offers the following options for all zones except access zones. For more information about alarms, see sections 3.5.2.5 and 3.10.

- **Program Sound:** Set a sound to be emitted by the software (at the host computer or BioStar Server). To add custom sounds, please see section 3.10.1.2.
- **Device Sound:** Set a sound to be emitted by a particular device.

3. Setup the BioStar System


- **Send Email:** Create an email alert to send when an alarm is activated and select recipients or email alerts. For more information about email alerts, see section 3.10.2.
- **Output Device:** Specify a device that will send an alarm signal to an external device, such as an alarm siren.
- **Output Port:** Specify the port to use for an output signal.
- **Output Signal:** Specify a type of output signal.

3.5.2.5 Configure arm and disarm settings

After adding an alarm zone, you can configure the actions that will arm and disarm the zone.

To configure arm and disarm settings:

1. Click **Doors** in the shortcut pane.
2. In the navigation pane, click the name of an alarm zone.
3. Click the Details tab in the Zone pane.
4. Click **Setup** to the right of Arm/Disarm Type. This will open the **Arm/Disarm Setting** dialog box.

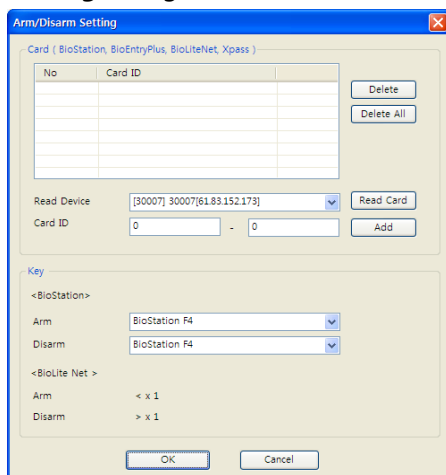

5. To configure cards for arming or disarming zones:
 - a. Select a device from the Read Device drop-down list.
 - b. Click **Read Card**. The LED on the device you selected will begin to flash.
 - c. Place the card on the device.
 - d. When the card has been read, click **Add**. The card can now be used to arm or disarm devices in the alarm zone.
6. To configure device keys for arming or disarming zones (BioStation devices only):
 - a. Select a key that will arm devices from the first drop-down list.
 - b. Select a key that will disarm devices from the second drop-down list.
7. When you are finished configuring the arm and disarm settings, click **OK**.

3. Setup the BioStar System

3.5.2.6 Configure external input/output settings

Instead of manually arming or disarming alarm zones, you can configure the BioStar system to automatically determine when to arm or disarm alarm zones based on the status of a specified input. You can also prevent the BioStar system from arming an alarm zone when a monitored input is in a not-ready position. Finally, you can configure the system to send a specified signal to an external output when it arms or disarms alarm zones. External input/output settings are available in BioStation V1.8, BioEntry Plus V1.4, BioEntry W V1.0, BioLite Net V1.2, Xpass and Xpass Slim V1.0, D-Station V1.0, X-Station V1.0, BioStation T2 and FaceStation V1.0 or higher.

To configure external input/output settings:

1. Click **Doors** in the shortcut pane.
2. In the navigation pane, click the name of an alarm zone.
3. Click the Details tab in the Zone pane.
4. Click **Setup** to the right of External Input/Out. This will open the **External I/O Setting** dialog box.

The screenshot shows the 'External I/O Setting' dialog box with the following configurations:

- External Sensor Status:** Device: 40051[61.83.152.174], Input: [40051] Input 0, Switch: N/O.
- External Arm/Disarm:** Device: 40051[61.83.152.174], Input: [40051] Input 0, Switch: N/O.
- Arm Status:** Device: 40051[61.83.152.174], Relay: [40051] Relay 0, Signal Setting: Signal1, Priority: 0.
- Disarm Status:** Device: 40051[61.83.152.174], Relay: [40051] Relay 0, Signal Setting: Signal1, Priority: 0.

5. Configure the following input/output settings as desired:
 - To prevent the BioStar system from arming an alarm zone:
 - a. Under External Sensor Status, select a device from the Device drop-down list.
 - b. Select an input from the Input drop-down list.
 - c. Select the position of the input (*N/O – normally open* or *N/C – normally closed*) that will prevent the system from arming the alarm zone.
 - To allow the BioStar system to automatically arm or disarm an alarm zone:

3. Setup the BioStar System

- a. Under External Arm/Disarm, select a device from the Device drop-down list.
 - b. Select an input from the Input drop-down list.
 - c. Select the position of the input (*N/O – normally open* or *N/C – normally closed*) that will allow the system to arm the alarm zone. The other position will allow the system to disarm the alarm zone.
 - To send an arm signal to an external device, such as an alarm signal:
 - a. Under Arm Status, select a device from the Device drop-down list.
 - b. Select a relay from the Relay drop-down list.
 - c. Select a type of signal from the Signal drop-down list.
 - d. Specify a priority level in the Priority field.
 - To send a disarm signal to an external device, such as an alarm signal:
 - a. Under Disarm Status, select a device from the Device drop-down list.
 - b. Select a relay from the Relay drop-down list.
 - c. Select a type of signal from the Signal drop-down list.
 - d. Specify a priority level in the Priority field.
- 6. When you are finished configuring the external input/output settings, click **OK**.

3.5.2.7 Select access groups

The Access Group tab (in the Zone pane) allows you to specify access groups that can bypass the normal restrictions set for the zone. For example, you may choose a particular access group to be exempt from the restrictions of an anti-passback zone. For alarm zones, this tab allows you to specify access groups that can arm and disarm alarms. To select an access group, please click the checkbox next to a group name and then click **Apply**.

3.5.2.8 View zone events

The Event tab (in the Zone pane) provides a listing of log events for a particular zone. You can set a date range with the drop-down calendars and view a report of events by clicking **Get Log**. For more information about monitoring and viewing event logs, see section 4.1.

3.6 Setup Users

You will need to use a fingerprint scanner to capture each user's fingerprints. For this reason, it may be helpful to have a terminal connected to the system at a registration center, such as a human resources or security office. BioStation, BioEntry Plus, BioEntry W, BioLite Net, or D-Station devices can be used for fingerprint scanning when networked to the BioStar server, or the BioMini USB device can be connected directly to a BioStar client to provide convenient fingerprint scanning at a registration location.

3. Setup the BioStar System

When adding users, you will first need to create a user account. Once the account has been created, you can register fingerprints and access cards or edit user details as desired.

3.6.1 Create a User Account

User data is controlled via a user account. You can create new accounts for users or retrieve user data from a device. To retrieve user data from a device, please see section 3.6.5.3. To migrate user data from an existing BioAdmin database, see section 2.4.

To create new user accounts:

1. Click **User** in the shortcut pane.
2. In the navigation pane, right-click *User* or a department name and click *Add User*. This will open a User pane similar to the one below.

The screenshot shows the 'User' configuration window. The 'Basic Information' tab is active, showing fields for Name (New User(1)), Department (empty), Telephone (empty), Password (empty), E-Mail (empty), and Admin Level (Normal User). A 'Modify Private Information' button is next to the Name field. Below this is a 'Details' section with tabs for Fingerprints, Face, Face (Fusion), Card, Access Control, T & A, and Event. The 'Details' section contains fields for ID (1), Start Date (1/1/2000), Expiry Date (12/31/2030), Private Auth Mode (Device Default), Title (guest), Mobile (empty), Genders (Female), and Date of Birth (12/23/2011). At the bottom are 'Add', 'Delete', and 'Apply' buttons.

3. Add details of the user's account in the User pane:
 - **Name:** Enter the user's name.
 - **Department:** Enter a department or click the ellipsis button (...) to select from departments you have added to the BioStar system.
 - **Telephone:** Enter the user's telephone number (digits only—no characters are allowed in this field).
 - **E-mail:** Enter the user's email address.
 - **Password:** Enter the user's password, if desired.
- Note:** Passwords saved in FaceStation devices are not compatible with other

3. Setup the BioStar System

devices. When transferring data from a FaceStation device to another type of device, you must create new passwords for the other device.

- **Admin Level:** Select the user's BioStar administration level (*Normal User* or *Admin User*).
- **ID:** Enter an identification number for the user.
- **Start Date:** Set a beginning date that the user can obtain authorization via the BioStar system.
- **Expiry Date:** Set a date that the user's account will expire (you can also specify the hour that the account will expire).
- **Title:** Select a title for the user (*Guest, President, Director, General Manager, Chief, Assistant Manager*, or custom title).
- **Mobile:** Enter a mobile telephone number for the user.
- **Genders:** Select the user's gender.
- **Date of Birth:** Select the user's date of birth from the drop-down calendar.

Note: You can add a photo of the user or a private message by clicking *Modify Private Information*.

4. Register fingerprints (see section 3.6.2), face images (see section 3.6.3), and access cards (see section 3.6.4) as necessary.
5. When you are finished adding details to the user's account, click **Apply**.

3.6.2 Register Fingerprints

BioStar provides an option for encrypting fingerprint templates. If you choose to use this option, you should set the encryption before capturing fingerprint scans. Any previously-captured fingerprint templates will be rendered unusable when you activate the encryption. For more information about encrypting fingerprints, see section 4.7.

When registering fingerprints, it is important to capture quality images. Before registering fingerprints, ensure that the candidate's fingers are clean and dry. You may need to ask the candidate to clean his or her fingers just prior to registration. If a candidate has excessively dry skin, ask him or her to moisten the fingertips slightly by breathing warm air on them just prior to registration.

When registering fingerprints, keep the following tips in mind:

- You must register the same finger twice (two templates). You can register a total of two fingers (a total of four templates) per user.
- Fingers with scars, worn fingerprints, or other physical damage may be poor choices for registration.
- It may be necessary to delete and recapture an image of a fingerprint if the candidate experiences low acceptance rates.

3. Setup the BioStar System

3.6.2.1 Place fingers on the sensor

To ensure good quality fingerprints, candidates must place as much of the finger pad (the soft part opposite the fingernail) on the sensor as possible. Suprema recommends using index or middle fingers, because they are typically easier for users to correctly place on the sensor. To properly place a finger on the sensor, candidates should lay the finger flat, so that the pad side covers most of the sensor and the finger is nearly perpendicular to the sensor.

The image below illustrates both correct and incorrect placement of a finger on the sensor.



3.6.2.2 Register fingerprints

BioStar allows you to register up to ten fingerprints per user. However, some devices can only store a limited number of fingerprints:

Device	Number of Fingerprints
BioEntry Plus	2
BioEntry W	
BioLite Net	
BioStation	5
BioStation T2	10
D-Station	

When fingerprints are distributed from BioStar, the device will receive the maximum number of fingerprints, beginning with the first stored fingerprint scan.


If desired, one of the fingerprints can be used as a duress signal that will trigger alarms when a candidate is forced to access an area. When registering duress fingerprints, keep the following tips in mind:

- A duress finger cannot be used for normal access
- The duress finger should appear to be a natural choice (i.e., the little finger is an unusual choice and may indicate to a perpetrator that the candidate is triggering an alarm)
- Candidates should be educated about what occurs when the duress finger is used (e.g., the duress finger may trigger automatic door locks or silent alarms).

3. Setup the BioStar System

To register fingerprints:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. Click the Fingerprints tab in the User pane.

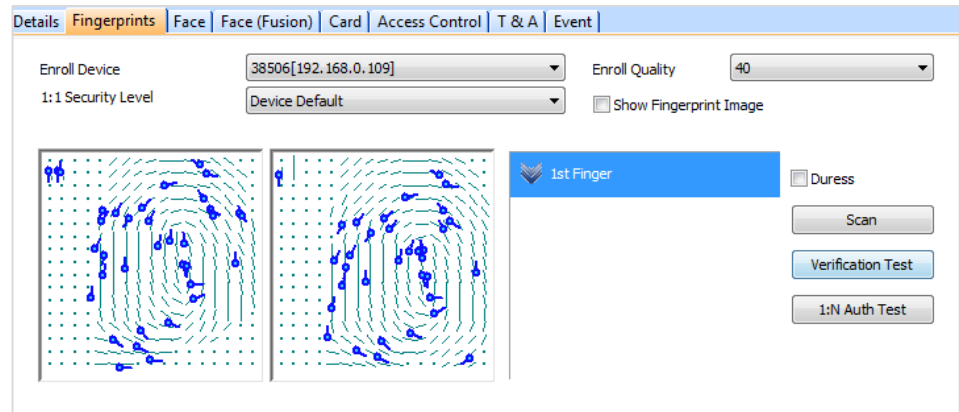

The screenshot shows the BioStar software interface for fingerprint enrollment. At the top, there is a navigation bar with tabs: Details, Fingerprints (selected), Face, Face (Fusion), Card, Access Control, T & A, and Event. Below the navigation bar, the interface is divided into several sections. On the left, there are two fingerprint images showing the scanning process. To the right of the images, there are several controls: a dropdown menu for 'Enroll Device' showing '38506[192.168.0.109]', a dropdown for '1:1 Security Level' showing 'Device Default', and a dropdown for 'Enroll Quality' showing '40'. There is also a checkbox for 'Show Fingerprint Image'. Below these controls, there is a section for '1st Finger' with a 'Duress' checkbox and three buttons: 'Scan', 'Verification Test', and '1:N Auth Test'.

4. Select the device you will use for scanning fingerprints from the **Enroll Device** drop-down list.
5. Select a security level from the **1:1 Security Level** drop-down list.
6. Specify any of the following options, as desired:
 - **Enroll Quality:** Set the quality of fingerprints to be enrolled to increase authentication efficiency. The quality of a fingerprint is determined by multiple factors including data on its minutiae distribution. You can specify four values (20, 40, 60, 80) and selecting the higher numbers will improve the quality of a fingerprint but can reduce the chances of a fingerprint being enrolled. Please note that this option is only available on BioStar Standard Edition.
 - **Show Fingerprint Image:** Specify whether to display a fingerprint image on the screen. Fingerprint images are not saved in the database of BioStar server and you can only save individual images on your PC if necessary.
7. Click **Add** at the bottom right of the User pane to create an empty slot for registering a fingerprint.
8. In an empty finger slot, press **Scan** and then have the user place his or her finger on the scanner twice, as prompted by the BioStar interface.
9. If desired, click the checkbox next to the Duress option to set this fingerprint as the duress signal.
10. Repeat steps 6-8 to register the rest of fingerprints.
11. Click **Apply** to save your changes.
12. Validate the submitted fingerprints by clicking either one or both of the following two options:
 - **Verification Test:** Compare a newly-scanned fingerprint to only the stored fingerprint templated collected from a prior enrollment.

3. Setup the BioStar System

- **1: N Auth Test:** Match a newly-scanned fingerprint against multiple fingerprint templates stored in the server.

3.6.2.3 Enroll users via command cards

After issuing command cards, you can enroll users directly from a BioEntry Plus, BioEntry W, or Xpass device. For more information about issuing command cards, please see section 3.2.6.1 and 3.2.8.1.

To enroll a user on a BioEntry Plus or BioEntry W device via a command card:

1. Place an enroll card (command card) on a BioEntry Plus or BioEntry W device.
2. If authorization is required, an administrator must scan his or her fingerprint to continue.
3. To capture only fingerprints, have the user place his or her finger on the scanner two times (as prompted by the device).
4. To capture fingerprints and issue an access card, place the card on the device first. Then, have the user place his or her finger on the scanner two times (as prompted by the device).

To enroll a user on an Xpass device via a command card:

1. Place an enroll card (command card) on an Xpass device.
2. If authorization is required, an administrator must place his or her access card on the device to continue.
3. Place the user's access card on the device.
4. Place the enroll card again on the device to confirm the action.


3.6.3 Capture Face Images

With camera-equipped devices, such as the D-Station and FaceStation, you can capture images of users' faces and use those images for authentication via BioStar's face detection technology. BioStar matches a still image of the user's face during authentication with captured face images in the BioStar server database. Face detection can be used simultaneously with fingerprint recognition for highly secure biometric access control. For more information about face detection settings, please see section 5.4.3.

3. Setup the BioStar System

To capture face images with FaceStation devices:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. Click the Face tab in the User pane.

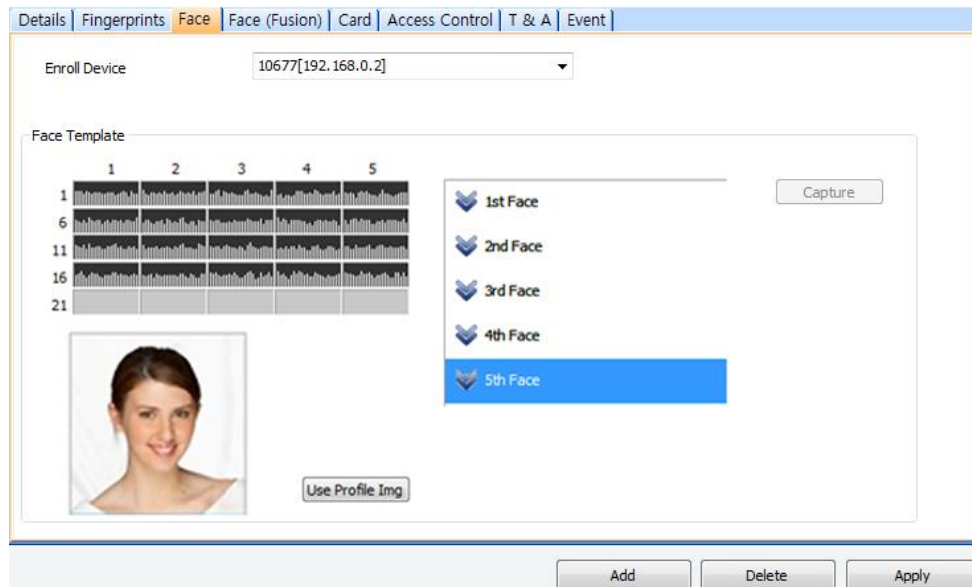

4. Select the *Enrollment Device* you will use for capturing face images from the drop-down list.
5. Click **Add** at the bottom right of the screen to add face(from the 1st Face to the 5th Face).


Note: FaceStation supports up to 5 different user faces to ensure the most accurate face detection at all times, regardless of the different hair styles, make-ups or eye glasses the user might wear.

6. Click the newly added face, click Capture, then follow the instructions prompted by the enrollment device. Repeat steps 5~6 to add more faces.
7. Click Use Profile Img to use the currently registered and selected face image as the user's profile image in the **User** pane.
8. Click **Apply** to save your changes.

3. Setup the BioStar System

To capture face images with D-Station devices:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. Click the Face (Fusion) tab in the User pane.

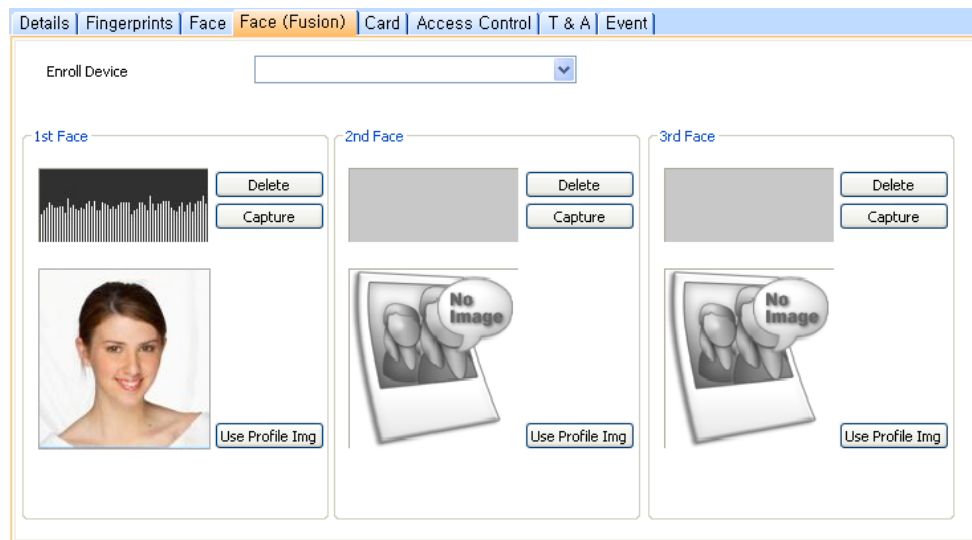

4. Select the enrollment device you will use for capturing face images from the drop-down list.
5. In the 1st Face section, click **Capture**, and then have the user align his or her face with the camera, as prompted by the device.
6. If desired, click **Use Profile Img** to use the image assigned to the user's profile instead of capturing a new image.
7. Repeat steps 5-7 in the 2nd Face and 3rd Face sections to capture additional face images.
8. Click **Apply** to save your changes.

3.6.4 Issue Access Cards

Suprema manufactures access control devices that support multiple types of access cards, as listed below:

- EM4100: BioStation, BioEntry Plus, and BioLite Net
- MIFARE®: BioStation Mifare, BioEntry Plus Mifare, BioEntry W Mifare, BioLite Net, D-Station, and FaceStation
- iCLASS®: BioEntry Plus iCLASS
- FeliCa®: BioEntry Plus iCLASS
- HID proximity: BioStation HID and BioEntry Plus HID

3. Setup the BioStar System


EM4100 and HID cards require only a card ID to complete card registration, while MIFARE and iCLASS cards support two operation modes: Card Serial Number (CSN) and Template-on-Card modes. FeliCa cards support only the CSN mode. When using the CSN mode, you can read the serial number just as you would for an EM4100 or HID card. When using Template-on-Card mode, you must record the user information, including fingerprint templates, directly to the card.

Follow the procedures below to issue the appropriate type of card and then add it to the user's account.

3.6.4.1 Issue EM4100 cards

To register a EM4100 card for a user:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. In the User pane, click the Card tab.
4. Select a "EM4100" from the Card Type drop-down list.
5. Click **Card Management**. This will open the **Card Management** dialog box.

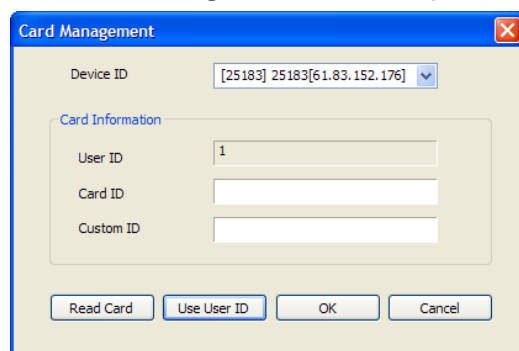

6. Select a Device ID from the drop-down list.
7. Enter a card ID (32 bits) and custom ID (8 bits) either manually or by reading from the card (you can also click **Use User ID** to insert the user's ID in these fields):
 - To enter the data manually, type the card ID and custom ID in the corresponding fields, click **OK**, and then skip to step 8.
 - To read the data from the card, click **Read Card** (the LED on the device you selected will begin flashing) and then place the card on the device. After the card has been read, click **OK**.
8. Click **Apply** to save the card to the user's account.


3.6.4.2 Issue HID proximity cards

To register a HID proximity card for a user:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.

3. Setup the BioStar System

3. In the User pane, click the Card tab.
4. Select "HID Prox" from the Card Type drop-down list.
5. Click **Card Management**. This will open the **Card Management** dialog box.

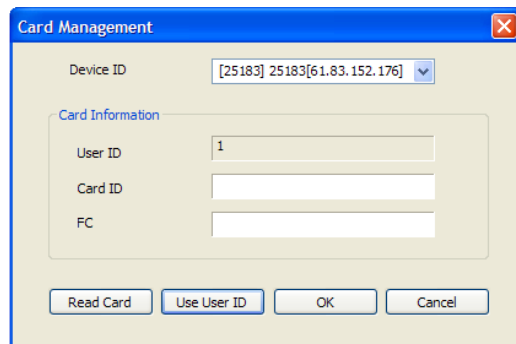
The image shows the 'Card Management' dialog box. At the top, there is a 'Device ID' dropdown menu with the value '[25183] 25183[61.83.152.176]'. Below this is a section titled 'Card Information' which contains three input fields: 'User ID' with the value '1', 'Card ID' which is empty, and 'FC' which is empty. At the bottom of the dialog are four buttons: 'Read Card', 'Use User ID', 'OK', and 'Cancel'.

6. Select a Device ID from the drop-down list.
7. Enter a card ID and facility code (FC) either manually or by reading from the card (you can also click **Use User ID** to insert the user's ID in these fields):
 - To enter the data manually, type the ID and facility code in the corresponding fields, click OK, and then skip to step 8.
 - To read the data from the card, click Read Card (the LED on the device you selected will begin flashing) and then place the card on the device. After the card has been read, click OK.
8. Click **Apply** to save the card to the user's account.

3.6.4.3 Issue FeliCa cards

To register a FeliCa card for a user:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. In the User pane, click the Card tab.
4. Select "FeliCa" from the Card Type drop-down list.
5. Click **Card Management**. This will open the **Card Management** dialog box.

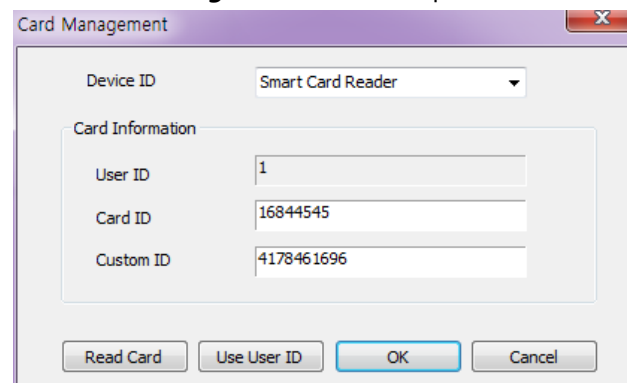The image shows the 'Card Management' dialog box. At the top, there is a 'Device ID' dropdown menu with the value 'Smart Card Reader'. Below this is a section titled 'Card Information' which contains three input fields: 'User ID' with the value '1', 'Card ID' with the value '16844545', and 'Custom ID' with the value '4178461696'. At the bottom of the dialog are four buttons: 'Read Card', 'Use User ID', 'OK', and 'Cancel'.

6. Select a device or Smart Card Reader from the **Device ID** drop-down list.

3. Setup the BioStar System


7. Enter a card ID and custom ID either manually or by reading from the card (you can also click **Use User ID** to insert the user's ID in these fields):
 - To enter the data manually, type the card ID and custom ID in the corresponding fields, click OK, and then skip to step 8.
 - To read the data from the card, click Read Card (the LED on the device you selected will begin flashing) and then place the card on the device. After the card has been read, click OK.
8. Click **Apply** to save the card to the user's account.

3.6.4.4 Issue MIFARE or iCLASS CSN cards

MIFARE and iCLASS CSN cards work much like EM4100 and HID cards, in that they store an uneditable card serial number (CSN) for a user.

To register a card for a user:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. In the User pane, click the Card tab.
4. Select "Mifare CSN" or "iCLASS CSN" from the Card Type drop-down list.
5. Click **Card Management**. This will open the **Card Management** dialog box.

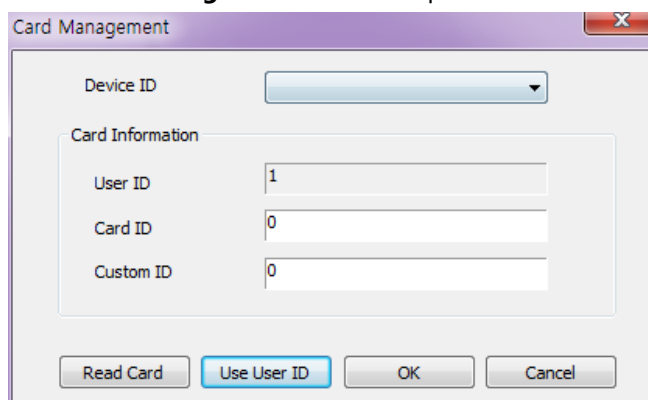

6. Select a Device ID or Smart Card Reader from the drop-down list.
7. Enter a card ID either manually or by reading from the card (you can also click **Use User ID** to insert the user's ID in these fields):
 - To enter the data manually, type the ID and facility code in the corresponding fields, click OK, and then skip to step 8.
 - To read the data from the card, click Read Card (the LED on the device you selected will begin flashing) and then place the card on the device. After the card has been read, click OK.
8. Click **Apply** to issue the card to the user's account.


3. Setup the BioStar System

3.6.4.5 Issue MIFARE or iCLASS template cards

MIFARE and iCLASS template cards allow you to store user information and fingerprint templates directly on the card.

To register a card for a user:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. In the User pane, click the Card tab.
4. Select "Mifare Template" or "iCLASS Template" from the drop-down list.
5. Click **Card Management**. This will open the **Card Management** dialog box.

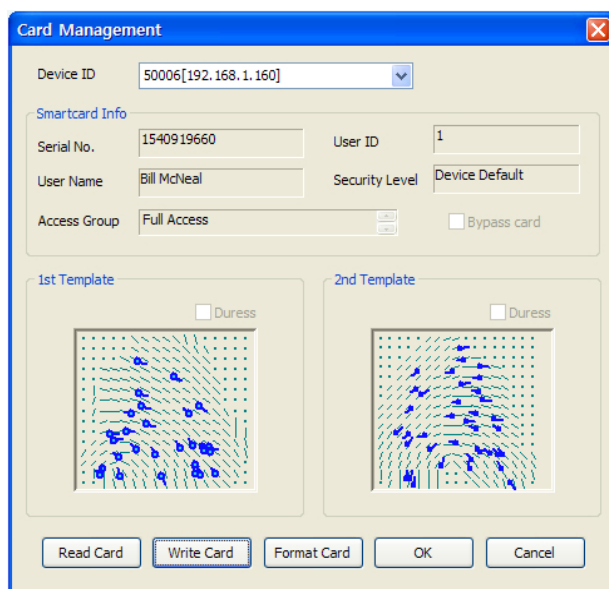

6. Select a Device ID or USB MIFARE device (if connected) from the drop-down list.
7. If desired, click Bypass Card to allow the user to bypass the fingerprint authentication.
8. Click **Read Card**. The LED on the device that you selected will begin flashing.
9. Place the card on the device.
10. After the card is read, click **OK**.
11. Click **Apply** to issue the card to the user's account.

Note: iCLASS 2000, 2002 and 2004 cards are not supported as template cards.

3.6.4.6 Change the MIFARE or iCLASS site key


Data encryption for MIFARE and iCLASS cards is governed by a 48-bit site key. Only those cards with appropriate site keys can be read by connected devices. BioStar allows you to define up to two MIFARE and iCLASS site keys (primary and secondary), so that you can change the site key for existing cards.

3. Setup the BioStar System

Note: This feature is only supported for template-on-cards. Also, please note that site keys must be carefully guarded. If the site key is revealed, your security system can be bypassed.

To change the MIFARE or iCLASS site key:

1. From the menu bar, click **Option > Mifare Card or iCLASS Card > Mifare Sitekey or iCLASS Sitekey**. This will open the **Mifare Sitekey** or **iCLASS Sitekey** dialog box.

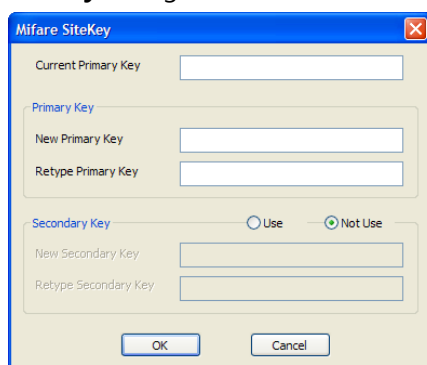The image shows a software dialog box titled "Mifare SiteKey". It contains several input fields and controls. At the top is a field for "Current Primary Key". Below it is a section labeled "Primary Key" containing "New Primary Key" and "Retype Primary Key" fields. Further down is a "Secondary Key" section with a radio button group containing "Use" and "Not Use" (which is selected). Below the radio buttons are "New Secondary Key" and "Retype Secondary Key" fields. At the bottom are "OK" and "Cancel" buttons.

2. Enter a new primary key in the *New Primary Key* field.
3. Enter the key again in the *Retype Primary Key* field.
4. Click the *Use* radio button to activate the secondary key function. This allows cards with the old site key to be read and rewritten with the new key:
 - a. Enter the old site key in the *New Secondary Key* field.
 - b. Enter the old site key again in the *Retype Secondary Key* field.
5. When you are finished editing the site key, click **OK**.

Note: When all cards have been rewritten with the new site key, Suprema advises disabling the secondary key function to prevent old cards from being used for access.

3.6.4.7 Edit the MIFARE layout

BioStar allows you to customize the layout that is used to record user information and fingerprint templates. This layout will be applied to all new MIFARE cards issued with the devices you specify (BioStation Mifare, BioEntry Plus Mifare, BioEntry W Mifare, BioLite Net, D-Station, or FaceStation devices).

MIFARE 1K cards are organized into 16 sectors with 4 blocks of 16 bytes each.

MIFARE 4K cards are organized into 32 sectors with 4 blocks and 8 sectors with 16 blocks. The following constraints apply to the MIFARE layout:


- The first sector (block 0 through block 3) is reserved and cannot be used for other data.

3. Setup the BioStar System

- The last block of each sector (blocks 3, 7, 11, and so on) is reserved for site key information.
- The card information sector (CIS) occupies three contiguous blocks and should start at the first available block of a sector (blocks 4, 8, 12, and so on).
- There should be no overlap between each template's data.

To edit the MIFARE layout:

1. From the menu bar, click **Option > Mifare Card > Mifare Layout**. This will open the **Mifare Layout** dialog box.

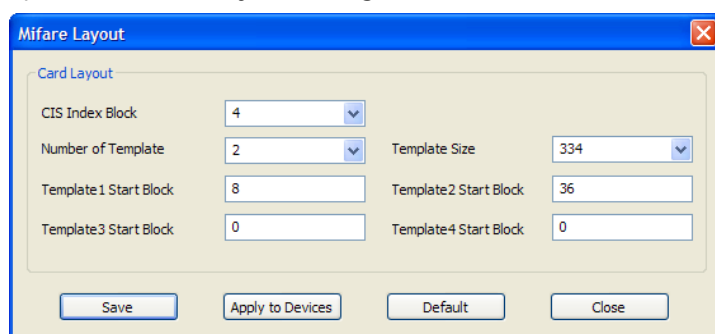

2. Use the drop-down lists and input fields to configure the following parameters of the MIFARE layout:
 - **CIS Index Block:** Select the block index to use for header information (4, 8, 12, or 16).
 - **Number of Templates:** Select the number of templates to include in the layout (0 to 4).
 - **Template Size:** Select the number of bytes to use in the template. The default size is 334 bytes.
 - **Template 1-4 Start Block:** Enter the starting block for each fingerprint template.
3. To use the custom layout, click **Apply to Devices** and select the appropriate device numbers from the **Device Tree** dialog box.
4. To save your changes, click **Save**.

Note: To reset any changes you have made, click **Default**. To exit the dialog box without saving changes, click **Close**.

3.6.4.8 Edit the iCLASS layout


BioStar allows you to customize the layout that is used to record user information and fingerprint templates. This layout will be applied to all new iCLASS cards issued with BioEntry Plus iCLASS devices.

3. Setup the BioStar System

BioEntry Plus iCLASS devices support 16k bit (2k Byte) and 32k bit (4k Byte) iCLASS cards. The 16k bit (2k Byte) cards are available with either 2 or 16 application areas and are organized into 237 blocks of 8 bytes each. The 32k bit (4k Byte) cards are available with either 2 or 16 application areas, plus an additional 16k user configurable memory, and are organized into 8 pages with 26 blocks of 8 bytes each.

To edit the iCLASS layout:

1. From the menu bar, click **Option > iCLASS Card > iCLASS Layout**. This will open the **iCLASS Layout** dialog box.

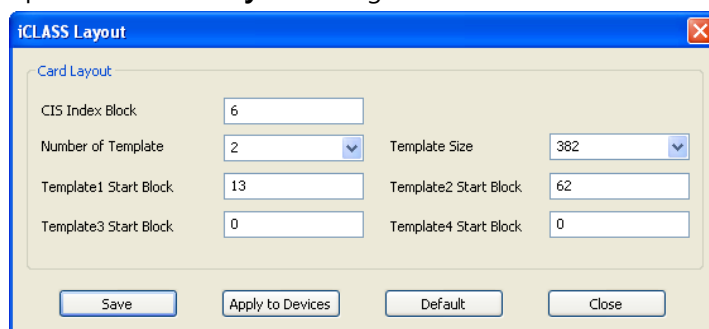The image shows the 'iCLASS Layout' dialog box. It has a title bar with the text 'iCLASS Layout' and a close button. The main area is titled 'Card Layout' and contains several input fields: 'CIS Index Block' with a value of 6, 'Number of Template' with a dropdown set to 2, 'Template Size' with a dropdown set to 382, 'Template1 Start Block' with a value of 13, 'Template2 Start Block' with a value of 62, 'Template3 Start Block' with a value of 0, and 'Template4 Start Block' with a value of 0. At the bottom, there are four buttons: 'Save', 'Apply to Devices', 'Default', and 'Close'.


2. Enter the following parameters of the iCLASS layout:
 - **CIS Index Block:** Select the block index to use for header information (*default value is 13*).
 - **Number of Templates:** Select the number of templates to include in the layout (*default is 2*).
 - **Template Size:** Select the number of bytes to use in the template. The default size is 382 bytes.
 - **Template 1-4 Start Block:** Enter the starting block for each fingerprint template (Template 1 default value is 19; Template 2 default value is 67).
3. To use the custom layout, click **Apply to Devices** and select the appropriate device numbers from the **Device Tree** dialog box.
4. To save your changes, click **Save**.

Note: To reset any changes you have made, click **Default**. To exit the dialog box without saving changes, click **Close**.

3. Setup the BioStar System

3.6.4.9 Read card information from USB-based readers

You can specify options to read information from USB-based contactless readers like a DE-620 by clicking **Option > Card > USB Reader > Card ID Format**.

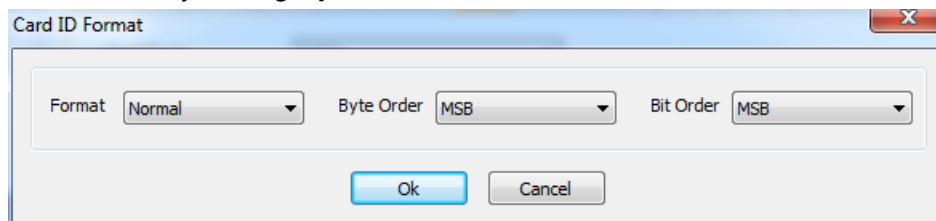

- **Format:** Set the type of pre-processing on the card ID data to Normal, allowing the data to be processed in its original form. Wiegand type is not supported.
- **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (MSB) or least significant byte (LSB).
- **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (MSB) or least significant bit (LSB).


3.6.5 Transfer User Data

BioStar allows you to automatically transfer user information to devices, by selecting the "Auto" setting from the menu bar (**Option > User > Transfer Mode > Auto**). However, you can also manually transfer data to devices. When doing so, you can either transfer selected users to selected devices or synchronize all users at once. BioStar also allows you to retrieve data from a device and transfer it to the BioStar server.

3.6.5.1 Transfer a user to a device

To transfer a single user or selected users to a device or devices:

1. Click **User** in the shortcut pane.
2. In the task pane, click **Transfer Users to Device**. This will open the **Select a Device** dialog box.

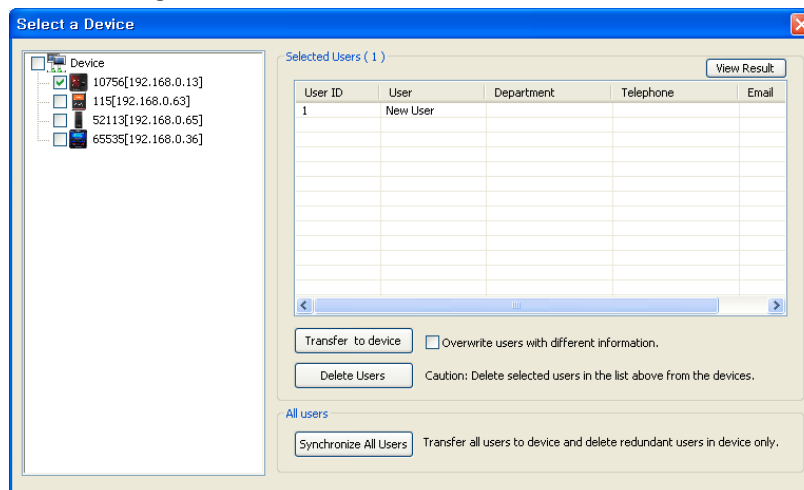

3. Setup the BioStar System

3. Select a device or devices from the list on the left by clicking the checkboxes next to device names.
4. Click a user name (you can hold down the Ctrl key while selecting multiple users).
5. If desired, click the checkbox to overwrite users with different information.
6. Click **Transfer to Device** to send the user information to the selected devices.

Note: You can also delete users from devices with this menu. This action cannot be undone, so use this feature with caution. To delete users from a device, click a user's name and then click **Delete Users**.

When using Xpass or Xpass Slim devices as lift readers, transferring settings to the device with the User menu will reset all of the settings and user data stored on the device. To preserve the settings, use the *Transfer to Device* function in the Lift menu instead.

3.6.5.2 Synchronize all users


To synchronize all user information between the BioStar server and connected devices,

1. Click **User** in the shortcut pane.
2. In the task pane, click **Transfer Users to Device**. This will open the **Select a Device** dialog box (see section 3.6.5.1).
3. Select a device or devices from the list on the left by clicking the checkboxes next to device names.
4. Click **Synchronize All Users**.

3.6.5.3 Retrieve user data from a device

To retrieve data from a device:

1. Click **User** in the shortcut pane.
2. In the task pane, click **Manage Users in Device**. This will open the **Select Target Device** dialog box.

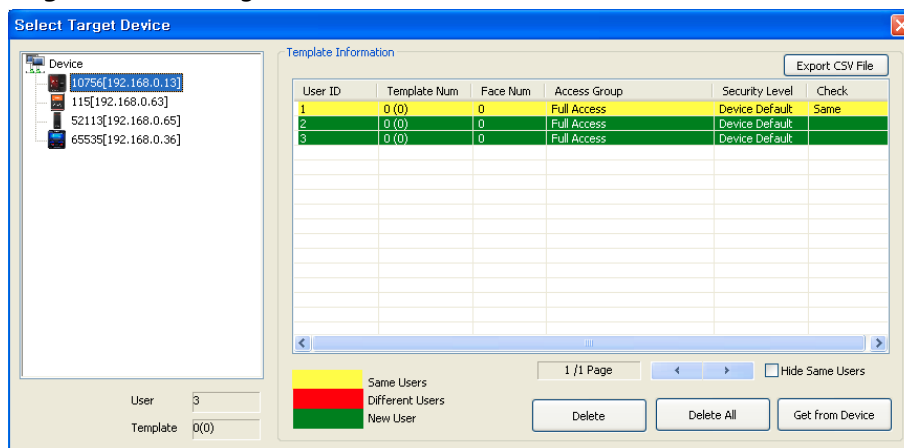

3. Setup the BioStar System

3. Click a device name in the list on the left to display user templates contained in the device.
4. Click a user in the Template Information list (new users will be highlighted in yellow).
5. Click **Get From Device**.

Note: You can also delete users from devices with this menu. This action cannot be undone, so use this feature with caution. To delete users from a device, click a user's name and then click **Delete** (or click **Delete All** to delete all user records at once).

In the template information, "Template Num" is the number of fingerprint templates stored in the device and "Face Num" is the number of face templates stored in the device. Face images captured on D-Station devices are not counted in the "Template Num" total.

Caution: If there are the same users on the BioStar database when you retrieve user data from Xpass devices, the data will be overwritten without fingerprint data because Xpass devices do not store fingerprint data.

3.6.5.4 Merge user data imported from the device


This is to protect the existing data in the server, but import only changed or added user data from the device. If you choose 'Overwrite', this will delete the entire user data previously saved and replace with the user data imported from the device.

To protect important user data, the following 5 items will not be merged and saved to the server DB.

- Admin Level (Changed only if admin level is 'Normal User' in the server database and 'Admin User' in the device.)
- Authentication mode
- Number of Authentication
- Authentication time limit
- Password2


MERGE AND IMPORT USER DATA

1. Click Option > User > Manage Users in Device. Check the Merge option. (Default)

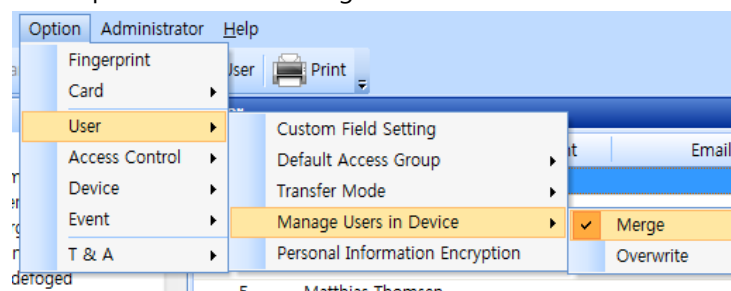

3. Setup the BioStar System


2. In the shortcut pane, click User.
3. In the task pane, click Manage Users in Device. This will open the Manage Users in Device window.

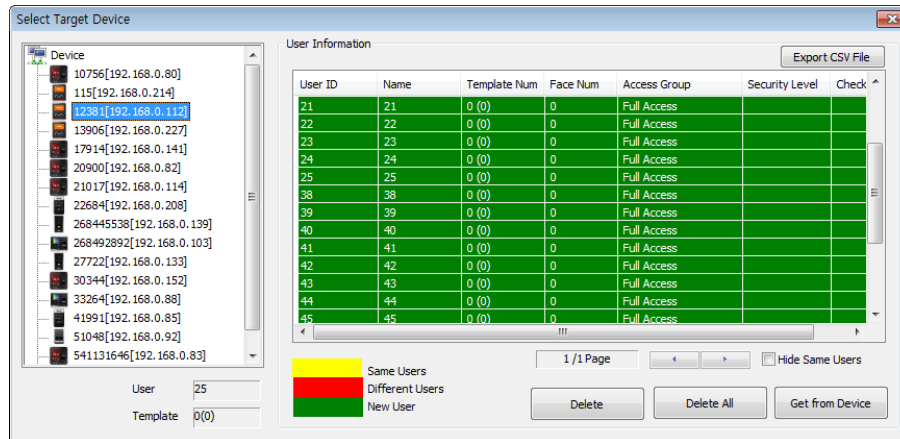

4. Click the device name in the device list on the left and display user information in the device.
5. With color information, compare user data between the device and server and select users.
6. Click Get from Device.

3.6.6 User Data Encryption


BioStar provides AES256 user data encryption. User data encryption helps protect valuable private information against crimes such as identity theft upon any accidental or intentional data breach.

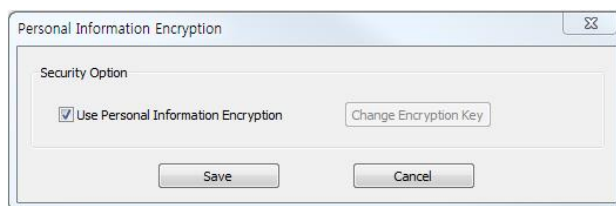

To encrypt user data:

1. Click **Option > User > Personal Information Encryption**.
2. In the **Personal Information Encryption** dialog box, click the check box beside **Use Personal Information Encryption** – a pop-up window will appear.
3. Read the message then click **Yes** to accept it.
4. Click **Change Encryption Key** then enter the encryption key.

3. Setup the BioStar System

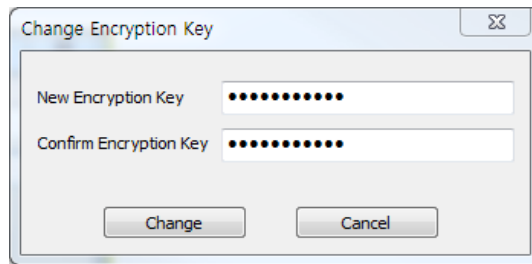

Note You can use Personal Information Encryption without encryption keys. Any combination of letters, numbers and special characters up to 32 characters can be used as the encryption key.

5. Click **Change** to close the window then click **Save** to save changes.

3.7 Setup Timezones

In the BioStar system, timezones are used to schedule permissions and restrictions. You can apply timezones to restrict the hours that a user is permitted to access a door by combining doors and timezones in access groups (see section 3.8).

3.7.1 Create a Timezone

To create a timezone schedule:

1. Click **Access Control** in the shortcut pane.
2. In the task pane, click *New Timezone*.
3. Enter a name for the timezone.
4. In the Timezone pane, create a weekly schedule by highlighting the effective hours for each day. You can copy a schedule from one day to the next by clicking the arrow to the right of the day.

3. Setup the BioStar System

The screenshot shows the 'Timezone' configuration window. The 'Basic Information' tab is active, showing 'Name' as 'New Timezone' and an empty 'Description' field. The 'Details' section contains a 'General Schedule' grid for days of the week (Sunday to Saturday) and a 'Holiday Schedule' section with two entries, 'Holiday 1' and 'Holiday 2', each with a 'Disable' dropdown menu. The grid shows a blue shaded area from 9 AM to 5 PM on weekdays. At the bottom are 'Reset' and 'Apply' buttons.

5. If desired, you can add up to two holiday schedules to the timezone. To create holiday schedules, see section 3.7.2.
6. When you are finished creating the timezone, click **Apply**.
7. Next, transfer the timezone data to devices:
8. In the task pane, click **Transfer to Device**. This will open the **Device Tree** dialog box.
9. Select a device or devices by clicking the checkboxes in the **Device Tree** dialog box.
10. Click **OK**.

You can now combine the timezone with door permissions to create an access group (see section 3.8).

3.7.2 Create a Holiday Schedule

To create a holiday schedule:

1. Click **Access Control** in the shortcut pane.
2. In the task pane, click **New Holiday**.
3. Enter a name for the holiday.
4. In the Holiday pane, set the date the holiday begins with the drop-down calendar.

3. Setup the BioStar System

Holiday

Basic Information

Name: New Holiday

Description:

Details

Date	Every Year	Term
------	------------	------

Delete

Delete All

Add

Thursday , July 03, 2008

☐ Every year 1 Days Long

Apply

5. If the holiday recurs every year, click the checkbox below the drop-down list.
6. Set the duration of the holiday (in days).
7. Click **Add** to add the holiday to the list.
8. Click **Apply**.

3. Setup the BioStar System


3.8 Setup Access Groups

Access groups allow you to define sets of access permissions that can include doors, users, and timezones. Before adding an access group, you must setup doors (see section 3.3) and timezones (see section 3.7). After creating access groups, you must manually transfer the data to affected devices (see section 3.8.4).

3.8.1 Add an Access Group

To add an access group:

1. Click **Access Control** in the shortcut pane.
2. In the task pane, click **New Access Group**.
3. Type a name for the new access group in the box that appears in the navigation pane and press Enter.
4. In the Access Control tab (in the Access Group pane), click **Add**. This will open the **Access Group** dialog box.

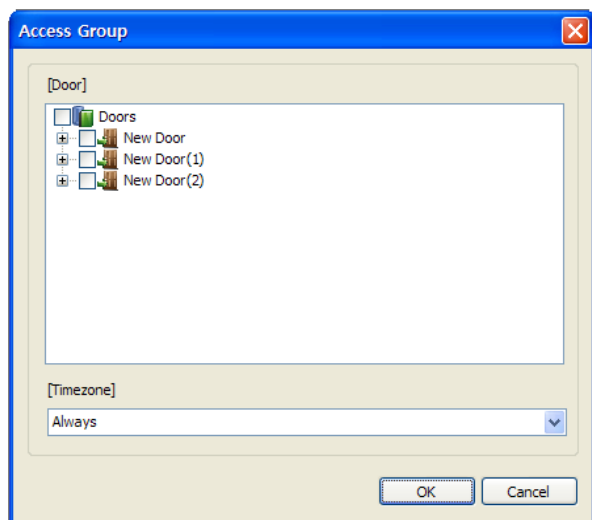

5. Select doors to add to the group by clicking the checkboxes next to door groups or individual doors.
6. Select a timezone to apply to the group from the drop-down list at the bottom of the dialog box.
7. Repeat steps 5 and 6 as necessary to add multiple sets of doors and timezones to the access group.
8. Click **OK** to add your selections to the group.


3. Setup the BioStar System

3.8.2 Add Users to Access Groups

After adding access group, you must add users to the group. You can add users to access groups from the User tab, as described below or by assigning access groups to a user from the User pane, as described in 3.8.3. You can assign a user to a maximum of four access groups.

To add users to access groups:

1. Click **Access Control** in the shortcut pane.
2. From the User tab (in the Access Group pane), click **Add**.
3. In the **Add New User** dialog box, select users to add to the group by checking user groups or individual users.

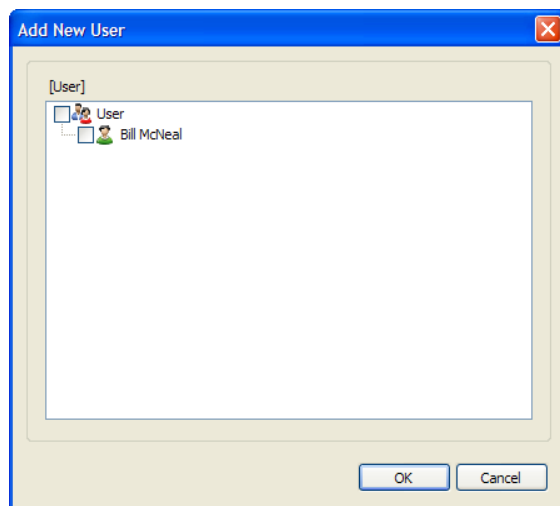

4. Click **OK**.

If you have setup user groups, users will appear under their respective groups.

3.8.3 Assign Access Groups to Users


You can also define which access groups a user will belong to (up to four total) from the User pane.

To assign an access group to a user:

1. Click **User** in the shortcut pane.
2. In the navigation pane, click a user's name.
3. Click the Access Control tab in the User pane.

3. Setup the BioStar System

4. Click **Add**. This will open the **User Access Group** dialog box.

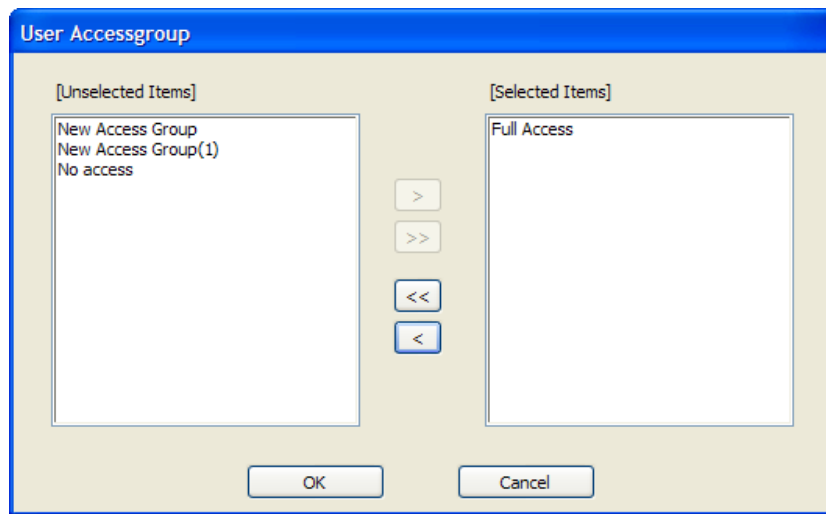

5. Click the name of an access group from the list on the left and then click **>**.
6. Repeat step 5 as needed to assign additional access groups.
7. When you are finished assigning access groups, click **OK**.

3.8.4 Transfer Access Groups to Devices

To transfer access group data to devices:

1. Click **Access Control** in the shortcut pane.
2. In the task pane, click **Transfer to Device**. This will open the **Device Tree** dialog box.
3. Select a device or devices by clicking the checkboxes in the **Device Tree** dialog box.
4. Click **OK**.

3.8.5 Check for Access Rules by Device

You can check the access rules applied for devices by viewing access groups, timezone, and holiday schedules by device. You can also maintain the identical configuration data across the server and devices by either transferring or deleting the data that is inconsistent between them.

3. Setup the BioStar System

To check access groups configured in each device:

1. Click **Access Control** in the shortcut pane.
2. In the task pane, click **Manage Access Group in Device**. This will open the **Device Tree** dialog box.
3. Select a device in the Device tree pane.
4. Select **Access Group**, **Timezone**, or **Holiday Schedule** below the Device tree pane to view how they are configured in each device. The configuration data to the corresponding options will be displayed in the right pane. The data will be highlighted in the following colors depending on whether they are applied in the server, a device, or both.
 - **Yellow**: Indicates that the configuration data in both the device and the server are identical.
 - **Red**: Indicates that the configuration data in the device and the server are different.
 - **Green**: Indicates that the configuration data are applied to the device only.
 - **Blue**: Indicates that the configuration data are applied to the server only.
5. Optional: Select the data that you want to delete from the device and click **Delete from Device** in the lower-right corner of the screen.
6. Optional: Select the data that you want to transfer from the server to a device and click **Send to Device** in the lower-right corner of the screen.

3.9 Setup Time and Attendance


BioStar's time and attendance features allow you to define time categories, shifts, and holiday rules. Refer to the procedures in this section as well as the steps in section 3.7.2 to configure time and attendance options.

3.9.1 Add a Time Category

To add a time category:

1. Click **Time and Attendance** in the shortcut pane.
2. In the task pane, click **Add Time Category**. This will open a Time Category pane similar to the one below.

3. Setup the BioStar System

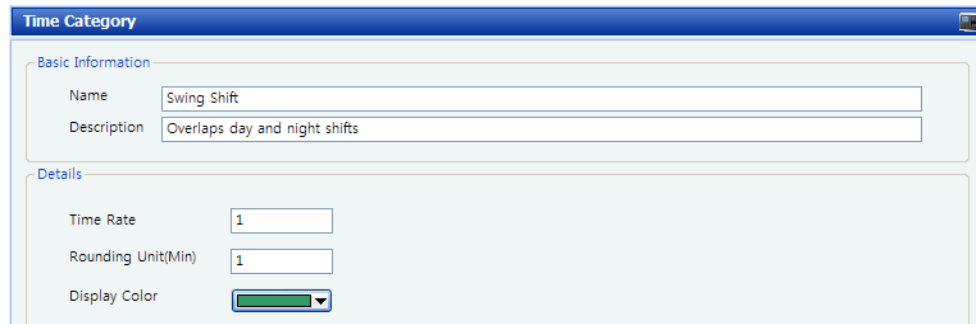

The screenshot shows a 'Time Category' window with the following fields:

- Basic Information:**
 - Name: Swing Shift
 - Description: Overlaps day and night shifts
- Details:**
 - Time Rate: 1
 - Rounding Unit(Min): 1
 - Display Color: Green (selected from a dropdown menu)

3. Enter a name and description for the time category.
4. Add details for the time category:
 - **Time Rate:** Enter the rate at which time is calculated for this time category.
 - **Rounding Unit(Min):** Specify in minutes how to round a user's work time (for example, a entry of "5" will round a user's work time to the nearest 5-minute decrement).
 - **Display Color:** Set how the time category will appear in the daily schedule.
5. Click **Apply** to save the time category.

3. Setup the BioStar System

3.9.2 Add a Daily Schedule

BioStar versions 1.35 and higher support a maximum of 256 daily schedules.

To add a daily schedule:

1. Click **Time and Attendance** in the shortcut pane.
2. In the task pane, click **Add Daily Schedule**. This will open a Daily Schedule pane similar to the one below.

TimeCategory	Start/End Time	Grace(Start)	Grace(End)	Rounding(In)	Rounding(Out)
Early duty(Sample)	05:00~08:00	0	0	10	10
Hours of duty(Sample)	08:00~12:00	1	1	10	10
Hours of duty(Sample)	13:00~17:00	0	0	10	10
Night duty(Sample)	19:00~00:00(+1)	0	0	10	10
All night(Sample)	00:00(+1)~05:00(+1)	0	0	10	10

3. Enter a name and description for the daily schedule.
4. Set the start time for the daily schedule and, if desired, click the checkbox to the right to let the BioStar to record workers' first come-in and last go-out activities via the BioStar system as their check-in and check-out activities for the day.
5. Define the daily schedule by adding one or more time slots:
 - a. Specify the details for the time slot:
 - **Start time:** Set the beginning time for the time slot. If the time slot begins in the following calendar day, click the checkbox ("Next") to the right.
 - **End time:** set the ending time for the time slot. If the time slot ends in the following calendar day, click the checkbox ("Next") to the right.
 - **Time Category:** Select one a time category from the drop-down list. See section 3.9.1 to define the time categories that will appear in this list.

3. Setup the BioStar System

- **Minimum Duration:** Set the minimum duration for the time slot (in minutes). Workers must be checked in for at least the minimum duration, or the system will record no time worked for the time slot.
 - **Grace (Start):** Activate and set a grace period for checking in late at the beginning of the time slot (in minutes). Click the checkbox to enable the grace period and then specify the length of the grace period in the corresponding field. Workers who check in within the grace period will be considered to have checked in right at the start of the time slot.
 - **Grace (End):** Activate and set a grace period for checking out early at the end of the time slot (in minutes). Click the checkbox to enable the grace period and then specify the length of the grace period in the corresponding field. Workers who check out within the grace period will be considered to checked out right at the end of the time slot.
 - **Rounding (In):** Specify in minutes how to round a user's check-in time (for example, a entry of "5" will round a user's time to the nearest 5-minute decrement).
 - **Rounding (Out):** Specify in minutes how to round a user's check-out time (for example, an entry of "5" will round a user's time to the nearest 5-minute decrement).
 - **Auto Check IN:** Enable or disable this feature to automatically check-in a user who has failed to check-in for the time slot.
 - **Auto Check OUT:** Enable or disable this feature to automatically check-out a user who has failed to check-out for the time slot.
 - **Affect Result:** Allow or disallow data from this time slot to be used to determine overall time and attendance result per one daily schedule.
- c. Click **Add** to add the time slot to the daily schedule.
6. Click **Apply** to save the daily schedule.

3. Setup the BioStar System

3.9.3 Add a Shift

To add a shift:

1. Click **Time and Attendance** in the shortcut pane.
2. In the task pane, click **Add Shift**. This will open a Shift pane similar to the one below.

The screenshot shows the 'Shift' configuration window. The 'Basic Information' section contains a 'Name' field with the text 'New Shift(1)' and an empty 'Description' field. The 'Access Control' section is active, showing a 'User' tab. It includes a 'Cycle Type' section with 'Weekly' selected and 'Daily' unselected. Below this are 'Start Date' and 'End Date' dropdown menus, both showing '1/ 1/1970'. A grid displays the days of the week from Monday to Sunday. Each day has a checkbox and a 'Copy' button. The grid is divided into time slots marked at 0, 6, 12, 18, and 24. At the bottom of the window are three buttons: 'Add', 'Delete', and 'Apply'.


3. Click one of the radio buttons to set the shift as a part of a daily or weekly cycle. If you select "weekly," a calendar week will constitute a cycle. If you select "daily," you can specify any number of consecutive days (e.g., 5, 10, or 20 days) to constitute a cycle.

Note: Daily cycle is available only with the Standard Edition of BioStar.

4. Select start and end dates from the drop-down calendars.
5. Activate days of the cycle by clicking the checkboxes on the left.

3. Setup the BioStar System

- Click the ellipsis button (...) to select a daily schedule. This will open the **T&A Tree** dialog box. See section 3.9.2 to define the daily schedules that will appear in this dialog box.

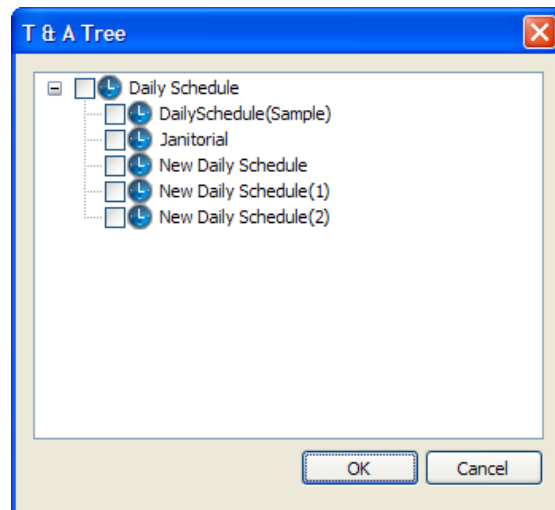

- Select a daily schedule and click **OK** to apply the daily schedule to the shift.
- Repeat steps 5-7 as needed.

Note: You can copy a schedule from one day to the next by clicking the arrow to the right of the day. In addition, you can add up to 1,024 daily schedules to the list.

- Click **Apply** to save the shift.

3.9.4 Assign Users to Shifts


Assign users to shifts to enable BioStar to record time and attendance data. You can assign individual users to shifts via the User pane or assign multiple users to a shift via the Time and Attendance pane.

To assign individual users to shifts via the User pane:

- Click **User** in the shortcut pane.
- In the navigation pane, click a user name.
- In the User pane, click the T&A tab.

3. Setup the BioStar System


- Click the radio button next to Shift Management and then click Add at the bottom of the User pane. This will open the **T&A Tree** dialog box.

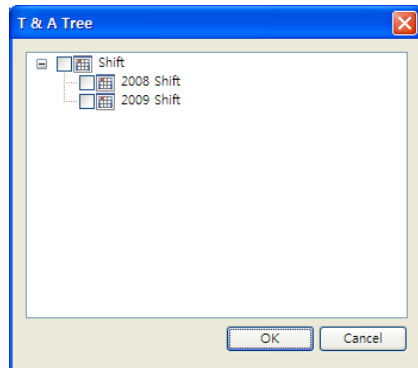

- Select a shift and click **OK**.
- Click **Apply** to save the T&A settings for the user.

To assign multiple users to a shift via the Time and Attendance pane:

- Click **Time and Attendance** in the shortcut pane.
- In the navigation pane, click a shift name.
- In the Shift pane, click the User tab and then click **Add** at the bottom of the pane. This will open the **Add New User** dialog box.

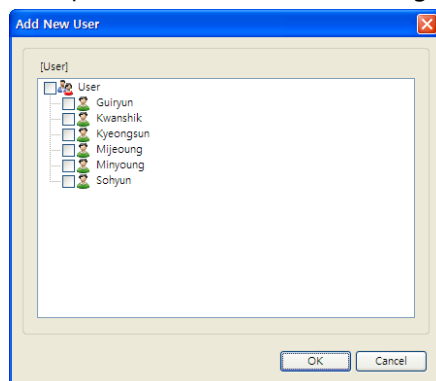

- Select one or more users and click **OK**.
- Click **Apply** to save the T&A settings for the shift.

3. Setup the BioStar System

To add a T&A rule by user:

1. Click **Time and Attendance** in the shortcut pane.
2. Click **Individual Shift** in the task pane. This will open the **Individual Shift** dialog box.

Individual Shift

User

- Chen Wei
- John Doe
- Laura Liu
- Sales

Shift Management

No	Shift	Start Date	End Date
1	Night Shift	2013-07-17	2013-12-31

Holiday Rules Management

No	Holiday Rules
1	Weekends

Leave Management

No	Leave	Type	Start Date	End Date

Shift Override Management

No	Shift	Start Date	End Date	Type


Add Delete Apply Close

3. Click **Add Leave** to define a custom leave.
4. Enter the **Name** and **Description** of the leave that you want to add and click **OK**. A new leave will be added to the list.
5. Click **Close**.


3.9.5 Choose a Device for T&A

Devices can be chosen for the T&A report. If Default is selected, all devices are used for T&A report. But when T&A devices are selected, T&A report is created using event logs in the selected devices. And if it is not included as a T&A device, T&A event keys applied to the device will not be displayed from the T&A report.

3. Setup the BioStar System

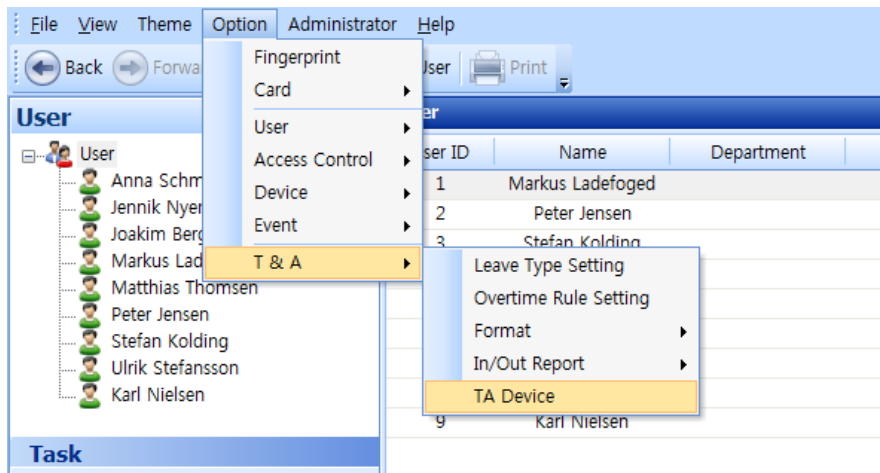

Select and deselect with >, >> or <, <<, and check selected devices and unselected devices through the panel. Manual Add can be made through direct device ID and name input when a device is no longer able to be found from the server but used before.

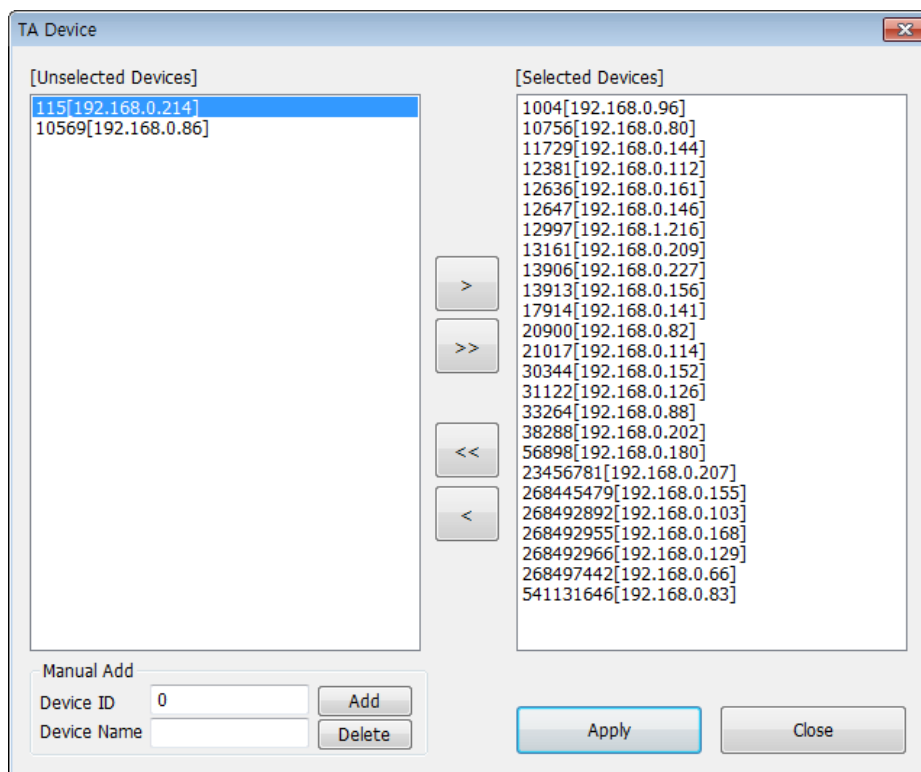

3.10 Setup Alarms

BioStar can provide multiple levels of alarm notification. The system can activate system alarms by emitting sounds from devices and connected computers. The system can also be configured to send email notifications to specified recipients. In addition, you can configure

3. Setup the BioStar System

the system to receive inputs from external devices (such as fire warning devices) or send outputs to external devices (such as alarm sirens).

3.10.1 Configure Alarm Settings and Sounds


BioStar allows you to customize how the system responds to events. You can configure alarm settings by creating customized priority levels and selecting the action to take when an event occurs. You can also add your own alarm sounds to further customize the system.

3. Setup the BioStar System

3.10.1.1 Customize alarm actions

To customize alarm actions:

1. From the menu bar, click **Option > Event > Alarm Setting**. This will open the **Alarm Setting** dialog box.

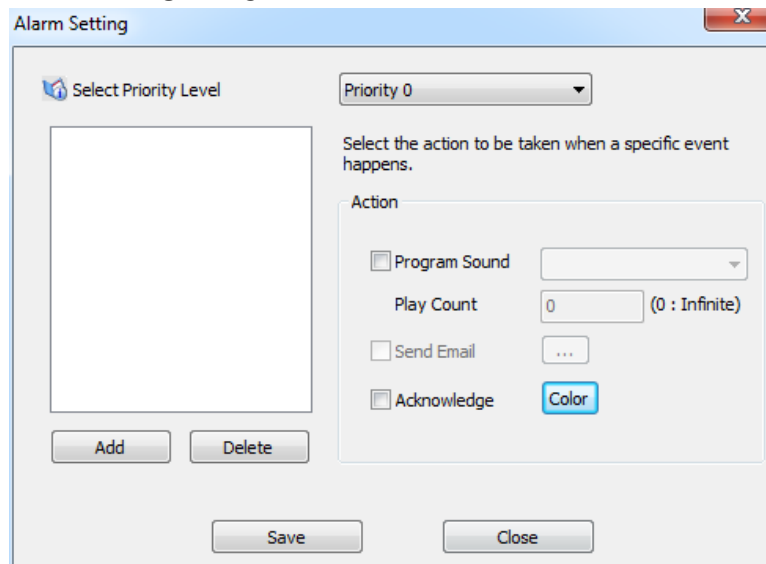

2. Select a priority level from the drop-down list and click **Add**. This will open a list of events.
3. Select the events to include in the priority level and click **OK**.
4. Select an action or actions by clicking the checkboxes on the right.
 - **Program Sound**: Choose a sound from the drop-down list and then specify the duration ("play count") of the sound in seconds. If you set the Play Count to 0, the specified sound will play until someone with administrative privileges manually stops the sound via the Realtime Monitoring tab in the Monitoring pane. To add custom sounds to the list, please see section 3.10.1.2.
 - **Send Email**: Click the ellipsis button (...) to the right to select an email recipient. To configure email notifications, please see section 3.10.2.
 - **Acknowledge**: Activate pop-up alerts on client PCs.
 - **Color**: Specify the color of text and background on any event raised by priority in the Alert Window.
5. Repeat steps 2-4 as desired to customize other priority levels.
6. When you are finished, click **Save**.

3.10.1.2 Add custom alarm sounds

To add custom alarm sounds:

1. From the menu bar, click **Option > Event > Sound Setting**. This will open the **Sound Setting** dialog box.

3. Setup the BioStar System

2. Click **Add**.
3. Locate a waveform (.wav) file on your computer or network and click **Open**.
4. If desired, click a sound and then click **Play** to hear the sound.
5. When you are finished, click **Save**.

3.10.2 Configure email notifications

BioStar sends email notifications when an alarm event occurs (not available in the free version). As explained in 3.10.1.1, you can customize which events will trigger an automatic email alert. BioStar supports email notification through TLS or SSL secured mail servers.

To configure an email notification:

1. From the menu bar, click **Option > Event > E-mail Setting**. This will open the **Email Setting** dialog box.

Recipient Address	Sender Address	SMTP ID	SMTP Server	Port
admin.dev@suprema.co.kr	user1@suprema.co.kr	user1	210.240.219.2	25
sales@suprema.co.kr	admin.mail@suprema.co.kr	mailmaster	210.240.219.2	25

Sender Info
Email Address: admin.mail@suprema.co.kr
SMTP Server: 210.240.219.2
Port (default: 25): 25
SMTP ID: mailmaster
SMTP Password:
Security Type: NO SECURITY
Buttons: Add, Modify, Delete, Test

Recipient Info
Email Address: sales@suprema.co.kr
Buttons: Save, Cancel


2. Type the email address, SMTP server, port number, SMTP ID, and SMTP password in the *Sender Info* section, then choose one of the options(NO SECURITY, TLS or SSL) in the Security Type drop-down list.
3. Type the email address in the *Recipient Info* section.
4. Click **Add** to add the configuration to the list.
5. Repeat steps 2-4 as necessary to add other email configurations.
6. When you are finished, click **Save**.

3. Setup the BioStar System


E-mail setting

Using Alarm setting, you can send an e-mail with user-customized format.

1. Click Option > Event > Alarm Setting > Send Email > The "... " button, then the Select Admin & Contents window will open.

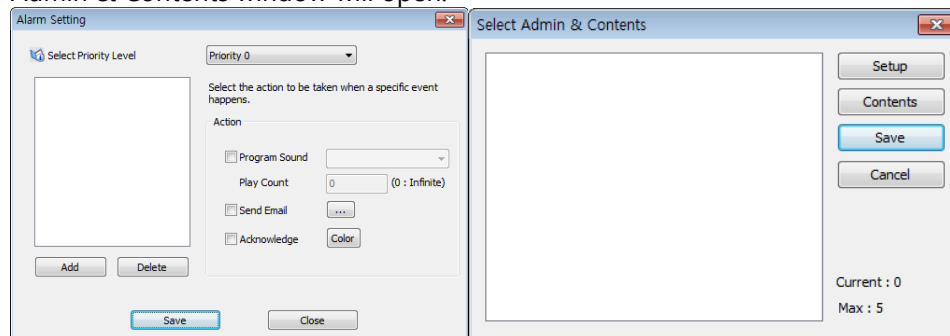


2. Click the "Setup" button and the "Email Setting" window will open.
3. Fill in "Sender Info" and click the "Add" button.
4. Click the "Add" button.
5. Click the "Contents" button and you can modify the e-mail contents settings.

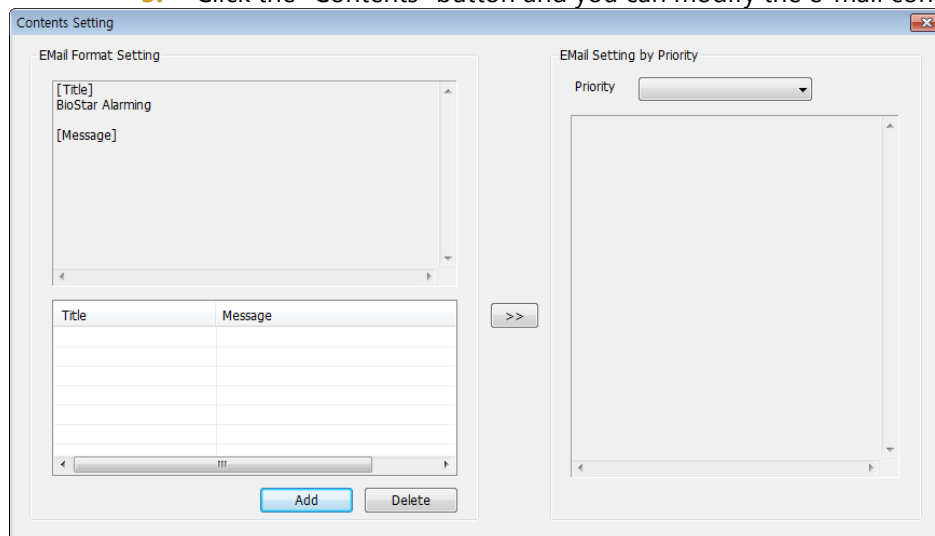

6. Email contents can be applied to each Priority by using >> button.
7. Click "Add" to open "Email Format" window.
8. Select among six items in Add Real Data section to be added to Message. These items are allocated to the actual data at the designated location when email is sent out. For example, ##DATE## is changed to the actual date and time of the event, and ##USER## is changed to the actual user name. Message items can be deleted manually.

3. Setup the BioStar System

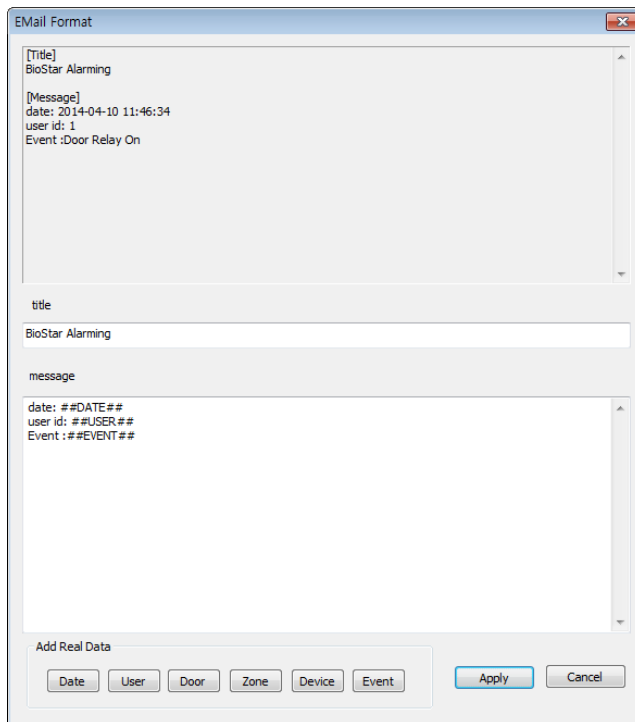

3.10.3 Configure Settings for External Devices

When using external devices with BioStar, you must configure settings to determine what actions will occur in response to input signals. For more information about configuring devices and device settings, see sections 3.2 and 5.1.

3.10.3.1 Configure outputs to external devices

You may choose to have certain devices send signals to external devices, such as alarm sirens, when selected events occur.

To configure outputs:

1. Click **Device** in the shortcut pane.
2. In the navigation pane, click a device name.
3. In the Device pane, click the Output tab.
4. Click **Add** at the bottom of the pane. This will open the **Output Setting** dialog box.

3. Setup the BioStar System

The screenshot shows the 'Output Setting' window. At the top, 'Device Type' is set to 50006 and 'port' is set to Relay 0. The 'Alarm On Event' section contains a list box, an 'Event' dropdown (Auth Success), a 'Device' dropdown (50006), a 'Signal Setting' dropdown (Signal1), and a 'Priority' text box (1). Below these are 'Add', 'Delete', and 'Delete All' buttons. The 'Alarm Off Event' section has a similar structure with 'Event' (Auth Success), 'Device' (50006), 'Priority' (1), and 'Add', 'Delete', 'Delete All' buttons. At the bottom are 'Save' and 'Cancel' buttons.

5. Configure actions that will activate (send a signal to) a specified output relay:
 - a. In the *Alarm On Event* section, select an event from the first drop-down list.
 - b. Select the device number or *All Device* from the second drop-down list.
 - c. Select a signal setting from the third drop-down list.
 - d. Enter a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
 - e. Click **Add**.
6. Configure actions that will turn off (stop sending a signal to) an activated output relay:
 - a. In the *Alarm Off Event* section, select an event from the first drop-down list.
 - b. Select the device number or **All Device** from the second drop-down list.
 - c. Enter a priority for the event.
 - d. Click **Add**.
7. When you are finished, click **Save**.


3.10.3.2 Configure inputs from external devices

To integrate BioStar's door control with other alarm systems, such as fire warning systems, you can specify the actions BioStar will take when receiving an input. You can also configure inputs to work with manual door releases (exit buttons) and other types of external devices.

To configure inputs:

3. Setup the BioStar System

1. Click **Device** in the shortcut pane.
2. In the navigation pane, click a device name.
3. In the Device pane, click the Input tab.
4. Click **Add** at the bottom of the pane. This will open the **Input Setting** dialog box.

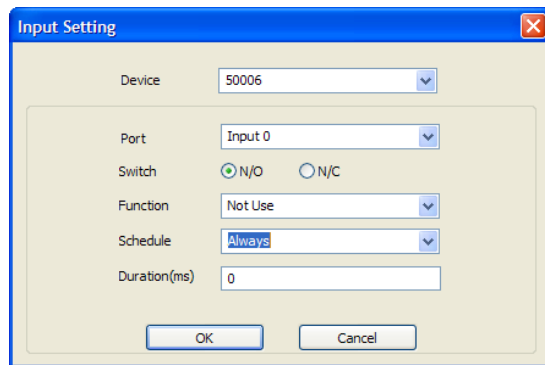

5. Select an input port from the second drop-down list.
6. Select the normal position of the input switch (*N/O-normally open* or *N/C-normally closed*).
7. Select a Function to be triggered (Generic Input, Emergency Open, Release All Alarm, Restart Device, Disable Device, LED Green Input, LED Red Input, Buzzer Input, Access Granted Input, and Access Denied Input).
Note: With BioStar 1.8v, LED Green Input, LED Red Input, Buzzer Input, Access Granted Input, and Access Denied Input were newly added. And these input options are available only with BioStation (FW 1.93v), BioStation T2 (FW 1.3v), FaceStation (FW 1.3v), BioEntry Plus (FW 1.6v), BioEntry W (FW 1.2v), BioLite Net (FW 1.4v), and Xpass (FW 1.3v).
8. Select a function for the input (*Not Use, Generic Input, Emergency Open, Release All Alarms, Restart Device, or Disable Device*).
9. Select a schedule for applying the function (*Always, Disable, or custom schedules*).
10. Set the minimum duration (in milliseconds) an input signal must last to trigger the specified action.
11. Click **OK**.

3.11 Setup Cameras

This section describes how to add IP cameras and network video recorder (NVR) servers to the Biostar system. Once you have properly set up the IP cameras and NVR servers, you can monitor areas in real time and view event logs with still images or recorded videos. BioStar supports the following IP cameras and NVR servers:

3. Setup the BioStar System


	Model Name	Developer
Internet Protocol (IP) Camera	AXIS PTZ 215	AXIS
	AXIS M3203-V	AXIS
	SNP-3120VH	Samsung Techwin
Network Video Recorder (NVR) Server	AXIS Camera Station	AXIS
	NET-I Ware	Samsung Techwin

3.11.1 Add an NVR Server

Network video recorder (NVR) servers store video streams transferred from all connected cameras and allow you to view the videos when you check event logs.

To add an NVR server to the BioStar system:

1. Click **Camera** in the shortcut pane.
2. Click **Setup Camera** in the Task pane.

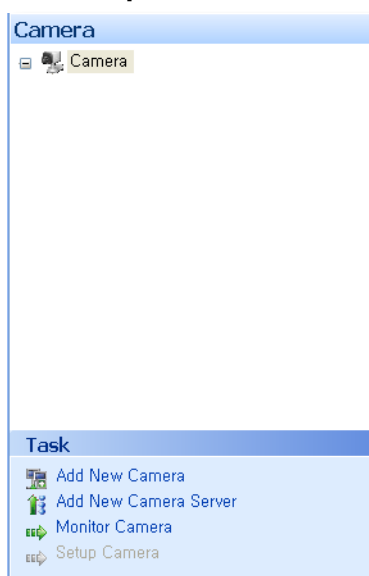

3. Setup the BioStar System

7. In the navigation pane, click a camera name. This will open the Camera (Setup Mode) pane.

Camera (Setup Mode)

Basic Information

Name: AXIS M3203 - 00408CB57F65

Type: [dropdown]

Model: [dropdown]

IP Address: 0.0.0.0

Port: 0

User name: [text box]

Password: [text box]


Details

Device List

No	Devices	Attribute
1	21111[192.168.0.62]	

Add Delete

8. Click **Add** at the bottom right of the Device List to open the **Device Tree** dialog box.

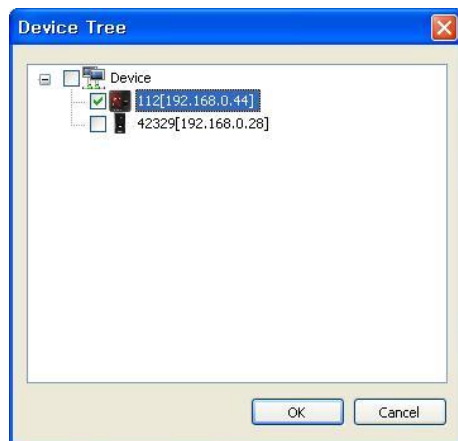

9. Click a checkbox next to a device name, and then click **OK**.
10. Click **Apply** at the bottom right to apply the changes to the BioStar system.

3.11.2 Add an IP Camera

BioStar allows you to add an IP camera, associate it with an access control device, and specify the events that will trigger the IP camera to send captured still images to the BioStar system.

3. Setup the BioStar System

To add an IP camera to the BioStar system:

1. Click **Camera** in the shortcut pane.
2. Click **Setup Camera** in the Task pane (if desired).
3. In the Task pane, click **Add New Camera**. This will open a Camera (Setup Mode) pane similar to the one below.

Camera (Setup Mode)

Basic Information

Name:

Type:

Model:

IP Address:

Port:

User name:

Password:

Details | **Setup**

Device List


No	Devices	Attribute
1	21111[192.168.0.62]	BioStation T2

Event List

Timezone:

Event:

4. In the Basic Information section, enter a name, type, model, IP address, and port number for the IP camera and enter a user name and password for the BioStar to access the IP camera.
5. In the Details tab, click **Add** at the bottom right of the Device List section to open the **Device Tree** dialog box.

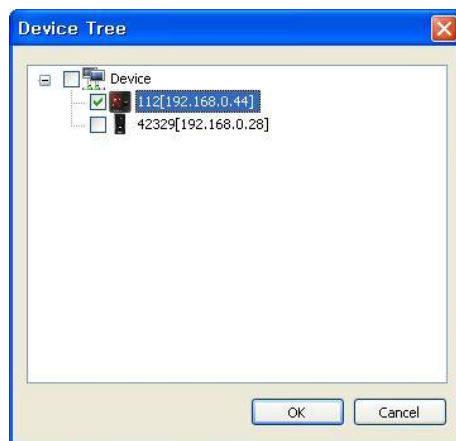

3. Setup the BioStar System

6. Select a device to associate the IP camera with and click **OK**.
7. Click **Add** at the bottom right of the Event List section and select an event that will trigger the IP camera to send a captured still image to the BioStar system.
8. Click **Apply** at the bottom right to apply the changes to the BioStar system.

3.11.3 Configure an IP Camera

BioStar can control the movement of pan-tilt-zoom (PTZ) cameras. When you use an IP camera that supports the PTZ feature, you can aim it at a spot you want to surveil.

To control the movement of a PTZ camera:

1. Click **Device** in the shortcut pane.
2. Click a PTZ camera in the navigation pane.
3. In the Camera (Setup Mode) pane, click the Setup tab.
4. Use the controls in the Pan & Tilt and the Zoom sections to aim the PTZ camera at the desired spot.




04

Manage the BioStar System

Once you have properly set up the BioStar system, management is fairly simple. BioStar allows you to monitor events in real-time and view event logs by date, control parts of the system remotely, manage users, and upgrade device firmware directly from the BioStar interface. In addition, you can activate fingerprint encryption, if necessary, to provide an additional level of security and privacy.



4.1 Monitor Events in Real Time

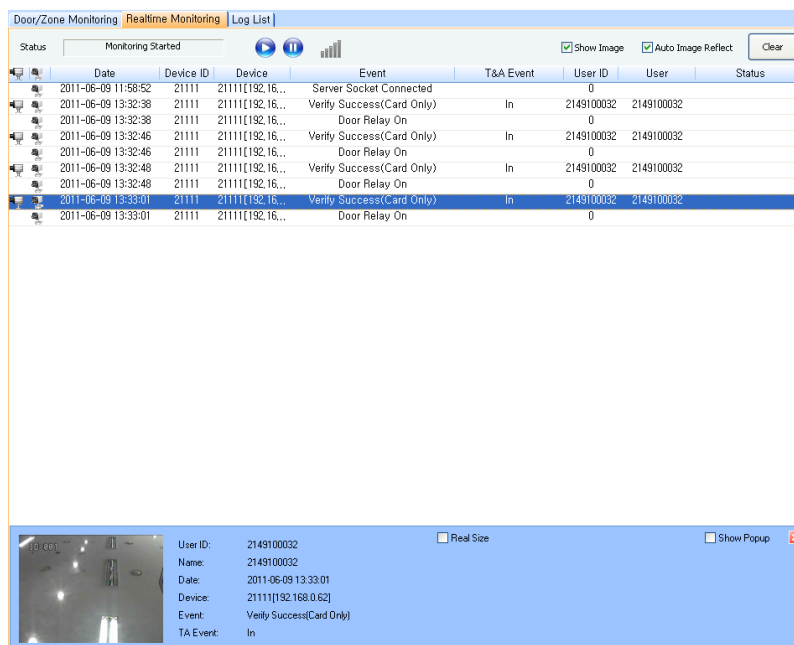The BioStar system records events from all connected devices. To monitor events in real time, please click **Monitoring** in the shortcut pane, then click the Realtime Monitoring tab.



4. Manage the BioStar System

- This tab shows all events that have occurred since you last logged into the system. The tab shows the current monitoring status (*Monitoring Started* or *Monitoring Paused*) and includes buttons for starting (play) or stopping (pause) real-time monitoring. The sound bar icon on the right shows whether an alarm sound is currently playing (green bars) or not (grey bars). To stop an alarm sound, click the sound bars icon.
- BioStar displays the following camera icons at the front of the event logs:

Icon	Description
	The event log includes a still image. Click the event log to view the image.
	The event log includes a video. Double-click the event log to view the video.

When both camera icons are displayed, single-click the icon to view the still image and double-click the icon to view the recorded video. When you double-click the video icon, a video playback window will appear that is similar to the one below.



Coupled with the face detection features of D-Station, X-Station, BioStation T2, or FaceStation, administrators can verify users' identity by clicking **Show Image** (to view the user's stored face image) and **Auto Image Reflect** (to view the most recent face image captured by the local device). Clicking **Show Image** also opens a window at the bottom where the user image will be displayed. Click **Real Size** to view the full-sized (640 x 480) stored image, instead of a thumbnail version and click **Show Popup** to open the image in a new window that can be repositioned on the screen.

4. Manage the BioStar System



To see a users' photos upon successful authentication events, click **Option > Event > Profile Image Setting** in the menu bar, select event types, and then click the checkbox next to Show Image Profile. The user's image will appear on the realtime monitoring tab when he or she successfully completes one of the authentication events specified in the **Profile Image Setting** dialog box.


As of BioStar V1.3, administrators can monitor users' locations and authentication status via a Roll Call (muster) feature. This feature allows administrators to determine whether users are present, missing, or have gained entry to areas for which they are not authorized.

4.1.1 Monitor Muster Zones in Real Time

BioStar allows you to monitor and track employees during an emergency and determine whether or not all employees have reported to the muster area.


To monitor and track employees:

1. Click **Monitoring** in the shortcut pane.
2. Click a muster zone in the Monitoring pane.
3. In the Task pane, click **Roll Call**. This will open the **Roll Call** dialog box.

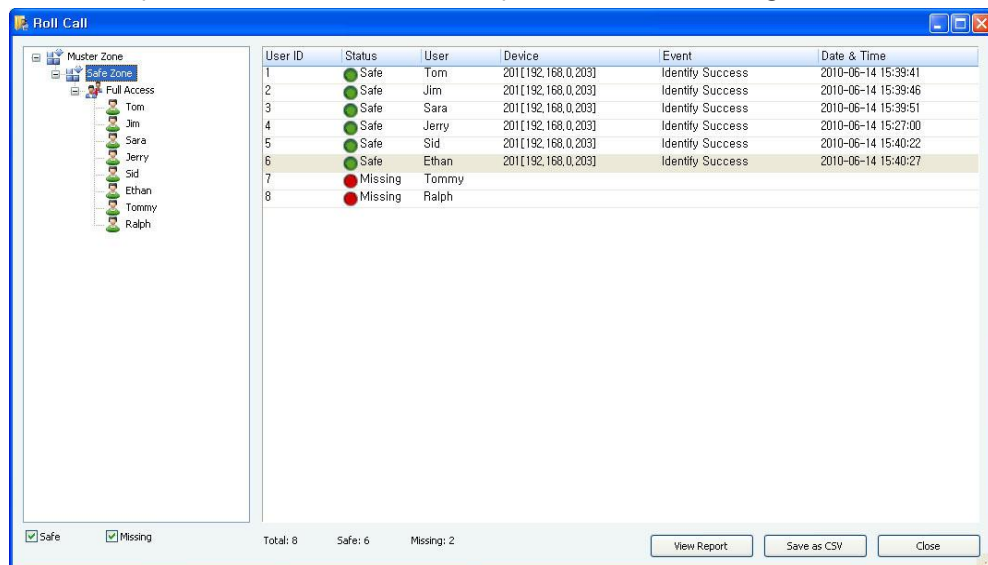

4. Manage the BioStar System

4. Click **View Report** to open the Roll Call Report.

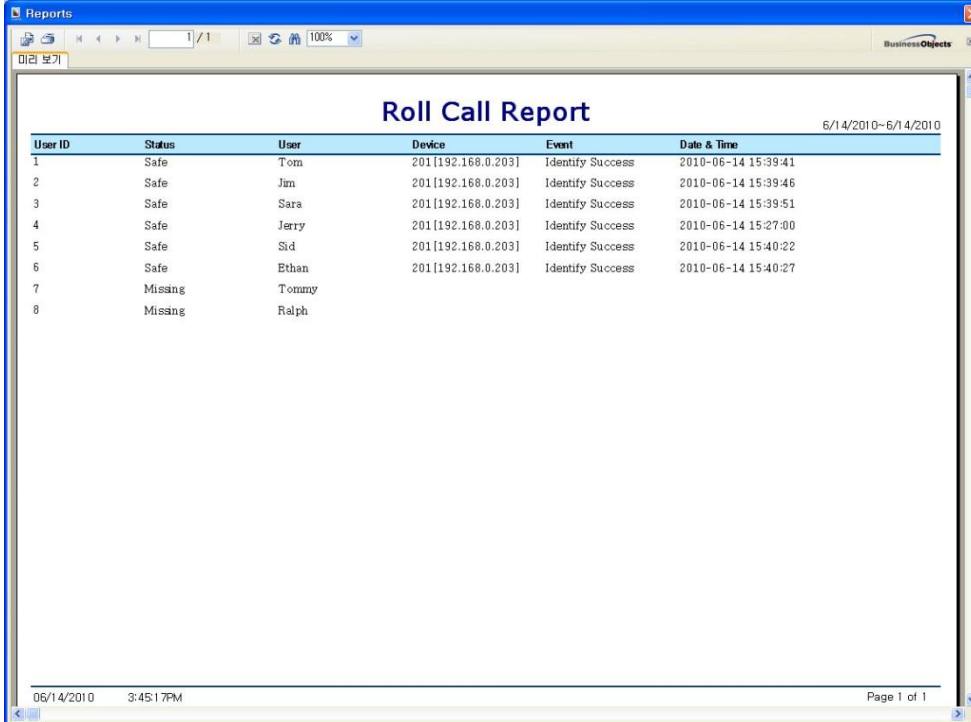

User ID	Status	User	Device	Event	Date & Time
1	Safe	Tom	201[192.168.0.203]	Identify Success	2010-06-14 15:39:41
2	Safe	Jan	201[192.168.0.203]	Identify Success	2010-06-14 15:39:46
3	Safe	Sara	201[192.168.0.203]	Identify Success	2010-06-14 15:39:51
4	Safe	Jerry	201[192.168.0.203]	Identify Success	2010-06-14 15:27:00
5	Safe	Sid	201[192.168.0.203]	Identify Success	2010-06-14 15:40:22
6	Safe	Ethan	201[192.168.0.203]	Identify Success	2010-06-14 15:40:27
7	Missing	Tommy			
8	Missing	Ralph			

To save the report data as a comma delimited file, click **Save as CSV**. To print the report, click the printer icon. To export the report, click the export icon.

4.1.2 Monitor Areas with Cameras in Real Time

BioStar allows you to monitor specified areas with the connected camera in real time.

To monitor specified areas in real time:

1. Click **Camera** in the shortcut pane.
2. Click **Monitor Camera** in the Task pane (if desired).
3. Click a camera in the navigation pane.

4.2 View Event Logs

BioStar allows you to view event logs for users, doors, and zones. You can access pre-defined logs from the Event tabs in user, door, and zone panes or view access logs from the Administrator menu. You can also use the Log List tab in the Monitoring pane to specify log parameters.

BioStar automatically collects log information from connected devices as long as the server is running. However, if you have devices that are not connected to the BioStar server, you must manually upload logs before viewing them.


4. Manage the BioStar System

4.2.1 Upload Logs to BioStar

For devices that are not connected to the BioStar server, you must manually upload logs before viewing them.

To upload logs to BioStar:

1. Click **Monitoring** in the shortcut pane.
2. Click the Log List tab in the Monitoring pane.
3. In the Task pane, click **Upload Log**. This will open the **Upload Log** dialog box.

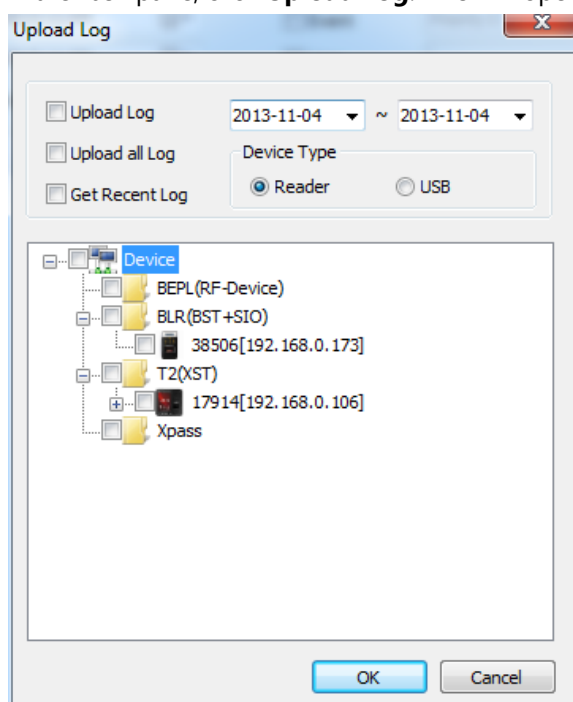


4. Select an upload option by clicking the corresponding box:
 - a. **Upload Log**: Use this option to upload logs for a specific time period. Specify the period with the drop-down calendars.
 - b. **Upload All Log**: Use this option to upload all logs.
 - c. **Get Recent Log**: Use this option to upload logs written since the previous upload.
 - d. **Device Type**: Specify a device type that you want to upload log data from, either a reader or USB.
5. Select the devices from which to upload logs by clicking the checkboxes next to the device numbers.
6. Click **OK**. BioStar will download log records from the selected devices and display the activities in the log list.
7. **Note**: Log upload is only supported for D-Station, X-Station, BioStation T2, and FaceStation.

4. Manage the BioStar System

4.2.2 View Logs in User, Door, and Zone Panes

To view pre-defined logs:

1. Click **User** or **Doors** in the shortcut pane.
2. In the navigation pane, click a user, door, or zone name.
3. In the User, Doors, or Zone panes, click the Event tab.
4. Set an event period (beginning and ending dates) with the drop-down calendars.
5. Click **Get Log**. This will generate a list of the relevant events for the period you specified.

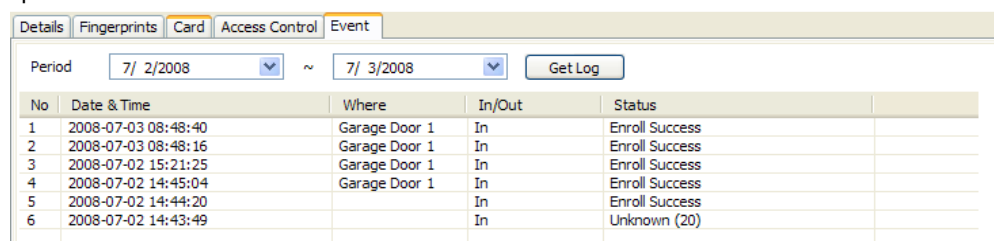

No	Date & Time	Where	In/Out	Status
1	2008-07-03 08:48:40	Garage Door 1	In	Enroll Success
2	2008-07-03 08:48:16	Garage Door 1	In	Enroll Success
3	2008-07-02 15:21:25	Garage Door 1	In	Enroll Success
4	2008-07-02 14:45:04	Garage Door 1	In	Enroll Success
5	2008-07-02 14:44:20		In	Enroll Success
6	2008-07-02 14:43:49		In	Unknown (20)

4.2.3 View Logs from the Monitoring Pane

To specify log filters or view logs for groups of users, doors, or zones:

1. Click **Monitoring** in the shortcut pane.
2. In the Monitoring pane, click the Log List tab.
3. Set an event period (beginning and ending dates) with the drop-down calendars.
4. Set the parameters to generate a log:
 - To show events by alarm priority, click the Event checkbox and select an event priority from the drop-down list. To add a new alarm priority, click the ellipsis button (...) to open the **Alarm Priority** dialog box.
 - To show events by user, click the User checkbox and then click the ellipsis button (...) to select a user or users from the **User Tree** or **Department Tree** dialog box. You can select all users by selecting the top level of the user tree.
 - To show events for a particular device, click the Device ID checkbox and then click the ellipsis button (...) to select a device from the **Device Tree** dialog box. To show only network events for a device, you can also click the Only Network History checkbox.
 - To show all events, leave all the checkboxes unchecked.
 - To show the user's image at the bottom of the tab, click **Show Image**. For more information about viewing user images, see section 4.1.

4. Manage the BioStar System

5. Click **Get Log** to display the events.

Date	Device...	Device	Event	T&A Event	User ID	User	Status
2011-07-01 10:11:52	112	112[192....	Verify Success(Card Only)		9		
2011-07-01 10:11:53	112	112[192....	Door Relay On		0		
2011-07-01 10:11:57	112	112[192....	Verify Success(Card Only)		9		
2011-07-01 10:11:58	112	112[192....	Door Relay On		0		
2011-07-01 10:12:03	112	112[192....	Verify Success(Card Only)		9		
2011-07-01 10:12:03	112	112[192....	Door Relay On		0		

4.2.4 View Access Logs

From the Administrator menu, you can view histories of system access and record modification by type of user.

To view access logs:

1. From the menu bar, click **Administrator > Access Log**. This will open the **Access Log** dialog box.

Date	Admin ID	IP	Function	User ID	Admin Level
There are no items to show.					

2. Click a radio button to select either administrators or users.
3. Set an event period (beginning and ending dates) with the drop-down calendars.
4. Select a type of access or modification event with the Access drop-down list.

4. Manage the BioStar System

5. If desired, specify a particular admin or user by clicking the checkbox next to the Admin ID, Admin IP, or User ID fields, and then entering the appropriate identification.
6. Click **Get Log**. This will generate a list of the relevant events for the period you specified.

Date	Admin ID	IP	Function	User ID	Admin Level
2010-09-30 16:46:00	1	192.168.1.106	logout	1	1
2010-09-30 16:50:12	1	192.168.1.106	login	1	1
2010-09-30 16:52:08	1	192.168.1.125	login	1	1
2010-09-30 16:52:24	1	192.168.1.125	logout	1	1
2010-09-30 16:53:25	1	192.168.1.106	logout	1	1
2010-09-30 17:19:34	1	192.168.1.106	login	1	1
2010-09-30 17:20:08	1	192.168.1.106	logout	1	1
2010-09-30 17:20:53	1	192.168.1.106	login	1	1
2010-09-30 17:22:45	1	192.168.1.106	logout	1	1
2010-09-30 17:22:59	65503	192.168.1.106	login	65503	4
2010-09-30 17:23:19	65503	192.168.1.106	logout	65503	4
2010-09-30 17:23:28	1	192.168.1.106	login	1	1
2010-09-30 17:24:59	1	192.168.1.106	logout	1	1
2010-09-30 17:30:52	1	192.168.1.125	login	1	1
2010-09-30 17:37:01	1	192.168.1.106	login	1	1
2010-09-30 17:51:28	1	192.168.1.106	logout	1	1
2010-09-30 17:51:38	1	192.168.1.106	login	1	1
2010-09-30 17:52:21	1	192.168.1.106	logout	1	1
2010-09-30 17:52:37	1	192.168.1.106	login	1	1
2010-09-30 17:53:23	1	192.168.1.106	logout	1	1
2010-09-30 17:53:29	1	192.168.1.106	login	1	1
2010-09-30 17:56:26	1	192.168.1.106	logout	1	1
2010-09-30 18:03:46	1	192.168.1.106	login	1	1
2010-09-30 19:26:52	1	192.168.1.106	logout	1	1

4.3 Monitor Door Events via a Visual Map

BioStar allows you to conveniently manage doors on a visual representation of your actual floor plan. On the Visual Map, you can customize your floor plan, add doors, and monitor door status and activity (for example, whether the door is open or closed, authentication events, and door alarms). If you have more than one floor plan, you can create additional Visual Maps for each floor. The Visual Map feature is available only in the Standard Edition.

4.3.1 Create a Visual Map


In the setup mode, you can add the floor plan of your building and place doors.

To add the floor plan and place doors on the plan:

1. In the shortcut pane, click **Visual Map**.
2. In the task pane, click **Setup Mode**. "Monitor Mode" will appear in the title bar of the **Visual Map** window.
3. In the task pane, click **Add Visual Map**. This will open a new Visual Map window on the right.
4. In the Visual Map window, type a name for the new Visual Map.

4. Manage the BioStar System

5. At the bottom of the **Visual Map** window, click **Set Background** to add a floor plan. The BioStar supports images larger than resolution 730x470 in jpg, bmp, gif, or png format only.
6. Choose an image and click **Open**.
7. Click **Add Door** to add doors. This will open a window with a list of doors.
8. From the door list, click the checkboxes next to doors to add and click **Apply**. Door icons will appear on the floor plan.

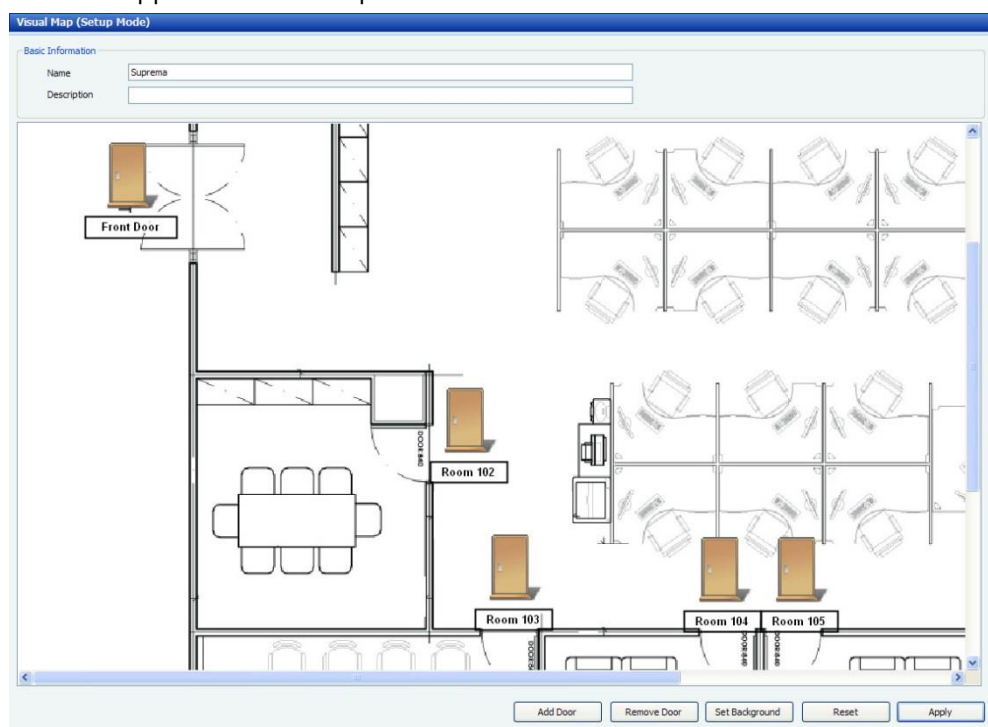

9. Click and drag the door icon to the desired location on the floor plan. You can individually relocate a door icon or name by double-clicking the door icon or name.
10. To remove a door from the floor plan, click the door and then click **Remove Door**.
11. Repeat steps 7-10 as necessary to add additional doors.
12. When you are finished adding doors, click **Apply**.

Note: To remove all doors from the plan and start over, click **Reset**.


4.3.2 Monitor Doors on a Visual Map

In the monitor mode, you can view the status and activities for each door on the visually enhanced map.

4. Manage the BioStar System

To monitor doors:

1. In the task pane, click **Monitor Visual Map**. "Monitor Mode" will appear in the title bar of the **Visual Map** window.

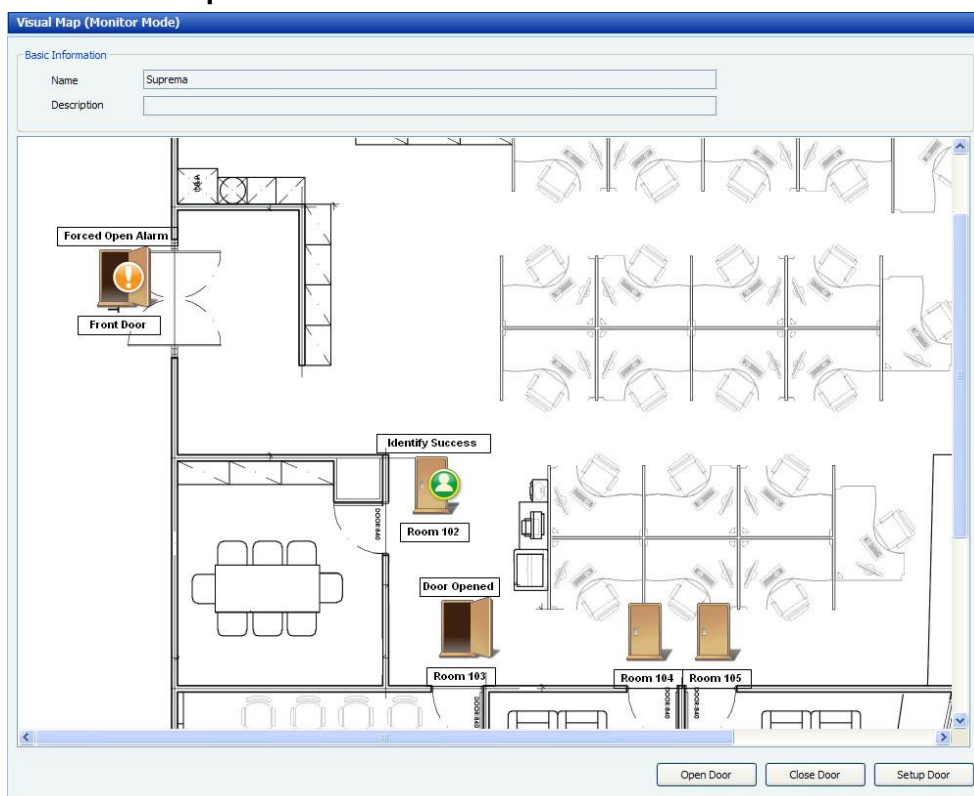

2. Monitor door status and activities on the visual map, as represented by the following icons. Door activities, such as successful authentication or alarms will appear on the door icons:

Icon	Activity
	Door is closed / Door alarm is clear
	Door is open
	Successful authentication while door is closed
	Successful authentication while door is open
	Failed authentication while door is closed
	Failed authentication while door is open
	Held or forced open door / Held or forced open door alarm


4. Manage the BioStar System

Note: Door icons will change only when door sensors have been assigned in the door settings and detect the door status. In other words, door icons change only when the door actually opens or closes and not when you click **Open Door** or **Close Door**. For more information about door settings, see section 5.2.1.

3. To open or close a door, click a door and then click **Open Door** or **Close Door**. To change settings for a door, click a door and then click **Setup Door**.
4. The current relay status can be checked through Visual Map in Monitoring.



5. Show Event Tooltip for Selected Door option is added to indicate the details of the current door status.

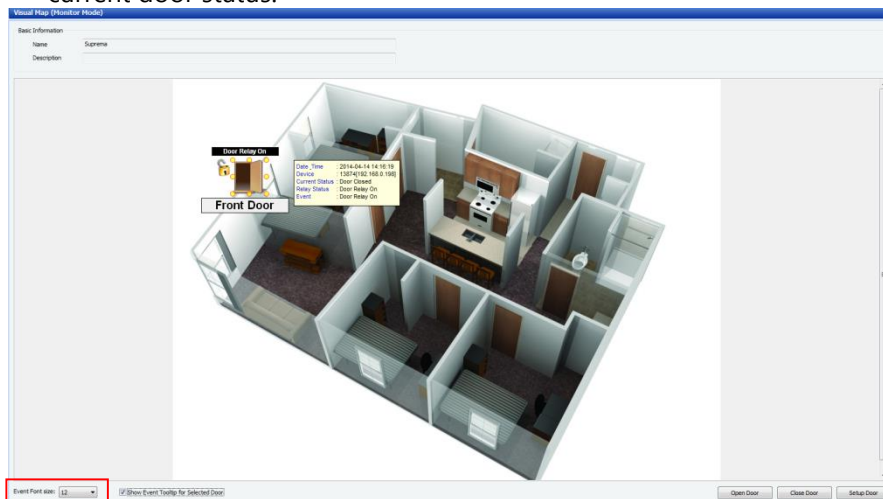

6. Event or door name font size can be enlarged or reduced by selecting font size in Setup Visual Map and Monitor Visual.

4. Manage the BioStar System

4.4 Control Doors, Alarms, and Devices Remotely

BioStar allows administrators or operators to control doors, alarms, and devices remotely. You can open or close doors via a computer connected to the BioStar system. You can also release (cancel) alarms remotely and lock or unlock devices.

4.4.1 Open or Close Doors

In some situations, an administrator or operator may need to open or close a door remotely.

To open or close doors:

1. Click **Monitoring** in the shortcut pane.
2. The Door/Zone Monitoring tab lists door names and their statuses. To change the status (open or closed) of a door, click the door name and then click either **Open Door** or **Close Door**.

You can also open and close doors while monitoring a Visual Map. For more information, see section 4.3.2.

4.4.2 Release Alarms

When an event triggers an alarm, administrators or operators can release the alarm remotely.

To release alarms:

1. Click **Monitoring** in the shortcut pane.
2. The Door/Zone Monitoring tab lists doors names and alarm events. To release (cancel) an alarm, click the door name and then click **Release Alarm**.

4.4.3 Lock or Unlock Devices

BioStar allows you to lock and unlock devices to prevent unauthorized access when BioStar is not running. This action blocks communication from devices. You can either lock devices manually from the BioStar interface or automatically when you exit the BioStar software. All connected devices can be simultaneously locked or unlocked, but you cannot lock or unlock devices that are connected directly to the BioStar server.


4.4.3.1 Lock or unlock connected devices

To lock all connected devices, from the menu bar, click **Option > Device > Lock All Devices**.

To unlock all connected devices:

4. Manage the BioStar System


1. From the menu bar, click **Option > Device > Unlock All Devices**.
2. If necessary, enter a password in the **Enter Locking Password** dialog box and click **OK** (if you have not created a locking password, simply click **OK**). See section 4.4.3.2 to create a locking password.

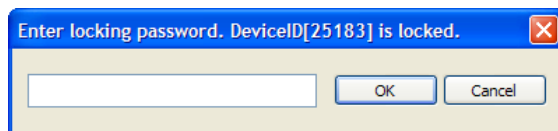

4.4.3.2 Set automatic device locking

To set automatic device locking:

1. From the menu bar, click **Option > Device > Automatic Locking**. This will open the **Auto Locking** dialog box.

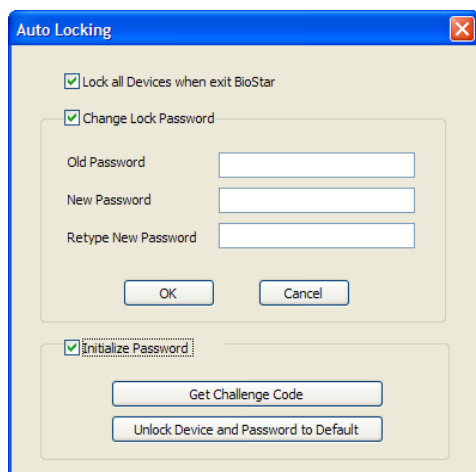

2. Click the first checkbox to lock all devices when exiting BioStar.
3. If desired, click the second checkbox to change the lock password:
 - a. Enter the old password
 - b. Enter the new password
 - c. Retype the new password to confirm.


4. Manage the BioStar System

4.4.3.3 Reset a device lock


If you have forgotten the locking password for a device, Suprema's technical support team can send you an unlock code.

To request the code:

1. From the menu bar, click **Option > Device > Automatic Locking**. This will open the **Auto Locking** dialog box.

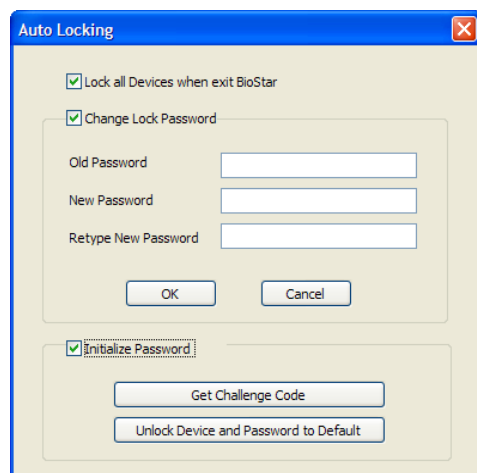


2. Click the Initialize Password checkbox to activate the buttons at the bottom of the screen.
3. Click **Get Challenge Code**. This will open the **Get Challenge Code** dialog box.

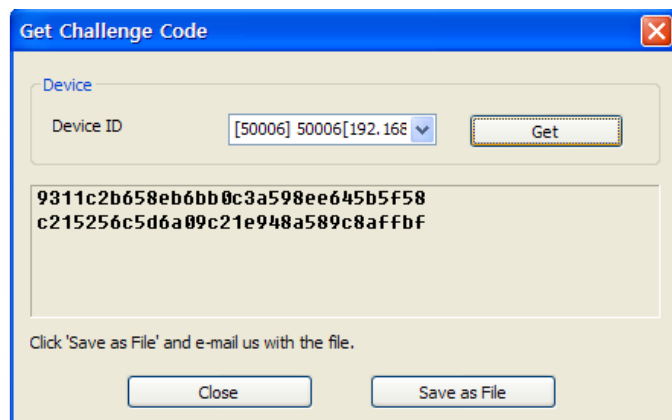

4. Select the appropriate device from the drop-down list and click **Get**.
5. Click **Save as File** to save the challenge code to your computer.
6. Email the challenge code to Suprema (support@supremainc.com). Suprema's technical support personnel will return an unlocking code to you via email.
7. When you receive the code from Suprema, open the **Auto Locking** dialog box and activate the buttons (see steps 1-2).

4. Manage the BioStar System

8. Click **Unlock Device and Password to Default**. This will open the **Write Challenge Code** dialog box.

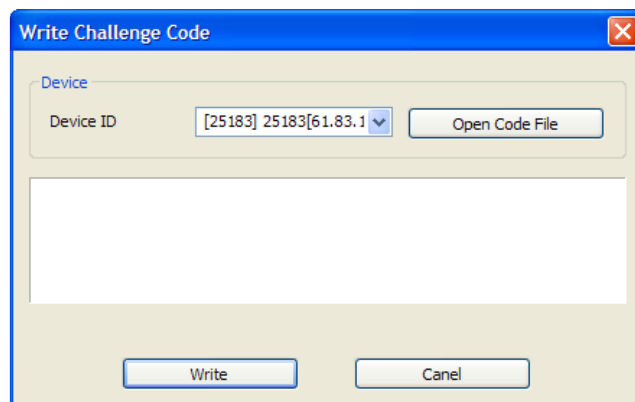

9. Click **Open Code File** and locate the file sent to you by Suprema.
10. When you have opened the file, click **Write**. This will unlock the device and reset the locking password to the default (no password).

4.5 Manage Users

With the BioStar system, you can delete users, transfer users to other departments, and customize user information fields. You can also export or import user data for creating custom reports, batch editing, or other needs.

4.5.1 Delete Users

If the occasion arises, you can easily remove users from the BioStar system.

To delete a user:

1. Click **User** in the shortcut pane.
2. Right-click a user's name.
3. Click *Delete User*.
4. Click **OK** to confirm the deletion.

4.5.1.1 Delete an individual user via command cards

After issuing command cards, you can delete an individual user directly from a BioEntry Plus, BioEntry W, Xpass, or Xpass Slim device. For more information about issuing command cards, please see section 3.2.6.1 and 3.2.8.1.

4. Manage the BioStar System

To delete users directly from a BioEntry Plus or BioEntry W device via command cards:

1. Place a delete card (command card) on a BioEntry Plus or BioEntry W device.
2. If authorization is required, an administrator must scan his or her fingerprints to continue.
3. Place the user's access card on the device and then have the user place his or her finger on the scanner (as prompted by the device).

To delete users directly from an Xpass or Xpass Slim device via command cards:

1. Place a delete card (command card) on an Xpass or Xpass Slim device.
2. If authorization is required, an administrator must place his or her access card on the device to continue.
3. Place the user's access card on the device.
4. Place the delete card on the device again to confirm the action.

4.5.1.2 Delete all users via command cards

After issuing command cards, you can delete all users directly from a BioEntry Plus, BioEntry W, Xpass, or Xpass Slim device. For more information about issuing command cards, see section 3.2.6.1 and 3.2.8.1.

To delete all users directly from a BioEntry Plus or BioEntry W device via command cards:

1. Place a delete all card (command card) on a BioEntry Plus or BioEntry W device.
2. If authorization is required, an administrator must scan his or her fingerprints to continue.
3. Place the delete all card on the device again to confirm the action.

To delete all users directly from an Xpass or Xpass Slim device via command cards:

1. Place a delete all card (command card) on an Xpass or Xpass Slim device.
2. If authorization is required, an administrator must place his or her access card on the device to continue.
3. Place the delete all card on the device again to confirm the action.

4. Manage the BioStar System

3. Select a field type from the second drop-down list. To restrict the field to numerical values, click the Only Digit checkbox.
4. Enter item data (for example, items to appear in a combo box) and a name for the item.
5. Click **Add**.
6. Repeat steps 2-5 as desired to create additional information fields.
7. When you are finished, click **Save**.

4.5.3.2 Modify existing information fields

To modify existing information fields:

1. From the menu bar, click **Option > User > Custom Field Setting**. This will open the **Custom Fields Management** dialog box (see section 4.5.3.1).
2. Click the item you want to modify in the list at the bottom. The data will appear in the fields at the top of the screen.

Note: Items 1-4 are required fields and cannot be modified or deleted.


3. Modify the data as desired.
4. Click **Modify**.
5. Repeat steps 2-4 as desired to modify additional information fields.
6. When you are finished, click **Save**.

4.5.4 Export User Data

Exported user data is formatted as a comma-delimited file (CSV), which can be edited with a text editor or Microsoft Excel.

To export user data:

1. Click **User** in the shortcut pane.
2. In the task pane, click **Export User**. This will open the **Exporting** dialog box.

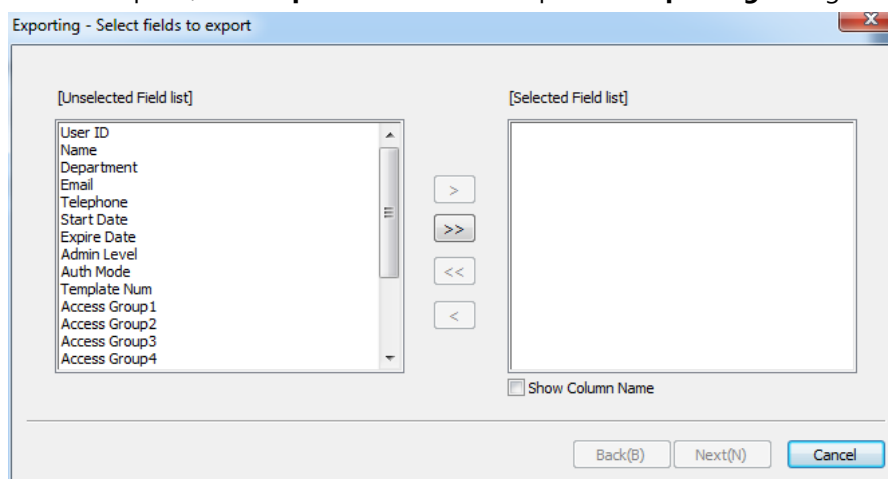

4. Manage the BioStar System


3. Select types of user data to export by clicking items in the list on the left and then clicking >.
4. Optional: Click **Show Column Name** below the selected filed list to include a field's column name with its data in an exported file.
5. After selecting all the types of user data to export, click **Next**.
6. Type a path and filename for the user data or click **Browse** to select a location to save the file.
7. Click **Next**.
8. Click **Export** to begin exporting the user data.
9. When the export is complete, click **Finish**.

4.5.5 Import User Data


User data in comma-delimited format (CSV) can be imported to BioStar.

To import user data:

1. Click **User** in the shortcut pane.
2. In the task pane, click **Import User**. This will open the **Importing** dialog box.

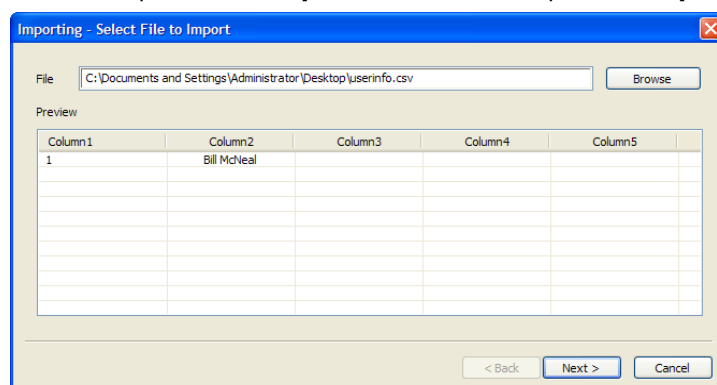

3. Type a path and filename where the user data is located or click **Browse** to select a file.
4. Click **Next**. The raw data types will be displayed and the User list field will default to "Not use. Click here to change."
5. Click the cell to the right of a data sample. This will open the **Setup Field** dialog box, which allows you to map the raw data to a user information field in BioStar.

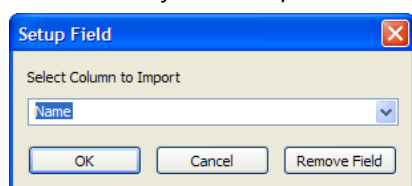

4. Manage the BioStar System

6. Map the data to a field by selecting a field label from the drop-down list and then click **OK**.

Note: Up to four department levels can be displayed in BioStar. In the CSV file, include department levels in the same cell, separated by slashes (for example, "Department 1/Department 2/Department 3"), and then map the cell to the "Department" field in BioStar.

7. Repeat steps 5-6 as necessary to map additional data.
8. Click "Next" after matching data value and field name correctly.
If the CSV column type exported from BioStar has not been changed, you can drop 5-7 steps by the auto select button which enables to connect the column and field automatically.
9. Click **Import**.
10. If you map data to fields in an existing user account, you will prompted to confirm that you wish to overwrite the existing data. Click **Yes** or **Yes to All** to confirm or click **No** or **No to All** to deny.
11. Click **Finish**.

4.6 Manage Time and Attendance

BioStar allows you to monitor the time and attendance status of users and generate reports of T&A events, which you can edit or export as needed.

4.6.1 Monitor T&A Status via the IO Board


The IO Board displays time and attendance events only for entrance and exit events performed via the T&A function keys of access control devices. This feature is available only in the Standard Edition of BioStar.

You can use the board to verify recent T&A activities or to quickly determine which users are checked in or out. Users can use the board to view their own T&A activities.

4. Manage the BioStar System

To monitor the time and attendance status of users:

1. Click **Time and Attendance** in the shortcut pane.
2. From the task pane, click *IO Board*. This will open the **IO Board** dialog box.

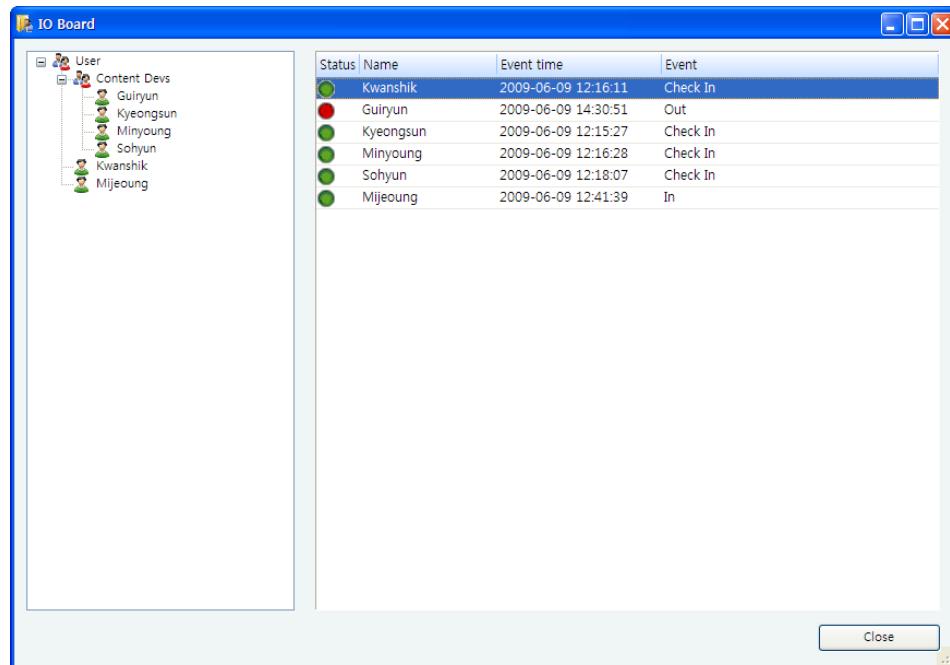

3. Click **User**, a user name, or a department name in the pane on the left. This will display the corresponding T&A status in the pane on the right.
4. To close the dialog box, click **Close**.

4.6.2 Generate T&A Reports

You can generate T&A reports to view various time and attendance events for users. You can also modify and print time and attendance data for other uses, such as calculating payrolls.

To generate a T&A report:

1. Click **Time and Attendance** in the shortcut pane.

4. Manage the BioStar System

2. In the task pane, click **Report**. This will open the **T&A Report** dialog box.

Date	ID	User Name	Department	Shift	Daily Sched...	First-In Ti...	Last-Out...	Result	First-In	Last-Out	BreakTime	WorkTime
2013-08-19	2013...	James Creek	BSS	Regular Shift	Weekdays	09:42	16:40	Late In/Ea...		0.00	6.95	
2013-08-30	2013...	Lily Nash	BSS	Regular Shift	Weekdays	08:10	11:26	Late In/Ea...		0.00	3.26	
2013-09-16	2013...	Helen Park	BSS	Regular Shift	Weekdays	08:31	09:44	Late In/Ea...		0.21	1.00	
2013-10-31	2012...	Chen Wei	BSS	Regular Shift	Weekdays	09:47	14:05	Late In/Ea...		0.05	4.25	

3. Click a radio button to select a report type:
- **Daily Report:** A report of all activities for the specified date range sorted by date.
 - **Individual Report:** A report of activities for the specified date range sorted by user ID.
 - **Result Report:** A report of activities that you specify via the drop-down list.
 - **Edit History:** A report of edited entries.
 - **Daily Summary:** A summary of activities for the specified date range sorted by date.
 - **Individual Summary:** A summary of activities for the specified date range sorted by user ID.

Note: In case a simple hh: mm format is desired in your Daily Report and Individual Report rather than the original hh: mm(person) or hh: mm(day) style, click **Option > TA > Format** then click **Display person/day**.

4. Specify the detail options in the **Option** area.
- **Display Person/Day:** Determine whether 'Person/Day' appears with data in the report.
 - **Time Format(1.0h):** Display times in decimal dotted notation, for example, '1 Hr 7 Mins' is expressed in '1.11'.
 - **In/Out Report:** Display the times (up to the first 10 in and out times) when people are authenticated to enter and exit an office or a building.
 - **Paper Size:** Select A4 or Letter size paper.

4. Manage the BioStar System

5. Select a date range by clicking the drop-down calendars.

6. Click **View Report** to retrieve and display the results.

Note: Click **Upload Log** to retrieve data from all networked devices. Click **Update Report** to refresh the report with any data you have modified (see section 4.5.3).

You can sort report data by clicking any column header (the sort will toggle between ascending and descending orders). You can also rearrange the columns by dragging and dropping column headers in a new location. Furthermore, you can add or remove columns by using the menu that appears when you right-click on any column header:

To add a column to the report:


1. Right-**click** on any column header.
2. Click **Column** and select a column to add to the report.

To remove a column from the report:

1. Right-click on the column you want to remove.
2. Click **Remove column**.

To display overtime hours in the report:

1. Click Option > T&A > Overtime Rule Setting. This will open the Overtime Rule Setting dialog box.

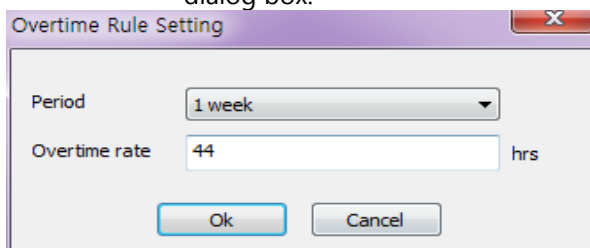

2. Select a period unit which regular work hours are based on, and enter the amount of regular work corresponding to the period. The work hours that have exceeded the regular time would be considered overtime work and reported.

3. Click **OK**.

Note: To successfully display overtime hours in a report, you should set the start day of the period to Sunday of the week that you want to check for.

4. Manage the BioStar System

4.6.3 Modify T&A Reports

Time and attendance data can be modified for time reporting or payroll purposes. After generating a T&A report, you can locate cells that you want to modify and then click the cell and enter a new value or select an option from the drop-down list. This will save the modification to the report, but it will not overwrite the original data collected from access control devices. If you want to reproduce the report with the original data, click the checkbox next to "Rebuild" and then click **Update Report**.

To perform detailed modifications on report data:

1. Generate a T&A report as described in 4.5.2.
2. Right-click a cell and click **Detailed editing**. This will open the **Edit Data** dialog box.

3. To edit an event, change the following event properties as necessary and then click **Edit Event**. To add an event, change the following event properties as necessary and then click **Add Event**. To delete the event, click **Delete Event**.
 - **Date:** Select whether the event occurred on this day or the next day.
 - **Event:** Select the type of event.
 - **Time:** Set the time of the event.
 - **Device:** Set the device where the event occurred.
4. When you are finished modifying the event data, click the "X" in the top right corner to close the dialog box.
5. In the T&A Report window, ensure that the "Rebuild" checkbox is NOT checked.

4. Manage the BioStar System

- Click **Update Report**. The report will show the changes you have made. The changes you have made via the detailed editing will not be restored to the original data even if you click the check box next to "Rebuild" and click **Update Report**. If you want to reproduce the report with the original data, click the checkboxes next to "Rebuild" and "Rebuild All" and then click **Update Report**.

Note: You can sort report data by clicking any column header (the sort will toggle between ascending and descending orders). You can also rearrange the columns by dragging and dropping column headers in a new location.

4.6.4 Print or Export T&A Report Data

To print or export T&A report data:

- Generate a T&A report as described in 4.5.2 and make any necessary modifications as described in 4.5.3.
- Click **View Report**. This will open a preview window similar to the one below.

ID	User Name	Department	Shift Name	Daily Sched	First-In Time	Last-Out Time	Result	First-In	Last-Out	All night(Sat)	Early duty(SS)	Swing Shift	WorkTime
1	Bill McNeal			00:00	00:00		Non Workin		00:00	00:00	00:00	00:00	
2	Kalvin JordDevs			00:00	00:00		Non Workin		00:00	00:00	00:00	00:00	
3	Danny MichDevs			00:00	00:00		Non Workin		00:00	00:00	00:00	00:00	
4	Holly JonesDevs			00:00	00:00		Non Workin		00:00	00:00	00:00	00:00	
5	Ignis South Devs			00:00	00:00		Non Workin		00:00	00:00	00:00	00:00	
6	Freya GoodDevs			00:00	00:00		Non Workin		00:00	00:00	00:00	00:00	

- To print the report, click the print icon on the toolbar.
- To export report data, click the export icon on the toolbar and then select an export format and a destination. You can export data in the following formats:
 - Adobe Acrobat (PDF)
 - Crystal Report (RPT)
 - HTML 3.2 or 4.0
 - Microsoft Excel 97-2000 or Microsoft Excel 97-2000–data only (XLS)
 - Microsoft Word or Microsoft Word–editable (RTF)
 - Open Database Connectivity (ODBC)
 - Record Style–Columns with spaces (REC)

4. Manage the BioStar System

- Report Definition (TXT)
- Rich Text Format (RTF)
- Comma Separated Values (CSV)
- Tab Separated Text (TTX)
- Text (TXT)
- XML

Note: You can refresh the report data by clicking the refresh icon on the toolbar. You can also search for text in the report by clicking the search (binoculars) icon on the toolbar.

4.7 Manage Devices

You can easily remove devices, if necessary, and upgrade the device firmware directly from the BioStar interface. When removing devices, first ensure that any new data that may have been added at the terminal has been transferred to the BioStar server.

4.7.1 Remove Devices


If you need to remove a device from the BioStar system, click **Device** in the shortcut pane, then right-click the device name and click *Remove Device*.

4.7.2 Upgrade Device Firmware

On occasion, it is necessary to upgrade your devices to the latest firmware version.

To upgrade device firmware:

1. From the menu bar, click **Option > Device > Firmware Upgrade**. This will open the **Firmware Upgrade** dialog box.

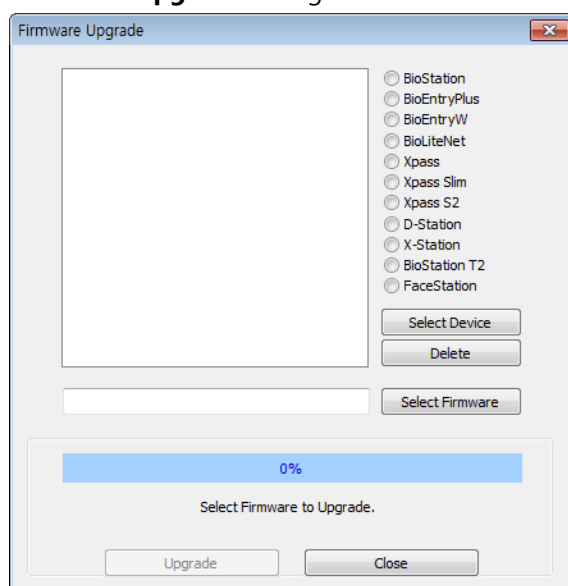

4. Manage the BioStar System

2. Click the radio button next to the type of device you want to upgrade.
3. Click **Select Device** and select a device or devices from the **Device Tree** dialog box.
4. Click **OK** to close the **Device Tree** dialog box.
5. Click **Select Firmware**.
6. Locate the firmware file on your computer or network and click **Open**.
7. Click **Upgrade**.
8. When the firmware upgrade is complete, wait for the device to restart, and then click **Close**.

4.7.3 Downgrade Device Firmware

Devices may not work properly if downgraded or reverted back to an older version of firmware. Suprema does not recommend a downgrade. If your devices require a downgrade, please contact Suprema Technical Support (Email: support@supremainc.com), your Suprema distributor, or a local Suprema dealer.


4.8 Activate Fingerprint Encryption

By default, additional fingerprint encryption is turned off. In most cases, activating this encryption is unnecessary. However, you may choose to turn on the encryption to provide extra security or privacy. Keep in mind that activating fingerprint encryption requires management of encryption keys and should be performed only by advanced users.

Activating fingerprint encryption will render all previously saved templates unusable. As a result, it is best to activate the encryption prior to registering users.

To activate fingerprint encryption:

1. From the menu bar, click **Option > Fingerprint**. This will open the **Fingerprint** dialog box.

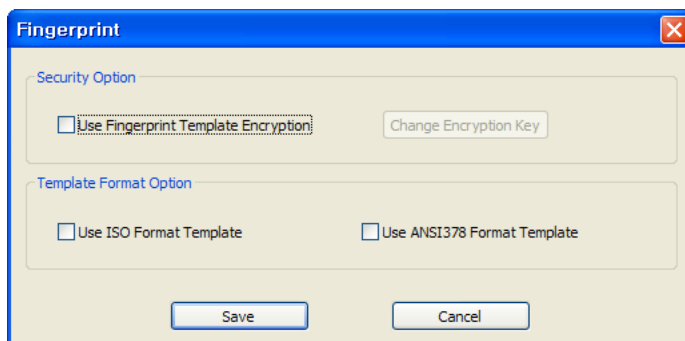

Customize Settings

This section describes the settings available in the BioStar software. BioStar provides precise control and customization of the access control system via settings for device functions, door and zone behaviors, and user accounts.

5.1 Customize Device Settings

While most device settings are similar for BioStation, BioEntry Plus, BioEntry W, BioLite Net, Xpass, Xpass Slim, D-Station, and X-Station devices, the devices provide slightly different capabilities. The sections that follow describe the settings for each device separately. To access the tabs described below, click **Device** in the shortcut pane, then click a device name.

5.1.1 Customize Settings for BioStation Devices

The sections that follow describe the settings available for BioStation devices. Customize the way BioStation devices function by changing these settings to suit your particular environment and operational needs.

5. Customize Settings

5.1.1.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for BioStation devices.

The screenshot shows the 'Operation Mode' tab in a software interface. At the top, there are several tabs: 'Operation Mode' (selected), 'Fingerprint', 'Network', 'Access Control', 'Input', 'Output', 'Black List', 'Display/Sound', 'T & A', and 'Wiegand'. The 'Operation Mode' section includes a 'BioStation Time' area with a 'Date' dropdown (2014-04-14), a 'Time' dropdown (오후 2:46:04), and buttons for 'Get Device Time' and 'Set Device Time'. Below this is a '1:1 Operation Mode' section with five dropdown menus for different authentication methods: 'ID/Card + Fingerprint' (No Time), 'ID/Card + Password' (No Time), 'ID/Card + Fingerprint/Password' (Always), 'Card Only' (No Time), and 'ID/Card + Fingerprint + Password' (No Time). To the right of these are several other settings: '1:N Schedule' (Always), '1:N Operation Mode' (Auto), 'Private Auth' (Disable), 'Double Mode' (No Time), 'Fast ID Matching' (Disable), and 'Interphone' (Not Use). Below the '1:1 Operation Mode' section is a 'Mifare' section with checkboxes for 'Not use Mifare' and 'Use Template on Card', and a 'View Mifare Layout' button. At the bottom is a 'Card ID Format' section with dropdowns for 'Format Type' (Normal), 'Byte Order' (MSB), and 'Bit Order' (MSB).

- **BioStation Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
 - **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **1:1 Operation Mode:** the drop-down lists in this area allow you to control the authentication mode by schedule. For example, you can choose a normal authentication mode for working hours and a more strict authentication mode for hours outside the normal schedule. You can specify authentication modes either by device or by user (see section 5.4.1). Unless a particular mode is specified for a user, the device authentication mode will apply.
 - **ID/Card + Fingerprint:** Set the device to require ID or card plus fingerprint authorization (*Always*, *Disable*, or custom schedule).
 - **ID/Card + Password:** Set the device to require ID or card plus password authorization (*Always*, *Disable*, or custom schedule).
 - **ID/Card + Fingerprint/Password:** Set the device to require ID or card plus fingerprint or password authorization (*Always*, *Disable*, or custom schedule).

5. Customize Settings

- **Card Only:** Set the device to require only card authorization (*Always*, *Disable*, or custom schedule).
 - **ID/Card + Fingerprint + Password:** Set the device to require ID or card plus fingerprint plus password authorization (*Always*, *Disable*, or custom schedule).
- **Mifare** (available only on BioStation Mifare devices)
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Template on Card:** Check this box to use the template on the MIFARE card for authorization.
 - **View Mifare Layout:** Click this button to view the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.
- **Card ID Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If “Normal” is selected, the card ID data will be processed in its original form. If “Wiegand” is selected, devices will interpret card ID data according to the Wiegand format settings.
 - **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
 - **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).
- **Other options**
 - **1: N Schedule:** Set a schedule for using fingerprint only authentication (*Always*, *Disable*, or custom schedule).
 - **1: N Operation Mode:** Set a method for activating the fingerprint sensor (*Auto*, *Ok/Function Key*, or *None*).
 - **Private Auth:** Set the device to allow a private authorization method (*Disable* or *Enable*). If enabled, the authentication mode of the user will be determined by a user’s “Authorization” setting, which is located on the Details tab. If disabled, the authentication mode will be determined by operation mode settings of the device.
 - **Double Mode:** Set the device to require authentication of two users’ access cards or fingerprints (*Always*, *Disable*, or custom schedule). The timeout for presenting the second authentication is 15 seconds.
 - **Fast ID Matching:** Set the device to allow quicker authentication, by requiring users to input only the first two digits of the user ID and scan a single fingerprint (*Enable* or *Disable*). This option attempts authentication for a smaller subset of users (only those with the same first two digits in their user IDs) to increase matching speed.

Note: This option does not support server matching (see 5.1.1.2). When using function keys for T&A events (see 5.1.1.8), only keys F1-F4 are supported (BioStation V1.7 and higher).

5. Customize Settings

- **Interphone:** Set the device to act as an interphone to allow communication between people on either side of the door (*Not Use or Use*).

In Double mode, setting option which includes an admin user is supported. In Double mode, door relay will not open unless an admin user authenticates within 15 seconds after a normal user authenticates. If this option is not activated, the door relay will open when other two users, regardless of whether being a normal user or an admin user.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

- Use Wiegand Card Bypass: By Wiegand setting in BioStar, this feature exports CSN regardless of whether the authentication is successful or not. This is designed to be used as a dummy reader that doesn't have a door control feature. When a card data input is made, the device sends out the data through Wiegand without going through a matching process.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

–

5.1.1.2 Fingerprint tab

The Fingerprint tab allows you to customize fingerprint authorization settings for BioStation devices.

The screenshot shows the 'Fingerprint' tab in the BioStar configuration interface. The tab bar at the top includes: Operation Mode, Fingerprint (selected), Network, Access Control, Input, Output, Black List, Display/Sound, T & A, and Wiegand. The main content area is titled 'Fingerprint' and contains several settings:

- ☐ Check Duplicate FP
- Security Level: Normal (dropdown)
- Image Quality: Normal (dropdown)
- Sensitivity: 3 (dropdown)
- 1:N Delay: 2 sec (dropdown)
- Server Matching: Disable (dropdown)
- 1:N Fast Mode: Auto (dropdown)
- View Image: Yes (dropdown)
- Scan Timeout: 10 sec (dropdown)
- Matching Timeout: 3 sec (dropdown)
- Check Fake Finger: Disable (dropdown)

Below these settings is a 'Template Option' section with two fields:

- Encryption: Disable
- ISO Format: Disable

- **Fingerprint**
 - **Security Level:** Set the security level to use for fingerprint authorization (*Normal, Secure, or Most Secure*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.
 - **Image Quality:** Set the strictness of the quality check for fingerprint scans (*Weak, Normal, or Strict*). If a fingerprint image is below the specified quality level, it will be rejected.

5. Customize Settings

- **Sensitivity:** Set the sensitivity of the fingerprint scanner (*0 [Min]* to *7 [Max]*). A higher sensitivity setting will result in more easily captured fingerprint scans, but also increases the sensitivity to external noise.
- **1: N Delay:** Set the delay between scans when identifying fingerprints (*0 sec* to *10 sec*). This delay prevents the scanner from processing the same fingerprint more than once if a user has not yet removed his or her finger from the scanner.
- **1: N Fast Mode:** Set the device to use Fast Mode to reduce the amount of time required for matching fingerprints (*Auto, Normal, Fast, or Fastest*). Setting Fast Mode to *Auto* will adjust the matching speed according to the number of enrolled templates.
- **View Image:** Set to show or hide fingerprint images on the BioStation display (*Yes* or *No*).
- **Scan Timeout:** Set the length of time before the fingerprint scanner will timeout (*1 sec* to *20 sec*). If a user does not place a finger on the device within the timeout period, the authorization will fail.
- **Matching Timeout:** Set the length of time before the device will timeout when trying to identify a fingerprint match (*0 [Infinite]* to *10 sec*).
- **Server Matching:** Enable this setting to perform fingerprint or card ID matching at the BioStar server, instead of the device. When this mode is enabled, the devices will send the fingerprint template or card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
- **Check Fake Finger:** Set the device to detect the use of fake fingerprints, such as those made from silicon or rubber, and prevent unauthorized access.
- **Check Duplicate FP:** Set the device to determine whether or not a scanned fingerprint has been previously enrolled. If the device determines that a fingerprint has been previously enrolled, the enrollment process will fail.

5.1.1.3 Network tab

The Network tab allows you to customize network and server settings for BioStation devices.

5. Customize Settings

Operation Mode | Fingerprint | **Network** | Access Control | Input | Output | Black List | Display/Sound | T & A | Wiegand

[TCP/IP Setting] Lan Type: Ethernet Port: 1470

WLAN: Preset #1 Change Setting

IP: ☐ Use DHCP ☒ Not Use DHCP

IP Address: 61 . 83 . 152 . 190 Gateway: 61 . 83 . 152 . 129

Subnet: 255 . 255 . 255 . 128 Max Conn.: 4

Server: ☐ Use ☒ Not use ☐ Time sync with Server

IP Address: Server Port: 1480 SSL: Disable

[Serial Setting]

RS485 Mode: Host Baudrate: 115200

RS232 Baudrate: 115200

USB Setting: ☐ Enable USB port ☒ Disable USB port

- **TCP/IP Setting**
 - **LAN Type:** Select a type of LAN connection from the drop-down list (*Disable, Ethernet, or Wireless LAN*).
 - **Port:** Specify a port to use for the device.
 - **WLAN:** Select a preset WLAN configuration from the drop-down list. This option is active only when WLAN is selected as the TCP/IP setting.
 - **Change setting:** Click to specify settings for a wireless local area network (WLAN). This option is active only when WLAN is selected as the TCP/IP setting. For more information about configuring settings for a WLAN, please see section 3.2.4.
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Max Conn.:** Specify the maximum number of connections to allow.
- **Server**
 - **Use:** Click this radio button to enable the server mode.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Server Port:** Specify the port used to connect to the server.
 - **SSL:** Displays the status of SSL for the server connection.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **RS485**

5. Customize Settings

- **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, Slave, or PC Connection*). For more information about RS485 modes, see sections 3.2.1 and 3.2.2.
- **Baudrate:** Set the baud rate for a device connected via RS485 (9600 to 115200).
- **RS232:** Set the baud rate for a device connected via RS232 (9600 to 115200).
- **USB Setting:** Click the radio buttons to enable or disable the USB port on the BioStation device.

5.1.1.4 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups for a BioStation device.


The screenshot shows the 'Access Control' tab selected in the software interface. It contains two main sections: 'Entrance Limit Setting' and 'Default Group Setting'. The 'Entrance Limit Setting' section has a 'Timed APB(min)' dropdown set to 0. Below it are four options, each with a checkbox, two time range input fields (e.g., 0000 ~ 0000), and a 'Max Number of Entrance' input field set to 0. The 'Default Group Setting' section has a 'Default Group' dropdown set to 'Full Access'.

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.

5.1.1.5 Input tab

The input tab lists input settings you have specified for a BioStation device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

5. Customize Settings

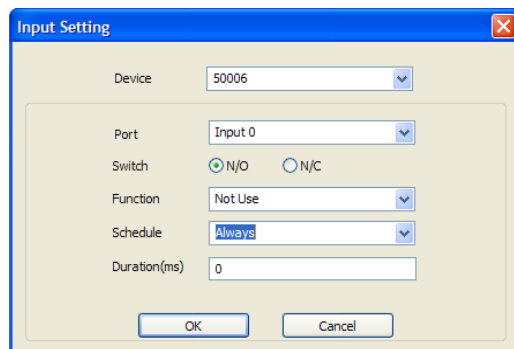


- **Device:** Select the BioStation (or Secure I/O) device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O: normally open* or *N/C: normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (For the events specified with “Detect Input 0-3” in the **Output Setting** dialog box, please see section 5.1.1.6).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a “Close Door” command via the Door/Zone Monitoring tab (see section 4.4.1).
 - **Release All Alarms:** Cancel alarms associated with this device.
 - **Restart Device:** Restart the device.
 - **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must enter the master password for a BioStation device or provide authentication locally for a BioEntry Plus or BioEntry W device.
- With BioStar 1.8v, LED Green Input, LED Red Input, Buzzer Input, Access Granted Input, and Access Denied Input were newly added. And these input options are available only with BioStation (FW 1.93v), BioStation T2 (FW 1.3v), FaceStation (FW 1.3v), BioEntry Plus (FW 1.6v), BioEntry W (FW 1.2v), BioLite Net (FW 1.4v), and Xpass (FW 1.3v).
- **Schedule:** Set the schedule during which the inputs will be monitored (*Always*, *Disable*, or custom schedule).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5. Customize Settings

5.1.1.6 Output tab

The Output tab lists output settings you have specified for a BioStation device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, please see section 3.10.3.1.

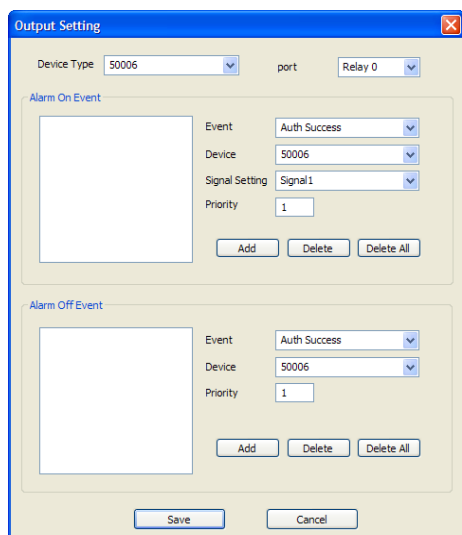

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** Select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.
- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.

5. Customize Settings

- **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
- **Device:** Select the device to monitor for an alarm event.
- **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, a priority 2 “alarm on” event (activate) can be overridden only by an “alarm off” (deactivate) event with a priority of 1 or 2.

5.1.1.7 Black List tab

The Black List tab allows you to register user IDs or access card numbers and prevent them from being authenticated with the device.

No	User ID/Card No.	Type
1	0	User ID

- **Current Count:** The total number of user IDs and access cards that have been registered.
- **Reserved:** The remaining number of user IDs and access cards that can be registered.

5. Customize Settings

5.1.1.8 Display/Sound tab

The Display/Sound tab allows you to customize the BioStation display and event sounds. To save changes to display or sound settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

- **Display/Sound**
 - **Language:** Set the language to use on the display (*Korean, English, or Custom*).
 - **Sub Info:** Set the info to display at the bottom of the BioStation display (*Time, or None*).
 - **Menu Timeout:** Set the length of time before the display will return to the idle screen (*Infinite, 10 sec, 20 sec, or 30 sec*).
 - **Private Msg:** Enable or disable the option to show a private message on the BioStation display (*Disable or Enable*). You can add a private message from the Event tab in the User pane: click **Modify Private Information**, set options for display count and display duration, enter text in the Private Message field, and then click **Save**.
 - **Resource:** Set the language resource file to use for the BioStar interface (*No Change, English, Korean, or Custom*). To use a language resource file other than English or Korean, select *Custom* and then click the ellipsis (...) button to locate the resource file.
 - **Background:** Set the type of background for the BioStation display (*Logo, Notice, or Slide Show*). Supported file types (JPG, GIF, BMP, and PNG) cannot exceed 320x240 pixels each. Only one image at a time can be used as a logo or notice, while up to 16 images can be displayed (at a set interval) in a slide show.
 - **Notice:** Click this button to create a notice that will be shown on the BioStation display. After creating a notice, you can click **Apply** to apply

5. Customize Settings

the notice to the current device or **Apply to Others** to apply the notice to additional devices.

- **Volume:** Set the volume of the BioStation device (10% to 100%).
- **Msg Timeout:** Set the length of time that a failure or confirmation message will be displayed.
- **Background Image:** Click this checkbox to upload new background images. Click the plus sign (+) to locate and add a new image file.
- **Sound:** Click this checkbox to enable and add custom event sounds. Click an event from the list and then click the plus sign (+) to locate and add a new sound file.

5.1.1.9 T&A tab

The T&A tab allows you to configure the mode and key settings for a BioStation device. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

TA Key	Caption	Schedule	Fixed or Not	Use Relay
F1	In	Morning	Not Use	Use
F2	Out	Afternoon	Not Use	Use
F3	Check In	Always	Use	Use
F4	Check Out	Disable	Not Use	Use

T & A Key

Function Key: F3 ☒ Fixed Event

Event Caption: Check In ☒ Use Relay

Auto Mode Schedule: Always

Event Type: Check-In

☐ Regard as normal check-in/check-out event ☐ Only Result

☐ Add work time after this event

Buttons: Add, Modify, Delete, Delete All

- **T&A Mode:** Set the time and attendance mode:
 - **Not Use:** Disable the time and attendance functions for this device.
 - **Manual:** Users must press the specified key every time they enter or leave to record their T&A events.
 - **Manual Fix:** When a T&A key is pressed, the device will remain in that mode until a different T&A key is pressed.
 - **Auto change:** The device will automatically change T&A modes to correspond with the functions specified for a time period.
 - **Event Fix:** The device will perform only the specified T&A function.
- **T&A Key:** Specify which keys to use for T&A events and the event types associated with them:

5. Customize Settings

- **Function Key:** Select a function key from the drop-down list to assign a T&A event (*F1-F4, 1-9, CALL, 0, or ESC*). If you are using the Event Fix mode, you can click the checkbox to the right to designate a fixed event.
- **Event Caption:** Enter a caption for the event.
- **Auto Mode Schedule:** When using the Auto Change mode, you can specify when the event will occur by selecting a timezone in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **Event Type:** Set the type of event to assign to the key (*Not Use, Check In, Check Out, In, or Out*). In/Out indicates the general check in/out events during a day whereas Check In/Out indicates the formal check in/out events upon arrival and departure at work—or the first check-in and the last check-out events on that day. When you choose Check In or Check Out, you can enable the “Regard as normal check-in/check-out event” option. If this option is enabled, users who activate the appropriate keys will be regarded as arriving or leaving on time at work even though they actually arrive late or leave early. If you enable the “Only Result” option, they appear being on time on T&A reports but their work time will be calculated correctly based on their actual check in/out time. If you choose *Out*, you can enable the “Add work time after this event” option. If this option is enabled, users activating the appropriate key will be considered working for the remainder of the time slot even if they leave the office early.

5.1.1.10 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for a BioStation device. Click **Change Format** to launch the Wiegand Configuration wizard. For more information on configuring the Wiegand format, see section 3.2.13.

Operation Mode | Fingerprint | Network | Access Control | Input | Output | Black List | Display/Sound | T & A | **Wiegand**

Wiegand Mode: **Extended**
Wiegand Input: **Disabled** Wiegand Output: **Disabled**

Wiegand Format

Format: **Custom Format** **Change Format**

EIII IIII IIII IIII IIII IIII IIII IIII
IO

Total Bits: **34**
ID Bits: **32**
Custom ID Bits: **0**

I : ID bit / C : Custom ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / X : Undefined

FC Code: **Disable** Pulse Width(us): **40** 20 ~ 100 (us)
Field Default Values: **Field 0** 0 Pulse Interval(us): **10000** 200 ~ 20000 (us)
Fail Code Value: **0000...** ☐ Use Fail Code

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy or Extended*). The Legacy mode will treat connected RF

5. Customize Settings

devices as part of their host devices (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.

- **Wiegand Input:** Assign the Wiegand input:
 - **Disabled:** The input will not be used.
 - **Wiegand [Card]:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand [User]:** The ID field of the Wiegand string is interpreted as a user ID.
- **Wiegand Output:** Assign the Wiegand output:
 - **Disabled:** The output will not be used.
 - **Wiegand [Card]:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand [User]:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.

5.1.2 Customize Settings for BioEntry Plus or BioEntry W Devices

The sections below describe the settings available for BioEntry Plus and BioEntry W devices. Customize the way BioEntry Plus or BioEntry W devices function by changing these settings to suit your particular environment and operational needs.

5.1.2.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for BioEntry Plus or BioEntry W devices.

- **BioEntry Plus Time/BioEntry W Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.

5. Customize Settings

In Double mode, setting option which includes an admin user is supported. In Double mode, door relay will not open unless an admin user authenticates within 15 seconds after a normal user authenticates. If this option is not activated, the door relay will open when other two users, regardless of whether being a normal user or an admin user.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

- **Use Wiegand Card Bypass:** This feature makes the device to send out Card CSN according to Wiegand setting of BioStar without having to conduct a matching. This is designed to be used as a dummy reader in a connection with a third party access control unit through Wiegand. When a card data input is made, the device sends out the data through Wiegand without going through a matching process.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3..)

- **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
- **Get Time:** Get the current time displayed by the device.
- **Set Time:** Set the time on the device.
- **Operation Mode:** For each of the following options, click the corresponding checkbox to enable Double Verification Mode, which requires verification of two users' credentials to gain entry to a door.
 - **All:** Set the device to allow all types of authorization (*Always, Disable, or custom schedule*).
 - **Card + Fingerprint:** Set the device to require card plus fingerprint authorization (*Always, Disable, or custom schedule*).
 - **Only Fingerprint:** Set the device to require only fingerprint authorization (*Always, Disable, or custom schedule*).
 - **Only CARD:** Set the device to require only card authorization (*Always, Disable, or custom schedule*).
 - **Private Auth:** Set the device to allow a private authorization method (*Disable or Enable*). If enabled, the authentication mode of the user will be determined by a user's authorization setting (Private Auth Mode), which is located on the Details tab in the User pane. If disabled, the authentication mode will be determined by the operation mode settings of the device.
 - **Double Verification Mode:** Set the device to require verification from two users during a selected schedule (*Always, Disable, or custom schedule*).

5. Customize Settings

- **Mifare/iCLASS (available on select models)**
 - **Bio Entry Plus Mifare devices:**
 - **Not use Card:** Check this box to disable MIFARE card authorization.
 - **Card Reading Mode:** Set the type of card authorization mode (*Mifare Template* or *Mifare CSN only*)
 - **View Mifare Layout:** Click this button to configure the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.
- **Bio Entry Plus iCLASS devices:**
 - **Not use Card:** Check this box to disable iCLASS or FeliCa card authorization.
 - **Card Reading Mode:** Set the type of card authorization mode (*iCLASS Template*, *iCLASS CSN only*, or *FeliCa CSN only*).
 - **View Card Layout:** Click this button to configure the iCLASS layout used by the device. For more information about configuring iCLASS layouts, please see section 3.6.4.7.

5. Customize Settings

- **Card ID Format**

- **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If “Normal” is selected, the card ID data will be processed in its original form. If “Wiegand” is selected, devices will interpret card ID data according to the Wiegand format settings.
- **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
- **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).

5.1.2.2 Fingerprint tab

The Fingerprint tab allows you to customize fingerprint authorization settings for BioEntry Plus or BioEntry W devices.

The screenshot shows the 'Fingerprint' tab selected in the software interface. The settings are as follows:

Setting	Value
Security Level	Normal
Scan Timeout	10 sec
Server Matching	Disable
1:N Fast Mode	Auto
Matching Timeout	3 sec
Check Fake Finger	Disable
Template Option	Suprema Template

- **Fingerprint**

- **Security Level:** Set the security level to use for fingerprint authorization (*Normal*, *Secure*, or *Most Secure*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.
- **Scan Timeout:** Set the length of time before the fingerprint scanner will timeout (1 sec to 20 sec). If a user does not place a finger on the device within the timeout period, the authorization will fail.
- **Server Matching:** Enable this setting to perform fingerprint or card ID matching at the BioStar server, instead of the device. When this mode is enabled, the devices will send the fingerprint template or card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
- **1: N Fast Mode:** Set the device to use Fast Mode to reduce the amount of time required for matching fingerprints (*Auto*, *Normal*, *Fast*, or *Fastest*). Setting Fast Mode to *Auto* will adjust the matching speed according to the number of enrolled templates.
- **Matching Timeout:** Set the length of time before the device will timeout when trying to identify a fingerprint match (0 [*Infinite*] to 10 sec).

5. Customize Settings

- **Check Fake Finger:** Set the device to detect the use of fake fingerprints, such as those made from silicon or rubber, and prevent unauthorized access.

5.1.2.3 Network tab

The Network tab allows you to customize network and server settings for BioEntry Plus or BioEntry W devices.

Operation Mode | Fingerprint | **Network** | Access Control | Input | Output | Black List | Command Card | Display/Sound | T & A | Wiegand

[TCP/IP Setting]

☐ Use DHCP ☒ Not use DHCP

IP Address: 192 . 168 . 0 . 133 Gateway: 192 . 168 . 1 . 1
Subnet: 255 . 255 . 254 . 0 port: 1471

Time Sync with Server ☐

Server: ☐ Use ☒ Not Use

IP Address: . . . Server Port: 1480

Support 100 Base-T: ☐ Use ☒ Not Use

[Serial Setting]

RS485 Mode: Slave Baudrate: 115200

- **TCP/IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Port:** Specify a port to use for the device.
- **Server**
 - **Use:** Click this radio button to use specific server settings.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **Support 100 Base-T:** This option allows you to enable or disable a fast Ethernet connection for the device. When enabled, the device will detect the Ethernet network and automatically establish the best connection. If you do not enable this option, the device will attempt to establish a 10Base-T Ethernet connection.

5. Customize Settings

- **Use:** Click this radio button to enable the 100base-T connection for the device.
 - **Not Use:** Click this radio button to disable the 100base-T connection for the device.
 - **RS485**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, Slave, or PC Connection*).
 - **Baudrate:** Set the baud rate for a device connected via RS485 (9600 to 115200).
 - Support MTU Size setting
 - Devices affiliated with Black Fin support MTU Size setting. The supported packet size is between 1078 and 1514, and the default is 1514.
- Note:** This feature is supported from the FW versions, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

5.1.2.4 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups, and T&A mode settings for a BioEntry Plus or BioEntry W device.

Operation Mode | Fingerprint | Network | **Access Control** | Input | Output | Black List | Command Card | Display/Sound | T & A | Wiegand

Entrance Limit Setting

Timed APB(min) 0

Option	Start Time	End Time	Max Number of Entrance
<input checked="" type="checkbox"/> Option 1	0000	~ 0000	0
<input type="checkbox"/> Option 2	0000	~ 0000	0
<input type="checkbox"/> Option 3	0000	~ 0000	0
<input type="checkbox"/> Option 4	0000	~ 0000	0

Default Access Group Setting

Default Group: Full Access


- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Access Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.
- Automatic T&A Mode Change

5. Customize Settings

- **T&A Mode:** Set the time and attendance mode for the device (*Disable, Fixed In, Fixed Out, and Auto*).
- **Fixed Entrance:** When the “Auto” T&A mode is selected, specify when to allow entrance events by selecting a timezone (*Always, Disable, or custom timezone*) in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **Fixed Exit Time:** When the “Auto” T&A mode is selected, specify when to allow exit events by selecting a timezone (*Always, Disable, or custom timezone*) in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **In Event Caption:** Set a caption for check-in.
- **Out Event Caption:** Set a caption for check-out.

5.1.2.5 Input tab

The input tab lists input settings you have specified for a BioEntry Plus or BioEntry W device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

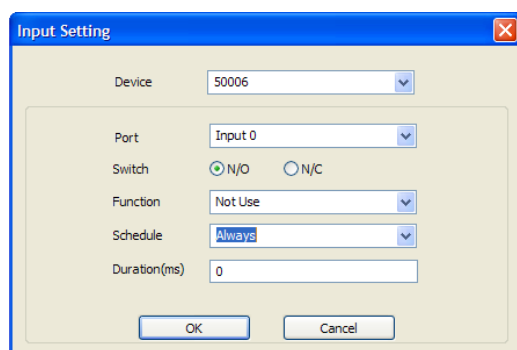

- **Device:** Select the BioEntry Plus or BioEntry W (or Secure I/O) device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0, Input 1, or Tamper*). For Secure I/O devices, these settings are available: *Input 0, Input 1, Input 2, Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O: normally open or N/C: normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (events specified with “Detect Input 1-3” in the **Output setting** dialog box —see section 5.1.2.6).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an


5. Customize Settings

operator sends a "Close Door" command via the Door/Zone Monitoring tab (see section 4.4.1).

- **Release All Alarms:** Cancel alarms associated with this device.
- **Restart Device:** Restart the device.
- **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must enter the master password for a BioStation device or provide authentication locally for a BioEntry Plus or BioEntry W device.
- With BioStar 1.8v, LED Green Input, LED Red Input, Buzzer Input, Access Granted Input, and Access Denied Input were newly added. And these input options are available only with BioStation (FW 1.93v), BioStation T2 (FW 1.3v), FaceStation (FW 1.3v), BioEntry Plus (FW 1.6v), BioEntry W (FW 1.2v), BioLite Net (FW 1.4v), and Xpass (FW 1.3v).
- **Schedule:** Set the schedule for the input actions (*Always*, *Disable*, or custom schedule).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5.1.2.6 Output tab

The Output tab lists output settings you have specified for a BioEntry Plus or BioEntry W device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

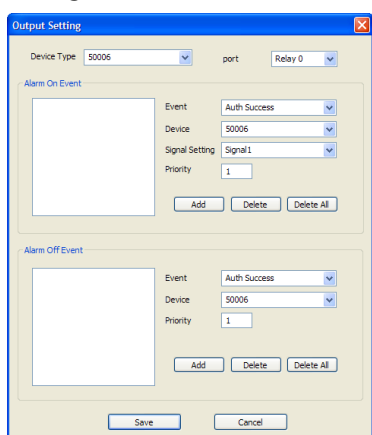

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** Select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.

5. Customize Settings

- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.
 - **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on event (activate) can be overridden only by an alarm off (deactivate) event with a priority of 1 or 2.

5.1.2.7 Black List tab

The Black List tab allows you to register user IDs or access card numbers and prevent them from being authenticated with the device.

Operation Mode Fingerprint Network Access Control Input Output Black List Command Card Display/Sound T & A Wiegand				
Total	0		Count	1000
No	User ID/Card No.	Type		

- **Current Count:** The total number of user IDs and access cards that have been registered.
- **Reserved:** The remaining number of user IDs and access cards that can be registered.

5. Customize Settings

5.1.2.8 Command Card tab

The Command Card tab allows you to issue command cards. For more information about command cards, see section 3.2.6.1.

The screenshot shows the 'Command Card' tab selected in the top navigation bar. The main area contains a table with columns 'Card ID' and 'Command'. To the right of the table are 'Delete' and 'Delete All' buttons. Below the table, there is a form with 'Card ID' (0) and 'Command Type' (Enroll Card) dropdown. There is also a checkbox for 'Need Authentication by Administrator'. To the right of the form are 'Read Card' and 'Add' buttons.

- **Card ID:** Enter the card ID or click **Read Card** and place a command card on the reader to automatically populate the fields.
- **Command Type:** Select a type of command card to issue (*Enroll Card, Delete Card, or Delete All Card*).

5.1.2.9 Display/Sound tab

The Display/Sound tab allows you to customize the LED and buzzer behaviors by event. To save changes to these settings, you must click **Update** in the corresponding section for each event.

The screenshot shows the 'Display/Sound' tab selected in the top navigation bar. The main area is titled 'Output Signal' and contains two sections: 'LED' and 'Buzzer'. Each section has a 'Count' input field and a table of settings for different events. The 'LED' section has a 'Count' of 0 and settings for BLUE, CYAN, and None. The 'Buzzer' section has a 'Count' of -1 and settings for None. Each section has an 'Update' button.

- **Event:** Specify the affected event by selecting it from the drop-down list.
- **LED:** Set the LED behavior for a specified event.
 - **Count:** Enter a number of LED cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the LED.

5. Customize Settings

- **Colors:** Specify up to three display colors from the drop-down list. The LED will cycle through these colors in order, from top to bottom. Next to each color, enter the duration (in milliseconds) that the LED should display the selected color and the duration (in milliseconds) that the LED should remain off before advancing to the next color in the cycle.
- **Buzzer:** Set the buzzer behavior for a specified event.
 - **Count:** Enter a number of buzzer cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the buzzer.
 - **Volume:** Set up to three tone volumes from the drop-down list (*Low*, *Middle*, or *High*). The buzzer will cycle through these volumes in order, from top to bottom. Next to each volume, enter the duration (in milliseconds) that the buzzer should maintain the selected volume and the duration (in milliseconds) that the buzzer should remain off before advancing to the next volume in the cycle.
 - **Fade Out:** Set the tone volume to fade out before advancing to the next volume in the cycle by clicking this checkbox.

5.1.2.10 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for a BioEntry Plus or BioEntry W device. Click **Change Format** to launch the Wiegand Configuration wizard. To activate the Wiegand feature for a BioEntry Plus or BioEntry W device, click the checkbox at the top right of the tab. For more information on configuring the Wiegand format, see section 3.2.13.

The screenshot shows the 'Wiegand' tab selected in a configuration window. At the top, there are tabs for 'Operation Mode', 'Fingerprint', 'Network', 'Access Control', 'Input', 'Output', 'Black List', 'Command Card', 'Display/Sound', and 'Wiegand'. Below the tabs, the 'Wiegand Mode' is set to 'Extended', 'Wiegand Input' is 'Disabled', and 'Wiegand Output' is 'Disabled'. The 'Wiegand Format' section contains a 'Format' dropdown set to '26 bit Standard' with a 'Change Format' button next to it. Below this, a visual representation of the bit stream is shown: 'EAAA AAAA AIII IIII IIII IIII IO'. To the right of this, 'Total Bits' is 26 and 'ID Bits' is 16. A legend below states: 'I : ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / A,B,... : Fields'. At the bottom, there are fields for 'FC Code' (set to 'Disable'), 'Default Field Data' (a dropdown), 'Pulse Width(us)', and 'Pulse space(us)'.

5. Customize Settings

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will treat connected RF devices as part of their host devices (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.
- **Wiegand Input:** Assign the Wiegand input:
 - **Disabled:** The input will not be used.
 - **Wiegand [Card]:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand [User]:** The ID field of the Wiegand string is interpreted as a user ID.
- **Wiegand Output:** Assign the Wiegand output:
 - **Disabled:** The output will not be used.
 - **Wiegand [Card]:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand [User]:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.

5.1.3 Customize Settings for BioLite Net Devices

The sections that follow describe the settings available for BioLite Net devices. Customize the way BioLite Net devices function by changing these settings to suit your particular environment and operational needs.

5.1.3.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for BioLite Net devices.

- **BioLiteNet Time**
 - **Date:** Manually set the device date with a drop-down calendar.

5. Customize Settings

- **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
 - **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **Sensor Mode**
 - **Always On:** Set the device sensor to be always available on standby (*Always* or *Disable*).
 - **ID Entered:** Set the device sensor to be available on standby only after a valid ID is entered (*Always* or *Disable*).
 - **OK Pressed:** Set the device sensor to be available on standby only after the OK key is pressed (*Always* or *Disable*).
- **Operation Mode:** For each of the following options, click the corresponding checkbox to enable Double Verification Mode, which requires verification of two users' credentials to gain entry to a door.
 - **Fingerprint Only:** Set the device to require fingerprint only authorization (*Always*, *Disable*, or *Custom Schedule*).
 - **Password Only:** Set the device to require password only authorization (*Always*, *Disable*, or *Custom Schedule*).
 - **Fingerprint/Password:** Set the device to require fingerprint or password authorization (*Always*, *Disable*, or *Custom Schedule*).
 - **Fingerprint+Password:** Set the device to require fingerprint plus password authorization (*Always*, *Disable*, or *Custom Schedule*).
 - **Card Only:** Set the device to require only card authorization (*Always*, *Disable*, or *Custom Schedule*).
 - **Private Auth:** Set the device to allow a private authorization method (*Disable* or *Enable*). If enabled, the authentication mode of the user will be determined by a user's "Authorization" setting, which is located on the Details tab. If disabled, the authentication mode will be determined by operation mode settings of the device.
- **Mifare**
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Template on Card:** Check this box to use the template on the MIFARE card for authorization.
 - **View Mifare Layout:** Click this button to configure the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.
- **Card ID Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If "Normal" is selected, the card ID data will be

5. Customize Settings

processed in its original form. If "Wiegand" is selected, devices will interpret card ID data according to the Wiegand format settings.

- **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
- **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).
- In Double mode, setting option which includes an admin user is supported. In Double mode, door relay will not open unless an admin user authenticates within 15 seconds after a normal user authenticates. If this option is not activated, the door relay will open when other two users, regardless of whether being a normal user or an admin user.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3..

- Use Wiegand Card Bypass: This feature makes the device to send out Card CSN according to Wiegand setting of BioStar without having to conduct a matching. This is designed to be used as a dummy reader in a connection with a third party access control unit through Wiegand. When a card data input is made, the device sends out the data through Wiegand without going through a matching process.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

5.1.3.2 Fingerprint tab

The Fingerprint tab allows you to customize fingerprint authorization settings for BioLite Net devices.

The screenshot shows the 'Fingerprint' tab selected in the configuration software. The settings are as follows:

Setting	Value
Security Level	Normal
Scan Timeout	10 sec
Server Matching	Disable
1:N Fast Mode	Auto
Matching Timeout	3 sec
Check Fake Finger	Disable
Template Option	ISO Format
ISO Format	Disable

- **Fingerprint**
 - **Security Level:** Set the security level to use for fingerprint authorization (*Normal*, *Secure*, or *Most Secure*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.

5. Customize Settings

- **Scan Timeout:** Set the length of time before the fingerprint scanner will timeout (*1 sec to 20 sec*). If a user does not place a finger on the device within the timeout period, the authorization will fail.
- **Server Matching:** Enable this setting to perform fingerprint or card ID matching at the BioStar server, instead of the device. When this mode is enabled, the devices will send the fingerprint template or card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
- **1: N Fast Mode:** Set the device to use Fast Mode to reduce the amount of time required for matching fingerprints (*Auto, Normal, Fast, or Fastest*). Setting Fast Mode to *Auto* will adjust the matching speed according to the number of enrolled templates.
- **Matching Timeout:** Set the length of time before the device will timeout when trying to identify a fingerprint match (*0 [Infinite] to 10 sec*).
- **Check Fake Finger:** Set the device to detect the use of fake fingerprints, such as those made from silicon or rubber, and prevent unauthorized access.

5. Customize Settings

5.1.3.3 Network tab

The Network tab allows you to customize network and server settings for BioLite Net devices.

[TCP/IP Setting]

IP ☐ Use DHCP ☒ Not use DHCP

IP Address 192 . 168 . 0 . 85 Gateway 192 . 168 . 1 . 1

Subnet 255 . 255 . 254 . 0 port 1471

Server ☐ Use ☒ Not Use ☐ Time Sync with Server

IP Address Server Port 1480

Support 100 Base-T ☐ Use ☒ Not Use

MTU Packet Size 1514

[Serial Setting]

RS485 Mode Slave Baudrate 115200

- Support MTU Size setting
 - Devices affiliated with Black Fin support MTU Size setting. The supported packet size is between 1078 and 1514, and the default is 1514. (This feature is supported from the FW versions, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.)
- **TCP/IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Port:** Specify a port to use for the device.
- **Server**
 - **Use:** Click this radio button to use specific server settings.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **Support 100 Base-T:** This option allows you to enable or disable a fast Ethernet connection for the device. When enabled, the device will detect the Ethernet network and automatically establish the best connection. If

5. Customize Settings

you do not enable this option, the device will attempt to establish a 10Base-T Ethernet connection.

- **Use:** Click this radio button to enable the 100base-T connection for the device.
- **Not Use:** Click this radio button to disable the 100base-T connection for the device.

5. Customize Settings

- **RS485**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, Slave, or PC Connection*).
 - **Baudrate:** Set the baud rate for a device connected via RS485 (9600 to 115200).

5.1.3.4 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups for a BioLite Net device.

Operation Mode | Fingerprint | Network | **Access Control** | Input | Output | Black List | Display/Sound | T & A | Wiegand

Entrance Limit Setting

Timed APB(min) 0

Option	Start Time	End Time	Max Number of Entrance
<input type="checkbox"/> Option 1	0000	~ 0000	0
<input type="checkbox"/> Option 2	0000	~ 0000	0
<input type="checkbox"/> Option 3	0000	~ 0000	0
<input type="checkbox"/> Option 4	0000	~ 0000	0

Default Access Group Setting


Default Group Full Access

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Access Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.

5. Customize Settings

5.1.3.5 Input tab

The input tab lists input settings you have specified for a BioLite Net device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

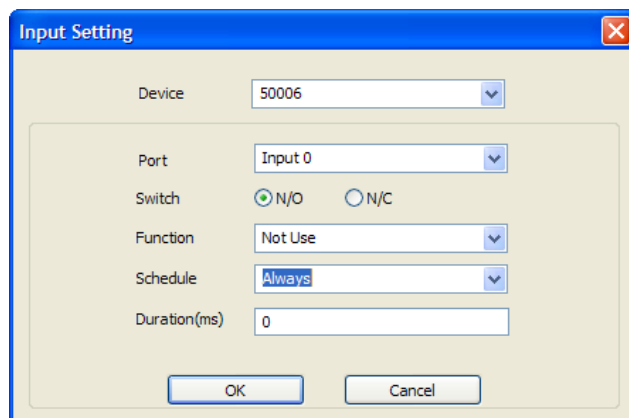

- **Device:** Select the BioLite Net (or Secure I/O) device for which you will add or modify settings.
 - **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
 - **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O*: normally open or *N/C*: normally closed).
 - **Function:** Select an action to associate with the input:
 - *Not Use*: The input port will not be monitored.
 - *Generic Input*: The input port will be monitored for a triggering action (For the events specified with "Detect Input 1-3" in the **Output setting** dialog box, please see section 5.1.3.6).
 - *Emergency Open*: Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a "Close Door" command via the Door/Zone Monitoring tab (see section 4.4.1).
 - *Release All Alarms*: Cancel alarms associated with this device.
 - *Restart Device*: Restart the device.
 - *Disable Device*: Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must enter the master password for a BioStation device or provide authentication locally for a BioLite Net device.
- With BioStar 1.8v, LED Green Input, LED Red Input, Buzzer Input, Access Granted Input, and Access Denied Input were newly added. And these input options are available only with BioStation (FW 1.93v),

5. Customize Settings

BioStation T2 (FW 1.3v), FaceStation (FW 1.3v), BioEntry Plus (FW 1.6v), BioEntry W (FW 1.2v), BioLite Net (FW 1.4v), and Xpass (FW 1.3v).

- **Schedule:** Set the schedule for the input actions (*Always*, *Disable*, or custom schedule).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5.1.3.6 Output tab

The Output tab lists output settings you have specified for a BioLite Net device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** Select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.
- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success*, *Auth Fail*, *Auth Duress*, *Anti-passback Fail*, *Access Not Granted*, *Entrance Limited*, *Admin Auth Success*, *Tamper On*, *Door Opened*, *Door Close*, *Forced Open Door*, *Held Open Door*, or *Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.

5. Customize Settings

5.1.3.8 Display/Sound tab

The Display/Sound tab allows you to customize LED and buzzer behaviors by event. To save changes to these settings, you must click **Update** in the corresponding section for each event. You can also customize the language used on the device display.

The screenshot shows the 'Display/Sound' tab selected in a settings application. The interface includes a top navigation bar with tabs: Operation Mode, Fingerprint, Network, Access Control, Input, Output, Black List, Display/Sound (active), T & A, and Wiegand. The main content area is titled 'Output Signal' and contains two sections: 'LED' and 'Buzzer'. The 'LED' section has a dropdown for 'Event' set to 'STATUS_NORMAL'. Below it, there are three rows for LED colors: BLUE, CYAN, and None. Each row has a 'Count' field (set to 0), a duration field (set to 2000 msec), and an 'Off' duration field (set to 0 msec). The 'Buzzer' section has a 'Count' field set to -1. Below it, there are three rows for buzzer volumes: None, None, and None. Each row has a duration field (set to 0 msec), an 'Off' duration field (set to 0 msec), and a 'Fade Out' checkbox (checked). At the bottom, there is a 'Language' dropdown set to 'English' and a 'Resource File' field. 'Update' buttons are present at the end of each section.

- **Event:** Specify the affected event by selecting it from the drop-down list.
- **LED:** Set the LED behavior for a specified event.
 - **Count:** Enter a number of LED cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the LED.
 - **Colors:** Specify up to three display colors from the drop-down list. The LED will cycle through these colors in order, from top to bottom. Next to each color, enter the duration (in milliseconds) that the LED should display the selected color and the duration (in milliseconds) that the LED should remain off before advancing to the next color in the cycle.
- **Buzzer:** Set the buzzer behavior for a specified event.
 - **Count:** Enter a number of buzzer cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the buzzer.
 - **Volume:** Set up to three tone volumes from the drop-down list (*Low, Middle, or High*). The buzzer will cycle through these volumes in order, from top to bottom. Next to each volume, enter the duration (in milliseconds) that the buzzer should maintain the selected volume and the duration (in milliseconds) that the buzzer should remain off before advancing to the next volume in the cycle.
 - **Fade Out:** Set the tone volume to fade out before advancing to the next volume in the cycle by clicking this checkbox.
- **Language:** Set the language to use on the display (*Korean, English, or Custom*).

5. Customize Settings

- **Resource File:** Set the language resource file to use for the BioStar interface by clicking the ellipsis (...) button and locating the resource file.

5.1.3.9 T&A tab

The T&A tab allows you to configure the mode and key settings for a BioLite Net device. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

TA Key	Caption	Schedule	Fixed or Not	Use Relay
< x 1	In	Morning	Use	Use
> x 1	Out	Afternoon	Not Use	Use
> x 2	Duty In	Always	Not Use	Use
> x 3	Duty Ou	Disable	Not Use	Use

T & A Key

Function Key: > x 3 ☐ Fixed Event

Event Caption: Duty Ou ☒ Use Relay

Auto Mode Schedule: Disable

Event Type: Not Use

☐ Regard as normal check-in/check-out event ☐ Only Result

☐ Add work time after this event

Buttons: Add, Modify, Delete, Delete All

- **T&A Mode:** Set the time and attendance mode:
 - **Not Use:** Disable the time and attendance functions for this device.
 - **Manual:** Users must press the specified key every time they enter or leave to record their T&A events.
 - **Manual Fix:** When a T&A key is pressed, the device will remain in that mode until a different T&A key is pressed.
 - **Auto change:** The device will automatically change T&A modes to correspond with the functions specified for a time period.
 - **Event Fix:** The device will perform only the specified T&A function.
- **T&A Key:** Specify which keys to use for T&A events and the event types associated with them:
 - **Function Key:** Select a function key from the drop-down list to assign a T&A event (*1-*15). If you are using the Event Fix mode, you can click the checkbox to the right to designate a fixed event.
 - **Event Caption:** Enter a caption for the event.
 - **Auto Mode Schedule:** When using the Auto Change mode, you can specify when the event will occur by selecting a timezone in the drop-down list. For more information on creating a timezone, please see section 3.7.1.

5. Customize Settings

- **Event Type:** Set the type of event to assign to the key (*Not Use, Check In, Check Out, In, or Out*). In/Out indicates the general check in/out events during a day whereas Check In/Out indicates the formal check in/out events upon arrival and departure at work—or the first check-in and the last check-out events on that day. When you choose Check In or Check Out, you can enable the “Regard as normal check-in/check-out event” option. If this option is enabled, users using the appropriate keys will be regarded arriving or leaving on time at work even though they actually come late or leave early. If you enable the “Only Result” option, they appear being on time on T&A reports but their work time will be calculated correctly based on their actual check in/out time. If you choose *Out*, you can enable the “Add work time after this event” option. If this option is enabled, users using the appropriate key will be considered working for the remainder of the time slot even though they leave the office early.

5.1.3.10 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for a BioLite Net device. Unlike BioStation devices, only one Wiegand format can be configured at a time (either input only or output only). You can click **Change Format** to launch the Wiegand Configuration wizard. To activate the Wiegand feature for a BioLite Net device, you can select the checkbox at the top right of the tab. For more information on configuring the Wiegand format, please see section 3.2.13.

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy or Extended*). The Legacy mode will process ID data from networked devices and RF card readers in the same way (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.
- **Wiegand Input:** Assign the Wiegand input:

5. Customize Settings

- **Disabled:** The input will not be used.
 - **Wiegand [Card]:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand [User]:** The ID field of the Wiegand string is interpreted as a user ID.
- **Wiegand Output:** Assign the Wiegand output:
 - **Disabled:** The output will not be used.
 - **Wiegand [Card]:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand [User]:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.

5.1.4 Customize Settings for Xpass Devices

The sections below describe the settings available for Xpass devices. Customize the way Xpass devices function by changing these settings to suit your particular environment and operational needs.

5.1.4.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for Xpass devices.

The screenshot shows the 'Operation Mode' tab selected in a software interface. The tab bar at the top includes 'Operation Mode', 'Network', 'Access Control', 'Input', 'Output', 'Command Card', 'Display/Sound', and 'Wiegand'. The 'Xpass Time' section has a 'Sync with Host PC Time' checkbox (unchecked), a 'Date' dropdown set to '2010-12-20', a 'Time' dropdown set to '오후 2:12:16', and 'Get Time' and 'Set Time' buttons. The 'Operation Mode' section has 'Card Only' set to 'Always', 'Server Matching' set to 'Disable', and a 'Double Mode' checkbox (unchecked). The 'Mifare' section has 'Not use Mifare' (unchecked) and 'Use Data Card' (checked), with a 'View Mifare Layout' button. The 'Card ID Format' section has 'Format Type' set to 'Normal', 'Byte Order' set to 'MSB', and 'Bit Order' set to 'MSB'.

- **Xpass Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
 - **Get Time:** Get the current time displayed by the device.

5. Customize Settings

- **Set Time:** Set the time on the device.
- **Operation Mode:** For each of the following options, click the corresponding checkbox to enable Double Verification Mode, which requires verification of two users' credentials to gain entry to a door.
 - **Card Only:** Set the device to require only card authorization (*Always*, *Disable*, or custom schedule).
 - **Server Matching:** Enable this setting to perform card ID matching at the BioStar server, instead of the device. When this mode is enabled, the device will send card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
- **Mifare**
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Data Card:** Check this box to use the user data on the MIFARE card for authorization. The user data card does not provide fingerprint templates.
 - **View Mifare Layout:** Click this button to view the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.
- **Card ID Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If "Normal" is selected, the card ID data will be processed in its original form. If "Wiegand" is selected, devices will interpret card ID data according to the Wiegand format settings.
 - **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
 - **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).
- In Double mode, setting option which includes an administrator is supported. In Double mode, door relay will not open unless an administrator authenticates within 15 seconds after a user authenticates. If this option is not activated, the door relay will open when other two users, regardless of whether being a user or an administrator, authenticate within 15 seconds.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3..
- Use Wiegand Card Bypass: This feature makes the device to send out Card CSN according to Wiegand setting of BioStar without having to conduct a matching. This is designed to be used as a dummy reader in a connection with a third party access control unit through Wiegand. When a card data input is made, the device sends out the data through Wiegand without going through a matching process.

5. Customize Settings

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3..

5. Customize Settings

5.1.4.2 Network tab

The Network tab allows you to customize network and server settings for Xpass devices.

- **TCP/IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Port:** Specify a port to use for the device.
- Support MTU Size setting
 - Devices affiliated with Black Fin support MTU Size setting. The supported packet size is between 1078 and 1514, and the default is 1514.
Note: This feature is supported from the FW versions, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.
- **Server**
 - **Use:** Click this radio button to use specific server settings.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **Support 100 Base-T:** This option allows you to enable or disable a fast Ethernet connection for the device. When enabled, the device will detect the Ethernet network and automatically establish the best connection. If

5. Customize Settings

you do not enable this option, the device will attempt to establish a 10Base-T Ethernet connection.

- **Use:** Click this radio button to enable the 100base-T connection for the device.
- **Not Use:** Click this radio button to disable the 100base-T connection for the device.
- **RS485**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, Slave, or PC Connection*).
 - **Baudrate:** Set the baud rate for a device connected via RS485 (*9600 to 115200*).

5.1.4.3 Access Control tab

The Access Control tab allows you to customize entrance limit settings, default access groups, and T&A mode settings for Xpass devices.

The screenshot shows the 'Access Control' tab selected. The 'Entrance Limit Setting' section has 'Timed APB(min)' set to 0. There are four options (Option 1 to Option 4), each with a checkbox, a time range (0000 ~ 0000), and a 'Max Number of Entrance' field (0). The 'Default Access Group Setting' section has 'Default Group' set to 'Full Access'. The 'Automatic T&A Mode Change' section has 'T&A Mode' set to 'Auto', 'Fixed Entrance' set to 'Morning', 'Fixed Exit Time' set to 'Afternoon', 'In Event Caption' set to 'Check-In', and 'Out Event Caption' set to 'Check-Out'.

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Access Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.
- **Automatic T&A Mode Change**

5. Customize Settings


- **T&A Mode:** Set the time and attendance mode for the device (*Disable, Fixed In, Fixed Out, and Auto*).
- **Fixed Entrance:** When the "Auto" T&A mode is selected, specify when to allow entrance events by selecting a timezone (*Always, Disable, or custom timezone*) in the drop-down list. For more information on creating a timezone, please see section 3.7.1.

5. Customize Settings

- **Fixed Exit Time:** When the “Auto” T&A mode is selected, specify when to allow exit events by selecting a timezone (*Always*, *Disable*, or custom timezone) in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **In Event Caption:** Set a caption for check-in.
- **Out Event Caption:** Set a caption for check-out.

5.1.4.4 Input tab

The input tab lists input settings you have specified for an Xpass device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

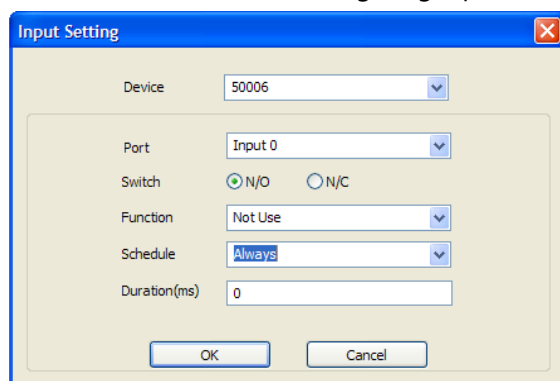

- **Device:** Select the Xpass (or Secure I/O) device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O: normally open* or *N/C: normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (For the events specified with “Detect Input 1-3” in the **Output setting** dialog box, please see section 5.1.4.5).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a “Close Door” command via the Door/Zone Monitoring tab (see section 4.4.1).
 - **Release All Alarms:** Cancel alarms associated with this device.
 - **Restart Device:** Restart the device.

5. Customize Settings

- **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must enter the master password for a BioStation device or provide authentication locally for a BioEntry Plus or BioEntry W device.
- With BioStar 1.8v, LED Green Input, LED Red Input, Buzzer Input, Access Granted Input, and Access Denied Input were newly added. And these input options are available only with BioStation (FW 1.93v), BioStation T2 (FW 1.3v), FaceStation (FW 1.3v), BioEntry Plus (FW 1.6v), BioEntry W (FW 1.2v), BioLite Net (FW 1.4v), and Xpass (FW 1.3v).
- **Schedule:** Set the schedule for the input actions (*Always*, *Disable*, or custom schedule).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5.1.4.5 Output tab

The Output tab lists output settings you have specified for an Xpass device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

- **Device Type:** Select the device type for which you will add or modify settings.

5. Customize Settings

- **Port:** select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.
- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.
 - **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on event (activate) can be overridden only by an alarm off (deactivate) event with a priority of 1 or 2.

5.1.4.6 Blacklist

From BioStar 1.8, 'Blacklist' feature is supported with Xpass.
(This feature is available only with FW 1.3v or higher.)

5.1.4.7 Command Card tab

The Command Card tab allows you to issue command cards. For more information about command cards, please see section 3.2.8.1.

5. Customize Settings

Card ID	Command

Card ID: -
 Command Type: Enroll Card
☐ Need Authentication by Administrator

Buttons: Delete, Delete All, Read Card, Add

- **Card ID:** Enter the card ID or click **Read Card** and place a command card on the reader to automatically populate the fields.
- **Command Type:** Select a type of command card to issue (*Enroll Card, Delete Card, or Delete All Card*).

5.1.4.8 Display/Sound tab

The Display/Sound tab allows you to customize LED and buzzer behaviors by event. To save changes to these settings, you must click **Update** in the corresponding section for each event.

Output Signal

Event: STATUS_NORMAL

LED

Count: (-1 : don't use, 0: indefinite)

BLUE	<input type="text" value="2000"/> msec	<input type="text" value="0"/> msec
CYAN	<input type="text" value="2000"/> msec	<input type="text" value="0"/> msec
None	<input type="text" value="0"/> msec	<input type="text" value="0"/> msec

Update

Buzzer

Count: (-1 : don't use, 0: indefinite)

None	<input type="text" value="0"/> msec	<input type="text" value="0"/> msec	<input checked="" type="checkbox"/> Fade Out
None	<input type="text" value="0"/> msec	<input type="text" value="0"/> msec	<input checked="" type="checkbox"/> Fade Out
None	<input type="text" value="0"/> msec	<input type="text" value="0"/> msec	<input checked="" type="checkbox"/> Fade Out

Update

- **Event:** Specify the affected event by selecting it from the drop-down list.
- **LED:** Set the LED behavior for a specified event.
 - **Count:** Enter a number of LED cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the LED.

5. Customize Settings

- **Colors:** Specify up to three display colors from the drop-down list. The LED will cycle through these colors in order, from top to bottom. Next to each color, enter the duration (in milliseconds) that the LED should display the selected color and the duration (in milliseconds) that the LED should remain off before advancing to the next color in the cycle.
- **Buzzer:** Set the buzzer behavior for a specified event.
 - **Count:** Enter a number of buzzer cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the buzzer.
 - **Volume:** Set up to three tone volumes from the drop-down list (*Low, Middle, or High*). The buzzer will cycle through these volumes in order, from top to bottom. Next to each volume, enter the duration (in milliseconds) that the buzzer should maintain the selected volume and the duration (in milliseconds) that the buzzer should remain off before advancing to the next volume in the cycle.
 - **Fade Out:** Set the tone volume to fade out before advancing to the next volume in the cycle by clicking this checkbox.

5. Customize Settings

5.1.4.9 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for an Xpass device. Click **Change Format** to launch the Wiegand Configuration wizard. To activate the Wiegand feature for an Xpass device, click the checkbox at the top right of the tab. For more information on configuring the Wiegand format, see section 3.2.13

The screenshot shows the 'Wiegand' tab in a software configuration window. At the top, there are several tabs: 'Operation Mode', 'Network', 'Access Control', 'Input', 'Output', 'Command Card', 'Display/Sound', and 'Wiegand'. The 'Wiegand' tab is selected. Below the tabs, there are three dropdown menus: 'Wiegand Mode' set to 'Legacy', 'Wiegand Input' set to 'Disabled', and 'Wiegand Output' set to 'Disabled'. Below these is a section titled 'Wiegand Format'. It contains a 'Format' dropdown set to '26 bit Standard' and a 'Change Format' button. Below the dropdown is a visual representation of the Wiegand string: 'EAAA AAAA AIII IIII IIII IIII IO'. To the right of this string are two input fields: 'Total Bits' set to '26' and 'ID Bits' set to '16'. Below the string is a legend: 'I : ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / A,B,... : Fields'. At the bottom, there are two rows of settings. The first row has 'FC Code' set to 'Disable' and 'Pulse Width(us)' with an empty input field. The second row has 'Default Field Data' with a dropdown menu and 'Pulse space(us)' with an empty input field.

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will treat connected RF devices as part of their host devices (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.
- **Wiegand Input:** Assign the Wiegand input:
 - **Disabled:** The input will not be used.
 - **Wiegand [Card]:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand [User]:** The ID field of the Wiegand string is interpreted as a user ID.
- **Wiegand Output:** Assign the Wiegand output:
 - **Disabled:** The output will not be used.
 - **Wiegand [Card]:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand [User]:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.

5.1.5 Customize Settings for Xpass Slim Devices

The sections below describe the settings available for Xpass Slim devices. Customize the way Xpass Slim devices function by changing these settings to suit your particular environment and operational needs.

5. Customize Settings

5.1.5.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for Xpass Slim devices.

- **Xpass Slim Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
 - **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **Operation Mode:** For each of the following options, click the corresponding checkbox to enable Double Verification Mode, which requires verification of two users' credentials to gain entry to a door.
 - **Card Only:** Set the device to require only card authorization (*Always*, *Disable*, or custom schedule).
 - **Server Matching:** Enable this setting to perform card ID matching at the BioStar server, instead of the device. When this mode is enabled, the device will send card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
- **Mifare:** Mifare template cards are not supported in the Xpass slim device.
- **Card ID Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If "Normal" is selected, the card ID data will be processed in its original form. If "Wiegand" is selected, devices will interpret card ID data according to the Wiegand format settings.

5. Customize Settings

- **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
- **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).

5.1.5.2 Network tab

The Network tab allows you to customize network and server settings for Xpass Slim devices.

The screenshot shows the 'Network' tab in a configuration window. The tabs at the top are: Operation Mode, Network (selected), Access Control, Input, Output, Command Card, Display/Sound, and Wiegand. The settings are organized into sections:

- [TCP/IP Setting]**
 - IP:** Radio buttons for 'Use DHCP' and 'Not use DHCP'. 'Not use DHCP' is selected.
 - IP Address:** 61 . 83 . 152 . 174
 - Subnet:** 255 . 255 . 255 . 128
 - Gateway:** 61 . 83 . 152 . 129
 - port:** 1471
- Server:** Radio buttons for 'Use' and 'Not Use'. 'Not Use' is selected.
- IP Address:** (Empty field)
- Server Port:** 1480
- Time Sync with Server:** (Unchecked checkbox)

Support 100 Base-T: Radio buttons for 'Use' and 'Not Use'. 'Use' is selected.

[Serial Setting]

- RS485:**
- Mode:** Slave (dropdown menu)
- Baudrate:** 115200 (dropdown menu)

- **TCP/IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Port:** Specify a port to use for the device.
- **Server**
 - **Use:** Click this radio button to use specific server settings.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **Support 100 Base-T:** This option allows you to enable or disable a fast Ethernet connection for the device. When enabled, the device will detect the Ethernet network and automatically establish the best connection. If

5. Customize Settings

you do not enable this option, the device will attempt to establish a 10Base-T Ethernet connection.

- **Use:** Click this radio button to enable the 100base-T connection for the device.
 - **Not Use:** Click this radio button to disable the 100base-T connection for the device.
- **RS485**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, Slave, or PC Connection*).
 - **Baudrate:** Set the baud rate for a device connected via RS485 (*9600 to 115200*).

5.1.5.3 Access Control tab

The Access Control tab allows you to customize entrance limit settings, default access groups, and T&A mode settings for Xpass Slim devices.

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Access Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.
- **Automatic T&A Mode Change**

5. Customize Settings


- **T&A Mode:** Set the time and attendance mode for the device (*Disable, Fixed In, Fixed Out, and Auto*).

5. Customize Settings

- **Fixed Entrance:** When the “Auto” T&A mode is selected, specify when to allow entrance events by selecting a timezone (*Always*, *Disable*, or custom timezone) in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **Fixed Exit Time:** When the “Auto” T&A mode is selected, specify when to allow exit events by selecting a timezone (*Always*, *Disable*, or custom timezone) in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **In Event Caption:** Set a caption for check-in.
- **Out Event Caption:** Set a caption for check-out.

5.1.5.4 Input tab

The input tab lists input settings you have specified for an Xpass Slim device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

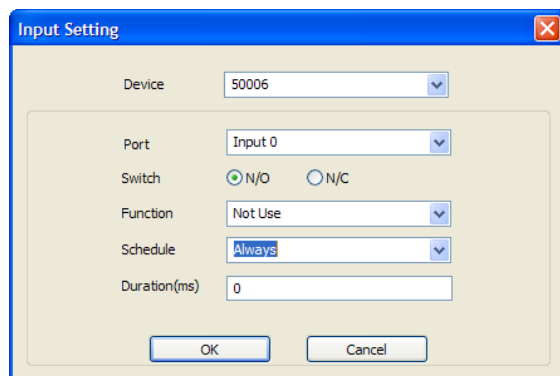

- **Device:** Select the Xpass Slim (or Secure I/O) device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, the following options are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O: normally open* or *N/C: normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (events specified with “Detect Input 1-3” in the **Output Setting** dialog box —see section 5.1.5.5).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a “Close Door” command via the Door/Zone Monitoring tab (see section 4.4.1).

5. Customize Settings

- **Release All Alarms:** Cancel alarms associated with this device.
- **Restart Device:** Restart the device.
- **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must enter the master password for a BioStation device or provide authentication locally for a BioEntry Plus or BioEntry W device.
- **Schedule:** Set the schedule for the input actions (*Always, Disable*, or custom schedule).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5.1.5.5 Output tab

The Output tab lists output settings you have specified for an Xpass device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

The screenshot shows the 'Output Setting' dialog box. At the top, there are two dropdown menus: 'Device Type' set to '50006' and 'port' set to 'Relay 0'. Below these are two sections: 'Alarm On Event' and 'Alarm Off Event'. Each section contains a large empty rectangular box on the left, likely for a list of settings. To the right of each box are four fields: 'Event' (dropdown menu), 'Device' (dropdown menu), 'Signal Setting' (dropdown menu), and 'Priority' (text input field). Below these fields are three buttons: 'Add', 'Delete', and 'Delete All'. At the bottom of the dialog are two buttons: 'Save' and 'Cancel'.

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** Select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.

5. Customize Settings

- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.
 - **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on event (activate) can be overridden only by an alarm off (deactivate) event with a priority of 1 or 2.

5. Customize Settings

5.1.5.6 Command Card tab

The Command Card tab allows you to issue command cards. For more information about command cards, see section 3.2.8.1.

The screenshot shows the 'Command Card' tab selected in a menu bar. Below the menu bar is a table with two columns: 'Card ID' and 'Command'. The table is empty. To the right of the table are two buttons: 'Delete' and 'Delete All'. Below the table is a section with input fields: 'Card ID' with a value of '0', a minus sign, and another '0'. Below that is a 'Command Type' dropdown menu set to 'Enroll Card'. There is also a checkbox labeled 'Need Authentication by Administrator' which is unchecked. To the right of these fields are two buttons: 'Read Card' and 'Add'.

- **Card ID:** Enter the card ID or click **Read Card** and place a command card on the reader to automatically populate the fields.
- **Command Type:** Select a type of command card to issue (*Enroll Card*, *Delete Card*, or *Delete All Card*).

5.1.5.7 Display/Sound tab

The Display/Sound tab allows you to customize LED and buzzer behaviors by event. To save changes to these settings, you must click **Update** in the corresponding section for each event.

The screenshot shows the 'Display/Sound' tab selected in a menu bar. Below the menu bar is a section titled 'Output Signal'. Under 'Event', there is a dropdown menu set to 'STATUS_NORMAL'. Below this is a section for 'LED' with a 'Count' field set to '0' and a note '(-1 : dont' use, 0: indefinite)'. There are three rows of settings for LED: 'BLUE' with a value of '2000' msec, 'CYAN' with a value of '2000' msec, and 'None' with a value of '0' msec. Each row has a 'msec' label and a '0' msec label. To the right of these settings is an 'Update' button. Below the LED section is a section for 'Buzzer' with a 'Count' field set to '-1' and a note '(-1 : dont' use, 0: indefinite)'. There are three rows of settings for Buzzer: 'None' with a value of '0' msec, 'None' with a value of '0' msec, and 'None' with a value of '0' msec. Each row has a 'msec' label and a '0' msec label. To the right of these settings are three checkboxes, all checked, labeled 'Fade Out'. To the right of these settings is an 'Update' button.

5. Customize Settings

- **Event:** Specify the affected event by selecting it from the drop-down list.
- **LED:** Set the LED behavior for a specified event.
 - **Count:** Enter a number of LED cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the LED.
 - **Colors:** Specify up to three display colors from the drop-down list. The LED will cycle through these colors in order, from top to bottom. Next to each color, enter the duration (in milliseconds) that the LED should display the selected color and the duration (in milliseconds) that the LED should remain off before advancing to the next color in the cycle.
- **Buzzer:** Set the buzzer behavior for a specified event.
 - **Count:** Enter a number of buzzer cycles for the specified event. Enter "0" to enable an infinite loop or "-1" to disable the buzzer.
 - **Volume:** Set up to three tone volumes from the drop-down list (*Low*, *Middle*, or *High*). The buzzer will cycle through these volumes in order, from top to bottom. Next to each volume, enter the duration (in milliseconds) that the buzzer should maintain the selected volume and the duration (in milliseconds) that the buzzer should remain off before advancing to the next volume in the cycle.
 - **Fade Out:** Set the tone volume to fade out before advancing to the next volume in the cycle by clicking this checkbox.

5.1.5.8 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for an Xpass device. Click **Change Format** to launch the Wiegand Configuration wizard. To activate the Wiegand feature for an Xpass device, click the checkbox at the top right of the tab. For more information on configuring the Wiegand format, see section 3.2.13.

The screenshot shows the 'Wiegand' tab selected in a software interface. At the top, there are several tabs: 'Operation Mode', 'Network', 'Access Control', 'Input', 'Output', 'Command Card', 'Display/Sound', and 'Wiegand'. Below the tabs, there are three dropdown menus: 'Wiegand Mode' set to 'Legacy', 'Wiegand Input' set to 'Disabled', and 'Wiegand Output' set to 'Disabled'. A 'Wiegand Format' section is expanded, showing a 'Format' dropdown set to '26 bit Standard' and a 'Change Format' button. Below this, a bitstream is displayed: 'EAAA AAAA AIII IIII IIII IIII IO'. To the right of the bitstream, 'Total Bits' is 26 and 'ID Bits' is 16. A legend below the bitstream explains the fields: 'I : ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / A,B,... : Fields'. At the bottom, there are input fields for 'FC Code' (set to 'Disable'), 'Default Field Data' (a dropdown), 'Pulse Width(us)', and 'Pulse space(us)'.

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will treat connected RF devices as part of their host devices (this is the typical function of previous

5. Customize Settings

versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.

- **Wiegand Input:** Assign the Wiegand input:
 - **Disabled:** The input will not be used.
 - **Wiegand [Card]:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand [User]:** The ID field of the Wiegand string is interpreted as a user ID.
- **Wiegand Output:** Assign the Wiegand output:
 - **Disabled:** The output will not be used.
 - **Wiegand [Card]:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand [User]:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.

5.1.6 Customize Settings for D-Station Devices

The sections below describe the settings available for D-Station devices. Customize the way D-Station devices function by changing these settings to suit your particular environment and operational needs.

5.1.6.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for D-Station devices.

The screenshot shows the 'Operation Mode' tab in a software interface. At the top, there are tabs for 'Operation Mode', 'Fingerprint', 'Camera', 'Network', 'Access Control', 'Input', 'Output', 'Black List', 'Display/Sound', 'T & A', and 'Wiegand'. The 'Operation Mode' tab is active. Below the tabs, there is a 'D-Station Time' section with a 'Sync with Host PC Time' checkbox. It includes fields for 'Date' (11/ 8/2010) and 'Time' (10:44:45 AM), with 'Get Time' and 'Set Time' buttons. The '1:1 Operation Mode' section contains dropdown menus for 'ID/Card + Fingerprint' (No Time), 'ID/Card + Password' (No Time), 'ID/Card + Fingerprint/Password' (Always), 'Card Only' (No Time), 'ID/Card + Fingerprint + Password' (No Time), 'Private Auth' (Disable), and 'Double Mode' (No Time). The '1:N Operation' section includes '1:N Schedule' (Always), '1:N Operation Mode' (Auto), 'Two Sensor Mode' (Fusion Mode), 'Detect Face' (Not Use), 'Face Fusion' (Not Use), 'Fusion Time out' (15), and 'Interphone' (Use). The 'Mifare' section has checkboxes for 'Not use Mifare' and 'Use Template on Card', with a 'View Mifare Layout' button. The 'Card ID Format' section includes 'Format Type' (Normal), 'Byte Order' (MSB), and 'Bit Order' (MSB).

5. Customize Settings

- **D-Station Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
 - **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **1: 1 Operation Mode:** The drop-down lists in this area allow you to control the authentication mode by schedule. For example, you can choose a normal authentication mode for working hours and a more strict authentication mode for hours outside the normal schedule. You can specify authentication modes either by device or by user (see section 5.4.1). Unless a particular mode is specified for a user, the device authentication mode will apply.
 - **ID/Card + Fingerprint:** Set the device to require ID or card plus fingerprint authorization (*Always, or No Time*).
 - **ID/Card + Password:** Set the device to require ID or card plus password authorization (*Always, or No Time*).
 - **ID/Card + Fingerprint/Password:** Set the device to require ID or card plus fingerprint or password authorization (*Always, or No Time*).
 - **Card Only:** Set the device to require only card authorization (*Always, or No Time*).
 - **ID/Card + Fingerprint + Password:** Set the device to require ID or card plus fingerprint plus password authorization (*Always, or No Time*).
- **1: N Operation**
- **1: N Schedule:** Set a schedule for using fingerprint only authentication (*Always, or No Time*).
- **1: N Operation Mode:** Set a method for activating the fingerprint sensor (*Auto, Ok/Function Key, or None*).
- **Two Sensor Mode**
 - **Fast Mode:** The device will provide the quickest authentication.
 - **Fusion Mode:** Authentication is provided by a fusion algorithm that allows users to scan either of two registered fingers and increases the authentication rate for each finger.
 - **Twin Mode:** Each sensor works independently to authenticate up to two users simultaneously.

5. Customize Settings

- **Detect Face:** Set the device to capture a face image. Upon successful authentication, the captured image is stored in the event log and can be used later for verification purposes.
- **Face Fusion:** Set the device to use face fusion for authentication. This setting can improve authentication rates for some users. This setting can be used in conjunction with either the Fast Mode or the Fusion Mode in the Two Sensor Mode setting.
- **Fusion Time out:** Set the device to automatically time out after a specified number of minutes, if authentication is unsuccessful (1-20).
- **Interphone:** Set the device to act as an interphone to allow communication between people on either side of the door (*Not Use* or *Use*).
- **Other options**
 - **Private Auth:** Set the device to allow a private authorization method (*Disable* or *Enable*). If enabled, the authentication mode of the user will be determined by a user's "Authorization" setting, which is located on the Details tab. If disabled, the authentication mode will be determined by operation mode settings of the device.
 - **Double Mode:** Set the device to require authentication of two users' access cards or fingerprints (*Always*, or *No Time*). The timeout for presenting the second authentication is 15 seconds.
- **Mifare**
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Template on Card:** Check this box to use the template on the MIFARE card for authorization.
 - **View Mifare Layout:** Click this button to view the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.
- **ISO Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If "Normal" is selected, the card ID data will be processed in its original form. If "Wiegand" is selected, devices will interpret card ID data according to the Wiegand format settings.
 - **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
 - **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).

5. Customize Settings

5.1.6.2 Fingerprint tab

The Fingerprint tab allows you to customize fingerprint authorization settings for D-Station devices.

The screenshot displays the 'Fingerprint' tab within a software interface. At the top, there is a navigation bar with tabs: Operation Mode, Fingerprint (selected), Camera, Network, Access Control, Input, Output, Black List, Display/Sound, T & A, and Wiegand. Below the navigation bar, the 'Fingerprint' section contains several settings:

- Security Level:** Normal (dropdown)
- Image Quality:** Normal (dropdown)
- Sensitivity:** 7(Max) (dropdown)
- 1:N Delay:** 2 sec (dropdown)
- Server Matching:** Disable (dropdown)
- 1:N Fast Mode:** Normal (dropdown)
- View Image:** Yes (dropdown)
- Scan Timeout:** 10 sec (dropdown)
- Matching Timeout:** 3 sec (dropdown)
- Check Fake Finger:** Disable (dropdown)
- Check Duplicate FP:** (checkbox, unchecked)
- Template Option:**
 - Encryption:** Disable (dropdown)
 - ISO Format:** Disable (dropdown)

- **Fingerprint**
 - **Security Level:** Set the security level to use for fingerprint authorization (*Normal*, *Secure*, or *Most Secure*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.
 - **Image Quality:** Set the strictness of the quality check for fingerprint scans (*Weak*, *Normal*, or *Strict*). If a fingerprint image is below the specified quality level, it will be rejected.
 - **Sensitivity:** Set the sensitivity of the fingerprint scanner (*0 [Min]* to *7 [Max]*). A higher sensitivity setting will result in more easily captured fingerprint scans, but also increases the sensitivity to external noise.
 - **1: N Delay:** Set the delay between scans when identifying fingerprints (*0 sec* to *10 sec*). This delay prevents the scanner from processing the same fingerprint more than once if a user has not yet removed his or her finger from the scanner.
 - **Server Matching:** Enable this setting to perform fingerprint or card ID matching at the BioStar server, instead of the device. When this mode is enabled, the devices will send the fingerprint template or card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
 - **1: N Fast Mode:** Set the device to use Fast Mode to reduce the amount of time required for matching fingerprints (*Auto*, *Normal*, *Fast*, or *Fastest*). Setting Fast Mode to *Auto* will adjust the matching speed according to the number of enrolled templates.

5. Customize Settings

- **View Image:** Set to show or hide fingerprint images on the BioStation display (*Yes* or *No*).
- **Scan Timeout:** Set the length of time before the fingerprint scanner will timeout (*1 sec* to *20 sec*). If a user does not place a finger on the device within the timeout period, the authorization will fail.
- **Matching Timeout:** Set the length of time before the device will timeout when trying to identify a fingerprint match (*0 [Infinite]* to *10 sec*).
- **Check Fake Finger:** Set the device to detect the use of fake fingerprints, such as those made from silicon or rubber, and prevent unauthorized access.
- **Template Option:** Displays the global fingerprint template settings. For more information about fingerprint templates, see section 4.9.

5.1.6.3 Camera tab

The Camera tab allows you to control how the camera is used for authorization purposes. In the Timezone field, select a timezone for the specified event. Click **Add** to select an event that will activate the camera. Click **Apply** to save your settings.

Operation Mode | Fingerprint | **Camera** | Network | Access Control | Input | Output | Black List | Display/Sound | T & A | Wiegand

Camera Event

Timezone

- Always
- Check In
- Check Out
- No Time
- Out of Office

Event

- Identify Fail
- Identify Success

Add Delete

5. Customize Settings

5.1.6.4 Network tab

The Network tab allows you to customize network and server settings for D-Station devices.

- **TCP/IP Setting**
 - **LAN Type:** Select a type of LAN connection from the drop-down list (*Disable, Ethernet, or Wireless LAN*).
 - **Port:** Specify a port to use for the device.
- **WLAN**
 - **Change setting:** Click to specify settings for a wireless local area network (WLAN). This option is active only when WLAN is selected as the TCP/IP setting. For more information about configuring settings for a WLAN, please see section 3.2.4.
- **IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Max Conn.:** Specify the maximum number of connections to allow.
- **Server**
 - **Use:** Click this radio button to enable the server mode.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Server Port:** Specify the port used to connect to the server.
 - **SSL:** Displays the status of SSL for the server connection.

5. Customize Settings

- **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **RS485 Network**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, or Slave*). For more information about RS485 modes, please see sections 3.2.1 and 3.2.2.
- **RS485**
 - **Baudrate:** Set the baud rate for a device connected via RS485 (9600 to 115200).
- **RS232**
 - **Baudrate:** Set the baud rate for a device connected via RS232 (9600 to 115200).
- **USB Setting:** Click the radio buttons to enable or disable the USB port on the D-Station device.

5.1.6.5 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups for a D-Station device.

Operation Mode | Fingerprint | Network | **Access Control** | Input | Output | Black List | Display/Sound | T & A | Wiegand

Entrance Limit Setting

Timed APB(min) 0

Option	Start Time	End Time	Max Number of Entrance
<input type="checkbox"/> Option 1	0000	~ 0000	0
<input type="checkbox"/> Option 2	0000	~ 0000	0
<input type="checkbox"/> Option 3	0000	~ 0000	0
<input type="checkbox"/> Option 4	0000	~ 0000	0

Default Group Setting

Default Group Full Access

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.

5. Customize Settings

5.1.6.6 Interphone tab

The Interphone tab allows you to set the device to act as an interphone to allow communication between people on either side of the door.

The screenshot shows the 'Interphone' tab selected in a settings menu. The 'Type' dropdown is set to 'Not Use'. Below this, there are two sections: 'Interphone' and 'Videophone'. The 'Interphone' section contains fields for 'VOIP Server IP' (0.0.0.0), 'VOIP Display Name', 'VOIP ID', 'VOIP Phone Number', 'VOIP Password', 'Speaker Gain' (10), and 'Mic Gain' (6). The 'Videophone' section contains a 'Mode' dropdown (Single), a 'Device Password' field, and a 'Door Control' checkbox.

- **Type:** Select one of the following options:
 - **Aanlogue Interphone:** Choose this option to enable the analogue interphone.
 - **IP Interphone:** Choose this option to enable the VoIP feature. A telephone is required.
 - **BioStar Videophone:** Choose this option to enable the videophone feature that supports both video and voice calls. The supplied PC software is required. The BioStar vidoephone works only with the device firmware version of FaceStation V1.0 or later.

When you select **IP Interphone** in the Type drop-down list, specify the following settings:

- **VOIP Server IP:** Specify an IP address for VOIP server.
- **VoIP Display Name:** Specify a name to use for communication through the interphone.
- **VoIP Phone Number:** Specify a phone number for the interphone.
- **VoIP ID:** Specify a user name to access the VoIP server.
- **VoIP Password:** Specify a password to access the VoIP server.
- **Speaker Gain:** Specify the volume of the speaker.
- **Mic Gain:** Specify the volume of the microphone.


When you select **Videophone** in the Type drop-down list, specify the following settings:

- **Mode:** Specify the videophone purpose (*Single* or *Extension*).
- **Door Control:** Check this option if the videophone is used for door access.
- **Device Password:** Enter the videophone device password.

5. Customize Settings

5.1.6.7 Input tab

The input tab lists input settings you have specified for a D-Station device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

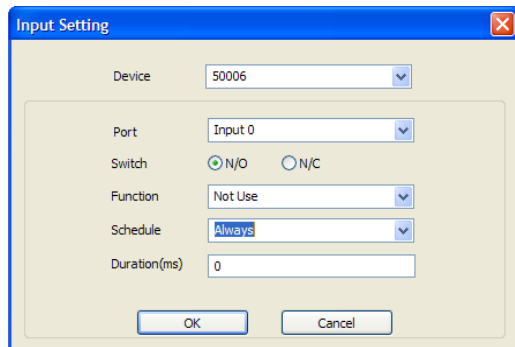


- **Device:** Select the D-Station device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O*: *normally open* or *N/C*: *normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (For the events specified with “Detect Input 0-3” in the **Output Setting** dialog box, please see section 5.1.1.6).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a “Close Door” command via the Door/Zone Monitoring tab (see section 4.4.1).
 - **Release All Alarms:** Cancel alarms associated with this device.
 - **Restart Device:** Restart the device.
 - **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must provide authentication at the device.
- **Schedule:** Set the schedule during which the inputs will be monitored (*Always* or *No Time*).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5. Customize Settings

5.1.6.8 Output tab

The Output tab lists output settings you have specified for a D-Station device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

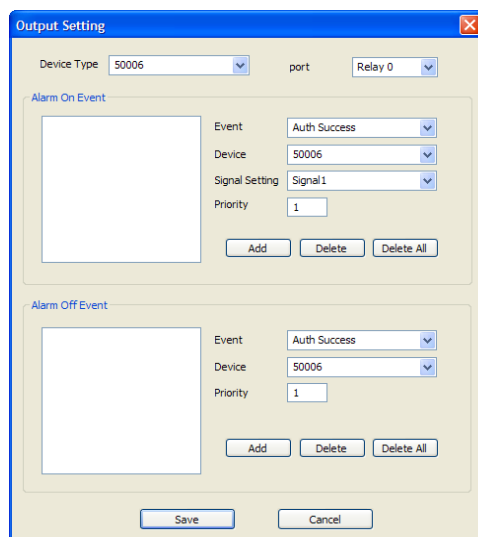

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.
- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.

5. Customize Settings

- **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
- **Device:** Select the device to monitor for an alarm event.
- **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, a priority 2 “alarm on” event (activate) can be overridden only by an “alarm off” (deactivate) event with a priority of 1 or 2.

5.1.6.9 Black List tab

The Black List tab allows you to register user IDs or access card numbers and prevent them from being authenticated with the device.

The screenshot shows the 'Black List' tab selected in a settings menu. At the top, there are tabs for 'Operation Mode', 'Fingerprint', 'Camera', 'Network', 'Access Control', 'Input', 'Output', 'Black List', 'Display/Sound', 'T & A', and 'Wiegand'. Below the tabs, there are two input fields: 'Current Count' with the value '1' and 'Reserved' with the value '999'. Below these fields is a table with three columns: 'No', 'User ID/Card No.', and 'Type'. The first row of the table contains the values '1', '0', and 'User ID'. The table has 10 rows in total, with the first row populated and the rest empty.

No	User ID/Card No.	Type
1	0	User ID

- **Current Count:** Indicates the total number of user IDs and access cards that have been registered.
- **Reserved:** Indicates the remaining number of user IDs and access cards that can be registered.

5. Customize Settings

5.1.6.10 Display/Sound tab

The Display/Sound tab allows you to customize the D-Station display and event sounds. To save changes to display or sound settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

The screenshot shows the 'Display/Sound' configuration tab. At the top is a navigation bar with tabs: Operation Mode, Fingerprint, Camera, Network, Access Control, Input, Output, Black List, Display/Sound (selected), T & A, and Wiegand. The main area is divided into two sections. The 'Display/Sound' section contains: 'Menu Timeout' (20 sec), 'Backlite Timeout' (30 sec), 'Theme' (Default), 'Background' (Logo), 'Volume' (60 %), and 'Msg Timeout' (2 sec). There is a 'Notice' button next to the Background dropdown. The 'Background Image' section has a checkbox, a 'Type' dropdown (set to Logo), and two empty image boxes with 'Add' and 'Delete' buttons. The 'Sound' section has a checkbox and a list of events with corresponding .wav files: Start, Success, Error, Question, Button, Detect Finger, and Place Finger. There are 'Add', 'Delete', and 'Play' buttons at the bottom of the sound section.

- **Display/Sound**
 - **Menu Timeout:** Set the length of time before the display will return to the idle screen.
 - **Backlight Timeout:** Set the length of time before the display goes dim.
 - **Theme:** Set a display theme.
 - **Background:** Set the type of background for the BioStation display (*Logo*, *Notice*, or *Slide Show*). Supported file types (JPG, GIF, BMP, and PNG) cannot exceed 320x240 pixels each. Only one image at a time can be used as a logo or notice, while up to 16 images can be displayed (at a set interval) in a slide show.
 - **Notice:** Click this button to create a notice that will be shown on the BioStation display. After creating a notice, you can click **Apply** to apply the notice to the current device or **Apply to Others** to apply the notice to additional devices.
 - **Volume:** Set the volume of the BioStation device (10% to 100%).
 - **Msg Timeout:** Set the length of time that a failure or confirmation message will be displayed.
- **Background Image:** Click this checkbox to upload new background images. Click the plus sign (+) to locate and add a new image file.
 - **Type:** Set the type of background for the BioStation display (*Logo* or *Notice*). Supported file types (JPG, GIF, BMP, and PNG) cannot exceed 800x427 pixels for Notices and 800x327 pixels for Logos. Only one image at a time can be used as a logo or notice.

5. Customize Settings

- **Sound:** Click this checkbox to enable and add custom event sounds. Click an event from the list and then click the plus sign (+) to locate and add a new sound file. Click **Add** to add new sound files, **Delete** to remove sound files, or **Play** to preview a selected sound file.

5.1.6.11 T&A tab

The T&A tab allows you to configure the mode and key settings for a D-Station device. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

TA Key	Caption	Schedule	Fixed or Not	Use Relay	Event Type
F1	In	No Time	Use(L/R)	Use	Not Use
F2	Out	No Time	Not Use	Not Use	Not Use
F3	Out Duty	No Time	Not Use	Use	Not Use
F4	Out Duty	No Time	Not Use	Not Use	Not Use

- **T&A Mode:** Set the time and attendance mode:
 - **Not Use:** Disable the time and attendance functions for this device.
 - **Manual:** Users must press the specified key every time they enter or leave to record their T&A events.
 - **Manual Fix:** When a T&A key is pressed, the device will remain in that mode until a different T&A key is pressed.
 - **Auto change:** The device will automatically change T&A modes to correspond with the functions specified for a time period.
 - **Event Fix:** The device will perform only the specified T&A function. In this mode, each sensor can work independently. You can set an event for each sensor.
- **T&A Key:** Specify which keys to use for T&A events and the event types associated with them:
 - **Function Key:** Select a function key from the drop-down list to assign a T&A event (F1-F4, EXT01-EXT12). If you are using the Event Fix mode, you can click the checkbox to the right to designate a fixed event.

5. Customize Settings

- **Event Caption:** Enter a caption for the event.
- **Auto Mode Schedule:** When using the Auto Change mode, you can specify when the event will occur by selecting a timezone in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
- **Event Type:** Set the type of event to assign to the key (*Not Use, Check In, Check Out, In, or Out*). In/Out indicates the general check in/out events during a day whereas Check In/Out indicates the formal check in/out events upon arrival and departure at work—or the first check-in and the last check-out events on that day. When you choose Check In or Check Out, you can enable the “Regard as normal check-in/check-out event” option. If this option is enabled, users who activate the appropriate keys will be regarded as arriving or leaving on time at work even though they actually arrive late or leave early. If you enable the “Only Result” option, they appear being on time on T&A reports but their work time will be calculated correctly based on their actual check in/out time. If you choose *Out*, you can enable the “Add work time after this event” option. If this option is enabled, users activating the appropriate key will be considered working for the remainder of the time slot even if they leave the office early.

5.1.6.12 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for a D-Station device. Click **Change Format** to launch the Wiegand Configuration wizard. For more information on configuring the Wiegand format, see section 3.2.13.

Operation Mode | Fingerprint | Camera | Network | Access Control | Input | Output | Black List | Display/Sound | T & A | **Wiegand**

Wiegand Mode: Legacy
Wiegand In/Out: Wiegand (User) In

Wiegand Format

Format: 26 bit Standard Change Format

EAAA AAAA AIII IIII IIII IIII IO

Total Bits: 26
ID Bits: 16

I : ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / A,B,... : Fields

FC Code: Disable
Pulse Width(us): 40
Field Default Values:
Pulse Interval(us): 10000

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will treat connected RF devices as part of their host devices (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to

5. Customize Settings

operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.

- **Wiegand In/Out:** Assign the Wiegand input or output:
 - **Wiegand (User) In:** The ID field of the Wiegand string is interpreted as a user ID.
 - **Wiegand (Card) In:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand (User) Out:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand (Card) Out:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.

5.1.7 Customize Settings for X-Station Devices

The sections below describe the settings available for X-Station devices. Customize the way X-Station devices function by changing these settings to suit your particular environment and operational needs.

5.1.7.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for X-Station devices.

The screenshot shows the 'Operation Mode' tab in a software interface. At the top, there are several tabs: 'Operation Mode' (selected), 'Camera', 'Network', 'Access Control', 'Input', 'Output', 'Black List', 'Display/Sound', 'T & A', and 'Wiegand'. The 'X-Station Time' section includes a checkbox for 'Sync with Host PC Time', a 'Date' dropdown set to '11/17/2010', a 'Time' dropdown set to '3:54:46 PM', and 'Get Time' and 'Set Time' buttons. The '1:1 Operation Mode' section has two columns of settings: 'Card Only' (No Time), 'ID/Card + Password' (Always), 'Private Auth' (Disable), 'Double Mode' (No Time), 'Server Matching' (Enable), 'Auth Time out' (10 sec), and 'Detect Face' (Not Use). The 'Mifare' section has checkboxes for 'Not use Mifare' and 'Use Data Card', and a 'View Mifare Layout' button. The 'Card ID Format' section has 'Format Type' (Wiegand), 'Byte Order' (MSB), and 'Bit Order' (MSB) dropdowns.

- **X-Station Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option

5. Customize Settings

and you can set the device's time to match this time by clicking **Set Time**.

- **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **1: 1 Operation Mode:** The drop-down lists in this area allow you to control the authentication mode by schedule. For example, you can choose a normal authentication mode for working hours and a more strict authentication mode for hours outside the normal schedule. You can specify authentication modes either by device or by user (see section 5.4.1). Unless a particular mode is specified for a user, the device authentication mode will apply.
 - **Card Only:** Set the device to require only card authorization (*No Time, First Shift, or Always*).
 - **ID/Card + Password:** Set the device to require ID or card plus password authorization (*No Time, First Shift, or Always*).
- **Private Auth:** Set the device to allow a private authorization method (*Disable or Enable*). If enabled, the authentication mode of the user will be determined by a user's "Authorization" setting, which is located on the Details tab. If disabled, the authentication mode will be determined by operation mode settings of the device.
- **Double Mode:** Set the device to require authentication of two users' access cards or fingerprints (*Always, or No Time*). The timeout for presenting the second authentication is 15 seconds.
- **Server Matching:** Enable this setting to perform card ID matching at the BioStar server, instead of the device. When this mode is enabled, the device will send card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
- **Auth Timeout:** Set the length of time before the device will timeout when trying to identify an ID match (*5, 10, 15, 20, or 30 sec*).
- **Detect Face:** Set the device to capture a face image. Upon successful authentication, the captured image is stored in the event log and can be used later for verification purposes.
- **Mifare**
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Data Card:** Check this box to use the template on the MIFARE card for authorization.
 - **View Mifare Layout:** Click this button to view the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.

5. Customize Settings

- **Card ID Format**

- **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If “Normal” is selected, the card ID data will be processed in its original form. If “Wiegand” is selected, devices will interpret card ID data according to the Wiegand format settings.
- **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
- **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).

5.1.7.2 Camera tab

The Camera tab allows you to control how the camera is used for authorization purposes. In the Timezone field, select a timezone for the specified event. Click **Add** to select an event that will activate the camera. Click **Apply** to save your settings.

The screenshot shows the 'Camera' tab selected in the top navigation bar. The 'Camera Event' section contains two lists. The 'Timezone' list on the left has three items: 'Always' (selected), 'First Shift', and 'No Time'. The 'Event' list on the right has one item: 'Verify Success'. There are 'Add' and 'Delete' buttons next to the 'Event' list.

5.1.7.3 Network tab

The Network tab allows you to customize network and server settings for X-Station devices.

The screenshot shows the 'Network' tab selected in the top navigation bar. The interface is divided into three sections: '[TCP/IP Setting]', '[Server]', and '[Serial Setting]'. In the '[TCP/IP Setting]' section, 'Lan Type' is set to 'Ethernet' and 'Port' is '1470'. There are radio buttons for 'Use DHCP' (selected) and 'Not Use DHCP'. Below, 'IP Address' is '192.168.0.252' and 'Subnet' is empty. 'Gateway' and 'Max Conn.' (set to 16) are also visible. In the '[Server]' section, 'Use' is selected, 'IP Address' is '192.168.1.106', and 'Server Port' is '1480'. A checkbox for 'Time sync with Server' is checked. In the '[Serial Setting]' section, 'RS485 Network' is selected, 'Mode' is 'Host', and 'RS485 Baudrate' is '57600'.

- **TCP/IP Setting**

- **LAN Type:** Select a type of LAN connection from the drop-down list (*Disable*, or *Ethernet*).
- **Port:** Specify a port to use for the device.

- **IP**

5. Customize Settings

- **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Max Conn.:** Specify the maximum number of connections to allow.
- **Server**
 - **Use:** Click this radio button to enable the server mode.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Server Port:** Specify the port used to connect to the server.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **RS485 Network**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, or Slave*). For more information about RS485 modes, please see sections 3.2.1 and 3.2.2.
- **RS485**
 - **Baudrate:** Set the baud rate for a device connected via RS485 (*9600 to 115200*).

5.1.7.4 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups for an X-Station device.

Operation Mode | Fingerprint | Network | **Access Control** | Input | Output | Black List | Display/Sound | T & A | Wiegand

Entrance Limit Setting

Timed APB(min) 0

Option	Input 1	Input 2	Max Number of Entrance
Option 1	0000	~ 0000	0
Option 2	0000	~ 0000	0
Option 3	0000	~ 0000	0
Option 4	0000	~ 0000	0

Default Group Setting

Default Group Full Access

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has

5. Customize Settings

gained entry, the device will reject the user's card or fingerprint authorization for the time period specified here.

- **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
- **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.

5.1.7.5 Interphone tab

The Interphone tab allows you to set the device to act as an interphone to allow communication between people on either side of the door.

The screenshot shows the 'Interphone' tab selected in a settings menu. The 'Type' dropdown is set to 'Not Use'. Below this, there are two sections: 'Interphone' and 'Videophone'. The 'Interphone' section contains fields for 'VOIP Server IP' (0.0.0.0), 'VOIP Display Name', 'VOIP ID', 'Speaker Gain' (10), 'VOIP Phone Number', 'VOIP Password', and 'Mic Gain' (6). The 'Videophone' section contains a 'Mode' dropdown set to 'Single', a 'Device Password' field, and a 'Door Control' checkbox.

- **Type:** Select one of the following options:
 - **Analogue Interphone:** Choose this option to enable the analogue interphone.
 - **IP Interphone:** Choose this option to enable the VoIP feature. A telephone is required.
 - **BioStar Videophone:** Choose this option to enable the videophone feature that supports both video and voice calls. The supplied PC software is required. The BioStar videophone works only with the device firmware version of FaceStation V1.0 or later.

When you select **IP Interphone** in the Type drop-down list, specify the following settings:

- **VOIP Server IP:** Specify an IP address for VOIP server.
- **VoIP Display Name:** Specify a name to use for communication through the interphone.

5. Customize Settings


- **VoIP Phone Number:** Specify a phone number for the interphone.
- **VoIP ID:** Specify a user name to access the VoIP server.
- **VoIP Password:** Specify a password to access the VoIP server.
- **Speaker Gain:** Specify the volume of the speaker.
- **Mic Gain:** Specify the volume of the microphone.

When you select **Videophone** in the Type drop-down list, specify the following settings:

- **Mode:** Specify the videophone purpose (*Single* or *Extension*).
- **Door Control:** Check this option if the videophone is used for door access.
- **Device Password:** Enter the videophone device password.

5.1.7.6 Input tab

The input tab lists input settings you have specified for an X-Station device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

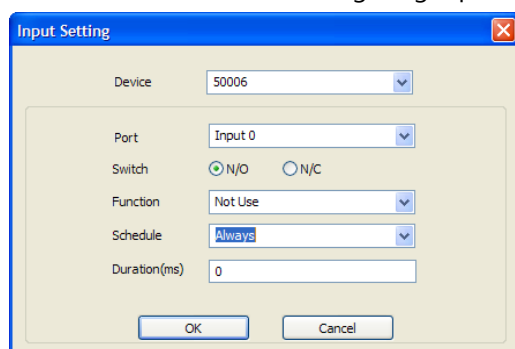

- **Device:** Select the X-Station device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O: normally open* or *N/C: normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (For the events specified with "Detect Input 0-3" in the **Output Setting** dialog box, please see section 5.1.1.6).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a "Close Door" command via the Door/Zone Monitoring tab (see section 4.4.1).

5. Customize Settings

- **Release All Alarms:** Cancel alarms associated with this device.
- **Restart Device:** Restart the device.
- **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must provide authentication at the device.
- **Schedule:** Set the schedule during which the inputs will be monitored (*Always, First Shift, or No Time*).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5.1.7.7 Output tab

The Output tab lists output settings you have specified for an X-Station device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

The screenshot shows the 'Output Setting' dialog box. At the top, there are dropdowns for 'Device Type' (set to 50006) and 'port' (set to Relay 0). Below these are two sections: 'Alarm On Event' and 'Alarm Off Event'. Each section contains a list box on the left and a form on the right. The form has dropdowns for 'Event' (set to Auth Success), 'Device' (set to 50006), and 'Signal Setting' (set to Signal 1), along with a 'Priority' text box (set to 1). Below the form are 'Add', 'Delete', and 'Delete All' buttons. At the bottom of the dialog are 'Save' and 'Cancel' buttons.

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.
- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Closed, Forced Open Door, Held Open Door, Detect Input #0-3*).

5. Customize Settings

5.1.7.9 Display/Sound tab

The Display/Sound tab allows you to customize the X-Station display and event sounds. To save changes to display or sound settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

- **Display/Sound**
 - **Language:** Set the language to use on the display (Korean, English, or Custom).
 - **Menu Timeout:** Set the length of time before the display will return to the idle screen.
 - **Back Light Timeout:** Set the length of time before the display goes dim (*Infinite, 10, 20, 30, 40, 50, or 60 sec*).
 - **Theme:** Set a display theme (*Theme 1-3*).
 - **Resource File:** Set the language resource file to use for the X-Station interface (*No Change, English, Korean, or Custom*). To use a language resource file other than English or Korean, select *Custom* and then click the ellipsis (...) button to locate the resource file.
 - **Background:** Set the type of background for the X-Station display (*Logo, Notice, or Slide Show*). Supported file types (JPG, GIF, BMP, and PNG) cannot exceed 240x320 pixels each. Only one image at a time can be used as a logo or notice, while up to 16 images can be displayed (at a set interval) in a slide show.
 - **Notice:** Click this button to create a notice that will be shown on the X-Station display. After creating a notice, you can click **Apply** to apply the notice to the current device or **Apply to Others** to apply the notice to additional devices.
 - **Volume:** Set the volume of the X-Station device (0% to 100%).

5. Customize Settings

- **Msg Timeout:** Set the length of time that a failure or confirmation message will be displayed.
 - **Clock Display:** Set to display the current time on the device (Enable or Disable).
- **Background Image:** Click this checkbox to upload new background images. Click **Add** to locate and add a new image file. To delete an existing image, click the image name and then click **Delete**.
 - **Type:** Set the type of background for the X-Station display (*Logo, Notice, or Slide Show*). Supported file types (JPG, GIF, BMP, and PNG) cannot exceed 240x320 pixels for Notices and 240x320 pixels for Logos. Only one image at a time can be used as a logo or notice.
- **Sound:** Click this checkbox to enable and add custom event sounds. Click an event from the list and then click **Add** to locate and add a new sound file. Click **Delete** to remove custom sound files or **Play** to preview a custom sound file.

5.1.7.10 T&A tab

The T&A tab allows you to configure the mode and key settings for an X-Station device. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

TA Key	Caption	Schedule	Fixed or Not	Use Relay	Event Type
F1	In	No Time	Use	Not Use	Not Use
F2	Out	No Time	Not Use	Not Use	Not Use
F3	In Duty	No Time	Not Use	Use	Not Use
F4	Out Duty	No Time	Not Use	Not Use	Not Use

T & A Key

Function Key: F1 ☐ Fixed Event

Event Caption: ☐ Use Relay

Auto Mode Schedule:

Event Type: Not Use

☐ Regard as normal check-in/check-out event ☐ Only Result

☐ Add work time after this event

Add Modify Delete Delete All

- **T&A Mode:** Set the time and attendance mode:
 - **Not Use:** Disable the time and attendance functions for this device.
 - **Manual:** Users must press the specified key every time they enter or leave to record their T&A events.
 - **Manual Fix:** When a T&A key is pressed, the device will remain in that mode until a different T&A key is pressed.

5. Customize Settings

- **Auto change:** The device will automatically change T&A modes to correspond with the functions specified for a time period.
 - **Event Fix:** The device will perform only the specified T&A function.
- **T&A Key:** Specify which keys to use for T&A events and the event types associated with them:
 - **Function Key:** Select a function key from the drop-down list to assign a T&A event (*1-*15). If you are using the Event Fix mode, you can click the checkbox to the right to designate a fixed event.
 - **Event Caption:** Enter a caption for the event.
 - **Auto Mode Schedule:** When using the Auto Change mode, you can specify when the event will occur by selecting a timezone in the drop-down list. For more information on creating a timezone, see section 3.7.1.
 - **Event Type:** Set the type of event to assign to the key (*Not Use, Check In, Check Out, In, or Out*). In/Out indicates the general check in/out events during a day whereas Check In/Out indicates the formal check in/out events upon arrival and departure at work—or the first check-in and the last check-out events on that day. When you choose Check In or Check Out, you can enable the “Regard as normal check-in/check-out event” option. If this option is enabled, users using the appropriate keys will be regarded arriving or leaving on time at work even though they actually come late or leave early. If you enable the “Only Result” option, they appear being on time on T&A reports but their work time will be calculated correctly based on their actual check in/out time. If you choose *Out*, you can enable the “Add work time after this event” option. If this option is enabled, users using the appropriate key will be considered working for the remainder of the time slot even though they leave the office early.

5. Customize Settings

5.1.7.11 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for an X-Station device. Click **Change Format** to launch the Wiegand Configuration wizard. For more information on configuring the Wiegand format, please see section 3.2.13.

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will process ID data from networked devices and RF card readers in the same way (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.
- **Wiegand In/Out:** Assign the function of the Wiegand input or output:
 - **Wiegand (User) In:** The ID field of the Wiegand string is interpreted as a user ID.
 - **Wiegand (Card) In:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand (User) Out:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand (Card) Out:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.

5.1.8 Customize Settings for BioStation T2 Devices

The sections below describe the settings available for BioStation T2 devices. Customize the way BioStation T2 devices function by changing these settings to suit your particular environment and operational needs.

5. Customize Settings

5.1.8.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for BioStation T2 devices.

The screenshot shows the 'Operation Mode' tab in the BioStation T2 configuration software. The window has a top navigation bar with tabs: Operation Mode, Fingerprint, Camera, Network, Access Control, Interphone, Input, Output, Black List, Display/Sound, T & A, and Wiegand. The 'Operation Mode' tab is active. Below the navigation bar, there is a 'BioStation T2 Time' section with a 'Date' field (2011-06-21), a 'Time' field (오후 10:32:18), and a 'Sync with Host PC Time' checkbox. There are 'Get Time' and 'Set Time' buttons. Below this, there are two main sections: 'ID Operation Mode' and 'Card Operation Mode'. Each section contains several rows of authentication modes with corresponding dropdown menus for time settings. For example, 'ID + Fingerprint' can be set to 'No Time' or 'Always'. The 'ID Operation Mode' section also includes a 'Fingerprint Operation Mode' subsection. The 'Card Operation Mode' section includes 'Private Auth', 'Double Mode', 'Detect Face', 'Server Matching', and 'Matching Timeout'. At the bottom, there is a 'Mifare' section with 'Not use Mifare' and 'Use Template on Card' checkboxes, and a 'View Mifare Layout' button. Below that is a 'Card ID Format' section with 'Format Type', 'Byte Order', and 'Bit Order' dropdowns.

- **BioStation T2 Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to get the time of the local PC which BioStar client program is installed on. The time will be displayed in the **Date** and **Time** spin boxes right below this option and you can set the device's time to match this time by clicking **Set Time**.
 - **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **ID Operation Mode:** The drop-down lists in this area allow you to control the authentication mode by schedule. For example, you can choose a normal authentication mode for working hours and a more strict authentication mode for hours outside the normal schedule. You can specify authentication modes either by device or by user (see section 5.4.1). Unless a particular mode is specified for a user, the device authentication mode will apply.
 - **ID + Fingerprint:** Set the device to require ID plus fingerprint authorization (*Always*, or *No Time*).
 - **ID + Password:** Set the device to require ID plus password authorization (*Always*, or *No Time*).
 - **ID + Fingerprint/Password:** Set the device to require ID plus fingerprint or password authorization (*Always*, or *No Time*).

5. Customize Settings

- **ID + Fingerprint + Password:** Set the device to require ID plus fingerprint plus password authorization (*Always, or No Time*).
- **Card Operation Mode**
 - **Card Only:** Set the device to require only card authorization (*Always, or No Time*).
 - **Card + Fingerprint:** Set the device to require card plus fingerprint authorization (*Always, or No Time*).
 - **Card + Password:** Set the device to require card plus password authorization (*Always, or No Time*).
 - **Card + Fingerprint/Password:** Set the device to require card plus fingerprint or password authorization (*Always, or No Time*).
 - **Card + Fingerprint + Password:** Set the device to require card plus fingerprint plus password authorization (*Always, or No Time*).
- **Fingerprint Operation Mode**
 - **Fingerprint:** Set the device to require only fingerprint authorization (*Always, or No Time*).
 - **Fingerprint + Password:** Set the device to require fingerprint plus password authorization (*Always, or No Time*).
 - **Func Key + Fingerprint:** Set the device to require function key plus fingerprint authorization (*Always, or No Time*).
 - **Func Key + Fingerprint + Password:** Set the device to require function key plus fingerprint plus password authorization (*Always, or No Time*).
- **Other options**
 - **Private Auth:** Set the device to allow a private authorization method (*Disable or Enable*). If enabled, the authentication mode of the user will be determined by a user's "Authorization" setting, which is located on the Details tab. If disabled, the authentication mode will be determined by operation mode settings of the device.
 - **Double Mode:** Set the device to require authentication of two users' IDs, access cards or fingerprints (*Always, or No Time*). The timeout for presenting the second authentication is 15 seconds.
 - **Detect Face:** Set the device to capture a face image. Upon successful authentication, the captured image is stored in the event log.
 - **Server Matching:** Enable this setting to perform user ID, fingerprint or card ID matching at the BioStar server, instead of the device. When this mode is enabled, the devices will send the user ID, fingerprint template or card ID to the server to verify a match. This mode is useful when you have more users than can be downloaded to a device or user information cannot be distributed due to security concerns.
 - **Matching Timeout:** Set the length of time before the device will timeout when trying to identify a fingerprint match within the device itself or via the server (*3, 7, 10, 15, 20, 30 sec*).

5. Customize Settings

5. Customize Settings

- **Mifare**
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Template on Card:** Check this box to use the template on the MIFARE card for authorization.
 - **View Mifare Layout:** Click this button to view the MIFARE layout used by the device. For more information about configuring MIFARE layouts, please see section 3.6.4.7.
- **Card ID Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If "Normal" is selected, the card ID data will be processed in its original form. If "Wiegand" is selected, devices will interpret card ID data according to the Wiegand format settings.
 - **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
 - **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).
 - In Double mode, setting option which includes an admin user is supported. In Double mode, door relay will not open unless an admin user authenticates within 15 seconds after a normal user authenticates. If this option is not activated, the door relay will open when other two users, regardless of whether being a normal user or an admin user.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

 - Use Wiegand Card Bypass: This feature makes the device to send out Card CSN according to Wiegand setting of BioStar without having to conduct a matching. This is designed to be used as a dummy reader in a connection with a third party access control unit through Wiegand. When a card data input is made, the device sends out the data through Wiegand without going through a matching process.

Note: This feature is supported from the FW versions, BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3.

5.1.8.2 Fingerprint tab

The Fingerprint tab allows you to customize fingerprint authorization settings for BioStation T2 devices.

5. Customize Settings

The screenshot shows a configuration window with a tabbed interface. The 'Fingerprint' tab is selected. It contains two main sections: 'Fingerprint' and 'Template Option'. The 'Fingerprint' section has six settings: Security Level (Normal), Sensitivity (7(Max)), Scan Timeout (10 sec), 1:N Fast Mode (Auto), View Image (No), and Check Fake Finger (Disable). The 'Template Option' section has one setting: Template Type (Suprema Template).

Fingerprint	
Security Level	Normal
Sensitivity	7(Max)
Scan Timeout	10 sec
1:N Fast Mode	Auto
View Image	No
Check Fake Finger	Disable

Template Option	
Template Type	Suprema Template

- **Fingerprint**
 - **Security Level:** Set the security level to use for fingerprint authorization (*Normal*, *Secure*, or *Most Secure*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.
 - **Sensitivity:** Set the sensitivity of the fingerprint scanner (*0 [Min]* to *7 [Max]*). A higher sensitivity setting will result in more easily captured fingerprint scans, but also increases the sensitivity to external noise.
 - **Scan Timeout:** Set the length of time before the fingerprint scanner will timeout (*1 sec* to *20 sec*). If a user does not place a finger on the device within the timeout period, the authorization will fail.
 - **1: N Fast Mode:** Set the device to use Fast Mode to reduce the amount of time required for matching fingerprints (*Auto*, *Normal*, *Fast*, or *Fastest*). Setting Fast Mode to *Auto* will adjust the matching speed according to the number of enrolled templates.
 - **View Image:** Set to show or hide fingerprint images on the BioStation T2 display (*Yes* or *No*).
 - **Check Fake Finger:** Set the device to detect the use of fake fingerprints, such as those made from silicon or rubber, and prevent unauthorized access.
 - **Template Option:** Displays the global fingerprint template settings. For more information about fingerprint templates, see section 4.9.

5.1.8.3 Camera tab

The Camera tab allows you to control how the camera is used for authorization purposes. In the Timezone field, select a timezone for the specified event. Click **Add** to select an event that will activate the camera. Click **Apply** to save your settings.

5. Customize Settings

The screenshot shows the 'Camera Event' configuration page. At the top, there is a navigation bar with tabs: Operation Mode, Fingerprint, Camera, Network, Access Control, Interphone, Input, Output, Black List, Display/Sound, T & A, and Wiegand. The 'Camera' tab is selected. Below the navigation bar, the 'Camera Event' section is visible. It contains a 'Timezone' dropdown menu with 'Always' selected and 'No Time' as an option. To the right of the 'Timezone' dropdown is an 'Event' list box, which is currently empty. Above the 'Event' list box are 'Add' and 'Delete' buttons.

5.1.8.4 Network tab

The Network tab allows you to customize network and server settings for BioStation T2 devices.

The screenshot shows the 'Network' configuration page. At the top, there is a navigation bar with tabs: Operation Mode, Fingerprint, Camera, Network, Access Control, Interphone, Input, Output, Black List, Display/Sound, T & A, and Wiegand. The 'Network' tab is selected. Below the navigation bar, the 'Network' section is visible. It contains several configuration options: 'TCP/IP Setting' with 'Lan Type' set to 'Ethernet' and 'Port' set to '1470'; 'WLAN' with 'Preset #1' selected and a 'Change Setting' button; 'IP' settings with 'Use DHCP' selected and 'Not Use DHCP' as an option, showing 'IP Address' as '192 . 168 . 0 . 212' and 'Subnet' as '255 . 255 . 255 . 0'; 'Gateway' set to '192 . 168 . 0 . 1' and 'Max Conn.' set to '1'; 'Server' settings with 'Not use' selected and 'Use' as an option, showing 'IP Address' as '.' ' and 'Server Port' set to '1480'; 'Time sync with Server' checkbox; 'Serial Setting' with 'RS485 Network' set to 'Slave', 'RS485 Baudrate' set to '115200', and 'RS232 Baudrate' set to 'Not Use'; and 'USB Setting' with 'USB' set to 'Disable USB port' and 'USB Memory' set to 'Disable USB port'.

5. Customize Settings

- **TCP/IP Setting**
 - **LAN Type:** Select a type of LAN connection from the drop-down list (*Disable, Ethernet, or Wireless LAN*).
 - **Port:** Specify a port to use for the device.
- **WLAN**
 - **Change setting:** Click to specify settings for a wireless local area network (WLAN). This option is active only when WLAN is selected as the TCP/IP setting. For more information about configuring settings for a WLAN, see section 3.2.4.
- **IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.
 - **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Max Conn.:** Specify the maximum number of connections to allow.
- **Server**
 - **Use:** Click this radio button to enable the server mode.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Server Port:** Specify the port used to connect to the server.
 - **Time sync with Server:** Check this box to synchronize the device's time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **RS485 Network**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, or Slave*). For more information about RS485 modes, please see sections 3.2.1 and 3.2.2.
- **RS485**
 - **Baudrate:** Set the baud rate for a device connected via RS485 (9600 to 115200).
- **RS232**
 - **Baudrate:** Set the baud rate for a device connected via RS232 (9600 to 115200).
- **USB:** Click the radio buttons to enable or disable the USB port on the BioStation T2 device.
- **USB Memory:** Click the radio buttons to enable or disable the USB memory on the BioStation T2 device.

5. Customize Settings

5.1.8.5 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups for a BioStation T2 device.

The screenshot shows the 'Access Control' tab selected in the configuration menu. The 'Entrance Limit Setting' section includes a 'Timed APB(min)' spinner set to 0, four checkboxes for 'Option 1' through 'Option 4' (all unchecked), and four 'Max Number of Entrance' spinners, all set to 0. The 'Default Group Setting' section shows a 'Default Group' dropdown menu currently set to 'Full Access'.

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's ID, access card, or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.

5.1.8.6 Interphone tab

The Interphone tab allows you to set the device to act as an interphone to allow communication between people on either side of the door.

The screenshot shows the 'Interphone' tab selected. The 'Type' dropdown is set to 'Not Use'. The 'VOIP Server IP' field is pre-filled with '255 . 255 . 255 . 255'. Other fields include 'VOIP Display Name', 'VOIP ID', 'Speaker Gain' (set to 10), 'VOIP Phone Number', 'VOIP Password', and 'Mic Gain' (set to 6).

- **Type** – select one of the following options:
 - **Analogue Interphone:** Choose this option to enable the analogue interphone.
 - **IP Interphone:** Choose this option to enable the VoIP feature. A telephone is required.

5. Customize Settings


- **BioStar Videophone:** Choose this option to enable the videophone feature that supports both video and voice calls. The supplied PC software is required. The BioStar vidoephone works only with the device firmware version of BioStation T2 V1.1 or later.

When you select **IP Interphone** in the Type drop-down list, specify the following settings:

- **VoIP Server IP:** Specify an IP address for the VoIP server.
- **VoIP Phone Number:** Specify a phone number for the interphone.
- **VoIP Display Name:** Specify a name to use for communication through the interphone.
- **VoIP ID:** Specify a user name to access the VoIP server.
- **VoIP Password:** Specify a password to access the VoIP server.
- **VoIP Speaker Gain:** Specify the volume of the speaker.
- **VoIP Mic Gain:** Specify the volume of the microphone.

5.1.8.7 Input tab

The input tab lists input settings you have specified for a BioStation T2 device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

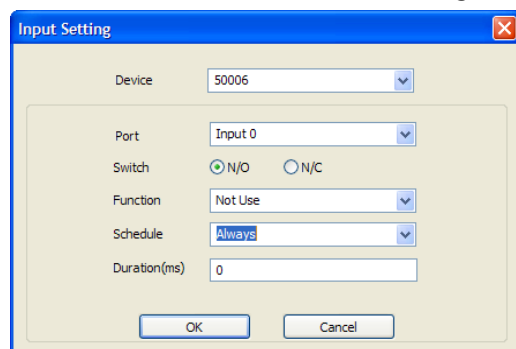

- **Device:** Select the BioStation T2 device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O*: *normally open* or *N/C*: *normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.

5. Customize Settings

- **Generic Input:** The input port will be monitored for a triggering action (events specified with “Detect Input 0-3” in the **Output Setting** dialog box —see section 5.1.1.6).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a “Close Door” command via the Door/Zone Monitoring tab (see section 4.4.1).
 - **Release All Alarms:** Cancel alarms associated with this device.
 - **Restart Device:** Restart the device.
 - **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process fingerprints or card inputs. To enable communication again, an administrator must provide authentication at the device.
- **Schedule:** Set the schedule during which the inputs will be monitored (*Always or No Time*).
 - **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5.1.8.8 Output tab

The Output tab lists output settings you have specified for a BioStation T2 device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

The screenshot shows the 'Output Setting' dialog box. At the top, there are dropdowns for 'Device Type' (set to '50006') and 'port' (set to 'Relay 0'). Below this, there are two sections: 'Alarm On Event' and 'Alarm Off Event'. Each section contains a large empty box on the left and a form on the right. The form has dropdowns for 'Event' (set to 'Auth Success'), 'Device' (set to '50006'), and 'Signal Setting' (set to 'Signal 1'), along with a 'Priority' text field (set to '1'). Below the form are 'Add', 'Delete', and 'Delete All' buttons. At the bottom of the dialog are 'Save' and 'Cancel' buttons.

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** Select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.

5. Customize Settings

5. Customize Settings

- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.
- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.
 - **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Auth Duress, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.

Priority: Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, a priority 2 “alarm on” event (activate) can be overridden only by an “alarm off” (deactivate) event with a priority of 1 or 2.

5.1.8.9 Black List tab

The Black List tab allows you to register user IDs or access card numbers and prevent them from being authenticated with the device.

[illegible]

5. Customize Settings

- **Current Count:** The total number of the user IDs and access cards that have been registered.
- **Reserved :** The remaining number of user IDs and access cards to be registered.

5.1.8.10 Display/Sound tab

The Display/Sound tab allows you to customize the BioStation T2 display and event sounds. To save changes to display or sound settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

Operation Mode | Fingerprint | Camera | Network | Access Control | Interphone | Input | Output | Black List | **Display/Sound** | T & A | Wiegand |

Display/Sound

Language: Korean | Background: Logo | Notice

Menu Timeout: 20 sec | Volume: 70 %

Backlight Timeout: 30 sec | Msg Timeout: 2 sec

Theme: Theme 1 | Clock Display: Enable

Use Voice: Disable

Resource File: No Change | ...

☐ Background Image

Type: Logo

☐ Sound

Status: .wav File

Start
Auth Success
Unregister User
Enroll Success
Enroll Fail

- **Display/Sound**
 - **Language:** Set the language to use on the display (*Korean, English, or Custom*).
 - **Menu Timeout:** Set the length of time before the display will return to the idle screen.
 - **Backlight Timeout:** Set the length of time before the display goes dim.
 - **Theme:** set a display theme.
 - **Use Voice:** Set the device to notify you with voice messages (*Disable or Enable*).
 - **Resource File:** Set the language resource file to use for the BioStar interface (*No Change, English, Korean, or Custom*). To use a language resource file other than English or Korean, select *Custom* and then click the ellipsis (...) button to locate the resource file.
 - **Background:** Set the type of background for the BioStation T2 display (*Logo, Notice, or Slide Show*). Supported file types (JPG, GIF, BMP, PNG and PDF) cannot exceed 480x800 pixels each. Only one image at a

5. Customize Settings

time can be used as a logo or notice, while up to 16 images can be displayed (at a set interval) in a slide show.

- **Volume:** Set the volume of the BioStation device (0% to 100%).
- **Msg Timeout:** Set the length of time that a failure or confirmation message will be displayed.
- **Clock Display:** Set to display the current time on the device (Enable or Disable).
- **Background Image:** Click this checkbox to upload new background images. Click the plus sign (+) to locate and add a new image file.
 - **Type:** Set the type of background for the BioStation display (*Logo or Notice*). Supported file types (JPG, GIF, BMP, PNG and PDF) cannot exceed 480x800 pixels for Notices and 480x800 pixels for Logos. Only one image at a time can be used as a logo or notice.
- **Sound:** Click this checkbox to enable and add custom event sounds. Click an event from the list and then click the plus sign (+) to locate and add a new sound file. Click **Add** to add new sound files, **Delete** to remove sound files, or **Play** to preview a selected sound file.

5.1.8.11 T&A tab

The T&A tab allows you to configure the mode and key settings for a BioStation T2 device. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

TA Key	Caption	Schedule	Fixed or Not	Use Relay	Event Type
F1	In	No Time	Use	Use	Not Use
F2	Out	No Time	Not Use	Not Use	Not Use
F3	In Duty	No Time	Not Use	Use	Not Use
F4	Out Duty	No Time	Not Use	Not Use	Not Use

T & A Key

Function Key: F1 ☐ Fixed Event

Event Caption: ☒ Use Relay

Auto Mode Schedule:

Event Type: Not Use

☐ Regard as normal check-in/check-out event ☐ Only Result

☐ Add work time after this event

Add Modify Delete Delete All

- **T&A Mode:** Set the time and attendance mode:
 - **Not Use:** Disable the time and attendance functions for this device.
 - **Manual:** Users must press the specified key every time they enter or leave to record their T&A events.

5. Customize Settings

- **Manual Fix:** When a T&A key is pressed, the device will remain in that mode until a different T&A key is pressed.
 - **Auto change:** The device will automatically change T&A modes to correspond with the functions specified for a time period.
 - **Event Fix:** The device will perform only the specified T&A function.
- **T&A Key:** Specify which keys to use for T&A events and the event types associated with them:
 - **Function Key:** Select a function key from the drop-down list to assign a T&A event (*F1-F4, EXT01-EXT12*). If you are using the Event Fix mode, you can click the checkbox to the right to designate a fixed event.
 - **Event Caption:** Enter a caption for the event.
 - **Auto Mode Schedule:** When using the Auto Change mode, you can specify when the event will occur by selecting a timezone in the drop-down list. For more information on creating a timezone, please see section 3.7.1.
 - **Event Type:** Set the type of event to assign to the key (*Not Use, Check In, Check Out, In, or Out*). In/Out indicates the general check in/out events during a day whereas Check In/Out indicates the formal check in/out events upon arrival and departure at work—or the first check-in and the last check-out events on that day. When you choose Check In or Check Out, you can enable the “Regard as normal check-in/check-out event” option. If this option is enabled, users who activate the appropriate keys will be regarded as arriving or leaving on time at work even though they actually arrive late or leave early. If you enable the “Only Result” option, they appear being on time on T&A reports but their work time will be calculated correctly based on their actual check in/out time. If you choose *Out*, you can enable the “Add work time after this event” option. If this option is enabled, users activating the appropriate key will be considered working for the remainder of the time slot even if they leave the office early.

5. Customize Settings

5.1.8.12 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for a BioStation T2 device. Click **Change Format** to launch the Wiegand Configuration wizard. For more information on configuring the Wiegand format, see section 3.2.13.

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will treat connected RF devices as part of their host devices (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.
- **Wiegand In/Out:** Assign the Wiegand input or output:
 - **Wiegand (User) In:** The ID field of the Wiegand string is interpreted as a user ID.
 - **Wiegand (Card) In:** The ID field of the Wiegand string is interpreted as a card ID.
 - **Wiegand (User) Out:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.
 - **Wiegand (Card) Out:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.

5.1.9 Customize Settings for FaceStation Devices

The sections below describe the settings available for FaceStation devices. Customize the way FaceStation devices function by changing these settings to suit your particular environment and operational needs.

5.1.9.1 Operation Mode tab

The Operation Mode tab allows you to customize time and various operation modes settings for FaceStation devices.

5. Customize Settings

- **FaceStation Time**
 - **Date:** Manually set the device date with a drop-down calendar.
 - **Time:** Manually set the device time.
 - **Sync with Host PC Time:** Check this box to automatically synchronize the device time with the time of the host computer.
 - **Get Time:** Get the current time displayed by the device.
 - **Set Time:** Set the time on the device.
- **ID Operation Mode:** The drop-down lists in this area allow you to control the authentication mode by schedule. For example, you can choose a normal authentication mode for working hours and a more strict authentication mode for hours outside the normal schedule. You can specify authentication modes either by device or by user (see section 5.4.1). Unless a particular mode is specified for a user, the device authentication mode will apply.
 - **ID + Face:** Set the device to require ID plus face recognition for authorization (*Always*, *New Time Zone*, or *No Time*).
 - **ID + Password:** Set the device to require ID plus password authorization (*Always*, *New Time Zone*, or *No Time*).
 - **ID + Face/Password:** Set the device to require ID plus face recognition or password authorization (*Always*, *New Time Zone*, or *No Time*).
 - **ID + Face + Password:** Set the device to require ID plus face recognition plus password authorization (*Always*, *New Time Zone*, or *No Time*).

5. Customize Settings


- **Card Operation Mode**
 - **Card Only:** Set the device to require only card authorization (*Always, New Time Zone, or No Time*).
 - **Card + Face:** Set the device to require card plus face recognition for authorization (*Always, New Time Zone, or No Time*).
 - **Card + Password:** Set the device to require card plus password authorization (*Always, New Time Zone, or No Time*).
 - **Card + Face/Password:** Set the device to require card plus face recognition or password authorization (*Always, New Time Zone, or No Time*).
 - **Card + Face + Password:** Set the device to require card plus face recognition plus password authorization (*Always, New Time Zone, or No Time*).
- **Face Operation Mode**
 - **Face:** Set the device to require only face recognition for authorization (*Always, New Time Zone, or No Time*).
 - **Face + Password:** Set the device to require face recognition plus password authorization (*Always, New Time Zone, or No Time*).
 - **Func Key + Face:** Set the device to require function key plus face recognition for authorization (*Always, New Time Zone, or No Time*).
 - **Func Key + Face + Password:** Set the device to require function key plus face recognition plus password authorization (*Always, New Time Zone, or No Time*).
 - **Face + Func Key:** Set the device to require face recognition plus function key authorization, and then immediately proceed to T&A functions (*Always, New Time Zone, or No Time*).
 - **Face + Password + Func Key:** Set the device to require face recognition plus password plus function key authorization, and then immediately proceed to T&A functions (*Always, New Time Zone, or No Time*).
- **Other options**
 - **Private Auth:** Set the device to allow a private authorization method (*Disable or Enable*). If enabled, the authentication mode of the user will be determined by a user's "Authorization" setting, which is located on the Details tab. If disabled, the authentication mode will be determined by operation mode settings of the device.
 - **Double Mode:** Set the device to require authentication of two users' IDs, access cards or face recognitions (*Always, New Time Zone, or No Time*). The timeout for presenting the second authentication is 15 seconds.
 - **Detect Face:** Set the device to capture a face image (*Use or Not Use*). Upon successful authentication, the captured image is stored in the event log.

5. Customize Settings

- **Matching Timeout:** Set the length of time before the device will timeout when trying to identify a fingerprint match within the device itself or via the server (3, 7, 10, 15, 20, 30 sec).
- **Mifare**
 - **Not use Mifare:** Check this box to disable MIFARE card authorization.
 - **Use Template on Card:** Not available with FaceStation devices.
 - **View Mifare Layout:** Not available with FaceStation devices.
- **Card ID Format**
 - **Format Type:** Set the type of pre-processing to occur on card ID data (*Normal* or *Wiegand*). If “Normal” is selected, the card ID data will be processed in its original form. If “Wiegand” is selected, devices will interpret card ID data according to the Wiegand format settings.
 - **Byte Order:** Specify whether to swap ID card data between cards and devices by most significant byte (*MSB*) or least significant byte (*LSB*).
 - **Bit Order:** Specify whether to swap ID card data between cards and devices by most significant bit (*MSB*) or least significant bit (*LSB*).

5.1.9.2 Face tab

The Face tab allows you to customize face recognition settings for FaceStation devices.

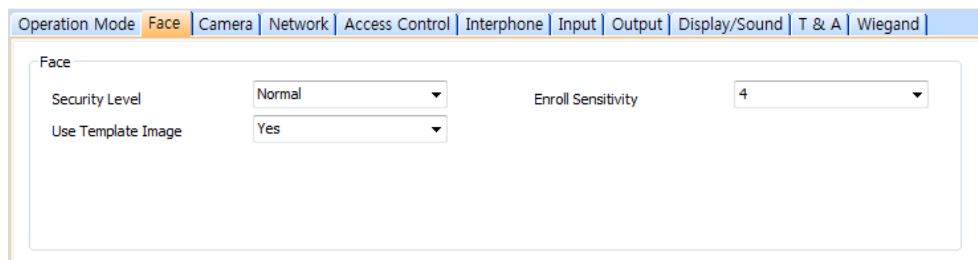


The screenshot shows the 'Face' configuration tab in a software interface. At the top, there is a navigation bar with tabs: Operation Mode, Face (selected), Camera, Network, Access Control, Interphone, Input, Output, Display/Sound, T & A, and Wiegand. Below the navigation bar, the 'Face' section contains three settings: 'Security Level' set to 'Normal', 'Use Template Image' set to 'Yes', and 'Enroll Sensitivity' set to '4'. Each setting is represented by a label and a dropdown menu.

- **Security Level:** Set the security level to use for face recognition (*Normal*, *Secure*, or *Most Secure*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.
- **Enroll Sensitivity:** Set the sensitivity of the face recognition system (0 [Min] to 9 [Max]). A higher sensitivity setting will result in easier face recognition, but also increases the sensitivity to external visual noise.
- **Use Template Image:** Set whether or not to display user face template images in the FaceStation device.

5.1.9.3 Camera tab


The Camera tab allows you to control how the camera is used for authorization purposes. In the Timezone field, select a timezone for the specified event. Click **Add** to select an event that will activate the camera. Click **Apply** to save your settings.

5. Customize Settings

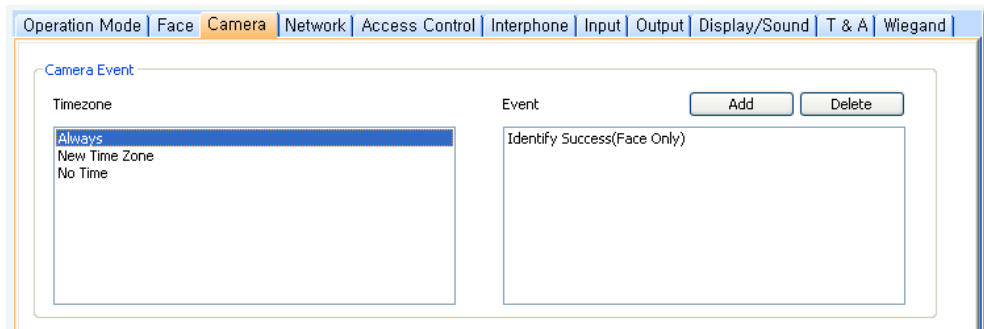

5.1.9.4 Network tab

The Network tab allows you to customize network and server settings for FaceStation devices.

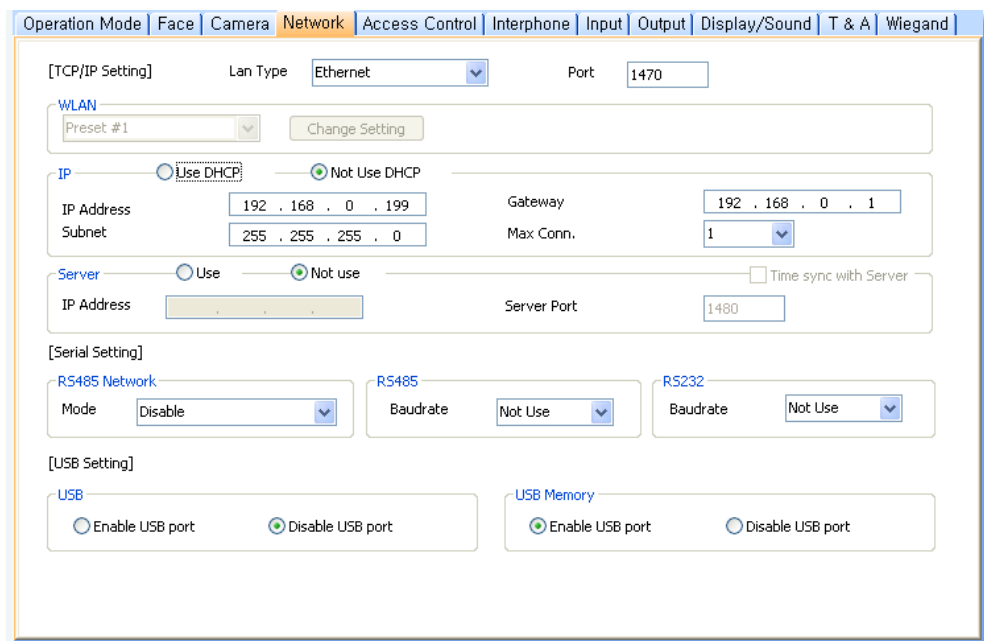

- **TCP/IP Setting**
 - **LAN Type:** Select a type of LAN connection from the drop-down list (*Disable, Ethernet, or Wireless LAN*).
 - **Port:** Specify a port to use for the device.
- **WLAN**
 - **Change setting:** Click to specify settings for a wireless local area network (WLAN). This option is active only when WLAN is selected as the TCP/IP setting. For more information about configuring settings for a WLAN, please see section 3.2.4.
- **IP**
 - **Use DHCP:** Click this radio button to enable the dynamic host configuration protocol (DHCP) for the device.

5. Customize Settings

- **Not Use DHCP:** Click this radio button to disable the dynamic host configuration protocol (DHCP) for this device.
 - **IP Address:** Specify an IP address for the device.
 - **Subnet:** Specify a subnet address for the device.
 - **Gateway:** Specify a network gateway.
 - **Max Conn.:** Specify the maximum number of connections to allow.
- **Server**
 - **Use:** Click this radio button to enable the server mode.
 - **Not use:** Click this radio button to disable server settings.
 - **IP Address:** Specify an IP address for the BioStar server.
 - **Server Port:** Specify the port used to connect to the server.
 - **Time sync with Server:** Check this box to synchronize the device' time with the server. The device polls for a time change on the server every one hour and its time will be synchronized with the server when the device's time and the server's time differ by more than 5 seconds.
- **RS485 Network**
 - **Mode:** Set the mode for a device connected via RS485 (*Disable, Host, or Slave*). For more information about RS485 modes, please see sections 3.2.1 and 3.2.2.
- **RS485**
 - **Baudrate:** Set the baud rate for a device connected via RS485 (9600 to 115200).
- **RS232**
 - **Baudrate:** Set the baud rate for a device connected via RS232 (9600 to 115200).
- **USB:** Click the radio buttons to enable or disable the USB port on the FaceStation device.
- **USB Memory:** Click the radio buttons to enable or disable the USB memory on the FaceStation device.

5. Customize Settings

5.1.9.5 Access Control tab

The Access Control tab allows you to customize entrance limit settings and default access groups for a FaceStation device.

The screenshot shows the 'Access Control' tab selected in the configuration menu. The 'Entrance Limit Setting' section includes a 'Timed APB(min)' dropdown set to 0, and four options (Option 1 to Option 4) each with a checkbox, two time range input fields (e.g., 0000 ~ 0000), and a 'Max Number of Entrance' input field set to 0. The 'Default Group Setting' section shows a 'Default Group' dropdown set to 'Full Access'.

- **Entrance Limit Setting**
 - **Timed APB (min):** Set the duration (in minutes) that a user will be unable to regain entry to an area via the device. Once a user has gained entry, the device will reject the user's ID, access card, or fingerprint authorization for the time period specified here.
 - **Option 1-4:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
 - **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Default Group Setting:** Select a default access group to be applied to new users who have not been assigned to another access group.

5.1.9.6 Interphone tab

The Interphone tab allows you to set the device to act as an interphone to allow communication between people on either side of the door.

The screenshot shows the 'Interphone' tab selected. The 'Type' dropdown is set to 'Not Use'. The 'Interphone' section contains fields for 'VOIP Server IP' (0 . 0 . 0 . 0), 'VOIP Display Name', 'VOIP ID', 'Speaker Gain' (10), 'VOIP Phone Number', 'VOIP Password', and 'Mic Gain' (6). The 'Videophone' section includes a 'Mode' dropdown set to 'Single', a 'Device Password' field, and an unchecked 'Door Control' checkbox.

5. Customize Settings

- **Type:** Select one of the following options:
 - **Analogue Interphone:** Choose this option to enable the analogue interphone.
 - **IP Interphone:** Choose this option to enable the VoIP feature. A telephone is required.
 - **BioStar Videophone:** Choose this option to enable the videophone feature that supports both video and voice calls. The supplied PC software is required. The BioStar videophone works only with the device firmware version of FaceStation V1.0 or later.

When you select **IP Interphone** in the Type drop-down list, specify the following settings:

- **VoIP Server IP:** Specify an IP address for VoIP server.
- **VoIP Display Name:** Specify a name to use for communication through the interphone.
- **VoIP Phone Number:** Specify a phone number for the interphone.
- **VoIP ID:** Specify a user name to access the VoIP server.
- **VoIP Password:** Specify a password to access the VoIP server.
- **Speaker Gain:** Specify the volume of the speaker.
- **Mic Gain:** Specify the volume of the microphone.


When you select **Videophone** in the Type drop-down list, specify the following settings:

- **Mode:** Specify the videophone purpose (*Single* or *Extension*).
- **Door Control:** Check this option if the videophone is used for door access.
- **Device Password:** Enter the videophone device password.

5. Customize Settings

5.1.9.7 Input tab

The input tab lists input settings you have specified for a FaceStation device. Buttons at the bottom of the tab allow you to add, modify, or delete input settings. To add or modify settings, you must specify them from the **Input Setting** dialog box. For more information about configuring input settings, see section 3.10.3.2.

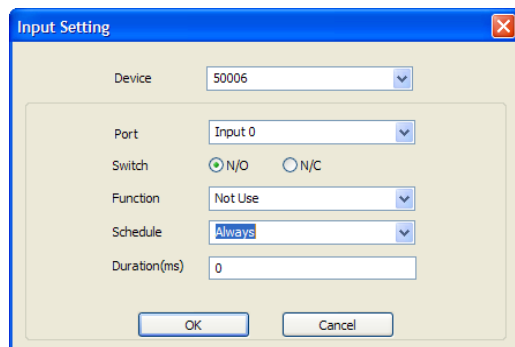


- **Device:** Select the FaceStation device for which you will add or modify settings.
- **Port:** Select an input port (*Input 0*, *Input 1*, or *Tamper*). For Secure I/O devices, these settings are available: *Input 0*, *Input 1*, *Input 2*, *Input 3*.
- **Switch:** Click the radio buttons to specify the normal position of the input switch (*N/O: normally open* or *N/C: normally closed*).
- **Function:** Select an action to associate with the input:
 - **Not Use:** The input port will not be monitored.
 - **Generic Input:** The input port will be monitored for a triggering action (events specified with "Detect Input 0-3" in the **Output Setting** dialog box —see section 5.1.1.6).
 - **Emergency Open:** Open doors controlled by this device. The normal door open period will be ignored and doors will remain open until an operator sends a "Close Door" command via the Door/Zone Monitoring tab (see section 4.4.1).
 - **Release All Alarms:** Cancel alarms associated with this device.
 - **Restart Device:** Restart the device.
 - **Disable Device:** Disable the device. A disabled device will not communicate with the BioStar server or process face or card inputs. To enable communication again, an administrator must provide authentication at the device.
- **Schedule:** Set the schedule during which the inputs will be monitored (*Always* or *No Time*).
- **Duration (ms):** Set the duration (in milliseconds) an input signal must last to trigger the specified action.

5. Customize Settings

5.1.9.8 Output tab

The Output tab lists output settings you have specified for a FaceStation device. Buttons at the bottom of the tab allow you to add, modify, or delete output settings. To add or modify settings, you must specify them from the **Output Setting** dialog box. For more information about configuring output settings, see section 3.10.3.1.

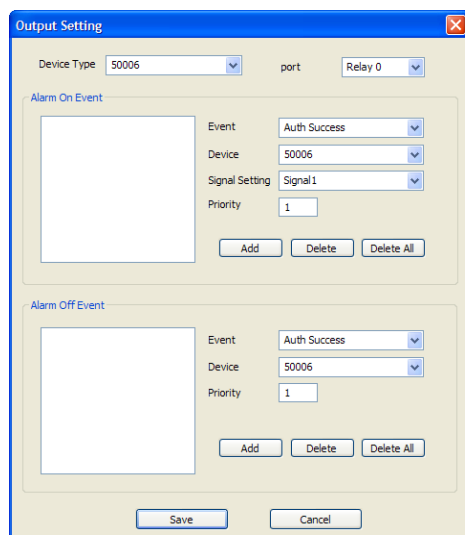

- **Device Type:** Select the device type for which you will add or modify settings.
- **Port:** select an output port (*Relay 0*). For Secure I/O devices, these settings are available: *Relay 0* or *Relay 1*.
- **Alarm On Event:** Specify settings and click **Add** to add the event to the Alarm On Event list. These events will activate an alarm.
 - **Event:** Select an event that will activate an alarm (*Auth Success, Auth Fail, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
 - **Signal Setting:** Select a signal setting that you have previously configured from the menu bar (**Option > Event > Output Port Setting**).
 - **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, an alarm on (activate) event with a priority of 2 can be canceled only by an alarm off (deactivate) event with a priority of 1 or 2.

5. Customize Settings

- **Alarm Off Event:** Specify settings and click **Add** to add the event to the Alarm Off Event list. These events will deactivate an alarm.
 - **Event:** Select an event that will deactivate an alarm (*Auth Success, Auth Fail, Anti-passback Fail, Access Not Granted, Entrance Limited, Admin Auth Success, Tamper On, Door Opened, Door Close, Forced Open Door, Held Open Door, or Detect Input #1-3*).
 - **Device:** Select the device to monitor for an alarm event.
- **Priority:** Set a priority for the event. Only an event with an equal or higher priority (1 is the highest) can override a previous event. For example, a priority 2 "alarm on" event (activate) can be overridden only by an "alarm off" (deactivate) event with a priority of 1 or 2.

5.1.9.9 Display/Sound tab

The Display/Sound tab allows you to customize the FaceStation display and event sounds. To save changes to display or sound settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

Operation Mode | Face | Camera | Network | Access Control | Interphone | Input | Output | **Display/Sound** | T & A | Wiegand |

Display/Sound

Language: English | Background: Logo | Notice

Menu Timeout: 20 sec | Volume: 70 %

Backlight Timeout: 30 sec | Msg Timeout: 2 sec

Theme: Theme 1 | Clock Display: Enable

Use Voice: Disable

Resource File: No Change | ...

☐ Background Image

Type: Logo

☐ Sound

Status: .wav File

Start

Auth Success

Unregister User

Scan Timeout

Auth Fail

Enroll Success

Enroll Fail

Add | Delete | Play

- **Display/Sound**
 - **Language:** Set the language to use on the display (*Korean, English, or Custom*).
 - **Menu Timeout:** Set the length of time before the display will return to the idle screen (*Infinite, 10 sec, 20 sec, or 30 sec*).
 - **Backlight Timeout:** Set the length of time before the display goes dim (*Infinite, 10 sec, 20 sec, 30 sec, 40 sec, 50 sec, or 60 sec*).
 - **Theme:** set a display theme (*Theme 1-4*)

5. Customize Settings

- **Use Voice:** Set the device to notify you with voice messages (*Disable* or *Enable*).
- **Resource File:** Set the language resource file to use for the BioStar interface (*No Change*, *Korean*, *English*, or *Custom*). To use a language resource file other than English or Korean, select *Custom* and then click the ellipsis (...) button to locate the resource file.
- **Background:** Set the type of background for the FaceStation display (*Logo*, *Notice*, *Slide Show*, or *PDF*). Supported file types (JPG, GIF, BMP, PNG and PDF) cannot exceed 480x800 pixels each. Only one image at a time can be used as a logo or notice, while up to 16 images can be displayed (at a set interval) in a slide show.
- **Volume:** Set the volume of the FaceStation device (0% to 100%).
- **Msg Timeout:** Set the length of time that a failure or confirmation message will be displayed (0.5-5 sec).
- **Clock Display:** Set to display the current time on the device (Enable or Disable).
- **Background Image:** Click this checkbox to upload new background images. Click the plus sign (+) to locate and add a new image file.
 - **Type:** Set the type of background for the FaceStation display (*Logo*, *Notice*, *Slide Show*, or *PDF*). Supported file types (JPG, GIF, BMP, PNG and PDF) cannot exceed 480x800 pixels for Notices and 480x800 pixels for Logos. Only one image at a time can be used as a logo or notice.
- **Sound:** Click this checkbox to enable and add custom event sounds. Click an event from the list and then click the plus sign (+) to locate and add a new sound file. Click **Add** to add new sound files, **Delete** to remove sound files, or **Play** to preview a selected sound file.

5. Customize Settings

5.1.9.10 T&A tab

The T&A tab allows you to configure the mode and key settings for a FaceStation device. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also apply the same settings to other devices by clicking **Apply to Others**.

TA Key	Caption	Schedule	Fixed or Not	Use Relay	Event Type
F1	In	No Time	Use	Use	Not Use
F2	Out	No Time	Not Use	Not Use	Not Use
F3	Break In	No Time	Not Use	Use	Not Use
F4	Break Out	No Time	Not Use	Use	Not Use

T & A Key

Function Key: ☐ Fixed Event

Event Caption:

Auto Mode Schedule:

Event Type: ☐ Use Relay

☐ Regard as normal check-in/check-out event ☐ Only Result

☐ Add work time after this event

- **T&A Mode:** Set the time and attendance mode:
 - **Not Use:** Disable the time and attendance functions for this device.
 - **Manual:** Users must press the specified key every time they enter or leave to record their T&A events.
 - **Manual Fix:** When a T&A key is pressed, the device will remain in that mode until a different T&A key is pressed.
 - **Auto change:** The device will automatically change T&A modes to correspond with the functions specified for a time period.
 - **Event Fix:** The device will perform only the specified T&A function.
- **T&A Key:** Specify which keys to use for T&A events and the event types associated with them:
 - **Function Key:** Select a function key from the drop-down list to assign a T&A event (*F1-F4, EXT01-EXT12*). If you are using the Event Fix mode, you can click the checkbox to the right to designate a fixed event.
 - **Event Caption:** Enter a caption for the event.
 - **Auto Mode Schedule:** When using the Auto Change mode, you can specify when the event will occur by selecting a timezone in the drop-down list. For more information on creating a timezone, see section 3.7.1.

5. Customize Settings

- **Event Type:** Set the type of event to assign to the key (*Not Use, Check In, Check Out, In, or Out*). In/Out indicates the general check in/out events during a day whereas Check In/Out indicates the formal check in/out events upon arrival and departure at work—or the first check-in and the last check-out events on that day. When you choose Check In or Check Out, you can enable the “Regard as normal check-in/check-out event” option. If this option is enabled, users who activate the appropriate keys will be regarded as arriving or leaving on time at work even though they actually arrive late or leave early. If you enable the “Only Result” option, they appear being on time on T&A reports but their work time will be calculated correctly based on their actual check in/out time. If you choose *Out*, you can enable the “Add work time after this event” option. If this option is enabled, users activating the appropriate key will be considered working for the remainder of the time slot even if they leave the office early.

5.1.9.11 Wiegand tab

The Wiegand tab allows you to configure the Wiegand format for a FaceStation device. Click **Change Format** to launch the Wiegand Configuration wizard. For more information on configuring the Wiegand format, see section 3.2.13.

Operation Mode | Face | Camera | Network | Access Control | Interphone | Input | Output | Display/Sound | T & A | **Wiegand**

Wiegand Mode: Legacy
Wiegand In/Out: Wiegand (User) In

Wiegand Format

Format: 26 bit Standard Change Format

EAAA AAAA AIII IIII IIII IIII IO

Total Bits: 26
ID Bits: 16
Custom ID Bits: 0

I : ID bit / C : Custom ID bit / O : ParityBit(Odd) / E : ParityBit(Even) / X : Undefined

FC Code: Disable
Pulse Width(us): 40 (20 ~ 100 (us))
Pulse Interval(us): 10000 (200 ~ 20000 (us))
Field Default Values: 0000...
Fail Code Value: 0000... ☐ Use Fail Code

- **Wiegand Mode:** Set the mode of Wiegand input to use when reading card ID data (*Legacy* or *Extended*). The Legacy mode will treat connected RF devices as part of their host devices (this is the typical function of previous versions of BioStar). The Extended mode will allow RF card readers to operate independently, which allows them to be associated with doors, included in zones, and leave logs with their own device IDs.
- **Wiegand In/Out:** Assign the Wiegand input or output:
 - **Wiegand (User) In:** The ID field of the Wiegand string is interpreted as a user ID.

5. Customize Settings

- **Wiegand (Card) In:** The ID field of the Wiegand string is interpreted as a card ID.
- **Wiegand (User) Out:** Inserts the user ID of the authenticated user in the ID field of the Wiegand string.
- **Wiegand (Card) Out:** Inserts the card ID of the authenticated user in the ID field of the Wiegand string.

5.2 Customize Door Settings

The sections below describe the settings available for doors that have been added to the BioStar system. Customize the way these doors function by changing settings to suit your particular environment and operational needs. To access the tabs described below, click **Doors** in the shortcut pane, then click a door name.

5.2.1 Details tab

The Details tab allows you to specify which devices are used on the inside or outside of a door, how the devices control the door, and anti-passback features. When connecting two devices to a single door, the devices should be connected to each other by RS485. In this case, the I/O ports of only one device can be used. Specify which device's I/O ports to use in the "IO Device" drop-down list.

The screenshot shows the 'Details' tab of a door configuration window. It contains two columns of settings. The left column includes 'Inside Device' (a dropdown with '10569[192.168.0.86]'), 'Unlock Time' (a dropdown with '사용안함'), 'IO Device' (a dropdown with 'Disable'), 'Exit Button' (a dropdown with 'Disable'), '(Switch Type)' (a dropdown with 'N/O'), 'Door Open Period(sec)' (a numeric input with '0'), and 'Driven By' (a dropdown with 'All Events'). The right column includes 'Outside Device' (a dropdown with 'Disable'), 'Lock Time' (a dropdown with '사용안함'), 'Door Relay' (a dropdown with 'Disable'), 'Door Status' (a dropdown with 'Disable'), '(Switch Type)' (a dropdown with 'N/O'), 'Door Open Alarm(sec)' (a numeric input with '0'), and 'Closed By' (a dropdown with 'Open period'). Below these columns is an 'Anti-passback' section with a checkbox. It contains two columns of fields: '[In Device]' with 'Device Name' and 'Device IP' text inputs, and '[Out Device]' with 'Device Name' and 'Device IP' text inputs. There is also an 'APB Type' dropdown set to 'Soft' and a 'Reset Time (min)' numeric input set to '0'.

- **Inside Device:** Select a device to use on the inside of the door.
- **Outside Device:** Select a device to use on the outside of the door.
- **Unlock Time:** Select a schedule when the door should normally be unlocked. During this time, door relays are active.
- **Lock Time:** Select a schedule when the door should normally be locked. During this time, door relays are inactive.

5. Customize Settings

- **IO Device:** When using two devices on a single door, specify which device's IO ports will be used.
- **Door Relay:** Select a door relay.
- **Exit Button:** Select a device input to use for an exit button (*Disable* or *Input 0* and *Input 1* for each device added).
- **(Switch Type):** Set the normal position of the input used for an exit button (*N/O-normally open* or *N/C-normally closed*).
- **Door Status:** set an input for a sensor that detects the current status of the door.
- **(Switch Type):** Set the normal position of the input used for a door status sensor (*N/O-normally open* or *N/C-normally closed*).
- **Door Open Period (sec):** Set the duration (in seconds) that a door relay should be activated when a door is opened. After this duration, the relay will stop sending the signal to open the door. The default is three seconds.
- **Door Open Alarm (sec):** Set the duration (in seconds) that a door can remain open before an alarm will sound.
- **Driven by:** Select types of events that will trigger associated devices to open the door.
 - **All Events (default):** Associated devices will open the door on any successful authorization events.
 - **TNA + AUTH:** Associated devices will open the door on successful T&A or credential authorization events or T&A authorization events. To use this option, you must select the Use Relay checkbox in the T&A tab. This option is only available for BioStation, BioLite Net, D-Station, X-Station, BioStation T2, and FaceStation devices. For more information about configuring T&A settings, see section 5.1.1.9, 5.1.3.9, 5.1.6.11, 5.1.7.10, and 5.1.8.11.
 - **AUTH:** Associated devices will open the door only on successful credential authorization events.
 - **TNA:** Associated devices will open the door only on successful T&A authorization events. To use this option, you must select the Use Relay checkbox in the T&A tab. This option is only available for BioStation, BioLite Net, D-Station, X-Station, BioStation T2, and FaceStation devices. For more information about configuring T&A settings, see section 5.1.1.9, 5.1.3.9, 5.1.6.11, 5.1.7.10, and 5.1.8.11.
 - **Disabled:** Associated devices will not open the door, regardless of the attempted authorization events.
- **Closed by:** Select an option for closing the door.
 - **Open period:** The BioStar system will close the door after the period specified in the *Door Open Period (sec)* field.
 - **Open period+Status:** The BioStar system will attempt to close the door based on door status (if you have connected door sensors and the system can detect that the door is open). If door sensors are not connected or the system is unable to detect the door status, the system will close the door after the period specified in the *Door Open Period (sec)* field. This setting is useful when used with revolving doors, for

5. Customize Settings

example, to prevent someone from following an authorized person through the door.

- **Anti-passback:** Click the checkbox to activate the anti-passback feature (only available when using both an inside and an outside device).
 - **Device Name:** This field is populated automatically.
 - **Device IP:** This field is populated automatically.
 - **APB Type:** Set the type of anti-passback restriction to use (Soft or Hard).
 - **Reset Time (min):** Set the duration (in minutes) that must pass before the anti-passback status is reset. The default reset time is 0—at this setting, the anti-passback status will not be reset.
- **Unlock Trigger Option**
 - **Unlock Trigger Option:** Unlock Trigger is supported in the 'Details' tab in the door setting. This feature allows the door to be remained open during Unlock Time only after an Admin User or Normal User identification.

Note: Supported Firmware Versions: BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3..

Note: Unlock Trigger is not supported when two devices (Host/Slave device or 3rd Party Wiegand reader) are configured for one door and Unlock Trigger was made from the slave device. And when the case that 3rd Party Wiegand reader is configured for one door is not supported. And it's supported only when a trigger was made from one Host device.
- **Minimum Input Duration**
 - **Minimum Input Duration:** This feature can be activated from 'Details' tab in the door setting. When this option is in use, the device accepts input signal only when the signal continues more than a certain period of time designated by the FW fix. This option is activated with the latest FW and shown Use or Not Use.

Note: Supported Firmware Versions: BioStation 1.93, BioStation T2 1.3, FaceStation 1.3, BioEntry Plus 1.6, BioEntry W 1.2, BioLite Net 1.4, Xpass 1.3..

5.2.2 Alarm tab

The Alarm tab allows you to specify alarm actions for doors that are forced open or held open. A forced open alarm occurs when a door is forcibly opened without any authentication at the device. A held open alarm occurs when a door remains open longer than the duration specified in the system settings.

5. Customize Settings

The screenshot shows a software interface with a top navigation bar containing tabs: Details, Alarm, Zone, Access Group, and Event. The 'Details' tab is active. Below the tabs, there are two sections: '[Forced Open]' and '[Held Open]'. Each section has an 'Action' sub-section. In the '[Forced Open]' section, the 'Program Sound' is set to 'chimes.wav', 'Play Count' is 0 (0 : Infinite), 'Device Sound' is 40051, 'Send Email' is unchecked, 'Output Device' is 40051, 'Output port' is [40051]Relay 0, and 'Output Signal Setting' is Signal1. The '[Held Open]' section has identical settings.

- **Action**
 - **Program Sound:** Activate and select a sound from the drop-down list to be emitted by the BioStar program. Then, specify the duration ("play count") of the sound in seconds. If you set the Play Count to 0, the specified sound will play until someone with administrative privileges manually stops the sound via the Realtime Monitoring tab in the Monitoring pane. To add custom sounds to the list, see section 3.10.1.2.
 - **Device Sound:** Activate and select a sound to be emitted by devices connected to the door.
 - **Send Email:** Activate and setup emails to be sent by the system. For more information about sending alert emails, see section 3.10.2.
 - **Output Device:** Activate and select a device to output an alarm signal.
 - **Output Port:** Select an output port to use when sending the alarm signal.
 - **Output Signal:** Select an output signal to send.

5.3 Customize Zone Settings

Customize the way zones function by changing the settings to suit your particular environment and operational needs. To access the tabs described below, click **Doors** in the shortcut pane, then click a zone name.

5.3.1 Customize Settings for Anti-Passback Zones

The sections below describe the settings available for anti-passback zones. Customize the way the zone functions by changing these settings to suit your particular environment and operational needs.

5. Customize Settings

5.3.1.1 Details tab

The Details tab allows you to specify which anti-passback type to use for a zone and the reset period for the anti-passback feature.

The screenshot shows the 'Details' tab with the following settings:

- APB Type: Soft
- Reset Time (min): 0
- In case of Disconnected: Door Open

Below the settings is a 'Device List' table:

No	Devices	Attribute
1	40051[61.83.152.174]	In Device, Master Device

- **APB Type:** Select a type of anti-passback restriction to apply (*Soft* or *Hard*).
- **Reset Time (min):** Set the duration (in minutes) that must pass before the anti-passback status is reset. The default reset time is 0—at this setting, the anti-passback status will not be reset.
- **In case of Disconnected:** Set how doors in the zone should behave if communication is lost between the master and member devices.

5.3.1.2 Alarm tab

The Alarm tab allows you to specify alarm actions and an output device for an anti-passback zone.

The screenshot shows the 'Alarm' tab with the following settings:

- ☒ Program Sound: chimes.wav
- Play Count: 0 (0 : Infinite)
- ☒ Device Sound: 40051[61.83.152.174]
- ☒ Send Email: --
- ☒ Output Device: 40051[61.83.152.174]
- Output port: [40051]Relay 0
- Output Signal Setting: Signal1


- **Action**
 - **Program Sound:** Activate and select a sound from the drop-down list to be emitted by the BioStar program. Then, specify the duration ("play count") of the sound in seconds. If you set the Play Count to 0, the specified sound will play until someone with administrative privileges manually stops the sound via the Realtime Monitoring tab in the Monitoring pane. To add custom sounds to the list, see section 3.10.1.2.
 - **Device Sound:** Activate and select a sound to be emitted by devices connected to the door.
 - **Send Email:** Activate and setup emails to be sent by the system. For more information about sending alert emails, see section 3.10.2.
 - **Output Device:** activate and select a device to output an alarm signal.

5. Customize Settings

- **Output Port:** Select an output port to use when sending the alarm signal.
- **Output Signal:** Select an output signal to send.

5.3.1.3 Access Group tab

The Access Group tab allows you to specify access groups that can bypass normal restrictions for the zone. To grant bypass rights to an access group, select a group and click **Apply** at the bottom right of the Zone pane.

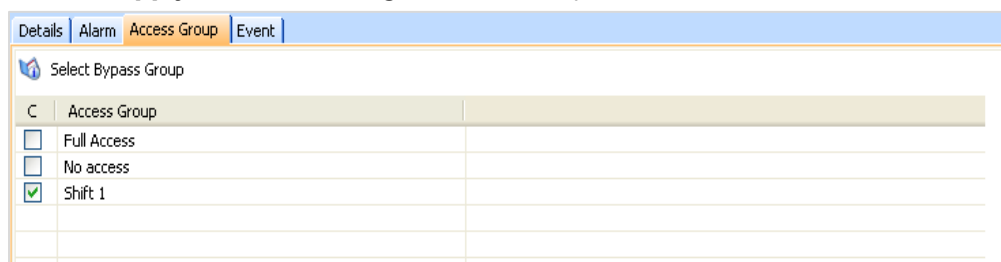

C	Access Group
<input type="checkbox"/>	Full Access
<input type="checkbox"/>	No access
<input checked="" type="checkbox"/>	Shift 1

5.3.2 Customize Settings for Entrance Limit Zones

The sections below describe the settings available for entrance limit zones. Customize the way the zone functions by changing these settings to suit your particular environment and operational needs.

5. Customize Settings

5.3.2.1 Details tab

The Details tab allows you to specify entrance limits and a schedule for the zone restrictions.

The screenshot shows the 'Details' tab of a configuration window. It has four sub-tabs: 'Details', 'Alarm', 'Access Group', and 'Event'. The 'Details' tab is active. It contains the following settings:

- Entrance Limit Zone Setting:** Four rows, each with a checkbox, two time range inputs (e.g., 0000 ~ 0000), and a 'Max Number of Entrance' input (set to 0).
- Timed APB (min):** A dropdown menu set to 0, with a label ': Timed APB (min) (0: No Limit)'.
- In case of Disconnected:** A dropdown menu set to 'Door Open'.
- Device List:** A table with columns 'No', 'Devices', and 'Attribute'.

No	Devices	Attribute
1	40051[61.83.152.174]	Master Device

- **Entrance Limit Zone Setting:** Click the checkbox to enable an entrance limit setting, and then specify the effective hours for the entrance limit.
- **Max Number of Entrance:** Set the maximum number of entries allowed during the specified time limit.
- **Timed APB (min):** Specify a time limit for re-entry into a zone.
- **In case of Disconnected:** Set how doors in the zone should behave if communication is lost between the master and member devices.

5.3.2.2 Alarm tab

The Alarm tab allows you to specify alarm actions and an output device for an entrance limit zone.

The screenshot shows the 'Alarm' tab of the configuration window. It contains the following settings:

- Action:** A section with several checkboxes and inputs.
 - Program Sound:** Checked, with a dropdown menu set to 'chimes.wav'.
 - Play Count:** Input set to 0, with a label '(0 : Infinite)'.
 - Device Sound:** Checked, with a dropdown menu set to '40051[61.83.152.174]'.
 - Send Email:** Checked, with a button labeled '-'.
 - Output Device:** Checked, with a dropdown menu set to '40051[61.83.152.174]'.
 - Output port:** Dropdown menu set to '[40051]Relay 0'.
 - Output Signal Setting:** Dropdown menu set to 'Signal1'.

- **Action**
 - **Program Sound:** Activate and select a sound from the drop-down list to be emitted by the BioStar program. Then, specify the duration ("play count") of the sound in seconds. If you set the Play Count to 0, the specified sound will play until someone with administrative privileges manually stops the sound via the Realtime Monitoring tab in the Monitoring pane. To add custom sounds to the list, see section 3.10.1.2.
 - **Device Sound:** Activate and select a sound to be emitted by devices connected to the door.

5. Customize Settings

- **Send Email:** Activate and setup emails to be sent by the system. For more information about sending alert emails, see section 3.10.2.
- **Output Device:** Activate and select a device to output an alarm signal.
- **Output Port:** Select an output port to use when sending the alarm signal.
- **Output Signal:** Select an output signal to send.

5.3.2.3 Access Group tab

The Access Group tab allows you to specify access groups that can bypass normal restrictions for the zone. To grant bypass rights to an access group, select a group and click **Apply** at the bottom right of the Zone pane.

The screenshot shows the 'Access Group' tab selected. It features a 'Select Bypass Group' section with a table. The table has two columns: 'C' and 'Access Group'. The 'Access Group' column lists 'Full Access', 'No access', and 'Shift 1'. The 'Shift 1' row is selected with a checkmark in the 'C' column.

C	Access Group
<input type="checkbox"/>	Full Access
<input type="checkbox"/>	No access
<input checked="" type="checkbox"/>	Shift 1

5.3.3 Customize Settings for Alarm Zones

The sections below describe the settings available for alarm zones. Customize the way the zone functions by changing these settings to suit your particular environment and operational needs.

5.3.3.1 Details tab

The Details tab allows you to specify alarm delays and arm/disarm types for alarm zones.

The screenshot shows the 'Details' tab selected. It contains several configuration options and two tables.

Configuration options:

- Delay(sec): [0]
- Arm: [0]
- Disarm: [0]
- Arm/Disarm Type: [Setup]
- External Input/Output: [Setup]

Device List table:

No	Devices	Attribute	Arm/Disarm Type
1	40051[61.83.152.174]	Master Device	

Input List table:

No	Name	Devices	Input	Switch	Duration(ms)
1	Entrance	40051	[40051]Input 0	N/O	0

5. Customize Settings

- **Delay (sec)**
 - **Arm:** Set the length of time (in seconds) to delay before arming the zone.
 - **Disarm:** Set the length of time (in seconds) to delay before disarming the zone.
- **Arm/Disarm Type:** Specify settings for arming or disarming zones. For more information for configuring arm and disarm settings, see 3.5.2.5. For more information on setting up alarms, see section 3.10.
- **External Input/Out:** Specify settings for enabling the BioStar system to automatically arming or disarming zones. For more information on configuring external input/output settings, see 3.5.2.6. For more information on setting up alarms, see section 3.10.

5.3.3.2 Alarm tab


The Alarm tab allows you to specify alarm actions and an output device for an alarm zone.

- **Action**
 - **Program Sound:** Activate and select a sound from the drop-down list to be emitted by the BioStar program. Then, specify the duration (“play count”) of the sound in seconds. If you set the Play Count to 0, the specified sound will play until someone with administrative privileges manually stops the sound via the Realtime Monitoring tab in the Monitoring pane. To add custom sounds to the list, see section 3.10.1.2.
 - **Device Sound:** Activate and select a sound to be emitted by devices connected to the door.
 - **Send Email:** Activate and setup emails to be sent by the system. For more information about sending alert emails, see section 3.10.2.
 - **Output Device:** Activate and select a device to output an alarm signal.
 - **Output Port:** Select an output port to use when sending the alarm signal.
 - **Output Signal:** Select an output signal to send.

5. Customize Settings

5.3.3.3 Access Group tab

The Access Group tab allows you to specify access groups that can arm and disarm zones. To grant disarm authorization to an access group, select a group and click **Apply** at the bottom right of the Zone pane.

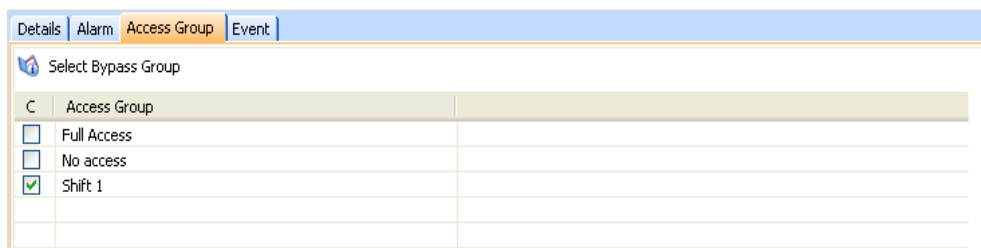


C	Access Group
<input type="checkbox"/>	Full Access
<input type="checkbox"/>	No access
<input checked="" type="checkbox"/>	Shift 1

5.3.4 Customize Settings for Fire Alarm Zones

The sections below describe the settings available for fire alarm zones. Customize the way the zone functions by changing these settings to suit your particular environment and operational needs.

5.3.4.1 Details tab

The Details tab allows you to add or delete devices in the Device List and inputs to the Input List. To add or delete devices, see section 3.5.2.2.

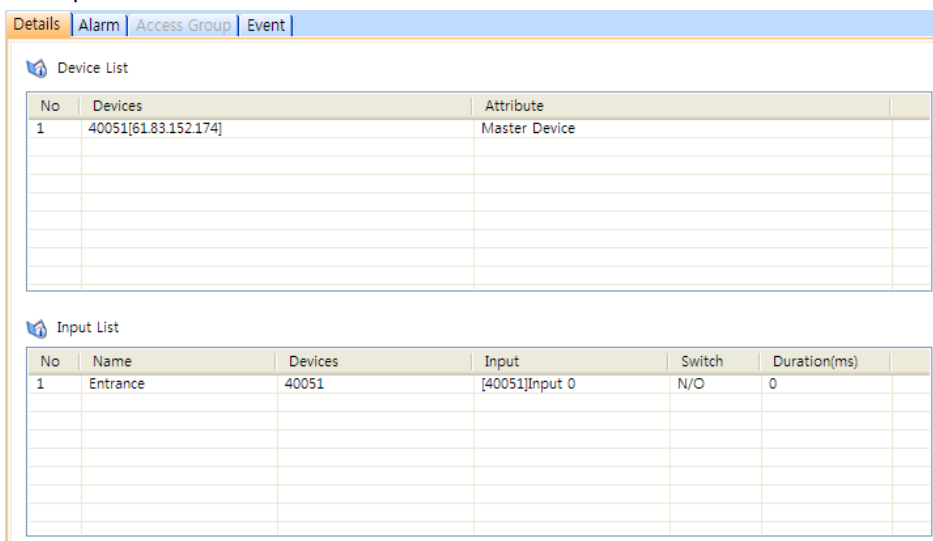

No	Devices	Attribute
1	40051[61.83.152.174]	Master Device

No	Name	Devices	Input	Switch	Duration(ms)
1	Entrance	40051	[40051]Input 0	N/O	0

5. Customize Settings

5.3.4.2 Alarm tab

The Alarm tab allows you to specify alarm actions and an output device for a fire alarm zone.

- **Action**
 - **Program Sound:** Activate and select a sound from the drop-down list to be emitted by the BioStar program. Then, specify the duration ("play count") of the sound in seconds. If you set the Play Count to 0, the specified sound will play until someone with administrative privileges manually stops the sound via the Realtime Monitoring tab in the Monitoring pane. To add custom sounds to the list, see section 3.10.1.2.
 - **Device Sound:** Activate and select a sound to be emitted by devices connected to the door.
 - **Send Email:** Activate and setup emails to be sent by the system. For more information about sending alert emails, see section 3.10.2.
 - **Output Device:** Activate and select a device to output an alarm signal.
 - **Output Port:** Select an output port to use when sending the alarm signal.
 - **Output Signal:** Select an output signal to send.

5. Customize Settings

5.3.5 Customize Settings for Access Zones

The sections below describe the settings available for access zones. These zones are used to synchronize user data, so the Alarm and Access Group tabs are unavailable. Customize the way the zone functions by changing these settings to suit your particular environment and operational needs.

5.3.5.1 Details tab

The Details tab allows you to add devices to the Device List.


No	Devices	Attribute	
1	40051[61.83.152.174]	Master Device	

- **Synchronize User Info:** Click this checkbox to automatically propagate user information to other devices.
- **Synchronize Log Data:** Click this checkbox to automatically write all log records to the master device (for member devices in the zone).
- **Synchronize Time:** Click this checkbox to synchronize the time of devices in the zone.

5. Customize Settings

5.3.6.2 Access Group tab

The Access Group tab allows you to specify access groups that belong to a muster zone. To assign access groups to a muster zone, select a group and click **Apply** at the bottom right of the Zone pane.

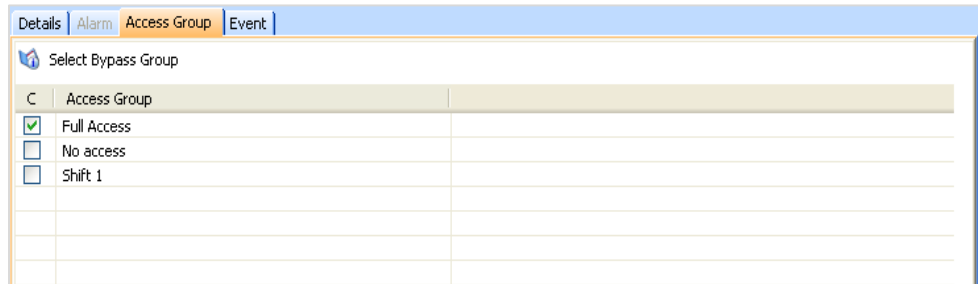

The screenshot shows a software interface with four tabs: 'Details', 'Alarm', 'Access Group', and 'Event'. The 'Access Group' tab is selected and highlighted in orange. Below the tabs is a section titled 'Select Bypass Group' with a blue icon. Underneath is a table with two columns: 'C' and 'Access Group'. The table contains three rows of data, each with a checkbox in the 'C' column and a text label in the 'Access Group' column. The first row has a checked checkbox and the label 'Full Access'. The second row has an unchecked checkbox and the label 'No access'. The third row has an unchecked checkbox and the label 'Shift 1'. There are also several empty rows below these.

C	Access Group
<input checked="" type="checkbox"/>	Full Access
<input type="checkbox"/>	No access
<input type="checkbox"/>	Shift 1

5. Customize Settings

5.3.7 Customize Settings for Interlock Zones

The sections below describe the settings available for interlock zones. Customize the way the zone functions by changing these settings to suit your particular environment and operational needs.

Interlock zones works only with the following device firmware versions:

- BioStation V1.9 or later, BioEntry Plus V1.5 or later, BioEntry W V1.0 or later, BioLite Net V1.3 or later, and Xpass V1.2 or later.
- Interlock zones are not supported for BioStation T2, X-Station, D-Station, and FaceStation.

5.3.7.1 Details tab

The Details tab allows you to specify which doors to use for either side of the interlock zone. Once added, the door names and device IDs will appear in the Device List.

No	Devices	Doors	Attribute
1	105[192.168.0.18]	Rear	Master Device
2	52967[192.168.1.127]	Front	

No	Name	Devices	Input	Switch	Duration(ms)

- **Door 1:** Click the ellipsis (...) button to select door 1 of the interlock area. Doors without associated devices cannot be added to the interlock zone.
- **Door 2:** Click the ellipsis (...) button to select the device on door 2 of the interlock area. Doors without associated devices cannot be added to the interlock zone.

5.4 Customize User Settings

Customize various settings for users, including personal details, fingerprint information, and access card information. To access the tabs described below, click **Users** in the shortcut pane, then click a user name.

5. Customize Settings

5.4.1 Details Tab

The Details tab allows you to specify personal information about a user and the valid dates of a user account. To edit these fields, see section 4.4.3.

The screenshot shows the 'Details' tab of a user configuration interface. The tabs at the top are: Details (selected), Fingerprints, Face, Face (Fusion), Card, Access Control, T & A, and Event. The form fields are as follows:


Field	Value
ID	1
Start Date	1/ 1/2000
Expiry Date	12/31/2030 23 hour
Private Auth Mode	Device Default
Title	guest
Mobile	
Genders	Female
Date of Birth	12/23/2011

- **ID:** Enter an identification number for a user.
- **Start Date:** Set a beginning date that the user can obtain authorization via the BioStar system.
- **Expiry Date:** Set a date that the user's account will expire (you can also specify the hour that the account will expire).
- **Private Auth Mode:** Set the authorization method for the user (*Device Default, Fingerprint, Fingerprint + Password, Card Only, Card + Fingerprint, Card + Password, Card + Fingerprint/Password, Card + Fingerprint + Password, ID + Fingerprint, ID + Password, ID + Fingerprint/Password, ID + Fingerprint + Password*). If you set the method to "Device Default," the authentication mode will be determined by operation mode settings of the device.
- **Title:** Select a title for the user (*Guest, President, Director, General Manager, Chief, Assistant Manager*, or custom title).
- **Mobile:** Enter a mobile telephone number for a user.
- **Genders:** Select a user's gender.
- **Date of Birth:** Select a user's date of birth from the drop-down calendar.

5. Customize Settings

5.4.2 Fingerprints Tab


The Fingerprints tab allows you to specify which type of scanner to use for enrollment and the security level to apply. This tab can also be used to test for fingerprint matches and register duress fingerprints. For more information about registering fingerprints, see section 3.6.2.

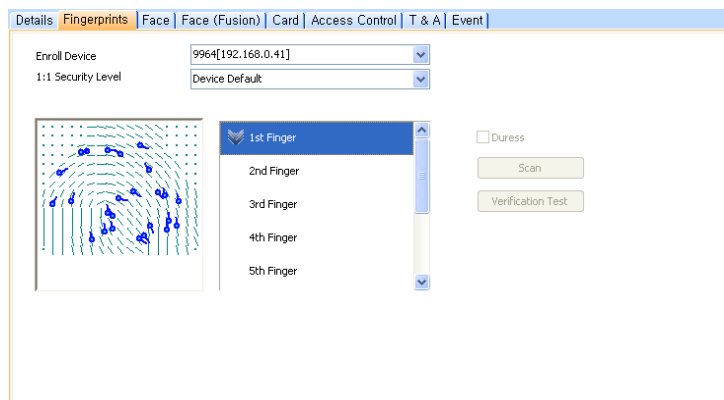

- **Enroll Device:** Select a device to use for scanning fingerprints.
- **1:1 Security Level:** Select a security level to use for fingerprint authorization (*Device Default* and *Lowest [1/1,000]* to *Highest [1/10,000,000]*). Keep in mind that as the security level is increased, so too is the likelihood of a false rejection.
- **Duress:** set a fingerprint template to be used as a duress finger (the duress finger will activate alarms when used to gain entry).

5.4.3 Face Tab

The Face tab allows you to specify a FaceStation device to use for storing face templates of users. When you successfully capture faces (up to 5 per user), the FaceStation device transfers 25 face templates to the BioStar. During authentication, any face template that receives a higher score than one of the registered face templates will replace the old one. For more information about capturing face images, see section 3.6.3.

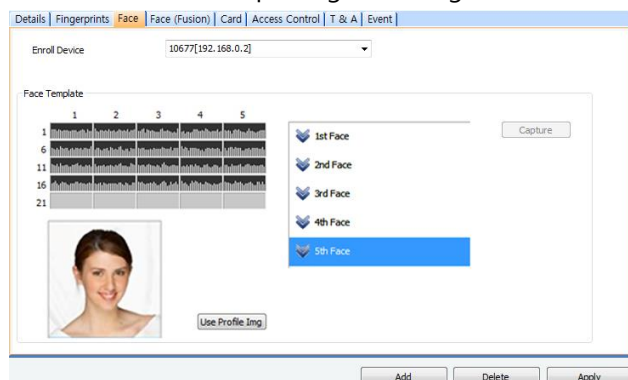

- **Enroll Device:** Select a device to use for capturing face images.

5. Customize Settings

5.4.4 Face (Fusion) Tab


The Face tab allows you to specify a D-Station device to use for capturing face images of users. For more information about capturing face images, see section 3.6.3.



- **Enroll Device:** Select a device to use for capturing face images.

5.4.5 Card Tab

The Card tab allows you to specify card types and IDs and issue cards to users. For more information about issuing cards, see section 3.6.3.

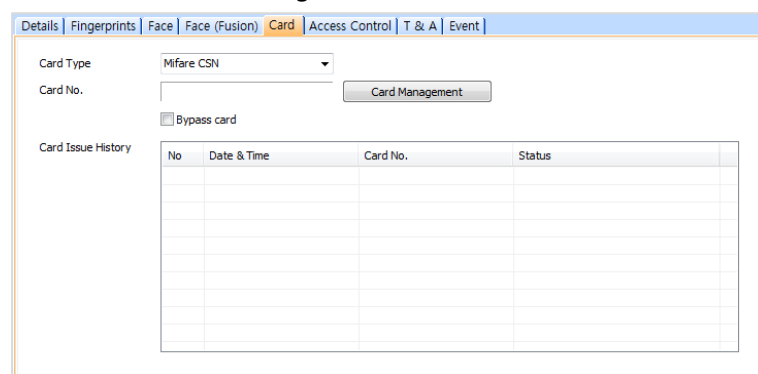

No.	Date & Time	Card No.	Status

- **Card Type:** Select a type of access card to issue (*Mifare CSN, Mifare Template, EM 4100, HID Prox, iCLASS CSN, or iCLASS Template*).
- **Card ID:** Displays the card ID number when a card is issued.
- **Custom ID:** Enter a custom ID for the card.

5. Customize Settings

5.4.6 T&A Tab

The T&A tab allows you to specify which shifts, holiday rules, and leave periods apply to a user. To add new details, click **Add** at the bottom of the tab. To save changes to time and attendance settings, you must click **Apply** at the bottom of the tab. You can also remove entries by highlighting the entry and clicking **Delete**. For more information about configuring time and attendance, please see section 3.9.

Details Fingerprints Face Face (Fusion) Card Access Control T & A Event					
<input type="radio"/> Shift Management					
No	Shift	Start Date		End Date	
1		1970-01-01		1970-01-01	
2	2008 Shift	2008-01-01		2008-12-31	
<input checked="" type="radio"/> Holiday Rules Management					
No	Holiday Rules				
<input type="radio"/> Leave Management					
No	Leave	Type	Start Date		End Date
1	Leave1		2009-05-12		2009-05-13
2			2009-06-09		2009-06-09

- **Shift Management:** Specify which shifts apply to the user.
- **Holiday Rules Management:** Specify which holiday rules apply to the user.
- **Leave Management:** Specify leave for the user.

Technical Support

If you have any questions regarding this document or BioStar software, please contact technical support at **support@supremainc.com**.

Please provide the following information for prompt and easy assistance:

- Contact information and available times
- Version of BioStar and device model name (e.g. BioStar 1.8, BioStation)
- Error messages and description on problems



Glossary

access card: A card that can be used to grant or restrict access to a specific area. BioStar supports MIFARE®, EM4100, HID proximity, iCLASS®, and FeliCa® cards. See also: proximity card.

access control system: A system of physical mechanisms and controls that permit or deny access to a particular resource or physical area. BioStar is an IP-based biometric access control system.

alarm zone: A grouping of devices that is used to protect a physical area. BioStar monitors input points in an alarm zone and triggers alarms when intrusion or tampering is detected.

anti-passback: A security protocol that prevents a user from providing unauthorized entrance to another user via an access card or fingerprint. See also: timed anti-passback.

biometrics: Biometrics refers to the use of physical characteristics for verification or authorization. BioStar incorporates Suprema's award-winning fingerprint recognition technology to provide biometric authentication of a user's identity and authorization to gain access to restricted areas.

bypass group: A group of users that can bypass normal restrictions for a zone.

client: BioStar client software allows an operator to connect remotely to the BioStar server and control connected devices. An operator ID and password are required to access the system via a client.

department: A division of an organization used to group employees. The use of departments is not necessary, but may be helpful to organize large numbers of employees.

device: In this guide, the word "device" refers to any Suprema product supported by the BioStar system. Supported devices include BioStation, BioStation Mifare, BioStation HID, DStation, BioEntry Plus/BioEntry W, BioEntry Plus Mifare/BioEntry W Mifare, BioEntry Plus iCLASS, BioEntry Plus HID, BioLite Net, Xpass, and BioMini USB terminals, as well as the Secure I/O device.

Glossary

distributed intelligence: In the BioStar system, the authorization database is distributed to each terminal, so that authorization is faster and can continue even when other parts of the system are offline.

door: Doors are the physical barriers that provide entry into a building or space. At least one device must be connected to a door to provide access control, but two devices can be connected to support anti-passback and other features, such as door relays, alarm relays, exit switches, and sensors.

duress finger: This term refers to an enrolled fingerprint that will activate silent alerts when a candidate is under duress. In the typical duress scenario, a perpetrator forces the candidate to gain access by force or threat of harm. The candidate gains access by means of his or her "duress finger," which allows access and simultaneously triggers the alarm or alert actions you specify.

enrollment: The process of creating a user account and capturing images of fingerprints or issuing access cards.

entrance limit: The maximum number of times a user can gain authorization to a specific area. The entrance limit can be related to a time period so that users are limited to certain number of entries during office hours, for example.

ESSID: Extended Service Set ID. The ESSID is the name of a wireless network access point. It allows one wireless network to be clearly distinguishable from another. ESSID is one type of SSID (the other being BSSID).

face recognition -The automated process of validating a claimed identity based on the image of a face. BioStar extracts and analyzes the facial features such as the skin texture and the shapes of the face, eyes, nose and mouth from a captured face image and compares them with those of all the registered persons.

false acceptance rate: The false acceptance rate (FAR) is a measure of the likelihood that a biometric security system will incorrectly accept an access attempt by an unauthorized user. A system's FAR typically is stated as the ratio of the number of false acceptances to the number of identification attempts.

false rejection rate: The false rejection rate (FRR) is a measure of the likelihood that a biometric security system will incorrectly reject an access attempt by an authorized user. A system's FRR is typically stated as the ratio of the number of false rejections to the number of identification attempts.

fingerprint recognition -The automated process of matching two human fingerprints: one previously recorded and one being provided by a user for authentication. BioStar incorporates Suprema's award-winning algorithms for recognizing fingerprints.

fingerprint sensor: A fingerprint sensor is an electronic device used to capture a digital image of the fingerprint pattern. The captured image is called a live scan. This live scan is digitally processed to create a biometric template (a collection of extracted features) which is stored and used for fingerprint recognition.

Glossary

fire alarm zone: A zone that is used to interface with fire alarms and control doors when a fire is detected.

host: A host is the device that serves as the master in a RS485 network. The host device relays data packets between external devices (or a larger network) and slave devices connected to the RS485 network.

input signal: The signal sent to a device by an external object, such as an exit button.

operator: Operators are personnel who have rights to use BioStar clients. BioStar includes three pre-defined classes for operators: administrators, operators, and managers. BioStar also supports a maximum of 16 custom operator classes.

output signal: The signal sent to an external device, such as an alarm siren or electronic door strike.

proximity card: Proximity cards (or "prox" cards) are contactless integrated circuit devices used for security access. BioStation, BioEntry Plus, and BioLite Net devices support EM4100 cards; BioStation Mifare, BioEntry Plus Mifare, BioEntry W Mifare and BioLite Net, and DStation devices support MIFARE and iCLASS cards; and BioStation HID and BioEntry Plus HID devices support HID proximity cards.

RF device: Short-range radio frequency devices used to gain access to doors. The BioStar system allows 3rd party RF devices to be added to the system to incorporate existing hardware into the access control configuration

security level: see: *false acceptance rate*.

time and attendance (T&A): This designation refers to the processes and functions that monitor and report check-in and check-out activities by employees and allow administrators to define time slots and schedules. The information collected by the BioStar system can be used in conjunction with external systems for time reporting and payroll capabilities.

timed anti-passback: A security protocol that prevents reauthorization of a user for a specified period of time. See also: *anti-passback*.

timezone: A customizable schedule that can be used to allow or restrict access during specified hours. Timezones can be combined with doors to create access groups.

user: A user is any person who has access rights. A user's access rights are comprised of individual rights (user level), membership in access groups, and time restrictions.

Wiegand interface: The Wiegand interface is a wiring standard used to connect a card swipe mechanism to the rest of an electronic entry system. The interface uses three wires, one of which is a common ground and two of which are data transmission wires usually called DATA0 and DATA1, but sometimes also labeled Data High and Data Low.

zone: A zone consists of two or more devices that are grouped together. BioStar includes seven types of zone classifications.

A

access cards

issuing, 72

Access Control tab

BioEntry Plus, 147

BioEntry W, 147

BioLite Net, 157

BioStation, 136

BioStation T2, 209

D-Station, 186

FaceStation, 223

Xpass, 166

Xpass Slim, 175

X-Station, 196

access groups

adding, 84

adding users, 84

assigning to users, 85

selecting, 66

transferring to devices, 86

access zone

Details tab, 242

administrative account

adding, 32

changing level or password, 32

alarm zone

Access Group tab, 240

Alarm tab, 240

Details tab, 239

alarms

activation events, 138, 188, 198, 213, 226

adding custom sounds, 96

configuring actions, 63

configuring settings and sounds, 95

customizing actions, 95

deactivation events, 138, 188, 199, 213, 227

priority, 138, 188, 199, 213, 227

releasing, 115

anti-passback zone

Access Group tab, 236

Alarm tab, 236

Details tab, 234

B

BioEntry Plus

configuring, 40

overview, 11

BioEntry W

overview, 11

BioLite Net

configuring, 43

overview, 11

BioMini

overview, 12

BioMini Plus

overview, 12

BioStar Server

configuring, 23

BioStation

configuring, 38

connecting via wireless LAN, 39

overview, 10

BioStation T2

configuring, 48, 50

BioStation T2

overview, 10

Black list tab

BioEntry Plus, 150

BioEntry Plus W, 150

BioStation, 139, 160

D-Station, 189

X-Station, 199

Black list tab

BioStation T2, 214

C

Index

Camera tab

X-Station, 195

Camera tab

D-Station, 184

Camera tab

BioStation T2, 208

Camera tab

FaceStation, 221

card ID format, 145, 165, 173

client list, 24

Command Card tab

BioEntry Plus, 151

BioEntry W, 151

Xpass, 170

Xpass Slim, 178

command cards

deleting all users, 119

deleting an individual user, 118

enrolling users, 70

issuing, 42, 45

connection type, 35

D

databases

creating, 22

mapping imported data, 122

migrating from BioAdmin, 28

Device pane, 40, 43, 44

devices

adding, 35

adding RF devices, 38

adding slave devices, 37

creating a direct connection, 36

creating a server connection, 36

customizing BioEntry Plus settings, 143

customizing BioEntry W settings, 143

customizing BioLite Net settings, 153

customizing BioStation settings, 131

customizing BioStation T2 settings, 203

customizing D-Station settings, 180

customizing FaceStation settings, 218

customizing Xpass settings, 164

customizing Xpass Slim settings, 173

customizing X-Station settings, 193

DHCP, 36

downgrading, 129

locking or unlocking, 116

removing, 128

resetting locks, 117

setting automatic locking, 116

static IP, 36

upgrading firmware, 128

Display/Sound tab

BioLite Net, 160

BioStation T2, 214

D-Station, 189

FaceStation, 228

X-Station, 199

Display/Sound tab

BioEntry Plus, 151

BioEntry W, 151

BioStation, 140

Display/Sound tab

Xpass, 170

Display/Sound tab

Xpass Slim, 179

doors

adding, 55

Alarm tab, 233

associating with devices, 55

configuring, 56

creating door groups, 56

Details tab, 232

opening and closing, 115

Double Mode, 133, 182, 194, 205, 220

D-Station

configuring, 46

overview, 11

Index

E

EM4100 cards, 73

email notifications, 96

entrance limit setting, 136, 186, 196, 210, 211, 224

entrance limit zone

Access Group tab, 238

Alarm tab, 238

Details tab, 237

event logs

viewing from the monitoring pane, 110, 111

event views

changing, 28

events

real-time monitoring, 105

uploading logs to BioStar, 109

viewing logs, 108

viewing logs in panes, 109

external devices

configuring inputs, 98

configuring outputs, 97

F

face image

capture, 70

FaceStation

overview, 11

FeliCa cards, 72

Fingerprint tab

BioEntry Plus, 145

BioEntry W, 145

BioLite Net, 155

BioStation, 133

BioStation T2, 207

D-Station, 183

FaceStation, 221

fingerprints

activating encryption, 129

changing template, 130

image quality, 134, 183

registering, 69, 70

security level, 134, 183, 207, 221

sensitivity, 134, 183, 207, 221

sensor placement, 68

server matching, 134, 146, 155, 184

fire alarm zone

Alarm tab, 241

Details tab, 241

H

HID proximity cards, 73

holiday schedules, 83

host device

adding, 37

I

iClass CSN cards, 75

iClass layout

editing, 78

Input tab

BioEntry Plus, 148

BioEntry W, 148

BioLite Net, 158

BioStation, 136

BioStation T2, 211

D-Station, 187

FaceStation, 225

Xpass, 167

Xpass Slim, 176

X-Station, 197

installation

BioStar Client, 25

BioStar Express, 19

BioStar server, 20

interlock zone

Details tab, 244

Interphone tab

BioStation T2, 210

FaceStation, 224

L

Lift I/O

overview, 12

lifts

adding, 57
adding users, 58
associating with devices, 57
configuring, 58
setup, 57

logging in to BioStar, 26

M

MIFARE CSN cards, 75

MIFARE layout

editing, 77

MIFARE template cards, 76

monitoring, 105

muster zone

Access Group tab, 243
Details tab, 243
roll call, 107

N

Network tab

BioEntry Plus, 146
BioEntry W, 146
BioLite Net, 156
BioStation, 135
BioStation T2, 208
D-Station, 185
FaceStation, 222
Xpass, 165
Xpass Slim, 174
X-Station, 195

networking

RS232 settings, 136, 186, 209, 223
RS485 settings, 136, 186, 196, 209, 223
server settings, 135, 185, 196, 209, 223
TCP/IP settings, 135, 185, 196, 208, 209, 222

USB settings, 136

O

operation mode

1 to 1, 132, 181, 193
1 to N, 133, 182
server matching, 165, 173, 194

Operation mode tab

X-Station, 193

Operation Mode tab

BioEntry Plus, 144
BioEntry W, 144
BioLite Net, 153
BioStation, 131
BioStation T2, 204
D-Station, 181
FaceStation T2, 218
Xpass, 164
Xpass Slim, 173

Output tab

BioEntry Plus, 149
BioEntry W, 149
BioLite Net, 159
BioStation, 137
BioStation T2, 212
D-Station, 188
FaceStation, 226
Xpass, 169
Xpass Slim, 177
X-Station, 198

S

Secure I/O

overview, 12

Server Settings, 135, 185, 196, 209, 223

site keys

changing, 76

support, 249

system requirements, 18

T

T&A mode

- BioEntry Plus, 148
- BioLite Net, 162
- BioStation, 141
- D-Station, 191, 216, 229
- Xpass, 167, 176
- X-Station, 202

T&A tab

- BioLite Net, 162
- BioStation, 141
- BioStation T2, 215
- D-Station, 191
- FaceStation, 229
- X-Station, 201

time and attendance

- adding a daily schedule, 88
- adding a holiday rule, 93
- adding a leave period, 94
- adding a shift, 90
- adding a time category, 87
- generating T&A reports, 124
- modifying T&A reports, 125
- monitoring T&A status via the IO Board, 123
- overview, 17
- printing or exporting T&A report data, 127

Timezone pane, 82

timezones

- adding holidays, 83
- creating, 82

toolbar, 27

U

users

- adding new information fields, 118, 119, 120
- Card tab, 247
- creating accounts, 66
- customizing information fields, 119
- deleting, 118
- deleting all via command cards, 119
- deleting an individual via command cards, 118

- Details tab, 245
- enrolling via command cards, 70
- exporting data, 121
- Face tab, 246, 247
- Fingerprints tab, 246
- importing data, 122
- modifying information fields, 121
- registering fingerprints, 68
- retrieving data from device, 80
- synchronize all, 80
- T&A tab, 248
- transfer to device, 79
- transferring to other departments, 119

V

visual map

- creating, 112
- monitoring doors, 113

W

Wiegand format

- 26-bit, 52
- custom, 53
- pass-through, 53

Wiegand mode, 143, 192, 217, 231

Wiegand tab

- D-Station, 192

Wiegand tab

- BioEntry Plus, 152
- BioEntry W, 152
- BioLite Net, 163
- BioStation, 143
- Xpass, 172
- Xpass Slim, 180

Wiegand tab

- X-Station, 203

Wiegand tab

- BioStation T2, 217

Wiegand tab

- FaceStation, 230

X

Index

Xpass

- configuring, 44
- overview, 11

Xpass Slim

- overview, 11

X-Station

- configuring, 47
- overview, 11

Z

zones

- adding, 61
- adding devices, 61
- bypassing restrictions, 66
- configuring alarm actions, 63
- configuring arm and disarm settings, 63
- configuring external input/output settings, 64
- configuring inputs, 62
- types, 60
- viewing events, 66

suprema BioStar



Suprema Inc.

16F Parkview Office Tower, Jeongja, Bundang, Seongnam, Gyeonggi, 463-863 Korea

Tel: +82-31-783-4502

Email: sales@supremainc.com

Fax: +82-31-783-4503

Homepage: www.supremainc.com