

# VENSTAR

## User Manual



**Contents:**

Welcome .....	2
Important Notices .....	2
Keys and Functions .....	3
<b>I. Getting Started .....</b>	<b>4</b>
1.1 Turn on/off .....	4
1.2 Lock/unlock the screen (sleep mode) .....	5
1.3 Connect to computer .....	5
<b>II. Your Home Screen .....</b>	<b>5</b>
2.1 Change wallpaper for home screen: .....	6
2.2 Add/delete applications on home screen: .....	6
2.3 Add widgets to home screen: .....	7
<b>III. Network Connection .....</b>	<b>7</b>
3.1 Wi-Fi .....	7
3.2 Bluetooth .....	8
3.3 3G Network .....	9
<b>IV. Internet Browsing .....</b>	<b>10</b>
4.1 Internet Browsing .....	10
<b>V. Multimedia Functions .....</b>	<b>11</b>
5.1 Music .....	11
5.2 Video .....	12
5.3 Gallery .....	13
5.4 Camera .....	13
5.5 HDMI output .....	14
<b>VI. Settings .....</b>	<b>15</b>
<b>VII. Battery .....</b>	<b>16</b>
<b>Troubleshooting .....</b>	<b>17</b>

## Welcome

Thank you for purchasing this tablet.

 
It brings you much convenience for your business (supports Word, Excel, send & receive e-mails...) and entertainment (supports 3D game, chatting, movie playback, eBooks.....).

Running on Android 4.2, with a quad core 4x 1.6GHz processor and highly responsive capacitive touch screen, it brings you wonderful user experience. Before beginning, please refer to this user manual carefully.

## Important Notices

- The new battery will be in its best condition after 2-3 times full charge and discharge.
- While using the earphone, if the volume is excessively high it may cause hearing damage. So please adjust the volume of the player to a moderate level and balance the time of using.
- Do not disconnect the tablet suddenly when formatting or uploading and downloading, which can lead to program errors.
- Do not dismantle the tablet by yourself, and do not use alcohol, thinner or benzene to clean its surface.
- Do not use the tablet while driving or walking.
- The tablet is not moisture and water resistant. Please do not use it in a damp environment.
- Do not drop or hit it to hard surface, or the screen may get damaged.
- Do not upgrade the firmware by yourself. This would cause damage to your tablet.

## Keys and Functions

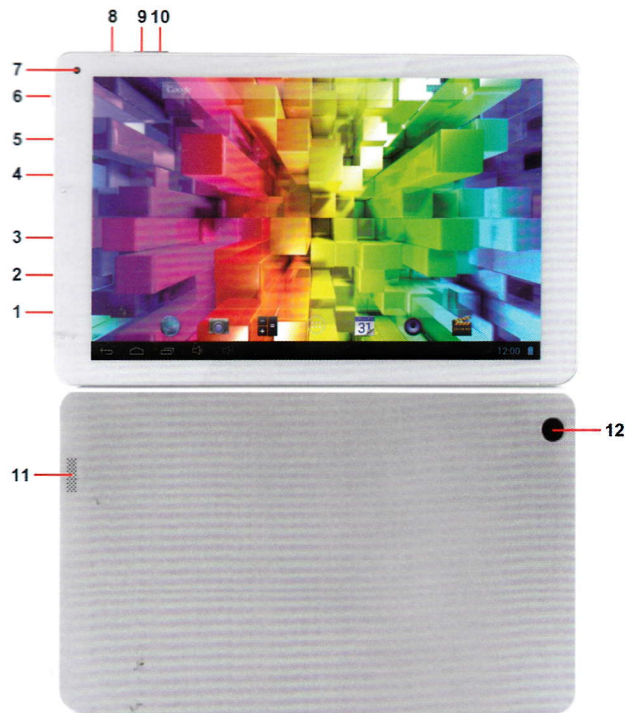

1. TF card slot	To insert your TF card
2. mini HDMI	Connect to TV output via a HDMI cable
3. Microphone	Microphone
4. micro USB	Connect to a 5V output adaptor as included in the accessories or computer via a USB cable to transfer data (music, videos, photos, etc.) USB OTG, supports mouse, keyboard, USB flash disk, etc, with a converting cable


5. Earphone Jack	To connect your earphone
6. Power and lock key	Hold and press to turn on or turn off the unit. Briefly press to turn on or turn off the screen
7. Front camera	2M pixel front camera
8. ESC key	Press the "ESC" to go back
9. Volume - key	Press to decrease the volume
10. Volume + key	Press to increase the volume
11. Speaker	Speaker
12. Rear camera	5M pixel rear camera + Autofocus

## I. Getting Started
 
### 1.1 Turn on/off

#### 1.1.1 Turn on

To start your tablet, press and hold the power key at the right side of your tablet for a while. Tab and drag the lock out of the circle to unlock.

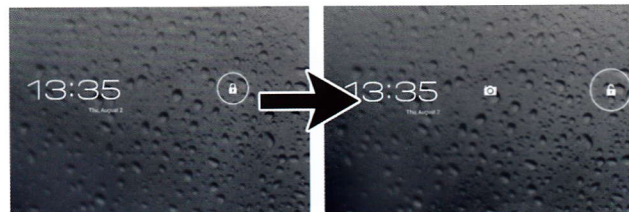

Tab and drag the lock  out of the circle to unlock.

Drag the lock to right: you will go to the home screen.

Drag the lock to left: you will go to camera directly.

#### 1.1.2 Turn off

To power off your tablet, press and hold the power button until the "Would you like to shut down?" dialog appears and tap "OK" to power it off.

## 1.2 Lock/unlock the screen (sleep mode)

To save battery, you should put your tablet in sleep mode by turning off the LCD display. To do this, shortly press the power key. Press it again to wake up the screen.

## 1.3 Connect to computer

You can connect your tablet to your computer with the supplied USB cable so you can transfer media files.

## II. Your Home Screen



a. Google search	Tap to enter Google search page
b. Voice search	Tap to open voice search
c. Applications	Tap to open applications
d. ESC key	Tap to return to the previous screen/ page.
e. Home	Tap to return to your home page
f. Volume -	Tap to lower the volume
g. Volume +	Tap to upper the volume
h. Recent operations	Tap to show your recent operations
i. Time	Time
j. WIFI Signal	There will be WIFI signal when WIFI connected
k. 3G Signal	There will be 3G signal when modem turn on
l. Bluetooth	There will be Bluetooth when it turn on
m. Battery status	Show battery status

## 2.1 Change wallpaper for home screen:

Tab and hold your finger in any blank space of the home screen, you will see a pop-up options; you can choose wallpaper from Gallery, live Wallpapers or Wallpapers.

## 2.2 Add/delete applications on home screen:

There are several apps in the home screen, you can also add more frequently-used app icons in this home page and delete some less frequently-used ones.

Tab the app launcher in the top right corner to go to all apps panel, tap and move the app you want to the home screen.

To delete an app from home screen, tap and hold it, and them movie it to the remove icon 



## 2.3 Add widgets to home screen:

Tab all Apps launcher → Tab WIDGETS. There are Analog clock, bookmarks, calendar, Email, and lots of other widgets. Drag the widget you want to the home screen.

Tips: Besides your home screen, you can access to other four panels by sliding left or right in your home screen. You can also customize these panels.

 
## III. Network Connection


### 3.1 Wi-Fi

Wi-Fi can only be used when it connects with home Wi-Fi Access Point (AP) or a free unsecured Wi-Fi hotspot. Under “Wireless & networks”, tap “Wi-Fi” to turn it on. After a moment, your Wi-Fi networks list should populate. If you need to rescan for available networks, tap “scan”

#### 3.1.1 Turn on Wi-Fi


Within the App Panel, tap “Settings” → “Wi-Fi” to turn on wifi.



Your tablet lists the networks it finds within range. Tap a network to connect. If necessary, enter Network SSID, Security, and Wireless password, and tap “Connect”. When your tablet is connected to the network, the wireless indicator  appears in the status bar. Waves indicate connection strength.

#### 3.1.2 Turn off Wi-Fi

 Please turn off Wi-Fi if you're not using it to save the battery. To turn off Wi-Fi, Tab it again.

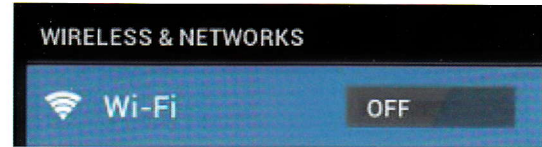

#### 3.1.3 Add a Wi-Fi network

Users may also add a Wi-Fi network under “Wi-Fi settings”. In “Wi-Fi settings”, tap “Add network”. Enter the SSID (name) of the network. If necessary, enter security or other network configuration details. Touch Save.

Note: Network status icons turn blue  if you have a Google Account added to your tablet and the tablet is connected to Google services, for syncing your Gmail, Calendar events, contacts, for backing up your settings, and so on.

### 3.2 Bluetooth

#### 3.2.1 Make device discoverable

You must pair your tablet with a device before you can connect to it. Once you pair your tablet with a device, they stay paired unless you unpair them.

Under “Settings”, choose “Bluetooth settings”. Tap Bluetooth to turn on it and tap “Search for devices”. The Bluetooth indicator  then appears in the status bar.

### 3.2.2 Scan for devices

After scanning, there will be a list of the IDs of all available Bluetooth devices in range. If the device you want to pair with isn't in the list, ensure that the other device is turned on and set to be discoverable.

### 3.2.3 Pair with the Bluetooth device

Tap the name of an available Bluetooth device to pair with. In the popup "Bluetooth pairing request" dialog, type a PIN.

If the pairing is successful, your tablet connects to the device.

Example: to transmit a photo

Go to "Gallery", choose a photo to share. Tap  icon or any spot on the photo to view a submenu. Tap  →  → , and then choose the device name in the Paired devices list. The photo will then be sent.

You can touch the right icon to unpair the device.

Note: After pairing, it shows under the Bluetooth device "Paired but not connected", but file transmission is still possible.

You can see the received files by touch the top right corner icon.

At present, the Bluetooth function only supports files transmission.

To extend battery life, turn Bluetooth power off when not in use.


## 3.3 3G Network

A 3G network is a mobile network that allows high-speed data access and advanced network capacity. Your tablet supports 3G network by a 3G external modem, internet access is possible via a 3G SIM card. After inserting a 3G SIM card to enter the tablet 3G signal automatically appear.

 
## IV. Internet Browsing


### 4.1 Internet Browsing

Before using your browser, make sure Wi-Fi or internet is connected.

In your app panel, Tap the browser  icon to open your browser.


Tap the address bar, the Android keyboard will appear for your entry of keywords or URL.

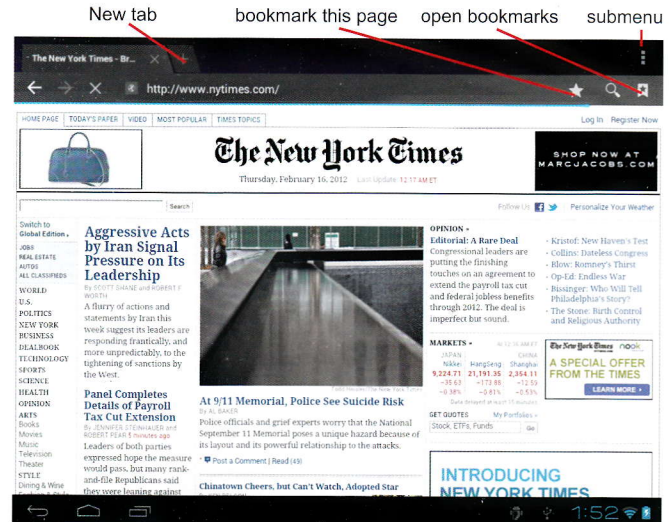



Tap the  icon in the top corner of the browser page to open the submenu.

## V. Multimedia Functions

 
### 5.1 Music


After loading your music into your tablet, tap the music icon  to open the music player. You can select songs by Artist, Albums, songs or Play lists. Tap to select. The media player allows you to shuffle, skip, or pause your current selection and even displays the album artwork when available.

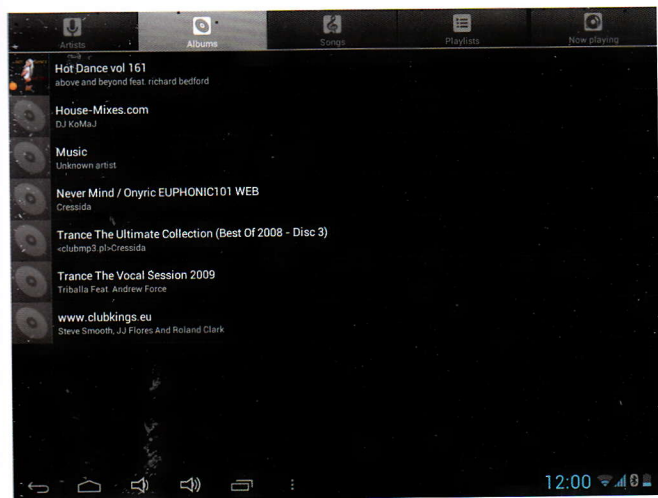

Tab  in the bottom line to open a submenu in music playing page.

### 5.2 Video

 You can play videos saved in your tablet or TF card. To play, tap Video  icon to launch the video player:

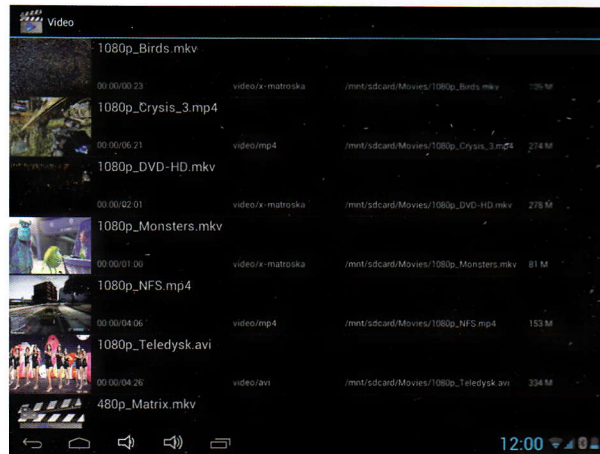


Tab the video you would like to play. Tab the screen to show the video tool bar. You can play back, fast forward, pause your video here. You can also add bookmark for your video, adjust brightness, or set screen ratio here. Here is the toolbar:



With the Wi-Fi on, you are also able to view an on-line video.

## 5.3 Gallery

 You can view, show off, and even edit your digital pictures on the tablet's full color, high-resolution display. After loading your media, tap **Gallery** to display your pictures:

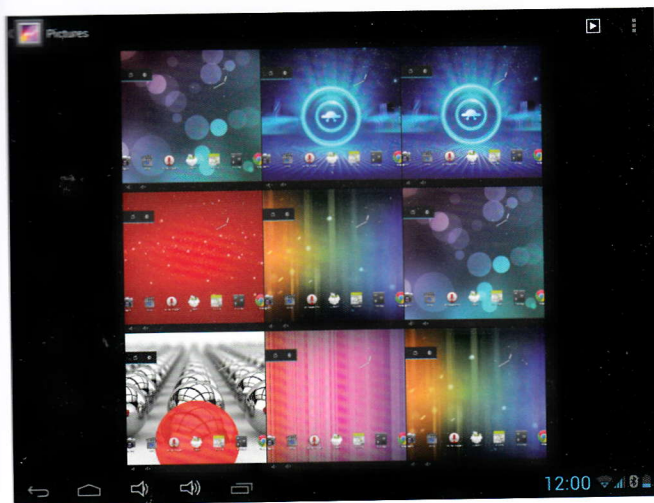

Tap the picture you want to display it, and slide right or left to show other pictures.

Tap the menu icon, you can edit, rotate, crop, or set it as wallpaper.

## 5.4 Camera

 
Tap the **Camera** icon to open camera. You can take a photo, or a video both by front camera and rear camera.

Note: After you power on your tablet, you can go to camera directly by drag the lock to left.

Tab to take a photo

To select Front/ back camera

To view photos

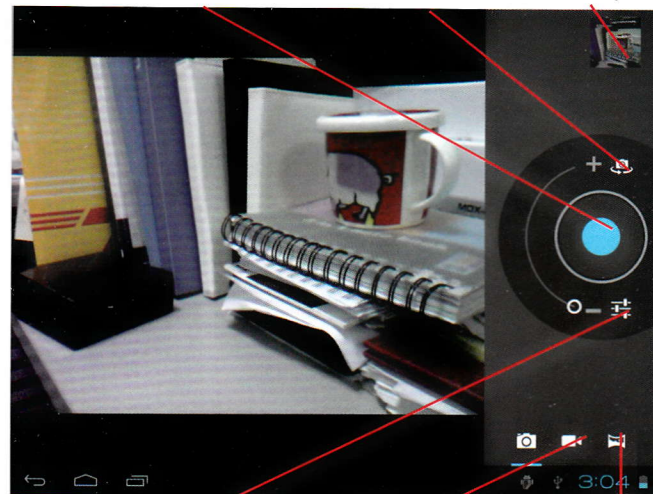

Set white balance,  
Scene mode, etc.

Change to video-taking  
Interface

Pan-shot

## 5.5 HDMI output

a. Tap 'Video player' or other video players and play a required movie.

b. Adjust your TV set and select "HDMI" output

c. Connect the tablet to your TV via HDMI cable, and wait for a few seconds for your TV set to receive signal.

 
You can also operate on your tablet while HDMI connected.



## VI. Settings

Tap the "Settings" icon  to go to settings.

You can check and set wireless&networks, sound, display, storage, Battery, Accounts &sync, security, language, date&time, about tablet, etc.

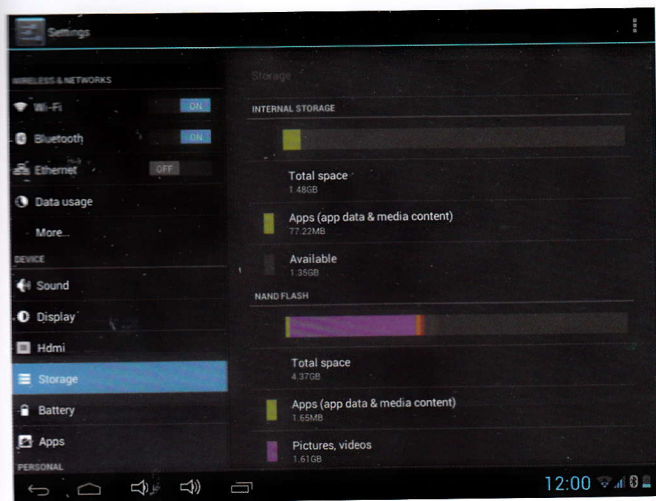

**Wi-Fi:** tap "Settings" → "Wireless & networks" to turn on wifi and scan. It will show a list of Wi-Fi networks scanned in range. Choose a strong Wi-Fi network to connect. (You may need to input the password).

**Display:** To set Brightness, Wallpaper, Sleep time-out, Font size here.

**Storage:** Check internal storage here. If you insert a Micro SD card, or USB disk, you can check the total and available space for your Micro SD card or USB disk. Please unmount it to safely remove it.

**Battery:** Check the Battery status here.

**Display:** Tab "Settings" → "Display" to set brightness, screen time-out, etc.

**Language & input:** to set language and keyboard input.

**Backup & reset:** to go to submenu "back up my data" and "Factory data reset". If you choose factory data reset, all data from your tablet's internal storage will be erased. Choose this option carefully.

**About Tablet:** To check information about your tablet, such as Model number, android version, etc.

## VII. Battery




Very Low Battery



 
Full Battery



Charging Battery

 indicates that the power of Battery is full. When the battery level becomes too low, a prompt comes up to note you to charge your tablet.

While charging, you can check the charging status in the lock screen:

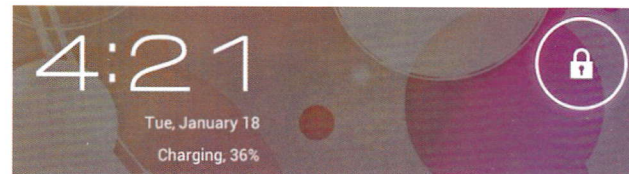

It takes around 5 hours to charge your tablet to full battery. Please only use a power adapter included in the gift box to charge it.

# Troubleshooting

## **Can not turn on the tablet**

Check the tablet's power level; please charge it before starting it. In case your tablet still cannot be turned on, you may try to reset it

## **No sound from earphone**

Check if volume is set to "0". Or earphone may be broken, please change for another one.

## **Big noise**

Check if there is dust in the earphone or speaker. Check if the file is broken.

## **Screen drift or unresponsive screen**

To pin the reset button to reset your tablet and power it on again.

## **Application not workable**

Possible reasons may be that this app is not compatible with your OS or the downloaded .apk file is broken so you may need to download a full version.

## **How delete a Google account?**

If an account is added, the account is shown in "Accounts & sync" of "Settings", where you may also add another account. To delete an undesired account, go to "Settings" → "Privacy settings" → "Factory data reset". Your tablet's internal storage, downloaded apps, etc. will also be deleted, except the info in your flash memory. Be careful before you carry out this operation.