

Please consult your spa user manual for complete info on the features of your spa system.

# in.k600™

## Advanced series of full-function keypads that give complete control to wet fingers!

Aeware's® new series of keypads features a high profile with a large LCD display, menu-driven interface that let users easily control all in.xm<sup>™</sup> functions and programming directly from spa side, creating a true and unique user experience.



\*option available depending upon factory settings

an integrated 120 minute timer. (120 minute built-in timer)



Ő

· Select Blower to turn Blower on.

• Select Blower once more to turn

Starting Blower\*

blower off.

(20 minute built-in timer)



#### Turning Economy on

Lowers the temperature set point of the spa by 20°F (11°C).

(see spa setup section).

• Select Economy to activate the Economy mode. • Select Economy again to override economy programming



#### Standby Mode ()

Stops all pumps at the same time by a simple click of a button!

- Select Standby to activate this mode.
- Select Standby to again to resume normal operations.

System automatically returns to Normal mode after a certain period of time, unless the Standby mode has been reactivated. Spa light will flash for a few seconds before the exit of Standby mode and restart the pumps. The "Standby" message is also displayed during Standby mode.

\* Pump will stay turned on if there is a request for more heat.





#### **Displaying time**

· Press Ok key to display the time. • Press Ok key a second time to go back to water temperature display.

#### Viewing active progress bars

A progress bar is a visual indicator of the time remaining before a device is turned off . Only one bar is displayed at the time.

• Use Left or Right keys to visualize the progress bar of each activated device.

#### Programming



× Economy • 0N • ⇒ £ 1/3



#### • Use (+) key to enable the economy mode, the display will show On.

Setting Economy status

• Use (-) key to disable economy mode, the display will show Off.

- Select Next arrow 
   → on screen
   menu to save changes and go to economy cycle start hour.
- Use (+) or (-) key to set hour setting.

Setting Economy start time

×

⇒

-

•

•

Economy

12:00PM

- Use Left key to access minutes option.
- Use (+) or (-) key to set minutes. • Select Next arrow 🗗 on screen menu to save changes and
- go to the next parameter stop economy.



#### Setting maintenance reminder prompts

This menu allows you to activate/ deactivate or simply reset the maintenance reminder prompts.

#### • Select Reminder option



#### Turning reminders on/off\*

- Use (+) or (-) key to activate or deactivate prompt(s).
- Select Next arrow 
  → on screen menu to save changes and go to next menu screen.
- \*option available depending upon factory settings

× Economy • 12:00PM • (i) 3/3  $\checkmark$ R

### Setting Economy stop time

- Use (+) or (-) key to set hour setting.
- Use Left key to access minutes option. • Use (+) or (-) key to set minutes.

#### • Select Enter option 🔽 on screen menu to save changes and go to back to spa options menu.









#### Turning warnings on/off

- Use Left or Right keys to review all warning messages. • Press Mode key again to go
- back to main menu.

#### Viewing spa warnings

Ţ

0

(²)

٩

 $\triangle$ 

•

-

•

-

(1

The warning icon  $\triangle$  shows up to prompt you to review active warning messages.

#### Resetting prompt messages

- Use Left or Right keys to review one by one all active maintenance messages.
- Select Enter option 🔽 on screen menu to reset message and view next task or go back to main menu.

#### The reminder icon 🐐 will show up to prompt you to review active maintenance messages.

all active warning messages ie:. hot water.

· Select Warning option

#### **Time setting**



#### Setting the time

- Press Mode key
- Select Options menu
- Select Clock setting

#### Setting hour settings

- Use (+) or (-) key to set hour
- setting.Use Left or Right keys to access minutes option.
- Use (+) or (-) keyto set minutes.
- Select Enter option 🗹 on screen menu to back to keypad main menu.

#### Other settings



To program keypad settings

- Press Mode key
- Select Options menu

Display

Normal

2

Select Keypad sub-menu

 $\times$ 

 $\checkmark$ 

Display orientation (inverting)

• Use (+) or (-) key to activate or

deactivate reverse display.

Select Enter option Select Enter option

screen menu to back to

keypad main menu.



#### Setting keypad display options

This sub-menu is used to set keypad display settings such as: contrast, backlight, etc.

Select Display options



#### Setting keypad audio options

This sub-menu is used to set keypad audible options setting such as: keypad on (key beep) and alarm.

• Select Sound options

#### Kepad beep on/off

1/2

(B) Sound

Keypad ▶ On

3

• Use (+) or (-) key to activate or deactivate reverse display.

 $\times$ 

→

• Use Left or Right keys to adjust

display to save changes and go

 $\mathbf{X}$ 

→

desired level of contrast.

• Select Next arrow 📑 on

to next screen menu.

•

-

•

-

•

-

6

Display

Adjusting contrast

Contrast

(0)

• Select Next arrow 🛃 on display to save changes and go to next screen menu.



2/2

• Use (+) or (-) key to activate or deactivate alarm sound. Select Enter Solution on screen menu to save changes and go back to main menu.

 $\times$ 

∍

• Use Left or Right keys to adjust

display to save changes and go

×

 $\checkmark$ 

•

-

•

P

-

-

•

R

Display

Adjusting backlight

backlight brigtness.

Select Next arrow ➡ on

to next screen menu.

((S)) Sound

Alarm

▶ 0n

3

Backlight

(0)



Normal/Reverse display

- Use (+) or (-) key to activate or deactivate reverse display. • Select Next arrow 🔄 on
  - display to save changes and go to next screen menu.



#### Setting regional settings

This sub-menu is used to set keypad regional settings such as: language, select temperature display units and choose a format for time display.

Viewing spa reminders

Spa warnings This menu allows for you to view











#### Setting language

- Use (+) or (-) to select from: English, Français Spanish & Deutsch
- Select Next arrow 
   → on display
   to save changes and go to next screen menu.

| Security         | × | • |
|------------------|---|---|
| Keypod<br>► Full |   | • |
|                  |   | • |
| Ĵ                |   | P |

#### Full keypad lockout

• Use (+) or (-) key to select "Full". • Select Enter 🗹 option on screen menu to back to keypad main menu.

To unlock the keypad, press and hold Light key for 5 seconds.

#### System info



#### Viewing information about the system

To view spa equipment data such as: system, heater and keypad software version, to reset programmed settings and to upgrade keypad software.

- Press Mode key
- Select Options menu
- Select Info sub-menu



#### Upgrading keypad software

- Use Ok key to start the upgrade of the software of the keypad.
- Select Enter option on screen menu to back to keypad main menu and not upgrade the software of the keypad.

## Temperature units

Water temperature can be displayed in °F or °C.

• Use (+) or (-) to change setting. Select Next arrow 
 on display
 to save changes and go to next screen menu.

Spa software ID number and

Select Next arrow on display

version are displayed.

to next screen menu.

## Selecting time format

• Use (+) or (-) to change setting. Select Enter 
 option on screen menu to save changes and go back to keypad main menu.

#### Security options

Partial keypad lock: basic functions of the spa remain accessible (pump and light outputs) but it's impossible to change the temperature Set Point, or to enter Programming mode. Full lock: all keys are disabled. When the keypad is locked, the 🌡 icon will be displayed.

Select Security options

#### Partial keypad lockout

- Use (+) or (-) key to select "Partial".
- Select Enter 🔽 option on screen menu to back to keypad main menu.
- To unlock the keypad:
- Select Mode key
- Press and hold **Option** key for 5 seconds

#### Viewing information about spa Viewing information on heater software

Heater software ID number and version are displayed.

 Select Next arrow 
→ on display to next screen menu.



#### Viewing information on keypad software

Keypad software ID number and version are displayed.

 Select Next arrow 
 →
 on
 display to next screen menu.



#### Resetting keypad programmed values

- Press Ok to reset back to default factory values.
- Select Next arrow 🚽 on display to next screen menu.



