

A series of

NLS-PT950 Portable Data Collector

User's Manual

Version 1.0



Tel: 510 490 3888 Fax: 510 490 3887 http://www.newlandna.com

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions. mav cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment."

CONTENTS

1	STA	ANDARD CONFIGURATION	.1
2	WA	RNING	.3
	2.1	CAUTIONS	. 3
	2.2	HANDLING PRECAUTIONS	. 4
	2.3	BATTERY	. 5
3	SPE	ECIFICATION	.6
4	FAN	MILIAR WITH THE PRODUCT	.7
5	PO	WER	. 8
	5.1	HOW TO LOAD THE BATTERY	. 8
	5.2	HOW TO CONNECT THE POWER ADAPTER	. 9
6	IND	DICATORS AND KEYS	10
7	TU	RN ON\OFF , STAND BY MODE, CHARGE	11
8	DES	SKTOP	12
	8.1	DESKTOP INTRODUCTION	12
	8.2	TASKBAR INTRODUCTION	13
	8.3	CONTROL PANEL INTRODUCTION	16
9	HO	W TO CONNECT PT950 AND PC	32
1() HOV	W TO READ BARCODE	33
11	TRC	DUBLESHOOTING	34

1 Standard Configuration

1, A NLS-PT950 portable (barcode) data collector



A touch pen



3,

2、

A lithium batteries



A 4.8V power adapter



RS232 and USB Data cable





6,





Fujian Newland Auto-ID Tech.Co.,Ltd.

5、

2 Warning

2.1 Cautions

Disassembly and Modification

Please do not try to disassemble or modify the device in any way, for the company does not guarantee to keep it in good repair if damage resulted in there out.

External Power

Please use the power adapter attached to the device, or it will cause the danger o damage.

■Abnormal Conditions

Far away from anything flammable. If the device become hot or emit a strange odo or smoke, immediately turn off power or remove the plug from the socket of alternating current, and contact your dealer or our center of client service. Continued us creates the danger of fire and electrical shock.

Dropping and Damage

If drop the device and damage it, immediately turn off power and contact your deale or our center of client service.

LCD Screen

Do not apply strong pressure to the screen or subject it to strong impact, or it car crack the LCD panel glass.

Should the LCD panel glass ever break, never touch the liquid leaked. Or that wil cause skin irritation and inflammation.

■Heavy Objects

Do not place heavy objects on top of the unit, or it can create the danger loss of balance and the object falling, which can cause personal injury.

■Location

Do not locate the device on a surface that is unstable or uneven, because that will cause the danger of the device falling, which can cause personal injury.

Do not locate the device in an area subjected to large amounts of humidity or

dust, for it can create the danger of electrical shock and fire.

Do not leave the device for long periods somewhere in direct sunlight.

■Area to use

Since the electromagnetic wave eradiated by the wireless module of the device is able to affect the usage of some apparatus, it is forbidden to use a wireless device in certain areas specified, such as: airplane, gasoline station, etc. So please do not use the wireless function of a cell phone in such a situation.

It is also forbidden strictly to charge or communicate in a dangerous area with both wireless and wire communication.

2.2 Handling Precautions

"	If the device can not be turned on because of the electricity cut or some
	abnormal condition, it should be reset. Plug the touch pen into the reset hole
	and then turn the device on.
"	Do not throw or drop the Data Collector or otherwise subject it to strong
	impact, for it can damage the LCD screen, interrupt program execution,
	corrupt memory contents, or otherwise interfere with proper operation.
"	Please clean the glass regularly. Please do not touch the glass for
	penetrating, or it may scrape or blur the glass, resulting in a weak function
	to read.
"	Please do not use something sharp to operate keyboard, in order to avoid
	damage in keyboard or internal short circuit.
"	Use a soft, dry cloth when to clean the Data Collector. Do not wipe with a
	wet cloth. Do not use benzene, thinner, or other volatile chemicals, which
	can result in deformation and deterioration of the materials used in the keys
	and case.
"	Please do not lay the Data Collector down with its keyboard downwards.
	Or it runs the risk of accidental key operation, which can cause
	malfunction.
"	Please do not remove the battery while the device power is turned ON. Or it
	can cause all data in memory to be lost.
"	Sudden temperature changes can cause condensation to form on the device
	case. Operating the device while condensation is present can interfere with
	proper operation. Take care to avoid conditions that cause the formation o
	condensation. If condensation does form, wait until it dries completely
	before using the device.

2.3 Battery

"	Never throw the battery into fire which will result in explosion !
n	Only experiences charge and discharge for 2-3 times can the new battery has the best capability !
"	The battery can at least charge and discharge for 500 times. and wher finally the use time of battery become short, please by a new one.
"	Only use the battery and the adapter which admitted by the manufacturer.
"	Please remove the adapter from the jack when the adapter is not used. Do not charge the battery for over a week, for over-charge could shorten the life of it, the full charged battery will discharge if it is not been used.
"	Charge the battery after it has not power at all. Discharge the battery by turning on the device until it turn off automatically. Please do not use other way to discharge it.
"	Do not use the disabled battery or adapter.
"	Please reclaim and dispose the battery in a correct way, do not dispose it as city life garbage.

.

Specification

CPU		Intel XScale 32 bit RISC, 312MHZ			
Mamarri		64M SDRAM, 32M NOR Flash ROM,			
Memory		32M NAND Flash ROM			
Di	splay	2.8 inch, 260K colors, backlight			
Key Board		22keys on the right face, 3 keys on both sides			
	RS232	RS232 9.6~115.2Kbps			
	IrDA	IrDA 1.0, 9.6~115.2Kbps			
Interface	USB	Slave 1.1			
	CDDC	Dual-Frequency, 900/1800MHz, 85.6Kbps (Max)			
	UPR3	NOTE: The SIIM socket is under the battery.			
Reading Mode		Laser			
Compleate size		Code128, EAN-13, EAN-8, Code39, UPC-A, UPC-E,			
Symbologies		Codabar, Interleaved 2/5, China Post2/5, Code 93 etc.			
Precision		\geq 3 mil			
PCS		\geq 30%			
Roll, Pitch, Yaw		$\pm 35^\circ$, 60° , 60°			
Light Source		Visible Laser Diode 650 nm			
Light Intensity		1000 LUX (in 130mm)			
Illumination		0~100,000 LUX			
Depth of field		45mm - 650mm			
Battery		1600mAH			
Battery last		> 150 hours (standby)			
Scan	Times	> 3000			
Power Adapter		DC4.8V, 1.5A AC Power: AC100~240V, 50~60HZ			
Power Consumption		1.5W			
Operate Temperature		-5°C ~ + 45°C			
Storage Temperature		-20°C ~ + 55°C			
Operating Humidity		5%~95% RH (no condensation)			
Drop		1.2 m			
Dime	ensions	151(L) * 73(W) * 28(H) mm			
W	eight	300g			
Operati	ng System	ARM Linux/WinCE			
Develo	ping tool	CE,FCC			

4 Familiar With The Product



- 1. Indicator
- 2. F9
- 3. F5
- 4. F3
- 5. IC Card(Optional)
- 6. Scan Window
- 7. LCD
- 8. Key Board
- 9. Communicate\charge port
- 10. F10

- 11. F6
- 12. F4
- 13. Infrared communication port

15 16

-17

-18

- 14. Protect rubber
- 15. Label
- 16. Hand strap
- 17. Touch Pen
- 18. Battery cover lock
- 19. Battery
- 20. Reset



5.1 How to load the battery



Step1 :

Push the battery compartment cover toward the unlock mark







Step3 : Load the battery with the label down and install the cover, then lock the cover.

Fujian Newland Auto-ID Tech.Co.,Ltd.

5.2 How to connect the power adapter



Step1 : Open the protector on the button of NLS-PT950



Step2:

Plug the adapter in the adapter port.



Step3:

Connect power adapter to a socket of

AC power.

6 Indicators And Keys



7 Turn On\Off , Stand By Mode, Charge

Turn On	Press the power key of NLS-PT950for 2-3 seconds to
	turn on it, then the system enter "running interface".
Stand By	Touch the power key after turning on the device,
Mode	NLS-PT950 will in the sate of stand by mode.
	Touch the power key again to quit the sate of stand by
	mode. (Note: It must wait after 6-7 seconds.)
Turn Off	Press the power key of NLS-PT950 for 2-3 seconds to
	turn off it.
	NOTE: It must wait after 6-7 seconds to turn on again.
Charge	NLS-PT950 uses adapter to charge for the battery, the
	charging time is about 4 hours. When the charging
	indicator light changes from red to green, which shows the
	battery is fully charged.
	* Only use the adapter equipped with the NLS-PT950
	or manufacturer admitted adapter. Please do not use the
	adapter without the admission of the manufacturer.

8 Desktop

8.1 Desktop Introduction



8.2 Taskbar introduction





Connection	Status Icon
My Computer Connected to usbc Connected Hide this message: Hide Disconnect Disconnect	When the collector is connected to the PC, the connection icon will come out or the taskbar. After a double click, the user car select "Hide or Disconnect". NOTE : When Collector(PT950 already use USB connect to PC,please don't dial GPRS,otherwise it will be not available.

Image: State Stat	Date/Time Properties OK Date/Time Image: Constraint of the second s	ne icon Double click this to acces Date/Time Properties" interface , Alternately: Start - >Settings - >Data/Time After setting date and time, click th "apply" button _o
---	--	--

Battery	status icon
Power Management Battery Level 80 % Inactive Mode 30 Seconds Sleep Mode Never Keypad backlight interval Never Apply(A) Close(C) Power Power Sleep Mode	Double click this to access th "Power Management" menu. Alternately: Start->Setting->Power Management Here you can set: Inactive Mode Sleep Mode Keypad backlight interval After setting, click the "apply" button。





8.3 Control panel introduction



Auto Run 🛛 🔀



Certificates	OK 🔀	
Stores	ort ew hove	Certificates save from systems.

Dialing Properties Location: Home Local settings are: Area code: [425] Tone dialing Country/Region: 1 Pulse dialing Disable call waiting; dial: Dialing patterns are: Local / Long Distance / International: G G G Country/Region: 2:55 AM	ing Setting Dialing parameter.
---	--



Input I	Panel
Input Panel OK Input Panel Current input method: Current input method: Imput Panel Options Imput Panel Imput panel state Imput panel state To quickly switch input methods, tap the Input Panel arrow and then tap the desired method from the menu that appears. Imput Imput Imput Imput	Setting Soft Keyboard Options

Light Setting	
LightSetting Screen Backlight Level Active Level: Inactive Level: Inactive Level: Particle Particle	Can set Active Level 、 Inactive Level、Keypad Backlight Level。





Connection Connection Configure	In "Select a modem" Choose "Wireless modem Port Click "Configure" You will get the screen below。
Device Properties OK Port Settings Call Options Connection Preferences gaud Rate: Baud Rate: 115200 Data Bits: 8 Data Bits: 1 Stop Bits: 1 Bow Control: Hardware Terminal Use terminal window gfter dialing Use terminal window after dialing Manual Dial	This page is for setting configuration of parameters of the modem₀ Select "Port Settings" Select Baud Rate 115200 Click" Call Options" You will get the screen below₀



Connection Connection Modern Select a modern: Wireless Modern Port Configure TCP/IP Settings Security Settings Centry Settings Configure Settings Security Settings Centry Settings	Click "Next" You will get the screen below₀
Connection	Under "Phone number" there is a o entry field, Write"*99***1#" Cick" Finish" You will get the screen below₀

Connection : X X X X Make New Connection GPRS usbc	At this time you will see the "GPRS" on Connection , If want to dial GPRS , double-click
🂱 🜊 Conne 🕪 🔒 3:07 AM 🏴 😤	the GPRS icon , You will get the screen below。
Dial-Up Connection GPRS User Name: GPRS Password: Domain: Domain: Save password Phone: *99***1# Dial from: Home Connect Dial Properties Sign Conn >>>>>>>>>>>>>>>>>>>>>>>>>>>>>>	Click "Dial Properties" You will get the screen below。

Dialing Properties	Click "Edit" to configure the dialing parameters. You will get the screen below。
Conting Properties OK Location: Home Edit Dialing Patterns OK For Local calls, dial: OK Image: Second calls, dial: Image: Second calls, dial: G For International calls, dial: G (E,e = country/region code; F,f = area code; G,g = number) Edit Edit	For each of the three fields, Write "G" click"OK" confirm it This will bring you back to th screen below.

Dial-Up Connection	There is usually no need to write anything here.
GPRS User Name:	Just click "Connect" Wait 3 - 5 seconds
Password: Domain: Save password Phone: *99***1# Dial from: Home Connect Dial Properties	You should get the screen below _o Your GPRS service provider may require a user name, password and domain name here.
🌮 🔍 Conn 🗽 🔒 12:21 AM 🇭 😤	NOTE : While you dial GPRS connecation, collector(PT950) not allow use USB connect to PC,otherwise it will be not available.
Connection Image: Solution in the solutined in the solution in the solution in the solution in t	GPRS dialing finished。
都 🔊 Conn 🦢 🔒 12:21 AM 🏓 🔁	

Owner	
Owner Properties Identification Name: Name: Company: Address: Factor Factor Factor Gamma Excl 1 2 3 4 5 6 7 8 9 0 - = (*) Tab q w e r t y u i o p [1] CAP a s d f 9 h j k l ; ' Shift z x c v b n m , . / + + Ctl äü ` \ Sweener State State Sweener State State State State State State State Carrier State State	Setting "Identification" , "Notes "and "Network ID"。

PC Connection Properties OK PC Connection Image: Connection sto the desktop computer When enabled, connect to the desktop computer using: 'usbc' Change Connection Warning: Changing the connection may disable communications with your desktop computer. Sign PC Co Image: Operation of the connection of the desktop computer. Image: Changing the connection may disable communications with your desktop computer.	Setting whether to allow this device connect to PCo
---	--

?ower Management 🛛 🛛 🔀	
Battery Level 80 %	
Inactive Mode	Power management screen.
30 Seconds 🛛 🐱	Vou con set
Sleep Mode	r ou can set
Never	Time for "Inactive mode"
Keypad backlight interval	Time for "Sleep mode"
Never 🔽	Keypad backlight interval
Apply(A) Close(C)	
- + (C)	

Regional settings	
Regional Settings Properties (M) (N) Region Number Currency Time Date Your locale: Image: Image:	This screen lets you set properties for: Region Number format Currency format and symbols Time and Date formats NOTE: Custom regional settings is available for this version.

Remove Program	
Remove Programs OK X Remove Programs To remove a program, select it and then press Remove.	
Remove.	Remove the programs.
🌮 🍓 Remov 🎐 🔒 3:14 AM 🏓 🕾	



Sys	stem
System Property OK Base General Memory Device OEM: Newland Auto-ID Tech.CO.,Ltd. Web: http://www.nlscan.com/en/ CopyRight: Newland Auto-ID Tech.CO.,Ltd. ProductName: PT950CE HandHeld Version: PT950E V1.2.2 Build070720 System S 2 3:15 AM	Examine the information about the system Base General Memory Device Version

A _

9 How to connect PT950 and PC

1. If you use the RS232 cable to transmit data with PC.

- 1 Connect the data communication cable to PT950.
- 2 Connect the other interface of the data cable to the PC.
- 3 Set the PC and PT950 for the same baud rate.
- 4 When finish above step, PT950 and PC can start communicate.

2. If you use the USB cable to transmit data with PC.

- Install Microsoft ActiveSync. For details, see "Microsoft ActiveSync" help document.
- 2 Second, connect the USB cable to PT950.
- 3 Then, connect the other end of the USB cable to the PC.
- 4 According to the prompt of screen, install PT950 USB driver, Note, During install, select the driver from appointed place(this driver files are wceusbsh.sys and wceusbsh.inf, please find the data from SDK)_o
- 5 When finished the above step, click "My Computer" of PC. You should see a "Mobile Device" icon. Click it, can operate the needy file in copy, paste, delete.

NOTE : When Collector(PT950) already use USB connect to PC,please don't dial GPRS,otherwise it will be not available.

10 How To Read Barcode

Adjust the angle of device to barcode, and the distance between both of them, in order to let the width of laser beam enlarge a little bit to the width of barcode, and able to obtain a great effect to code reading.



11 Troubleshooting

Description	Simple Way To Remove	
	1. Check whether the power is turn on, or the	
The LCD unable to display	device is in the state of dormancy.	
	2. Check whether the battery has power or poor	
	contact.	
	3. The program which has set may result in	
	program crash.	
Short period of operation after full charged	1. Check whether the battery is charged fully.	
	2. Check whether the battery is invalidation, if it	
	is, please change another battery.	
Can not communicate with PC	1. Check whether the communication port is	
	connected.	
	2. Check whether the communication Baud Rate	
	of PT950 and PC is compatible.	
Receive error codes	1, Check whether the communication Baud Rate	
	of PT950 and PC is compatible.	
When charging, the	1. Check whether the adapter of PT950 contact	
indicator do not light	well	
Program crash	1, Press the reset key by the touch pen.	
Unable to read barcode	1. The way to read barcode is wrong; please refer	
	to the reading barcode section in the manual for	
	correct way.	
	2. Whether the type of barcode has been set	
	readable	
	3. This device unable to read this kind of barcode.	

Customer Service Center			
	Business	Support	
E-mail	sindy@ nlscan.cn	chh@mail.nlscan.com	
TEL	+0086-591-83979219	+0086-591-83979211	
FAX	+0086-591-83979208	+0086-591-83979208	
Address	No.1 Rujiang Avenue, Mawei District, Fuzhou, Fujian, Mainland		
	China, Newland Science & Technology Park		
Zip Code	350015		