



## ***HDD MEDIA PLAYER*** **MP-1369S**



## **MULTIMEDIA PLAYER**

For use with 3.5-inch SATA hard drive



# CONTENTS

1. Safety Instructions .....	2
1.1 Warnings and Cautions .....	2-3
2. Installing Product Drivers .....	3-5
2.1 Package Contents .....	5
3. Explanation of the Remote Control .....	6
4. Getting Started .....	7-8
4.1 Basic Operations .....	8
4.2 Main Menu .....	9
4.3 Movie Menu .....	9
4.4 Music Menu .....	9-10
4.5 Photo Menu .....	10-11
4.6 Slide Menu .....	11
4.7 File Menu .....	12
4.8 Setup Menu .....	12-17
5. Special Features .....	17
5.1 Copy .....	17
5.2 Delete .....	18
5.3 Move .....	18
5.4 Rename .....	18
5.5 Screen saver .....	18
5.6 Read txt .....	19
5.7 Folder encryption .....	19



## 1. Safety Instructions

### 1.1 Warnings and Cautions

It is normal that the surface becomes hot when using it as a player but do not cover anything over the device.

The product may generate heat when used for long period of time.

Do not attempt to disassemble this product. Doing so may cause fire, electric shock or electrical leakage, and defectiveness in the product itself.

In the event of unusually abnormal sounds, strange odor or smoke, stop using this product immediately. Please shut down your computer, TV set and peripheral devices promptly.

Do not handle, shake or try to remove this product while hard drive is writing and reading data.

Do not expose this product to the following conditions;

1. Strong vibration or shock
2. Direct sunlight or dust ,hot or humid conditions
3. Extreme temperature fluctuations or near magnetic fields

Regular backup is recommended to preserve and store your valuable data.

Before unplugging power you should stop playing first. Then use the POWER or STANDBY/ON button to enter standby mode (the standby LED turns Yellow).

Do plug the power when playing. If the player is disconnected suddenly during file transfer, it may cause data loss and harm the hard disk.

The hard disk must be set as master. When the device is used as a player, make sure that all partitions are primary (not extended).

### 1.11 Limited Liability

The manufacturer importer and dealer can not be held responsible for accidental damage, including personal injury or any other damage, due to inappropriate usage of the product. Information in the user manual is written for the current specification of the product. The manufacturer continues to provide additional functions and apply new technology to it. All specifications may be changed without prior notice to individual user. Manufacturer should not be liable for any special, incidental or consequential damages. Even if informed of possibility there of in advance.

Furthermore, warranty does not apply to:

Damages or problems resulting from misuse, abuse, accident, alteration or incorrect electrical , incorrect voltage, Any product tampered-with damaged warranty seal or serial number barcode or serial number label, Any product without a warranty or serial number barcode or serial number label. AC adapter and any consumable items delivered with or in the equipment.

Every user of MEDIA PLAYER may only use it in connection with materials legally owned by or licensed to the user and only extend such ownership or license rights that will permit such use.

## 2. Installing Product Drivers

### In Windows XP, Vista, Windows 2000 and Windows Me

Upon connecting your media player to a computer for the first time, Windows automatically installs the required drivers. Your media player is detected as Mass Storage Device and no additional drivers are required.

### In Windows 98 SE

1. Upon connecting you media player to a computer for the first time, the Add New Hardware Dialog box appears.
2. Click the Next button.
3. Select the Search for the best driver for your device option, and then click the Next button.
4. Select the CD-ROM drive check box.
5. Insert the Driver Installation CD into your CD/DVD-ROM Drive, and the click the Next button. Windows searches for the necessary files and lists them in the next dialog box.
6. Click the Next button. Windows copies the necessary files to your computer.
7. Click the Finish button to complete the installation.



#### To prevent data loss, ensure that:


- \* You have disconnected your Portable Hard Disk properly in Windows before unplugging it from the USB port on your computer.(refer to the steps for your respective operating system)
- \* You do not unplug your Portable Hard Disk from the USB port on your computer when files or applications stored on your Portable Hard Disk are in use.

## In Windows Vista

1. Click on the taskbar icon for external hardware




2. Choose your external hard drive and confirm to remove it

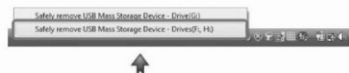


## In windows XP, Windows 2000 and windows Me

 1. Click the Safely Remove Hardware icon on the Taskbar and Click Safe remove USB Mass Storage Device.




2. Unplug your Portable Hard Disk when you are prompted to do so.



-  \* This prompt appears on the taskbar in Windows XP. On other operating systems, a message box appears on the desktop instead.

## In windows 98 SE

1. Wait at least 10 seconds after all file transfers are completed.
2. In windows Explorer, right-click the **Removable disk** icon and click **Eject**.
3. Unplug your player after 10 seconds.

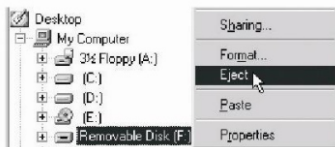

## Checking Package Contents

Confirm that all items are included in the package.

In case you find any missing item, please contact local dealer.

## 2.1 Package Contents

TV Media Player 2.5" / 3.5" (no hard drive included) MEDIA PLAYER

A/V Cable (Composite Video RCA and Audio L/R RCA)

USB 2.0 High Speed Cable

USB Driver CD for Windows 98/SE

Screw bag for hard drive (with screws 4pcs)

Remote control

User's Manual

External Power Adapter

2 batteries

Screw Driver

Keep the box and packing materials/cables in a safe place and use them when transporting the product for the purpose of repair or other service.

## Minimum system Requirements

\*Intel Pentium III 450MHz or compatible processor

\*Microsoft windows XP, Windows 200, Windows Me (Millennium) or windows 98 (Second edition) 128MB RAM

\*Available USB port (version 1.1 or later)

## 3. Explanation of the Remote Control

<b>POWER</b>	Enter or exit standby mode	<b>STOP</b>	Stop playing
<b>SETUPE</b>	Enter function Setup Menu	<b>REW</b>	Rewind, play reverse fast
<b>TV-OUT</b>	Select TV video output (Composite, VGA, YPbPr, YCbCr, HDMI)	<b>FF</b>	Fast Forward, play forward fast
<b>MOVIE</b>	Press the button to enter Movie Menu, all movies are shown in directory structure	<b>Page Up</b>	Page Up or Previous, move to previous page or previous file
<b>MUSIC</b>	Press the button to enter Music Menu, all music are shown in directory Structure on the screen	<b>Page Dn</b>	Page Down or Next, move to next page or next file
<b>PHOTO</b>	Press the button to enter Photo Menu, a photo preview window will show on the screen and all photo share shown in directory structure	<b>REPEAT</b>	Select repeat mode
<b>FILE</b>	Press the button to enter File Menu, all media will show on the screen in directory structure	<b>ROTA TE</b>	Rotate selected photo
<b>DISPLAY</b>	Display/close a transparent menu of media information when playback ENTER Confirm selection (it is equal to PLAY/PAUSE button)	<b>ZOOM</b>	Zoom in/Zoom off selected photo
		<b>S-TIME</b>	Select Slide show interval time
		<b>S-Mode</b>	Select Slide show transition mode between the photos
		<b>MUTE</b>	Volume mute On/Off
		<b>SUBTITLE</b>	Select MPEG4 subtitles
		<b>MAIN PAGE</b>	Press the button to enter/ jump to Main Menu directly
		<b>VOLUME +/-</b>	Adjust volume
		<b>PLAY/P AUSE</b>	Start to play back or confirmation the selection or pause playback

Do not drop the remote control and do not put it in wet places.

When the remote control becomes insensitive, please replace with new batteries.



## 4. Getting Started

After connecting proper video & audio cables to your TV set and MEDIA PLAYER , Now, you can start to operate MEDIA PLAYER step by step.



### Power on MEDIA PLAYER

- Power on your TV set first.
- Connect your MEDIA PLAYER to TV set.
- Power on MEDIA PLAYER by pressing ANDBY/ON button or by remote control POWER button.



**Note: TV-OUT button can be pressed only at MainMenu,SubMenu but not any other Menu.**

When press TV-OUT button, it switch's video output in following sequence.

Composite -- YCbCr / YPbPr -- HDMI(VGA)



The first time power on MEDIA PLAYER may not appear proper Main Menu screen on TV set. This is due to the default setting of video output (Composite) may not match to your current TV setting. Before go to Setup Menu to adjust proper video output, press TV-OUT button is the best way to search available video output.

- Once Main Menu screen is properly shown on TV set, press **SETUP** button to adjust proper **TV type (NTSC or PAL)** and **Video Output (Composite, Ypbpr , HDMI VGA)**.
- If the TV is still blank screen after finishing above installation, be sure to set the TV to correct video input type (AV mode) and channel. Refer to the TV manual for details.
- If the TV is black and white, press **TV-OUT** button to adjust proper video output mode.
- If the TV is distorted or flicking, press **SETUP** button and select TV type to match your TV system, NTSC or PAL.



## 4.1 Basic Operations

### Movie, Music, Photo, Slideshow Playback

There are three main functions for media playback

 
- Play & watch movies (with favorite subtitle language)
- Play & listen to music
- Play & watch photos
- Play & watch slide show
- Use **navigation buttons (UP ▲ / DOWN ▼ / LEFT ◀ / RIGHT ▶)** to move the cursor and use **ENTER** button to select function. Use PageUp (**PREV ▶▶**) or PageDn (**NEXT ◀◀**) to jump to the previous or next page at each menu.
- Or use hotkeys **MOVIE, MUSIC, PHOTO, FILE** buttons on your remote control to go into corresponding menu directly.

## 4.2 Main Menu

- This is the menu that appears when you turn on MEDIA PLAYER .
- There are five main selections **MOVIE, MUSIC, PHOTO, SLIDE** and **FILE**.
- You can access Main Menu by pressing the navigation buttons, **PLAY** or **ENTER** button and enter each sub menu.
- Or you can access Main Menu directly by pressing hot keys **MOVIE, MUSIC, PHOTO, SLIDE, FILE** on remote control.

## 4.3 Movie Menu

- Movie Menu only displays all available video files (movies or films) in file directory style
- You can access Movie Menu by pressing the navigation buttons, **PLAY** or **Enter** button and start movie playback.
- On the "mainpage" button is Switch Buttons for switching to another hard drive (**HD1, HD2, HD3 or HD4**) or return back to Main page.
- Press **REPEAT** button, repeat mode is to select all video play back again or not.

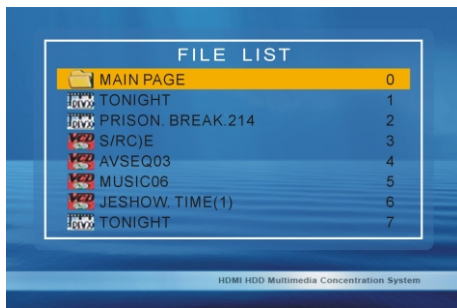


When the cursor bar stays at the location of root directory or any sub directory, any movie file cannot be selected and playback properly until the cursor bar is moved down to any movie file.

## 4.4 Music Menu

 - Music Menu only displays all available music sound files (MP3, oGG, and WMA) in file directory style.


- You can access Music Menu by pressing the navigation buttons to play back music directly without pressing **PLAY** or **Enter** button
- the "mainpage" is Switch Buttons for switching to another hard drive or return back to Main Menu

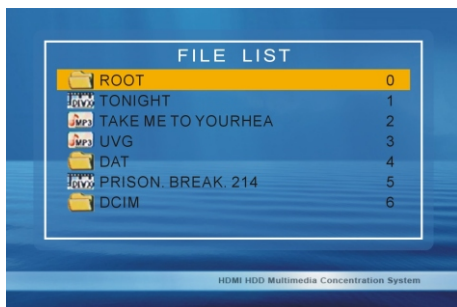

When the cursor bar stays at the location of root directory or any sub directory, any music file cannot be selected and playback properly until the cursor bar is moved down to highlight a music file.

## 4.5 Photo Menu

- Photo Menu only displays all available photo files (JPG/JPEG) in file directory style.
- A preview window on the left-top corner will help you to search proper photo file you want to display.
- You can access Photo Menu by pressing the navigation buttons, **PLAY** or **ENTER** button.
- the "mainpage" button is Switch Buttons for switching to another hard drive or return back to Main Menu.

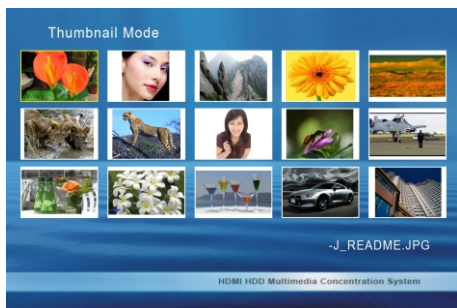 

When the cursor bar stays at the location of root directory or any sub directory, any photo file cannot be selected and playback properly until the cursor bar is moved down to any music file.

## 4.6 Slide Menu

Slide Menu will play all the photo files(JPG/JPEG) in photo menu automatically by background music,you can choose you favourite music and set it to background music. the "mainpage" button is Switch Buttons for switching to another hard drive or return back to Main menu.

you only need to select musics files and put the music files into the root directory of File Menu,then when you clink Slide menu the background musics will play automatically follow the sequence.if you want to change the background music, you need to delete the previous background music and put other musics into the root directory of File Menu.



## 4.7 File Menu

- \* File Menu displays all available files (videos, music, photos) in file directory style.
- \* the "mainpage" button is Switch Buttons for switching to another hard drive or return back to Main Menu.
- \* **PLAY ALL button is disabling at File Menu.**
- \* **The major function of File Menu is to check all files. Media cannot be playback functions in File Menu. Photo preview window, music and movie playback all are disabled in File Menu.**

## 4.8 Setup Menu

 
- Setup Menu is to properly configure MEDIA PLAYER for media playback and system operation.
- On Video Setup Page of Setup Menu, you can adjust proper TV type (NTSC or PAL) or Video Output (Composite/ Ypbpr/HDMI) to TV set.
- On Subtitle Page, you can setup subtitle display on/off or adjust DivX subtitle formats, including subtitle font size, subtitle color and subtitle background color.
- On OSD Language Page, you can select prefer OSD language.
- On Subtitle Language Page, you can select preferable subtitle language to support Divx subtitle display with movie playback.
- On Factory Default Page, you can store back all factory default setting values to MEDIA PLAYER .



## Advanced Operations

### Explanation of Movie Menu the Movie Menu consists of several parts below.

- Switch Buttons: Switch to other hard drive partitions or go back to Main Menu or Playback all (**PALY ALL**) movie inside this directory.
- Sub Menu: display **Movie, Music, Photo, File sub Menu**.
- File Directory: display all movie/video files and sub directory in current directory.
- OSD Display: display any command in selected OSD language.
- File Information: display brief of file information.

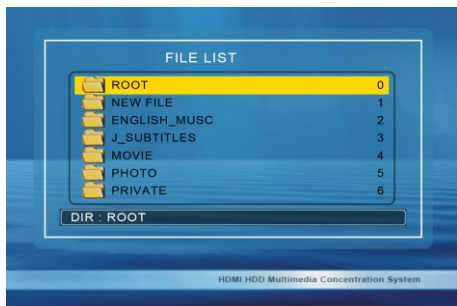

### How to play and watch a movie

- Use navigation buttons (**UP▲ /DOWN ▼**) to move the cursor and locate video files. Use PageUp (**PREW ◀◀**) or PageDn (**NEXT ▶▶**) to jump to the previous or next page. Press ENTER or PLAY/PAUSE **▶** /button to play selected video file in full screen. While playing a movie file, press **FF ▶▶▶** and **REW ◀◀◀** buttons to skip through the movie file. Press PLAY/PAUSE **▶** / button to return to normal speed again.
- While playing a movie file, press PREW (**PageUP ◀◀**) or PageDn (**NEXT ▶▶**) to jump to previous or next movie file directly. Presses DISPLAY button will show brief file information. Press **STOP ■** button to exist movie playback.

### Repeat Mode:

#### REPEAT button can be used to selected below

- **REPEAT FOLDER ON:** playback all video files in current folder continuously.
- **REPEAT FOLDER OFF:** playback all video files in current folder and stop.
- **REPEAT ONE ON:** playback selected single video file continuously.
- To switch to other hard drive partitions or return back to Main Menu, use **LEFT ◀** or **RIGHT ▶** buttons and press **ENTER**.

## **Movie Playback with subtitles (SRT, SUB and SMI files are supported)**

There are two ways to selected subtitle file while playing a movie file.

- Subtitle file is selected automatically.
- Subtitle file is selected by manually.

### **Subtitle file is selected manually**

To automatically selected subtitle file with playing movie file, it is necessary to has subtitle file name as same as movie file name (only extension is different). The subtitle file with same file name must also be located at same file directory with corresponding movie file. For example, if the file name of movie is "Star War.avi", then the corresponding subtitle file must be "Star War.xxx". The xxx extension of subtitle file could be .SRT or .SUB or .SMI.

### **Subtitle file is selected by Manually**

If subtitle file name is different to movie file name, you can still select this subtitle file by manual. No matter where the subtitle file is, find out the location of this subtitle file and press **SUBTITLE** button on remote control.

Then, it shows "**DIVX SUBTITLE SELECTED**" message on screen. After 1~2 seconds when this message is disappeared, go to find out the movie file you wan to play and press **PLAY** button to starting movie playback.

## **How to display subtitle file with correct subtitle language**

Each subtitle file has corresponding language. It is necessary select correct subtitle language to display correct subtitle file.

- To select corresponding subtitle language, please go to Setup Menu.
- Press Setup button - select **OSD Language Page** select Subtitle Language.
- Select correct language corresponding to subtitle file. For example, if the subtitles file to be display is German. Then, you have to select Subtitle Language as Deutsch on Setup Menu.

## **Explanation of Music Menu**

**The Music Menu consists of several parts below.**

- **File Info Window:** display file information of selected music file.
- **Switch Buttons:** Switch to other hard drive partitions or go back to Main Menu or Playback all (PALY ALL) music inside this directory.
- **Sub Menu:** display Movie, Music, Photo, File sub Menu.
- **File Directory:** display all music files and sub directory in current directory.
- **OSD Display:** display any command in selected OSD language and playing time.



- **File Information:** display brief of file information.


## How to play and listen to music

- Use navigation buttons (**UP▲** / **DOWN▼**) to move the cursor and locate music files, the selected music file is automatically playing. Use **PageUp(PREW|◀◀)** or **PageDn (NEXT ▶▶)** to jump to the previous or next page. While a music file is playing, you can press **FF▶▶** and **REW◀◀** buttons to skip through the music file. Press **PLAY/PAUSE▶/■** button to return to normal speed again.
- To stop playing music, you can press **STOP■** button.
- **Repeat Mode:** REPEAT button can be used to selected below.
- **REPEAT ON:** playback all video files in current folder/directory continuously.
- **REPEAT OFF:** playback all video files in current folder/directory and stop.
- **REPEAT ONE:** playback selected single video file continuously.
- To switch to other hard drive partitions or return back to Main Menu, use **LEFT◀** or **RIGHT▶** buttons and press **ENTER**.

## Explanation of Photo Menu

The Photo Menu consists of several parts below.

 - **Photo Preview Window:** preview selected photo file.
- **Switch Buttons:** Switch to other hard drive partitions or go back to Main Menu or Playback all (PALY ALL) photos inside this directory.
- **Sub Menu:** display Movie, Music, Photo, File sub Menu.
- **File Directory:** display all photo files and sub directory in current directory.
- **OSD Display:** display any command in selected OSD language.
- **File Information:** display brief of file information.

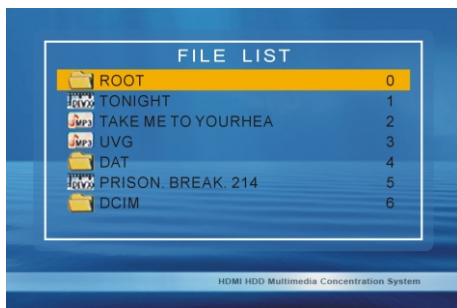

## How to play and watch photo & slide show

### There are two ways to play and watch photo files

- Single photo playing.
- Slide Show playing.

### Single Photo Playing

- Use **navigation buttons** (UP▲ /DOWN▼) to move the cursor and locate photo files. Use **PageUp(PREW|◀◀)** or **PageDn (NEXT ▶▶|)** to jump to the previous or next page. Press ENTER or **PLAY/PAUSE ▶ /** button to play selected photo file in full screen.
- While a single photo is playing, press **PageUp(PREW|◀◀)** or **PageDn (NEXT ▶▶|)**, **LEFT ◀** or **RIGHT ▶** buttons to jump to previous or next movie file directly.
- Press **DISPLAY** button will show brief file information. Press **STOP** button to exist photo playback.
- **Repeat Mode:** REPEAT button can be used to selected below.
- **REPEAT FOLDER ON:** playback all photo files in current folder continuously.
- **REPEAT FOLDER OFF:** playback all photo files in current folder and stop.
- to switch to other hard drive partitions or return back to Main Menu, use **LEFT ◀** or **RIGHT ▶** buttons and press **ENTER**.
- **Photo Zoom:** while playing a photo file, press **ZOOM** button zoom in screen and press navigation buttons can pan the screen up/down/left/right. To return back to normal screen, press **ZOOM** button again.
- **Photo Rotate:** While playing a photo file, you can use **ROTATE** button to turn around photos clockwise.

### Slide Show Playing

Slide Show is to display several photo files continuously.

#### Repeat Mode:

**REPEAT:** button can decide to play Slide Show in folder continuously or one time only.

#### -Transition Mode:

While viewing Slide Show, you can use **S-MODE** button to change the transition effect in between two photos. There are fourteen (12) kinds of transition effects.

**Mode 1: Random**

**Mode 2: Fade out in**

**Mode 3: Slide L to R**

**Mode 4: ROLL: Edge to Center**

**Mode 5: ROLL: Center to LR**

**Mode 6: BLIND: LR to Center**

**Mode 7: ROLL: Right to Left**

**Mode 8: ROLL: Side T B**

**Mode 9: ROLL: Center to TB**

**Mode 10: ROLL: TB to Center**

**Mode 11: Bottom to Top**

**Mode 12: BLIND: Top to Bottom**

### **Transition Time (Interval Time):**

While viewing Slide Show, you can use **S-TIME** button to change the transition time to change interval time in between two photos. The transition time could be 5 second(default value), 10 seconds, 15 seconds.

To exit Slide Show mode, press **STOP** button.

## **5. Special Features:**

### **5.1 Copy**

You can copy all the contents from USB flash drive to HDD(FAT32)

First you need to press "right" button to select copy path and press "display" button on the remote control to select "copy" option, then select the files you want to copy.



## 5.2 Delete

You can delete all the contents you want.

## 5.3 Move

You can move one file from one folder, partition or storage device to another folder, partition, or storage device.

 
The operation is similar with "copy" function

## 5.4.Rename

You can change the name of file.

## 5.5 Screen saver

HDD sleep function (protect HDD)

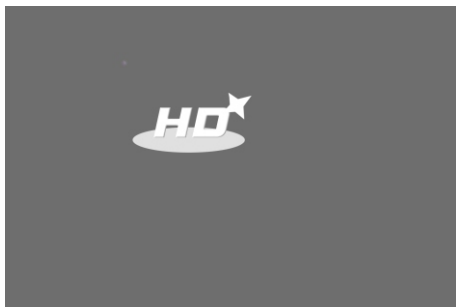


## 5.6 Read txt

You can read txt format file on the TV.

## 5.7 Folder encryption

 You need to create a folder named "private", the default password is 123, You can change it as you like.

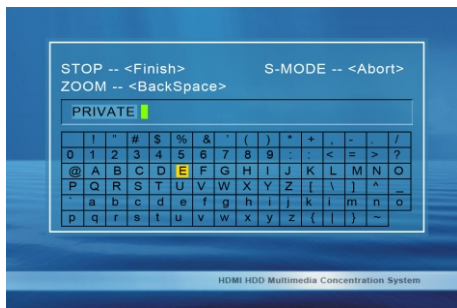





# MISSCOOL™



WARNING: When using this product, please avoid liberating heavily and colliding with other products, prevent the damage of hardware or data losing.

Made in China