



SwitchX® Evaluation Board Hardware User Manual

PN: MT51336-EN-EVB, MT51336-VPI-EVB

Rev 1.5

NOTE:

THIS HARDWARE, SOFTWARE OR TEST SUITE PRODUCT (“PRODUCT(S)”) AND ITS RELATED DOCUMENTATION ARE PROVIDED BY MELLANOX TECHNOLOGIES “AS-IS” WITH ALL FAULTS OF ANY KIND AND SOLELY FOR THE PURPOSE OF AIDING THE CUSTOMER IN TESTING APPLICATIONS THAT USE THE PRODUCTS IN DESIGNATED SOLUTIONS. THE CUSTOMER'S MANUFACTURING TEST ENVIRONMENT HAS NOT MET THE STANDARDS SET BY MELLANOX TECHNOLOGIES TO FULLY QUALIFY THE PRODUCT(S) AND/OR THE SYSTEM USING IT. THEREFORE, MELLANOX TECHNOLOGIES CANNOT AND DOES NOT GUARANTEE OR WARRANT THAT THE PRODUCTS WILL OPERATE WITH THE HIGHEST QUALITY. ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT ARE DISCLAIMED. IN NO EVENT SHALL MELLANOX BE LIABLE TO CUSTOMER OR ANY THIRD PARTIES FOR ANY DIRECT, INDIRECT, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES OF ANY KIND (INCLUDING, BUT NOT LIMITED TO, PAYMENT FOR PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY FROM THE USE OF THE PRODUCT(S) AND RELATED DOCUMENTATION EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Mellanox Technologies
350 Oakmead Parkway Suite 100
Sunnyvale, CA 94085
U.S.A.
www.mellanox.com
Tel: (408) 970-3400
Fax: (408) 970-3403

Mellanox Technologies, Ltd.
Beit Mellanox
PO Box 586 Yokneam 20692
Israel
www.mellanox.com
Tel: +972 (0)74 723 7200
Fax: +972 (0)4 959 3245

© Copyright 2013. Mellanox Technologies. All Rights Reserved.

Mellanox®, Mellanox logo, BridgeX®, ConnectX®, CORE-Direct®, InfiniBridge®, InfiniHost®, InfiniScale®, MLNX-OS®, PhyX®, SwitchX®, UFM®, Virtual Protocol Interconnect® and Voltaire® are registered trademarks of Mellanox Technologies, Ltd.

Connect-IB™, FabricIT™, Mellanox Open Ethernet™, MetroX™, MetroDX™, ScalableHPC™, Unbreakable-Link™ are trademarks of Mellanox Technologies, Ltd.

All other trademarks are property of their respective owners.

Table of Contents

Revision History	8
Chapter 1 Overview	9
1.1 Management CPU	10
1.2 PCIE/1GbE Extender Kit	10
1.2.1 PCIE Extender Kit	11
1.2.2 1GbE Extender Kit	11
1.3 Compliance Ports	11
1.4 Reference Traces	11
1.5 Serial Number and Product Version Information	11
Chapter 2 40 Gb/s Ethernet	13
Chapter 3 FDR	14
Chapter 4 Basic Operation and Installation	15
4.1 Switch Platform Hardware Overview	15
4.1.1 Status LEDs	16
4.1.2 Reset Button	21
4.2 QSFP Cable Power Budget Classification	22
4.3 SFP+ Cable Power Budget Classification	22
4.4 Interfaces	22
4.4.1 Port Connector Interfaces	22
4.4.2 Management and Firmware Updating Interfaces	23
4.5 Switch Platform Installation and Operation	25
4.5.1 Installation Safety Warnings	25
4.5.2 Mechanical Installation	27
4.6 Package Contents and Installation	28
4.6.1 Installing the Switch in the Rack	28
4.6.2 Grounding the Switch	32
4.6.3 Power Connections and Initial Power On	33
4.6.4 Extracting and Inserting the Power Supply Unit	33
4.6.5 Cable Installation	34
4.6.6 Extracting and Inserting the Fan Unit	35
Chapter 5 Installing the PCIE/1GbE Server Side board	37
5.1 PCIE/1GbE Extender Kit parts	37
5.2 Removing the Top Cover	39
5.3 Removing the Management CPU	41
5.4 Installing the PCIE/1GbE Extender	42
5.5 Installing the Server Side Board	44
5.6 Board Connectors Numbering and Locations	45
5.7 Switch Shut Down Procedure	48
5.8 Disassembly of the Switch from the Rack	48
5.9 Disposal	49

5.10 Resetting the Switch	49
5.11 Configuring the Switch for the First Time	50
Chapter 6 Connecting to the Switch Platform.	52
6.1 I2C Connector	52
6.2 How to Get Mellanox Firmware Tools (MFT).	52
6.3 Updating Firmware	53
Chapter 7 Troubleshooting.	54

List of Figures

Figure 1: Connector and Power Side Panels	9
Figure 2: Pull Out Tab	12
Figure 3: Connector and Power Side Panel	15
Figure 4: Power Side Panel	15
Figure 5: Power, Fan, and System LEDs	17
Figure 6: System Health LED	17
Figure 7: Power Side Panel	18
Figure 8: PSU Status LEDs	19
Figure 9: Fan Status LED Connector Side	19
Figure 10: Fan Status LED Power side	20
Figure 11: Reset Button	21
Figure 12: Port Numbering	22
Figure 13: Top and Bottom Ports	22
Figure 14: Management Interfaces	23
Figure 15: Rack Rail Kit Parts	29
Figure 16: Mounting Options	30
Figure 17: Screwing on the Rail	31
Figure 18: Inserting the Caged Nuts	31
Figure 19: Slide the Rail into the Rail Slide	32
Figure 20: Power Supply Unit Extraction	33
Figure 21: PSU Pulled Out	34
Figure 22: Top and Bottom Ports	35
Figure 23: Air Flow Labels	35
Figure 24: Fan Module Latches	36
Figure 25: Server Side Card	38
Figure 26: PCIE/1GbE Extender	39
Figure 27: Screw Locations	40
Figure 28: Slide the Top	40
Figure 29: Management Board Installed	41
Figure 30: Unscrew the Management Board	41
Figure 31: Remove the Management Board	42
Figure 32: Holes for the Extender Board Interfaces	42
Figure 33: Install the Extender Board	43
Figure 34: Connecting the EVB to the Server Side Board	44
Figure 35: EVB Board Connections View 1	45

Figure 36: Reset Button	49
Figure 37: Management Interfaces	50
Figure 38: Transfer Power Cord	59
Figure 39: Install the Switch Slide	60
Figure 40: Transfer Power Cord Finished	60
Figure 41: Connector Pinout	61

List of Tables

Table 1: Revision History8

Table 2: System Status LED Configurations17

Table 3: Connector Physical and Logical Link Indications18

Table 4: PSU Status LED Configurations19

Table 5: Fan Status LED Configurations20

Table 6: Bad Port LED Configurations21

Table 7: Port Connector Numbering46

Table 8: Serial Terminal Program Configuration50

Table 9: Specifications for MT5133656

Table 10: Replacement Parts Ordering Numbers58

Table 11: Connector Pinout61

Table 12: RJ-45 Pinout63

Revision History

Table 1 - Revision History

Revision	Description
1.5	Fixed Figure 35 and Table 7 Added Power up sequence to Section 5.5
1.4	Added Appendix B Thermal Definitions
1.3	Decision to include I2C power side interface
1.2	Changes recommended by the field application engineers
1.1	Added Internal I2C section
1.0	Initial Release

1 Overview


This EVB is intended to be used as a platform to evaluate the SwitchX® silicon. SW engineers can use it as a means for SW development using the SwitchX SDK. SW developers can implement initial driver development/integration into non PPC CPU environments.

Signal integrity engineers can use it to evaluate SwitchX SI performance and compliance to spec. This EVB can be used to:

- evaluate and qualify
 - Ethernet SerDes
 - IB SerDes
 - FC SerDes
- Initial Ethernet and IB switch testing for L2/L2+

This EVB can be used both while rack mounted (standard 19" rack) and in a tabletop setup (for Signal Integrity evaluation).

Figure 1: Connector and Power Side Panels

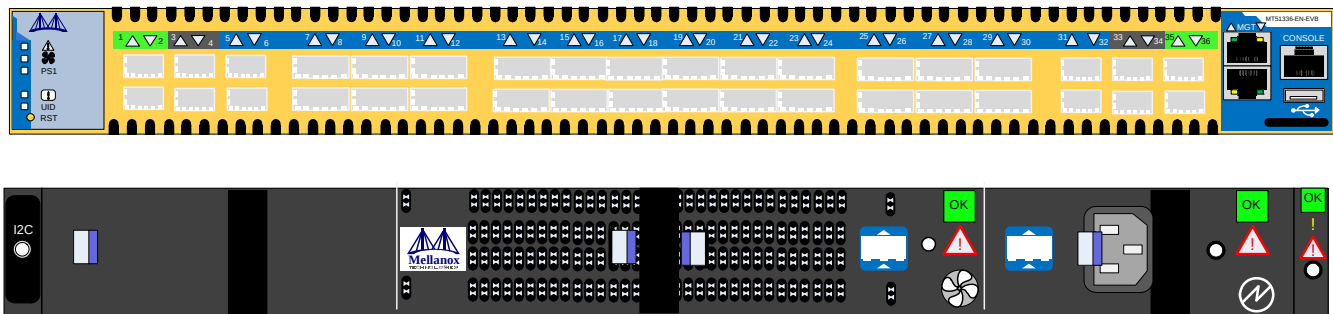

Full Feature List

- Reference traces SMA and mini-SMP
- Compliance ports SMA and mini-SMP
- 2 ports connect to mini SMP connectors for SI testing
- 24 QSFP ports
- 1 PSU
- 8 SFP+ ports
- 24 FDR (56Gb/s) ports in a 1U switch
- IBTA 1.3 and 1.21 complaint
- SDR/DDR/QDR/FDR10/FDR link speed
- FDR10 supports 20% more bandwidth over regular QDR using the same cables/connectors
- All ports can be set to gateway ports connecting to 40GigE (over QSFP) or 1/10GigE (over QSA)
- 4.032 Tb/s aggregate data switching capacity with ultra low latency

1.1 Management CPU

The EVB comes with a Power PC 460E CPU for management. It also comes with a PCIE/1GbE Extender that allows the user bypass the management CPU and to connect directly to the chip.



When the PCIE/1GbE Extender is used the Power PC is removed from the system and **none** of the management interfaces on the connector side will work.



When the Power PC is removed the switch/ EVB becomes unmanaged and does NOT need Initial configuration.

1.2 PCIE/1GbE Extender Kit

The Power PC management module can be removed and in its place a PCIE/1GbE extender can be installed. When the Management module is removed the EVB becomes externally managed. The PCIE/1GbE extender kit contains the system side board and the server side board.

The board has four connectors:

Interface	Description
CX4 connector	for clocking and reset
2 QSFP connectors	one is blue, one is green - The green one goes from the green labeled connector on the EVBdaughter board to the green label on the server side card included in the kit. - The blue one goes from the blue labeled connector on the EVBdaughter board to the blue label on the server side card included in the kit.
Server Side board	a card that gets inserted into the server X8 PCI slot.
Use only one option the PCIE or the Ethernet, do not use both	
RJ 45 connector	for management through an ethernet port

The server side board in the kit, gets inserted in a server. Connect the card into a 8X or 16X PCI slot. This card has 3 ports:

Interface	Description
CX4 connector	for clocking and reset
2 QSFP connectors	one is blue, one is green - The green one goes from the green labeled connector on the EVBdaughter board to the green label on the server side card included in the kit. - The blue one goes from the blue labeled connector on the EVBdaughter board to the blue label on the server side card included in the kit.

1.2.1 PCIE Extender Kit

This option allows the EVB to be managed through the server. This is done with three cables connecting the EVB to the Server. One cable is for clocking and reset and two cables are for data TX and RX.

1.2.2 1GbE Extender Kit

The PCIE extender allows for remote management through the 10/100/1000Mb RJ45 Ethernet connection on the EVB Extender side board. This is connected to any standard Ethernet port fabric management port.

1.3 Compliance Ports

Ports 3 and 4 and 33 and 34 are connected to the chip. These are compliance ports and go to the SMA/mini-SMP interfaces. Ports 3 and 4 are SMA ports and ports 33 and 34 are mini-SMP ports.

Use port 4 for compliance and use port 2 as the reference port. Compliance ports are the worst case loss (for all of the on board connectors) through the channel. They are designed to have an insertion loss of 5.5dB as defined in SFF-8431.

See Figure 12 on page 22 for identifying the trace and compliance ports. See Figure 35 on page 45 and Table 7 on page 46 for locations and numbering of the trace and compliance port board connections.



As of this revision only port 4 is verified at the proper designed insertion loss. Use port 4 for compliance.


1.4 Reference Traces

Ports 1 and 2 and 35 and 36 are not connected to the chip. These are reference ports and go to the SMA/mini-SMP interfaces. See Figure 35 on page 45 and Table 7 on page 46 For locations and numbering of the board connections. Ports 1 and 2 are SMA ports and ports 35 and 36 are mini-SMP ports.

These reference traces are designed to have identical insertion loss as the corresponding compliance ports, and those traces are routed in the same geometry and length as the traces of the compliance ports.

1.5 Serial Number and Product Version Information

The Serial number and GUID for the switch and the MAC for the Management PC are found on the pull out tab below the USB interface connection.

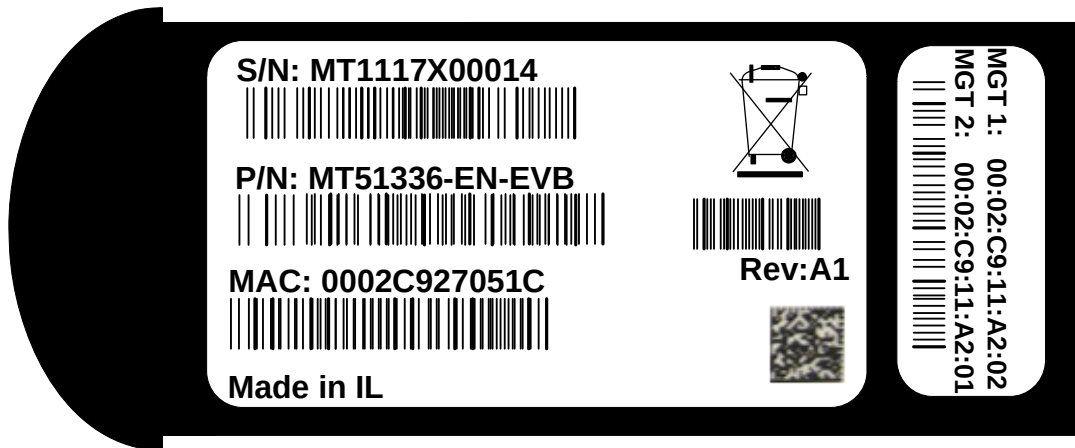Figure 2: Pull Out Tab

2 40 Gb/s Ethernet



40 Gb ETH is only guaranteed to work with approved Mellanox Cables.

Each QSFP port is capable of up to 40GigE and SFP+ ports except for the Reference ports can run at 10GigE/1GigE. Ports 1 and 2 and 35 and 36 are not connected to the chip.

All ports are capable of virtual switching (VEPA+). All usable virtual switching ports are grouped together.

The port protocol can only be obtained from the management interface.

3 FDR

The SwitchX® EVB supports FDR, a pre-standard InfiniBand data rate, where each lane of a 4X port runs a bit rate of 14.0625Gb/s with a 64b/66b encoding, resulting in an effective bandwidth of 54.54Gb/s. The FDR physical layer is an IBTA specified physical layer using different block types, deskew mechanism and framing rules.

SwitchX™ also supports FDR10, a non-standard InfiniBand data rate, where each lane of a 4X port runs a bit rate of 10.3125Gb/s with a 64b/66b encoding, resulting in an effective bandwidth of 40Gb/s.

FDR10 supports 20% more bandwidth over regular QDR using the same QSFP cables/connectors.

Both FDR and FDR10 support Forward Error Correction (FEC), as described in IEEE 802.3ap chapter 74.




FDR10 is only guaranteed to work with approved Mellanox ConnectX-3 adapters.

4 Basic Operation and Installation

4.1 Switch Platform Hardware Overview

Figure 4 shows the power side panel and connector side panel views of the switch EVB.


Figure 3: Connector and Power Side Panel

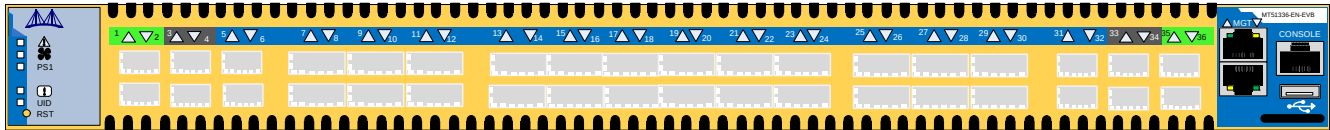

The figure shows port configurations for the switch systems, including:

- 2 – Ethernet RJ45 connectors
- 1 – RJ45 connector for connecting to a host PC (CONSOLE)
- 1 – USB connector
- 24 QSFP ports
- 12 SFP+ ports
- various switch, port, fan and power status LEDs

Figure 4: Power Side Panel

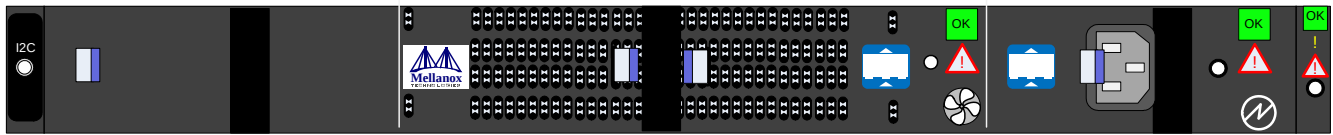

- 1 – hot-swap fan module
- 1 – power supply unit
- 1 – I2C connector
- various switch, port, fan and power status LEDs

All connectivity except for power cords is via the connector side panel. All connectors can support active cables.

4.1.1 Status LEDs

4.1.1.1 System Status Indicators


The System Status indicators () are located to the left of the connectors on the connector side panel, and on the power side at the far right. Both of these LEDs give identical information.

Green – OK

Yellow – a fault in the system

Red – Major Fault or Fatal Error

Led Color shows the switch status

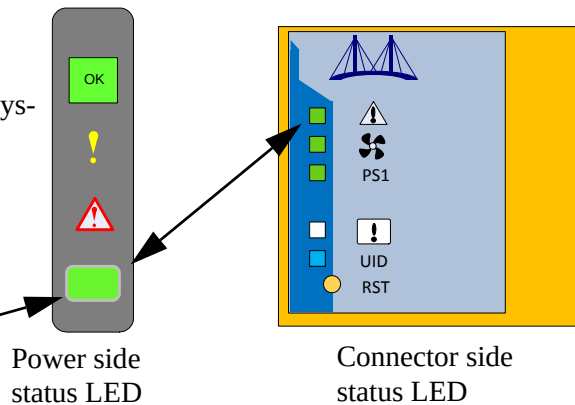

The system status indicators should display as follows:

- When the switch is plugged in, within three minutes the STATUS LED should light up green.
- The PSU LED should light up green. If the PSU LED is not green, this indicates a problem with the power supply. The switch is operational only if the PSU LED is green.



As long as there is power to the switch and the switch is booted up and running, the status LED should be green.


- The FAN LED should light up green. If the FAN LED shows red, troubleshoot the fan module.



If the STATUS LED shows red after three minutes, unplug the switch and call your Mellanox representative for assistance.




If the switch shuts down due to over temperature, unplug the switch, wait 5 minutes and replug in the switch. For more information See “Troubleshooting” on page 54.

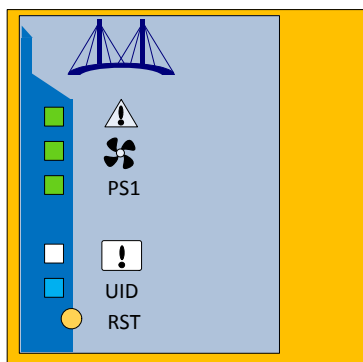Figure 5: Power, Fan, and System LEDs**Table 2 - System Status LED Configurations**

LED Configuration	STATUS/ System Health LED
Solid Green	OK – The system is up and running.
Flashing Green	The system is booting up.
Solid Yellow	Error – A fault in the system, most likely the firmware did not BOOT properly.
Solid Red	Major Error – Possible damage can result to the switch. Turn off immediately. e.g. bad firmware, can't boot, overheated
Off	Off – The system has no power.

4.1.1.2 Power Side Panel System LED

On the right side of the power side panel is a single system LED that displays the health of the switch. This indicator is the same as the system status indicator on the other side of the switch. The LED assignment is as in Table 2.

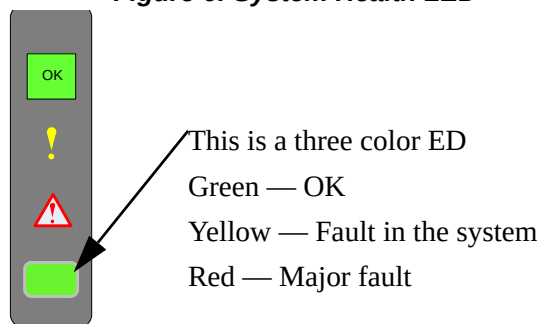Figure 6: System Health LED

4.1.1.3 Port Connector LED Assignment

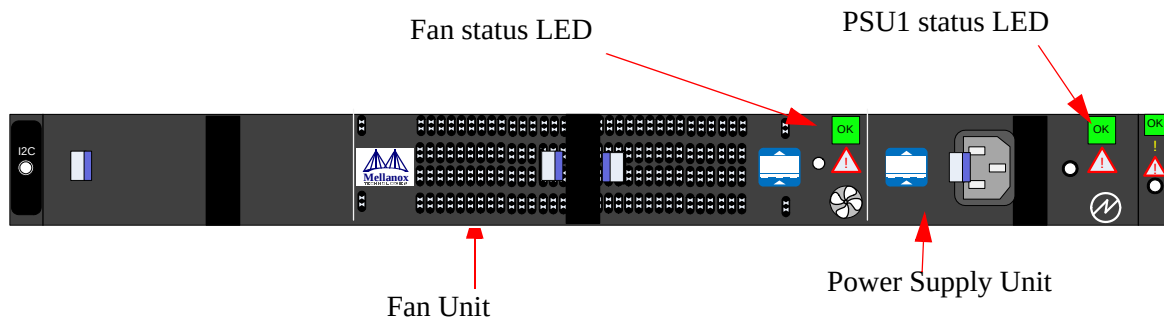
Above the ports are two LEDs one for the upper port ▲ and one for the lower port ▼. The following table shows the port status according to the LED indication.

Table 3 - Connector Physical and Logical Link Indications


LED Status	LED Description
Off	No power to the port
Solid Green	Logical link up
Flashing Green	Data activity flashing speed is proportional to data transfer speed
Solid Orange	Physical link up
Flashing Orange	A problem with the physical link. Usually the SM is down or not enabling the port.

4.1.1.4 Power Supply Status Indicators

The switch EVB is only available with one installed Power Supply Unit.

Figure 7: Power Side Panel


The power supply unit (PSU) is located on the right side of the power side panel. The PSU has a single 2 color LED on the right side of the PSU, that indicates the internal status of the unit.

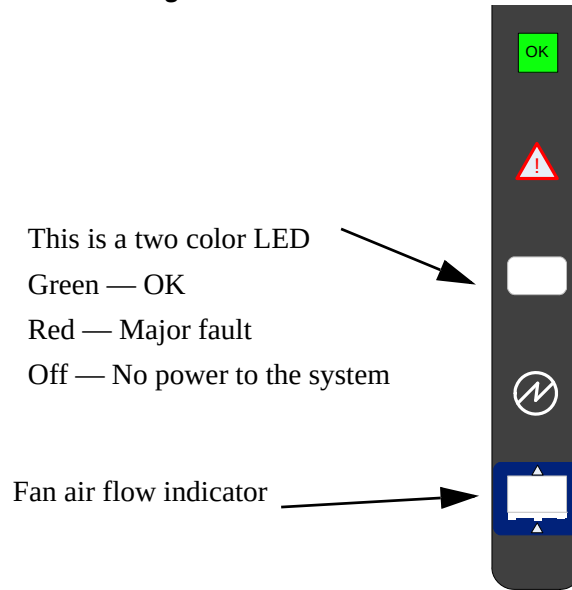Figure 8: PSU Status LEDs**Table 4 - PSU Status LED Configurations**


LED Color	Status
Solid Green	OK – The Power supply is delivering the correct voltage. 12VDC
Solid Red	Error – The PSU is not operational
Off	Off – There is no power to the system .

4.1.1.5 Fan Status Indicators

The indicator  is located to the left of the connectors on the connector side panel.

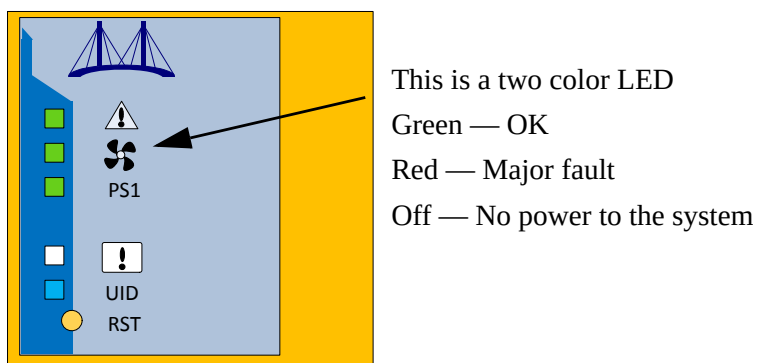Figure 9: Fan Status LED Connector Side

The LED indicator on the Fan Module is on the right side of the module.

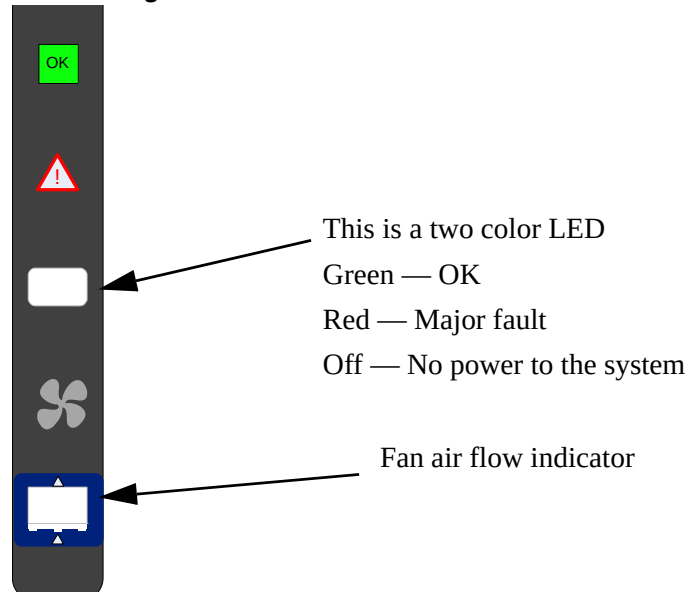Figure 10: Fan Status LED Power side

The following fan status conditions are possible:

Table 5 - Fan Status LED Configurations

LED Configuration	FAN LED
Solid Green	OK – The system is up and running.
Solid Red	Error – One or more fans is not operating properly. The system should be powered down and troubleshoot the fan module.
Off	Off – The fan unit is not receiving any power. Check that the fan unit is properly and completely inserted.



All fans must be operating while the power supply is plugged in.



If the switch shuts down due to over temperature, unplug the switch, wait 5 minutes and replug in the switch. For more information See “Troubleshooting” on page 54.

4.1.1.6 Bad Port LED

The Bad Port indicator  is located on the left side of the connector side panel of the unit. The following Bad Port conditions are possible:

Table 6 - Bad Port LED Configurations

LED Configuration	Description
Off	OK – All ports are up and running.
Flashing Orange	Error –One or possibly more ports has just received a symbol error.

This LED shows symbol errors. Possible causes for this are:

- bad cable
- bad connection
- bad connector

This LED lights up when one or more ports is receiving a symbol error. The LED immediately goes off until the next symbol error is received.

4.1.1.7 UID LED Switch Identifier

The UID LED is a debug feature that will become available to customers in the near future. For details please contact Mellanox Technologies support.

4.1.2 Reset Button


On the connector side panel under the system LEDs is a reset button. This reset button requires a tool to be pressed, a paper clip will do.



DO NOT use a sharp pointed object such as needle or push pin for pressing the Reset button. Sharp objects can cause damage, use a flat object such as a paper clip.

Figure 11: Reset Button

Use an opened paper clip to press the reset button for 15 seconds to reset the main and management CPUs and to delete the existing password.

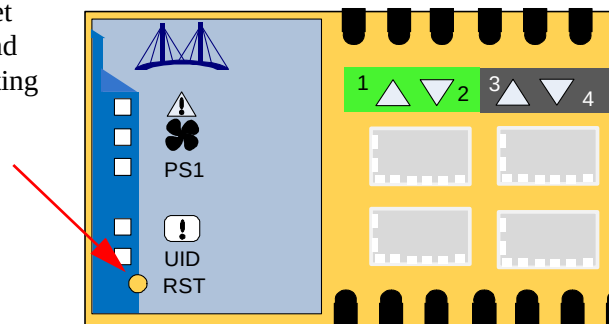

This button resets both the CPU of the switch device and the CPU of the management module. It thereby resets all of the ports by bringing them down and powering them up when the button is pushed. A quick push of this button performs this reset. When the button is held down for 15 seconds the switch is reset and the password is deleted. You will then be able to enter without a password and make a new password for the user admin.

If the PCIE/1GbE Extender is installed the reset button resets the CPU of the switch device only.

4.2 QSFP Cable Power Budget Classification

The SwitchX® EVB QSFP ports are designed for active cables with a max power per module of 2W. Typical power per port is 1.5W.

4.3 SFP+ Cable Power Budget Classification

The SwitchX EVB SFP+ ports are designed for active cables with a max power per module of 1.5W. Typical power per port is 1W.


4.4 Interfaces

4.4.1 Port Connector Interfaces

4.4.1.1 36 Port Switches


The Connector side of the switch EVB has 24 QSFP ports and 12 SFP+ ports. These are placed in two rows, 18 ports to a row. The ports are labelled as shown in Figure 12. The bottom row ports are flipped from the top row. See Figure 13 for bottom row - top row port orientation.

Figure 12: Port Numbering

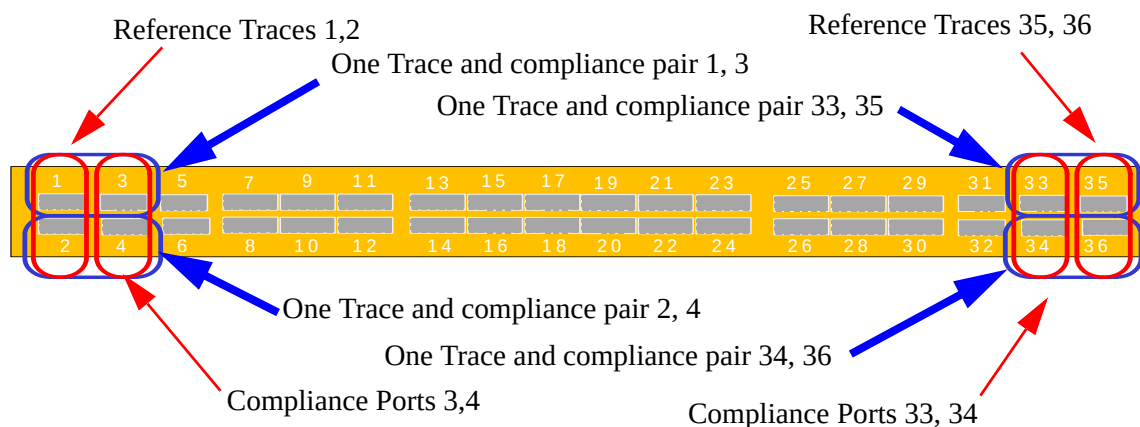

4.4.1.2 Top and Bottom Orientation

Figure 13: Top and Bottom Ports

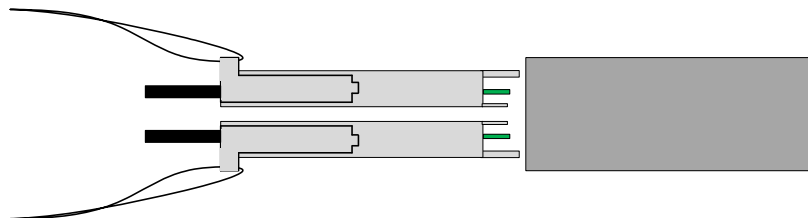

4.4.2 Management and Firmware Updating Interfaces




NONE OF THE MANAGEMENT INTERFACES ON THE CONNECTOR SIDE WILL WORK IF THE MANAGEMENT BOARD WAS REMOVED AND/OR REPLACED WITH THE PCIE/1GbE EXTENDER!

There are four interfaces to connect to the EVB:

- 2 X 10/100Mgb/1Gb Ethernet connectors labelled “MGT”.
- 1 USB port that is labelled . This interface can be used to update software or firmware.
- 1 connector that is labelled “CONSOLE”. Use this connector to connect to the host PC.

There is one I2C interface to connect to the SwitchX® MT51336 on the power side, but this is for Mellanox FAEs and advances users only.

Figure 14: Management Interfaces

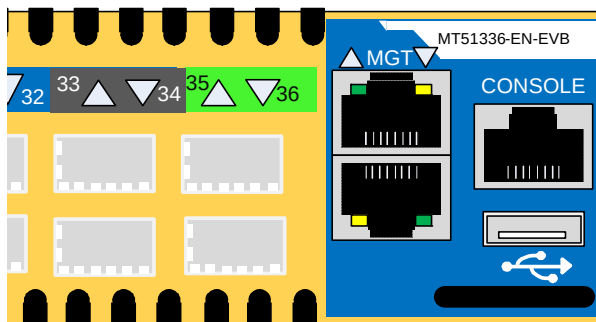

4.4.2.1 RJ-45 Connector (CONSOLE)

The port labelled “CONSOLE” is for a local host connection to the management module. This is used the first time the switch is connected. An HAR 000028 harness is included in the package to connect to a DB9 connection on a host PC. Connecting to a local host PC and following the instructions in the Installation Guide, “Configuring the Switch for the First Time”, must be done before any remote management is available. For the Socket pinout see “RJ-45 CONSOLE and Ethernet interfaces” on page 63.



This connector will not work if the management module is removed. That is if you are using the PCIE/1GbE Extender.

4.4.2.2 RJ-45 Ethernet Connector (MGT)

The Ethernet connection labelled “MGT” provides access for remote management. The switch can be connected to any Ethernet port.



This connector will not work if the management module is removed. That is if you are using the PCIE/1GbE Extender.



Each Ethernet connector gets connected to Ethernet switches. These switches must be configured to 10M/100M/1G auto-negotiation.

4.4.2.3 USB interface

There is a single USB connector. This connector can be used to install software and or firmware upgrades using a memory device that has a USB connector.



This connector will not work if the management module is removed. That is if you are using the PCIE/1GbE Extender.

4.4.2.4 External I2C Interface

There is an I2C connector on the far left of the power side of the switch. This interface is NOT to be used by customers. Use the internal I2C connectors for access to the I2c tree.



This interface is for use with and by Mellanox support personnel only.

There are two 3-pin I2C interfaces on the board. Access to these connectors is only available with the top cover removed.

4.4.2.5 Internal I2C Interface

There is an I2C connector 3-pin type at connector number 19 on Figure 35 on page 45. Use the DB9 to 3-pin dongle (in the MTUSB-1 accessory kit) to connect to this primary 3-pin I2C connector on the board to have direct access to the chip. Connector number 20 on Figure 35 on

page 45 gives access to the secondary I2C connector. Access to these connectors is only available with the top cover removed.



This interface is for use with the help of Mellanox support personnel only.

4.5 Switch Platform Installation and Operation

Installation and initialization of the switch platform are straightforward processes, requiring attention to the normal mechanical, power, and thermal precautions for rack-mounted equipment.

The switch EVB platform requires initial configuration to operate as an InfiniBand switch. All switches come with an internal PPC based management board. This board allows for managing the switch through a host PC or remotely through the Ethernet.

4.5.1 Installation Safety Warnings

For Safety Warnings in French see Section G, “Avertissements de sécurité d’installation (French),” on page 64, for German see Section H, “Installation - Sicherheitshinweise (German),” on page 68, and for Spanish see Section G, “Advertencias de seguridad para la instalación (Spanish),” on page 77.

1. Installation Instructions



Read all installation instructions before connecting the equipment to the power source.

2. Over-temperature



This equipment should not be operated in an area with an ambient temperature exceeding the maximum recommended: 45°C (113°F). Moreover, to guarantee proper air flow, allow at least 8cm (3 inches) of clearance around the ventilation openings.

3. Stacking the Chassis



The chassis should not be stacked on any other equipment. If the chassis falls, it can cause bodily injury and equipment damage.

4. Redundant Power Supply Connection - Electrical Hazard



This product includes a blank cover over the space for the redundant power supply. Do not operate the product if the blank cover is not securely fastened or if it is removed.

5. During Lightning - Electrical Hazard



During periods of lightning activity, do not work on the equipment or connect or disconnect cables.

6. Copper Cable Connecting/Disconnecting



Copper cables are heavy and not flexible, as such they should be carefully attached to or detached from the connectors. Refer to the cable manufacturer for special warnings and instructions. Support the weight of copper by tying them to the rack or to a cable management system.

7. Rack Mounting and Servicing



When this product is mounted or serviced in a rack, special precautions must be taken to ensure that the system remains stable. In general you should fill the rack with equipment starting from the bottom to the top.

8. Equipment Installation



This equipment should be installed, replaced, or serviced only by trained and qualified personnel.

9. Equipment Disposal



Disposal of this equipment should be in accordance to all national laws and regulations.

10. Local and National Electrical Codes



This equipment should be installed in compliance with local and national electrical codes.

11. Battery Replacement



There is a risk of explosion should the battery be replaced with a battery of an incorrect type.
Dispose of used batteries according to the instructions.

12. Hazardous Radiation Exposure

 


Caution – Use of controls or adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure.



CLASS 1 LASER PRODUCT and reference to the most recent laser standards:
IEC 60 825-1:1993 + A1:1997 + A2:2001 and EN 60825-1:1994+A1:1996+ A2:2001

13. Do Not use as a Shelf



Caution: Slide/rail mounted equipment is not to be used as a shelf or a work space.

14. UL Approved AC Power Cords



For North American power connection, select a power supply cord that is UL Listed and CSA Certified

3 - conductor, [18 AWG], terminated in a molded on plug cap rated at 125 V, [15 A], with a minimum length of 1.5m [six feet] but no longer than 4.5m

For European connection, select a power supply cord that is internationally harmonized and marked “<HAR>”,

3 - conductor, minimum 0,75 mm² wire, rated at 300 V, with a PVC insulated jacket. The cord must have a molded on plug cap rated 250 V, 10 A.

4.5.2 Mechanical Installation

The switch platform can be rack mounted and is designed for installation in a standard 19” rack. The power side of the switch includes a hot-swap power supply module, a blank cover, and a hot-swap fan tray. There are two possible air flow directions. Be sure that the switch air flow direction is compatible with your system, rack, and PSU. The connector side of the switch has the data ports, system LEDs, and management connection ports.

The switch platform contains auto-sensing 100 - 240 VAC connections for the PSU.

The installer should use a rack capable of supporting the mechanical and environmental characteristics of a fully populated platform.



The rack mounting holes conform to the EIA-310 standard for 19-inch racks. Take precautions to guarantee proper ventilation in order to maintain good airflow at ambient temperature. Cable routing in particular should not impede the air exhaust from the chassis.

4.6 Package Contents and Installation

Before you install your new EVB board, unpack the system and check to make sure that all the parts have been sent, check this against the parts list below. Check the parts for visible damage that may have occurred during shipping.

The switch comes packed with the following items:

Part	Quantity	Description
EVB Switch	1	Switch EVB
PCIE/1GbE Extender kit	1	a kit that replaces the management module and allows for external management
Power cable	1	Type B 6ft US 125V 10A chord. See “Replacement Parts Ordering Numbers” on page 58 to order power cords for various countries.
harness	1	For connecting from the RJ45 CONSOLE connector to a DB9 connector of a laptop (host)
MTUSB	1 MTUSB	For use by Mellanox FAEs only
QSA	2	QSFP to SFP+ Adapter modules
MC2207130-002	2	QSFP FDR 30AWG 2m cables
MC3309124-004	2	SFP+ 30AWG 2m cables
bumpers	5 x	Rubber feet for using the EVB on a table top.



If anything is damaged or missing, contact your customer representative immediately.

4.6.1 Installing the Switch in the Rack


Tools and Customer Supplied Parts

- Phillips Screwdrivers #1 and #2
- ESD strap
- ESD mat
- grounding screw
- grounding wire sufficient to reach a valid ground.

Parts included in the rail kit:

- 2 rails
- 2 rail slides
- 2 switch slides
- 14 recessed flat head screws for the standard switch
- 10 caged nuts
- 10 pan head screws M6

Figure 15: Rack Rail Kit Parts

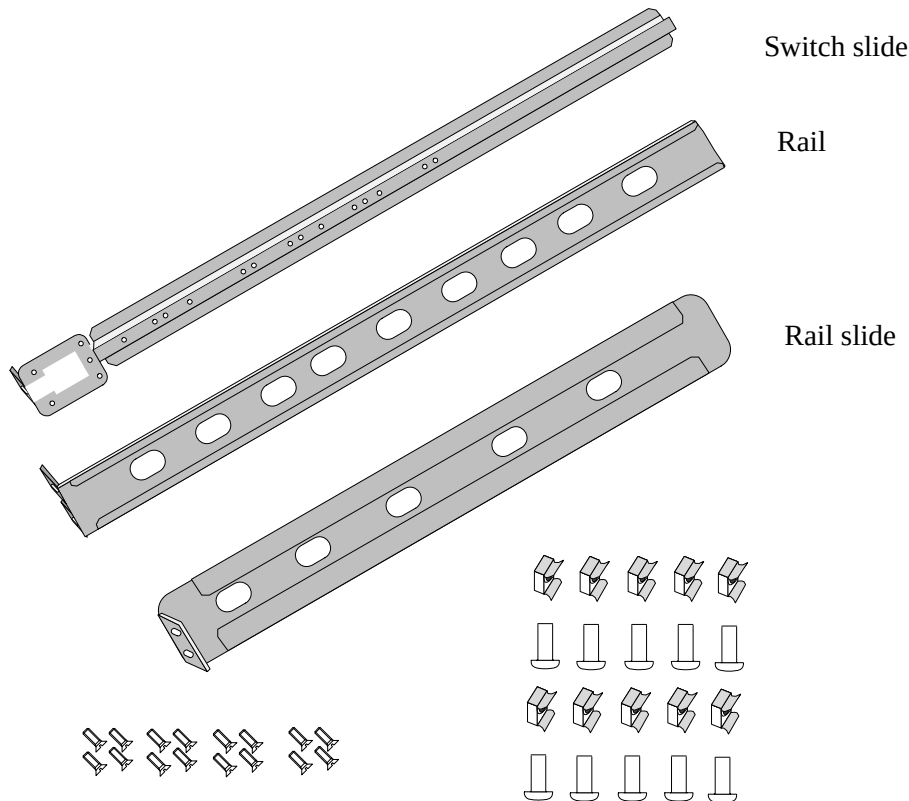

1. Place the ESD mat on the floor where you will be working and put on the ESD strap. Make sure the ESD strap is touching your skin and that the other end is connected to a verified ground.
2. Choose which side of the switch you want even with the rack vertical support. Either the side with the power supply units or the side with the IB connectors can be even with one of the vertical rack supports.




To Transfer the power cord from the connector side to the power side through the rail kit see Section D, “Transferring the Power Cord,” on page 59.

Things to consider before choosing where to mount the rails and rail slides.



The distance between the rack and the door can be as little as 4 cm on one side of the rack and as much as 18 cm on the other side of the rack. Keep in mind that there can be as many as 36 cables connected to the switch.

- Do you want the connector side recessed in the rack to allow for a larger cable bending radius? It is possible to recess the connector side by 5cm by optional placement of the switch rails. See Figure 16, “Mounting Options”.
- Will the connector side be recessed past other equipment in the rack and will this be problematic?
- The installation kit allows for a 2” recess of the switch past the vertical support.

Figure 16: Mounting Options

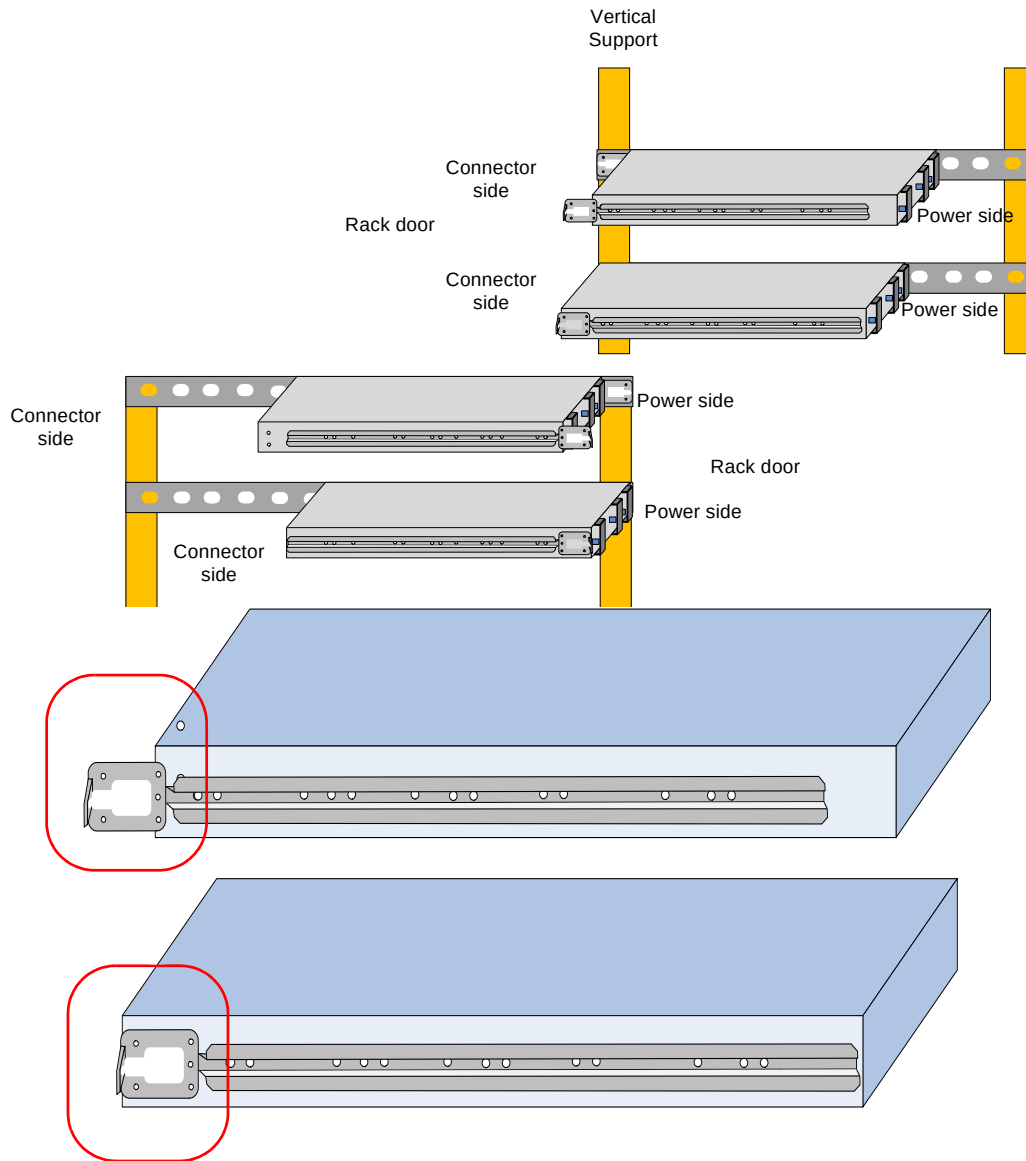


3. Decide which mounting option you want to use.
4. Screw the switch slides onto the switch. Use 5 flat head screws for short switches and 7 screws for standard depth switches, to connect each switch slide.

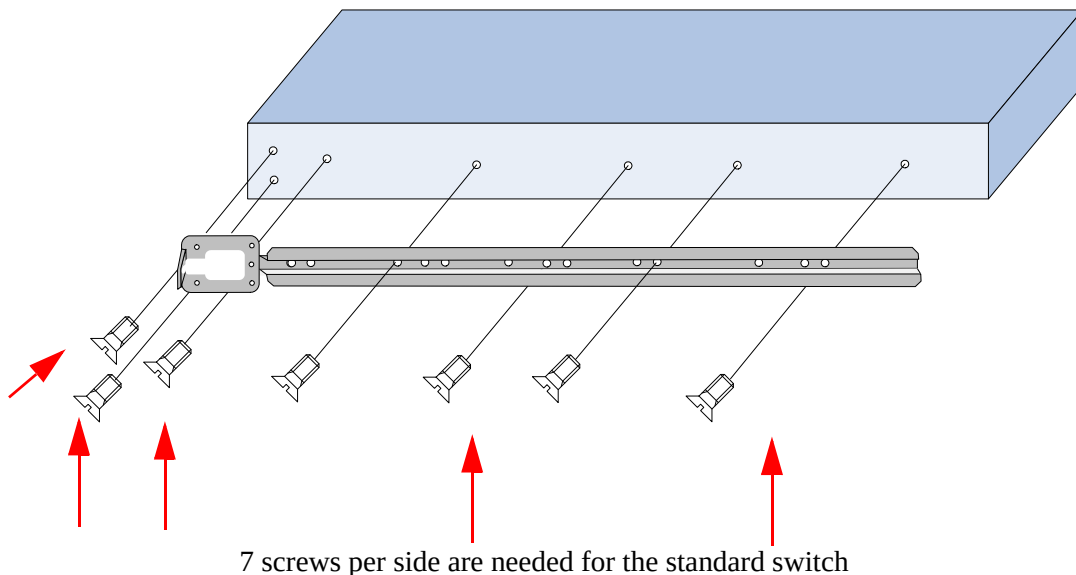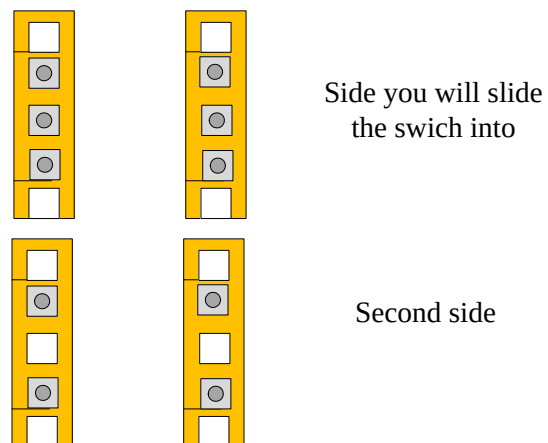Figure 17: Screwing on the Rail**Figure 18: Inserting the Caged Nuts**

5. Clip 6 caged nuts into the holes in the rack on the side of the rack you will be sliding the switch into. Check that both sides of the switch, power side and connector side, are at the same level in the rack.
6. Clip 4 more caged nuts into the holes on the opposite side of the rack. Check that both sides of the switch, left and right, are the same level in the rack.
7. Slide the rail into the rail slide.
8. Using two of the bolts for each corner install the rails and rail slides in the rack. Do not tighten the bolts yet.

Figure 19: Slide the Rail into the Rail Slide

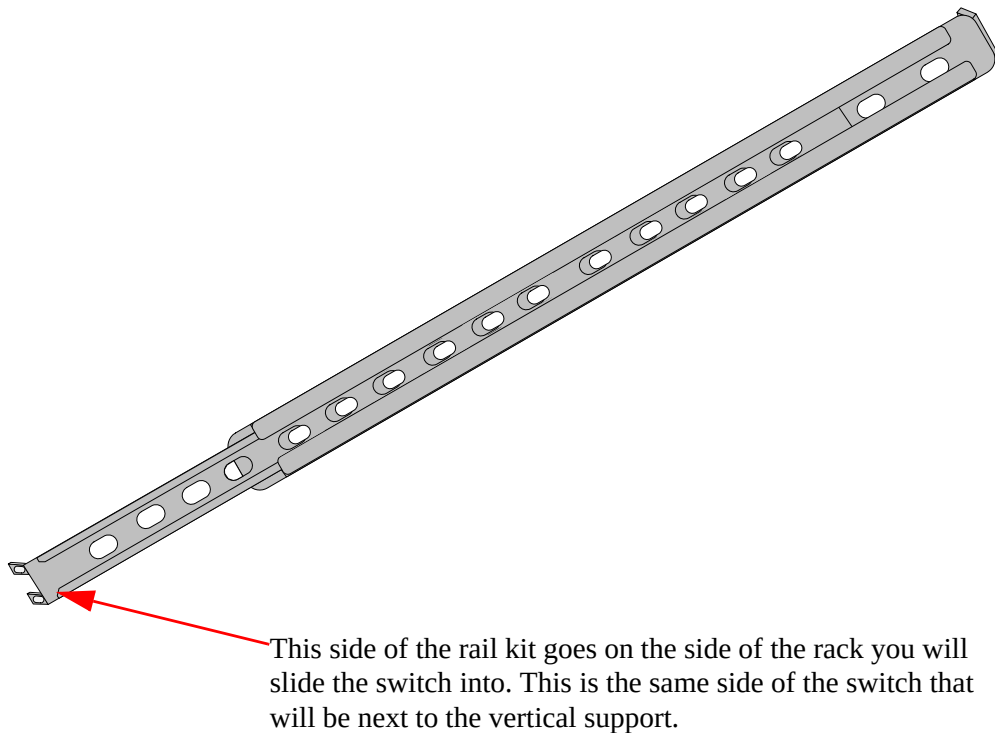

9. Slide the switch into the rails.
10. Tighten the bolts to 9.2 Nm or 81.5 pound inches.
11. Put the switch into place and screw the bolts into the nuts. Tighten the bolts to 9.2 Nm or 81.5 pound inches.
12. Ground the switch.
13. Plug in the power cables.
14. Check the Status LEDs and confirm that all of the LEDs show status lights consistent with normal operation.



Warning: Any yellow or red status LEDs are cause for concern and must be dealt with immediately.
It can take up to 5 minutes to boot up, during which time the status LED may indicate flashing green.

15. You can start connecting all of the cables to the switch.

4.6.2 Grounding the Switch

Check to determine if your local or national electrical codes require an external ground to all IT components. If so, connect a ground wire to one of the casing screws and connect the other end to a valid ground. If you choose to not use the ground screw, make sure that the rack is properly

grounded and that there is a valid ground connection between the chassis of the switch and the rack. Test the ground using an Ohm meter.



Some national and/or local codes may require IT components to be bonded and externally grounded (not including the power cord ground). You must follow all national and local codes when installing this equipment.

4.6.3 Power Connections and Initial Power On

The switch platform ships with one Power Supply Unit. The input voltage is auto-adjusting for 100 - 240 VAC, 50-60Hz power connections. The power cord should be standard 3-wire AC power cord including a safety ground and rated for 15A or higher.



Caution: The switch platform will automatically power on when AC power is applied. There is no power switch. Check all boards, power supplies, and fan tray modules for proper insertion before plugging in a power cable.



Caution: After inserting a power cable and confirming the green system status LED light is on; make sure that the Fan Status indicator shows green.

If the fan status indicator is not green then unplug the power connection and check that the fan module is inserted properly and that the mating connector of the fan unit is free of any dirt and/or obstacles.




Caution: When turning off the switch, make sure to use the shut down procedure.

4.6.4 Extracting and Inserting the Power Supply Unit




Power supply unit has directional air flow similar to the fan module. The Fan module airflow must coincide with the airflow of the PSU. If the PSU airflow direction is different from the fan module airflow direction the system will shut down.

Figure 20: Power Supply Unit Extraction

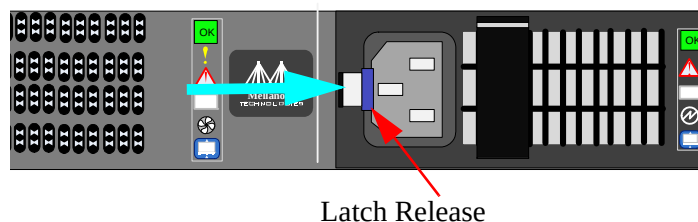

Latch Release

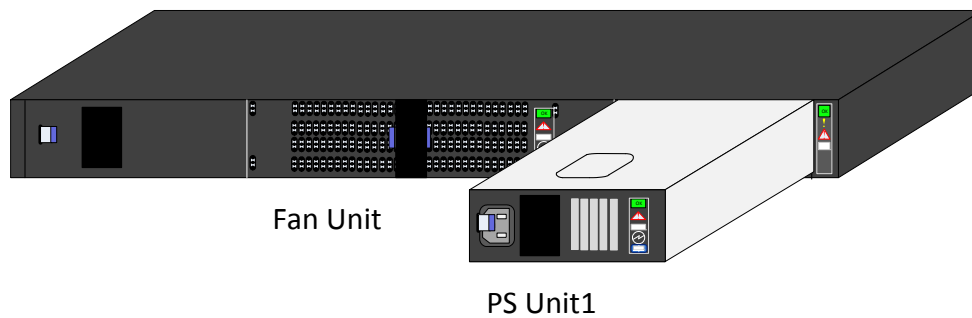Figure 21: PSU Pulled Out

To extract a PSU:

1. If possible, run the shut down procedure. See “Switch Shut Down Procedure” on page 48.
2. Remove the power cord from the power supply unit.
3. Grasping the handle with your right hand, push the latch release with your thumb while pulling the handle outward. As the PSU unseats, the PSU status indicators will turn off.
4. Remove the PSU.

To insert a PSU:

1. Make sure the mating connector of the new unit is free of any dirt and/or obstacles.



Do not attempt to insert a PSU with a power cord connected to it.

2. Insert the PSU by sliding it into the opening until a slight resistance is felt.
3. Continue pressing the PSU until it seats completely. The latch will snap into place confirming the proper installation.
4. Insert the power cord into the supply connector.
5. Insert the other end of the power cord into an outlet of the correct voltage.



The green PSU indicator should light. If not, repeat the whole procedure to extract the PSU and re-insert it.

4.6.5 Cable Installation


All cables can be inserted or removed with the unit powered on. To insert a cable, press the connector into the port receptacle until the connector is firmly seated. The GREEN LED indicator, corresponding to each data port, will light when the physical connection is established (that is, when the unit is powered on and a cable is plugged into the port with the other end of the connector plugged into a functioning port). After plugging in a cable, lock the connector using the latch-

ing mechanism particular to the cable vendor. When a logical connection is made the yellow light will come on. When data is being transferred the green light will blink.



Cables in the bottom row should be inserted up side down in relation to the how the cables are inserted in the top row.

Figure 22: Top and Bottom Ports

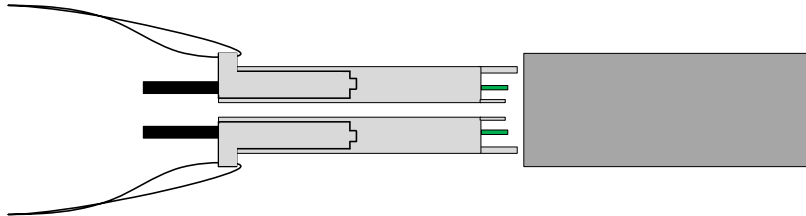

To remove, disengage the locks and slowly pull the connector away from the port receptacle. Both LED indicators will turn off when the cable is unseated.

Care should be taken not to impede the air exhaust flow through the ventilation holes next to the connector ports. Cable lengths should be used which allow for routing horizontally around to the side of the chassis before bending upward or downward in the rack.


4.6.6 Extracting and Inserting the Fan Unit

This switch can operate indefinitely with one of the three fans in the fan module inoperable so long as the ambient temperature is below 45° Celsius.



Operation without a fan unit should not exceed two minutes.
During fan hot-swap, if both indicators are OFF then the fan unit is disconnected.


Figure 23: Air Flow Labels

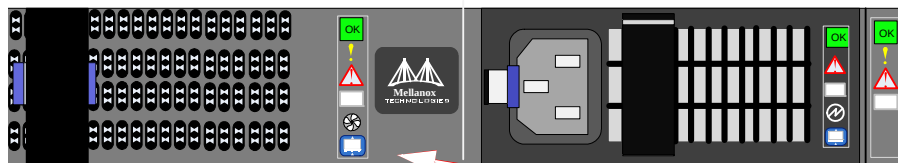

These air flow labels must be the same

➤ To extract a Fan Unit:

1. Using two fingers, push both latch releases towards each other simultaneously while pulling the fan module out of the switch. As the fan unseats, the fan status indicator will turn off.

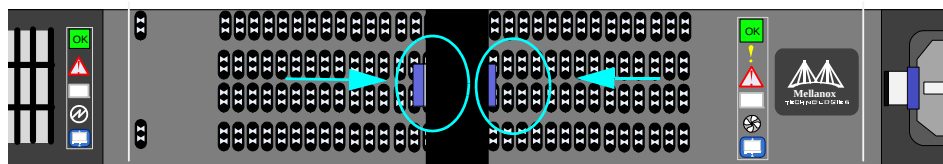Figure 24: Fan Module Latches

These two latches must be pushed towards each other at the same time while the module is pulled out.

➤ **To insert a FAN Unit:**

1. Make sure the mating connector of the new unit is free of any dirt and/or obstacles.
2. Insert the fan unit by sliding it into the opening until slight resistance is felt. Continue pressing the fan unit until it seats completely.



The green fan status indicator should light. If not, extract the fan unit and reinsert it. After two unsuccessful attempts to install the fan unit, power off the switch before attempting any system debug.

5 Installing the PCIE/1GbE Server Side board

The PCIE/1GbE server side board disables the internal Management capabilities and disconnects the management interfaces. When installed the system side board allows for direct contact with the SwitchX® device for external management and SW development purposes. The PCIE/1GbE server side board allows for a direct connection of an external server directly to the SwitchX chip. It allows for a PCIE slot in the external server to be connected to a PCIE port in the SwitchX EVB. This will support a PCIE 2.0 1X connection.

An alternative is to select to use the RJ45 1GbE connection to the SwitchX EVB. The user can connect this RJ45 connector to any Ethernet 10/100/1000 port for management.

5.1 PCIE/1GbE Extender Kit parts

Part	Quantity	For PCIE
PCB server board	1	Server side board
EVB Daughter board	1	System side board
MT-PCI-HS-QSFP	2	QSFP 26AWG 2m cable for the PCIE fabric
MCC4L30-002	1	CX4 30AWG 2m cable for the PCIE clock and Reset


The EVB daughter board has 4 interfaces three for PCIE and one for Ethernet use.



Do not use both PCIE and Ethernet at one time. You must select either the PCIE or the Ethernet connection.


The interfaces are:

Interface	For PCIE
CX4	clocking and reset of the PCI Express
QSFP	for connection to the server side board
QSFP	for connection to the server side board
Interface	For Ethernet
RJ45	for remote Ethernet connection

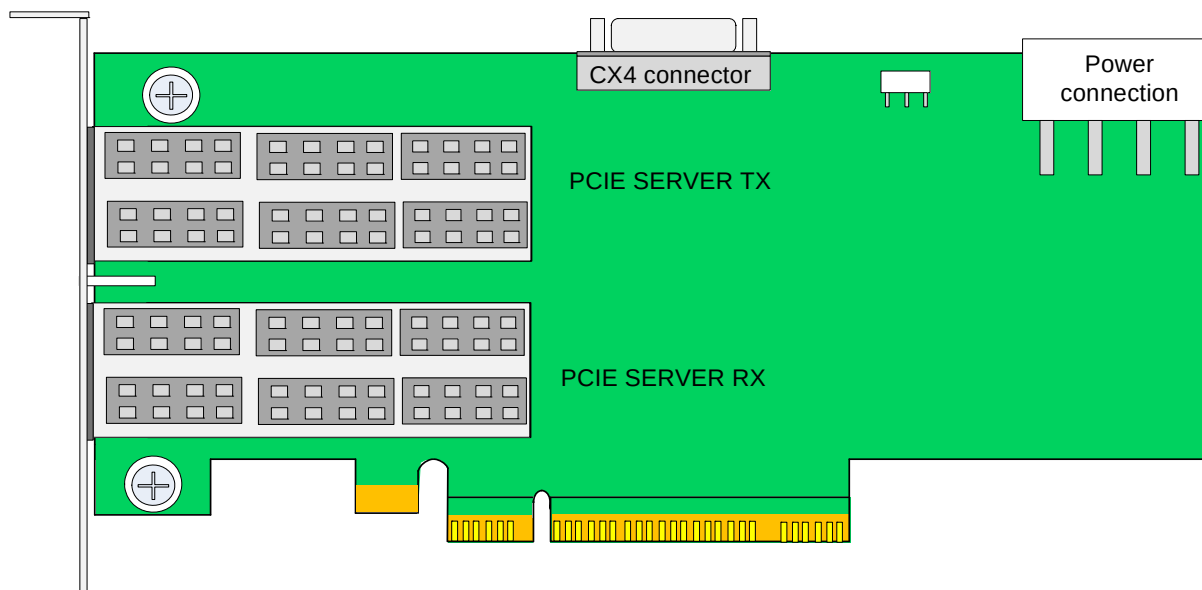Figure 25: Server Side Card

The PCB server board has 3 interfaces:

Interface	For PCIE
CX4	clocking and reset
QSFP	for connection to the server side board
QSFP	for connection to the server side board


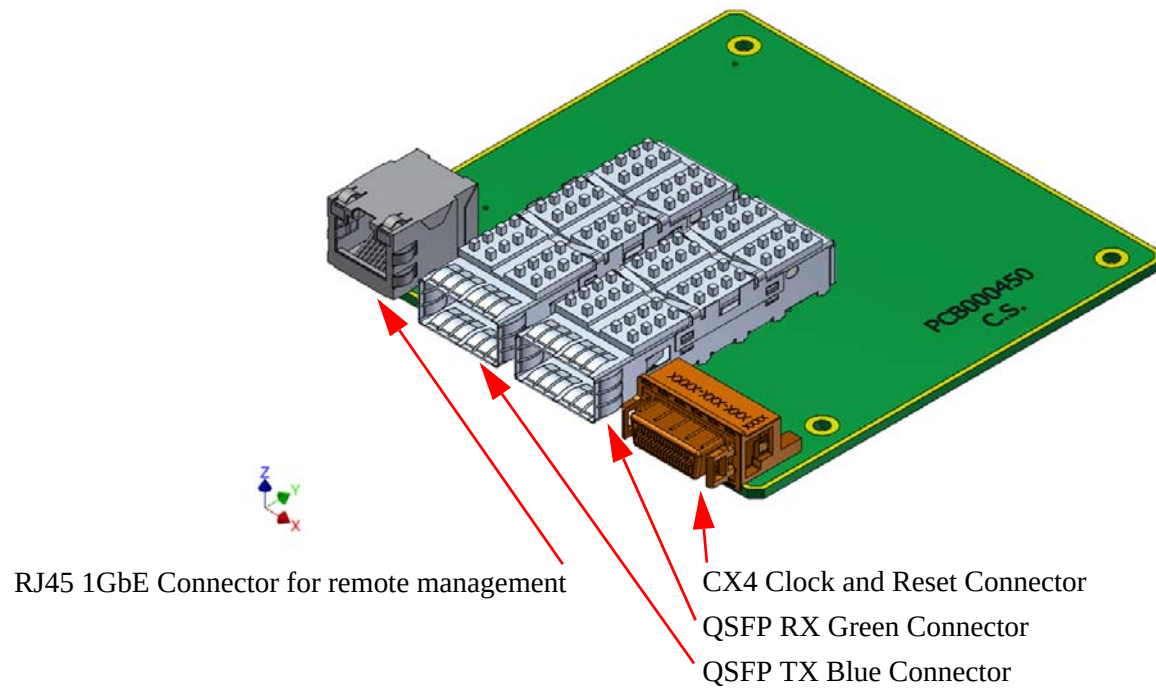
Figure 26: PCIe/1GbE Extender

5.2 Removing the Top Cover

1. Place the ESD mat on the floor where you will be working and put on the ESD strap. Make sure the ESD strap is touching your skin and that the other end is connected to a verified ground.
2. Remove the 6 screws from the power side of the top.
3. Slide the top towards the power side.



With the cover off you will need a clip on fan cooling the chip heat sink.

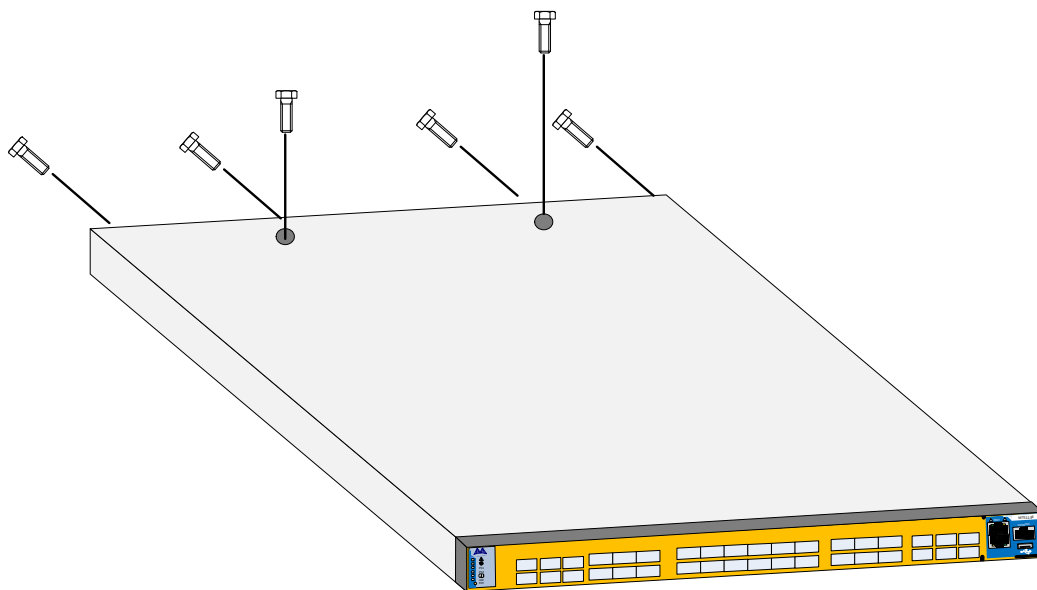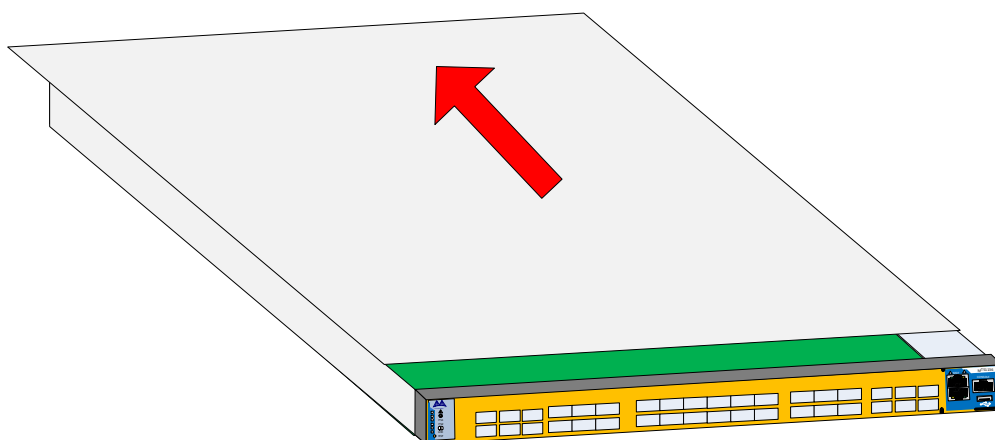Figure 27: Screw Locations**Figure 28: Slide the Top**

5.3 Removing the Management CPU

Figure 29: Management Board Installed

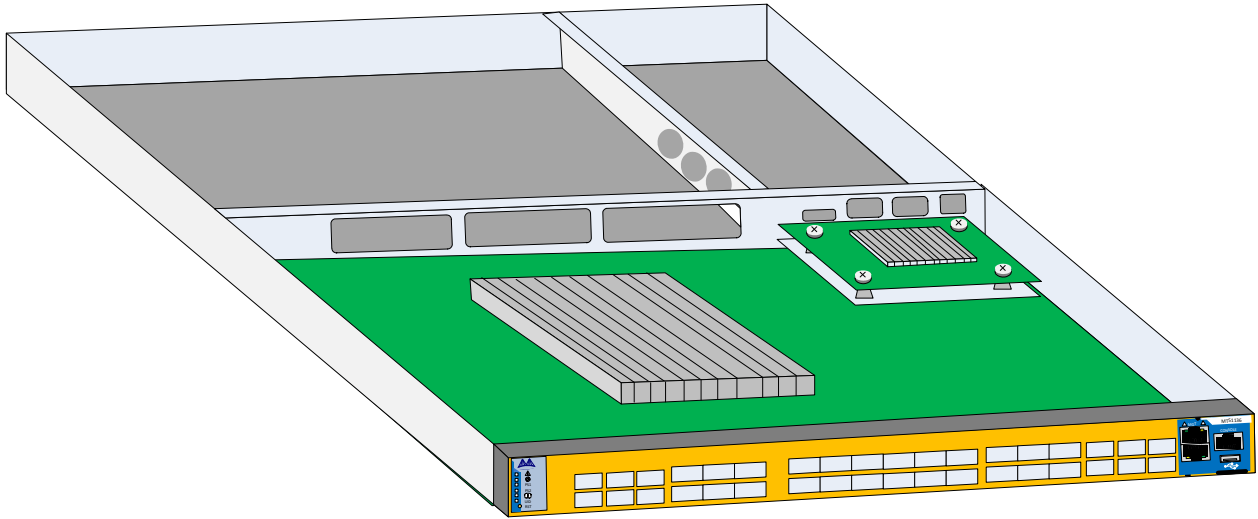


Figure 30: Unscrew the Management Board

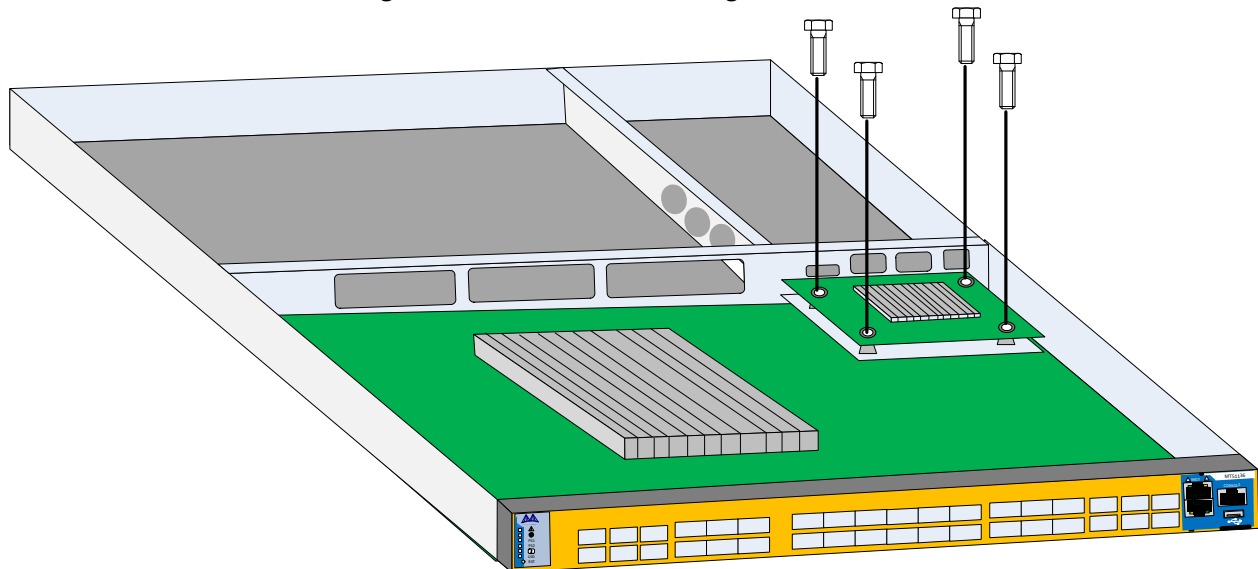
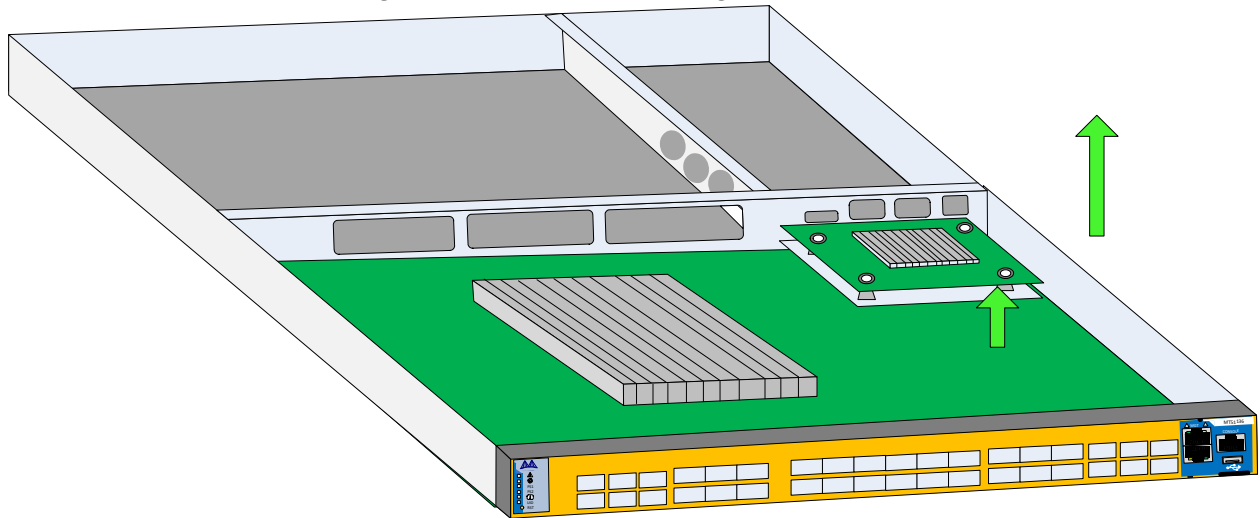


Figure 31: Remove the Management Board

Pull up the management card.

5.4 Installing the PCIe/1GbE Extender

1. Place the ESD mat on the floor where you will be working and put on the ESD strap. Make sure the ESD strap is touching your skin and that the other end is connected to a verified ground.
2. Put the connectors for the extender daughter board through the holes in the frame.



Figure 32: Holes for the Extender Board Interfaces

Figure 33: Install the Extender Board

3. Push the daughter board down into the board connector.
4. Screw in the four screws.
5. Remove the blank panel from the power side of the EVB.
6. Put the wire ties onto the bottom of the case.
7. Run the cables through the power side end of the EVB. The cables are:
 - for 10/100/1000Mb Ethernet management
 - RJ45 Ethernet cable — Connect the RJ45 cable to a switch or server Ethernet port. This is 10/100/1000Mb interface.
 - For PCIE control
 - 1 CX4 cable
 - 2 QSFP cables blue to blue and green to green



Connect all 3 connectors blue, green, and Clock from the Extender to the Server.

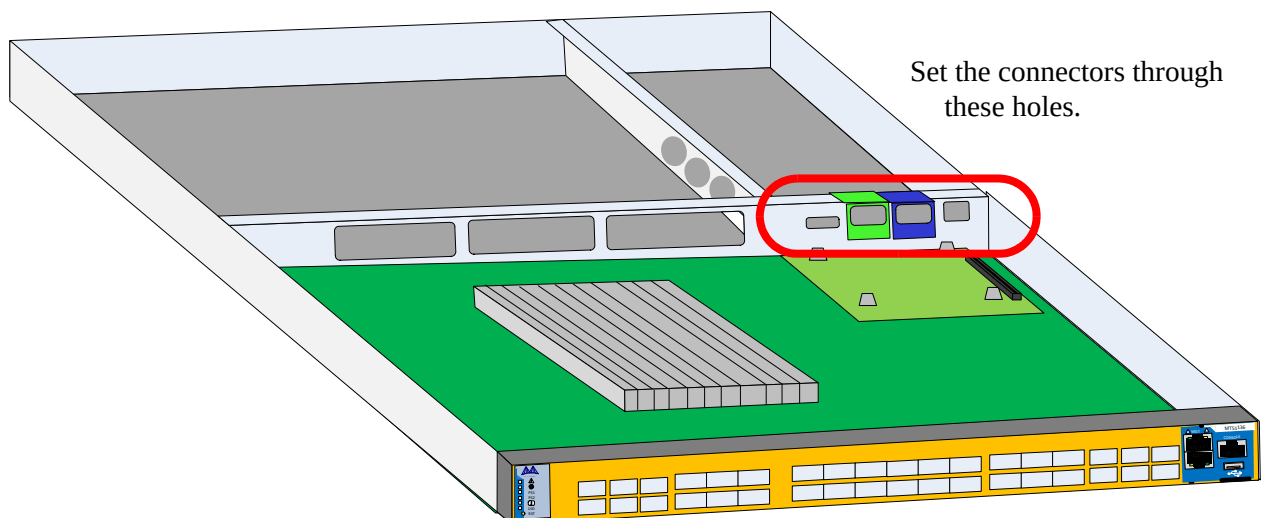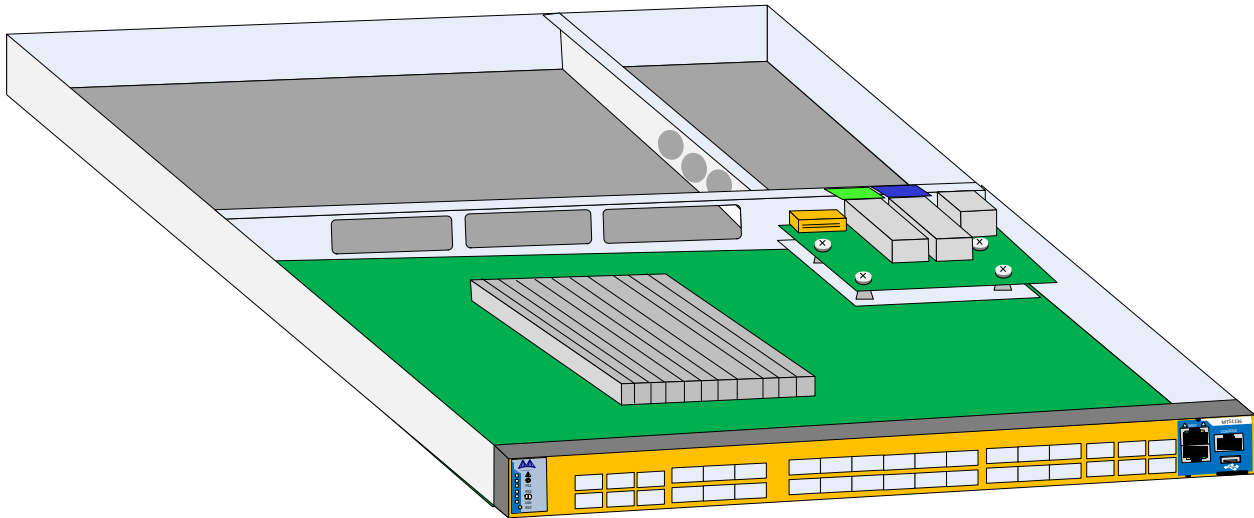

Select only one of these two options. Either use the RJ45 Ethernet connection option or the PCIE option.
DO NOT TRY AND USE BOTH OPTIONS AT THE SAME TIME!




When running the SwitchX® EVB without the top cover use portable fans to keep the heat sinks cool.

5.5 Installing the Server Side Board

1. Place the ESD mat on the floor where you will be working and put on the ESD strap. Make sure the ESD strap is touching your skin and that the other end is connected to a verified ground.
2. Insert the server side board into a X8 or X16 PCIe slot in the server.


Figure 34: Connecting the EVB to the Server Side Board

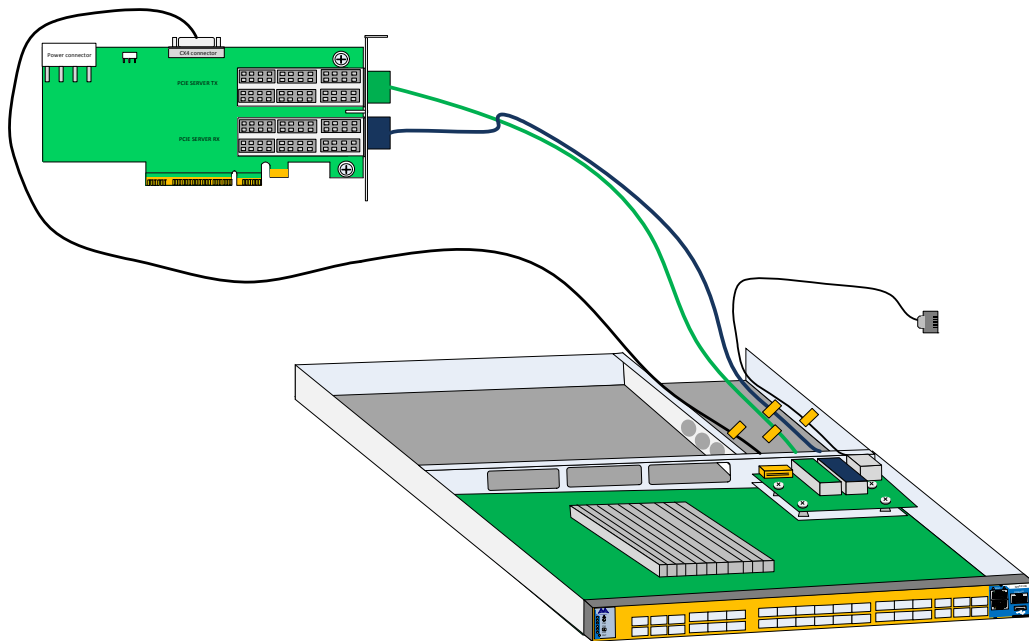

3. Connect the QSFP cables from the daughter board to the server board. connect green to green and blue to blue.
4. Connect the CX4 cable from the daughter board to the server board.
5. Tie down the cables using the cable ties in the EVB.
6. First power up the EVB and then power up the server.

5.6 Board Connectors Numbering and Locations

Figure 35: EVB Board Connections View 1

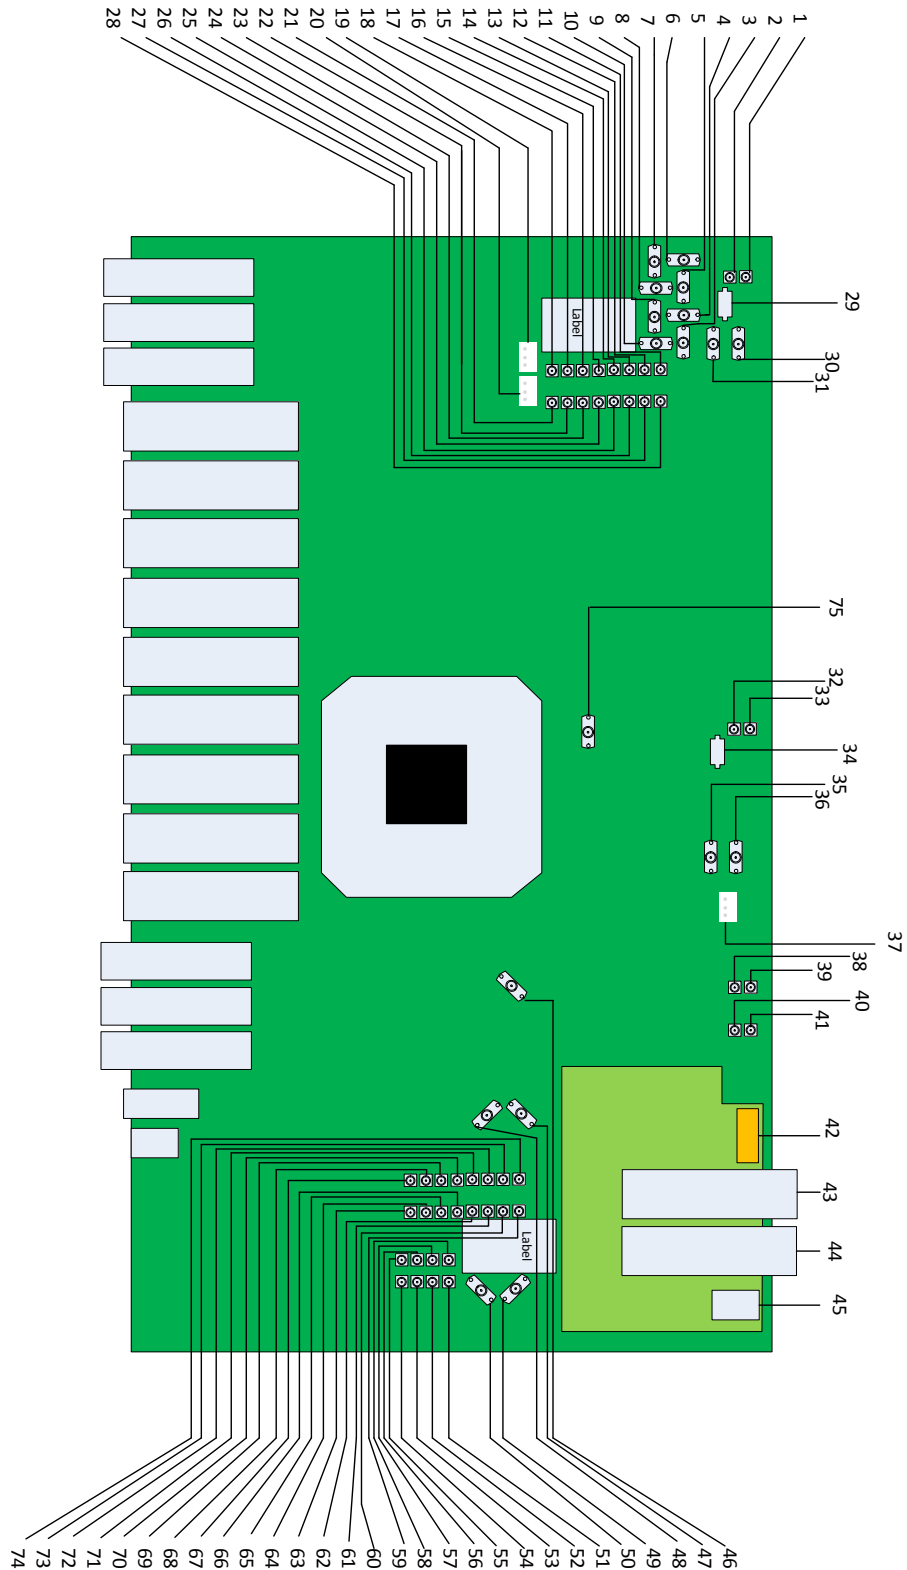

The mini SMP connections are defined by the labels on the board, not by the silk on the board.

Table 7 - Port Connector Numbering (Sheet 1 of 3)

Connector #	Type	Signal	Description
1	Mini SMP	Calibration	Calibration of length 2X
2	Mini SMP	Calibration	Calibration of length 2X
3	SMA	Reference	Connects to Port 2, Ref to compliance port 4
4	SMA	Reference	Connects to Port 2, Ref to compliance port 4
5	SMA	Reference	Connects to Port 1, Ref to compliance port 2
6	SMA	Reference	Connects to Port 1, Ref to compliance port 2
7	SMA	Reference	Connects to Port 1, Ref to compliance port 2
8	SMA	Reference	Connects to Port 1, Ref to compliance port 2
9	SMA	Reference	Connects to Port 2, Ref to compliance port 4
10	SMA	Reference	Connects to Port 2, Ref to compliance port 4
11	Mini SMP	Data	SX HW Port 27 RX lane C Negative
12	Mini SMP	Data	SX HW Port 27 RX lane C Positive
13	Mini SMP	Data	SX HW Port 27 RX lane A Negative
14	Mini SMP	Data	SX HW Port 27 RX lane A Positive
15	Mini SMP	Data	SX HW Port 27 RX lane D Negative
16	Mini SMP	Data	SX HW Port 27 RX lane D Positive
17	Mini SMP	Data	SX HW Port 27 RX lane B Negative
18	Mini SMP	Data	SX HW Port 27 RX lane B Positive
19	3-Pin	I2C	Primary connector
20	3-Pin	I2C	Secondary connector
21	Mini SMP	Data	SX HW Port 27 TX lane A Positive
22	Mini SMP	Data	SX HW Port 27 TX lane A Negative
23	Mini SMP	Data	SX HW Port 27 TX lane B Positive
24	Mini SMP	Data	SX HW Port 27 TX lane B Negative
25	Mini SMP	Data	SX HW Port 27 TX lane C Positive
26	Mini SMP	Data	SX HW Port 27 TX lane C Negative
27	Mini SMP	Data	SX HW Port 27 TX lane D Positive

Table 7 - Port Connector Numbering (Continued) (Sheet 2 of 3)

Connector #	Type	Signal	Description
28	Mini SMP	Data	SX HW Port 27 TX lane D Negative
29			12V PS1
30	SMA	Calibration	Calibration of length 2X
31	SMA	Calibration	Calibration of length 2X
32	Mini SMP	Calibration	Calibration of length X
33	Mini SMP	Calibration	Calibration of length X
34			Fans
35	SMA	Calibration	Calibration of length 2X
36	SMA	Calibration	Calibration of length 2X
37			Main I2C
38	Mini SMP	Calibration	Calibration of length 2X
39	Mini SMP	Calibration	Calibration of length 2X
40	Mini SMP	Calibration	Calibration of length X
41	Mini SMP	Calibration	Calibration of length X
42	CX4		Clock and Reset
43	QSFP RX		Data
44	QSFP TX		Data
45	RJ45		Ethernet management connection
46	SMA	Clock	Option for ext. clock - 106.25MHz
47	SMA	Calibration	Calibration of length X
48	SMA	Calibration	Calibration of length X
49	SMA	Calibration	Calibration of length X
50	SMA	Calibration	Calibration of length X
51	Mini SMP	Reference	Connects to Port 35, Ref to compliance port 33
52	Mini SMP	Reference	Connects to Port 35, Ref to compliance port 33
53	Mini SMP	Reference	Connects to Port 36, Ref to compliance port 34
54	Mini SMP	Reference	Connects to Port 36, Ref to compliance port 34
55	Mini SMP	Reference	Connects to Port 36, Ref to compliance port 34
56	Mini SMP	Reference	Connects to Port 36, Ref to compliance port 34

Table 7 - Port Connector Numbering (Continued) (Sheet 3 of 3)

Connector #	Type	Signal	Description
57	Mini SMP	Reference	Connects to Port 35, Ref to compliance port 33
58	Mini SMP	Reference	Connects to Port 35, Ref to compliance port 33
59	Mini SMP	Data	SX HW Port 36 RX lane D Negative
60	Mini SMP	Data	SX HW Port 36 RX lane D Positive
61	Mini SMP	Data	SX HW Port 36 RX lane B Negative
62	Mini SMP	Data	SX HW Port 36 RX lane B Positive
63	Mini SMP	Data	SX HW Port 36 RX lane A Negative
64	Mini SMP	Data	SX HW Port 36 RX lane A Positive
65	Mini SMP	Data	SX HW Port 36 RX lane C Negative
66	Mini SMP	Data	SX HW Port 36 RX lane C Positive
67	Mini SMP	Data	SX HW Port 36 TX lane A Positive
68	Mini SMP	Data	SX HW Port 36 TX lane A Negative
69	Mini SMP	Data	SX HW Port 36 TX lane B Positive
70	Mini SMP	Data	SX HW Port 36 TX lane B Negative
71	Mini SMP	Data	SX HW Port 36 TX lane C Positive
72	Mini SMP	Data	SX HW Port 36 TX lane C Negative
73	Mini SMP	Data	SX HW Port 36 TX lane D Positive
74	Mini SMP	Data	SX HW Port 36 TX lane D Negative
75	SMA	Clock	Option for ext. clock - 156.25MHz

5.7 Switch Shut Down Procedure

To shut down the switch run the command:

```
Reload halt [noconfirm]
```



The switch cannot be restarted remotely!

To restart the switch you must physically go to the switch and unplug and replug in all of the power cords to the chassis.

5.8 Disassembly of the Switch from the Rack

➤ *To disassemble the switch from the rack:*


1. Unplug and remove all connectors.
2. Unplug all power cords.
3. Remove the ground wire.
4. Unscrew the 2 bolts from the side of the switch with the bracket.



Support the weight of the switch when you remove the screws so that the switch does not fall.

5. Slide the switch from the rack.
6. Remove the rail slides from the rack.
7. Remove the eight caged nuts.

5.9 Disposal

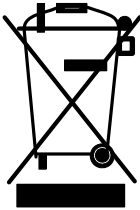

According to the WEEE Directive 2002/96/EC, all waste electrical and electronic equipment (EEE) should be collected separately and not disposed of with regular household waste.

Dispose of this product and all of its parts in a responsible and environmentally friendly way.


Follow the instructions found in the Mellanox Web site at mellanox.com for proper instructions to disassemble and dispose of the Switch according to the WEEE directive.

5.10 Resetting the Switch

Should the switch stop working, try resetting the switch. On the connector side panel under the system LEDs is a reset button. This reset button requires a tool to be pressed.

Figure 36: Reset Button

Press the rest button.

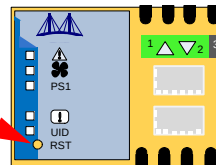

This button resets the switch when the button is pushed. A quick push of this button resets the whole switch. When the button is held down for 15 seconds the switch is reset and the password is deleted. The LEDs will flicker for a fraction of a second to indicate reset is occurring. You will then be able to enter without a password and make a new password for the user admin.


5.11 Configuring the Switch for the First Time



When the Power PC is removed the switch/EVB becomes unmanaged and does NOT need Initial configuration.

1. Connect the host PC to the CONSOLE (RJ-45) port of the switch system using the supplied cable. The CONSOLE ports for the EVB is shown below.

Figure 37: Management Interfaces

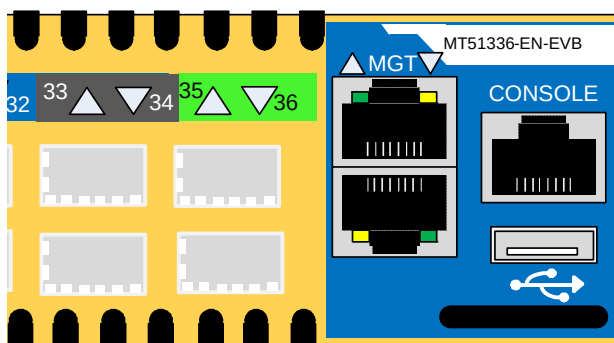

Make sure to connect to the CONSOLE RJ-45 port of the switch and not to the (Ethernet) MGT port.



No remote IP connection is available at this stage.

2. Configure a serial terminal program (for example, HyperTerminal, minicom, or Tera Term) on your host PC with the settings described in [Table 8](#).

Table 8 - Serial Terminal Program Configuration

Parameter	Setting
Baud Rate	9600
Data bits	8
Stop bits	1

Table 8 - Serial Terminal Program Configuration (Continued)

Parameter	Setting
Parity	None
Flow Control	None

3. Login (from a serial terminal program) as *root* and use *root* as password. This starts the Mellanox configuration wizard.
4. Before attempting a remote (for example, SSH) connection to the switch, check the mgmt0 interface configuration. Specifically, verify the existence of an IP address. To check the current mgmt0 configuration, enter the following commands:

```
sx-43 [standalone: master] > enable
sx-43 [standalone: master] # show interfaces mgmt0
```

The following is an example of the output:

```
Interface mgmt0 state
  Admin up:          yes
  Link up:           yes
  IP address:        192.168.10.43
  Netmask:           255.255.255.0
  Speed:             1000Mb/s (auto)
  Duplex:            full (auto)
  Interface type:    ethernet
  Interface source:  physical
  MTU:               1500
  HW address:        00:02:C9:11:2A:AE
  Comment:

RX bytes:           1343502058      TX bytes:           313920869
RX packets:         17589211       TX packets:         992717
RX mcast packets:   0              TX discards:        0
RX discards:        0              TX errors:           0
RX errors:          0              TX overruns:         0
RX overruns:        0              TX carrier:          0
RX frame:           0              TX collisions:       0
                                   TX queue len: 1000
```

6 Connecting to the Switch Platform



When the Power PC is removed the switch/ EVB becomes externally managed (unmanaged) and can only be managed through the host server management or through the remote Ethernet connector.

6.1 I2C Connector

The I2C connection provides access to Flash and EEPROMs. This connection allows access to the switch for updating firmware when in-band firmware updating is impossible.

Note: The DB9 to 3-pin dongle (in the MTUSB-1 accessory kit) is used to connect to the primary 3-pin I2C connector on the board. This is for use with the MTUSB-1 adapter. This is necessary only when updating firmware cannot be updated in-band.



This interface is for Debug and Troubleshooting only. This interface is for FAEs and advanced users only.

When you install the switch, it comes with the latest firmware burned on the board. All firmware updates should be done in-band. This is only done when you receive an e-mail that a newer firmware version for your switch is available.

Download the latest firmware from

<http://www.mellanox.com> > Support > Firmware Download.

For instructions on downloading firmware see

<http://www.mellanox.com> [mellanox.com](http://www.mellanox.com) > Products > Adapter IB/VPI SW > Firmware Tools.

Be sure to download the user manual appropriate to your OS. Read the instructions in the User manual for the firmware update procedure.

6.2 How to Get Mellanox Firmware Tools (MFT)

Mellanox Firmware Tools (MFT) and documentation are available for download via

<http://www.mellanox.com> [mellanox.com](http://www.mellanox.com) > Products > Adapter IB/VPI SW > Firmware Tools.

The MFT kit includes:

- mlxburn
- flint
- spark
- debug utilities

See “Related Documentation” on page 7.

6.3 Updating Firmware

When you buy the switch, it comes with the latest firmware burned on the board. All firmware updates should be done through the management software. Go to the Mellanox Website and confirm that the firmware is the latest. If not return the latest firmware from the download site. New firmware versions will be posted on the Mellanox firmware download page:

<http://www.mellanox.com> > Support > Firmware Download.

You will also need to download and unzip the firmware binary image. This is provided in the Mellanox Web site at: <http://www.mellanox.com> > Support > Firmware Download and go to the SwitchX® Switch systems. Click in the Table for the firmware image that you need.

Be sure to read and follow all of the instructions regarding the updating of the firmware on your switch system. Firmware for the HCA cards connected to this switch system can be downloaded from the same site.

7 Troubleshooting

As soon as a switch is plugged in make sure that the green power LEDs on the PSUs are on.

Status LED and or Status Health LED

If either of these two LEDs is **red** unplug the switch and call your Mellanox representative.

Power supply unit:

If the LED on the PSU is not lit or is red, check that the power cable is plugged into a working outlet.

1. Check that the power cable has a voltage within the range of 100 - 240 volts AC.
2. Check that the air flow direction of the PSUs are consistent with the Fan module air flow.
3. Remove and reinstall the power cable.
4. Remove and reinstall the PSU.

The power LED for the switch shuts off:

1. Check that there is adequate ventilation. Are the fan LEDs showing that the fans are all up and running?
2. Make sure that there is nothing blocking the front or rear of the chassis and that the fan modules and ventilation holes are not blocked (especially dust over the holes).
3. If you find dust blocking the holes it is recommended to clean the fan unit and remove the dust from the front and rear panels of the switch using a vacuum cleaner.

The green power LED for the fans does not come on:

1. Check that the Power LEDs are on.
2. Remove and reinstall the fan unit. Make sure the mating connector of the new unit is free of any dirt and/or obstacles. See Section 4.6.6, "Extracting and Inserting the Fan Unit," on page 35.



Caution: Do not run the switch if the System Status LED for the Fans is Yellow!

The link LED for the connector does not come on:

1. Check that both ends of the cable are connected.
2. Check that the locks on the ends are secured.
3. Make sure that the latest firmware version is installed on both the HCA and the switch.
4. If media adapters are used, check that the all connections are good, tight, and secure.

The activity LED does not come on:

Check that the Subnet Manager has been started.

The switch is off:

1. Unplug the switch.
2. Wait 5 minutes.
3. Plug in the switch.
4. If the switch does not come on, check the power supplies.

5. Check the temperature.

6. Check the Fan status.

The switch is not working and unresponsive:

1. Reset the switch.

If resetting the switch does not work:

2. Unplug the switch.

3. Wait 5 minutes.

4. Plug in the switch.

5. If the switch does not come on, check the power supplies.

Appendix A: Specifications

A.1 MT51336 Specifications

Table 9 - Specifications for MT51336

Physical		Power and Environmental	
Size L x W x H:	629 mm x 428 mm x 43.6 mm 24.76 in x 16.85 in x 1.71 in	Voltage:	12V, 3.3V
Weight:	9.31kg 20.52 lbs	Typ@Typ 50%: 40GigE	
Air Flow:	62CFM	Active Cables:	182W – 5W/port
		Passive cables:	100W – 2.8W/port
		Typ@Typ: 40GigE	
		Active Cables:	186W – 5.2 W/port
		Passive cables:	104W – 2.9 W/port
		Max@Max: 40GigE	
		Active Cables:	224W – 6.2 W/port
		Passive cables:	119W – 3.3W/port
		Temperature:	0°C to 45°C

Appendix B: Thermal Threshold Definitions

Warning – 100°C

A warning threshold message will be sent by the MLNX-OS management SW, indicating the switch has crossed the Warning threshold.

The administrator should deal with the overheating. At this point the switch will not shut down!

Critical –120°C.

At this temperature the firmware will automatically shut down the switch.

Emergency –130°C.

In case the firmware failed to shut down the SwitchX® when reaching the Critical threshold, a hardware mechanism will automatically shut down the switch at 130°C.

Appendix C: Replacement Parts Ordering Numbers

Table 10 - Replacement Parts Ordering Numbers

Part Description	OPN
I2C DB9 or RJ-45 to USB Adapter	MTUSB-1
Fan module with power supply side to connector side air flow	MSX60-FF
Fan module with connector side to power supply side air flow	MSX60-FR
300W Power Supply w/ Power Supply Side to Connector side air flow	MSX60-PF
300W Power Supply w/ Connector side to Power Supply side air flow	MSX60-PR
Power cord Type C13-C14	ACC000500
Installation Kit for short switches in racks 40-60 cm deep	MSX60-BKIT
Installation Kit for short or standard switches in racks 60-80 cm deep	MSX60-SKIT

Appendix D: Transferring the Power Cord

To use the rail kit to transfer the power cord from the connector side to the power side follow these directions. Do you want to install power cords on both sides of the switch or only one side? For each power cord you want to transfer:

1. Once you have decided which side of the switch will be next to the vertical support?
2. Make sure that you place the cord so that the correct end of the cord will be at the power side of the switch. This will depend on which of the four mounting options you choose.

Figure 38: Transfer Power Cord



3. Put the power cord in the switch slide channel.
4. Push the cord end through the hole in the switch slide. Leave ~ 7" of cord hanging out from the hole.




5. Screw the switch slides to the switch.

Figure 39: Install the Switch Slide



Figure 40: Transfer Power Cord Finished

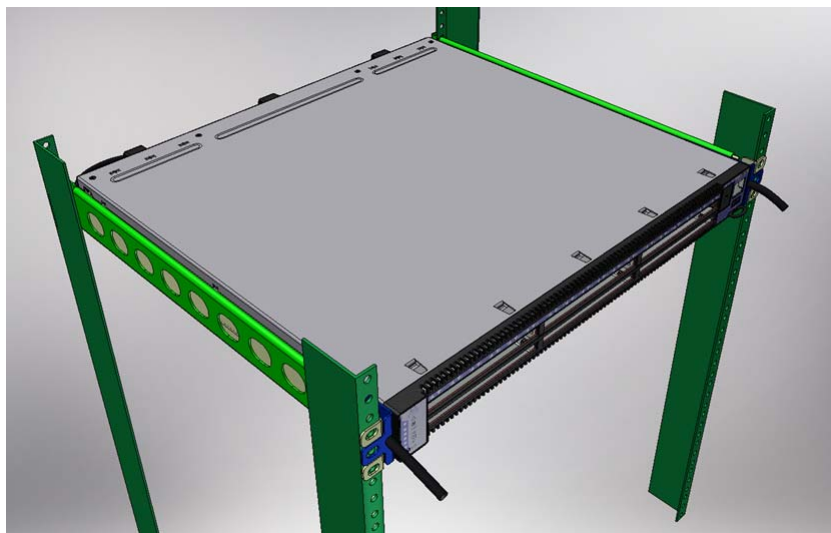

6. Return to step 4 on page 36 and continue the installation.

Appendix E: Samtec Connector Pinout

Figure 41: Connector Pinout

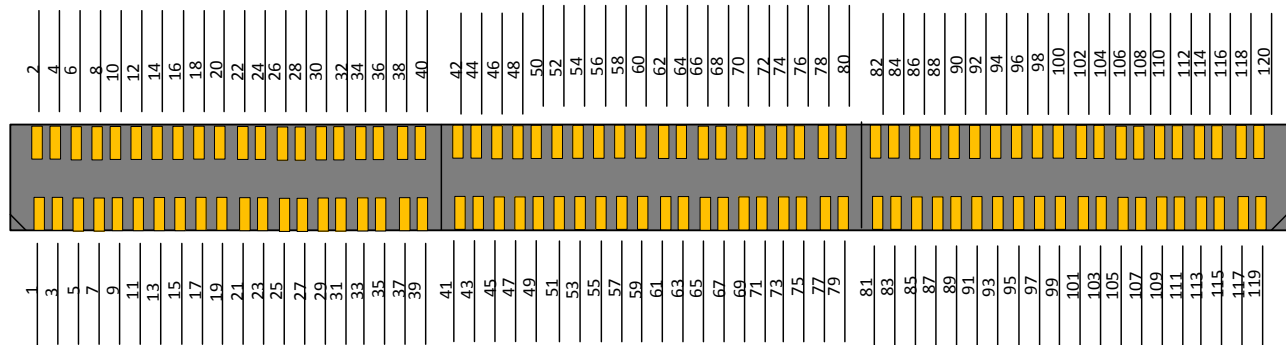


Table 11 - Connector Pinout

Pin number	Signal	Pin number	Signal	Pin number	Signal		
1	x	31	JTAG_VREF	61	GND	91	PCIe1_Rx3_p
2	12V	32	RS232_CTS	62	GND	92	PCIe1_Tx3_p
3	x	33	CPU_TRST#	63	GBE1_MDI1-/RX0-	93	PCIe1_Rx3_n
4	12V	34	RS232_R1	64	GBE0_MDI1-/RX0-	94	PCIe1_Tx3_n
5	x	35	GND	65	GBE1_MDI1+/RX0+	95	GND
6	12V	36	GND	66	GBE0_MDI1+/RX0+	96	GND
7	factory restore	37	I2C1_CLK	67	GND	97	PCIe1_Rx2_p
8	x	38	I2C0_CLK	68	GND	98	PCIe1_Tx2_p
9	GP_LV	39	I2C1_DAT	69	GBE1_MDI0-/TX0-	99	PCIe1_Rx2_n
10	3.3V	40	I2C0_DAT	70	GBE0_MDI0-/TX0-	100	PCIe1_Tx2_n
11	GP_HV	41	PWR_OK	71	GBE1_MDI0+/TX0+	101	GND
12	3.3V	42	USB_0_OC#	72	GBE0_MDI0+/TX0+	102	GND
13	x	43	GND	73	GND	103	PCIe1_Rx1_p
14	3.3V	44	GND	74	GND	104	PCIe1_Tx1_p
15	Sys_Err	45	INT1#	75	2.5VA_GBE	105	PCIe1_Rx1_n
16	x	46	USB0-	76	2.5VA_GBE	106	PCIe1_Tx1_n

Table 11 - Connector Pinout

Pin number	Signal	Pin number	Signal	Pin number	Signal		
17	x	47	INT2#	77	GBE1_ACT#	107	GND
18	x	48	USB0+	78	GBE0_ACT#	108	GND
19	CPU_TDO	49	GND	79	GBE1_LINK#	109	PCIe1_Rx0_p
20	RS232_DCD	50	GND	80	GBE0_LINK#	110	PCIe1_Tx0_p
21	CPU_TD1	51	GBE1_MDI3-	81	INT3#	111	PCIe1_Rx0_n
22	RS232_RX	52	GBE0_MDI3-	82	CPU_Present#	112	PCIe1_Tx0_n
23	GND	53	GBE1_MDI3+	83	GND	113	GND
24	RS232_TX	54	GBE0_MDI3+	84	GND	114	GND
25	CPU_TCK	55	GND	85	PCIE_CLK_REF1+	115	PCIe0_Rx0_p
26	RS232_DTR	56	GND	86	PCIE_CLK_REF0+	116	PCIe0_Tx0_p
27	CPU_TMS	57	GBE1_MDI2-	87	PCIE_CLK_REF1-	117	PCIe0_Rx0_n
28	RS232_DSR	58	GBE0_MDI3-	88	PCIE_CLK_REF0-	118	PCIe0_Tx0_n
29	SYS_HALT#	59	GBE1_MDI2+	89	GND	119	GND
30	RS232_RTS	60	GBE0_MDI3+	90	GND	120	GND

Appendix F: RJ-45 CONSOLE and Ethernet interfaces

The RJ-45 CONSOLE and Ethernet interfaces uses the EIA 568A standard wiring color coding.


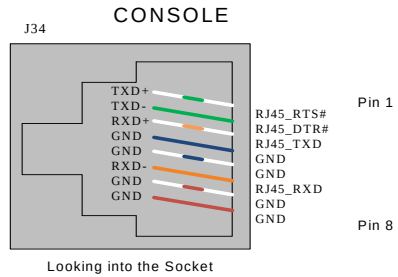


Table 12 - RJ-45 Pinout

Connection	Signal	Pin#	Color
TXD+	RJ-45_RTS#	1	G/W
TXD-	RJ-45_DTR#	2	G
RXD+	RJ-45_TXD	3	O/W
GND	GND	4	Bl
GND	GND	5	Bl/W
RXD-	RJ-45_RXD	6	O
GND	GND	7	Br/W
GND	GND	8	Br

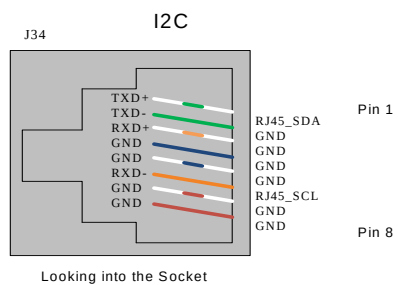

Appendix G: Avertissements de sécurité d'installation (French)

1. Instructions d'installation



Lisez toutes les instructions d'installation avant de brancher le matériel à la source d'alimentation électrique.

2. Température excessive



Ce matériel ne doit pas fonctionner dans une zone avec une température ambiante dépassant le maximum recommandé de 45°C (113°F). Un flux d'air de 200LFM à cette température ambiante maximale est nécessaire. En outre, pour garantir un bon écoulement de l'air, laissez au moins 8 cm (3 pouces) d'espace libre autour des ouvertures de ventilation.

3. Empilage du châssis



Le châssis ne doit pas être empilé sur un autre matériel. Si le châssis tombe, il peut provoquer des blessures corporelles et des dégradations de biens.

4. Connection d'Alimentation électrique excédentaire -dangers électriques



Ce produit comporte un couvercle transparent sur l'espace pour l'alimentation électrique redondante.

Ne pas faire fonctionner le produit si le couvercle transparent n'est pas solidement fixé ou s'il est enlevé.

5. Système de fusible neutre/à double pôle



Avertissement: Système de fusible neutre/à double pôle. Veuillez débrancher tous les cordons d'alimentation avant d'ouvrir le boîtier de ce produit ou de toucher un de ses composants internes.

6. Orages – dangers électriques



Pendant un orage, il ne faut pas utiliser le matériel et il ne faut pas brancher ou débrancher les câbles.

7. Branchement/débranchement des câbles en cuivre



Les câbles InfiniBand en cuivre sont lourds et ne sont pas flexibles, il faut donc faire très attention en les branchant et en les débranchant des connecteurs. Consultez le fabricant des câbles pour connaître les mises en garde et les instructions spéciales.

8. Risque de choc et de danger



Risque de choc et de danger électriques. Le débranchement d'une seule alimentation stabilisée ne débranchera uniquement qu'un module "Alimentation Stabilisée". Pour isoler complètement le module en cause, il faut débrancher toutes les alimentations stabilisées.



Risk of electric shock and energy hazard.

The PSUs are all independent.

Disconnect all power supplies to ensure a powered down state inside of the switch platform.

9. Montage et entretien sur baie



Lorsque ce produit est monté ou entretenu sur baie, il faut prendre des précautions spéciales pour s'assurer que le système reste stable. En général, il faut remplir la baie avec du matériel de bas en haut.

10. Fuite >3.5mA Leakage >3.5mA



« ATTENTION – La connexion à la terre des forts courants de fuite est essentielle avant le branchement de l'alimentation. »

Avant de brancher l'appareil à la conduite d'alimentation, les vis de protection à la terre du terminal de l'appareil doivent être appliquées à l'installation de protection à la Terre du bâtiment.

11. Forts Courants de Fuite High Leakage Current



Attention: Forts courants de fuite. Il est essentiel de relier à la terre avant de brancher l'alimentation.

12. Ajouter une information de connexion à la masse Connect a Valid Ground to this Device



Avant de brancher l'appareil à la conduite d'alimentation, les vis de protection à la terre du terminal de l'appareil doivent être appliquées à l'installation de protection à la Terre du bâtiment.

13. Installation du matériel



Ce matériel ne doit être installé, remplacé ou entretenu que par du personnel formé et qualifié.

14. Elimination du matériel



L'élimination de ce matériel doit s'effectuer dans le respect de toutes les législations et réglementations nationales en vigueur.

15. Codes électriques locaux et nationaux



Ce matériel doit être installé dans le respect des codes électriques locaux et nationaux.

16. Codes d'installation



L'appareil doit être installé selon l'ancienne version des codes électriques nationaux du pays. Pour l'Amérique du Nord, l'équipement doit être installé conformément aux spécifications du Code Electrique National Américain et du Code Electrique Canadien.

17. Interconnexion des unités



Les câbles de branchement à l'unité RS232 et les interfaces Ethernet doivent être certifiés UL de type DP-1 ou DP-2. (Note - lorsqu'il existe dans un circuit non LPS)
Protection contre la surintensité : Un appareil de protection répertorié facilement accessible contre la surintensité du circuit de branchement et calibré à 20A doit être incorporé dans le câblage électrique du bâtiment.

18. Exposition au rayonnement grave



Mise en garde – l'utilisation de commandes ou de réglages ou l'exécution de procédures autres que ce qui est spécifié dans les présentes peut engendrer une exposition au rayonnement grave.



PRODUIT LASER DE CLASSE 1 » et références aux normes laser les plus récentes CEI 60 825-1:1993 + A1:1997 + A2:2001 et NE 60825-1:1994+A1:1996+ A2:2001

19. S'assurer que les enceintes sont appropriées



Des enceintes électriques, mécaniques et incendie adaptées doivent être fournies par le fabricant du produit final ou par l'utilisateur final.

20. Cordons électriques CA homologués UL




Pour les prises électriques en Amérique du Nord, choisissez un cordon électrique homologué UL et certifié CSA

à 3 conducteurs, [18 AWG], terminé par une fiche moulée, d'une tension nominale de 125 V, [15 A], avec une longueur minimale de 1,5 m [6 pieds] et d'une longueur maximale de 4,5 m [18 pieds]


Pour les prises électriques en Europe, choisissez un cordon électrique harmonisé internationalement et marqué "<HAR>",

à 3 conducteurs, d'un diamètre de fil minimum de 0,75 mm², d'une tension nominale de 300 V, avec une gaine isolée en PVC. Le cordon doit avoir une fiche moulée d'une tension nominale de 250 V et d'une intensité nominale de 10 A.

21.

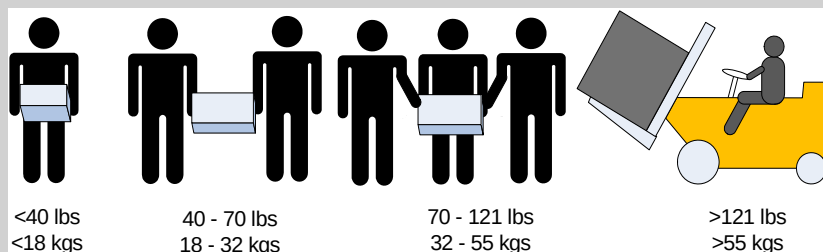

22. Conformément à la Directive WEEE

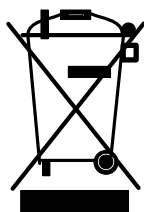

Conformément à la Directive WEEE 2002/96/EC, les déchets d'équipements électriques et électroniques (EEE) doivent être triés et ne peuvent être éliminés avec les déchets ménagers.

Veuillez disposer de ce produit et de tous ses composants de manière responsable et respectueuse de l'environnement.

Appendix H: Installation - Sicherheitshinweise (German)

1. Installationsanleitungen



Lesen Sie alle Installationsanleitungen, bevor Sie das Gerät an die Stromversorgung anschließen.

2. Übertemperatur



Dieses Gerät sollte nicht in einem Bereich mit einer Umgebungstemperatur über der maximal empfohlenen Temperatur von 45°C (113°F) betrieben werden. Es ist ein Luftstrom von 200 LFM bei maximaler Umgebungstemperatur erforderlich. Außerdem sollten mindestens 8 cm (3 in.) Freiraum um die Belüftungsöffnungen sein, um einen einwandfreien Luftstrom zu gewährleisten.

3. Stapeln des Chassis



Das Chassis sollte nicht auf andere Geräte gestapelt werden. Wenn das Chassis heruntermfällt, kann es zu Verletzungen und Beschädigungen an Geräten führen.

4. Redundanter Stromversorgungsanschluss - Elektrische Gefahr



Dieses Produkt verfügt über eine Abdeckung über dem Bereich für die redundante Stromversorgung. Betreiben Sie das Produkt nicht, wenn diese Abdeckung nicht sicher fest sitzt oder entfernt wurde.

5. Bei Gewitter - Elektrische Gefahr



Arbeiten Sie während eines Gewitters und Blitzschlag nicht am Gerät, schließen Sie keine Kabel an oder ab.

6. Anschließen/Trennen von Kupferkabel



Kupferkabel sind schwer und nicht flexible. Deshalb müssen sie vorsichtig an die Anschlüsse angebracht bzw. davon getrennt werden. Lesen Sie die speziellen Warnungen und Anleitungen des Kabelherstellers.

7. Gefahr des elektrischen Schocks.



Gefahr des elektrischen Schocks. Entfernen des Netzsteckers eines Netzteils spannungsfrei. Um alle Einheiten spannungsfrei zu machen sind die Netzstecker aller Netzteile zu entfernen.



Risk of electric shock and energy hazard.

The PSUs are all independent.

Disconnect all power supplies to ensure a powered down state inside of the switch platform.

8. Rack-Montage und Wartung



Wenn dieses Produkt in einem Rack montiert oder gewartet wird, sind besondere Vorsichtsmaßnahmen zu ergreifen, um die Stabilität des Systems zu gewährleisten. Im Allgemeinen sollten Sie das Gestell von unten nach oben mit Geräten füllen.

9. Geräteinstallation



Diese Gerät sollte nur von geschultem und qualifiziertem Personal installiert, ausgetauscht oder gewartet werden.

10. Geräteentsorgung



Die Entsorgung dieses Geräts sollte unter Beachtung aller nationalen Gesetze Bestimmungen erfolgen.

11. Regionale und nationale elektrische Bestimmungen



Dieses Gerät sollte unter Beachtung der regionalen und nationalen elektrischen Bestimmungen installiert werden.

12. Richtigen Schutz sicherstellen



Geeigneter elektrischer, mechanischer und Feuerschutz sind vom Hersteller des Endprodukts oder dem Endbenutzer bereitzustellen.

13. Strahlenkontakt



Achtung – Nutzung von Steuerungen oder Einstellungen oder Ausführung von Prozeduren, die hier nicht spezifiziert sind, kann zu gefährlichem Strahlenkontakt führen..



Klasse 1 Laserprodukt und Referenzen zu den aktuellsten Lasterstandards :
ICE 60 825-1:1993 + A1:1997 + A2:2001 und EN 60825-1:1994+A1:1996+ A2:2001

14. UL-und CSA Certified Netzkabel



Für Nordamerika Stromanschluss, wählen Sie ein Netzkabel, das UL-und CSA Certified

3 - Leiter, [18 AWG], mit einem angespritztem Stecker bewertet bei 125 V, [15], mit einer Mindestlänge von 1,5 m [Six Feet] aber nicht mehr als 4,5 m.

Für die europäischen Zusammenhang, wählen Sie ein Netzkabel, das international harmonisiert und der Aufschrift "<HAR>",

3 - Leiter, mindestens 0,75 mm² Draht, bewertet mit 300 V, mit einem PVC-Mantel isoliert. Das Kabel muss eine angespritztem Stecker bewertet bei 250 V, 10 A. "

15. Ableitstrom > 3.5mA LEAKAGE >3.5mA



WARNUNG: Hohe Ableitstrom; Earth Verbindung, bevor Sie die Verbindung von wesentlicher Bedeutung werden.

16. Add GND Verbindung Informationen



Bevor Sie dieses Gerät an das Stromnetz, die Schutzerde Terminal Schrauben dieses Gerät muss an den Schutzleiter in der Gebäudeinstallation.

17. Installation Codes



Dieses Gerät muss installiert sein, entsprechend auf die neueste Version des Landes National Electrical Code. Für Nordamerika, müssen in Übereinstimmung mit den geltenden Vorschriften in der US-amerikanischen National Electrical Code und dem Canadian Electrical Code.

18. Zusammenschaltung von EINHEITEN



Kabel für den Anschluss an das Gerät RS232-und Ethernet-Schnittstellen müssen UL zertifiziert Typ DP-1 oder DP-2. (Hinweis-, wenn nicht mit Wohnsitz in LPS-Schaltung)

Überstromschutz: Eine leicht zugängliche Auflistung Abzwegleitung Überstrom-Schutzeinrichtung 20 A bewertet werden müssen in dem Gebäude Verkabelung.

19. Zweipolige bzw. Neutralleiter-Sicherung im Netzteil



 
Achtung:

Zweipolige bzw. Neutralleiter-Sicherung im Netzteil. Netzstecker ziehen, um sicherzustellen, daß keine Spannung am Gerät anliegt. Entfernen Sie alle Netzkabel vor dem Öffnen der Abdeckung dieses Produkts oder dem Berühren der Innenteile.


20. Bodily Injury Due to Weight




Use enough people to safely lift this product.




<40 lbs
<18 kgs

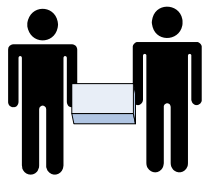

40 - 70 lbs
18 - 32 kgs

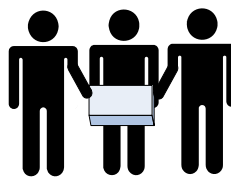

70 - 121 lbs
32 - 55 kgs

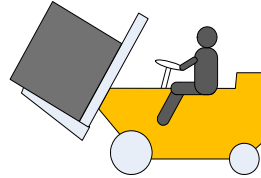

>121 lbs
>55 kgs


Appendix I: Advertencias de seguridad para la instalación (Spanish)

1. Instrucciones de instalación



Antes de conectar el equipo a la fuente de alimentación, leer todas las instrucciones de instalación.

2. Lesión corporal por peso

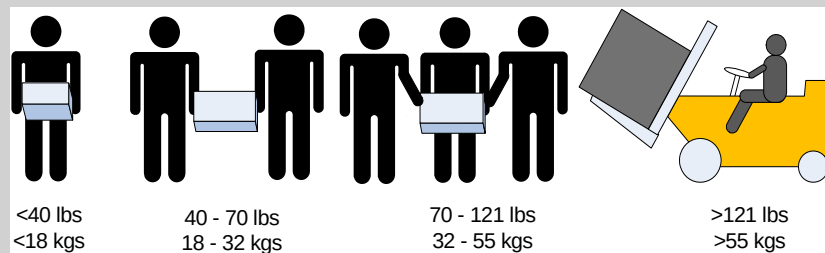

3. Lesión corporal por peso



This equipment is very heavy and should be moved using a mechanical lift to avoid injuries.

4. Sobre calentamiento



No se debe utilizar el equipo en un área con una temperatura ambiente superior a la máxima recomendada: 45°C. Además, para garantizar una circulación de aire adecuada, se debe dejar como mínimo un espacio de 8 cm (3 pulgadas) alrededor de las aberturas de ventilación.

5. Apilamiento del chasis



Los chasis no se deben apilar sobre otros equipos. La caída del chasis podría causar lesiones corporales, así como daños al equipo.

6. Dos fusibles, uno en el polo y otro en el neutro



Dos fusibles, uno en el polo y otro en el neutro. Quitar los cables de corriente antes de abrir la tapa de este producto o tocar cualquier componente interno.

7. Cuando hay rayos: peligro de descarga eléctrica



No utilizar el equipo ni conectar o desconectar cables durante períodos de actividad de rayos.

8. Conexión y desconexión del cable Copper



Dado que los cables de cobre son pesados y no son flexibles, su conexión a los conectores y su desconexión se deben efectuar con mucho cuidado. Para ver advertencias o instrucciones especiales, consultar al fabricante del cable.

9. Montaje y mantenimiento de bastidores



Al instalar o realizar el mantenimiento de este aparato en un bastidor, es preciso adoptar precauciones especiales para garantizar que el sistema se mantenga estable. En general, en un bastidor, los equipos se deben instalar comenzando desde abajo hacia arriba.

10. Instalación de equipos



La instalación, el reemplazo y el mantenimiento de este equipo estarán a cargo únicamente de personal capacitado y competente.

11. Asegurar confinamientos adecuados



El fabricante del producto final o el usuario final deberán suministrar un confinamiento adecuado para componentes eléctricos y mecánicos y contra incendio.

12. Eliminación de equipos



La eliminación definitiva de este equipo se debe efectuar conforme a todas las leyes y reglamentaciones nacionales.

13. Códigos eléctricos locales y nacionales



Este equipo se debe instalar conforme a los códigos eléctricos locales y nacionales.

14. Cable de alimentación homologado por UL y con certificación CSA



En conexiones de América del Norte, seleccionar un cable de alimentación homologado por UL y con certificación CSA de tres conductores, [16 AWG], terminado en un enchufe moldeado con capuchón de 125 voltios nominal, [13 A], con una longitud mínima de 1,5 metros, pero no más de 4,5 metros.

En conexiones europeas, seleccionar un cable de alimentación armonizado internacionalmente y marcado "<HAR>", de tres conductores, hilo de 1,0 mm² como mínimo, 300 voltios nominal, con cobertura protectora aislante de PVC. El cable debe tener un enchufe moldeado con capuchón de 250 voltios nominal, 10 A.

15. Añadir conexión a tierra



Antes de conectar el dispositivo a la línea de alimentación, los tornillos del terminal de la puesta a tierra de protección del dispositivo se deben conectar a la puesta a tierra de protección de la instalación del edificio.

(Información de conexión a tierra):

La instalación del edificio deberá proveer un medio para la conexión con la puesta a tierra de protección y un técnico de servicio deberá conectar permanentemente el equipo a dicho medio de conexión.


Un TÉCNICO DE SERVICIO comprobará si la toma eléctrica de la que se suministrará corriente al equipo provee una conexión con la puesta a tierra de protección del edificio. De no ser así, el TÉCNICO DE SERVICIO se encargará de instalar un CONDUCTOR DE CONEXIÓN A TIERRA DE PROTECCIÓN, del terminal de puesta a tierra de protección separado al conductor de tierra de protección del edificio. El equipo se instalará en un área donde haya conexión equipotencial, como por ejemplo, un centro de telecomunicaciones o una sala de computadoras dedicada.

16. Códigos de instalación



Este dispositivo se debe instalar conforme a la versión más reciente de los códigos eléctricos nacionales del país en cuestión. En América del Norte, el equipo se debe instalar de acuerdo con las disposiciones vigentes del Código Eléctrico Nacional de los EE.UU. y del Código Eléctrico de Canadá.

17. Directiva sobre RAEE

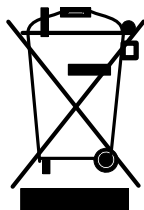

Conforme a la Directiva 2002/96/CE sobre RAEE, todos los residuos de equipos eléctricos y electrónicos (EEE) se deben recolectar por separado y no se deben eliminar junto con residuos domésticos.

Al deshacerse de este producto y de todas sus partes, hágalo de una manera responsable y respetuosa con el medio ambiente.