

Thank you for purchasing the TFT LCD color monitor. To enjoy the features of this device and to ensure years of trouble-free operation, please read this manual carefully and follow the instructions.




### **Front Panel**

- 1. earphone jack
- 3. Negative adjustment
- 5. Activation of Menu Indicator
- 7. Light

- 2. Audio/Video input
- 4. Positive adjustment
- 6. Power ON/OFF
- 8. Remote sensor

### **Remote control**

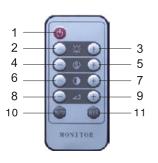

- 1.Power On/Off
- 2.Brightness -
- 3.Brightness +
- 4.Colour -
- 5.Colour +
- 6.Contrast -
- 7.Contrast +
- 8. Volume -
- . . . .
- 9.Volume +
- 10.V1/V2
- 11. Picture Swivel

## **Basic operation**

- 1. Make sure the video and power connection are properly executed.
- 2. Press MENU to display the adjustments in this order. Brightness-->Color-->Contrast-->Volume-->Brightness...
- 3. Adjust the values by pressing AN+ or AN-.
- 4. The POWER button activates/deactivates the monitor. It is not Necessary to disconnect the power source.

# **Specification**

Screen Size: 7 inch

System: NTSC/PAL

Power source: DC12V  $\pm$  10%

Power consumption: < 9W

Video Input: Composition Video Signal

Operating Temperature:  $0^{\circ} \text{C} \rightarrow 60^{\circ} \text{C}$ 

Storage Temperature:  $-20^{\circ}\text{C} \rightarrow 80^{\circ}\text{C}$ 

## **Headrest bracket**



**1** 

Suitable for any kinds of car seats. Easy and conveniently installation without damage to the seats. Length can be adjusted (as Picture).



## **Accessory**

1 x bracket1 x headrest shroud1 x remote control1 x user's manual

2 x connection wire

PYLE CAR VIDEO AUTO VIDEO ACCESSORIES