

**10 CUP COFFEE MAKER**



**IG8126**

## CONTENTS

Important safeguards.....	2-3	Removing mineral deposits.....	5
Know your coffee maker.....	4	Hints for great tasting coffee.....	5
Using the appliance.....	4-5	Igenix warranty.....	6-7
Cleaning & maintenance.....	5	Product disposal and recycling.....	8

## IMPORTANT SAFEGUARDS


**Important:** Before using this electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
2. Do not operate any appliance with a damaged cord or plug. If the main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against fire, electric shock and injury to persons do not immerse cord or plug in water or other liquid.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before taking off, attaching components or before cleaning.
6. Do not use accessories that are not recommended by Igenix as it may result in fire, electric shock and/or injury.
7. The glass jug is designed for use with this appliance. It can not be used on a range top.
8. Do not clean glass jug with cleansers, steel wool pads, or other abrasive materials.
9. Do not hang power cord over the edge of table or counter, or touch hot surface.
10. Do not place the coffee besides or on top of a hot surface.
11. To disconnect, remove plug from wall outlet. Always hold the plug, but never pull the cord.

12. Do not use appliance for anything other than its intended use and place it in a dry environment.
13. Close supervision is necessary when your appliance is being used near children.
14. Be careful not to get burnt by the steam.
15. To disconnect, turn control to “Off”, then remove plug from wall outlet.
16. Do not let the coffee maker operate without water.
17. Never use the appliance if the glass jug shows any signs of cracks. Only use the glass jug that comes with this appliance. Use carefully as the glass jug is very fragile.
18. Do not place a hot container on the worktop.
19. Do not use a cracked glass jug or a glass jug with a loose or weakened handle.
20. Scalding may occur if the cover is removed during the brewing cycles.
21. Some parts of the appliance are hot when operated, so do not touch with your hand. Use handles or knobs only.
22. Never leave the empty glass jug on the warming plate otherwise the glass jug is liable to crack.
23. Do not sit a hot container on a hot or cold surface.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments. [PTO]

27. Do not use outdoors.
28. Save these instructions.

## KNOW YOUR COFFEE MAKER

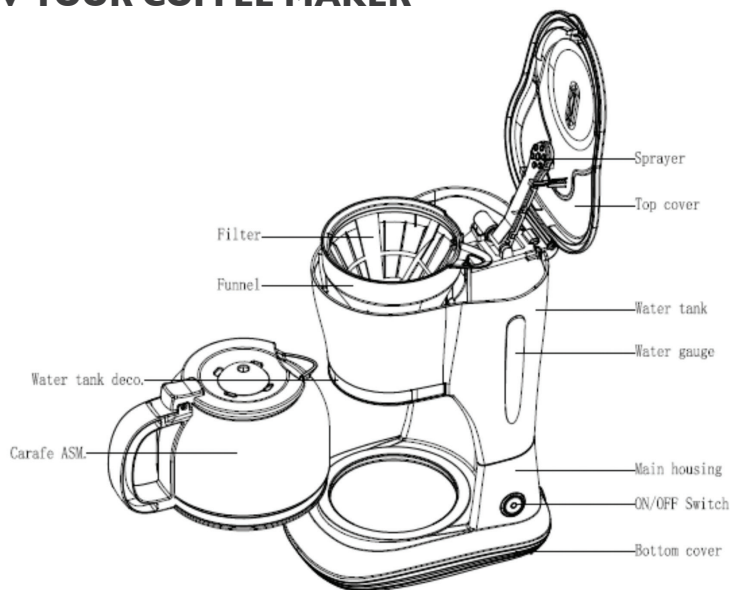

## BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add clean water up to maximum level to brew several times without ground coffee according to the steps below, and then discard the water. Wash the detachable parts thoroughly with warm water.

## USING YOUR COFFEE MAKER

1. Open the water tank lid and fill the water tank with cold drinking water. The water level should not exceed MAX level as indicated on water gauge.
2. Swing the funnel holder out, put the funnel into funnel holder, then place the filter paper in the funnel, and make sure it is assembled correctly.
3. Add ground coffee into paper filter. Usually a cup of coffee needs a level spoon of ground coffee, but you may adjust according to personal taste. Close the funnel holder, a click sound will be heard when the funnel holder is closed completely.
4. Insert the glass jug on the warming plate horizontally.
5. Plug the power cord into the outlet.
6. Pressing the switch down, the indicator will be illuminated. The appliance will begin working.

**Note 1:** During the brewing process you may remove the glass jug to serve, the coffee maker will stop dripping automatically. If the serve time exceeds 30 seconds the coffee will overflow the funnel.

**Note 2:** This unit has a strength adjustment function, if you want to increase the coffee strength, you can press and hold the switch button for 4 seconds to start brewing, the indicator will flash constantly until coffee brewing finish.

7. Upon completion of brewing the coffee, (this is about one minute later after the coffee stops dripping out) you can remove the glass jug, pour and serve.

**Note:** the brewed coffee you get will be slightly less than the water you have added as some water is absorbed by ground coffee. **DO NOT** touch the cover or the warming plate when operating as they are very hot.

8. When the process is finished, if you do not want to serve immediately, keep the switch on, the coffee can be kept warm on the warming plate for 40 minutes and the appliance will be cut off automatically after 40 minutes. For an optimum coffee taste, serve it just after brewing.

9. Always turn the coffee maker off and disconnect the power supply after use.

**Note:** Be careful when pouring the coffee out, as the coffee will be very hot and could cause scalding.

## CLEANING AND MAINTENANCE

**Caution:** Always unplug the product from the plug socket and allow the warming plate to cool completely before cleaning it. Never immerse the unit or power cord in water or any other liquid for cleaning.

1. Clean all detachable parts after each use in hot, soapy water.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.

## REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, periodically you should clean away the limescale left by the water according to the water quality in your area and the frequency of use. We recommend descaling your coffee maker as follows, using a solution of white vinegar and cold water. A solution of two tablespoons (30ml) white vinegar in one glass jug of cold water works best.

1. Fill the tank with the vinegar solution to the maximum level as indicated on water gauge.
2. Insert glass jug onto the warming plate.
3. Ensure that the paper filter (without ground coffee) and funnel are assembled in place.
4. Switch on the appliance and allow it to "brew" de-scaling solution.
5. After "brewing" one-cup solution, switch off the appliance.
6. Leave the solution for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with water at least 3 times.

## HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the "CARE AND CLEANING" section. Always use fresh, cold water in the coffee maker.
2. Store unused ground coffee in a cool, dry place. After opening a package of ground coffee, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse ground coffee as this will greatly reduce the coffee's flavour. Reheating coffee is not recommended as coffee is at its peak flavour immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the ground coffee.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

## Thank you for choosing Igenix...

As a valued customer we would like to offer you a **FREE** 2 year warranty to cover your product against any electrical or mechanical defects.

This means that in the unlikely event you develop a fault or problem with your product we will happily repair or replace the item free of charge.

To qualify for the 2 year warranty you must register your product within **30 days of purchase**. The full Terms & Conditions of our warranty policy are on the reverse of this form. They are also available on our website. [www.igenix.co.uk](http://www.igenix.co.uk)

To register your product, please complete all sections of the form below and return to us at the following address. Igenix, Pik-a-Pak Electrical Distributors, 38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR.

Alternatively you can visit the Igenix website and complete the form online.

### Personal Details

**Title** \_\_\_\_\_ **First Name** \_\_\_\_\_ **Surname** \_\_\_\_\_

**Address** \_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

\_\_\_\_\_ **Post Code** \_\_\_\_\_

**Email** \_\_\_\_\_ **Telephone** \_\_\_\_\_

### Product Information

**Product Code** \_\_\_\_\_ **Product Description** \_\_\_\_\_  
(Beginning IG)

**Batch Number** \_\_\_\_\_ **Serial Number** \_\_\_\_\_  
(Beginning 5) (If Applicable)

**Purchase Date** \_\_\_\_\_ **Retailer Name** \_\_\_\_\_

\_\_\_\_\_ **Retailer Location** \_\_\_\_\_

Please tick here to confirm you have read and accept our Terms & Conditions on reverse

Please tick here if you **do not** wish to receive marketing information from us

**Customer Signature** \_\_\_\_\_ **Date** \_\_\_\_\_

# Igenix Warranty Terms & Conditions

This product is guaranteed for a period of 12 months as standard from the date of purchase against mechanical and electrical defects. You can extend your warranty for a further 12 months by registering your product.

Upon registration we will cover your product for a period of 24 months from the original purchase date against any mechanical or electrical defects.

To qualify for the guarantee the product must be used for domestic household use only and in accordance with the instructions in the user manual. Any misuse of the product will result in the warranty being void.

The guarantee does not cover accidental damage, misuse, neglect, tampering or incorrect adjustment or installation.

The guarantee will be rendered invalid if the product is resold, has had its serial number removed (or has an invalid serial number), or if an unauthorised person has carried out any repairs or alterations.

The warranty does not cover accessories or consumable parts that require replacement under normal use. This includes shelving, dials, filters, belts and trays etc.

In the unlikely event of a breakdown please refer to the Troubleshooting guide in your user manual and check all plugs, fuses and electricity supply.

If you still require assistance please contact our Customer Service department on 01473 271 272 or write to us at the following address:

**Customer Service Department**  
Pik-a-Pak Electrical Distributors  
38 Bluestem Road  
Ransomes Europark  
Ipswich  
IP3 9RR

Please quote the Product Code which begins 'IG' and the Batch Number beginning '5' and give details of the exact fault. We will then decide whether to repair or replace the item.

Before we arrange the repair or replacement you will be required to return a copy of your proof of purchase. **Please retain your original.**

If an item is replaced within the agreed guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

In the event that the product is inspected and no fault is found or the product is not within the guarantee period you will be charged for the repair and any carriage costs.

***Please Note: As a warranty policy we cannot refund the consumers purchase price.***

## IMPORTANT

THERE ARE NO USER SERVICEABLE PARTS INSIDE AND THE CASING SHOULD NOT BE OPENED BY AN UNQUALIFIED PERSON

THIS APPLIANCE IS INTENDED FOR DOMESTIC USE ONLY

**2**  
YEAR GUARANTEE

This product carries a 2 year guarantee. If you experience any problems with your Igenix product please call our Customer Services Department on 01473 271 272.

## DISPOSAL INFORMATION



The European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste.

Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

**IGENIX**

Distributed by Pik-a-Pak Electrical Distributors  
38 Bluestem Road, Ransomes Europark, Ipswich, IP3 9RR  
Tel. 01473 271 272