



Getting started

InCov is a radio network planning tool for **indoor coverage**. InCov is developed at the EIA-FR in collaboration with Ericsson.

InCov handles both **indoor** and **outdoor-to-indoor** coverage. Indoor coverage is shown first. Outdoor-to-indoor coverage is shown in Section 4. If you intend to use InCov it is strongly recommended that you [go through this manual in sequence using a color copy](#). This manual will explain the steps to use the software with screen shots so you might want to **read it just to learn the features InCov provides**, namely:

- Coverage based on **scanned floor plan** (no AutoCAD, even hand drawn plan might be sufficient).
- **Easy adjustment** of cell power; for all antennas covering the cell.
- **Single computation for all antennas in a cell/on the same channel**.
- Optional power setting via a **feeding network**.

As InCov is still under development, please do not hesitate to let us know your need using the contacts at the end of this document.

To install the InCov demo just extract the InCovDemo folder from the received ZIP file.

Open the InCovDemo folder.

1 Start InCov

Double click on InCov.exe



You should get (note that it may take a few seconds to start) :



Then, you are warned that you are using a version of InCov which is still under development. This version is for testing purpose only. You should have received this version to help us serve your needs. Thus, we are eager to receive your feedback at:


jean-frederic.wagen@hefr.ch or daniel.galley@ericsson.com.

WARNING

This version is under development and must be used for testing purpose only.

Click to proceed.

After having clicked anywhere on the black window you should obtain this:

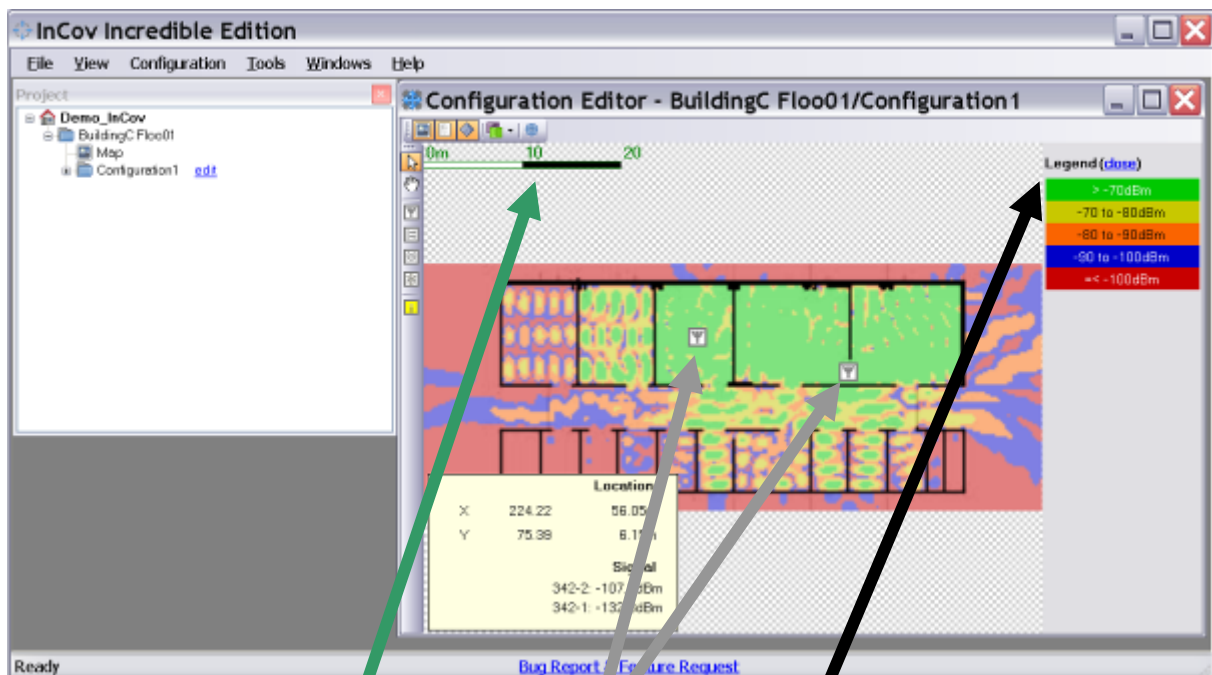

Notice the scale (in meters) , the two antennas and the legend for the received power.


You can adjust the power of an entire cell by right-clicking on any antenna in that cell and choosing “Adjust Cell Power ...”. A cell is defined by its radio channel. In our example, there are only two antennas, each defining a different cell, i.e., each with a different channel.



The following slider pops up. You can adjust the cell power. Observe the coverage map!





For example, subtracting 100dB from the left antenna leaves only the coverage of the right antenna.

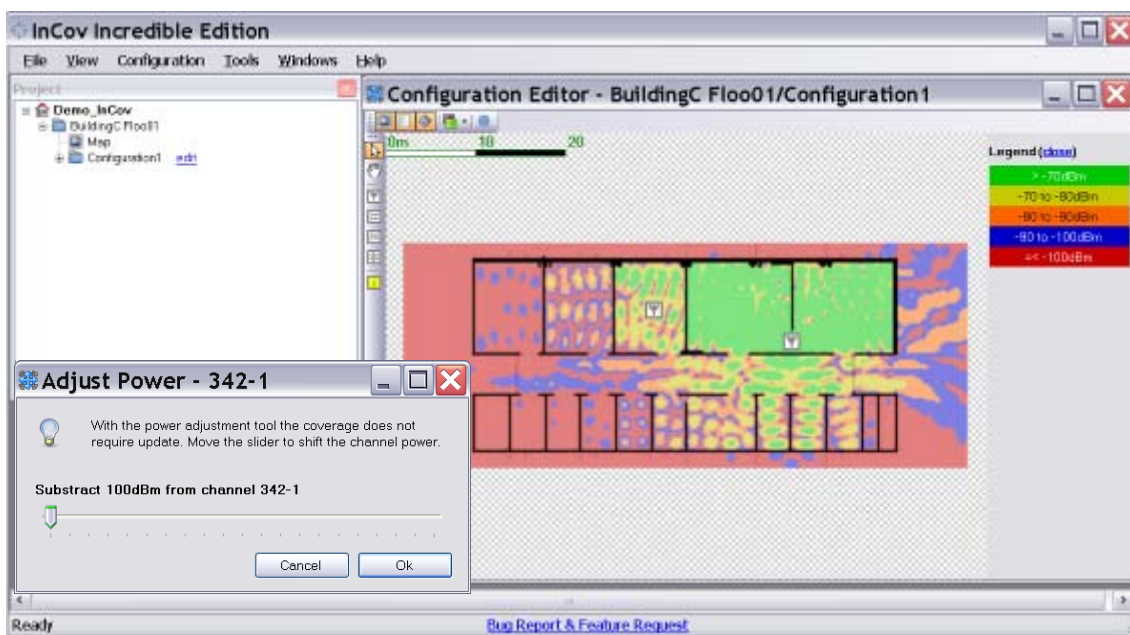


You can also edit the EIRP power, by right-clicking on one antenna and choosing “Edit” ...


... to get the following window:

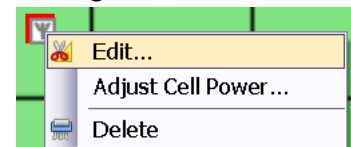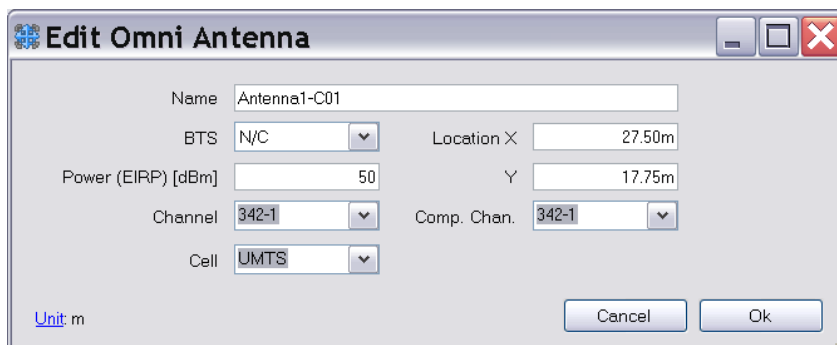



By default, the “Coverage [dBm]” is shown

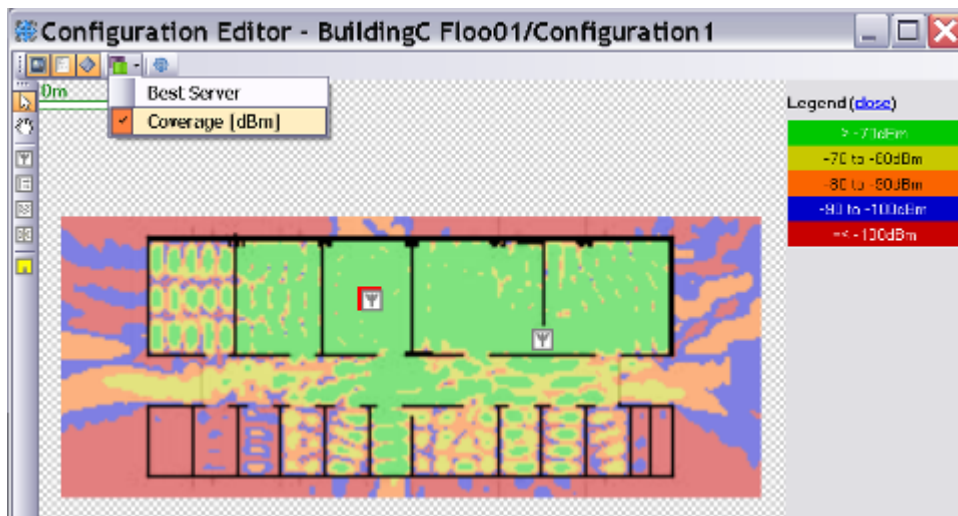


But you can also view the **best server** map (the two antennas here are on two different channels). Notice the change in the “Legend” (the color and the name “Coverage ...” are chosen automatically). Please let us know if manual choices should be included in future releases).

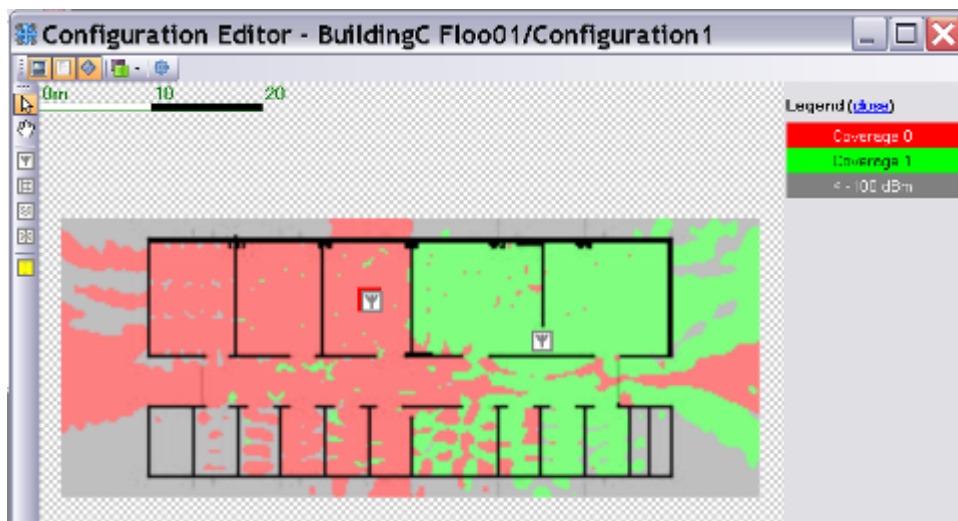

Note the legend and the threshold are easy to change to your taste using the “Configure Color Blender” button  in the Configuration Editor window:

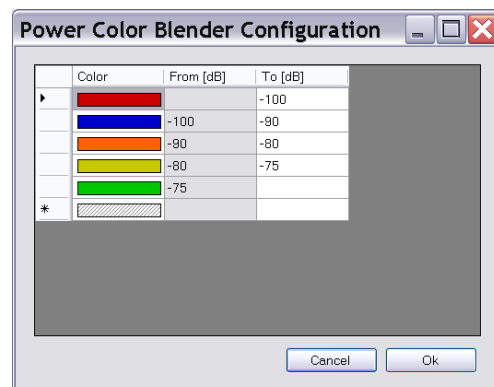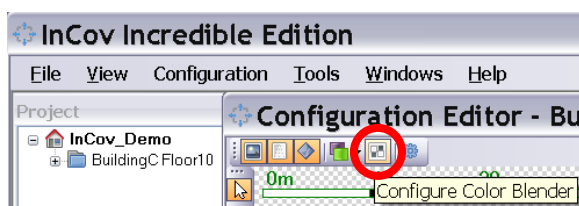


Note that all results in this manual are presented assuming an UMTS system as shown below:

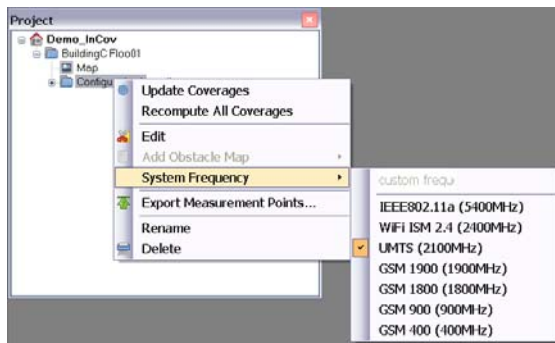

However, to choose another “System Frequency” range, just select the appropriate one (e.g., select WiFi ISM for ZigBee or Bluetooth system).

To move an antenna: just click on the antenna icon and drag it.

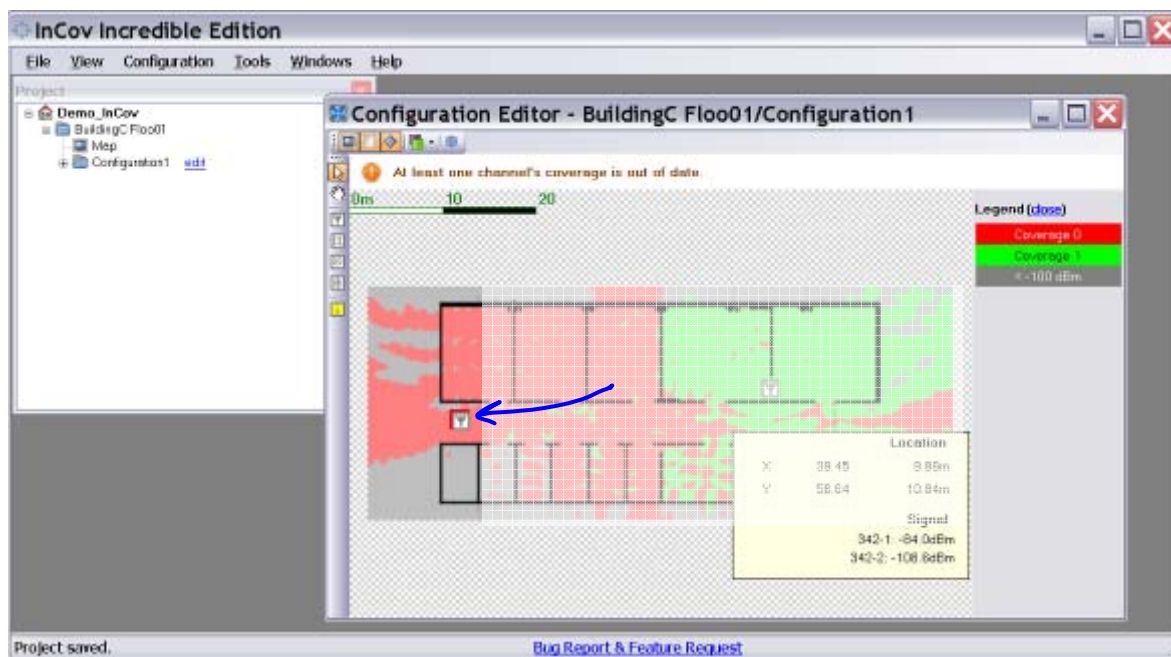


You will notice that after having made some changes to the antennas (such as having moved them) the coverage becomes out of date.



You need to compute the coverage again to update it to the new antenna configuration. This is achieved either by pressing the F5 key or by clicking the “Update Coverages” button (the rightmost button of the toolbar, i.e., the blue gear ).


(Minor note: the first time you use some action which will save the project; you are warned with the following window. To avoid this reminder, just click “Do not show this message again”.)

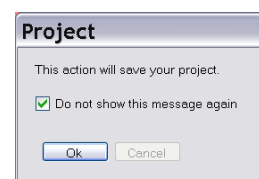

The coverage is then recomputed.


Recall that each channel (or cell) requires one computation (even if there are many antennas on a same channel as usual in indoor coverage). This is a **major time saving** compare to other tools.

If you moved the antenna in each cells you will get:

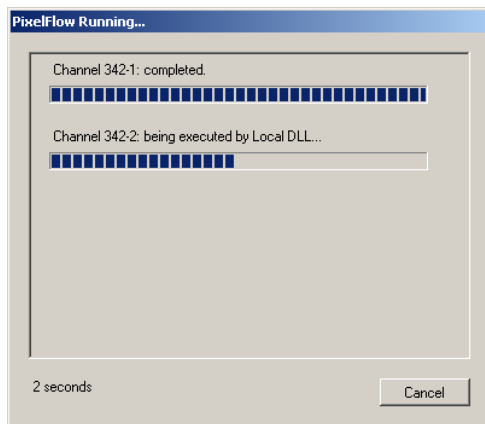


Notice the indication of the total elapsed time. Click "Cancel" (or tab-enter) to close this window.

Once computed, the new "Best Server" (or coverage) map shows up.

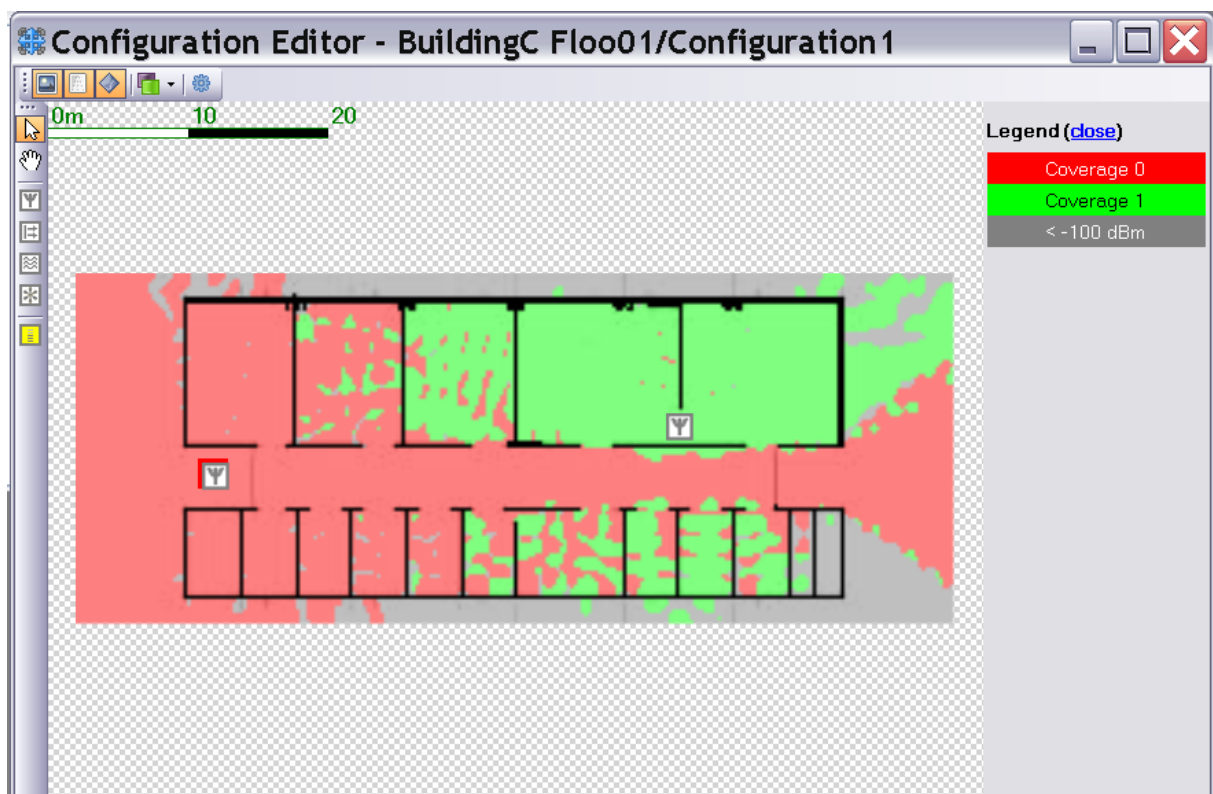

Note that you can **zoom (or un-zoom)** the display to best fit you screen or better position an antenna by clicking the hand tool  and then scrolling the mouse wheel. On some laptops, you might want to try pressing the two buttons and moving you finger on

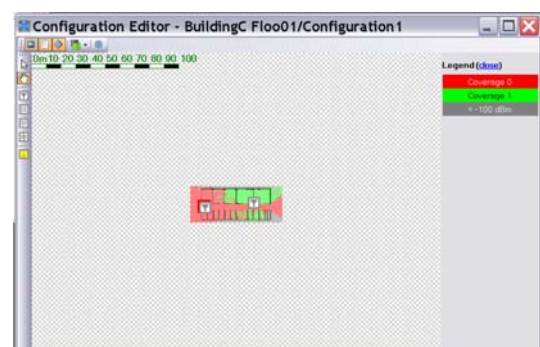


the right side of the pad. The scale is, of course, changed accordingly.

Now you are going to learn how to input and use your own floor plan.


2 Add Your Indoor Map

Now we are going to add another building floorplan and we will give it a scale (in meters).


Right click on the Demo_InCov and choose “Add Region ...” (we use the term *Region* instead of *Floorplan* to be more generic, in case of femto cell planning for example):

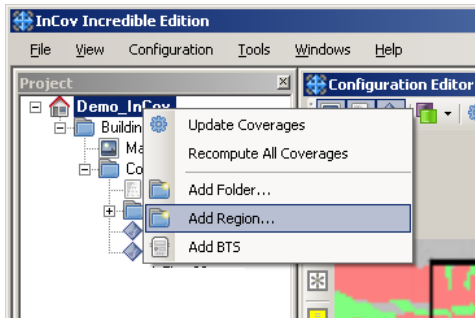


Type in "BuildingA Floor00"

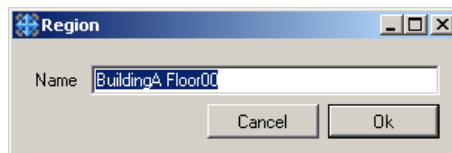

You see now a new folder for your floor plan in the project window.

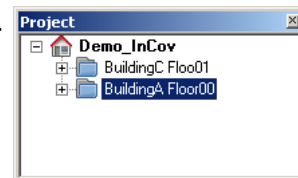


Right-click on “BuildingA Floor00” and choose “Add Map ...”

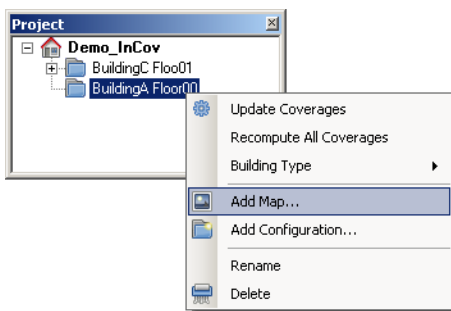


Pick the following file (a00.jpg) in the folder ...\\InCovDemo\\IndoorProjects:

Note that you can **add any graphic file** (scanned, hand-drawn, screen copy, ...

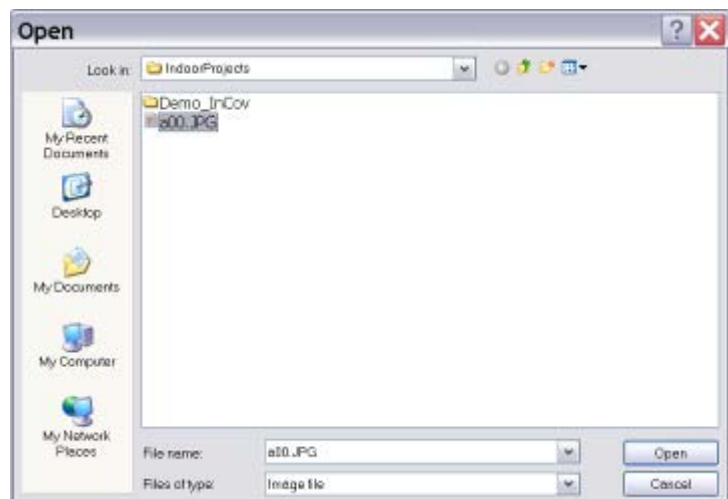


in all most-used format like *.jpg, *.bmp, etc.)


Expand the “BuildingA Floor00” node by clicking the “+” button (  BuildingA Floor00) to get:

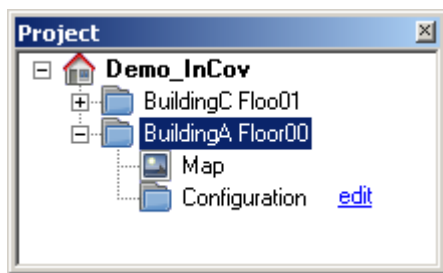


Click [edit](#) nearby “Configuration”. This way your map will show up.

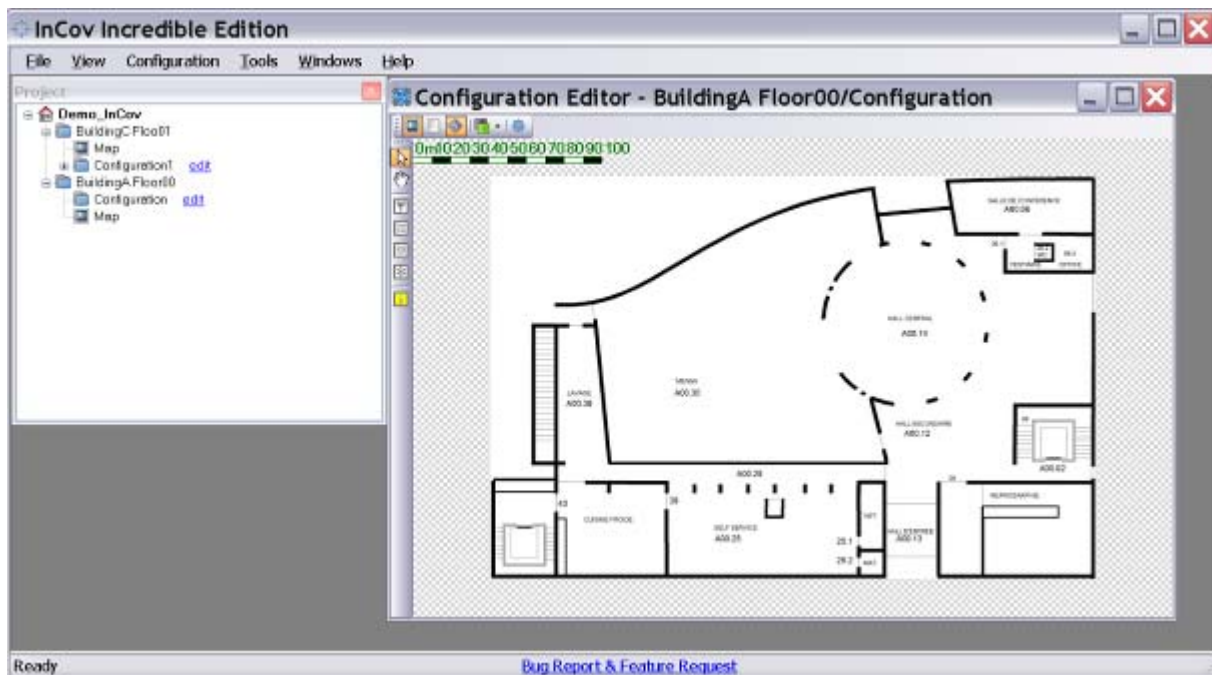

You might have noticed again that a scale (in meters) is shown at the top left side of the map. This scale is probably wrong as there is no easy way to guess it (so it was set to 25 cm per pixel as a default value for all new map). To set the appropriate scale, right click “Map” and choose “Co-reference”.

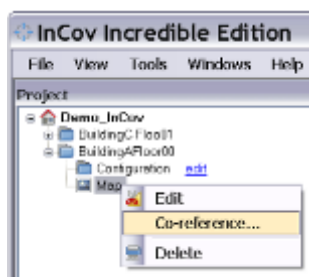

to get

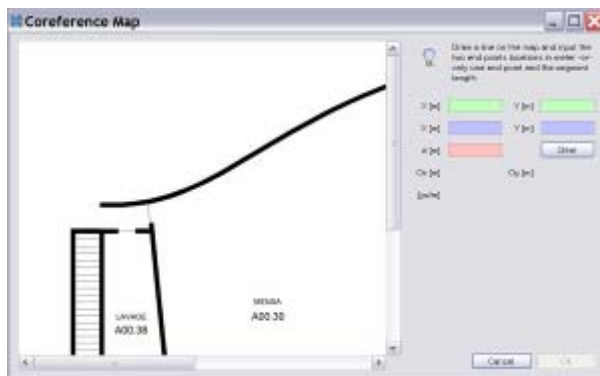


Maximize the window (as you might not see the whole building as you would like to) ...

... and then click and drag the mouse in the map to get the scale




at some appropriate location of your choice.

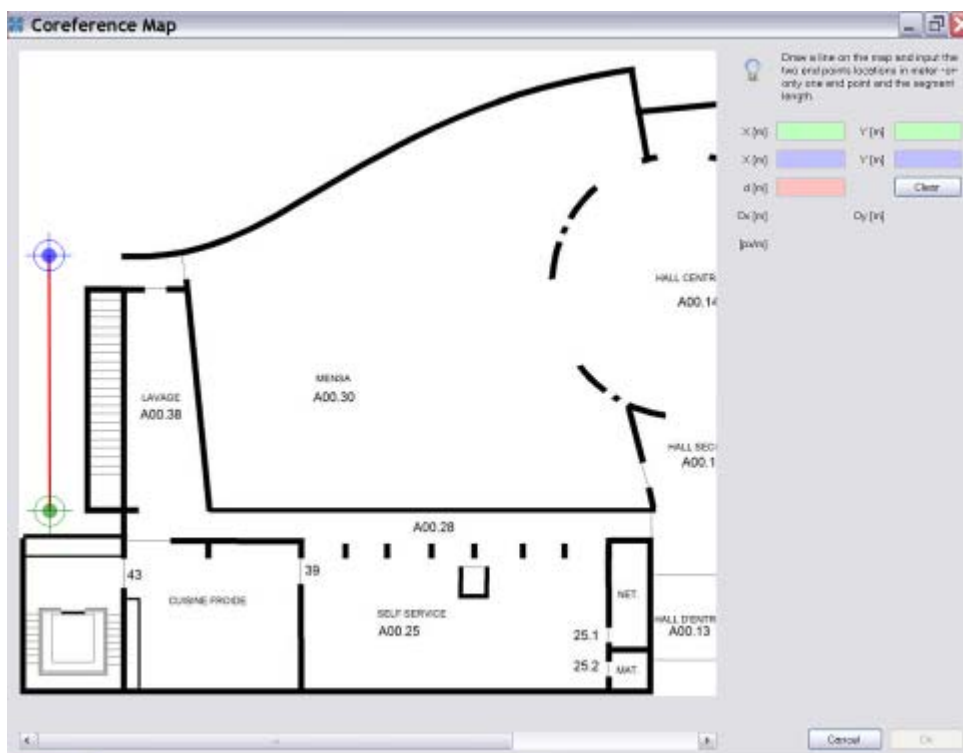

You must now enter the coordinates

(or one set of x & y coordinates and a distance) :

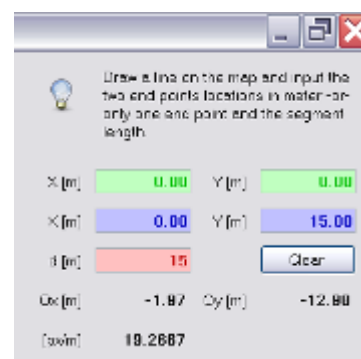


Note that you can still modify the scale and




after having entered the values ($x=0$, $y=0$ and $d=15m$, in this example).

Once you are satisfied, click “OK” at the bottom right of the “Coreference Map” window. You will now get the correct scale in the “Configuration Editor” window as show below:

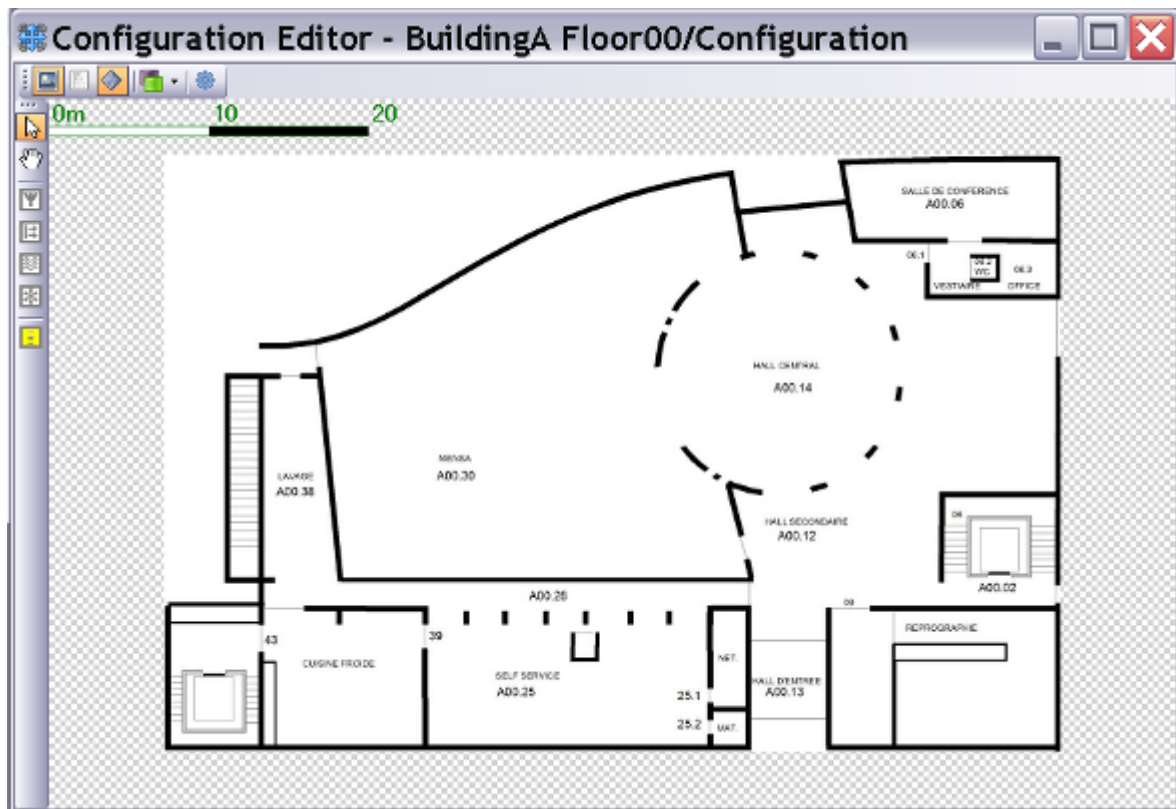


Now, you need to create a **wall map** so that the program knows on your floor plan what is a wall and what is not (we call it the “Obstacle Map”). Right click “Configuration” > “Add Obstacle Map” > “From Map...”.

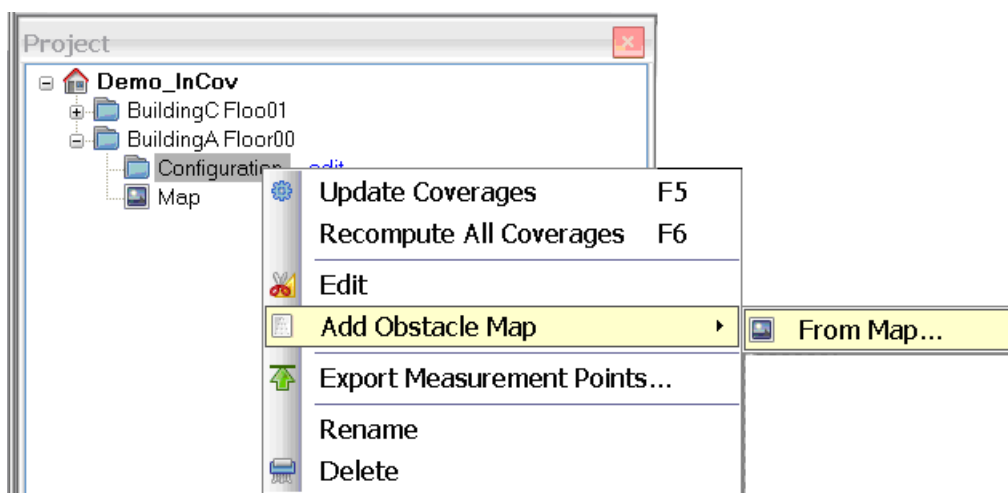

You might get the following window, showing only a portion of the building map ... if you do, maximize the window,




Such that it looks more like this:

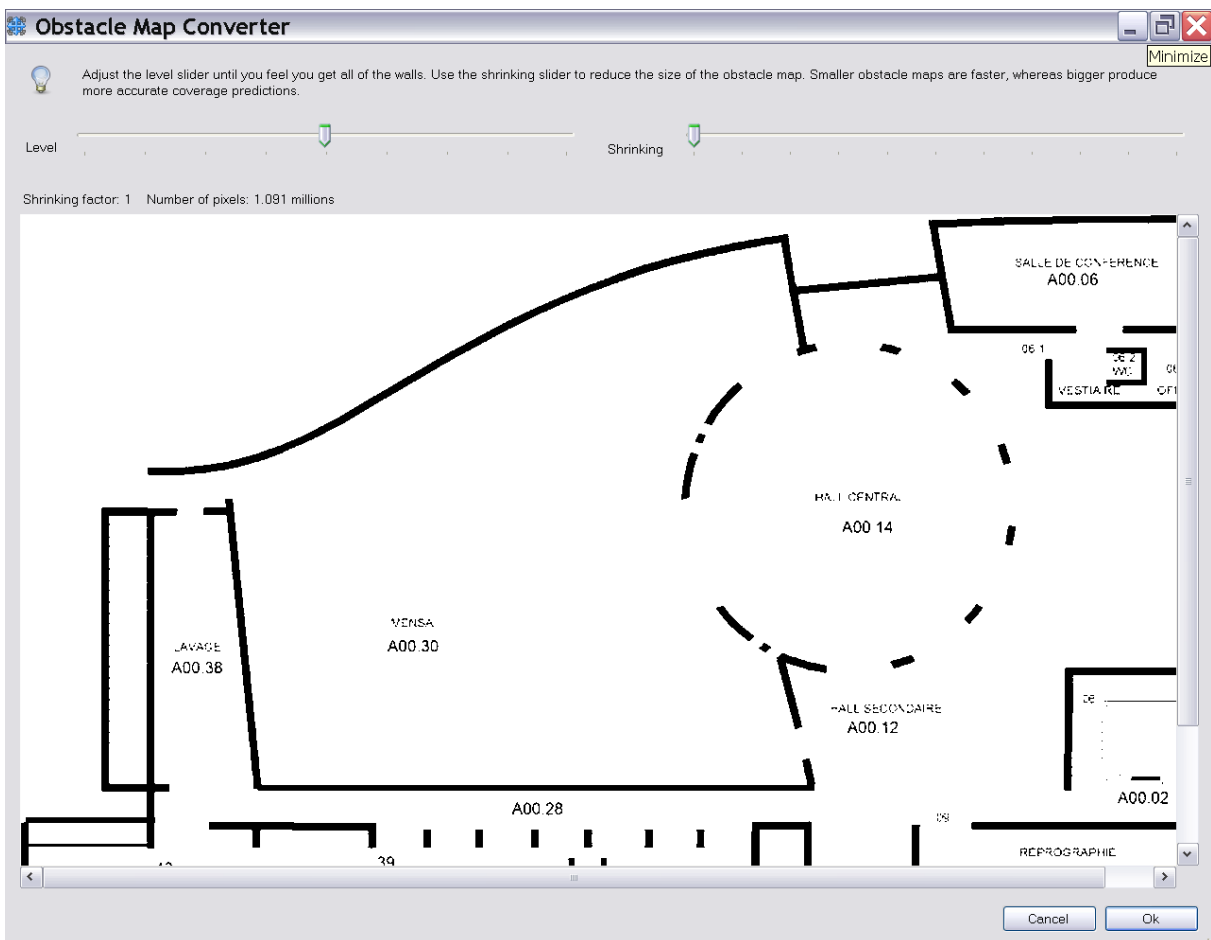


Adjust the “Level” slider until you think you have almost all of the walls.

With the “Shrinking” slider you can reduce the size of the “Obstacle Map”. A smaller size will lead to **faster computations** and **not necessarily less accuracy**. Click OK when satisfied.



You can then obtain something like this (here ~52'000 pixels):

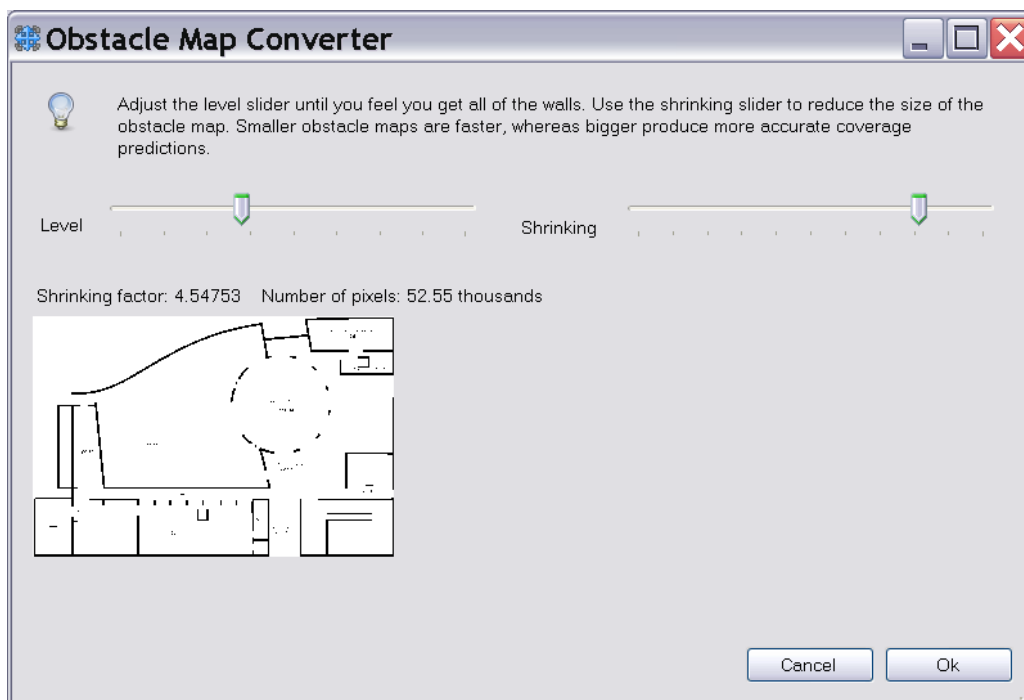


or like this by adjusting the "Shrinking" factor (~19'000 pixels):

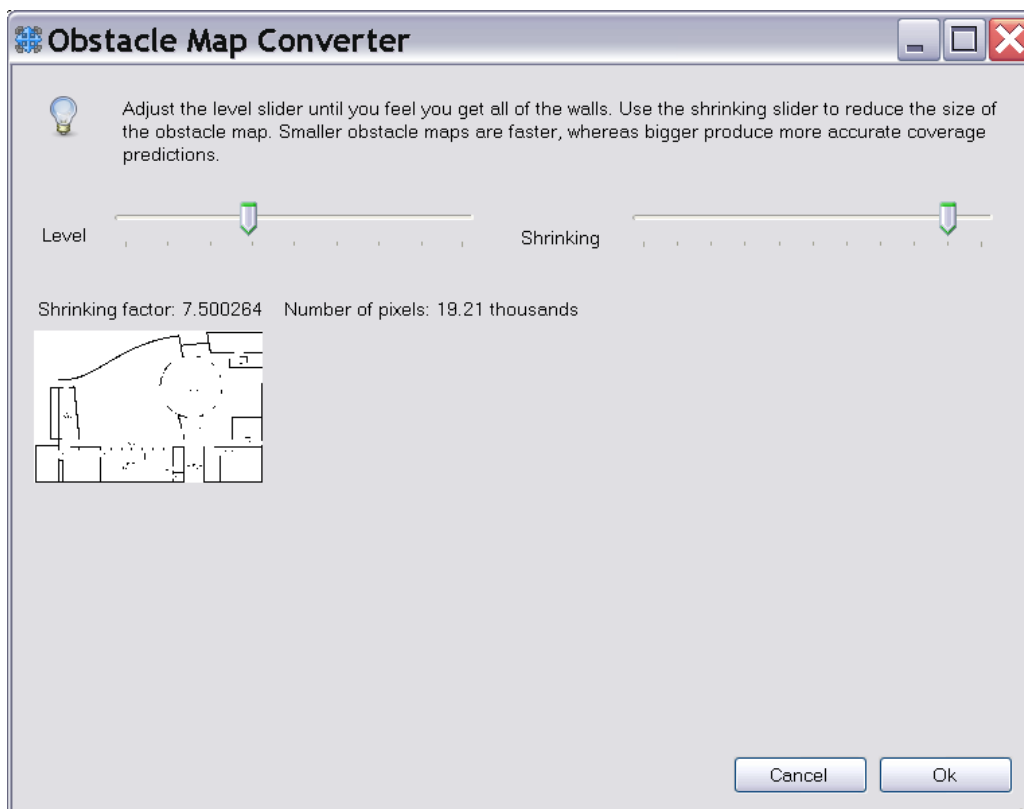


You can adjust the “Level” to suppress some details as you can see in the following two screen copies (notice that a wall also disappeared as the “Level” was decreased):

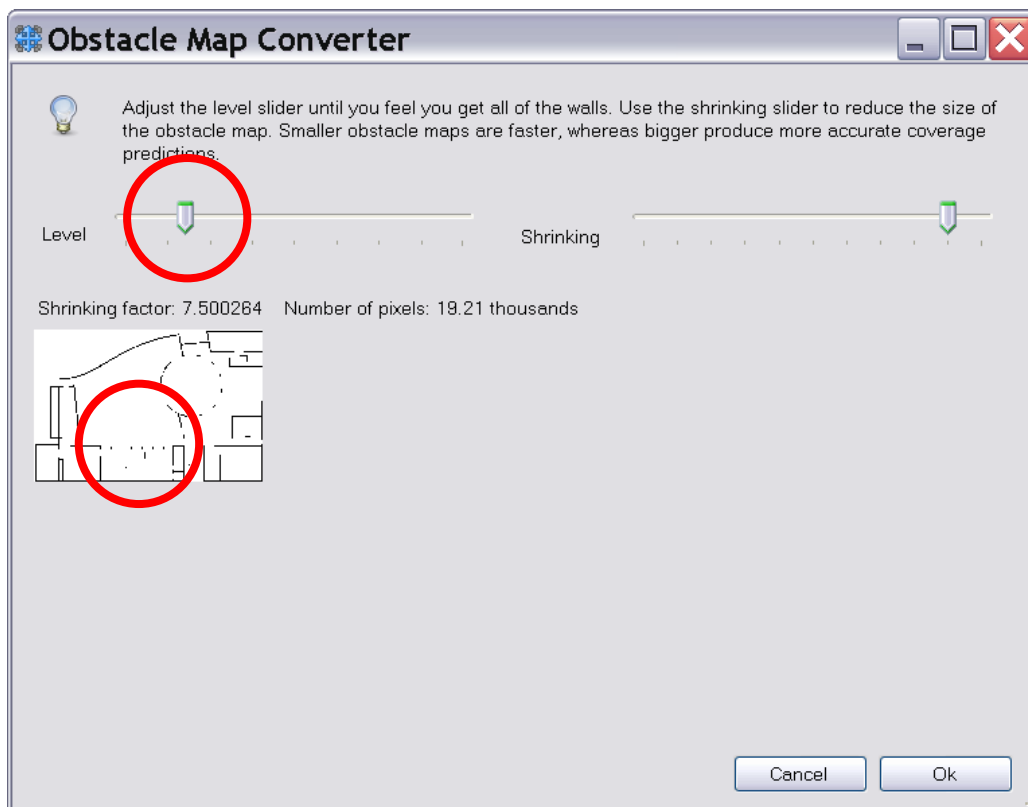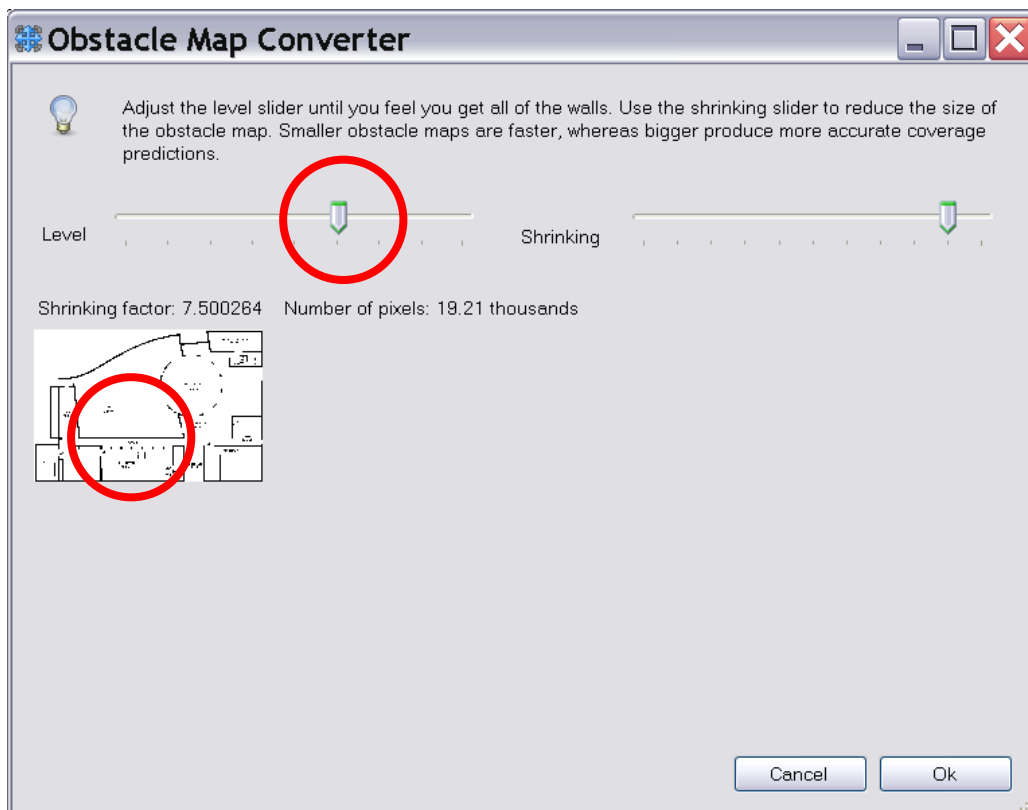

You can then edit the “Obstacle Map” image to further modify the map. In order to do this, double click your “Obstacle Map” in the project window (or right-click and “edit”).

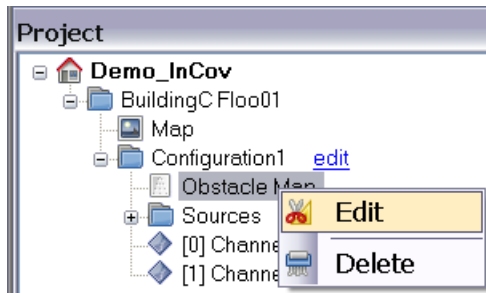


The conventional Microsoft Windows application “Paint” will open as follows. In the following example, we added a wall that was erased in the “Level-Shrinking” process.

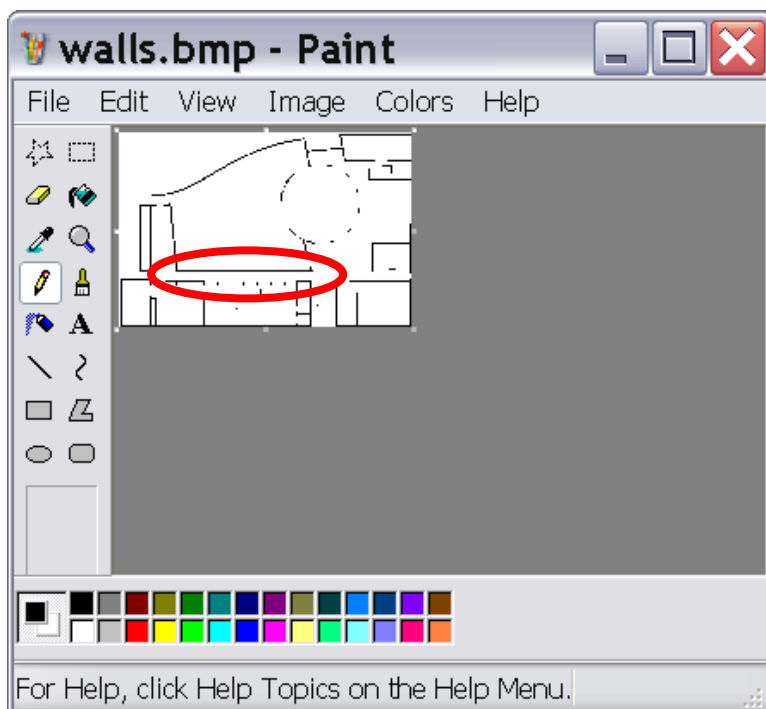


Usually, it is recommended that you remove things that are not walls, typically texts. However, you will see that our prediction algorithm is rather robust with respect to these kinds of artefacts. Once you have finished, simply **save and close MS-Paint** (or close and save but **do not use “Save As”**).

In future releases we might introduce colored walls to let the user choose various wall types (and wall attenuation if deemed necessary). Since usually InCov predictions are rather robust with respect with inaccurate wall descriptions, metallic shelves locations, special walls, etc., please let us know what are your needs and send us your project with an indication of where a poor accuracy is observed.


In InCov, you can toggle “Show/Hide Map” (the original floor plan) as shown below:

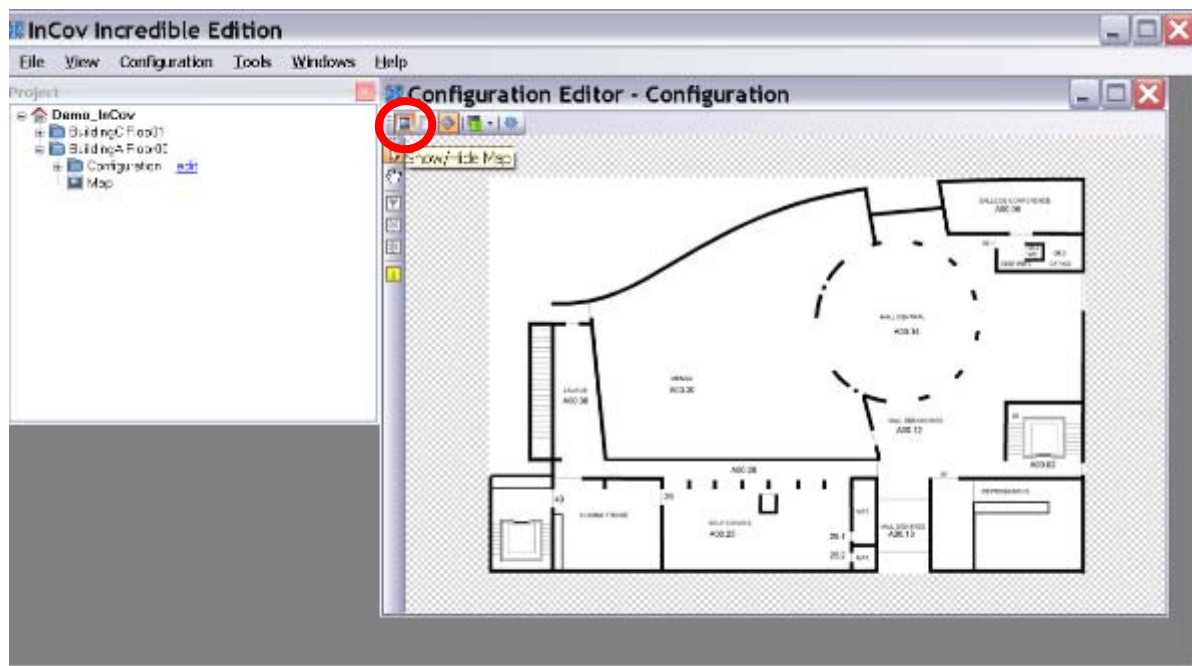

and turn on/off obstacles view using the following toggle button:

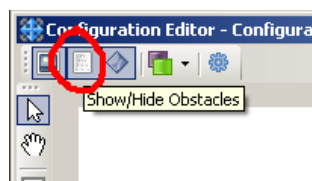


Now you are ready to place an antenna: click on the “Omni Antenna” tool.

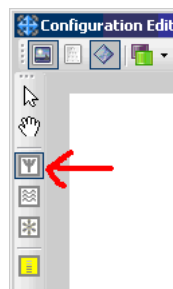

and click to place the antenna where you want. For example:




Right click the antenna > Edit

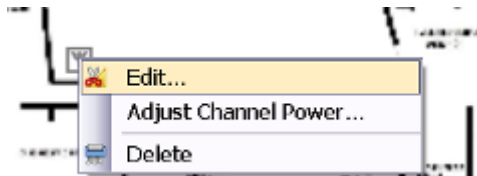

Fill the properties like this for example.

Note that the “Location X” and “Y” might differ from above since your co-reference might not be exactly as shown in this manual.


Then compute the coverage as already described (clicking the blue gear ).

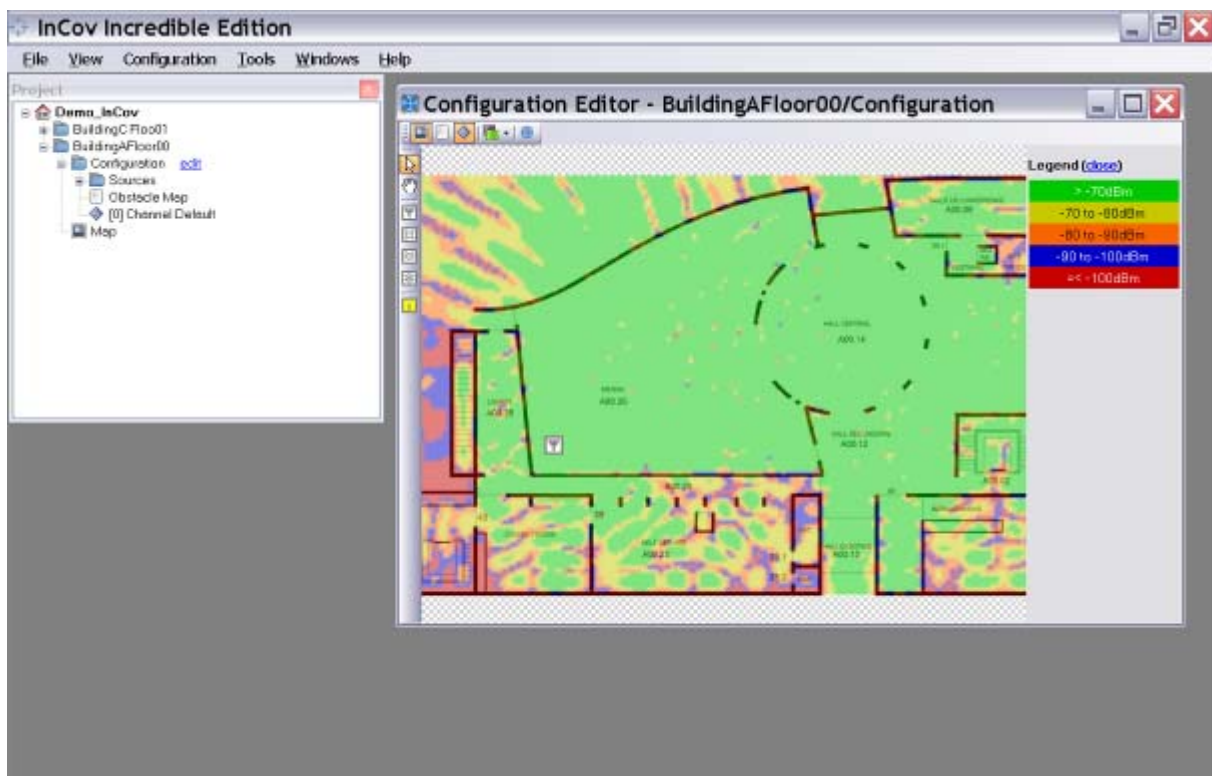

Note that only a **single computation per cell** needs to be performed so if you add several antennas with the same channel, all these antennas will belong to the same cell. The total coverage will be

InCov ©2008, EIA-FR (wagen@hefr.ch) 17/34


computed and cannot be dissociated, for example if two more omni antennas are added, you will notice that only a single computation for all 3 antennas is performed (assuming you have set all 3 antennas with the same channel: **channel 2** in this example):

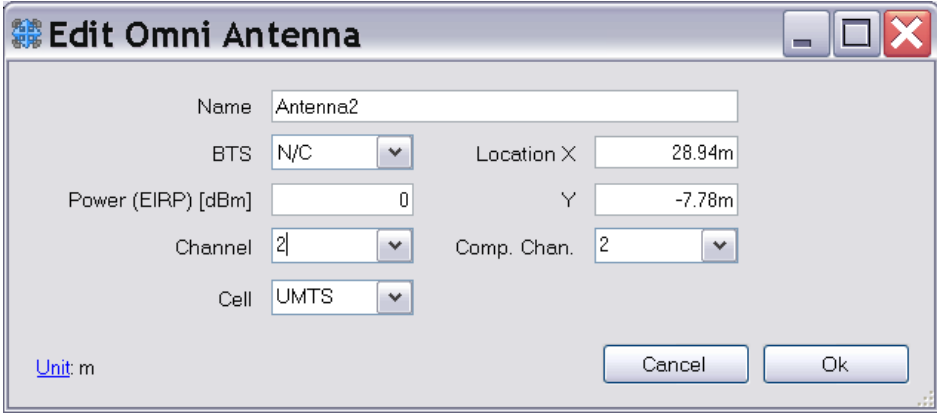

The 'Edit Omni Antenna' dialog box contains the following fields and controls:

- Name: Antenna2
- BTS: N/C (dropdown)
- Location X: 28.94m
- Power (EIRP) [dBm]: 0
- Y: -7.78m
- Channel: 2 (dropdown)
- Comp. Chan.: 2 (dropdown)
- Cell: UMTS (dropdown)
- Unit: m (text)
- Buttons: Cancel, Ok


Here is the result (notice the two antennas at the bottom used to fill the missing coverage detected above):

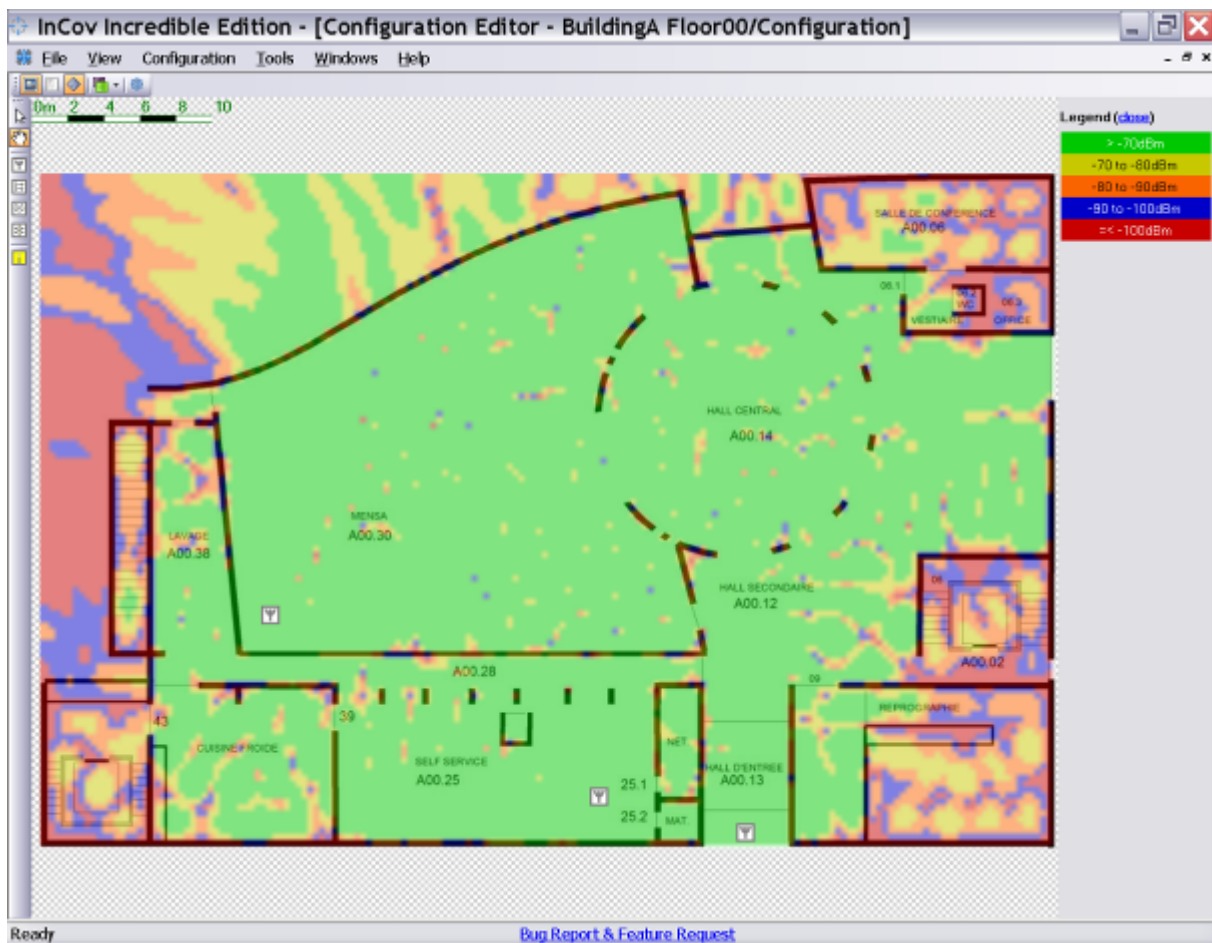


3 Patch antennas

We will now add a patch antenna.


Select the patch antenna tool:

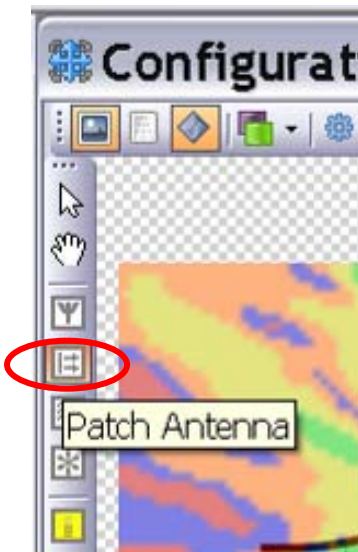

 
To better see the introduction of the patch antenna, it is suggested that you toggle off the “obstacle map” and “coverage” display by clicking on the following icons:




Now you can move the “patch antenna” icon on the map as shown below:

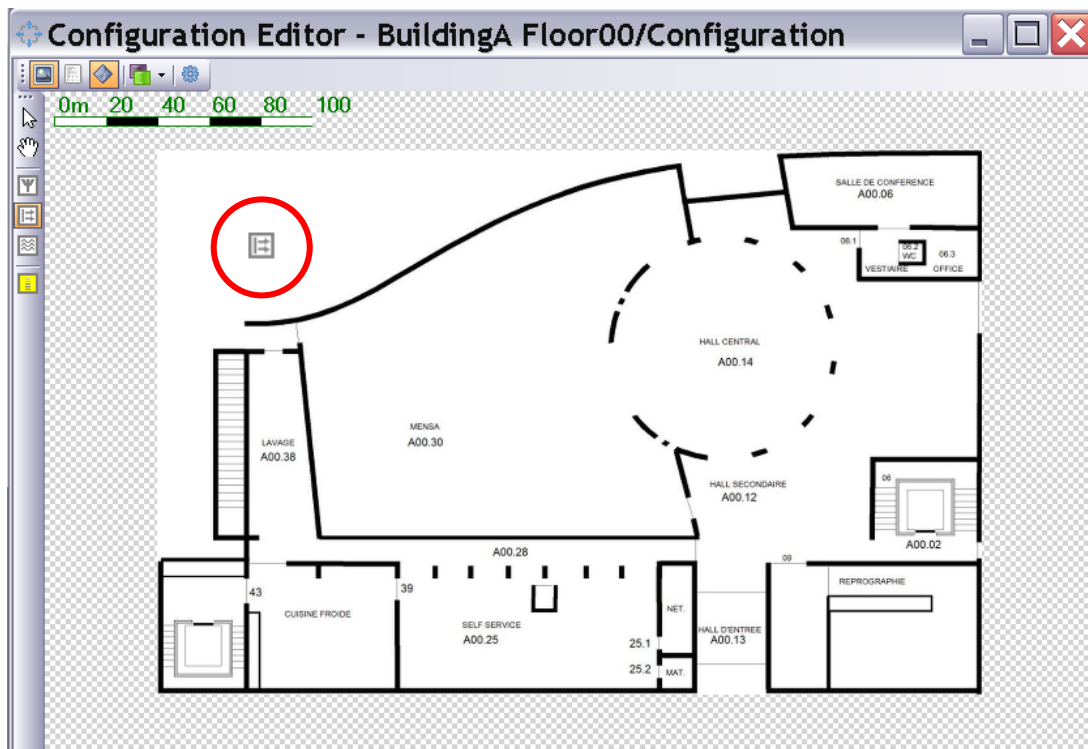


You will notice that if you drag the “patch antenna” near a wall and click, the antenna will snap on the wall and the patch direction is set automatically (but you can change it of course as you will see).

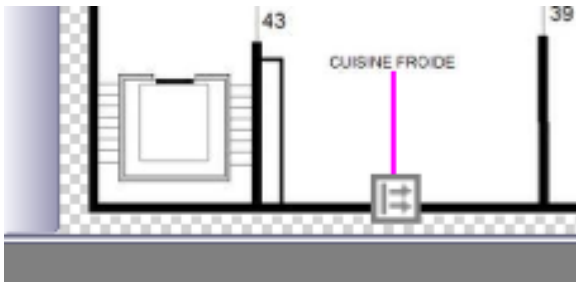

To stop adding patch antennas or to change the orientation, **right-click** (to get the arrow pointer ) ... and click on the patch antenna to select it:

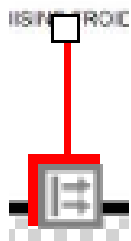

Now you can choose the direction by clicking on the square tip of the patch antenna.

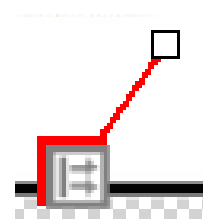


You can also edit manually the direction angle by editing the patch antenna (right-click, choose “edit”):

... to get any desired direction (here 32°) :




Note that in an open space, the effect of a patch antenna is better seen. *The steps necessary to obtain the following screen copy is left as an exercise for the reader:*

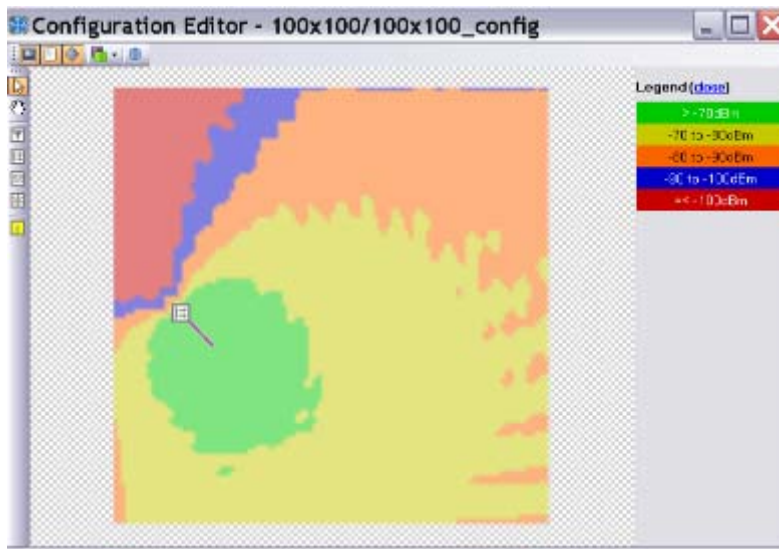

(The patch antenna is not yet fully calibrated in this release of InCov so the user might prefer to use an omni antenna instead).



As for all antennas, you can also adjust the power on the patch antenna by right-clicking on this kind of antenna and choosing “Adjust Cell Power ...”.

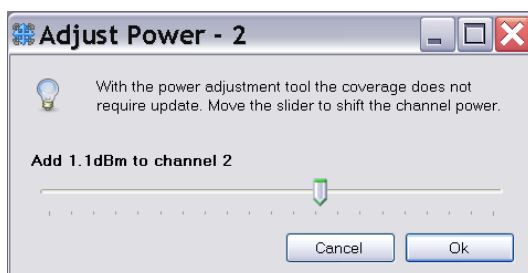

In fact, as the name suggests, it is the cell power which is adjusted by right-clicking on any antenna in a cell and choosing “Adjust Cell Power ...”. It is recalled that a cell is defined by a channel and that all the antennas on that channel contributes to the coverage of this cell.

You are encouraged to “play” with both the “Adjust Cell Power ...” which is very fast and “Edit ...” on any particular antenna to get the desired coverage. You will easily discover that the computation takes a non negligible time, only if you change the power setting of one antenna with respect to the others in the same cell (on the same channel).

Note: To rename a “Configuration”: by right-click on the “Configuration” folder or its name and choose “Rename”.

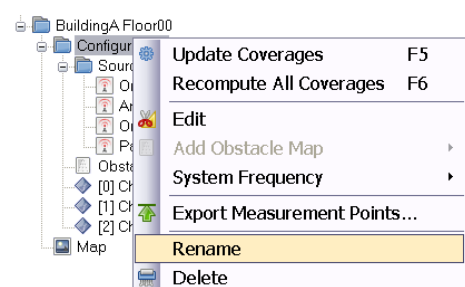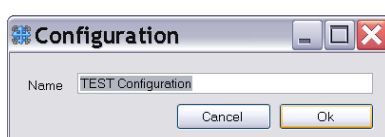


To save your project (Ctrl-S) or File > Save.


Now, you will learn how to take into account the coverage (or interference) from outdoor antennas placed far away from the building under investigation.

4 Coverage from outdoor antennas

InCov allows you to compute the indoor coverage from outdoor antennas. The example below guides you to add the coverage from a single outdoor antenna. You should only have measurements (or predictions) of the received power at a number of outdoor locations and know the approximate direction of the outdoor antenna. For example, consider the following situation:

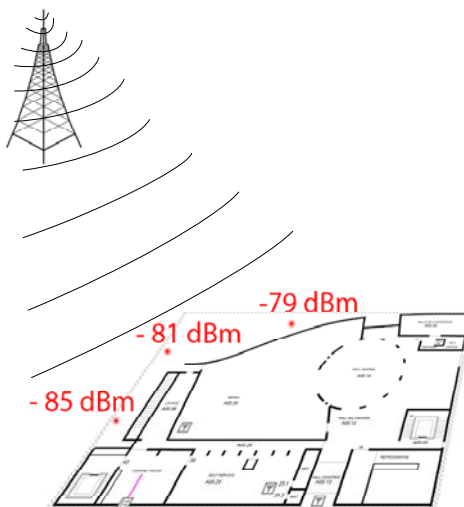


The indoor coverage from the outdoor antenna will be computed after entering an **outdoor coverage generator** as a broken line  with the appropriate parameters (next page).

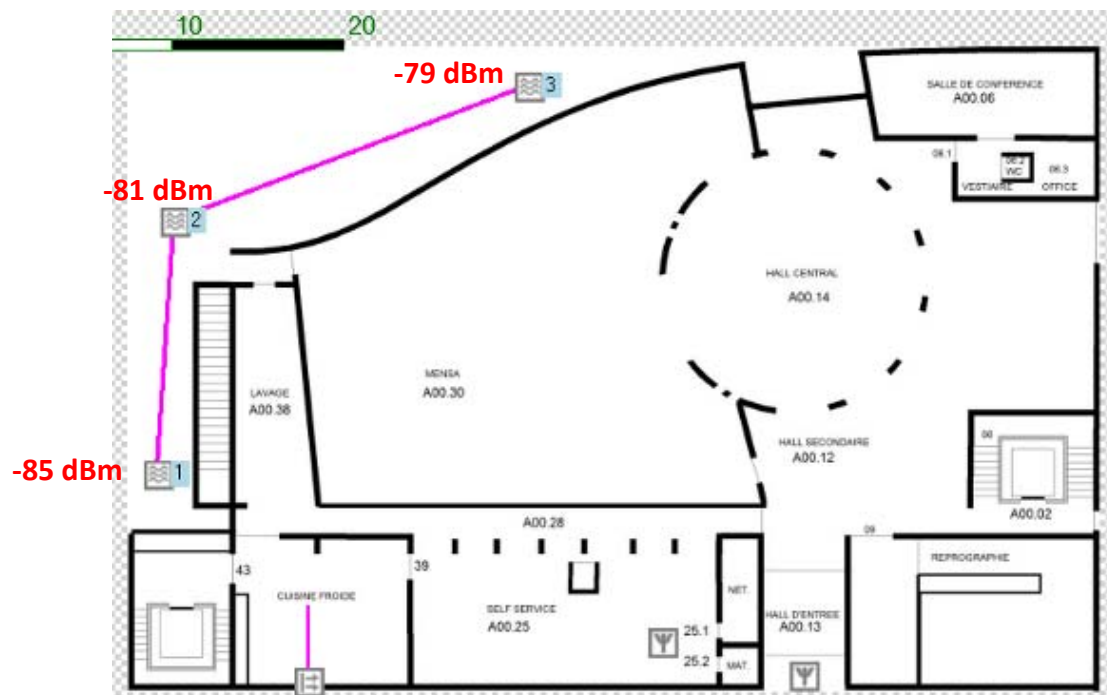


To enter the outdoor coverage generator, choose the tool  called “Outdoor Coverage Generator”



and click in the “Configuration Editor” window to enter the first point, as shown below:

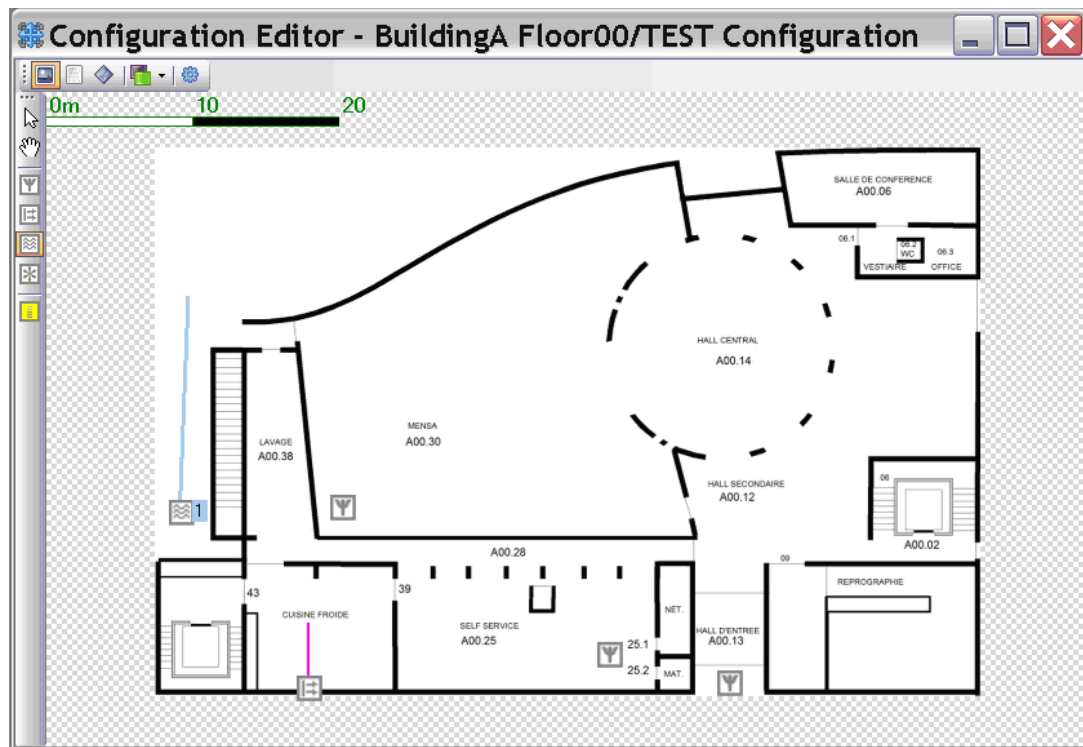

click to enter the second point as shown below (on the left), and click again to enter the third point:

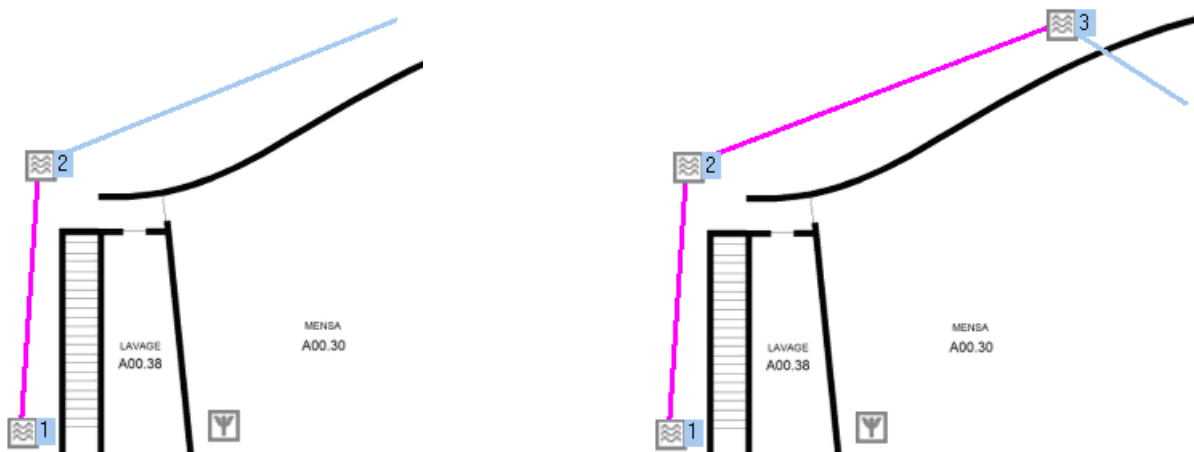


Finish by right-clicking ...

... and you will get:

Note that it is easy to **add extra points**. Just click with the  tool when an “Outdoor Coverage Generator” is selected.

It is also easy to **remove a point** by just clicking on the point to be removed when the  tool is selected. Then, right-click (as usual) to terminate the insertion of an “Outdoor Coverage Generator”.

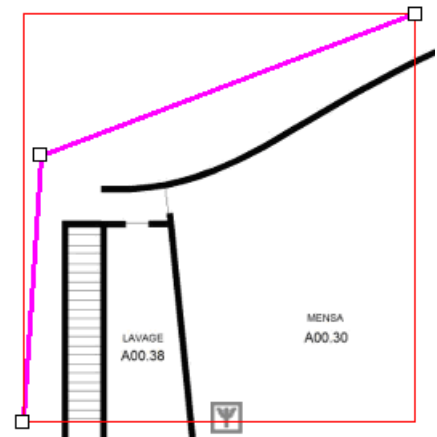

To edit the parameters of the “Outdoor Coverage generator”, double click (or right click and choose “Edit”) anywhere in the red rectangle (delimiting the “Outdoor Coverage generator” points). Enter the following parameters:

DistantAntennaForm

Name: Outdoor 1

BTS (End point): N/C Location X: 6px

Power (EIRP) [dBm]: -108.800003051 Y: 78px

Channel: Outdoor

Cell: TS_outdoor

#	X [px]	Y [px]	Angle [°]	Power [dBm]
1	5	78	-60	-85
2	8	31	-60	-81
3	71	7	-60	-78


Cancel
Ok

Note that the angle to enter in the “DistantAntennaForm” depends on the location of the outdoor antenna as shown in the figure.

In our example, we can use an angle of **300°** or **-60°** (minus sixty degrees).

(Upon request, it is possible to change the 0° reference and the angle sign to be positive in the clockwise direction)

Direction of the incoming radio waves from the outdoor antenna


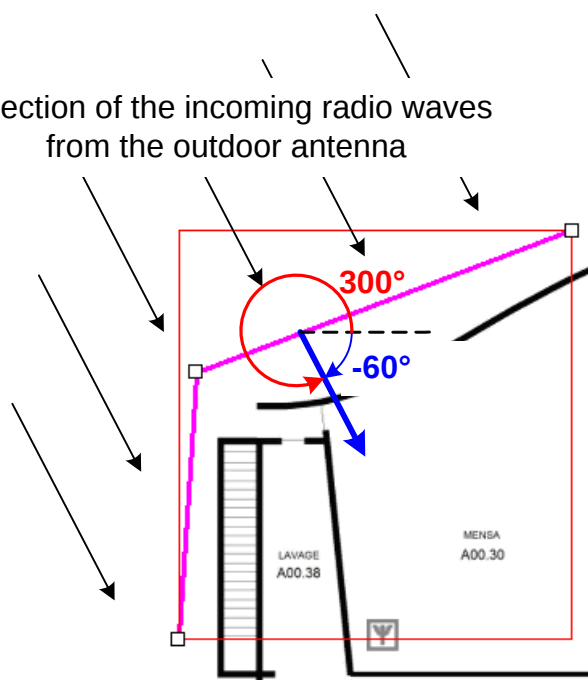


You have then completed the insertion of an outdoor coverage generator. To compute its effect, just press F5 or click the blue wheel  (like for an antenna).


For example, the following figures present the predicted coverage with all other antennas at -100 dBm (so their coverage can be neglected).

On the right, the result shows that the radio coverage from the outdoor antenna is attenuated by the wall. The prediction outside the building should not be considered.

On the left, the power for the outdoor antenna has been increased by 20 dB to exaggerate the penetration effect of outdoor to indoor propagation.

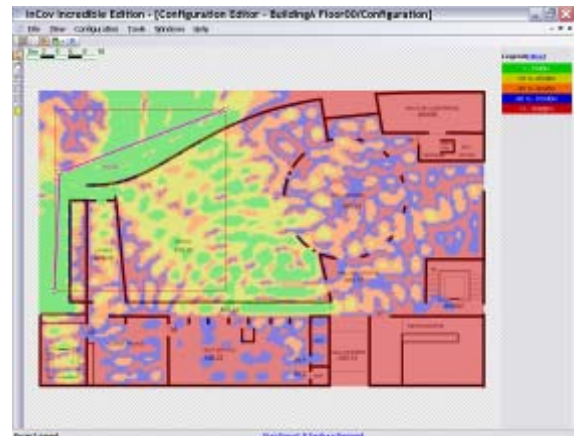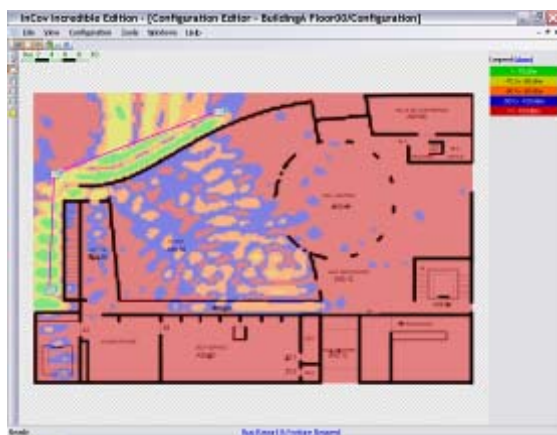

To further demonstrate the effect of an outdoor coverage generator, the following result shows the same outdoor coverage generator as above but **in free space**:

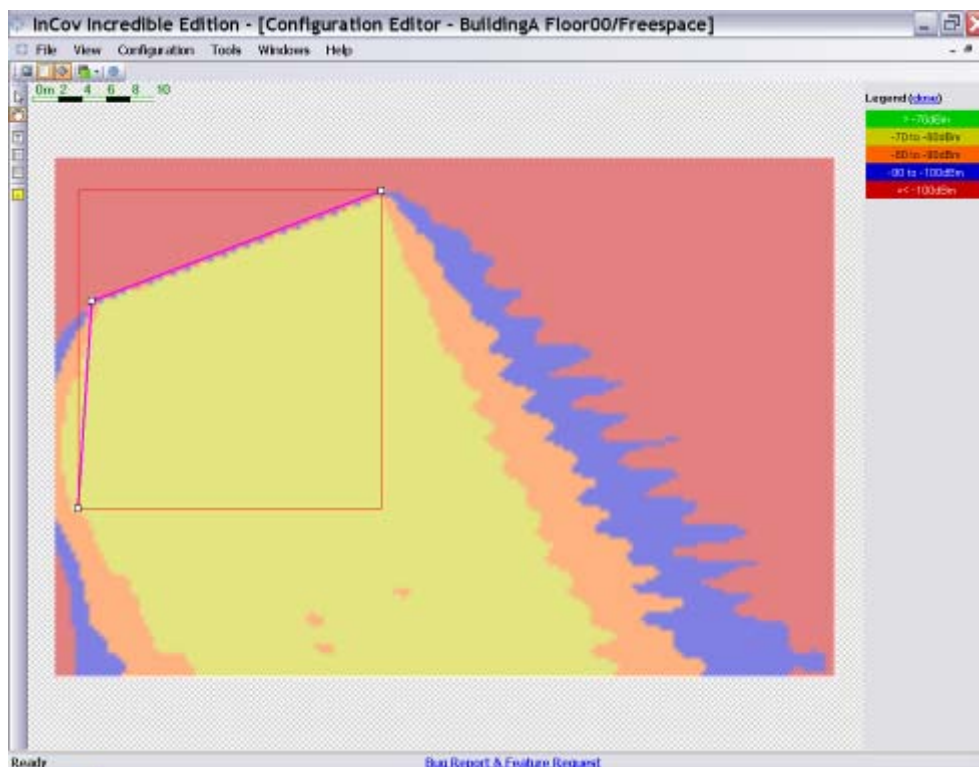


5 Add a feeding network

InCov allows you to a feeding network: from the UMTS Node B (or GSM BTS) to each antenna.


This feature has not yet been fully tested. We welcome any comment.

The idea is to help you verify the feeding network and the power settings once the antenna layout has been chosen.


A feeding network may look like this (as an example):

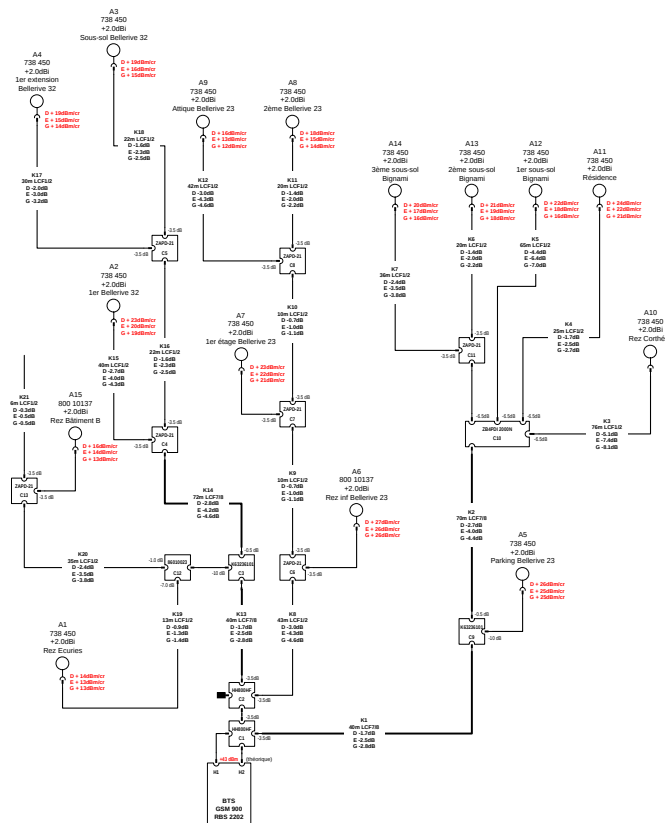


In InCov, it will look like this (note that a simpler feeding network for 5 antennas is shown here):

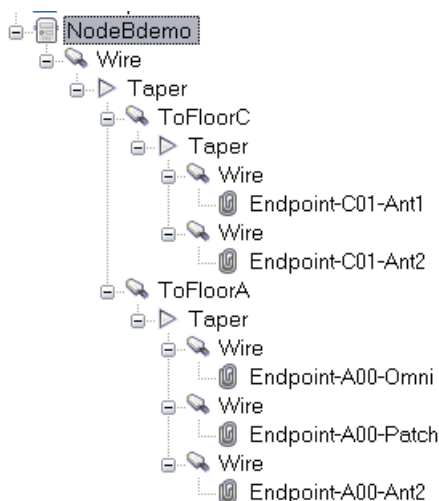


To start adding a feeding network, you will first add a BTS (we use the same term “BTS” for a GSM BTS or a UMTS Node B). Right click on the project name  and choose “Add BTS”.

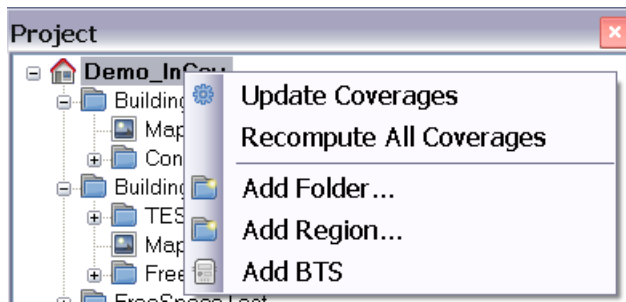


Then right-click on the BTS to “Edit”:

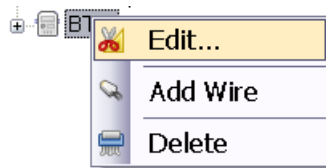


and to input the following parameters: “Name”, “System” and its “Power [dBm]” (here: NodeBdemo, UMTS and 30 dBm):

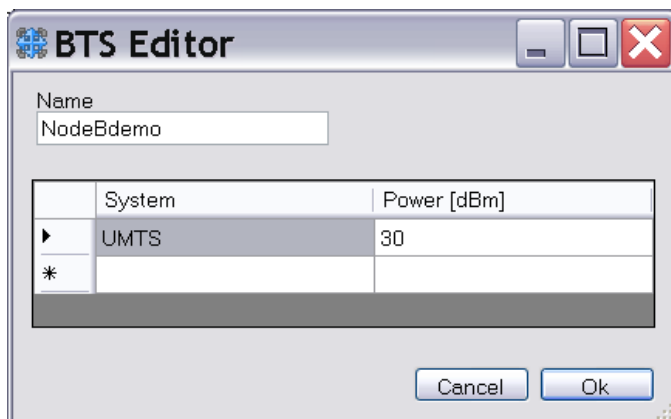


Then add a “Wire” to the BTS (name NodeBdemo here) by right-clicking again on the BTS icon:

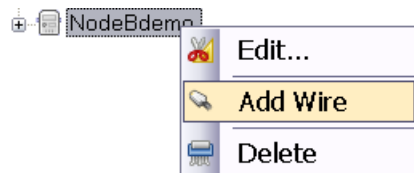


And right-click on the “Wire” to “Edit” it:

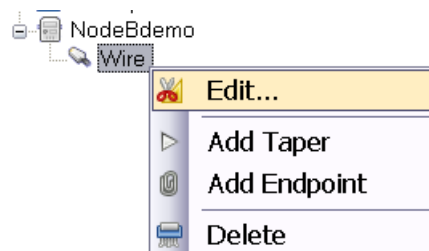


And insert the appropriate parameters (“Length [m]” and “Loss [dB]”, the “Name” of the wire is optional):

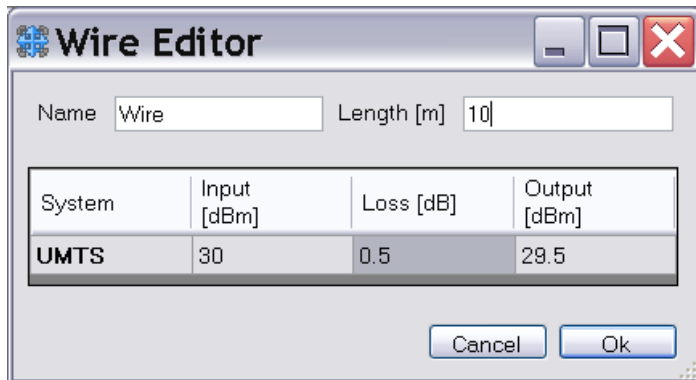


Now you can add a taper after the wire (right-click on the wire):

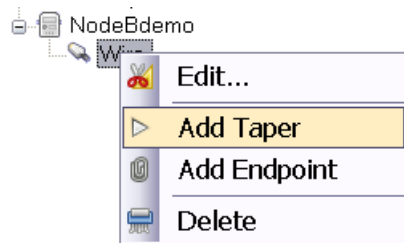


And add as many “Wire” as there are output connectors to the taper:

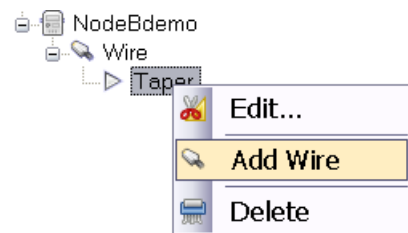

So adding 2 “Wires” (for a taper with two output ports for example) gives:

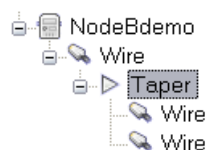

At this point it is recommended to edit each wire, enter the appropriate loss and length and perhaps choose a different name for each wire:

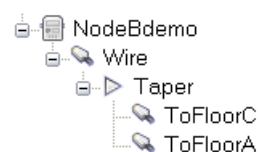

Then you can “Edit” the Taper (right-click on the Taper icon) to choose the appropriate “Connected wire” in the list box and to type in the correct taper “Loss [dB]” parameters (here -3.5 dB for example):

Taper Editor

Name: Taper

Output 1 of 2

Connected wire: ToFloorC

System	Input [dBm]	Loss [dB]	Output [dBm]
UMTS	29.5	3.5	26

Cancel Ok

... do not forget same for the **second output**, i.e.,

Taper Editor

Name: Taper

Output 2 of 2


Connected wire: ToFloorA

System	Input [dBm]	Loss [dB]	Output [dBm]
UMTS	29.5	3	26.5


Cancel Ok

You can continue to add tapers and wires to each line to complete the feeding network.

Finally, the wires should be connected to the antennas. For each wire to be connected to an antenna, right-click on the wire and choose “Add Endpoint”

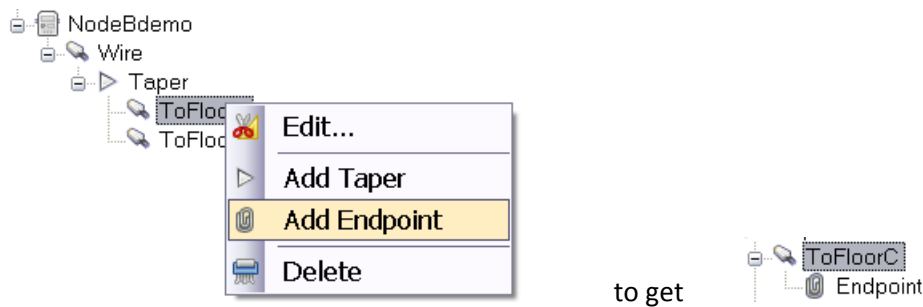


This “Endpoint” can then be named so it will be easy to select it from the “Edit ... Antenna” window. To name the “Endpoint”, right-click on it and choose “Edit” to get:

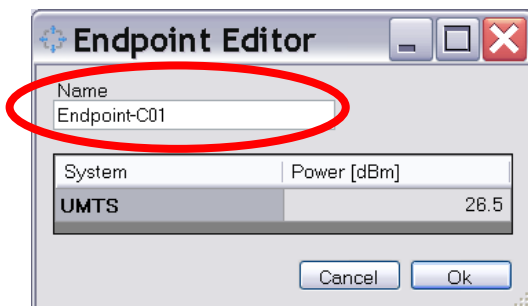


(In future release this “Endpoint” could also be linked to an antenna from the “Endpoint Editor”).


Once all endpoints have been created, each antenna can be linked to the appropriate “Endpoint”. In the “Edit ... Antenna Editor” (double-click on the antenna or right-click and chose “Edit...” as follows

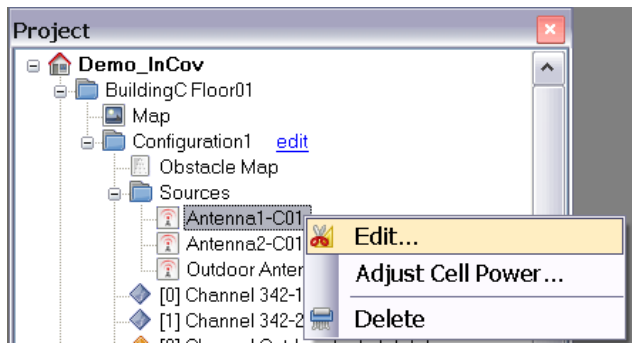



Choose the desired “Endpoint”:

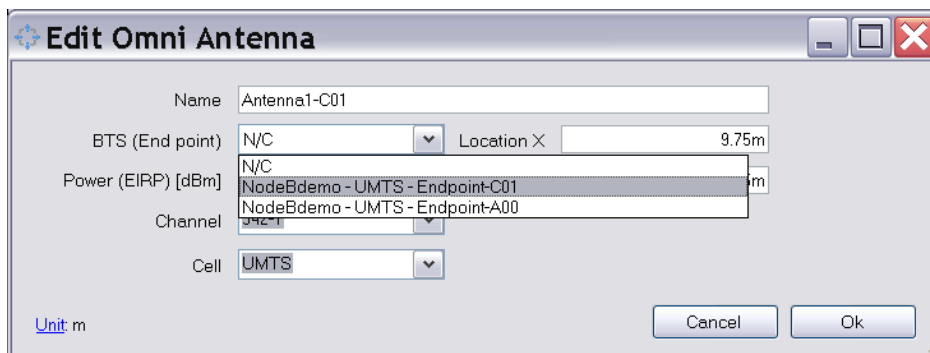


Note that the BTS and the entire feeding network can support multi-system (e.g., UMTS and GSM):

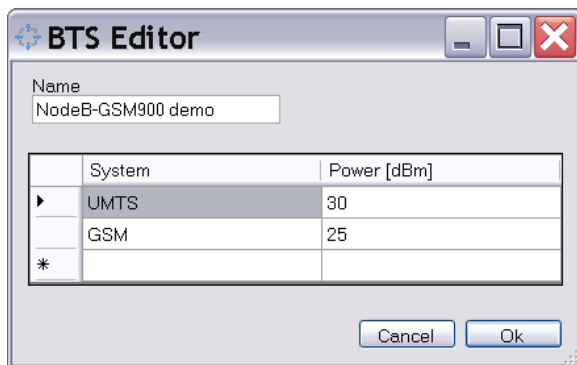


The parameters of each wire and taper can be adjusted

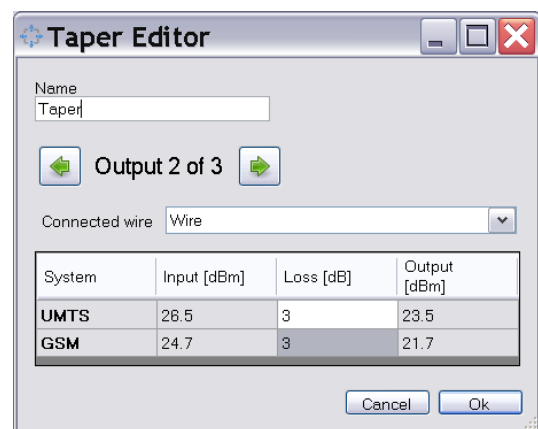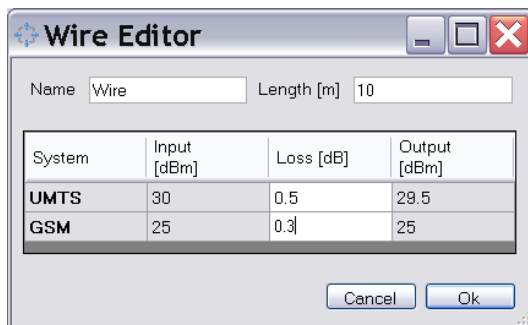

Thus, the correct “Endpoint” powers are computed:

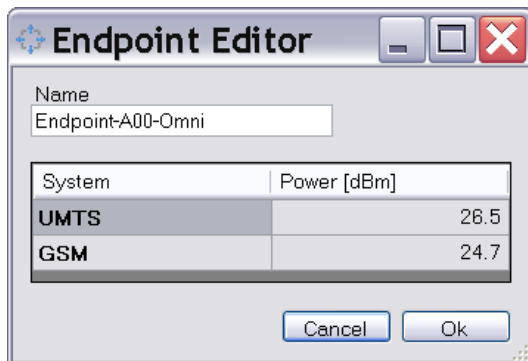


And the appropriate “Endpoint” can be chosen for each antenna:

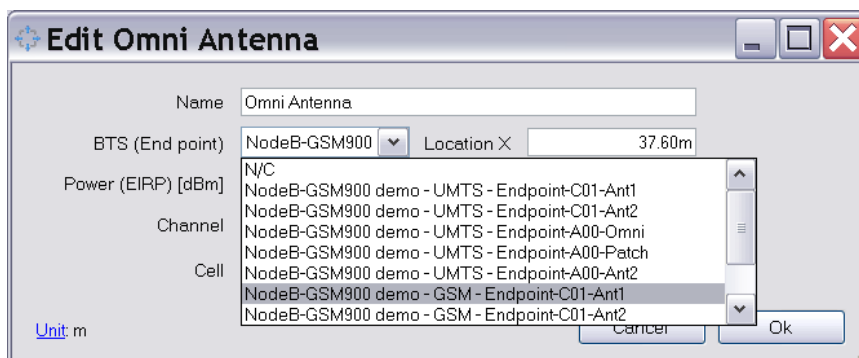


6 Interesting features of the InCov tool

6.1 Multi-system antennas and copy-paste

In this release, each system (e.g., UMT and GSM) must use a different set of antennas (i.e., different “Configuration”. As the position of the antennas will usually remain the same for the cellular systems (GSM, GPRS ... UMTS) using multi-band antennas, the antenna configuration can easily be copied; right-click on the configuration and select copy:

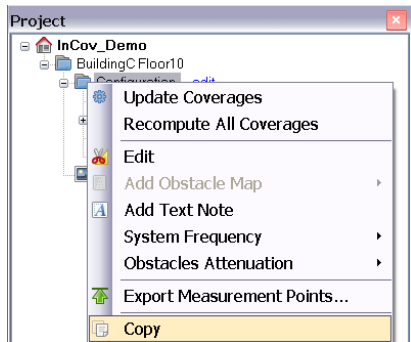


However, the consistency between the “System frequency” and the “channel” is not yet insured and great care should be used when mixing configuration with different systems. With the current version, it is recommended to simply define two separate projects, or to “copy” a “region”/building and simply “paste” in the project menu (“InCov_Demo” in the screen shot below).

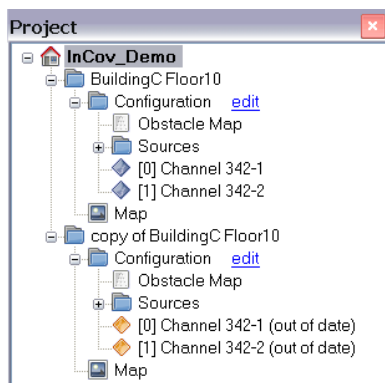


Note the copied configuration after it was pasted.

6.2 Help to insure consistency


InCov provides some help to **insure consistency** in the design. For example, if you try to link an antenna with a “Default” cell to a given “BTS (End point)”:

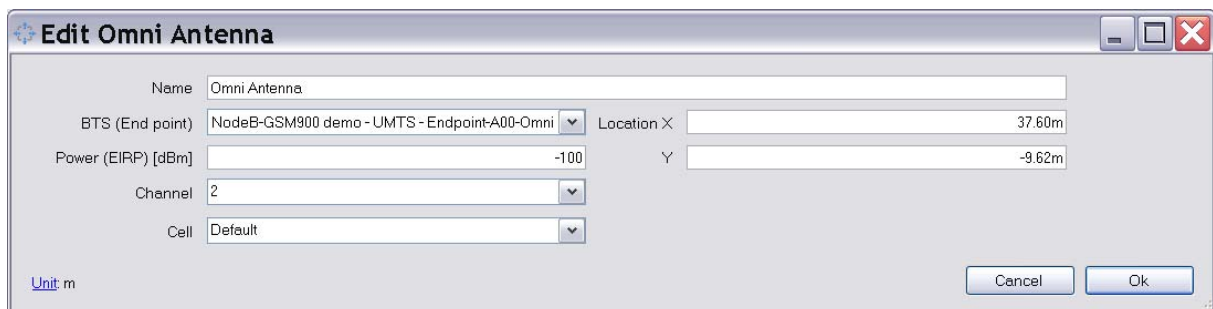

you are notified that the cell is not defined:

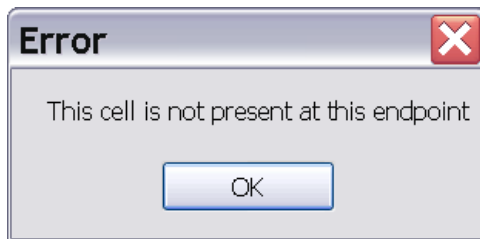

To let you verify your design, InCov will provide the at the antenna connector

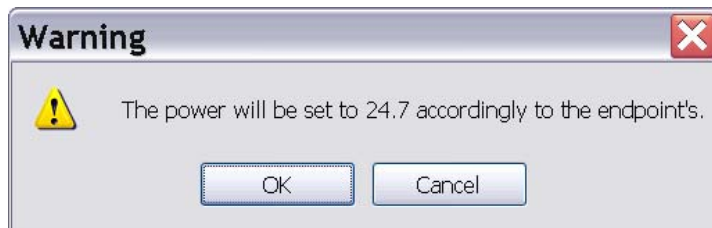

If you then change manually the “Power (EIRP) [dBm]” field of the antenna, the link to the “Endpoint” is lost; N/C for Not Connected is displayed in the “BTS (End point)” field. If you change the antenna EIRP using “Adjust Cell Power ...”, you will be not warned but the power adjustment will have no effect *(a warning will be implemented in a future release. The warning will let you choose between disconnecting the antenna or adjusting the BTS power and thus adjusting the power on all other antennas linked to this BTS).*



If you wish other consistency check, please let us know.

6.3 Obstacle attenuation

In very special building, the default value of the wall attenuation can be changed and additional building wall type can defined using the following menus:


Right-click on the project “InCov_Demo”

or on a chosen configuration:

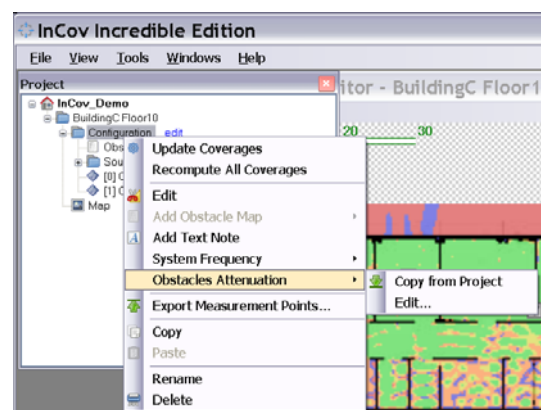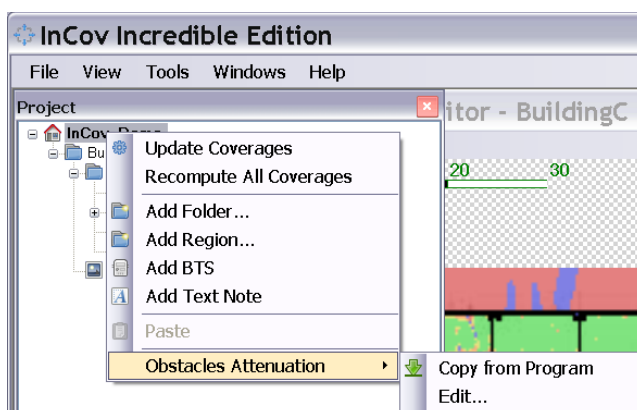


And then choose “Edit...” to get the window “Configuration Obstacles” shown below.

The configuration (1 dB/cm for the black wall) is shown.

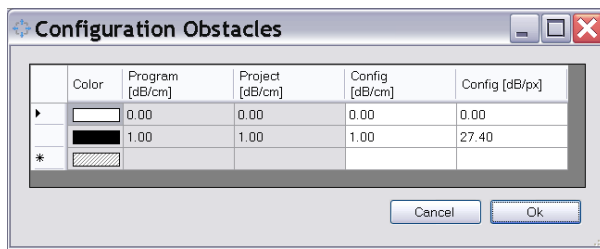

Configuring the color and the other parameters for a new type of wall is very easy:

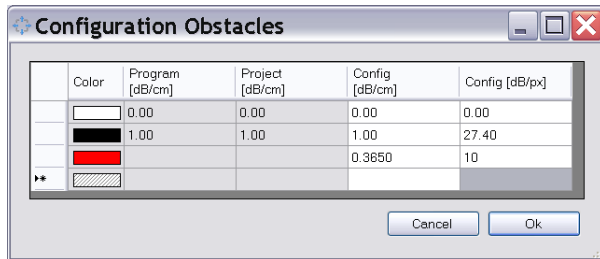

7 To conclude

You can now experiment with InCov and let us know how we can improve it, for you or with you, by contacting:

Jean-Frédéric Wagen

jean-frederic.wagen@hefr.ch

+41 26 429 6553 (voice)

+41 78 737 4273 (mobile)

wagenjf (SKYPE)

Enjoy ! ... and let us know.

