


Get
Started

All you need to know to get going.



Welcome!

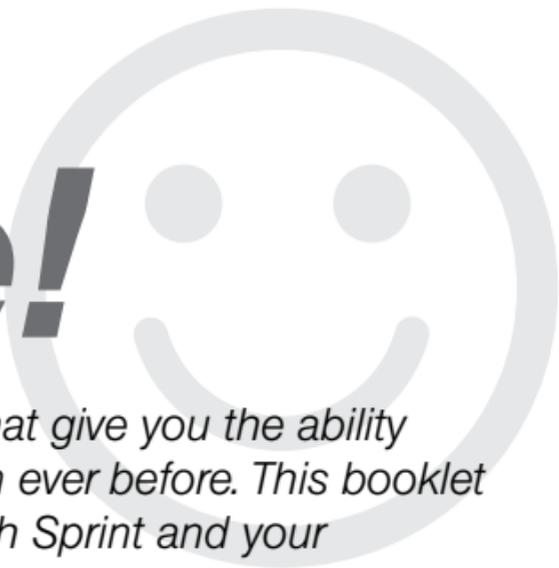

Sprint is committed to developing technologies that give you the ability to get what you want when you want it, faster than ever before. This booklet introduces you to the basics of getting started with Sprint and your LG Rumor Reflex™.

Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your phone.

Using This Guide

This Get Started guide is designed to help you set up and use your new LG Rumor Reflex. It's divided into four sections to help you find the information you need quickly and easily.


■ Get Ready — page 1 — *Find out what you need to do before you use your phone the first time, including inserting a battery and activating Sprint service on your phone.*

■ Phone Basics — page 3 — *Learn some basics about your phone, such as how to use voicemail and make calls.*

■ Use Your Phone — page 10 — *Take advantage of your phone's features and Sprint services such as taking pictures, pairing with Bluetooth devices, and more.*

■ Tools & Resources — page 18 — *Find useful tips for your phone and discover resources and other helpful Sprint information. For additional information including the full User Guide, videos, tutorials, and community forums, visit sprint.com/support.*

Your LG Rumor Reflex

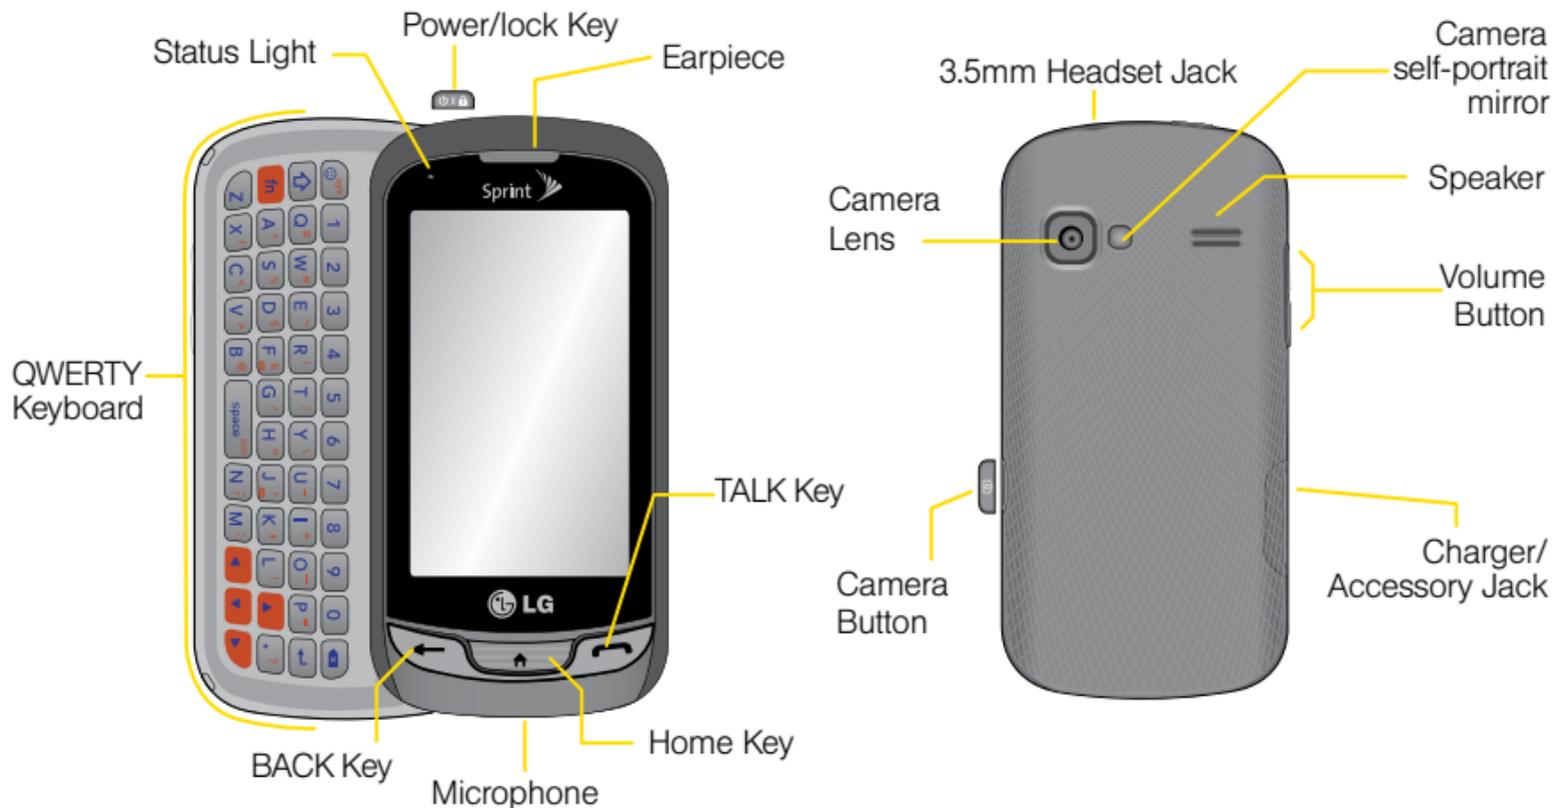

Get Your Phone Ready

Install the Battery

1. Remove the battery compartment cover on the back of the phone.
2. Insert the battery into the battery compartment, making sure the connectors align, and gently press it down.
3. Position the battery cover and press down until it snaps into place.

Charge the Battery

1. Plug the phone charger into an electrical outlet.
2. Plug the other end of the charger into the charger/accessory jack located on the lower right side of the phone.

Turn the Phone On

- ▶ Press and hold  to turn your phone on.

Turn the Phone Off

- Press and hold  to turn the phone off.

Switch to Spanish Menus (optional)

1. Press  and touch **Main Menu > Settings > Language (Idioma)**.
2. Touch **Español**.

Activate Your Phone

Activate Your Phone

- If you purchased your phone at a Sprint Store, it is probably activated and ready to use.
- If you received your phone in the mail, and it is a new Sprint account or a new phone number, your phone is designed to activate automatically when you first turn it on. You will see a **Hands Free Activation** screen at startup. When it's finished, touch **OK** to continue. To confirm your activation, make a phone call.
- If you received your phone in the mail and it is going to be activated on an existing number (you're swapping phones), go to sprint.com/activate and follow the instructions.

When you have finished, if your phone is still not activated or you do not have access to the Internet, contact Sprint Customer Service at **1-888-211-4727** for assistance.

Phone Basics: Voicemail

Set Up Your Voicemail

All unanswered calls are automatically transferred to your voicemail, even if your phone is in use or turned off. You should set up your voicemail and personal greeting as soon as your phone is activated:

1. Press  and touch and hold **1**.
2. Follow the voice prompts to create your password and record your name and greeting.

Voicemail Password
(do not share): _____

Sprint strongly recommends setting a voicemail password. Without a password, anyone who has access to your phone can access your messages.

Retrieve Your Voicemail

- ▶ Press  and touch and hold **1**.

From any other phone:

1. Dial your wireless phone number.
2. When your voicemail answers, press *****.

Phone Calls

Make a Phone Call

1. Press  and enter the digits of the number you want to call.
2. Touch **Talk** or press .
3. When you are finished, touch **End Call**.

Answer an Incoming Call

- Touch **Answer** to answer an incoming call.

In-Call Options

Your Rumor Reflex displays a list of available in-call features. To select an option, touch it.

- **Mute** to mute the microphone.
 - **Speaker** to route the phone's audio through the speaker.
 - **Dial pad** to display the dial pad.
 - **End Call** to end the call.
- **More** to access the following options:
 - **Save** to save the current call's phone number in your Contacts.
 - **Contact Details** to display the detail screen of the current caller.
 - **Main Menu** to display the phone's main menu.
 - **3-Way Call** to open a call with two other parties.
 - **Contacts** to display your Contacts list.
 - **Voice Memo** to record the current call.
 - **Phone Info** to display your phone information.
 - **Cancel** to close the pop-up menu.

Saving a Phone Number

1. Press , enter a phone number, and touch **Save**.
2. Touch **New Entry** or **Existing Entry**.
3. For **New Entry**, select a type for the number (such as **Mobile, Home, Work, Pager, Fax, Other**), enter a name, and add other information as needed. For **Existing Entry**, select the entry, select a type, and add other information.
4. Touch **Done**.

Finding a Phone Number

1. Press  and touch **Contacts**.
2. Scroll through the entries, or use your QWERTY keyboard to enter the first few letters of the contact entry.
3. To display an entry, touch it. To dial a number, touch **Call**, or press .

Entering Text

You can use the touch keypad, the Qwerty keyboard, or the Rumor Reflex's handwriting screen to enter text.

Using your touch keypad


1. From a screen where you can enter text, touch **[ABC]** to change the text input mode.



2. Select one of the following options:
 - **Predictive Text** to enter text using a predictive text system that reduces the number of key presses required while entering a word.
 - **Abc** to use multi-tap entry – press once for “a,” twice for “b,” three times for “c.”
 - **123** to enter numbers by pressing the numbers on the keypad.
 - **Symbols** to enter symbols.
 - **Emoticon** to enter “emoticons.”
 - **Smiley's** to enter “smiley's.”

Using your Qwerty keyboard


Emoticon/Symbols Key

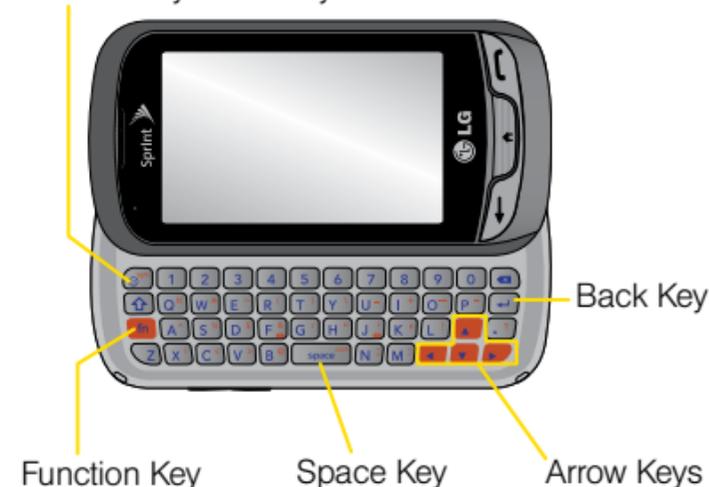

Using the Handwriting Screen

When entering text, besides typing the text with the touch keypad, you also have the option to write with your fingertip. The touchscreen converts your movements into characters.

1. On the text entry screen, touch **PEN**. The handwriting entry screen appears.
2. Write within the handwriting entry screen. To change letter case or shift between letters, numbers, and symbols, touch the icons just above the handwriting entry screen.
3. When you are finished, touch **Done**.

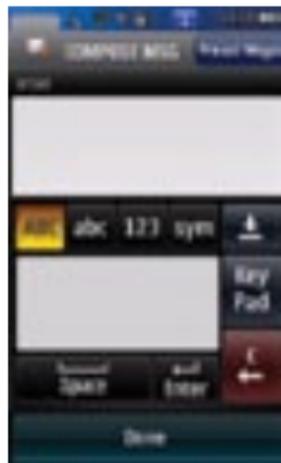

Contacts

View Contacts

1. Press  > **Contacts**.
2. Touch an entry, and then touch **Contact Details**.

Add a New Contact

1. Press  > **Contacts** > **Add New** > **New Contact**.
2. Touch **Enter Name**, enter a name for the new entry and touch **Done**.
3. Touch **Add Number**, enter the phone number and touch **Done**.
4. Touch a number type for the entry (**Mobile**, **Home**, **Work**, **Pager**, **Fax**, or **Other**).
5. Enter additional information if desired and touch **Done**.

Edit Contacts

1. Press  > **Contacts**.
2. Highlight the entry you want to edit and touch **Contact Details** > **Edit**.
3. Highlight the information you wish to edit.
4. Add or edit the information and touch **Done**.
5. Touch **Done** to save your changes.

Delete a Contacts Entry

1. Press  > **Contacts**.
2. Highlight an entry or a group you want to delete.
3. Touch **Contact Details** > **Delete**.
4. Touch **Delete**.

Messages

Send a Message

1. Slide the keyboard out and touch **Message**.
–or–
Press  > **Send Message**.
2. Select a recipient from the list or from the following options:
 - **New Addr.** to enter a recipient's phone number or email address directly. Touch **Done** to proceed.
 - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a phone number or an email address.)
3. Compose a message and touch **Done**.
4. Touch <**Add Attachment**> and select files you would like to attach.
5. Review your message and touch **Send**.

To read a message

- ▶ When you receive a message, your phone will display a notification message. Touch the notification bubble to view the message.

To reply to a message:

1. While the message is displayed, touch **Reply**.
2. Compose a reply and touch **Send**.

Be a hero. Don't drive distracted.



Focus on driving

sprint.com/focusondriving.

Web

Find sports scores, news, and weather. Shop online. Browse the Web just the way you want to.

1. Press  > **Main Menu** > **Web**. (Your data connection starts and you see the SprintWebSM home page.)

***Note:** If Net Guard is enabled and displayed, touch **CONNECT** to continue and launch the Web.*

- ▶ While connecting, you may see an animation before the home page appears.
2. From the homepage, select Web categories, navigate to websites, read blogs, download content, and more.

Open the Browser Menu

You can open the browser menu anytime you have an active data session, from any page you are viewing.

- ▶ Touch  to access options such as **Bookmarks, History, Font size, and Browser settings (Startup page, Default zoom size, Do not show images, Icon row, Auto-complete, Popups, Clear private data, and Advanced)**.

Download Games, Ringers, and More

You have access to a dynamic variety of downloadable content, such as games, ringers, screen savers, and other applications. (Additional charges may apply.) Follow the basic steps below to access and download these items.

Access the Download Menus

1. Press  and touch **Main Menu > My Stuff**.
2. Touch a download category (**Games, Ringers, Screen Savers, Applications, or Call Tones**), and then touch **Get New**.
3. Select an item and touch **Go**.

Download an Item

Once you've selected an item you wish to download, you will see a summary page for the item including its title, the vendor, the download details, and the cost. Links allow you to view the **License Info** page, which outlines the price, license type, and length of license for the download, and the **Terms of Use** page, which details the Premium Services Terms of Use and your responsibility for payment. Follow the onscreen prompts.

Download Ringers

1. Press  and touch **Main Menu > My Stuff > Ringers**.
2. Select **Get New**. (The browser starts and displays the Ringers menu.)
3. Search through the available ringers. When you find one you want, touch it.
4. To make a purchase, touch **Buy**. (Your phone automatically downloads the ringer.)
5. When the download is finished, select an option to continue:
 - **Listen/Use/Run/View** to listen to the ringer.
 - **Set As** to assign the ringer to a call or message type or to a specific contact.
 - **Shop** to browse for other items to download.

Camera & Video

Take a Picture

1. Press  and touch **Main Menu > Photos & Videos > Camera** to activate camera mode.

–or–

Press and hold the side camera button.

2. Using the phone's main screen as a viewfinder, aim the camera lens at your subject.
3. Touch **CAPTURE** until the shutter sounds. The picture will automatically be saved in the selected storage area.
 - Touch **Take New Picture**, **Send**, or **More** for additional options (**Send**, **Assign**, **Delete**, **Go to Album**, **Take New Picture**).

Record a Video

1. Press  and touch **Main Menu > Photos & Videos > Camcorder**.

–or–

Press the side camera button and touch **Camcorder > Video Mail** or **Long Video** to activate the camcorder.

2. Using your phone's display screen as a viewfinder, aim the lens at your subject, and touch **RECORD**.
3. Touch **Stop** to stop recording.
4. Touch **Take New Video**, **Send**, or **More** to explore other options.

Share Photos and Videos

1. Press  and touch **Main Menu > Photos & Videos > My Photos & Videos**.
2. Touch **In Phone** or **Memory Card**.
3. Select your pictures or videos to send.
 - Touch **Multi Select** to select multiple pictures.
4. Touch **Send > Contact** or **Bluetooth**.
5. Select the recipient from the list or from the following options:
 - **New Addr.** to enter a recipient's wireless phone number or email address directly.
 - **Go to Contacts** to select a recipient from your Contacts. (Qualifying Contacts entries must contain a wireless phone number or an email address.)
6. Compose a message.
7. Confirm the recipients, message, and pictures or videos (You may also select additional options by touching **More**. Follow the onscreen instructions to add available options.)
8. Touch **Send** to send the pictures or videos.

Voice Memos

Use your phone's Voice Memo feature to record brief memos to remind you of important events, phone numbers, or grocery list items. You can also record a current call.

Record Voice Memos

To record a voice memo or a conversation during a phone call:

1. Press  and touch **Main Menu > Tools > Voice Service > Voice Memo > Record**.
2. Begin recording after the voice prompt.
3. Touch **Stop** to end the recording of your memo.

Record a Current Call

1. While on a call, touch **More > Voice Memo** to begin recording the call.
2. Touch the voice memo timer in the upper left corner of your screen to stop recording.

Play Your Voice Memos

1. Press  and touch **Main Menu > Tools > Voice Service > Voice Memo**.
2. Touch the Memo you want to play.

Erase a Voice Memo

1. Press  and touch **Main Menu > Tools > Voice Service > Voice Memo**.
2. Touch **Delete** and select **Delete Multiple** or **Delete All**.

Send a Voice Memo

1. Press  and touch **Main Menu > Tools > Voice Service > Voice Memo**.
2. Highlight the Memo you want to send and touch **Send Message**.
3. Choose a recipient, add text to your message if desired, and touch **Send**. (See "Send a Message", steps 2-5 on page 9).

Bluetooth

Turn Bluetooth On and Off

1. Press  and touch **Main Menu > Tools > Bluetooth > On/Off**.
2. Select **On** to enable Bluetooth. Select **Off** to disable Bluetooth.

Pair Bluetooth Devices

1. Press  and touch **Main Menu > Tools > Bluetooth > Add New**.
2. Touch a device you wish to pair with.
3. Enter the passkey and touch **OK**.

***Note:** Due to different specifications and features of other Bluetooth compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.*

Share Contacts, Files, or Pictures Using Bluetooth

1. Press  and touch **Main Menu > Tools > Bluetooth > Trusted Devices**.
2. Select the device from the Trusted Devices list.
3. Touch an item and touch **Done**.
4. Follow the onscreen instructions to select items to send.
5. Touch **Send**.

Calendar

To view the Calendar:

- ▶ Press  and touch **Main Menu > Tools > Calendar**.

To add a schedule to your calendar:

1. Press  and touch **Main Menu > Tools > Calendar**.
2. Touch the day to which you want to add an event and touch **Add New**.
3. Touch **Time** to select a time for the event. Touch **End** to set the end time and then touch **Done**.
4. Scroll down to select the following:
 - **Content** to enter information about the event.
 - **Related person** to select contacts related to the event.
 - **Alarm** to choose from **None**, **On time**, **5 minutes**, **10 minutes**, **1 hour**, **1 day**, or **2 days**.
 - **Alarm Bell** to select a ringer type.

- **Volume** to select a ringer volume.
- **Location** to enter a location.
- **Set Repeat** to choose from **None**, **Daily**, **Mon-Fri**, **Select Days**, **Weekly**, **Monthly**, or **Yearly**.

5. Touch **Save** to save the event.

To erase a day's events:

1. Press  and touch **Main Menu > Tools > Calendar**.
2. Touch the day for which you would like to erase events and touch **List**.
3. Touch **Delete > Delete Multiple**, **Delete Today** or **Delete All**.
4. Select **Delete** or **Cancel**.

Alarm Clock

Your phone comes with a built-in alarm clock that has multiple alarm capabilities.

1. Press  and touch **Main Menu > Tools > Clock > Alarm**.
2. Touch **Add New**.
3. Touch a time for the alarm and touch **Done**.
4. Select a repeating status for the alarm by touching **Repeat**.
 - Touch **Daily, Once, Weekly, Mon - Fri, or Sat & Sun**.
5. Touch **Sound/Vibration** and choose from **Always Sound & Vibrate, Always Sound, or Always Vibrate**.
6. Select a ringer type for the alarm by touching **Alarm Bell**. Choose from **Downloaded Ringers, Other Ringers, No Ringer, Voice Memo, or My Audio**.
7. Select a Volume level by touching **Volume**.
8. Touch **Vibration Type** and choose from **Vibrate Type1 - Vibrate Type4**.
9. Select a snooze interval by touching **Snooze**.
 - Select an interval of **Snooze 5 mins, Snooze 10 Mins, Snooze 15 Mins, Snooze 20 Mins, or Off** to disallow the Snooze feature.
10. Touch **Save** to set the alarm.

Helpful Sprint Information

Total Equipment Protection

The protection you need so you can be worry free.

Should anything happen to your phone, you'll have a worry-free way to ensure that you get connected again soon.

- **Coverage includes:**

Loss, theft, routine maintenance, physical or liquid damage, mechanical or electrical problems, failure from normal wear and tear.

- **For more information:**

See the Total Equipment Protection brochure available at any participating retail location or go to sprint.com/tep for more details. To enroll within 30 days of activation, call **1-800-584-3666**.

Total Equipment Protection is a service provided by Asurion Protection Services, LLC, Continental Casualty Company's (a CNA company) licensed agent for the customers of Sprint.

Online: sprint.com

- Make a payment, see your bills, enroll in online billing.
- Check minute usage and account balance.
- See or modify the details of your Sprint service plan.
- Get detailed instructions and download content.

From Your Sprint Phone

- Press * 4 ^{prt} Talk to check minute usage and account balance.
- Press * 3 ^{prt} Talk to make a payment.
- Press * 2 ^{prt} Talk to access a summary of your Sprint service plan or get answers to other questions.

From Any Other Phone

- Sprint Customer Service:
Dial 1-888-211-4727
- Business Customer Service:
Dial 1-888-788-4727

Resources For Your Phone

- This *Get Started Guide* to get you up and running.
- **Web** – Visit sprint.com/support for the complete User Guide, along with videos, tutorials, and community forums for your LG Rumor Reflex.

Sprint 411

Dial 411 for nationwide listings, movie show times, restaurant reservations, driving directions and more. Spanish-speaking operators are available. See sprint.com for pricing and details.

Responsibility

At Sprint, environmental responsibility is more than talk. We're continuously working to reduce our carbon footprint and decrease our use of natural resources.

So where is my user guide?

To support our increased responsibility efforts, we've put expanded instructional materials online for you. Just visit sprint.com/support from any computer to access your complete user guide and other support materials.

What else has Sprint been doing?

Plenty. To find out just what we've been up to, visit sprint.com/responsibility.

This guide is printed with soy inks and contains up to 87% post consumer paper.

Survey

Please tell us what you think about your new phone.

We are interested in your initial impressions of this new Sprint phone. Within two weeks of your phone purchase, please go to the website <http://labs.sprint.com/sprintphonesurvey> to complete a brief survey. Your feedback will help us provide the wireless features and services you want most.

Thank you for choosing Sprint.

Index

Numerics

3-Way Call 4

A

Activate 2

Alarm Clock 17

B

Battery

Charge 1

Install 1

Bluetooth 15

Pair Devices 15

Sharing 15

Turn On and Off 15

C

Calendar 16

Calls

see Phone Calls

Camera 12

Contacts 8

Add 8

Delete 8

Edit 8

Sharing 15

View 8

D

Downloading 11

Applications 11

Games 11

Ringers 11

Screen Savers 11

M

Manage Your Account 19

Messages 9

Read 9

Reply To 9

Send 9

P

Phone Calls 4

Answer 4

In-Call Options 4

Make 4

Phone Number 5

Saving 5

Finding 5

Pictures 12

Sharing 13

Taking 12

R

Resources 20

S

Sharing

Bluetooth 13, 15

Contacts 15

Pictures & Videos 13

Index

Spanish Menu 1

Speaker 4

Sprint

411 20

Customer Service 19

Helpful Information 19

Service Plan 19

Sprint 411 20

Survey 20

T

Take a Picture 12

Text

Entering 6

Text Input Mode 6

Handwriting Screen 7

Qwerty Keyboard 7

Touch Keypad 6

Total Equipment Protection 18

Turn the Phone Off 1

Turn the Phone On 1

V

Video 12

Record 12

Voicemail 3

Retrieve 3

Set Up 3

Voice Memos 14

W

Web 10

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all phones. Sprint coverage is not available in all markets. See sprint.com/coverage for more details.

Important Privacy Message. This phone is capable of determining its/your geographical location. To set controls for access and use of your location information by others, Press  and touch **Main Menu > Settings > Location**. You will then have the option to select **On** or **Off**. For some applications and services you select, a phone must be turned on and set to allow collection of location information in order to function.

©2012 Sprint. Sprint and the logo are trademarks of Sprint.

Printed in China

MBM63563801