



3SHAPE CONVINCETM STANDARD

Complete Guide

TABLE OF CONTENTS

1 Introduction	3
1.1 System Requirements	3
1.2 Quick Guide	4
2 Reference Operations	5
2.1 Load Reference	5
2.2 Create a Measurement	6
2.3 Annotations	6
2.4 Views	7
3 Generate a Scan	7
3.1 Load a Scan	7
3.2 Scanning	8
3.2.1 Quick Scan Guide	8
3.2.2 Setting up the Scanner	9
3.2.2.1 Calibrating	9
3.2.3 Scan Planning	10
3.2.4 Scan Execution	15
3.2.5 Multiple Scan Placement	15
3.2.6 Advanced Settings	16
3.2.7 Save Copy of Scan	17
3.3 Test Scanner Accuracy	17
4 Handling the Scan	18
4.1 Trim a Scan	18
4.2 Offset/scale Scan	19
4.3 Register Scan to the Reference Model	19
4.3.1 Automatic	19
4.3.2 Manual	19
4.3.3 Points	20
4.3.4 Region of Interests	20
4.3.5 Transformation and Score	21
4.3.6 Settings	22
5 Report	22
6 Project Manager	25
6.1 User Account Control	26
6.2 Folder Structure	27
6.3 Recent Page	28
6.4 Creating a New Project	28
6.5 Accessing an Existing Project	29
6.5.1 Edit Mode	30
6.5.2 Scan Mode	31
6.5.3 Statistics	32
6.5.4 Report of the Project	32
6.6 Export and Import	33
6.7 Reverting To Previous Project Version	34
7 Statistics Page	34
8 The 3D Measurements	36
8.1 List of Measurements	36
8.2 Difference Map	37
8.2.1 Difference Map Menu	38
8.2.2 Whisker Plot	39
8.2.3 Available Statistical Information	40
8.3 Point Difference	40
8.4 Scan Volume	40
8.5 Surface Area	41
8.6 3D Distance	41

9 Cross Sections	42
9.1 Creating 2D Measurement Planes.....	42
9.2 Editing Planes	44
9.3 Angle 2D.....	46
9.4 2D Point Distance	46
9.5 Radius 2D	47
9.6 Thickness 2D	48
9.7 Whisker Plot 2D	48
9.8 Point Difference 2D.....	49
9.9 Copy 2D Section as DXF File.....	50
10 Visualization and E-Learning Tools	50
10.1 Show List of Measurements	51
10.2 Annotation Visibility Settings	51
10.3 Show/Hide Ruler	52
10.4 Change Center of Rotation.....	52
10.5 Reference Model Visibility Settings.....	53
10.6 Scan Visibility Settings	53
11 Custom Settings Menu.....	53
12 Convince Components	55
12.1 3D Scene	58
12.2 Right-Click Menu.....	59
13 Selection Toolbar	59
14 Installation.....	61

1 INTRODUCTION

3Shape Convince™ Standard is a Quality Control software for acquiring quality assurance of a part. Measuring different characteristics and dimensions of objects and comparing them to the specifications, provides the information on whether the product meets the specific requirements.

With the help of Convince™ Standard the dimensions and forms of an object are defined and toleranced and all deviations are found.

1.1 SYSTEM REQUIREMENTS

Please get acquainted with the requirements for this software:

Minimum:

CPU: Intel Core 2 Duo 2.0GHz or better
HDD: 80GB or more
RAM: 2GB or more
Graphics: OpenGL 2.0 support and at least 512 MB of memory
OS: Windows XP SP2, SP3, Windows Vista SP1 or Windows 7 x86

Recommended:

CPU: Intel Quad Core 3.0 GHz or better with 12MB Cache or more
HDD: 250 GB available disk space
RAM: 4GB RAM DDR3 or better
Graphics: NVIDIA GeForce GT220 1GB RAM or better graphics adaptor
OS: Windows 7 (64-bit)

1.2 QUICK GUIDE

1. Start application


Start Convince™ by clicking the desktop shortcut.



2. Login for the first time


Create a new account by applying the **user name** and **password** (case sensitive) specified by your provider.

A *User Management* form pops up enabling you to create a new user.

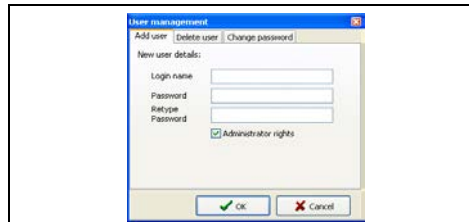


3. Login when you have an account

 Type in your user name, password and then click the **Login** button.



4. Create import or edit the project


The Convince™ Project Manager window loads after login. The Project Manager displays a list of **Recent Projects**, providing an easy access to them. There you can edit, import existing or create a new project.

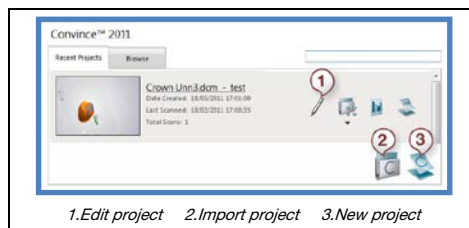

5. Load Reference

You can load reference files of the following formats:

ASC, DCM, DXF, NMS, STL, PTA, PTS (points), WRL and VRML.

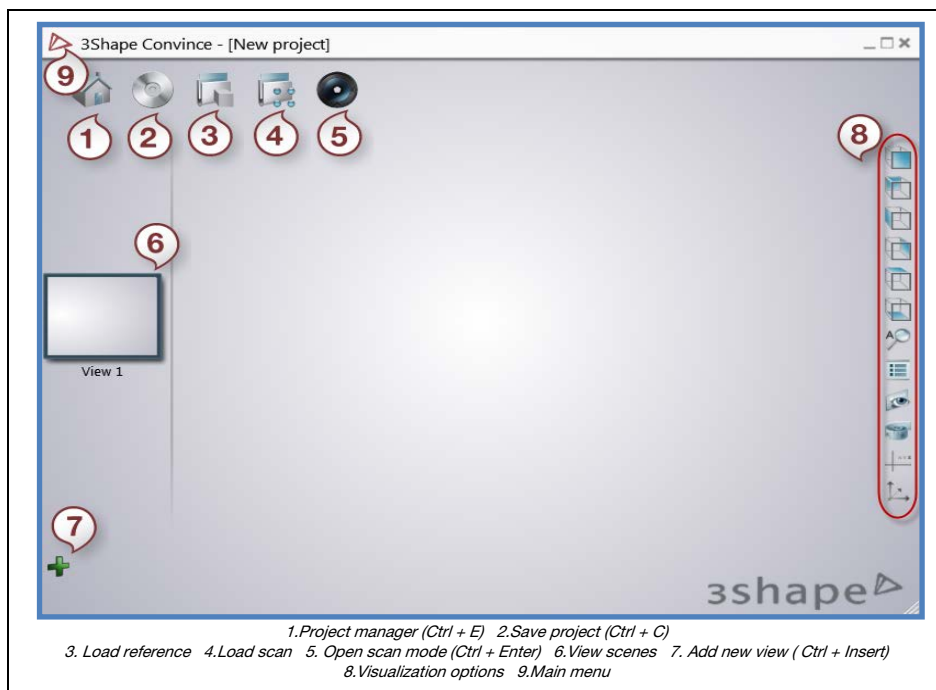

6. Load Scan

You can load scan files of the following formats:
STL, DCM, PTS (points), STL ASCII, WRL and VRML, NMS.

The measurements menu can be toggled between two modes:


The **System Menu** and the **Round Menu (2)** selected in the *Main Menu*



->View

->Options->Popup Menu tab.

A number of scenes can be saved on the left of the window to help you organize your measurements (1) while, the instruments at the bottom (4) allow you to manipulate and edit the models.

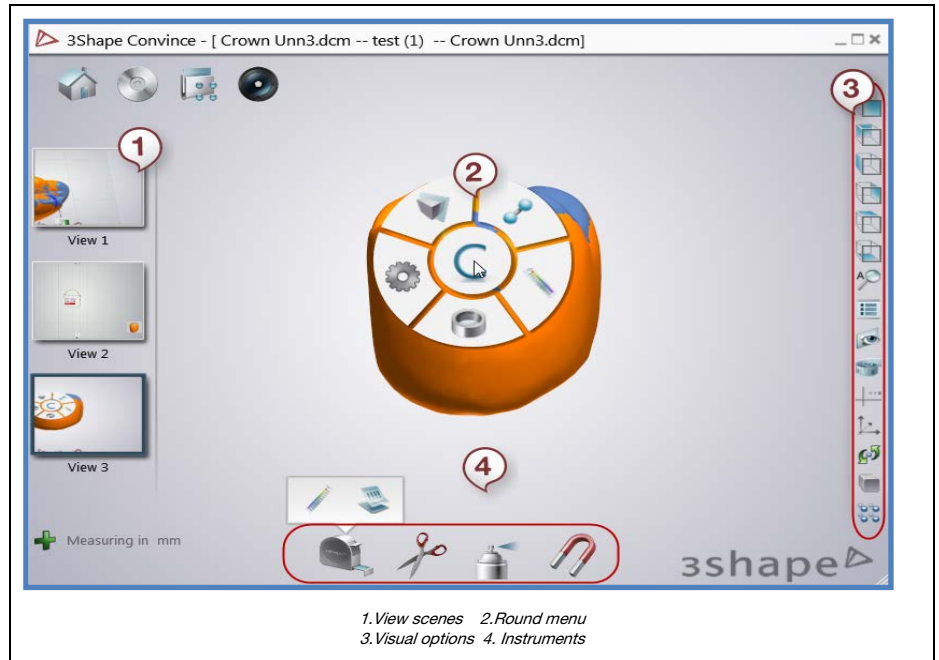

1. View scenes 2. Round menu
3. Visual options 4. Instruments




Note: If you need to create projects, you should add an account with the administrator rights by marking the corresponding check box: [See step 2](#)

2 REFERENCE OPERATIONS

2.1 LOAD REFERENCE

When you click on the **Load Reference** button in the Main toolbar, the dialog box appears. Select the desired model there and click **Open**. When you select a file, a preview will appear in the small window in the upper right corner (see image below).

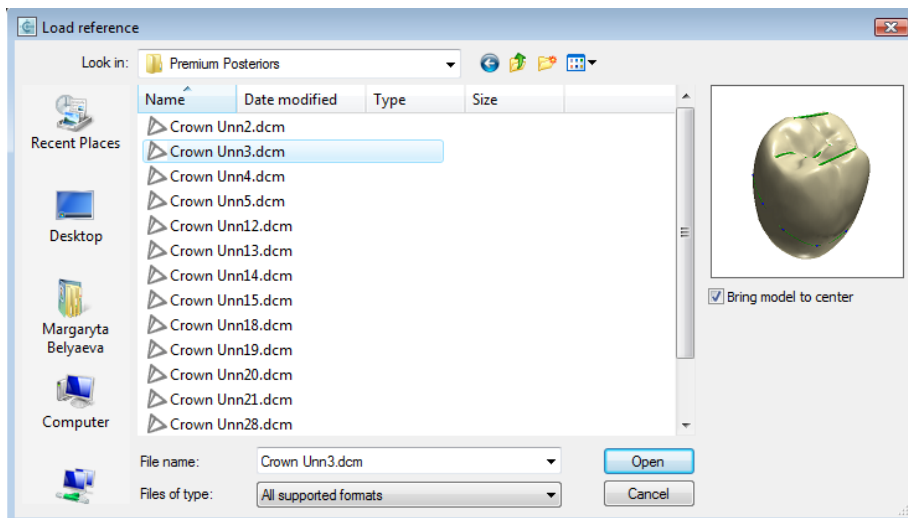

The supported file formats are: STL, DCM, PTS, STL ASCII, VRML, NMS.


You can also open a reference file by dragging it onto the main application window.

2.2 CREATE A MEASUREMENT

Right-click the surface of the model to open the menu and select the necessary measurement. The appearance of the right-click menu changes depending on the selected menu type – [Round or System](#). Customize the look manually in the *Main menu->View->Options->Popup menu*.



Right-click round menu

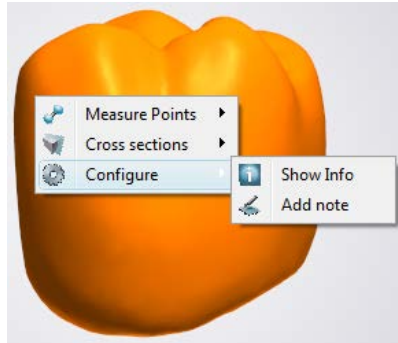

Right-click system menu


2.3 ANNOTATIONS

Each measurement is visualized by an annotation.


The Annotation consists of:

1. A name on top.
2. Tolerance.
3. Coordinates

Unfold the list of coordinates by clicking at the arrow at the bottom of the annotation.

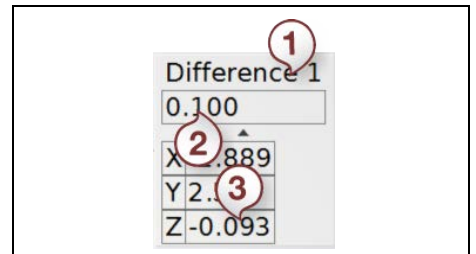

In order to change the name of the annotation, edit the tolerance or coordinates double click the desired area and type the information.

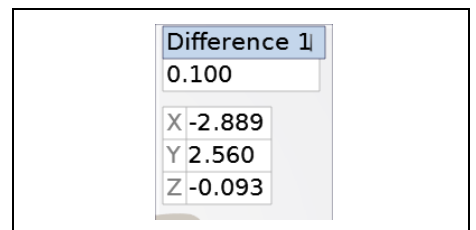

Right-clicking the annotation opens the following menu:

Visible - Makes the annotation visible or invisible. This can also be done via the **List of**

Measurements button  in the Visualization toolbar.

Edit - Renames or changes settings in the annotation.

Delete - Removes the annotation.

Always on top - Makes the annotation always appear on top of the model.


Lock to screen - Makes the annotation be locked to the screen.

Align faced - Makes the annotation face the screen.

Align by X, Y, Z - Aligns the annotation by the corresponding coordinates.

Copy - Copies the annotation.


Cut - Cuts the annotation.

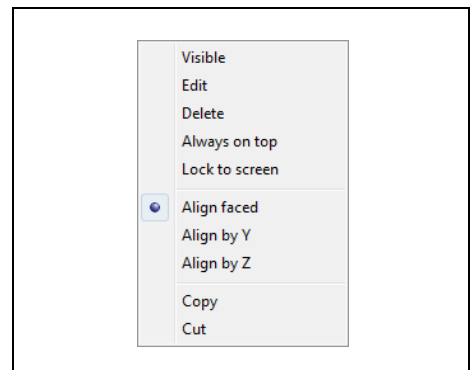

2.4 VIEWS

In Convince™ Standard it is possible to create several views in the special Views toolbar located in the left part of a main program window.

Each view contains the same object, but with its own set of measurements and visualization attributes (e.g. viewing direction). You can use different views for each area you wish to focus on. When making the final report, each view will get a separate page displaying the results.

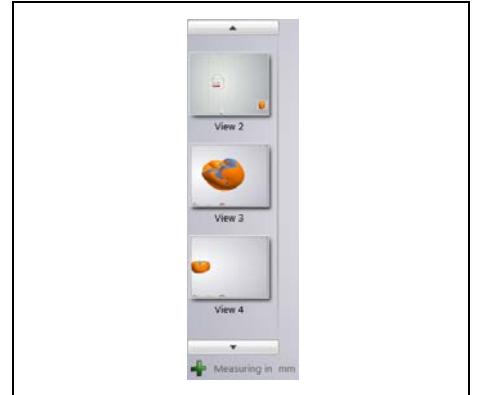

There is only one view by default, but you can easily add more by pressing **Add new view**  or right clicking on the view tab and choosing **Create New Blank View**. You can also delete or rename the view with the help of a right-click menu.

Create New Blank View (Ctrl+Insert)
Delete View (Ctrl+Delete)
Rename View

To switch between the views, click on them directly or use the keys CTRL + PgUp and CTRL + PgDn.

When the list of views is too long, the **Next/Previous** button appears (becomes blue when highlighted), so you can scroll up and down to see all the views.

Click on the grey border line (becomes thick when highlighted) and drag it sideways to change the size of the views windows.



3 GENERATE A SCAN

You can load an existing scan or generate a new one with a 3Shape scanner.

Load scan - allows you to open an existing scan of the model.




Open scan mode - allows you to create a scan of the model using the 3Shape scanner.



3.1 LOAD A SCAN

When you click on the **Open Scan** button in the Main toolbar to open a dialog from which you can load the scan file. Select the desired scan and click **Open**. You can see the preview of the selected scan in the preview window to the right.



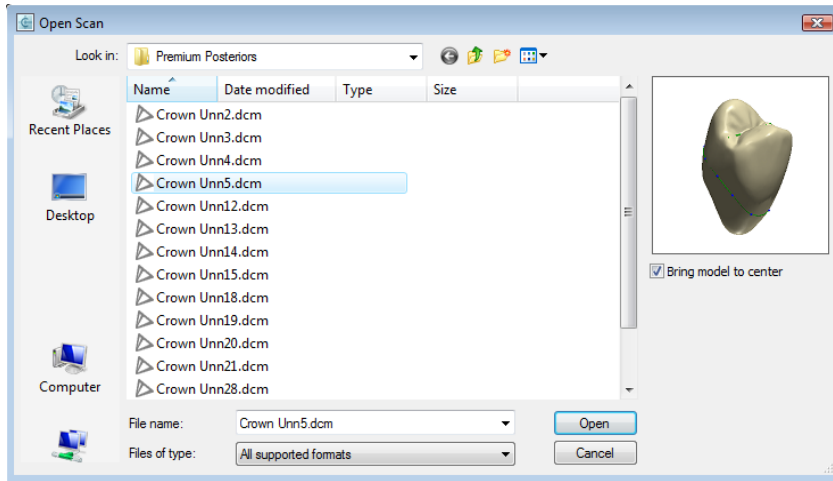

The supported formats are: STL (.stl), Points (.pts), STL ASCII (.stla), VRML (.vrl, .vrml) and NMS (.nms). You can also open a scan file by dragging it onto the main application window.

Instead of loading a scan file, you can also create a new scan. The Convince™ Standard software is fully integrated with 3Shape's scanner. Please see chapter [Scanning](#) for more details.

3.2 SCANNING

Convince™ Standard provides easy scanning of objects and more advanced settings if needed. This section will first present a quick scan guide and then describe the details of scanning for those wishing a more customized scan.

3.2.1 QUICK SCAN GUIDE

Setup the scanner:

1. Connect the scanner to your PC using the enclosed USB cable.



2. Turn on scanner using the button on the back of the scanner.



3. Turn on the ScanServer by clicking the **ScanServer** icon on your desktop.




4. Place object onto a mounting plate and place it into the scanner.

5. Close the door on the scanner.

Execute the scan:

1. Press the **Open scan mode** button in the Main toolbar to open the scan planning menu (see the image to the left).
2. Click the **Scan** button to start the scan. Then click **OK** to accept and make a default scan program.
3. When the menu appears once more, click the **Finalize** button to finish your scan.
4. Click **Done** to close the menu and be able to measure your scan.

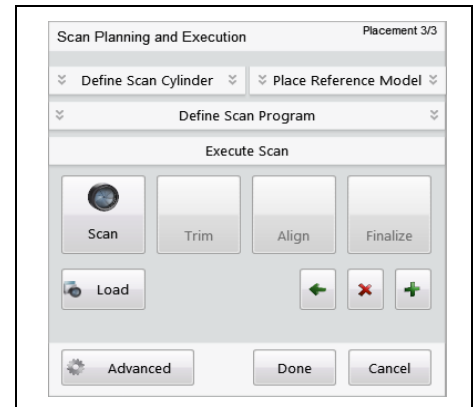

3.2.2 SETTING UP THE SCANNER

To be able to scan in Convince™ Standard, you need a 3Shape Scanner Q640, Q700, Q740 or Q800. Connect the scanner to your computer, using the enclosed USB cable and turn the scanner ON using the button at the back.

Then launch the ScanServer program, for example by double-clicking the **ScanServer** icon on your desktop.




3.2.2.1 CALIBRATING

On opening the ScanServer, you might be prompted to calibrate the scanner. This needs to be done before scanning.

The quality of the scans improves if the scanner is calibrated. A good indicator for when a scanner might benefit from being calibrated is to observe the temperature (see the image to the right). If there is a large difference between scanner temperature and calibration temperature, it is a good idea to perform calibration.

Calibration can be started by pressing the **Calibrate Scanner** button.

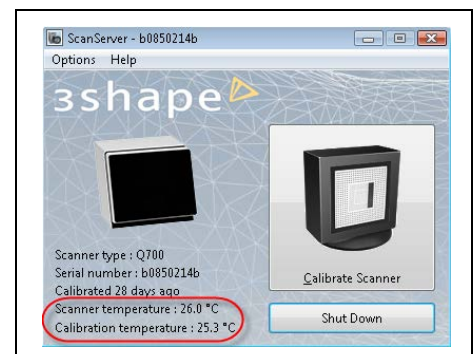


On starting the calibration, make sure that you have the necessary calibrating equipment, which depends on the type of a scanner you are using:

Q800/Q740 comes with only one calibrating object: a dot plate.



Q700 comes with one or two calibrating objects, depending on the version. Follow the Calibration Wizard when it appears and when done, you are ready to scan.

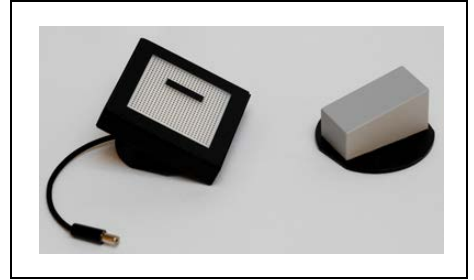

3.2.2.2 PLACING AN OBJECT INTO THE SCANNER

The object you wish to scan should be placed on one of the enclosed base plates. The part should be firmly placed at the center of the plate so it doesn't move during the scanning. A general-purpose material for fixing a part is BluTac, a kind of modeling clay. Its disadvantage is that a rather large section of the part gets buried into the clay, so a custom-made fixture may be preferable.

If a part to be scanned has shiny surfaces or is translucent, it has to be sprayed with 3D scan spray to make it matte. Only matte solid parts can be scanned with optical scanners.

Place the base plate containing the object into the scanner.

3.2.2.3 SCANNING ON A NETWORK COMPUTER


It has been assumed so far that the scanner is being connected to your own computer. You can also connect it to another computer if only they are on the same network:

1. Run the ScanServer program on the computer the scanner is connected to.

2. Start Convince™ Standard on the other computer and choose *Main menu->Scanning->Scanner Settings* to open the *Scan settings* form.

3. In the field next to **Add scanner to list** you can enter either the ip-address or the name of the computer that the scanner is connected to.

4. Click the **Add** button to add it to the list of scanners.

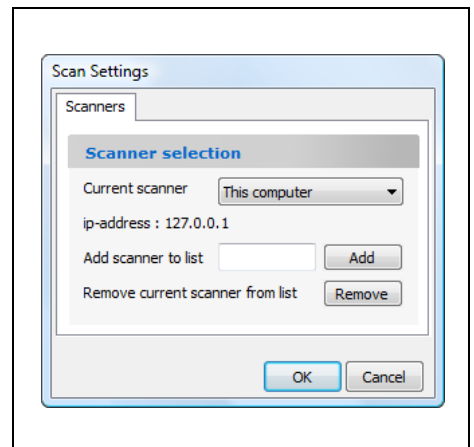

3.2.3 SCAN PLANNING



In order to make a more customized scan than described in the [Quick Scan Guide](#) chapter, you need to plan your scan more thoroughly. It could improve the speed, size and quality of the scan.

1. In Convince™ Standard, click the **Open scan mode** button to open the scan menu.



2. Press the **Define scan program** tab and then the **Show scan program** button in order to unfold the scan planning settings in the Scan program window.




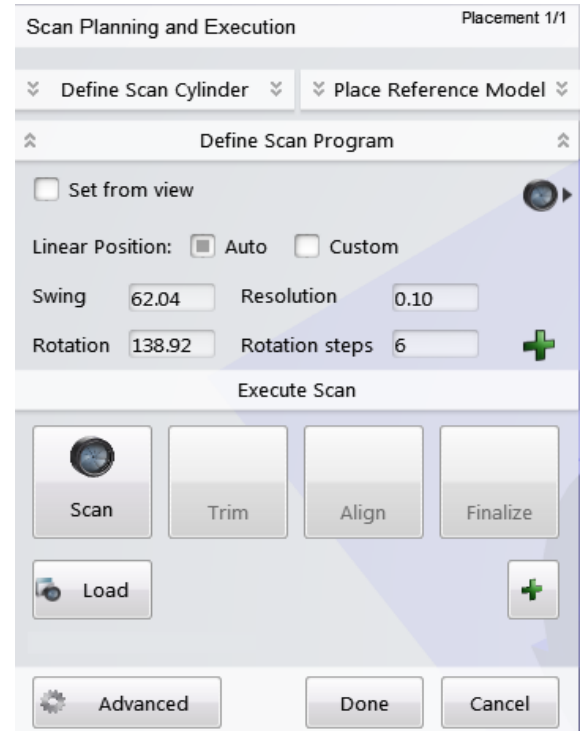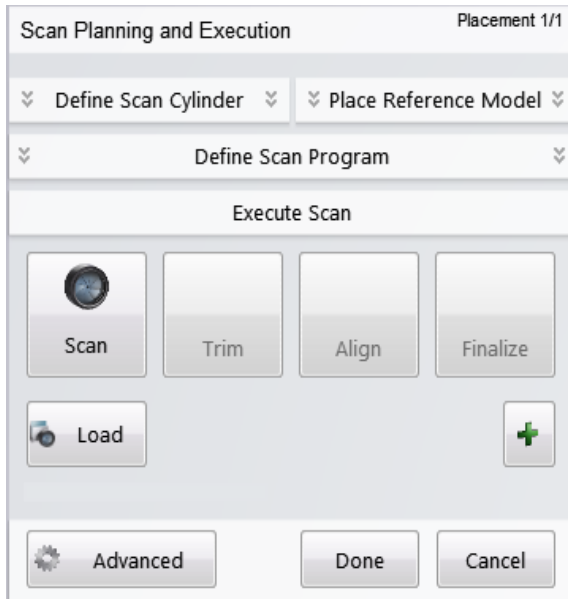

3.2.3.1 PLACING THE REFERENCE MODEL


If you have a reference model available, you gain further possibilities for planning your scan. You need to make an approximate placement of the reference model so it matches the position of the corresponding object in the scanner. It is neither possible nor necessary to achieve the exactly the same placement as the software can make small adjustments of your final placement.

By pressing the **Place reference model** tab in the *Scan Planning and Execution* window, you can move and rotate the reference model using the mouse or enter a specific translation and rotation in the coordinates edit boxes:

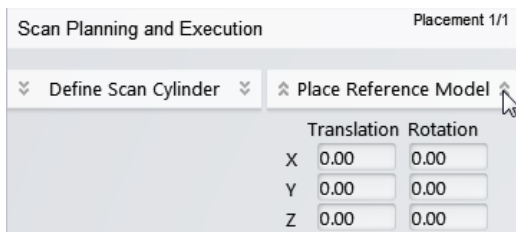


In the upper right corner of the main window you can see the *Display settings* menu (see the image to the right).

Select the **Display fixing plate** check-box to show a model of the fixing plate on which you object is placed. This makes it possible to view how the reference model should be placed in order to match the object you are scanning.

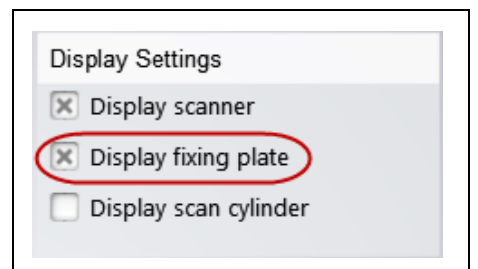


3.2.3.2 ALTERING THE SCAN CYLINDER

The **Scan Cylinder** parameters let you set up the scan cylinder. Unfold the **Define Scan Cylinder** tab to set up the desired parameters. The scan cylinder defines the scanning area. To achieve faster scanning, set the scan cylinder so it fits the objects you wish to scan. Enter the **Bottom**, **Top** positions and **Diameter** into the appropriate edit boxes.

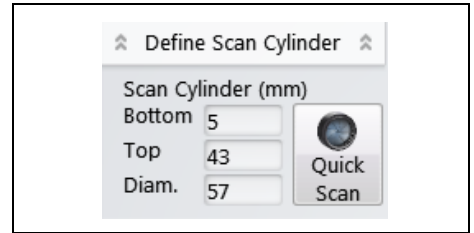


In the upper right corner of the main window you can see the *Display settings* menu (see the image to the left).

Select the **Display scan cylinder** check-box to make the cylinder visible on the screen so you can see it while planning the cylinder size.

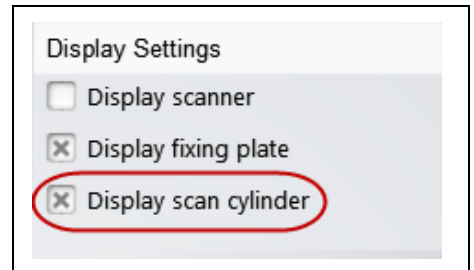


To launch the quick scan press the **Quick Scan** button. This will set the cylinder automatically.

You can adjust the cylinder manually with the control points on the cylinder (see the image below) or by specifying the parameters in the **Scan Cylinder** tab.

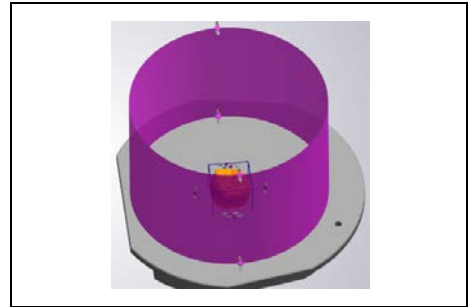

3.2.3.3 CREATING A SCAN PROGRAM


Without making a program, you can press the **Scan** button to make a default scan sequence rotating all the way around the object from 6 different rotations in a swing of 45 degrees.

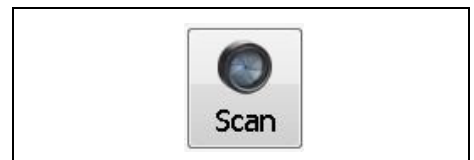

You can easily create your own scan program, which tells the scanner from which angles and positions it should scan, thus yielding with the best possible coverage.

The 3Shape scanner has three axes allowing you three degrees of freedom to move, rotate and swing the loaded part in relation to the scanning head.

You can adjust the positions of all axes within their allowed range in the virtual scanner. For every position, the software calculates how the laser beam intersects with the reference model, and which parts of the intersecting line are visible by one or two of the cameras on the scanning head. Only points visible by both cameras are considered during the scanning.

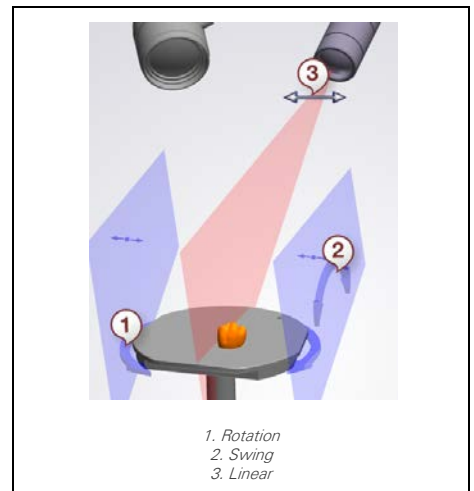

To create a scan program do the following:

1. Open the Define scan program section

In the *Scan Planning and Execution* window unfold the **Define scan program** section.

Set from view checkbox - allows you to lock the position of the scanner at your viewing angle.

Check this box if you want the scanner to “see what your eyes see”.



TIP: This is especially useful to re-scan areas where there are holes. Please see more details on how to add new scan lines to cover holes in the [Scan Execution](#) section.

2. Choose the Linear position type

Select the **Linear position** type:

- **Auto**

Automatically sets start and end positions for scanning.

Use the **Swing** and **Rotation** edit boxes to define the position of scanner. The precision of the scan can be set in the **Resolution** edit box.

Rotation steps edit box allows to set the number of lines in the scan program. Each line will have the same parameters.

- **Custom**

Allows you to define the **Start** and **End** parameters for your scanner.

The other parameters are similar to the **Auto** section.

The  button adds a new program with the current settings to the list.

3. Unfold the list of scanning programs

Click the **Show scan program** button to open the list of programs.

Each line of the scan program consists of one or more linear sweeps where the scan head is moved along the linear axis in discrete steps between the **From** and **To** positions, while the rotation and swing axes are locked.

You can achieve good coverage of the part's surface by putting together several sweeps.



Scan Program				
From	To	Rot.	Swing	Res.
6 x Swing: 45.00, Res: 0.10				
6 x Swing: 45.00, Res: 0.13				
-7.39	7.21	0.00	45.00	0.13
-7.39	7.21	60.00	45.00	0.13
-7.39	7.21	120.00	45.00	0.13
-7.39	7.21	180.00	45.00	0.13

4. Edit the program

If necessary, edit the scan program parameters using the following options:

Add Line - inserts a new line into the program (to the end of the program). The elements in this line can be edited manually by double clicking.

Delete selected line from the scan program - deletes the selected line in the program.

Delete scan program - removes the whole program from the list.

Update the selected line with current settings - uses the parameters you set in the edit box for the selected line.



To have more control over the scanning process, you can use the Display settings window in the upper right corner of the main window.

If you select the **Display scanner** check-box, you can view the scanners position according to the object while trying different axis positions.

If you have a reference model you can see how a certain setting covers the object you are about to scan. You can see which areas will be viewed by both cameras, by one camera and by none. This is important for a good scan of the area (view the section [Simulating the Scan](#)).


Display Settings

- ☒ Display scanner
- ☒ Display fixing plate
- ☒ Display scan cylinder

5. Finish the procedure

Click the **Save** button to save the created program.

The scanning start and end positions are indicated with the blue planes and can be also set by dragging their interactive control points.

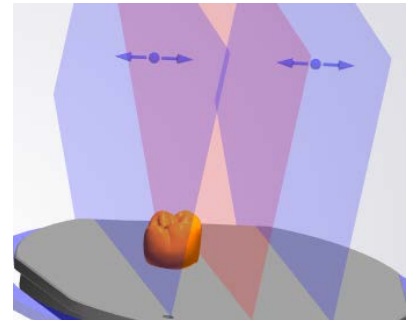

The previously saved scanning programs can be loaded with the  button.

3.2.3.4 SIMULATING THE SCAN


You can simulate the entire scanning process by clicking the **Simulate scanning of entire program**  or **Simulate scanning of selected line**  buttons.

If you have a reference model, you are able to see the coverage your scan program gives during scanning.

There are two colors used to indicate the quality of the expected scan of the model.

The **dark blue** indicates the area that will be seen by both cameras, while the **green** color indicates the area is only scanned by one camera.

This color scheme is intended to help find an optimum angle and direction for the scanning process.

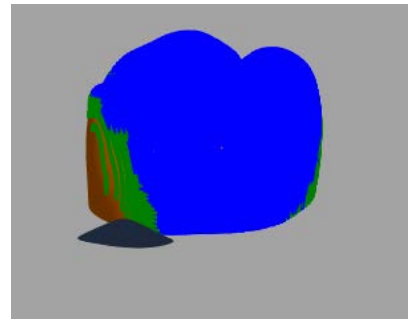

A selected line or the whole program can be deleted from the Scan program list with the by clicking the corresponding buttons:



3.2.4 SCAN EXECUTION

Before starting the scanning process, make sure your scanner is connected to the computer, the ScanServer is ON and your object is in the scanner (see [Setting up the Scanner](#) section). The door of the scanner should be closed before beginning the scan.

To begin the scanning press the **Scan** button located in the *Scan Planning and Execution* dialog.

As the scan program is executed, you see the 3D points come in. They are shown as a "raw" surface. The final scan model is created under the **Finalize** step.



If you are not satisfied with the scan you can make changes to the scan planning and then click the **Rescan** button and start over.

It is possible to scan the newly added lines only. To do that add the necessary subscans and click the **Scan newly created lines only** button (appears under the **Scan** button). This allows to save considerable time, as you do not have to rescan the entire program.



Once you have completed the scan process, click the **Finalize** button to generate the final scan model. The raw scans are converted to a triangulated surface during this step. When you click the **Done** button, all steps in the Convince™ Standard workflow are executed as if you had loaded a scan as an .stl file: registration of a point cloud and the reference model, mapping of the scan points to the reference elements and evaluation of the measurements.

3.2.5 MULTIPLE SCAN PLACEMENT

If you have an object where you wish to get a full coverage scan, you can do this using several placements. Creating multiple placements gives the possibility to physically move the object and make a new scan planning and execution for the new placement. This new scan can be merged together with the first scan, hence creating a final .stl containing both sides of the object.



Note: It is always best to use as few placements as possible. The optimal solution is to suffice with one placement. It gives more accurate results and is also faster.

Try to find a single placement that covers all areas of interest on the part however, if you need multiple placements, the *Scan Planning and Execution* window lets you step through the individual ones and define partial scan programs for each placement.

The **Create new placement** button is located in the *Scan Planning and Execution* window.



After that there appears some new buttons that allow you to go to the previous placement or delete the current placement.



To add another placement, click on the **Create new placement** button.



To move to the next scan session click on the button.



It is possible to copy the scan program parameters of the previous placement to the recently created one by clicking the button.



For all new placements, you should follow the same procedure from planning the scan (see the section [Scan Planning](#)) to executing it (see the section [Scan Execution](#)).


3.2.6 ADVANCED SETTINGS

If you wish to change the Scan settings press the button in the **Execute Scan** tab to open the **Advanced Scan Settings** dialog divided into two categories:

- **Scanning** - contains settings for the scanning process.
- **Post processing (triangulation)** - contains settings for triangulation.




You can select either **Default** or pre-arranged options, optimized for **Small**, **Dark** or **White** objects. You can also create your own **Custom** settings. If you want to add/delete presets, click on the Options button and select **Save As** to create a preset or **Delete** to remove it from the list. Select **Return to 3Shape settings** to reset the values (not available for the user defined presets).

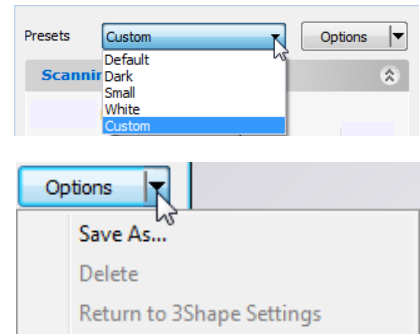

It is possible to **Adjust Laser** target **intensity** and **Scanning speed** that have influence on the scanning process. You might benefit from setting the **Intensity** to **High** and the **Scanning speed** to **Slow** if you have a very dark object to scan.

Data handling section allows you to mark the **Indexed tracking** checkbox to get less noisy raw scan data. This, however, can cause the loss of some very fine details.

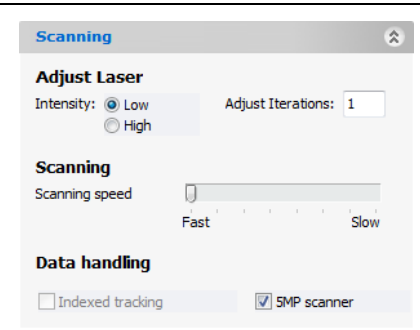

Cluster diameter - you can decide how many points should be in each area (sphere) where you reduce your raw data. A lower value gives better coverage, however, a higher value yields less noise.


Min. points in cluster - sets the number of points in a cluster.

Final number of points - determines the number of points that should be increased or reduced.

Iterations - If this is zero, then there is the same number of triangles on corners as well as flat surfaces. You are making more triangles on corners and less on flat surfaces, getting a better distribution of points.

Hole closing - defines that all holes smaller than this parameter will be closed after triangulation.

Smoothing - adds smoothing to the triangulated model.

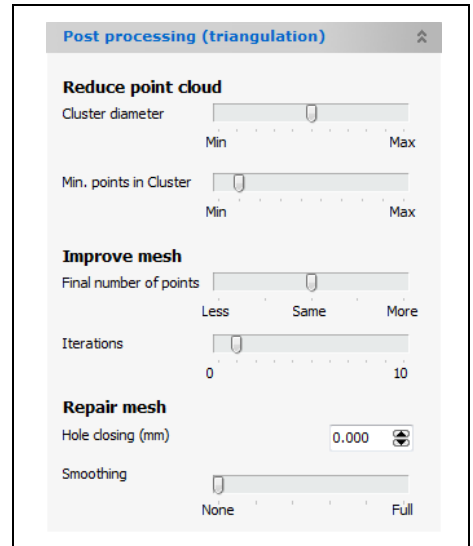


3.2.7 SAVE COPY OF SCAN

You can save a copy of the scan by selecting the *File->Save copy of scan...* from the main menu.

Here you can select:


- the folder
- the format for the file
- the name of the file

The supported formats are: DCM, ASC, PTS, PTA, STL ASCLL, VRLM.

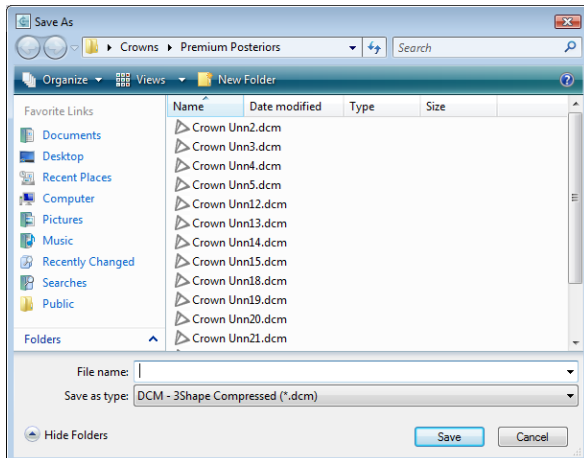


3.3 TEST SCANNER ACCURACY

The scanner accuracy can be traced by using the special application in the program

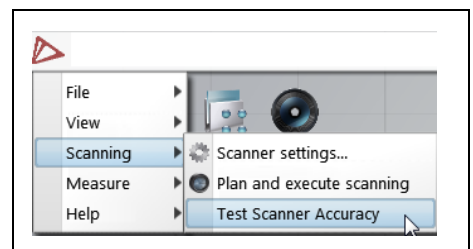

1. Place the test model into the scanner

Place the 15 mm wide gauge block into the scanner (consult the section [Placing an Object into the Scanner](#) to place the block correctly). The gauge the block can be acquired by the recommended manufacturer.

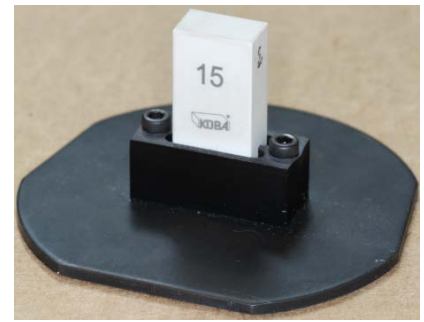

2. Perform the test scanning

Set the test scanning by selecting the *Main menu ->Scanner setting ->Test Scanner Accuracy*.

The Test scan accuracy window appears. Click the **Start test** button to begin the process. The results of the scanning will be displayed on the screen. They will also be saved in the *Documents\3Shape\Convince\AccuracyTest*.



4 HANDLING THE SCAN


4.1 TRIM A SCAN

With the **Trim scan** option you can remove any artifacts on a scan, e.g. parts of the fixture.




1. Open the Trim scan option

Click on the **Trim Scan** button in the Features toolbar and select the areas on the scan you want to delete (please see the section [Selection Toolbar](#) to learn about selecting areas).

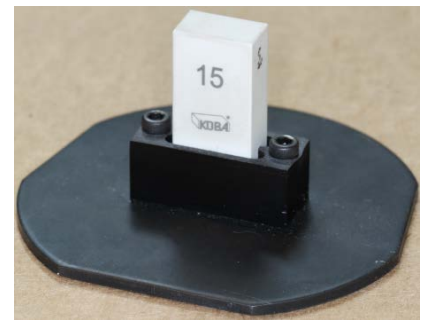

2. Finish the procedure

Click **OK** ✓ to cut the selected parts of the surface. You can always undo your trimming or trim the scan even further by clicking the **Trim Scan** button again.

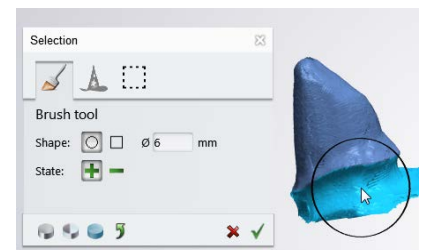

4.2 OFFSET/SCALE SCAN


If scan spray has been used on your object, you can click the **Offset/scale scan** button in the Features toolbar to add/remove an equal amount of data to/from the entire scan, making up for the scan spray or polishing.



After clicking on the **Offset/scale scan** icon the *Offset Surface* window opens up offering you to do the following:

- Specify the Offset distance value of the layer thickness to remove from or add to the surface of the scan.
- Select the Remove artifacts after offset checkbox to remove possible artifacts appearing when the surface is offset. However, this option makes calculation slower and is rarely necessary.


Use **Scale model** editbox to scale your scan according to the parameters you select.

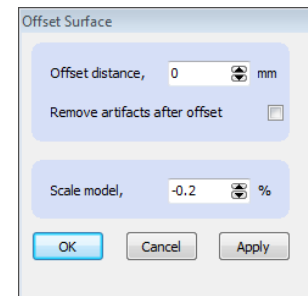

4.3 REGISTER SCAN TO THE REFERENCE MODEL

With the **Registering Scan to Reference** feature, you can "register" the scan to the reference model. "Registration" is a combination of alignment and mapping of each scan point to its closest functional surface on the reference model. When this is accomplished, all measurements can be evaluated properly. Therefore, registration is an important step.

Click the **Register** button in the Instruments toolbar to start the registration process.

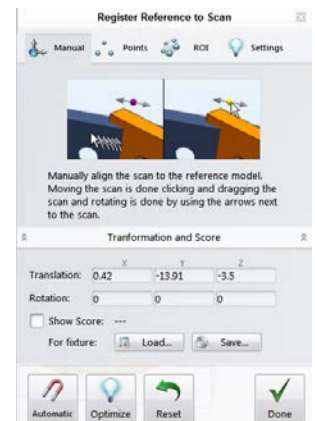


4.3.1 AUTOMATIC


In the **Register Reference to Scan** dialog click the **Automatic** button and wait for the program to align the scan to the model. If it fails, you can use one of the three methods - [Manual](#), [Points](#) or [Region of Interest](#). The **Reset** button allows you to start the process over.



4.3.2 MANUAL

 
The **manual** section allows you to perform the manual registration of the scan to the reference model by moving and rotating the scan with the purple control points.



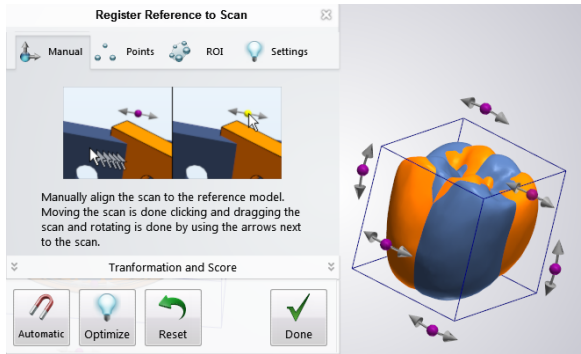


4.3.3 POINTS

 The **points** registering is the manual alignment of the scan by selecting three points on the scan and the three corresponding points on the reference model. After all the points have been selected the parts are aligned automatically.



The points can be set directly on the model and scan or by using the two sub-windows that show the parts separately. This is especially helpful when a reference model and a scan occlude each other. You can edit the registration even after the points have been set by dragging any point over the related surface.

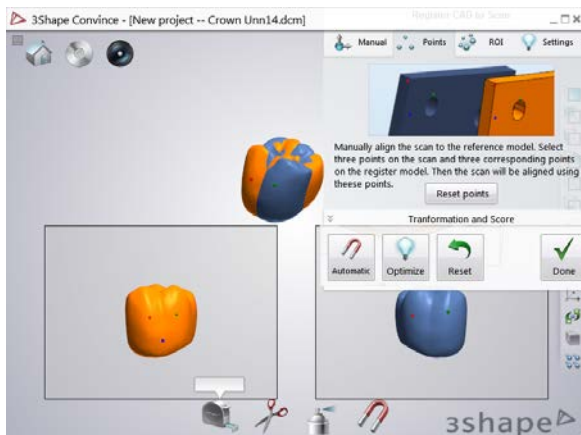

Click on the **Optimize** button to let the software make the final adjustments. If you want to start the process over, click the **Reset** button.

4.3.4 REGION OF INTERESTS

The **Region of Interest (ROI)** method is used if there is an area on the scan which is of higher importance to be aligned properly.



1. Open the Manual or 3 Points tab



Rotate and move the scan so it is close to the reference.

2. Open the ROI tab

Select the area of interest on the scan (marked **light blue**) that will be registered to the same area on a reference model. View the [Selection Toolbar](#) section for the detailed information about the selection tool.

3. Finish the procedure


Click the **Optimize** button, so that the software can make some final adjustments and align the area you have selected. If you want to restart the process, click the **Reset** button.

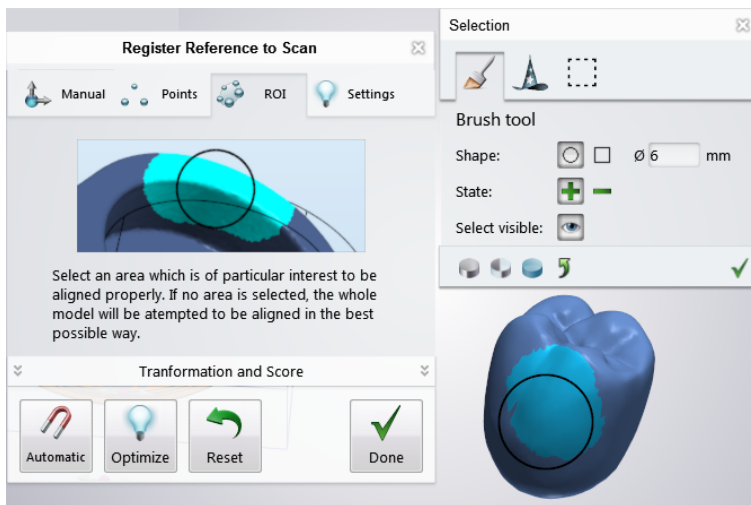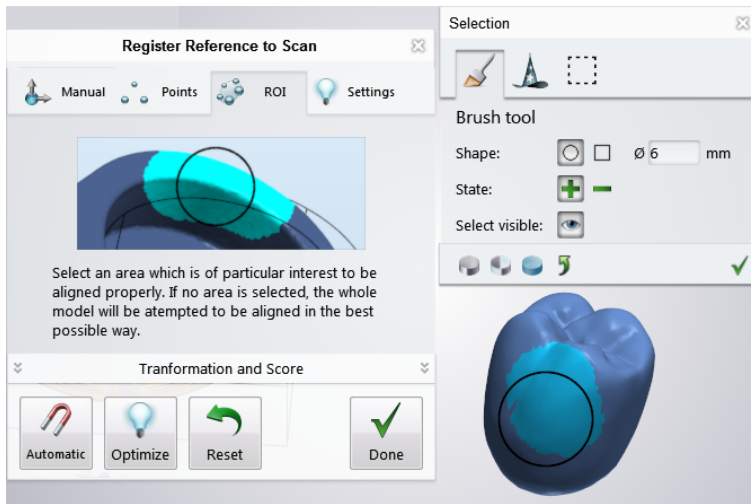

4.3.5 TRANSFORMATION AND SCORE

In the **Transformation and Score** section, you can follow the result of the above registration methods as the numeric values of translation and rotation of the scan. You can also actively change these values and thereby determine the registration as well.

To monitor the effect of such adjustments, check the **Show Score** option. The dialog then shows the sum-of-squared distances' average. Ideally, this score should be at its minimum for an optimal registration. It may be justified to accept a higher score though, when you decide that some scan points are outliers.

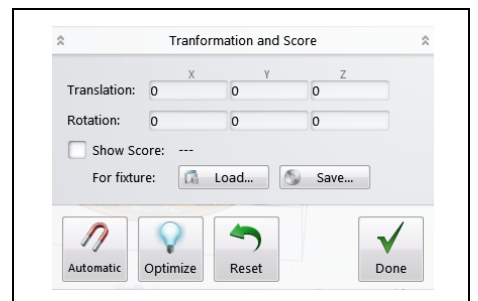

Note that computing the score can be slow, so you may only want to enable it when making final adjustments.


You can load and save a transformation to a file. This will be useful if you use a fixture with reproducible multiple positions (like a mechanism to flip the part). If you have such a fixture, you can calibrate its transforms by scanning a known object in each position and using the above registration methods. Once satisfied, save the transform action. In that case, when scanning other objects, you can use the same transform action again.

4.3.6 SETTINGS

The registration is computationally extensive. Therefore, by default, only a representative portion of all scan points is used in the calculation. In almost all cases, this will work fine. You can however force how many points should be evaluated (**Evaluate one point out of** checkbox). In the extreme, you can evaluate all, i.e., 1 point out of 1.

Select the **Use weight by facet area** checkbox to minimize the points density drawbacks. Use this option if point density varies a lot in different parts of a scan.

The number of iterations determines the precision of the final alignment. The default value generally works fine, but you may gain a little by increasing it. This means that will increase calculation time. You can achieve a similar effect by clicking **Optimize** more than once.

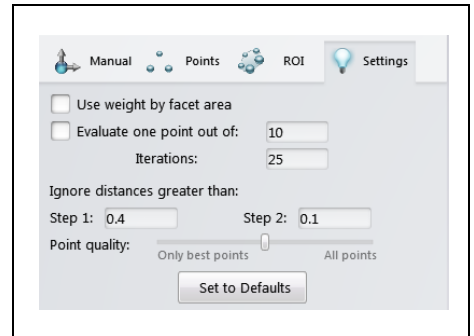

When the reference model deviates significantly from the scan, it can be a good idea to decrease the threshold distance. Internally, the optimization uses two steps, and the second step must use a finer threshold (Ignore distances greater than fields). The smaller the thresholds, the fewer points get evaluated, and thus the faster is the alignment.



Point quality slide bar allows to adjust the selection of points taken into consideration during the registration.

Click **Set to Defaults** to reset the settings.


5 REPORT

Convince™ Standard allows you to create inspection reports and save them automatically on your computer in the .pdf file format.

To generate a report from the main window of the program while the project is open, you can perform one of the following actions:

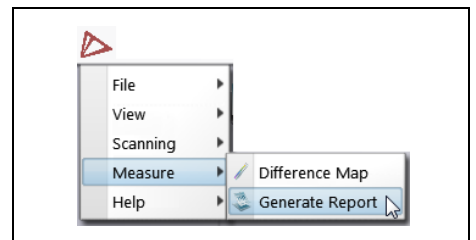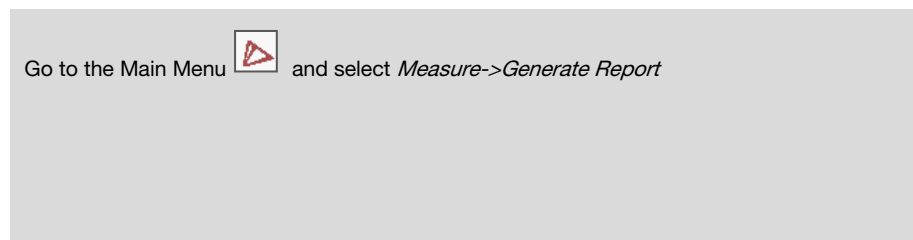



OR

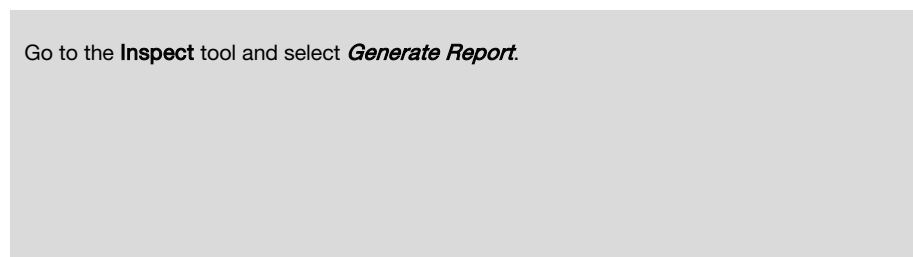

Selecting the **Generate Report** option will display the *Report Settings* window with two tabs:



General (left image) and **Difference map** (right image).

Select the items you would like to include in the report and click **OK**.

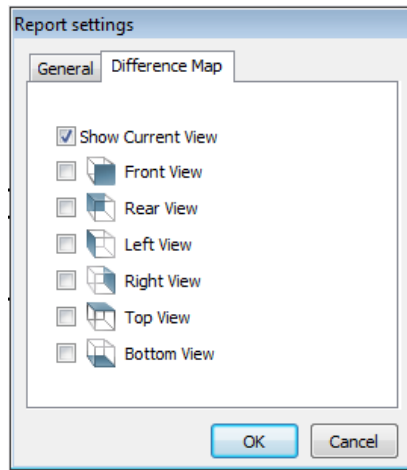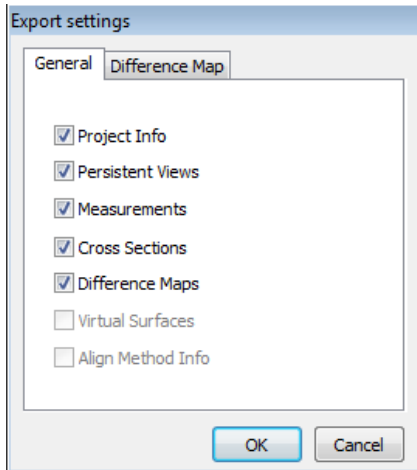


Before generating your report, you can go to *File->Project information* and fill out the blank fields with the additional information (see the image to the left).

This data will be included into the report.

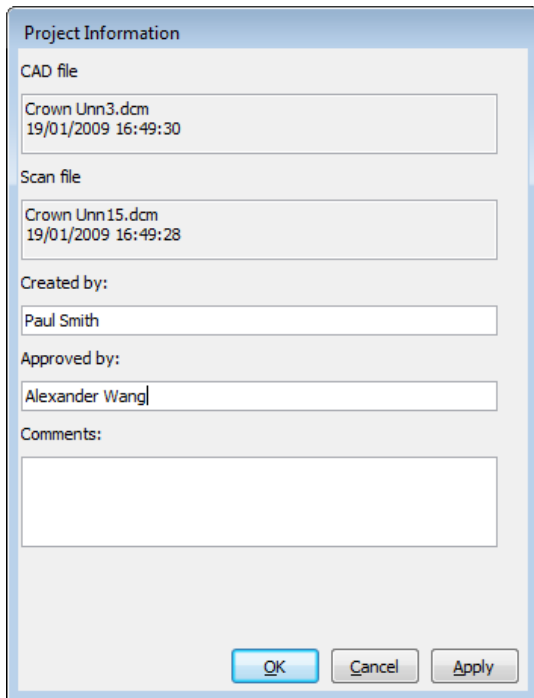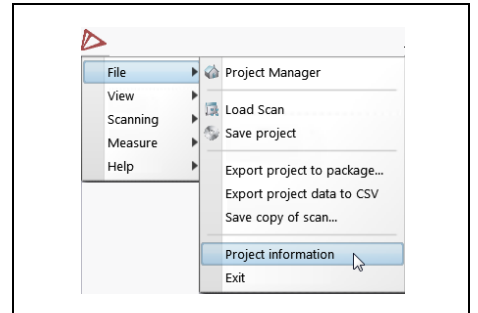


It is possible to select a logo image for your report. To do this, go to *File->Options* and select the **Options** tab.

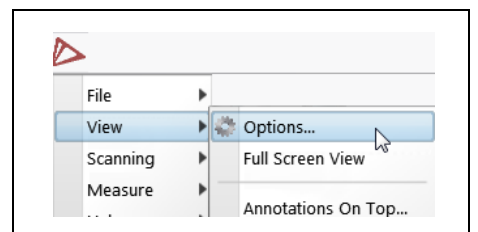

Click the **Load image** button to open the desired illustration.

Click **OK** when finished.

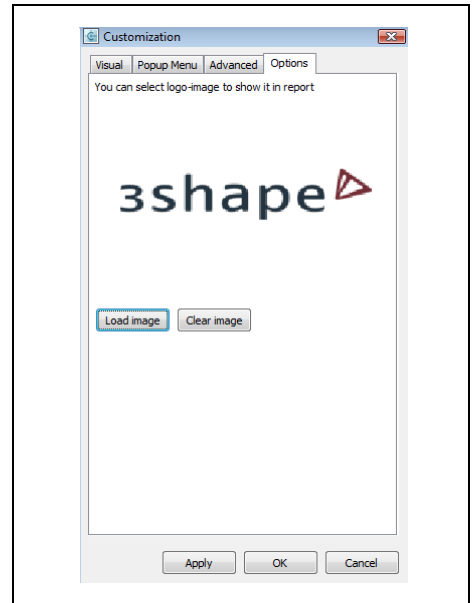

After all the required information has been entered, you can generate your report. The report viewer starts up in a separate window. The first time you start it, the initialization can take a moment.


The image below shows the example of a generated report with the logo image, project information etc.:



You can also generate a report directly from the [Project manager](#) or from the [Statistics page](#).

6 PROJECT MANAGER

The 3Shape Convince™ Standard **Project Manager** provides you with options for working with recent projects and creating new ones, browsing through the existing projects and creating new folders. The image below illustrates the main window of the Project Manager:

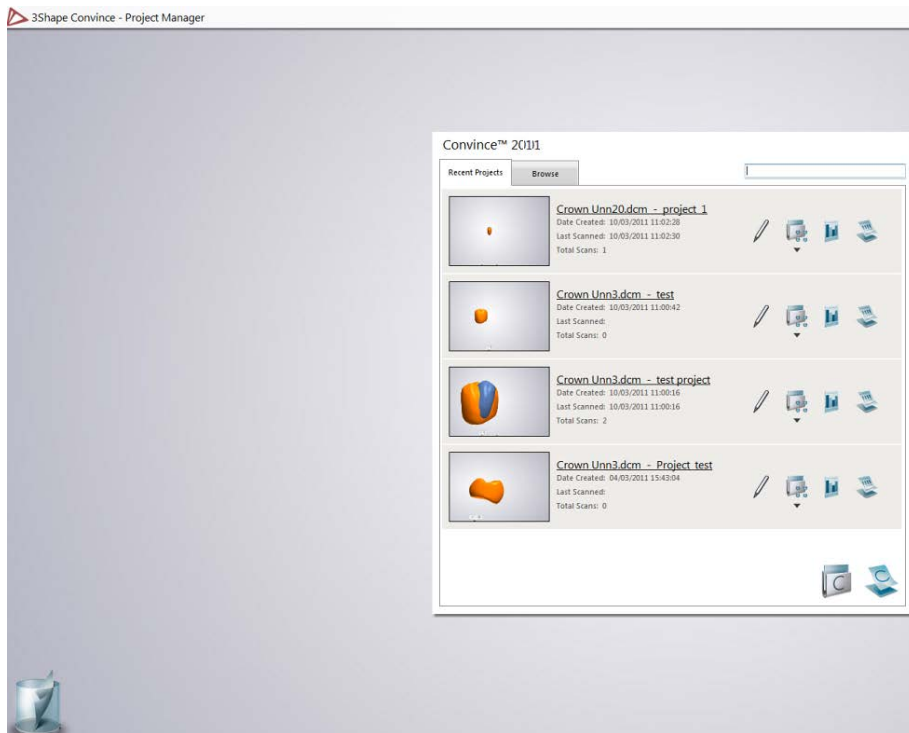

The Project Manager contains two tabs, that are described in details in the next chapters:

- The **Recent Projects** tab, that allows you to work with the recently accessed projects.
- The **Browse** tab, that allows you to find the desired projects in the list of the all existing ones.

You can also use the **Import Project**



and the **New project** buttons to import and create projects respectively. Use the **Search** filed in the upper right corner to find the necessary projects.



Click the **Garbage Can** button to view its content. Right-click on the necessary item to **Restore** or **Delete** it.




Click the **Clear Garbage Can** button to empty the recycling bin.



Return to the Project Manager with the help of the corresponding button



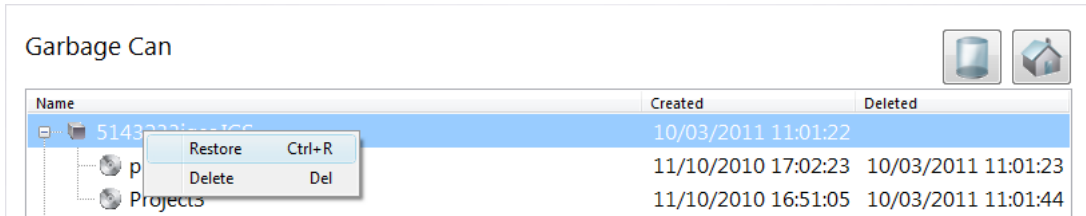


6.1 USER ACCOUNT CONTROL

The first time you log into the program, use the credentials given by your provider. Remember, that the **user name** and **password** are case sensitive.

After you have logged in, the *User Management* form opens up, allowing you to create new users, delete them or change your password (**Admin** users only):

Add user.

Type in a new **Login name** and **Password**. Click **OK** to apply changes.

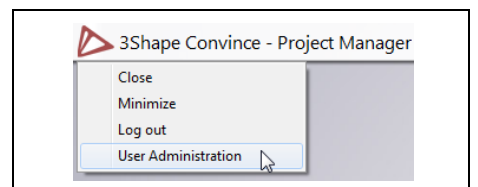


Note: To be able to edit a project, you must have administrator rights. So please select the corresponding checkbox in the form to become an **Admin**. The regular **User** is only allowed to scan projects created by **Admin** and generate reports, but cannot edit them. The **Admin** account also provides an access to the **User Administration** form in the upper left menu of the main window:

Unfold the drop-down list in the **Delete user** tab and select the user whose account you would like to erase. Click **OK** to apply changes.


The **Change password** tab allows you to replace the old password with a new one.

Click **OK** to apply changes.

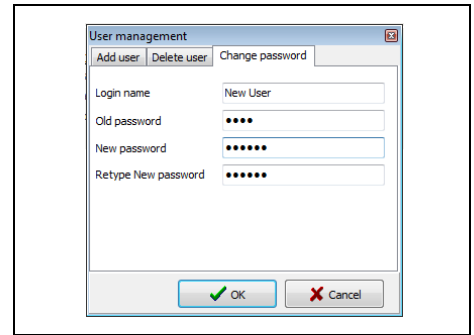

6.2 FOLDER STRUCTURE

The Project Manager stores all your projects organized by the parts' names in the **Browse** tab. Use the **Search** field in the upper right corner to find the necessary projects. Double-click the project name (e.g. Crown) to edit it using Convince™ Standard.

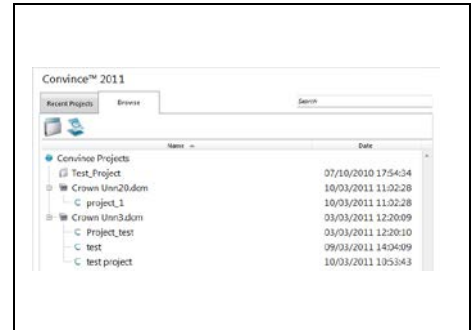

For the better organization of your projects, you can create folders and drag-and-drop the necessary projects into those folders. To do so, click on the **New Folder** button and enter a name for your new folder in the pop-up window.




To create a new project, click on the **New Project** button. The program will automatically bring you to the main window of Convince™ Standard.




If you click on a folder or a part's name, the **Import Project** button appears in the menu and enables you to import projects to the program in the .3mx file format. The project will be automatically opened in Convince™ Standard and you can save it in the Project Manager if desired.



Convince™ 2011

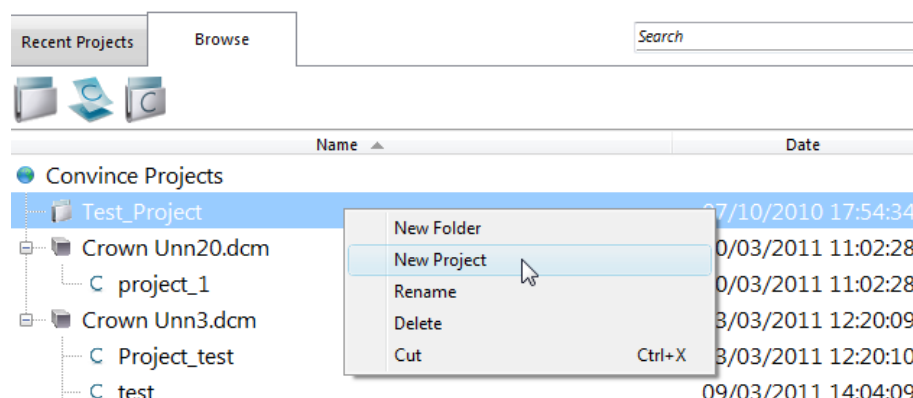


When you click on the project's name, four new options become available: **Edit** , **Scan** , **Statistics**  and **Create Report** . Right-click on the project's name to get a menu with some additional options (see the image to the left).

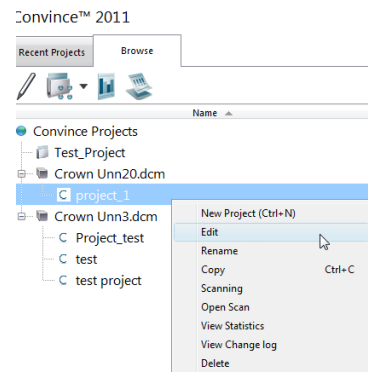

6.3 RECENT PAGE

The **Recent Projects** page is the first page to open if you have already created projects in Convince™ Standard. This page displays up to ten recently accessed projects in the program. If you are at the **Browse** page you can always switch to the **Recent Projects** page and vice versa.

Convince™ 2011

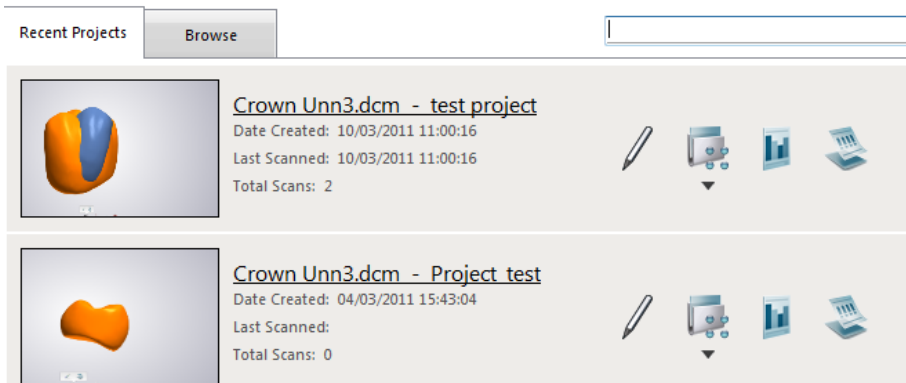

View more information about the options of this page in the section [Accessing an Existing Project](#).


6.4 CREATING A NEW PROJECT

Perform one of the following actions to create a new project:


Click the **New Project** button in the bottom right corner of the Recent Projects page.




Click the **New Project** button in the top left corner of the **Browse** page.

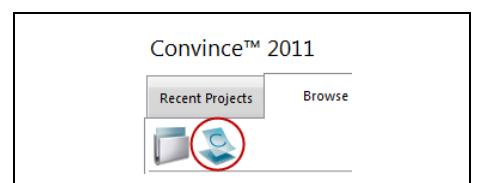


Right-click on the project name and select **New Project**.

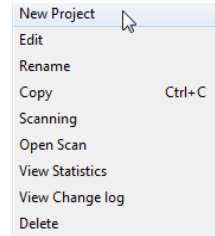

 Right-click on the part name and select **New Project**. The program will open up a new project with this particular part.



Right-click on the folder name and select **New Project**.

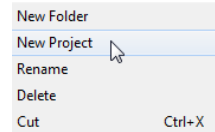

It is possible to press Ctrl+N to create a new project.

If you create and save a new project with the part that already exists in the folder, the program automatically saves this project to the appropriate section.

6.5 ACCESSING AN EXISTING PROJECT


You can access and modify the existing projects from the **Recent Projects** page or the **Browse** page by clicking on the relevant buttons or right-clicking on the project and selecting the options from the menu:

Convince™ 2011




Recent projects tab


Convince™ 2011

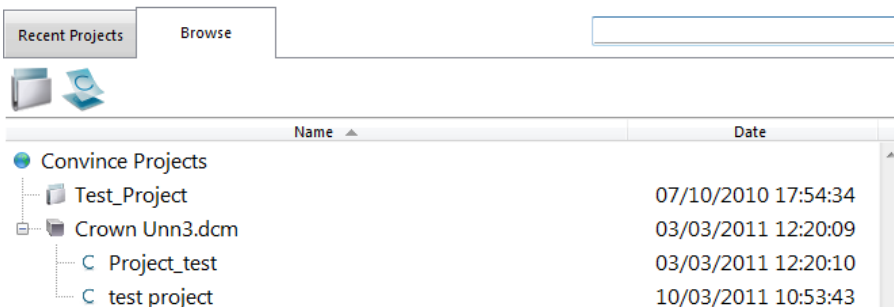

Browse tab

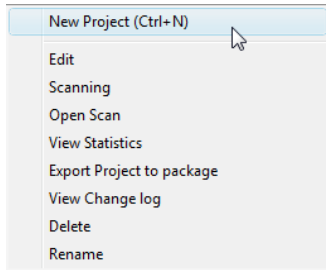

Recent projects right-click menu

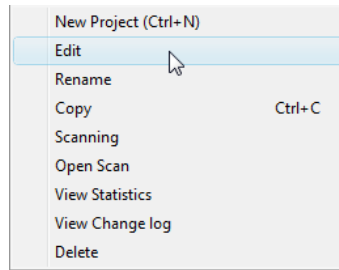

Browse tab right-click menu

Each page contains four main options:

[Edit mode](#). Allows to modify your project. For **Admin** users only.



[Scan mode](#). Allows to scan a new model or load an existing one.



[Statistics](#). Allows to view the scan history on a project.



[Report](#). Allows to generate an inspection report.




6.5.1 EDIT MODE

The **Edit** mode allows you to open the recent project for editing in Convince™ Standard.



This option is available for **Admin** users only and allows you to change and create measurements (see the sections [The 3D Measurements](#) and [Cross Sections](#)), change the scan sequence. Click on the **Edit mode** button to start modifying the project:

Convince™ 2011

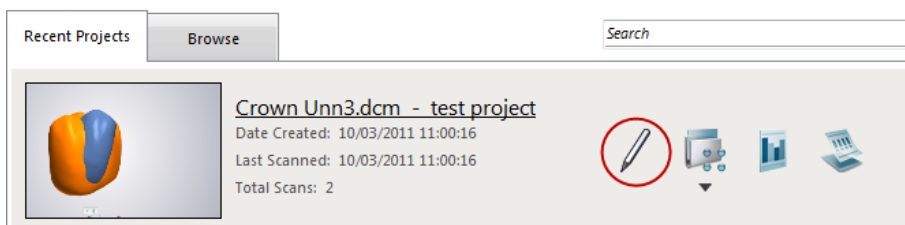


6.5.2 SCAN MODE

The **Scan mode** allows you to create a new scan or open an existing one.




Convince™ 2011

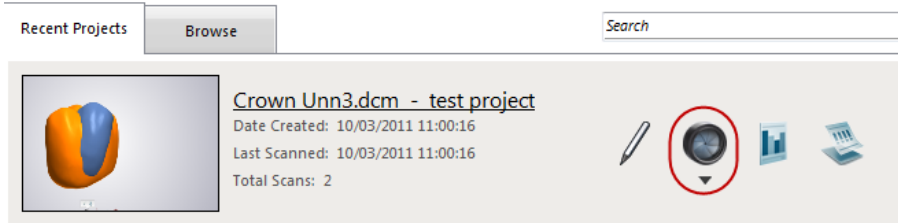

Click on the black triangle of the **Scan Mode** button to choose between:

- Creating a new scan using a 3Shape scanner with the scan sequence defined by the **Admin** user (**Scanning**) or
- Opening a saved scan (**Open Scan**).

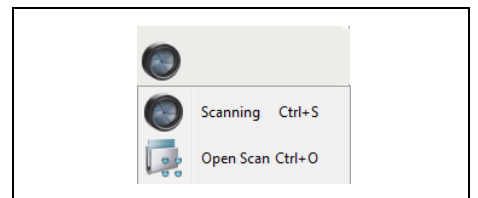

In both cases the measurements defined in the project will be evaluated according to this particular scan and the results will be placed in the history for this scan. See more about setting up a scan sequence in section [Creating a Scan Program](#).

The scan flow in the **Scan Mode** contains the following options:

Place the object into the scanner. Try to imitate the shown placement of the reference model (if there is one). Press **Scan**.



Trim your scan if required.



Align your scans if necessary. (if you have multiple placements see the chapter [Multiple Scan Placements](#))



Click **Next** to go to the next placement if required.



Finalize your scan.




View chapter [Scanning](#) for more information on the scanning process.

6.5.3 STATISTICS

To view the history of a project and view measurement statistics, click the **Statistics** button of a Project Manager to open the [Statistics](#) page.



Convince™ 2011

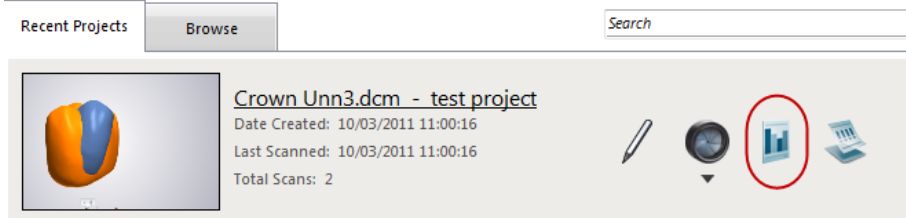


6.5.4 REPORT OF THE PROJECT


The **Report** button creates an inspection report and saves it automatically on your computer in the .pdf file format.



Convince™ 2011

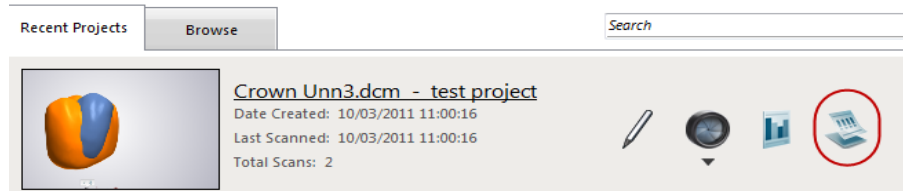

This is what the report looks like after you have generated it for the first time:

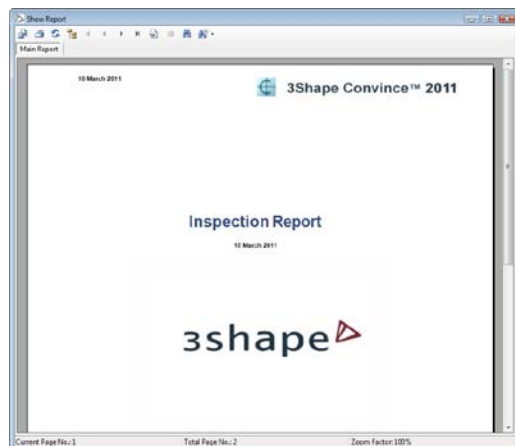

The corresponding icons in the **Statistics** page indicate projects with already generated reports:

ID	Project Version	Created	Evaluation	Passed	Fail	Missed	User	Report	Default
1	1	10/03/2011 10:59:5	Passed	0	0	0	qcadadmin		
2	2	10/03/2011 11:00:1	Passed	0	0	0	qcadadmin		✓




View the [Report](#) section for the description of report settings.

6.6 EXPORT AND IMPORT

• Export

To export your project, go the Main Menu  button in the upper left corner of a program window while the project is open and select *File->Export project to package...*

This will display a *Save Project* window (see image below). Enter a file name and click **Save**. Your project is now saved in the .3mx file format. The **Export project** option is also available from the right-click menu in the Recent page (requires version 1.4.0.4 or above).

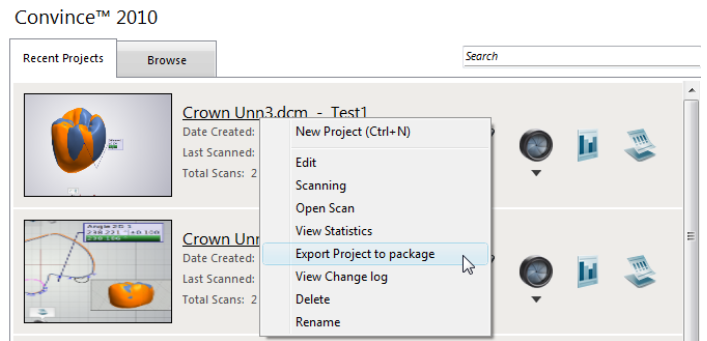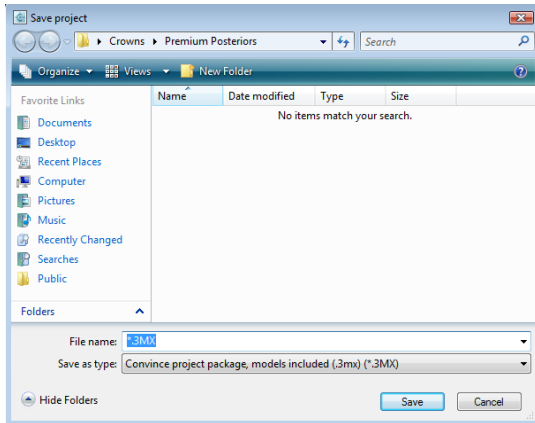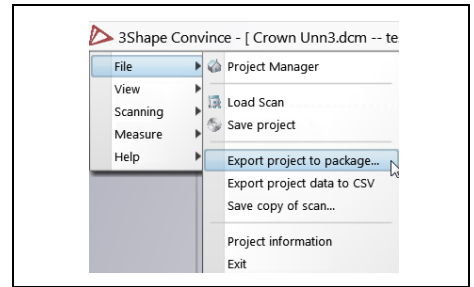

You can also export the project by right-clicking it on the entry page and selecting the appropriate option from the drop-down menu.

• Import

 
To import your project, perform one of the following actions:

Click on the **Import Project** button in the right bottom corner of the *Recent Projects* window.




OR

Use the **Import Project** button located in the left upper corner of the *Browse* window.



This will display an *Open Project* window (see image below). Select the desired .3mx file and click **Open**. The project is now imported into the program and can be saved if desired.

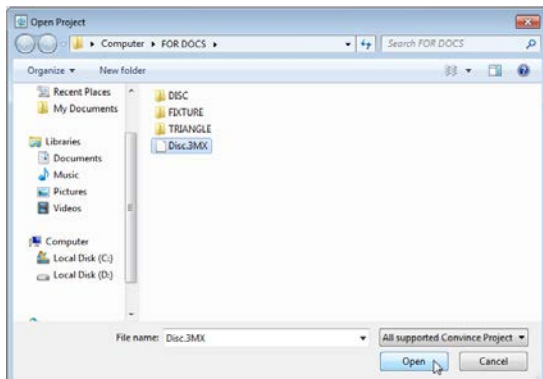


6.7 REVERTING TO PREVIOUS PROJECT VERSION

You have the option to delete the latest version of a project, in case something has gone wrong. This will revert the active project version to the previous, correctly functioning version.


1. Go to the Project manager (**Browse** or **Recent** page), select the necessary project, right-click and choose Revert to previous version from the popup menu.

2. You will get the warning message before deleting the latest version including all scans attached to it. Select Yes to continue. The next time you open Convince the second latest (now the latest) will be opened.

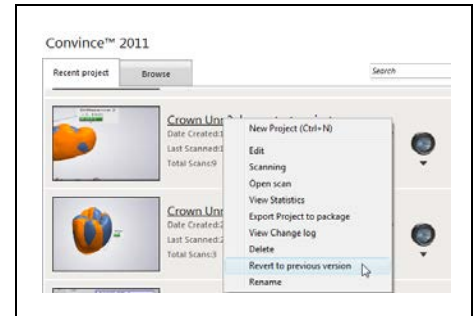


7 STATISTICS PAGE

 The **Statistics** page allows you to view the history of the scans created for a project and view statistics related to the measurements.




The statistics page allows you to observe the list of scans and measurements performed in the project.

Project Statistics

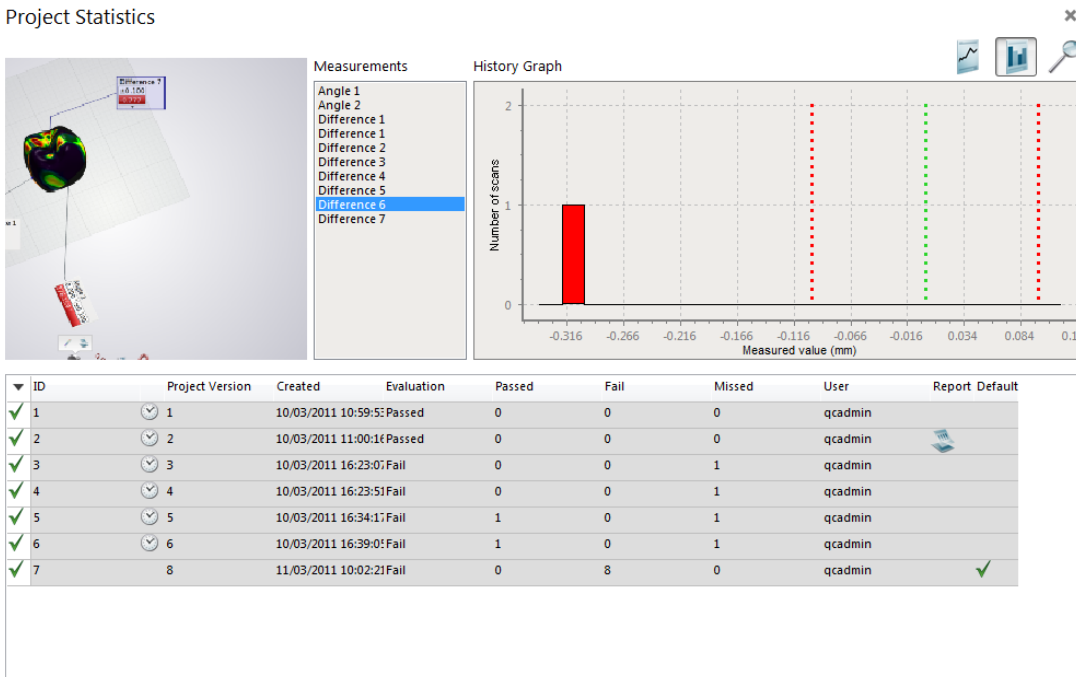

The **History Graph** in the right upper corner of the screen presents the measurements of the selected project through the graph tables. Select the desired measurement from the **Measurements** list to the left and view their history graphs.

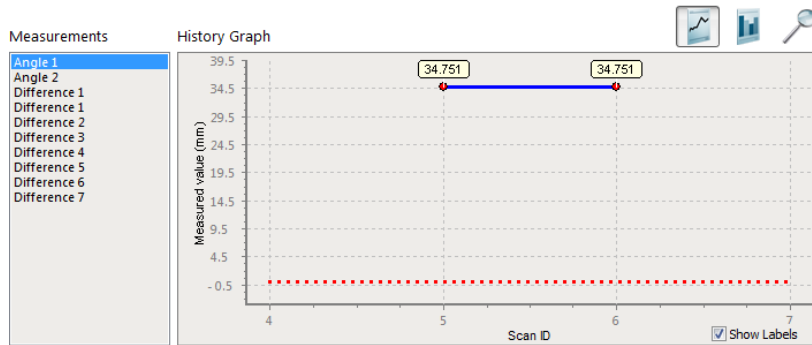

You can switch between the **Curve** and **Histogram** modes and use the **Zoom** chart tool if needed:

The **Statistics** page allows you to view the history of the scans created for a project and view statistics related to the measurements.

Curve - displays the selected measurement in the form of a curve.



Histogram - presents the selected measurement in the form of a histogram.



Zoom chart - enlarges the History Graph table for a closer visualization.



The **green** line on the History Graph shows the ideally accurate coincidence section of the scan and the reference model.

The top/bottom for curve and left/right for histogram **red** lines (tolerance boundaries) show the upper and the lower acceptable limits for the difference between the scan and reference model.

The table located below the graph displays detailed information about the scans in the project. To select the desired scans place a green tick ✓ in the first column of the table. This will result in changes on the history graph. The preview image in the upper left corner illustrates the selected scan.

▼ ID	Project Version	Created	Evaluation	Passed	Fail	Missed	User	Report Default
✓ 1	1	10/03/2011 10:59:53	Passed	0	0	0	qcadadmin	
✓ 2	2	10/03/2011 11:00:16	Passed	0	0	0	qcadadmin	

There are the following sections in the table:

Item	Description
ID	Shows the consecutive number of the project's scan. This ID is used in the X-axis of the graph.
Project version	Shows the ID of the project version. The project version is a set of measurements for the project's tasks with the specific details. As soon as some changes take place, there appears a new project version.
Created	Shows the creation date.
Evaluation	Shows the result of the measurement, which can be either Passed or Fail . Passed evaluation is given if all the measurements related to a given scan are located within the tolerance boundaries. Otherwise, it is Fail .
Passed	Shows the number of the measurements within tolerance.
Fail	Shows the number of the measurements outside tolerance.
Missed	Shows the number of measurements that could not be evaluated (e.g. due to missing scan data).
User	Shows the name of the user.
Report Default	Signifies whether the report was created for this project version.
Default	Indicates the scan version that is opened in the edit mode.

You can select the desired scan with the left click and choose then the following options:

View measurement results on the selected scan



Gives you more detailed information on the measurements on the selected scan:

Measurement Results, Scan #6



Created 10/03/2011 16:39:05

Type	Caption	Nominal	Tolerance	Measurement	Points Used	Points Total	Result
Point Difference	Difference 1	0.000	0.100				Not evaluated
Angle 2D	Angle 1	0.000	0.100	34.751	290	290	Passed

Remove

Allows you to delete the selected scan.



Generate report for selected scans

Allows you to create the report for the selected scan and saves it automatically to your computer in the .pdf file format(see the [Report](#) section).



Re-evaluate selected scans using latest version



If you want to open up an old scan in the most recent project version, click the **Reevaluate** button. In this case, the clock symbol  will disappear from the table. This symbol appears when the measurements of the given scan are outdated, since there exists the most recent version of the project where the measurements can be more correct. So you can reevaluate the given scan with a more recent project version.

Right-click at a scan to open the popup menu.

It is possible to perform some actions mentioned above as well as export the project in the .csv format.

View measurements (Ctrl+M)
View scan in application (Enter)
View scan in application (Enter)
Export project to CSV

8 THE 3D MEASUREMENTS

Convince™ Standard offers both the 3D and 2D measurement tools. All measurements are available from the right-click context menu.

8.1 LIST OF MEASUREMENTS

To view the list of measurements performed in the project, click on the **Show List of Measurements** button in the Visualization toolbar. The *Measurements* window opens up with an overview of all your measurements, categorized under several tabs:



Right-click at a scan to open the popup menu.
It is possible to perform some actions mentioned above as well as export the project in the .csv format.

View measurements (Ctrl+M)
View scan in application (Enter)
View scan in application (Enter)
Export project to CSV

All measurements - the list of all the measurements grouped by categories.


3D measurements - the list of measurements performed in 3D.

2D measurements - the list of measurements performed in 2D plane.

Group measurements - the classification of measurements according to geometric categories.

Left-click on the desired measurement to view it on the model in the main window as well as in the Views toolbar.

To make the measurement invisible, rebuild or delete it, right click on it and choose the necessary option from menu:

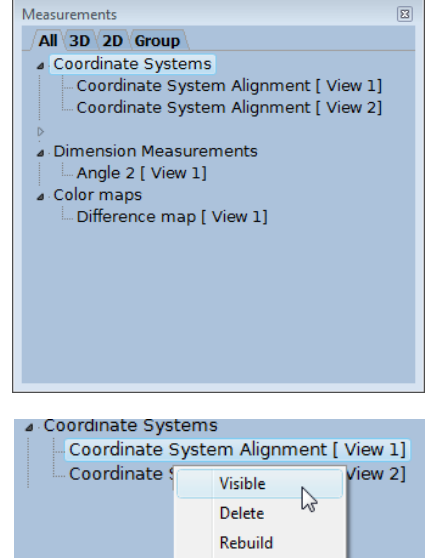

8.2 DIFFERENCE MAP

The ***Difference map*** displays the distance between the scan and the reference model.



The range of values around zero are colored **green** by default, gradually changing to **red** for positive deviations and **blue** for negative deviations.

To activate the **Difference map** select ONE of the following options:

Select the ***Difference map*** button on the Features toolbar.




OR

Click the ***Difference map*** button on the right-click menu.




OR

Go to the *Main menu*  -> *Measure*-> *Difference map*.

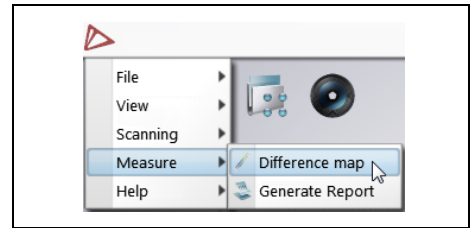


You can view the results in the main window. If you point the cursor at the element, you can see the distance between the reference and scan models in that particular spot.

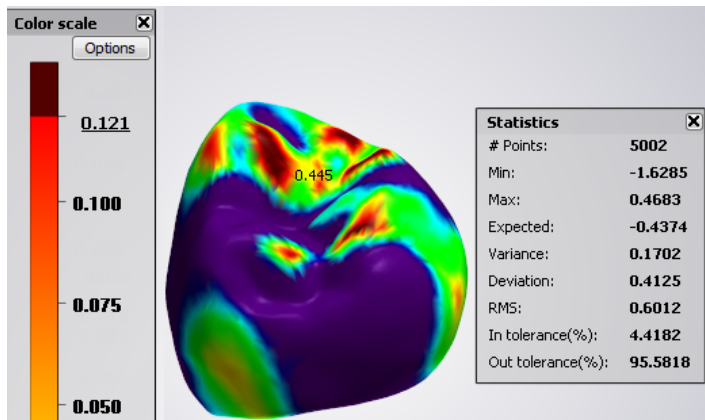

You can adjust the visual appearance of colors on the element. Click on one of the threshold values that are underlined in the **Color Scale** (see the image above) and enter the desired numerical value. You can also change the numerical value in the *Main Menu*  -> *View*-> *Options*-> *Diff map max value/Diff map min value*.

The *Color scale* window has its own drop-down menu (for more information see the section [Difference Map Menu](#)).

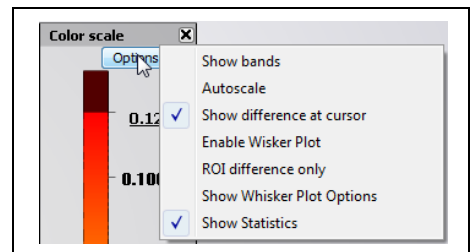


The *Statistics* window appears in the main window and shows statistics for the current difference map (for more information see the section [Available Statistical Information](#)).

8.2.1 DIFFERENCE MAP MENU


To open specific settings for the difference map click the **Options** button at the top of the *Color scale* window and select the desired option from the appeared menu:

- **Show bands** - Makes it easier to see slices on difference map with the same deviations.
- **Autoscale** - Automatically adjusts the scale of the difference map.
- **Show difference at cursor** - Shows the difference at that specific point when you hover your mouse on the model.
- **Enable Whisker Plot** - Enables the whisker plot (see the section [Whisker Plot](#)).
- **ROI difference only** - Creates difference map for the selected area only.

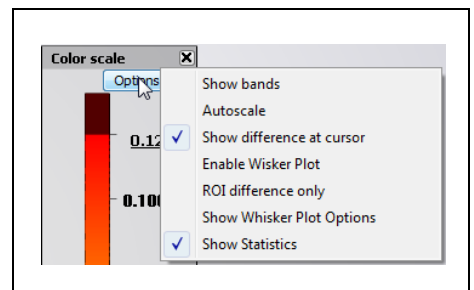

Once chosen, this option opens the [Selection toolbar](#). Select the desired area and click the **OK**  button.

You get the difference map of the selected area only:

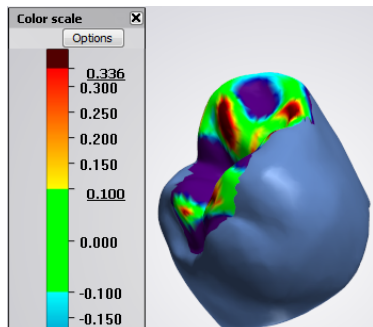


Show Whisker Plot Options - Changes the settings of the whisker plot (see the section [Whisker Plot](#)).

Show Statistics - Enables/disables the statistics window (see the section [Available Statistical Information](#)).

8.2.2 WHISKER PLOT

You can create a whisker plot on the difference map by clicking the **Options** button of the **Color scale** menu and selecting **Enable Whisker Plot**. This creates vectors on the difference map, which become larger depending on the deviation between a reference model and a scan.

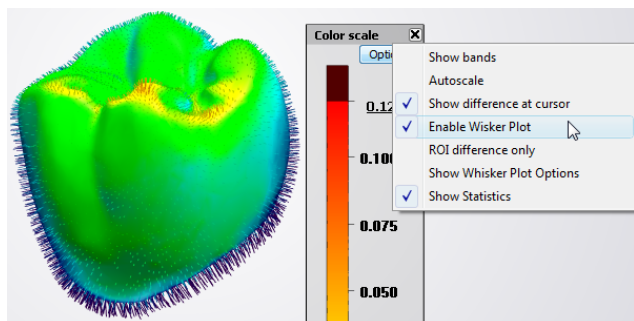


The whisker plot can be edited by selecting the **Show Whisker Plot Options** menu as shown in the image below.

This enables you to choose a **Map Scale Factor** which, when increasing it, makes the difference between the large and small deviations more noticeable. You can mark a **Threshold** checkbox so that vectors shown on the difference map are clamped to a certain size.

To view the gradation in contour lines you need to select **Show bands** option.

Map scale factor:

☐ Threshold

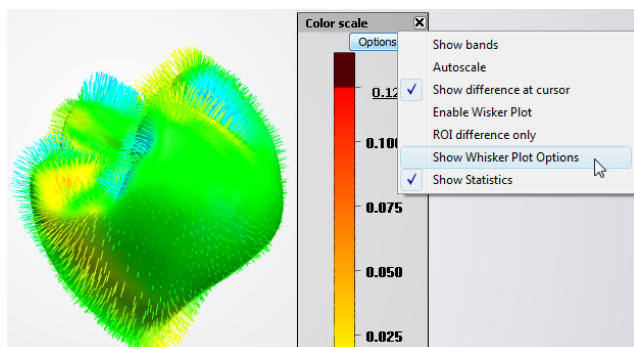

8.2.3 AVAILABLE STATISTICAL INFORMATION

The *Statistics* window that appears when the **Difference map** option is activated, shows statistics for the current difference map:

Points - displays the number of points in the scan.

Min - shows the minimal distance from the evaluated object to the scan.

Max - shows the maximal distance from the evaluated object to the scan.

Expected - statistical expected value of the point differences set.

Variance - statistical variance of the point differences set.

Deviation - statistical deviation of the point differences set (square root of variance).

RMS - Root Mean Square of the point differences sets.

Statistics	
# Points:	5002
Min:	-0.1703
Max:	0.1742
Expected:	0.0019
Variance:	0.0039
Deviation:	0.0628
RMS:	0.0628
In tolerance(%):	40.8437
Out tolerance(%):	59.1563

In tolerance(%) - the percentage of points that passed the difference map acceptance criteria ("green zone").

Out tolerance(%) - the percentage of points falling out of the measures of difference map by statistics.

8.3 POINT DIFFERENCE

The **Point difference** is the distance between a scan point and the corresponding mapped surface on a reference model. This point can be placed anywhere on your model.
To measure the point difference you need to select a surface, right-click on it and select

Measure Points  -> *Point Difference* .

You can view the coordinates of the placed point by clicking the black arrow at the bottom of the annotation.




8.4 SCAN VOLUME

The **Scan Volume** measurement displays the scan volume of the selected part in mm3 or in in3.

Position the cursor over the scan, right-click to open the menu and select *Volume*

Measurements  -> *Scan Volume* .



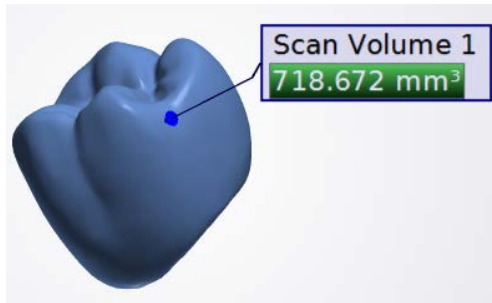

If the model does not consist of a closed surface, the scan volume measurement is estimated based on the convex hull.


8.5 SURFACE AREA

The **Surface Area** option measures surface area of the scan in mm² or in in².


Position the cursor over the scan, right-click to open the menu and select *Volume*

Measurements  -> *Surface Area* .


By default a complete model is measured, however, it is possible to customize it with the selection tool so only a user specified part is used.

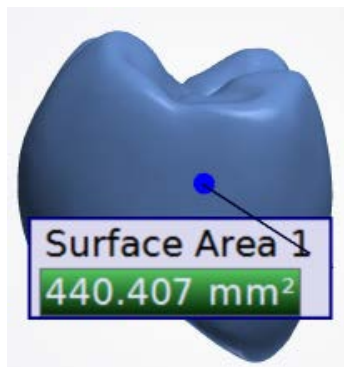

Surface Area Measurement

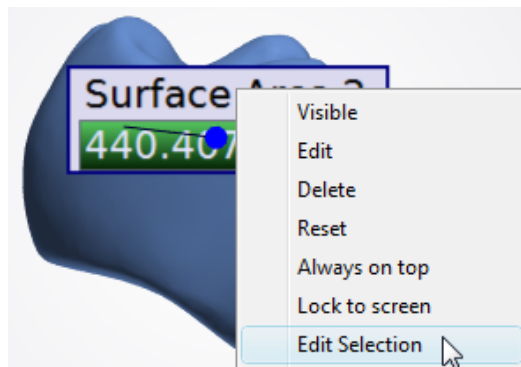

Editing selection

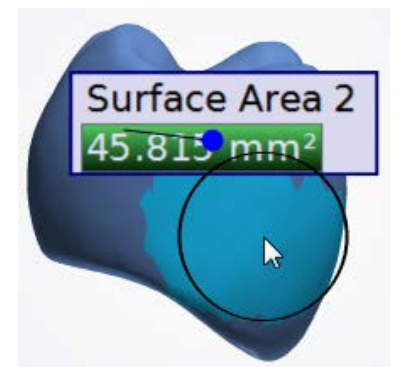


Selecting new surface area

8.6 3D DISTANCE


The 3D Distance measurement is related to the scans. It allows you to measure the distance between two points in a direct line.



To measure a 3D distance point the cursor at the initial point on a scan and right-click it to open the menu, then select *Volume Measurements*  -> *3D Point Distance* .

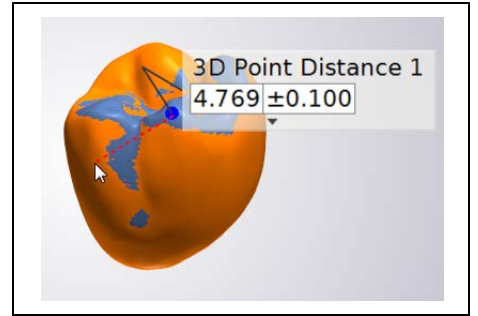

Then you can point the cursor at the second point of interest to create a 3D Point Distance measurement as shown in the image below:

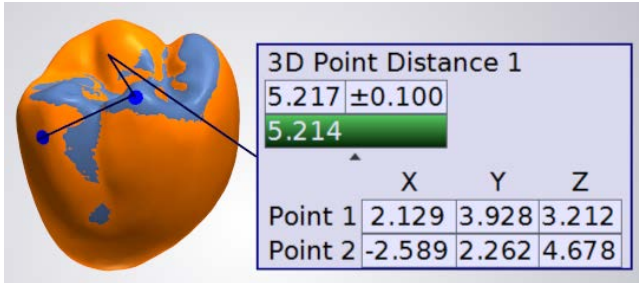

The coordinates of the measurement can be updated when on dragging the measurement points over the scan. You can edit the label and the values of the coordinates manually by left-clicking them with the mouse.

9 CROSS SECTIONS

9.1 CREATING 2D MEASUREMENT PLANES

The **2D Measurements Plane** is used for creating measurements on a specific cross-section of a model.



There are two ways of creating the 2D measurement plane:





2D measurements plane

1. Open the right-click menu on the selected surface and choose the **Cross sections -> 2D measurement plane** button. A 2D measurement plane cuts through the selected surface, defined initially by the orientation data contained in the reference model surface. Each reference model surface contains its own default location and orientation, defining how to initialize a 2D measurement plane.



2. Click on the "eye" symbol in the corner of the 2D plane to open a 2D cross section window as shown on the following image in the *Documents\3Shape\Convince\AccuracyTest*.

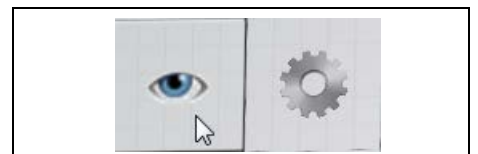

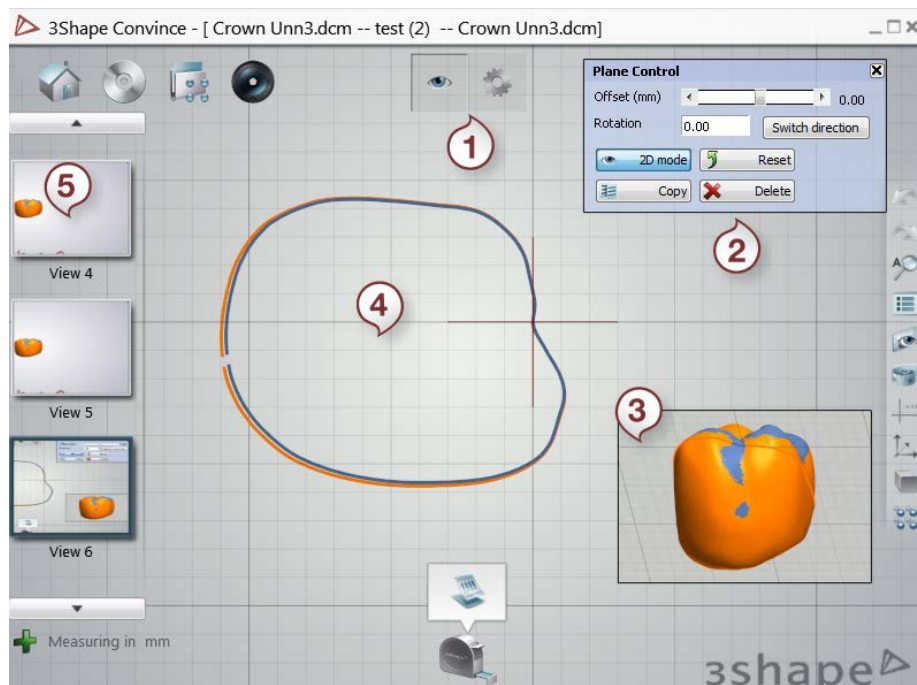

- | | |
|-------------------------|---------------------------|
| 1. 2D mode toolbar | 4. 2D cross-section model |
| 2. Plane Control window | 5. Views toolbar |
| 3. 3D preview window | |

1. 2D mode toolbar.

Turn on/off the 2D mode by clicking .
Open/close the *Plane Control* window by selecting .



2. Plane Control window.

Turn on/off the 2D mode by clicking .
Open/close the *Plane Control* window by selecting .

- The position of the cross-section plane is changed by dragging the **Offset** sliding bar or it can be changed manually by clicking the value.
- You can **Switch direction** of the cross-section plane or set it manually in the **Rotation** edit box.
- You can turn OFF the 2D mode, reset, copy or delete the action.

3. 3D preview window.

You can observe the location and orientation of the cross-section relative to the full 3D model in the 2D measurement plane preview window.

It is possible zoom the model in the preview window.

The size of the preview window can be changed by dragging it up/down and left/right.

2D measurements plane by cut

1. Open the 2D measurement plane by cut option

Open the right-click menu on the selected surface and select the *Cross sections* -> *2D measurements plane by cut* button.



2. Create a 2D plane


Draw a **red** dashed line across the reference model where you want to make a 2D plane by holding the left mouse button pressed.

A 2D measurement plane cuts through the selected surface.

The other settings are similar to the already described in the [2D measurements plane](#) section.

9.2 EDITING PLANES

To enter the editing mode, click on the **Plane Control** button located in one of the corners of the 2D measurement plane (see image on the left) or if you are working in a **2D mode** (see the following image), you can access the **editing mode** from there.

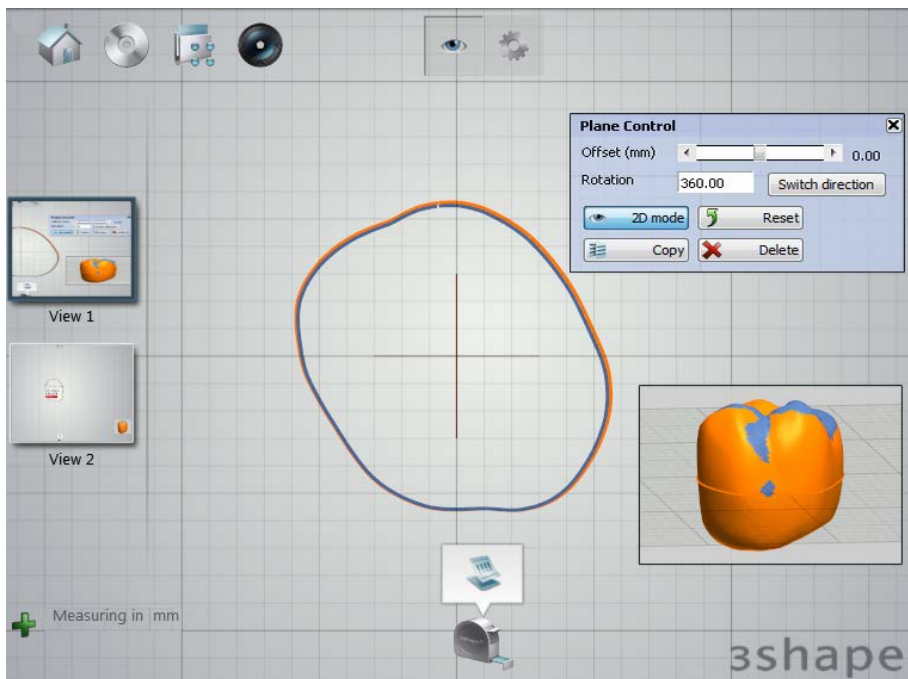

The **Plane Control** contains the following settings:

- **Offset** – Translates the plane in a normal direction. You can use the scroll bar or click and enter an offset value manually.
- **Rotation** – Rotates the plane around the main axis.

 
You can also rotate the selected cross-section by dragging its blue control point (turns yellow when active):

- **Switch Direction** – Changes main axis according to reference geometry.
- **2D Mode** - Transfers view to/from 2D.
- **Reset** – Resets all changes.
- **Copy** - Allows to copy a 2D measurement plane with all its measurements.
- **Delete** - Deletes the 2D measurement plane and all measurements attached onto another surface of the model.




To copy a 2D measurement plane with all its measurements:

1. Click the **Copy** button.



 2. Exit the 2D mode by clicking or button.



3. Right-click on a surface on the model and select **Configure -> Paste**.




A click on the **2D Mode**  button opens the plane in the 2D mode.

It is possible to add measurements by right-clicking the cross-section element of the part, similarly to the 3D measurements.

If the measurements are created while a scan is not loaded, they will not be evaluated until a scan is added to the project.

If the plane is moved, the measurements are updated accordingly.

The annotations are edited similarly to the described in the 3D sections.

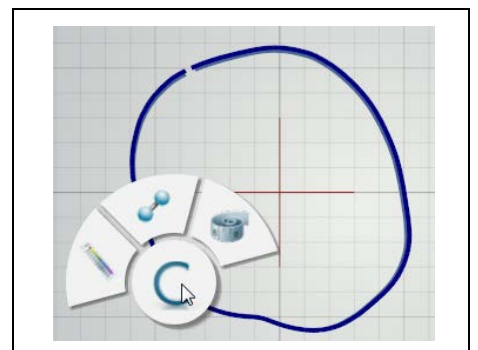

9.3 ANGLE 2D


A click on the **2D Mode**  button opens the plane in the 2D mode.

It is possible to add measurements by right-clicking the cross-section element of the part, similarly to the 3D measurements.

If the measurements are created while a scan is not loaded, they will not be evaluated until a scan is added to the project.



If the plane is moved, the measurements are updated accordingly.

The annotations are edited similarly to the described in the 3D sections.

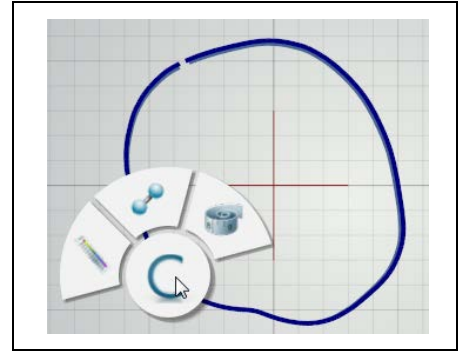

To measure a 2D angle, right-click the 2D cross-section line of your model and select **Dimensions**  -> **Angle 2D** .

To place the first point then indicate 3 more points to form the angle with two lines. The measurement can be edited by dragging the points with the cursor.

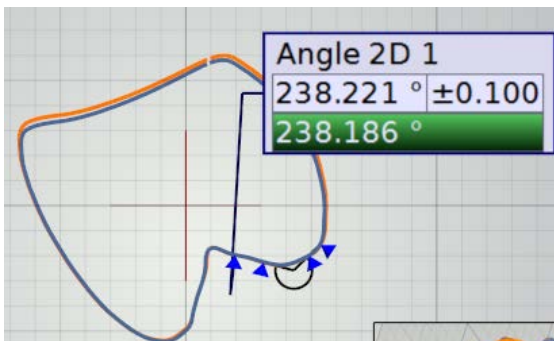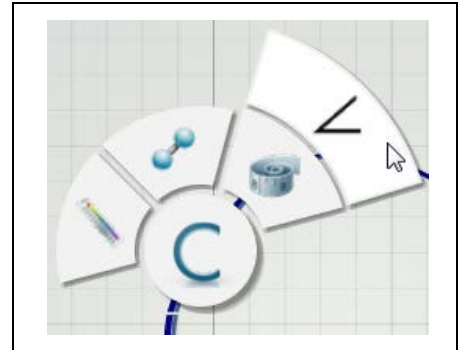

9.4 2D POINT DISTANCE

You can make a **2D Point Distance** measurement between any two given points on the model.

1. Open the 2D Point Distance option

Right click where you wish to place the first point and select **Measure Scan** -> **2D Point Distance**.





2. Set the measurement

Left click to indicate the second point to get a measurement between the two points.

You can move the points around by dragging the arrows with the mouse thereby altering the measurement.

You can also edit the annotation.

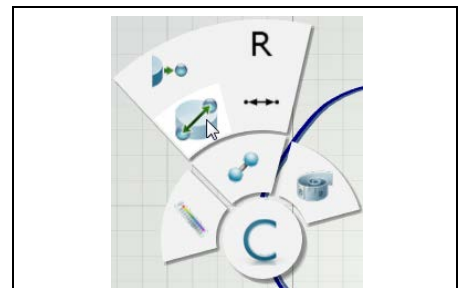

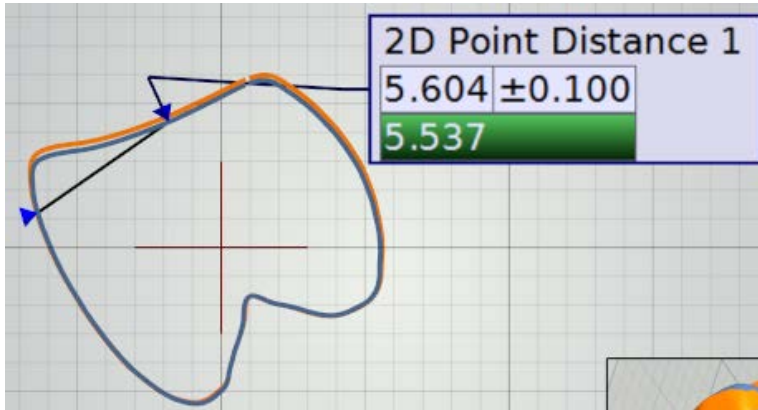

9.5 RADIUS 2D

1. Open the Radius 2D option


To measure a 2D radius, right-click the 2D cross-section line of your model and select *Measure Scan* -> *Radius 2D*.



R

2. Set the measurement


The 2D radius measurement requires at least 3 points. A maximum of 10 points is possible. To finish adding points before 10 points are placed - end the measurement with a double-click.

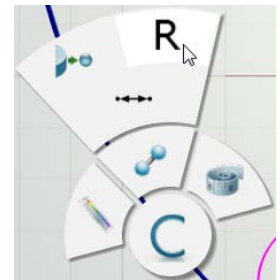

The measurement is the radius of the best-fit circle through the created points.

The position of the points can be adjusted manually.



You can edit the annotation name.

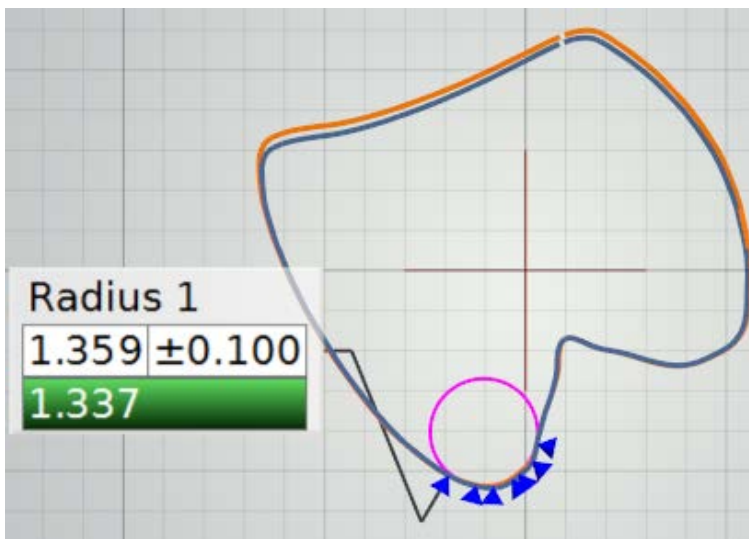

9.6 THICKNESS 2D

The **2D thickness** is the distance between a placed point and the closest opposite point.

Right click the 2D cross-section line of your model and select **Measure Scan**  -> **Thickness 2D** . The opposite point is automatically found and updated when the main point is moved.

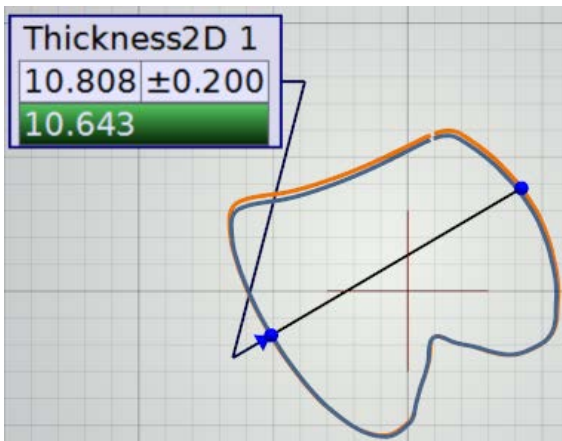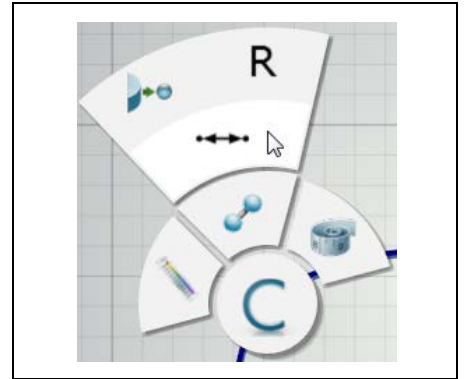

9.7 WHISKER PLOT 2D

The Point difference 2D is the distance between a reference model and a scan at the selected point.


To measure the 2D point difference, right click the 2D cross-section line of your mode and select **Measure Scan** -> **Point Difference 2D**.



The Whisker plot is a 2D difference map of deviations between the reference model and a scan of the current slice.

To open this option right-click on the model and select the **Whisker Plot 2D** button.



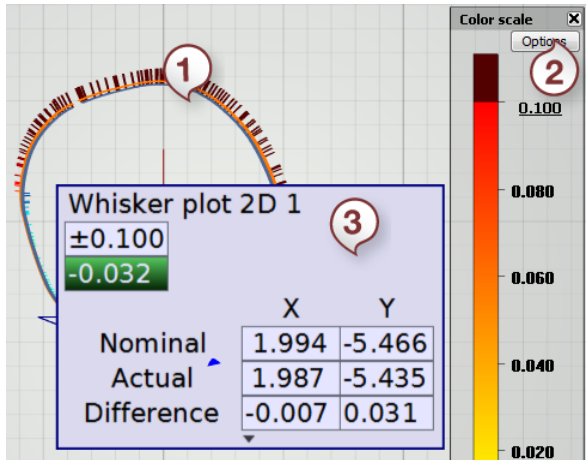


1. Model with the whisker plot measurement
2. Color scale window
3. Whisker plot annotation

1. A model with the whisker plot measurement.

An exaggerated vector is projected out in the normal direction for each point in the slice. Its color indicates the deviation.

2. Color scale window.

Click on the **Options** button in the corner of a **Color scale** window to open its menu. Please see the section The [Difference Map Menu](#) for more information.

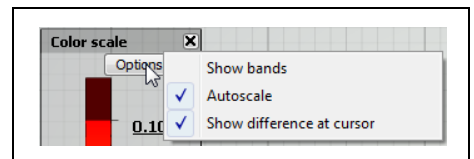

3. Whisker plot annotation

The annotation displays the following information:

- **Nominal** - coordinates of the annotation control point in the X and Y directions.
- **Actual** - coordinates of the closest point on scan in the X and Y directions.
- **Difference** - difference between the nominal and actual values in each direction.

Click the arrow at the bottom of the annotation to view the following:

- **Scale Factor** - information about the enlargement of vectors for a better visualization.
- **Use threshold** - an option to turn the threshold on/off (True/False).
- **Threshold** - limits the length of vectors to the indicated number.

9.8 POINT DIFFERENCE 2D


On setting the measurement you can observe the results in the Annotation. If you wish to see the point difference in X and Y coordinates, you can click on the black arrow to expand the annotation window.


Ref. - the coordinates of the point on a reference model.

Meas. - the coordinates of the point on the scan.

Delta (Δ) - the difference between Ref. and Meas.

You can move the annotation (hence change the coordinates) by clicking and dragging the blue arrows.


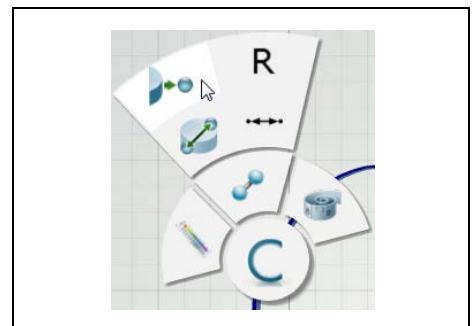


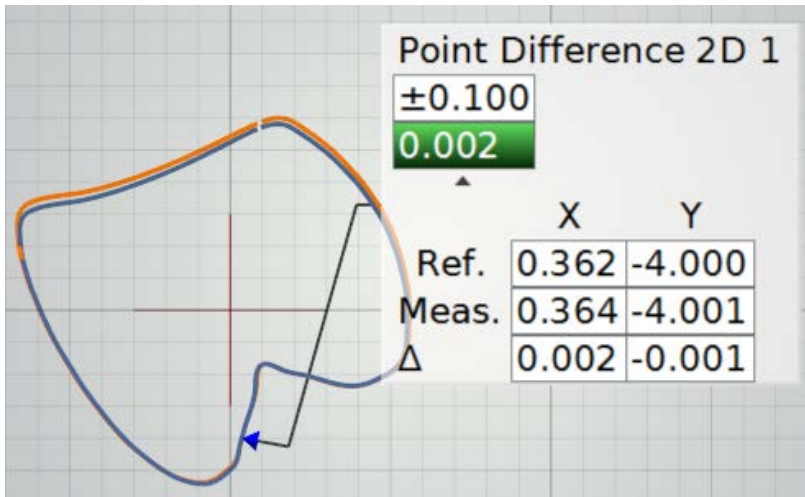

9.9 COPY 2D SECTION AS DXF FILE


To copy and save a 2D section as a DXF file, go to the *Main menu*->*File*->*Save scan slice as...*

In the appeared *Save slice* window select the target folder, type in the file name and click **Save**.

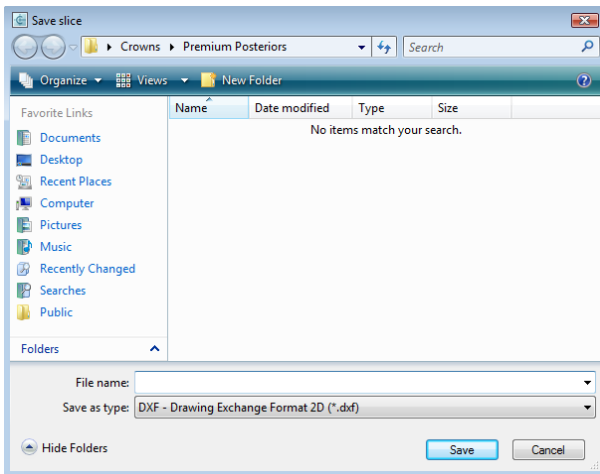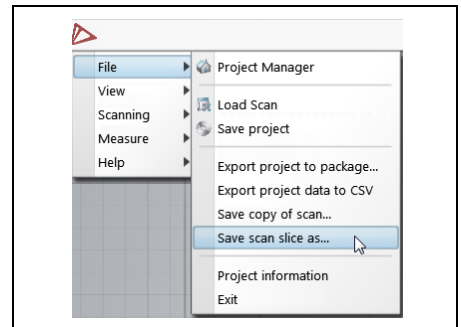

10 VISUALIZATION AND E-LEARNING TOOLS

The software is designed to convey the concepts of measurements through "learning-by-doing". Several visual settings and effects contribute to the learning experience. Most of the options can be activated from the Visualization toolbar, while those that are used less frequently are located under the *Main menu* ->*View*->*Options*.

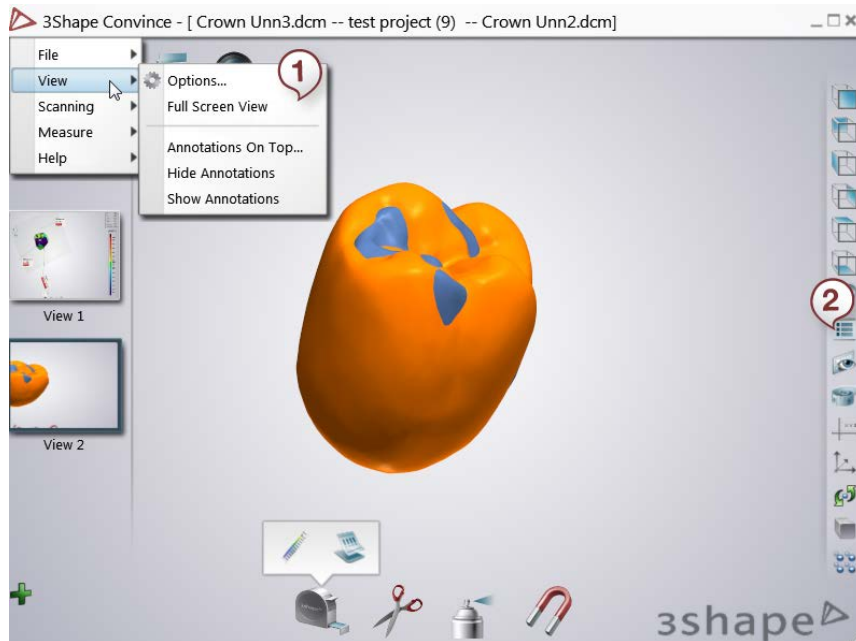

1. Options menu
2. Visualization toolbar


10.1 SHOW LIST OF MEASUREMENTS

The **Show List of Measurements**  button in the Visualization toolbar shows/hides the list of measurements available within the project.

The measurements appear under the corresponding expandable classifications in the list. The right-click menu contains the following options:


- Visible** - makes the annotation visible/invisible.
- Rebuild** - refreshes the measurements.
- Delete** - removes the measurement.

For further information see the section [List of Measurements](#).

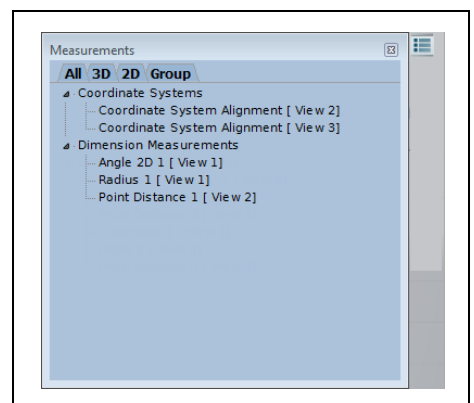


10.2 ANNOTATION VISIBILITY SETTINGS

You can change the visibility settings of the annotations by either clicking the **Change Annotation visibility settings** button in the Visualization toolbar or selecting the **Main menu->View** and choosing the **Show/Hide Annotations** option in the appeared menu.

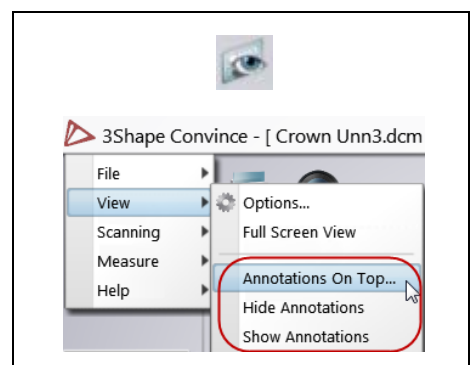

The image below illustrates a reference model and a scan with measurements when the **Show Annotations** option is enabled and **Annotations On Top** is disabled.

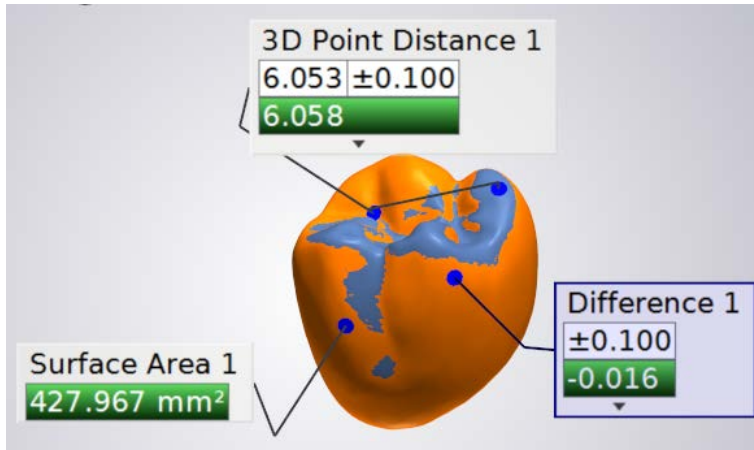


The **Lock Annotations** option fixates position of the annotations on the screen.

10.3 SHOW/HIDE RULER

You can enable the measurement ruler on the screen by clicking the **Show/Hide ruler** button in the Visualization toolbar.




The ruler can be moved with the cursor to a desired position while pressing the left mouse button. The ruler scale is updated when the part is zoomed in or out.

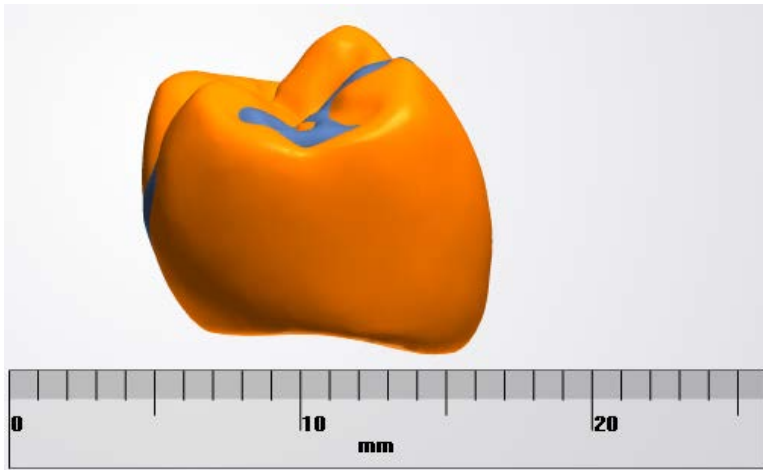

10.4 CHANGE CENTER OF ROTATION


You can change the rotation center of the model by selecting the **Change Center of Rotation** button on the Visualization toolbar. This is purely for facilitating your work with the software – it has no impact on any measurement.

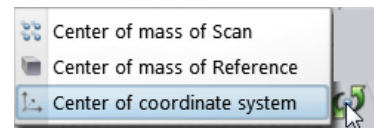

10.5 REFERENCE MODEL VISIBILITY SETTINGS



You can adjust the visibility of the reference model by clicking the **Change Reference**

Model Visibility Settings  button in the Visualization toolbar and selected the desired visualization option from available. Please see the [Scan Visibility Settings](#) section for more information.

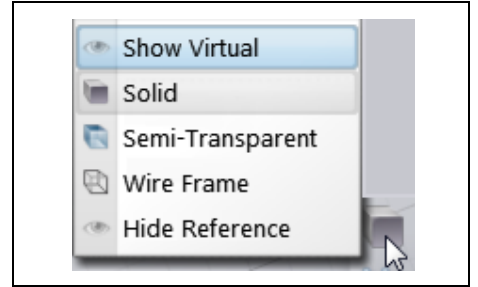

10.6 SCAN VISIBILITY SETTINGS

It is possible to set the scan visibility by clicking the **Change Scan Visibility Settings**  button in the Visualization toolbar and selected the desired visualization option from available.

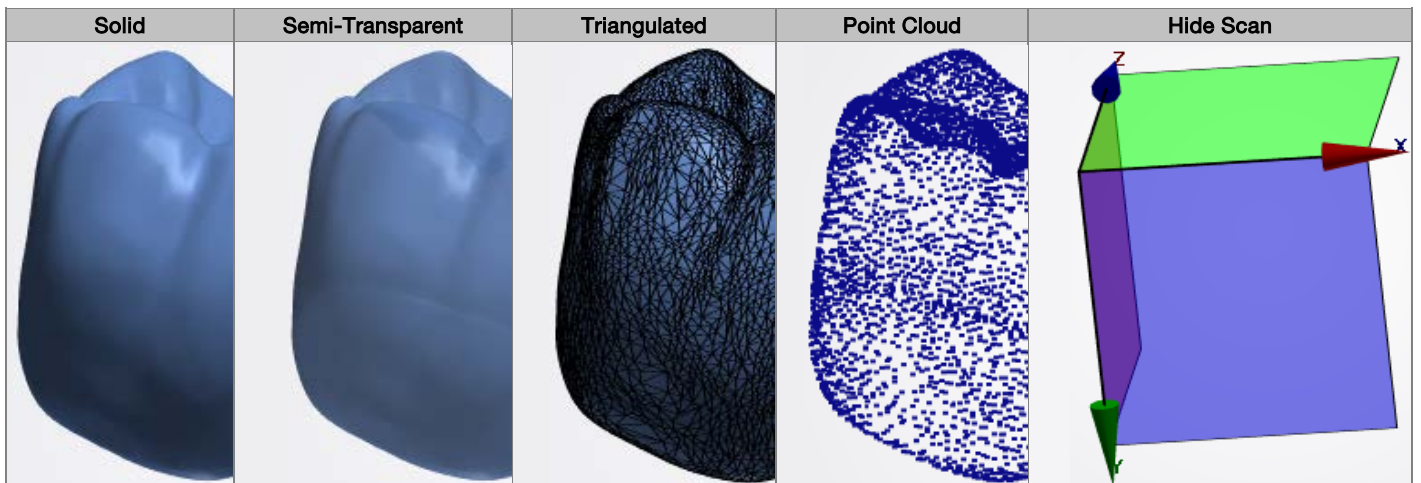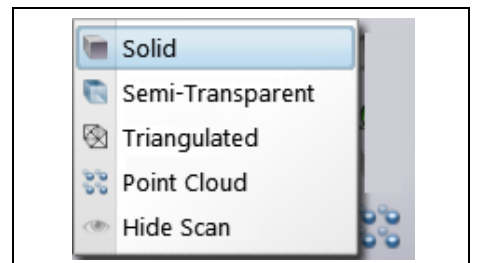


11 CUSTOM SETTINGS MENU

The customization of various Convince™ Standard settings allows you to customize the design and change the default settings to match your needs.

Go to the **Main Menu**  -> **View**-> **Options** to open the **Customization** window that includes four tabs with the customizing options:

- Visual
- Popup Menu
- Advanced
- Reports

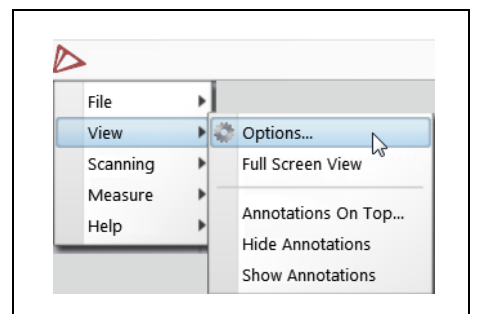

• Visual

This tab allows you to customize the visual program settings.

Color Gradient Background in 3D Scene - allows you to make the background of the main window white (unselected) or grey (selected).

Default Tolerance - sets parameters for Dimensions (**Size**) and other measurements (**Measurement**).


Annotation Font Size - allows you to set the font size for annotations.

Diff map max value - defines the max scaling value for the Difference map.

Diff map min value - defines the min scaling value for the Difference map.


Measurement Arrow Size - drag the slide bar to change the size of the measurement arrows.

The **Reset to Defaults** button resets all the settings in the menu to the default ones.

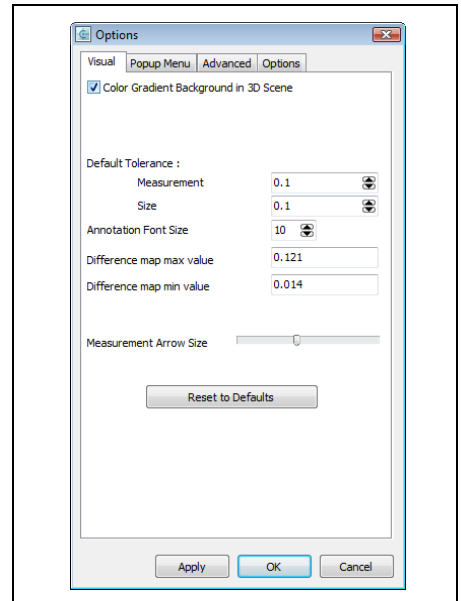

• Popup menu

This tab allows you to choose between the [Round and the System](#) menu types.

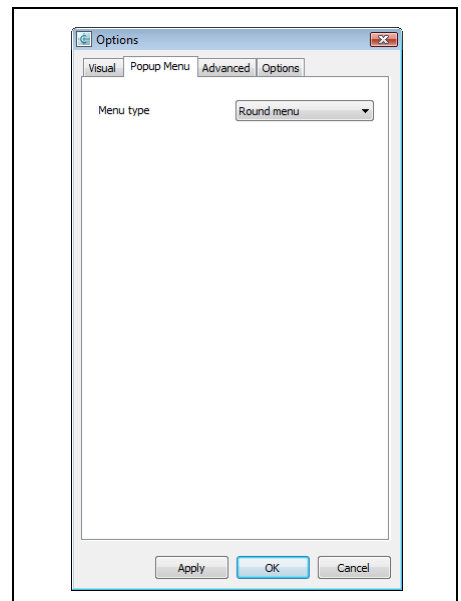

• Advanced


This tab allows you to customize the additional features of the program.

Delete old raw scan data (DCM files) - mark this checkbox if you want to automatically delete the raw scan data that is older than the amount of days specified in **More than...days** ago. Select the **Created** or **Accessed** radio button to delete the data that was either created or accessed more than the specified amount of days ago.

Display language - allows you to select the language for the program.

Units system - allows you to select the **Metric** or **Imperial** system for your measurements.

Dongle Server Service Address - the address of the computer, in which the dongle is inserted.

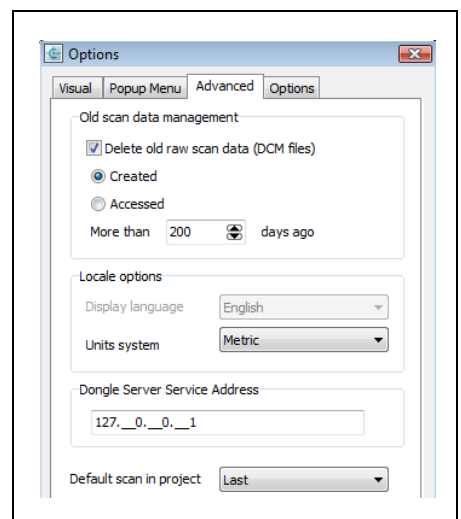


• Options

This tab allows you to load the image of your logo to be displayed in the report.


For more information please see the section [Report](#).

Click **Apply** to view changes. Click **OK** to save the result and close the *Customization* window.

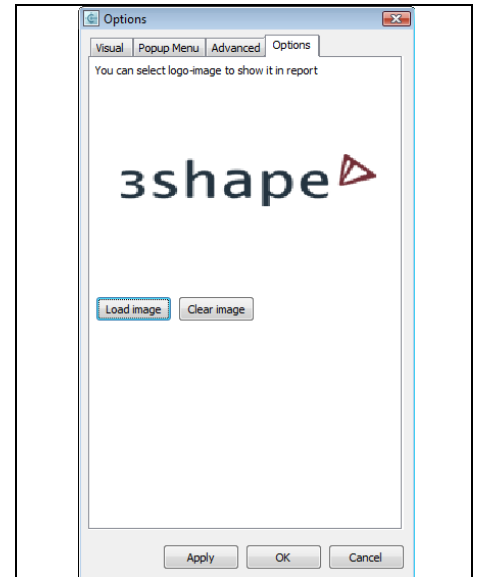

12 CONVINCE COMPONENTS

The main window of Convince™ Standard comprises the following toolbars and menus:

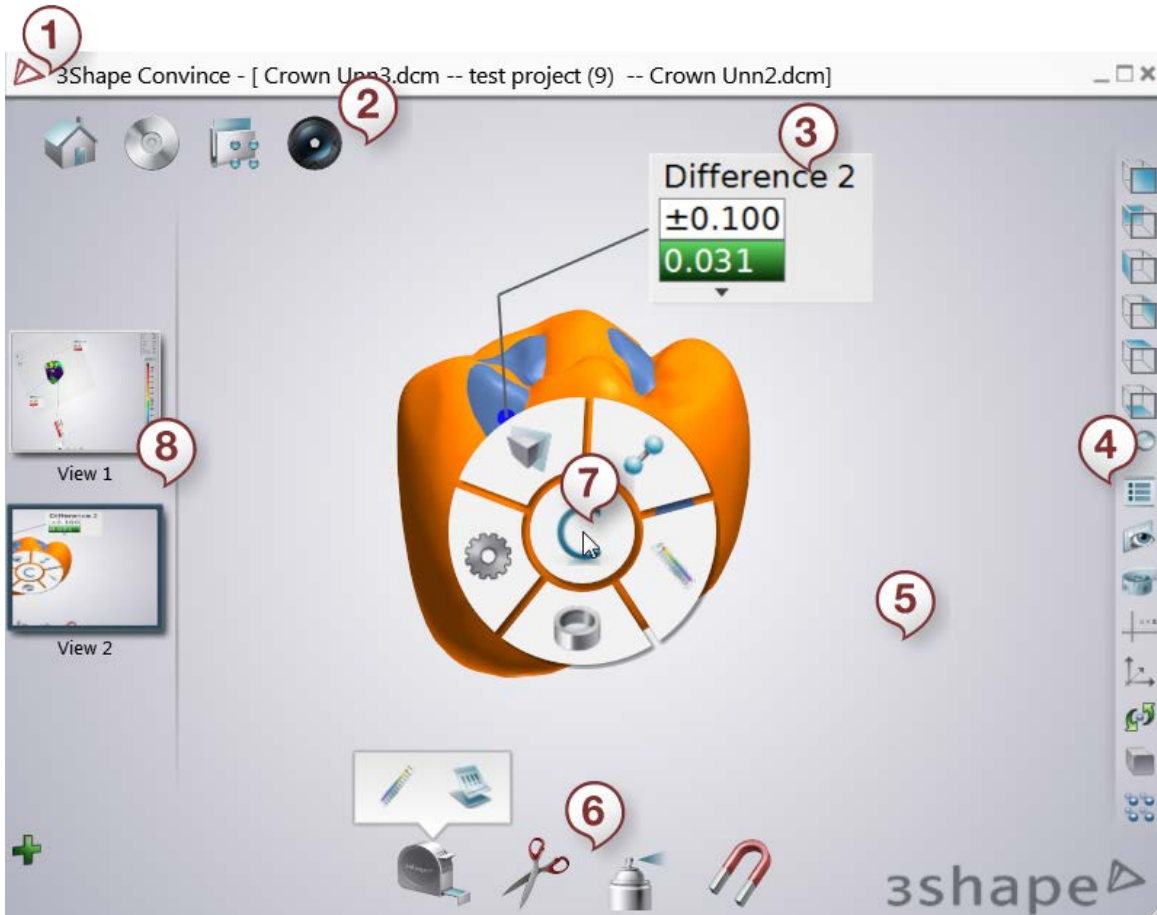

1. Main menu
2. Main toolbar
3. Annotation
4. Visualization toolbar

5. 3D scene
6. Features toolbar
7. Right-click menu
8. Views

1. The **Main Menu** - Click on the **Main Menu**  button in the upper left corner of the main window to open the following options:

Project Manager - Brings you to the Project Manager window (view more in the section [Project Manager](#)).

Load Reference - Loads a reference model (see more in Load a Reference).

Load Scan - Loads a scan (see more in the section [Load a Scan](#)).


Save Project - Saves the current project.

Export project to package - Exports the current project in the .3mx file format (view more in the section [Export and Import of Projects](#)).

Save copy of scan - Saves a copy of the currently used scan in the .stl, .pts, .nms file formats, to the location of your choice.

Project information - Displays information about the current project (reference model, Scan, Created by etc.).

Exit - Closes Convince™ Standard.

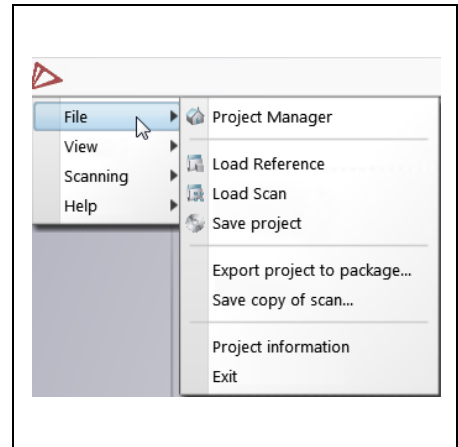


Options - Opens the *Customization* window with options for customizing your program settings (view the section Custom Settings Menu).

Full Screen View - Unfolds the main window of Convince™ Standard to full view.

Annotations On Top - Fixes the annotation so it is always on top of the model while it is being rotated.

Hide Annotation - Makes an annotation invisible on the screen (view the section [Annotation Visibility Settings](#)).


Show Annotation - Makes an annotation visible on the screen (view the section [Annotation Visibility Settings](#)).

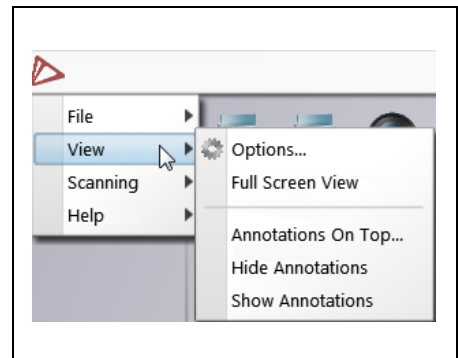

Scanner settings - Opens the window with options for setting up a scanner.


Plan and Execute Scanning - Opens the scan planning and execution window. (view the sections [Scan Planning](#) and [Scan Execution](#)).

Test Scanner Accuracy - Allows you to test the accuracy of your scanner (see more in [Test Scanner Accuracy](#) section).

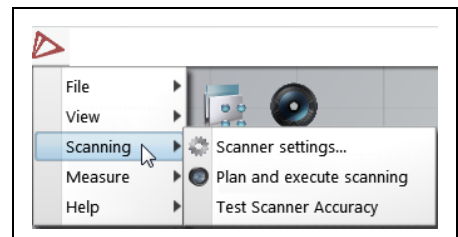

Difference Map - Creates a Difference map in the current view (view the section [Difference Map](#)).


Generate Report - Creates an inspection report (view the section [Report](#)).

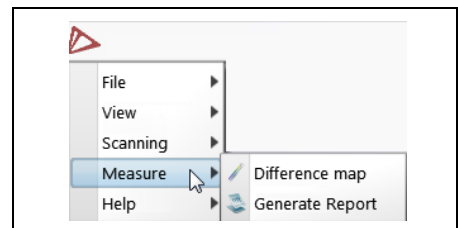

About - Opens the window with information about 3Shape Convince™ Standard (version, expiration date etc.).

Users Guide - Opens the user manual.

Send Bug Report - Opens the Bug report form, allowing to easily report bugs to 3Shape.

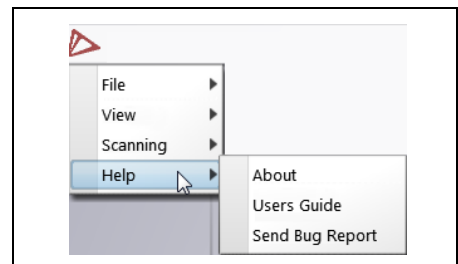

2. **Main toolbar** - contains up to five main program options:

Project Manager - Opens the *Project Manager* window.



Save Project - Saves the current project.



Load Reference - Opens a reference model.



Load Scan - Opens a scan.



Open Scan Mode - Opens the scan planning and execution window.



Note that the appearance of the Main toolbar depends on the project you are currently working on (e.g. with or without a reference model) and the user's rights.

3. **An Annotation** - Displays the measurement that has been taken (e.g. Point Difference).

4. **The Visualization Toolbar** - Contains the options that help you view the model better, or from different perspectives:

View - Each button switches the view between different predefined view directions: **Front**, **Rear**, **Left**, **Right**, **Top** and **Bottom**.



Zoom All - Zooms the model to fit the screen.



Show List of Measurements - Shows all the measurements taken for the model.



Change Annotation Visibility Settings - Provides a list of on/off annotation visibility settings: **Lock Annotations**, **Annotations on Top** and **Show/Hide Annotations**.



Show/Hide Ruler - Provides the user with a ruler on the screen which can be moved around to different locations.



Show/Hide Cursor 3D Coordinates - Shows the 3D coordinates of a point under the cursor.



Show/Hide Origin - Displays a small coordinate system indicating origin and XYZ axes in the 3D scene.



Change center of rotation - Provides the list of the options for specifying the center of rotation for your model: **Center of mass of Scan**, **Center of mass of a reference model** and **Center of Coordinate System**.



Change reference model Visibility Settings - Provides a list of settings for the visibility of a reference model: **Show Virtual**, **Solid**, **Semi-Transparent**, **Wire Frame** and **Hide a reference model**.



Change Scan Visibility Settings - Provides a list of settings for the visibility of a scan: **Solid**, **Semi-Transparent**, **Triangulated**, **Point Cloud** and **Hide Scan**.



5. The 3D Scene - Allows you to navigate in the 3D scene with the mouse or using the keyboard as described in details in chapter The 3D Scene.

6. The Features toolbar - Contains the options for editing, aligning etc. the model:

Inspect - Allows you to create and edit measurements. When selected, displays the balloon with two options: **Difference Map** and **Generate Report** (see the section [Difference Map](#) and [Report](#)).



Trim Scan - Allows you to delete selected areas on a scan (see the section [Trim a Scan](#)).



Offset/scale scan - Adds/removes an equal amount of data to/from the entire scan, making up for the scan spray or polishing (see the section [Offset/scale scan](#)).



Register - Allows you to register a scan to a reference model (see the section [Register Scan](#) to a reference model).



7. The Right-Click Menu - Right-click on the selected reference model element to open the popup menu and choose the desired annotation that will be reflected on the model or the screen (see the section [Right-Click Menu](#)).

8. The Views - It is possible to create and switch between several views of the 3D scene, which helps to better organize the inspection (see the section [Views](#)).

12.1 3D SCENE

In the 3D scene you can navigate either with the mouse or the keyboard:

Action	Mouse	Keyboard
Move cursor	Move	Arrow keys
Rotate model	Move with the right button down	Arrow keys + CTRL
Move (pan) view	Move with the wheel down	Arrow keys + ALT
Zoom in/out	Rotate the wheel	Arrows up/down + SHIFT
Bring up a popup menu	Click on the right button	



The Visualization toolbar contains the options for some standard perspectives and standard zoom (see the section [Convince Components](#)).

The right-click menu automatically adjusts to what is clicked on, listing only relevant and legal choices. You can navigate within the menu (if the menu type **System** and not **Round** is selected) in a standard way: arrow keys to move up/down, ESC to quit, and ENTER to select.

12.2 RIGHT-CLICK MENU


With the right-click on a model you open a popup menu that comprises measurements relevant for the current model. The right-click menu can be configured in the *Main Menu*

→ *View* → *Options* → *Popup Menu* (see the image below):

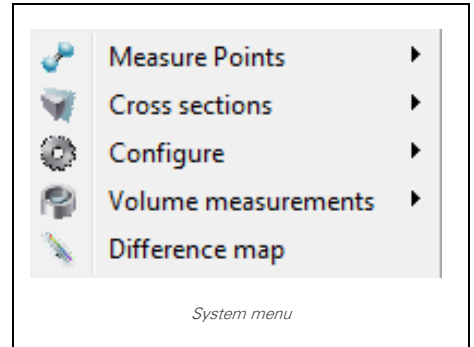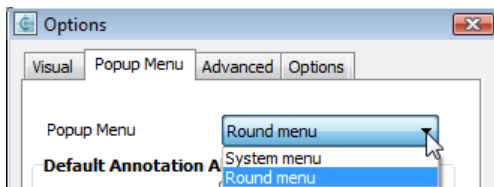

You can change the appearance of the menu by choosing either **System** or **Round menu** type in the he Popup Menu tab.

For more information on the right-click menu customization, see the section [The Custom Settings Menu](#).

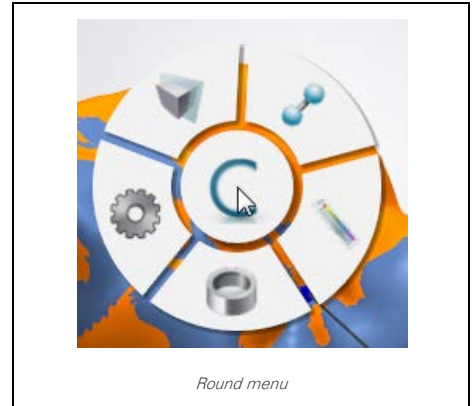



13 SELECTION TOOLBAR

The **Selection** toolbar contains the **Brush**, **Automatic** and **Mark** tools to work on the loaded scan.

1. Brush tool

You can select the surface of the scan by "painting" it.

The selection tool looks like a black circle and the selected area becomes colored in **light blue**.

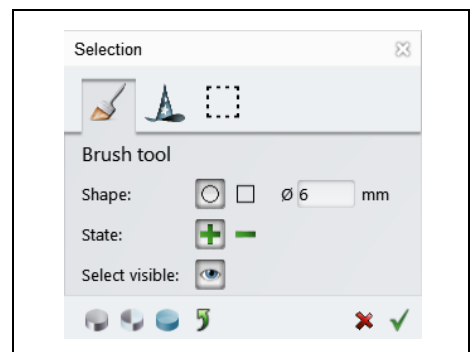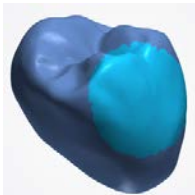

There are several adjustments you can make while using the **Brush** tool:

Shape - select the **shape** of the brush and set its diameter in the provided field.

State - choose whether to add  or remove from  the selected area.

Select visible - a setting to select only the visible surfaces otherwise, the invisible are selected as well.

2. Automatic tool




The software automatically marks the indicated with the cursor surface based on the set selections.

Shape – The automatic tool can be set to select either the indicated plane  or a curved surface .

State – The option to add  to or remove  from the selected area. Alternatively you can click the star  button to select a single surface deleting the other selections.

Sensitivity – with the sliding bar, you can regulate the sensitivity of the automatic selection tool.

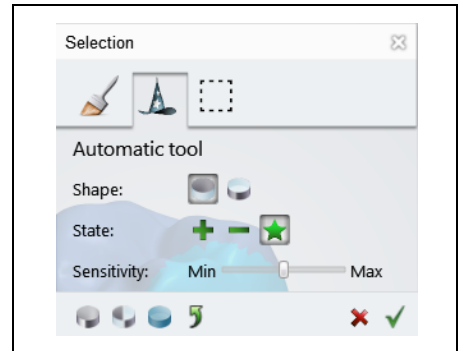

3. Mark tool

The surface area can also be marked with the **Mark** tool:


 
Shape – square, circle or polygon marking method can be chosen:

 - With the square option, indicate a corner, draw the square over the area to mark and release the left mouse button.

 - With the circle option, indicate the circle center, extend the circle to the desired diameter and release the left mouse button.

 - With the polygon option, indicate the first point to start a polygon then continue indicating points to form a polygon of a desired shape. The last point should merge with the first one to close the polygon.

The **State** and the **Select visible** options are similar to the described in the **Brush tool** section.

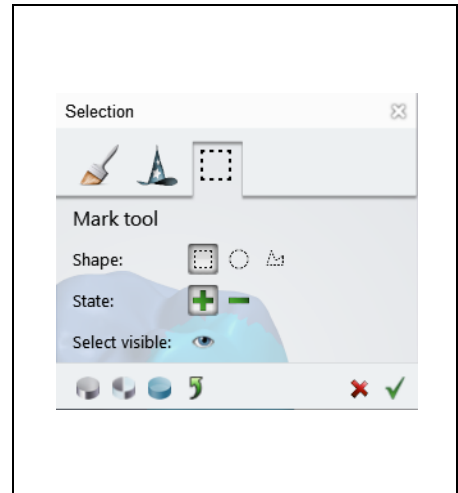

The **Selection** toolbar at the bottom contains the following buttons:


- **Select all**  - selects all the surfaces.
- **Invert Selection button**  - inverts the marking on the scan.
- **Clear All selections**  - removes all the selections.
- **Undo last action**  - returns the previous step.
- **Cancel**  - is used to cancel the operation and close the **Selection** toolbar.
- **OK**  - confirms the changes made.

14 INSTALLATION


The Installation and upgrade of 3Shape Convince™ Standard is done using the 3Shape Installer. The installation process is fairly intuitive and user friendly. Follow the steps below to successfully install Convince™ Standard on your computer:

1. Launch the 3Shape Installer.


2. Choose the installation language and click **Continue**.

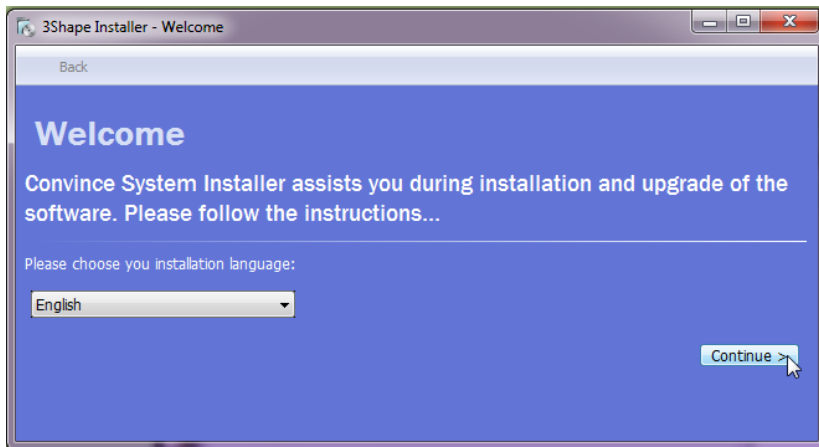


3. View the components that are included into the Convince™ Standard Installer. Click **Next** to continue.

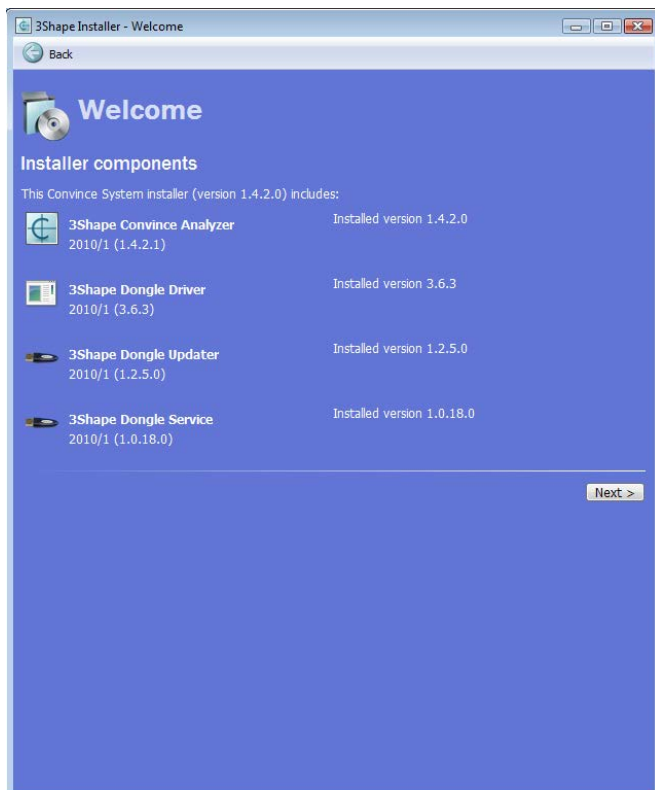


4: View information on the full installation packages for Convince™ Standard. Select the **Install missing components only** checkbox to install only those elements, that your system is lacking.

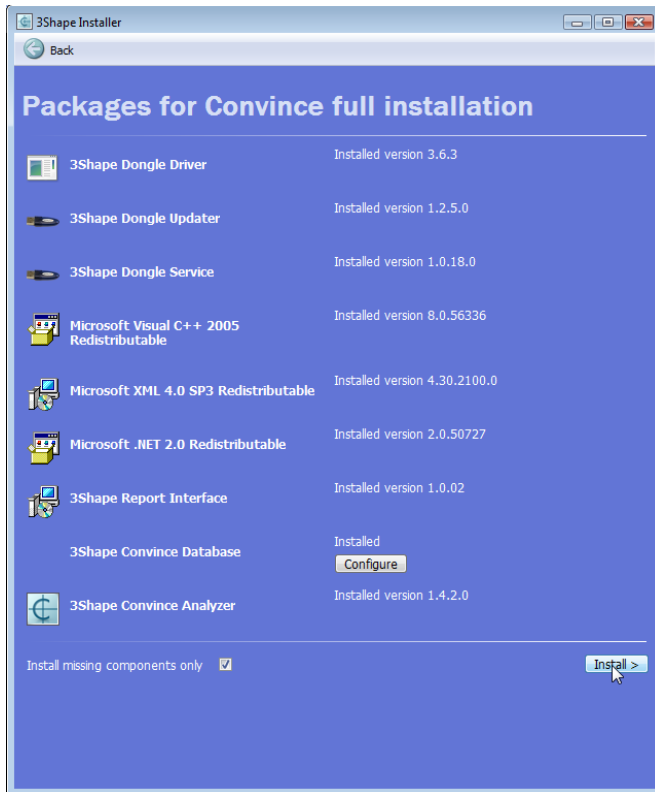


If you need to configure the 3Shape Convince Database, click the **Configure** button. There you can choose between the existing database or create a new one. The connection to the database is checked with the **Test Connection** button. Once completed, click the **OK** button to save the changes and return to the previous page.

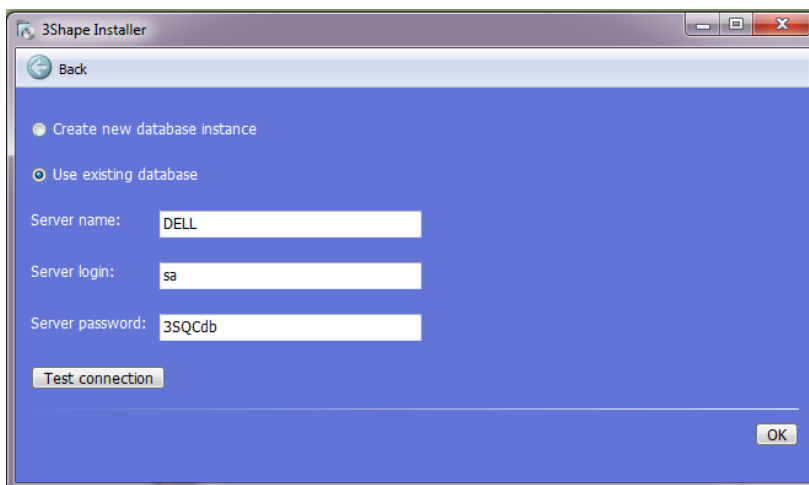

5: Choose the time to restart your computer to finish installing the important updates.

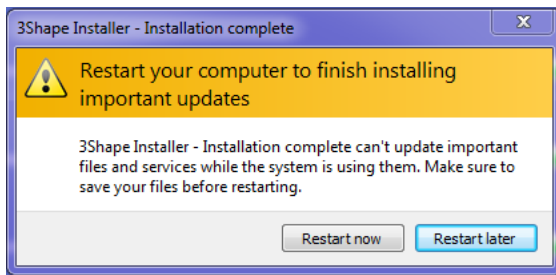


6: Click Finish to complete installation. If the Show log file checkbox is selected, the installation log file will appear on the screen on exiting the installer.

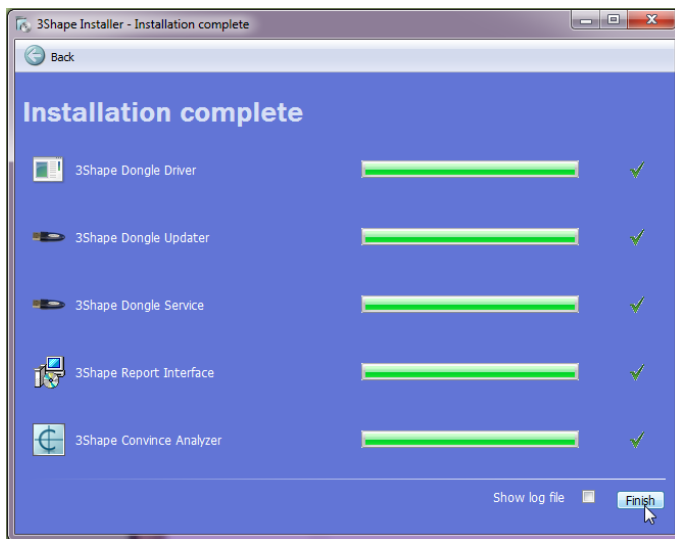

Note, you need a USB key (dongle) and a valid dongle license to run Convince.




To update/renew the dongle license, use the **3Shape Dongle Updater**.

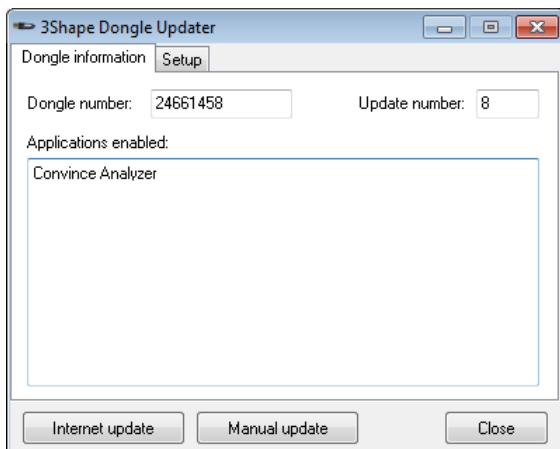

Launch the 3Shape Dongle Updater and view the information on the inserted dongle under the **Dongle information** tab: **Dongle Number**, **Number of Updates** and **Applications Enabled**.

Dongle update can be done either manually or via the internet by clicking the corresponding buttons.


For the manual update, supply your dongle number to a 3Shape representative and receive a dongle update code that you need to fill in the **Manual Update** form:

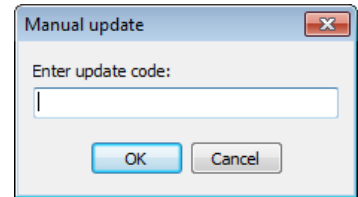A small dialog box titled "Manual update" with a close button (X) in the top right corner. It contains a label "Enter update code:" followed by a single-line text input field. At the bottom, there are two buttons: "OK" and "Cancel".

To update the dongle using the Internet, click on the **Internet update** button. If no updates are available, the "*No dongle updates available*" message will appear.

The default license update **Server URL** can be viewed and tested in the *Setup* window.

Click the **Test Connection** button to verify the connection to the server. The "*Communication Successful*" message appears as confirmation of a positive result.

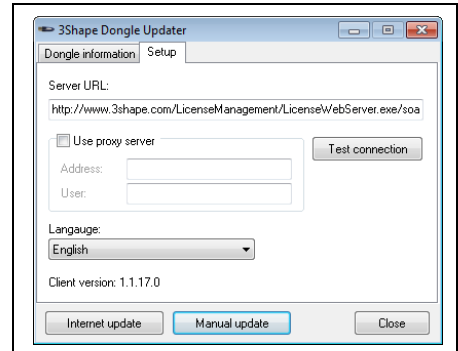The "3Shape Dongle Updater" window with the "Setup" tab selected. It shows the "Server URL:" field with the text "http://www.3shape.com/LicenseManagement/LicenseWebServer.exe/soa". Below this is a checkbox for "Use proxy server" which is unchecked, followed by "Address:" and "User:" input fields. To the right of these fields is a "Test connection" button. Below the proxy section is a "Language:" dropdown menu currently set to "English". At the bottom left, it says "Client version: 1.1.17.0". At the very bottom, there are three buttons: "Internet update", "Manual update", and "Close".

Technology designed the way you work

3Shape A/S
Holmens Kanal 7
DK-1060 Copenhagen K
Denmark
Phone: +45 70 27 26 20

3Shape, Inc.
571 Central Ave., Suite 109
New Providence, New Jersey 07974
USA
Phone: +1 908 867 0144

3Shape, Asia
Room 906, Building A of Eton Plaza
No.69, Dongfang Road
200120 Shanghai, China
Phone: +86 21 5835 2281

3shape.com