 


 
Navigation

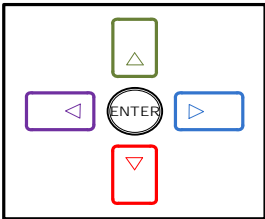

Navigate the menus and change settings by pressing a combination of various arrow buttons and the Enter button. **Push the:**

- Enter button to select and/or exit value editing.
- Up or Down button to move among entries.
- Right or Left button to move among value fields.
- Left button to return to the Home screen.


Enter the security Password

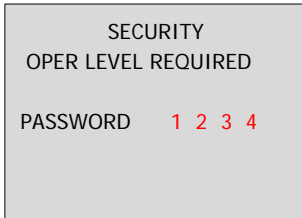

Press the right button then Press the up or down button to select the first digit and the right button to jump to an other column to increase the number by one digit. When finish, press to access to main menu.

NOTE: Access to various functions may require a password..... 1 2 3 4

To adjust program schedules

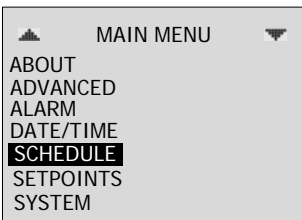

From the main menu, Press the down button to move to the **schedule** and than press enter to see the programmed schedule



To select the desired schedule, press:


- Up/Down to move among entries.
- Enter to select.
- Left to go back one page.



- To enter weekly schedules for occupied (ON) and unoccupied (OFF) times, press:
- Right/Left to move among days and Enter to select.
- Up/Down to move among entries and Enter to select and Edit.
- Right/Left to move among value fields.



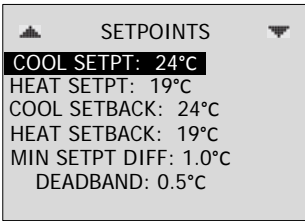


- Up/Down to increment/decrement value.
- Enter to exit value editing.
- Left to move back to days or back one page.

To adjust the setpoints




In the setpoints menu, setpoints and setbacks for various values are set (The current room temperature setpoint can also be manually changed from the Home menu.)






To adjust the setpoints, press:

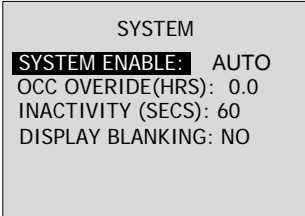- Up/Down   to move among entries.
- Enter  to select.
- Up/Down   to increment/decrement value.


System Setup






 



To adjust the system configuration values, such as system enable (auto, off heat, or cool), occupancy override time, and display inactivity time-out:

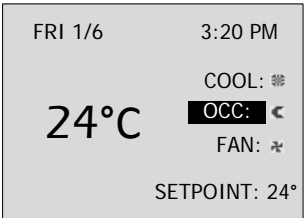
- Up/Down   to move among entries.
- Enter  to select.
- Up/Down   to increment/decrement value.

Occupancy & override mode




The occupancy and override mode: The “OCC” icon shows a sun when in **Occupied** mode and a quarter moon when in **Unoccupied** mode.

To select the occupancy mode press left button  than press the down button  to “occ” and press enter . When the override occupancy appears on the screen, press enter  again to enable or disable the override mode by pressing the up or down button   and than press enter button  to record.



Press left button  to turn to the home screen.

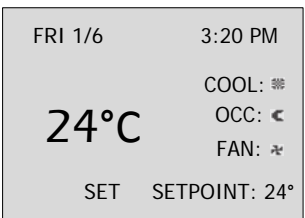Room temperature & setpoint adjustment




Room Temp. Setpoint Adjustment:



From the temperature display screen,


Press the Up  or Down  arrow button **once** to view the existing setpoint.

To **temporarily** change the setpoint, press the Up  or Down  arrow button repeatedly until the desired setting is displayed and press Enter .

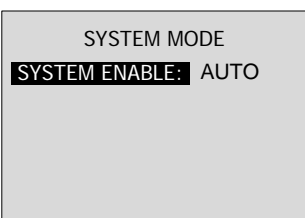System mode



Press the left Button  and than Press enter button .

Enter the **security Password**, when finish press enter button again  to access to **system mode**.

You can set the system on:

- SYSTEM ENABLE: AUTO
- SYSTEM ENABLE: OFF
- SYSTEM ENABLE: COOLING
- SYSTEM ENABLE: HEATING