



NAV-TV
Indulge your Imagination

Tooki Porsche

Bluetooth Phone Integration For Porsche PCM2

User Manual



NTV-KIT010/147
NTV-COC009

MOST[®]

 **Bluetooth**[®]

Welcome to Tooki !

Tooki by NAV-TV is a Bluetooth phone integration system designed specifically for your phone-ready Porsche vehicle.

When used properly, Tooki establishes a wireless Bluetooth link between the Porsche PCM radio and your mobile phone, resulting in a hands-free operation of your phone.

Loaded with key features such as Phone book synchronization (phone dependent), Privacy mode, Radio keypad dial / call / hang up, and noise-canceling technology, Tooki allows for a safer driving experience while keeping the driver connected to his wireless world.





The Tooki is an extremely sophisticated product, therefore it is strongly advised that you make yourself familiar with your Tooki system and read the instructions in this manual before operating the system.

 
For more information, visit www.nav-tv.com

Legend

Tooki is designed to work with a radio that has a factory SIM card based GSM phone option rather than Bluetooth. As such, certain functions displayed on the radio are not supported by Tooki. Please note that if your radio says “Insert SIM card” or “No card” then you have the factory phone option installed and not the Tooki.

The following legend will ease your reading this manual:

-  Radio operation, button press
-  Rotate, then press the radio selector knob
-  Mobile phone operation, such as pairing
-  Operation not supported by Tooki

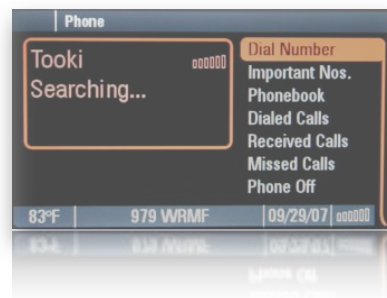



1. Press **TEL** on PCM Radio.

2. **“Tooki Searching”** indicates no phone connected.



3. Start the pairing procedure on your mobile phone. Make sure the Bluetooth feature is turned on. Consult your phone’s manual for phone-specific pairing procedures.


4. Once your mobile phone discovers **Tooki xxxx** (last 4 digits will vary), select and pair **Tooki**.

5. When prompted for a passkey, enter **6888** on your mobile phone.

6. Once pairing is complete, you should see your network provider’s name and signal strength indicator on the PCM Radio.

7. You may pair up to 5 different mobile phones. For information on phone selection, see the CONNECTING section.

8. Note that once a phone is paired, you must allow the Tooki to automatically connect to it. Initiating the connection from the phone will cause unreliable operation.

Note: the following phones require a special pairing code to be dialed from the radio prior to pairing. Please enter the code that matches your phone, then press .



3*330033*1 - Headset profile	3*330033*6 - Samsung E-530, E-720
3*330033*2 - Motorola IDEN 605	3*330033*7 - Samsung Z300, Z500
3*330033*3 - Sagem MyX-8	3*330033*8 - Sony Ericsson K600, K750
3*330033*4 - Samsung A9xx	3*330033*9 - Sony Ericsson P800, P900
3*330033*5 - Samsung D500	3*330033*10 - Windows CE , Mobile


Connecting

If only one phone is paired, Tooki will attempt to connect to this phone as long as the PCM radio is active.

Up to 5 phones may be paired and selected.

If more than one phone is paired, Tooki will attempt to connect to ANY of the paired phones. Last connected phone has a priority over other paired phones, but since different phones may have different Bluetooth latencies, it is hard to predict which phone will be connected if more than one phone is present within range of Tooki. You may manually connect to a paired phone following this procedure:

Selecting a paired phone:

1. Press TEL, Select Phonebook
2. Select the phone you wish to connect. In this example, a Blackberry 8830, NAVTV Corp. and Nav-tv are paired, and we are selecting Nav-tv.
3. Press the  button on the PCM radio.
4. Tooki will display **Dialing: Selecting...** and will attempt to connect to the phone selected. Radio will resume normal operation within a few seconds.



Deleting a paired phone:



1. Highlight (**Phonename**), press in on knob.
2. Highlight **Delete**, then press in on knob again.
3. Turn knob to **Yes**, and press in again to confirm.

NOTE 1: You may need to delete the phone more than once to finalize.

NOTE 2: If the Delete option is grayed out, please *Select* any phone to enable it. (Then *Select (Please Pair)* to restore the list, if necessary.)

    NOTE 3: *If your phone will not connect to the Tooki, it may be because there are too many phones already paired. Delete 1 or more phones and try connecting once more.*

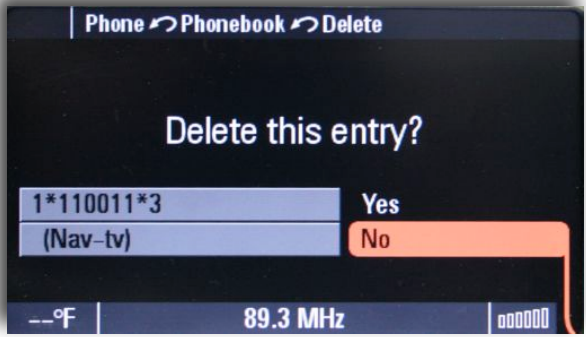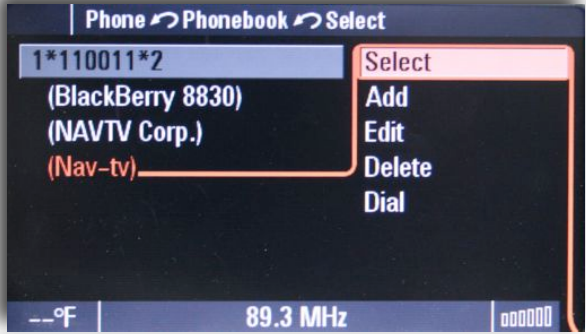

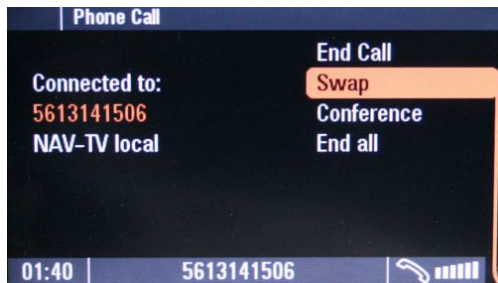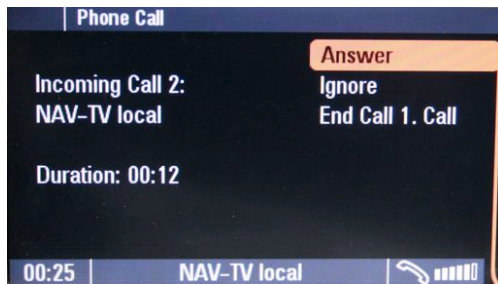

A received call will cause the following:

1. Mute the radio and generate a ring tone.
2. Display **CALL: (Caller)** at the bottom of the screen.
3. Display the Caller ID or caller name if the phone supports those features and phonebook has been transferred.

To answer a call:

1. Press the TALK  button, or
2. Press **Answer** when on TEL menu.




To answer a second call (Call Waiting):

1. Press the TALK  button, or
2. Press **Answer** when on TEL menu.

To switch between 2 calls:

1. Select Swap from the TEL menu.

To end a call:


1. Press the HANGUP  button, or
2. Select **End Call** when on TEL menu.

NOTES:

1. **New Call** and **Hold Call** may not work on all phones.
2. When receiving a second call (**Call Waiting**), if you do not wish to answer, **DO NOT reject (Ignore)** the call, let it continue to ring. Rejecting it will end both calls.

Placing Calls

To place a call:

1. Press **TEL**, then dial a number on the PCM Keypad
2. Press 

Alternatively, You may dial a number by selecting **Dial Number**, then selecting each digit as depicted, followed by selecting **Dial**

 **NOTE:** the **Store** option is not supported.

You may also dial numbers stored under the following:

Dialed Calls

 
 
Received Calls

 
Missed Calls

Pressing  twice will redial the last number.



Most phones allow to dial, answer and end calls via the phone buttons

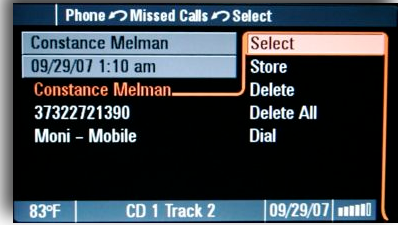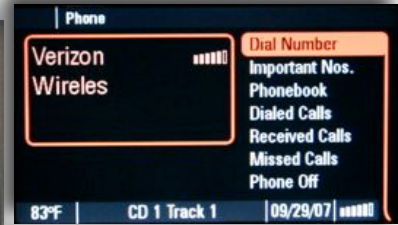

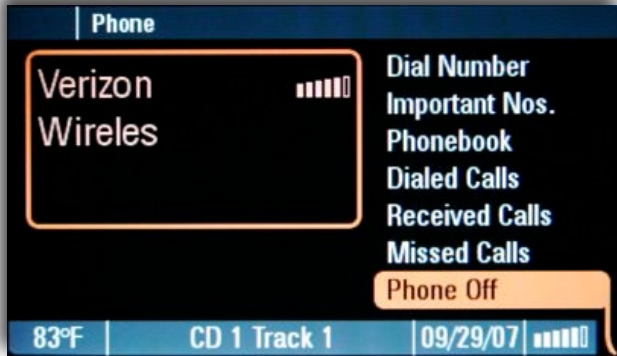

It is often convenient to switch between hands-free operation and normal phone use.

Tooki allows for a quick Privacy Mode:

Press **TEL**, Select **Phone Off**. **Privacy On** is displayed, use your mobile phone as usual.



To switch back to Hands-Free mode:


Press **TEL**, Select **Phone On**.

Phonebook

 
⊗ **NOTE:** The Phonebook feature is not supported by all phones. Please refer to www.nav-tv.com for an up-to-date phone compatibility list and software updates.

 
 
 
The PCM Radio is limited to 255 Phonebook entries!

NOTE: Phonebooks that have a large number of contacts can take quite a long time to synchronize, please be patient. During Phonebook synchronization, attempts to pair or delete a phone will not operate reliably.

1. Press **TEL**, then select **Phonebook**
2. Rotate the knob right or left to select your entry. Quick rotation will result in skipping the search by 25 entries.
3. Press  or select **Dial** to place a call.

⊗ **NOTE:** The Phonebook can not be modified, as it is stored in your phone. The **Add, Edit and Delete** options will **only appear** to work, but no change is actually made to your phone's content. The Phonebook will refresh and revert to the phone's content upon re-connecting.

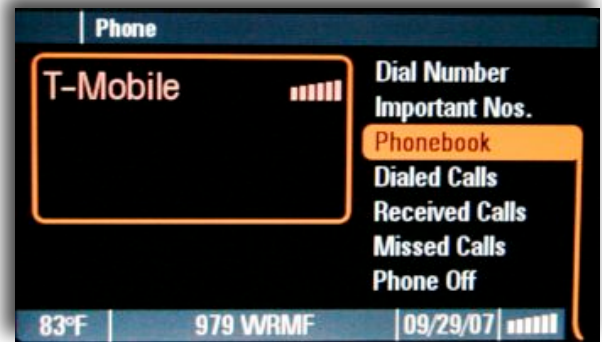

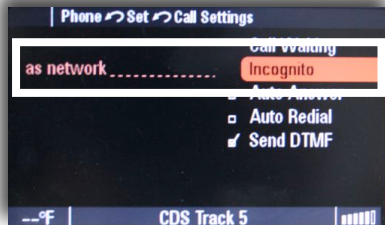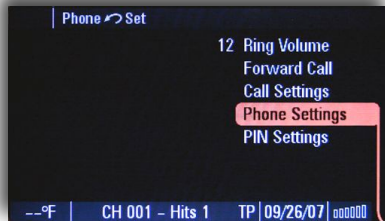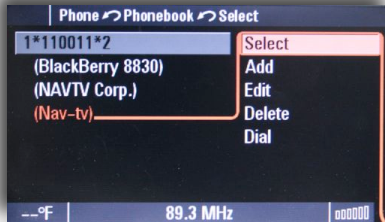

Your PCM radio was not designed for Bluetooth operation, but rather for a SIM based GSM phone module.

Tooki emulates many of the functions supported by the radio. However, certain functions are designed to work only with the factory GSM phone and can not be used by Tooki. Therefore, you would notice some unused menu items.

List of unused menu items:

Store - All changes are void at restart

Hold Call - Works with some phones

New Call - Works with some phones

Add - All changes are void at restart

Edit - All changes are void at restart

Delete - Will remove a phone from the Tooki's list. When used on Phonebook entries, all changes will be void at restart

SMS - Works with some phones

Forward Call - NOT AVAILABLE

PIN Setting - NOT AVAILABLE

Phone Setting - NOT AVAILABLE

IMPORTANT NOTE: Call Settings -> Incognito is a feature only available on some GSM based phones. Setting this feature On will block the display of your phone number to the called party. If the connected phone is not GSM (SIM card) based, you MUST set this to "as network"

Tooki can be updated by the user via a Bluetooth-enabled laptop.

Latest software updates and instructions are available at: www.nav-tv.com

***If you wish to speak to us, please call:
(866) 477-3336***

(When you call, please provide us with the Model and Year of your vehicle, as well as the Make, Model and Provider for your phone to expedite your phone call.)

The screenshot shows the NAV-TV website homepage in a browser window. The browser's address bar displays "http://www.navtvdirect.com/corp/". The website features a dark theme with a navigation menu on the left containing links for COMPANY, PRODUCTS, SERVICES, DOWNLOADS, and CONTACT US. The main content area includes a "WELCOME TO NAV-TV" banner with a "TOOKI" logo, a "FEATURED PRODUCT" section for the "TOOKI Bluetooth System (Porsche)", and "OTHER NAV-TV PRODUCTS" such as "iPod Interface" and "Backup Camera". A sidebar on the right contains contact information for NAV-TV Corp. and a "WHERE TO BUY" section. The footer includes a "NAV-TV NEWSLETTER" sign-up form and a "CONTACT NAV-TV" section with phone and email details.