C. SPECIAL FEATURES

- a. Tare Feature. Press the "AAN/UIT" key (with the item to be tared on the platform) and the display will show "Tarra". The weight will go to zero and the item's or items' weight has been tared. To clear tare, remove the weight. The display will show the negative weight. Press "AAN/UIT" again and the weight will go to zero bringing the scale to its normal display.
- b. The "Gewicht per Gram" key shows the current weight on the platform.
- c. Open the platform to mail "flats" and large envelopes to avoid covering the keyboard and display.

CAUTION: The platform is designed to open ONLY 70 degrees angle so that the piece being weighed is centered over the loadcell. DO NOT FORCE.

D. SPECIAL NOTES

- a. The display may read "FB" for 1-2 seconds upon turn on.
- b. The Scale will display "Overbelast" if any weight over 2000 grams is placed on the platform.

Changes in Postal Rates

The SE2 Holland has an easy to replace Data Memory Chip, which contains all the rates for the basic and add-on services available on the scale. When rates change, a new chip is automatically sent to all registered users with full details of how to remove the existing chip and insert the new one. To ensure that a new chip is received it is ESSENTIAL TO COMPLETE AND RETURN THE ENCLOSED GUARANTEE/REGISTRATION CARD.

Mneopost SE2

SE2 HOLLAND Electronic Postage Computing Scale User's Manual

BASIC SERVICES AVAILABLE

- ? Frankeer Brief (FB)
- ? Postzegel Brief (PB)
- ? Pakket Ger. (PG)
- ? Pakket (P)
- ? Europa Priority (EP)
- ? Europa Standard (ES)

SPECIAL SERVICES AVAILABLE

- ? Aantekenen (1)
- ? Aantek/Verz (2)
- ? Aantek/Waarde (3)
- ? Handtek. Retour / Bericht van Ontvangst (4)
- ? Express (5)

SPECIAL FEATURES

- 1. Tare Upon Turn On (No limit except overload).
- 2. Domed Keyboard for Tactile Response.
- 3. Strain Gage Loadcell Technology.
- 4. Easily Replaceable Plug-in Rate Change Chip.

Serial Number Display:

To display press Pakket Ger./ Pakket while plugging in the adapter. Repeat the process if no Serial no. displayed.

The display will read: Serial Number XXXXXXXX.

BASIC TECHNICAL DETAILS

Maximum Capacity	: 2000 g (Including Tare)
Accuracy	: 1 g
Power Supply	: 9 volt AC adapter
Power Consumption	: Approx. 400mW
Dimensions/Weight	: Overall: 7¾" × 5½" × 2¼"
Platform	: 5" \times 5½" (opens for flats)
Unit Weight	: 1 lb. 2.8 oz.
Packaged Weight	: 2 lbs. 4 oz.

A. START-UP INSTRUCTIONS

- 1. Place the Scale on a flat surface.
- 2. Plug AC adapter (included) into the scale (port at back of unit) and then into standard electrical outlets.
- 3. Press "AAN/UIT" to turn the scale on. The Scale will then go through an electronic self-test for 1-3 seconds. If the Scale is not stable, the display will not change. If excess TARE or other LOAD is being applied, the display will read "Overbelast" until the excess weight is removed. When the Scale has passed its self-test and is ready for weighing, the display will read "FB € 0.00" The Scale is now ready for weighing and calculating postage rates.
 - **NOTE:** Open the platform prior to turning on the Scale (if mailing larger flat items). DO NOT FORCE OPEN PAST ITS DESIGNED ANGLE OF APPROX. 70 DEGREES.
- 4. The weight is displayed on the upper right side of the LCD in grams (" 0 g") while the "**Gewicht per Gram**" key is pressed.

B. POSTAL SELECTIONS



Refer to the keyboard layout above.

1. Frankeer Brief (FB)

The Scale automatically sets up to weigh Frank. Brief after going through its self-test. The display will read 'FB \in 0.00". You may weigh pieces up to 2000 grams (+ TARE) with automatic calculation and display of the postage due.

2. Postzegel Brief (PB)

The "**Frank. Brief/Postz. Brief**" key, toggles between PB and FB. When Postz. Brief is selected, The display will read "PB € 0.00".

3. Pakket Ger. (PG)

4. Pakket (P)

The 'Pakket Ger./ Pakket' key toggles between the two basic services. The display shows the letters shown in parenthesis to indicate that the basic service is currently active.

Special Services Available

While in FB, PB, PG or P mode, the user may press any of the following combinations in the specified order.

The Special Services "Aantekenen", "Express" and "Handtek. – Retour/Bericht Ontvangst" can be activated in a single press of the appropriate key. "Aantek. Verz/Aantek. Waarde" are toggled in pairs of two in a single key. The first press will activate the service specified first while the second press will activate the service indicated later.

Screen Display for: Frank. Postz. Pakket Pakket Brief Brief Ger.

In the following combinations (a,b), the limit is only up to 1000g. When this is exceeded, the display will show "Error".

a. Aantekenen	FB1	PB1			
b. Aantekenen + Handtek.	FB14	PB14			
In the following combinations (c-f), the display flickers.					
c. Aantek/Verz	FB2	PB2	PG2	P2	
d. Aantek/Verz + Handtek.	FB24	PB24	PG24	P24	
e. Aantek/Wrde	FB3	FB3	PG3	P3	
f. Aantek/Wrde + Handtek	FB34	FB34	PG34	P34	

5. Europa Priority (EP)

6. Europa Standard (ES)

The "**Europa Priority/Europa Standard**" key toggles between the two services. The display shows the letters shown in parenthesis to indicate that the basic service is currently active.

Special Services Available

While in EP mode, the user may press any of the following combinations in the specified order.

EP1

EP5

Screen Display for: Priority

- a Aantekenen
- b Aantekenen + Ber. Van Ontv. EP14
- c Express