
# **Donning Personal Protective Equipment (PPE)**


Sentinel XL<sup>TM</sup> HP Clear Hood Powered Air Purifying Respirator (PAPR) System

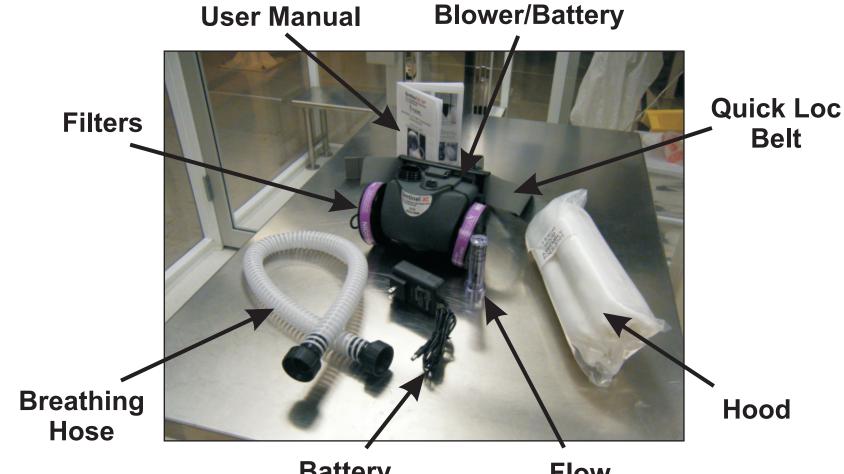

**Battery** Charger

**Flow** Meter



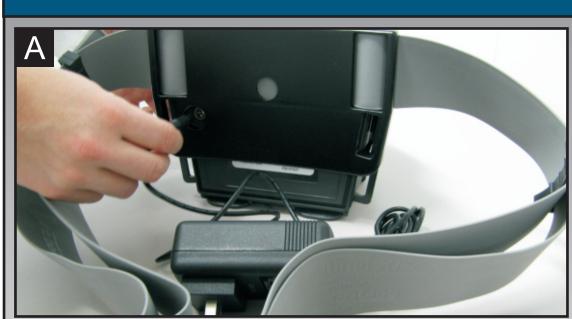


**A.** Plug battery charger into socket at back of the battery pack and connect to an electrical outlet. Charge battery pack for approximately five hours before use. The battery charger LED will flash green when charging is complete.

## **Prepare Filters for Use**



**A.** Remove sealed cap from filters.

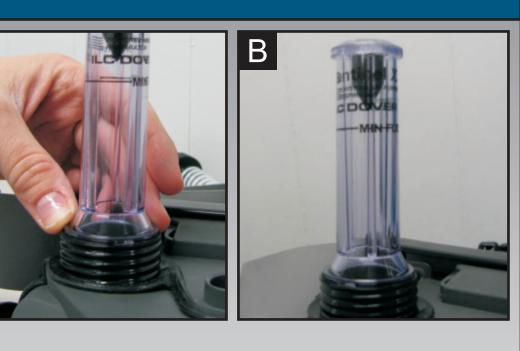

**Check Air Flow** 

- A. Ensure canisters are installed on the blower. Switch blower on. A short beep should sound. Place flow meter in the blower's hose connector.
- **B.** If the upper portion of the black cone is above the indication line on the flow meter, the system is ready for use


# **Attach Breathing Hose**





- A. Screw female hose connector of breathing hose to male connector on blower. Hand tighten.
- B. Screw other end of breathing hose to connector on male connector on head cover. Hand tighten.

## **Donning Blower Unit**

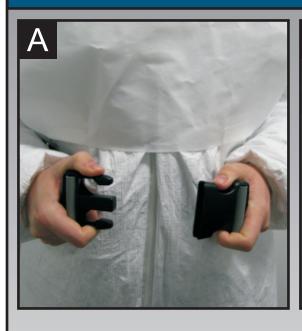




- A. Turn on blower and place waist belt with blower attached around waist.
- B. Snap buckle closed. Adjust waist belt by pulling belt outward until snug.


# **Donning Hood**

Integrated

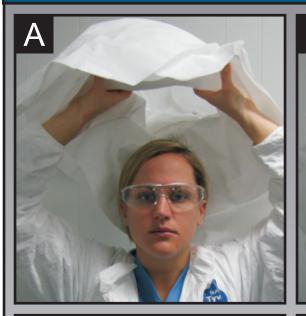





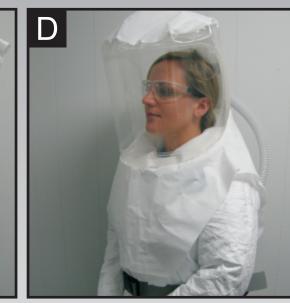

- A. Open Clear Hood opening.
- B. Place over head.
- C. Tuck inner skirts under Tyvek suit. Zip Tyvek suit closed.
- D. Smooth outer skirt in place. Peel back tabs at the inner base of the skirt (2 on front, 2 on back) and press adhesive to the Tyvek Suit.


Note: Refer to Owners' Manual for detailed instructions.

### Filters Replacement



A. After Decon, turn filters counterclockwise. Unscrew filters and discard. Before installing new filter check gasket for any damage.

## **Waist Belt Removal**

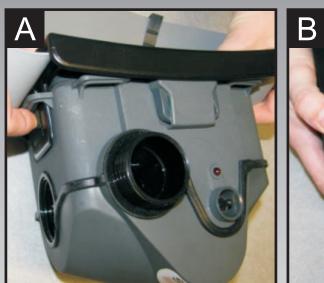



- A. After removing filters, grasp waist belt plate and depress both sides of plate tabs while pulling outward.
- B. Remove waist belt.



### **Turn Blower ON**



**A.** Depress switch on top of blower. A short beep should sound and light the red LED continuously.

Audible beeping and blinking red LED light indicates low battery. Leave contaminated area and recharge.