

the professional  
labeling software

[www.nicelabel.com](http://www.nicelabel.com), [info@nicelabel.com](mailto:info@nicelabel.com)

NiceLabel 

# NiceLabel Express User Guide

English Edition

Rev-0910

© 2009 Euro Plus d.o.o. & Niceware™ International LLC

All rights reserved.

[www.nicelabel.com](http://www.nicelabel.com)



**Head Office**

Euro Plus d.o.o.  
Ulica Lojzeta Hrovata 4c  
SI-4000 Kranj, Slovenia  
tel.: +386 4 280 50 00  
fax: +386 4 233 11 48

[www.europlus.si](http://www.europlus.si)  
[info@europlus.si](mailto:info@europlus.si)



Nice Software. Nice Partner. Nice Value.

**North American Office**

Niceware International, LLC  
10437 Innovation Drive, Ste. 147  
Milwaukee, WI 53226  
Tel.: +1 414 476 6423  
Fax: +1 414 476 7955

[www.nicewareintl.com](http://www.nicewareintl.com)  
[info@nicewareintl.com](mailto:info@nicewareintl.com)

# Table of Contents

<b>Table of Contents</b> .....	<b>2</b>
<b>Introduction</b> .....	<b>6</b>
Welcome to NiceLabel.....	6
Contents of the Package.....	6
About this Manual.....	6
About this Manual.....	6
Software Restrictions.....	7
Typographical Conventions.....	7
Product Overview.....	7
NiceLabel Software Products.....	7
NiceLabel Express.....	8
NiceLabel Pro.....	8
NiceLabel Suite.....	8
Pocket NiceLabel.....	9
NiceLabel Pocket PC Designer.....	9
NiceLabel Print Center.....	9
NiceWatch Enterprise.....	9
NiceLabel SDK.....	10
NiceLabel WebSDK.....	10
<b>Installation and Activation</b> .....	<b>11</b>
System and Software Requirements.....	11
Single User Edition.....	11
Installing Software.....	11
Installing Software.....	11
Run START.EXE.....	11
Close All Software Applications.....	12
Define Setup Options.....	12
Install Printer Driver.....	12
Install Printer Driver.....	12
Printer installation within software installation.....	12
Printer Installation Using the Printer Installation Wizard.....	13
Printer Installation Using the Windows Add Printer Wizard.....	13
Activating Software.....	14
Activating Software.....	14
Activate Software with a Hardware Key.....	15
Activate Single User Edition.....	16
Move the Software License to Another Computer.....	19
Installing Upgrades.....	19
Overview.....	19
Install Minor Version Upgrade.....	20
Install Major Version Upgrade.....	20
Install Edition Upgrade.....	21
Activating Upgrades.....	21
Activate Minor Version Upgrade.....	21
Activate Major Version Upgrade.....	21
Activate Edition Upgrade.....	23

Limitations of the Demo Mode .....	23
Registering the Software .....	23
<b>Setting Up the Software .....</b>	<b>24</b>
User Interface .....	24
Main Window.....	24
Mouse Wheel support .....	24
Shortcuts.....	25
Using the Keyboard and Mouse Effectively .....	26
System folder .....	27
Welcome Wizard .....	27
Use Project Folders.....	27
<b>Designing Labels .....</b>	<b>29</b>
Using Label Setup Wizard.....	29
Using Label Setup Wizard .....	29
Selecting Printer .....	29
Stock.....	30
Defining the Page Size .....	31
Selecting Label Orientation.....	32
Defining Label Dimensions .....	32
Designing a Basic Label .....	33
Overview .....	33
Create a Basic Label.....	34
Create a New Label .....	34
Select a Printer.....	34
Define Label and Page Dimensions.....	35
Enter Non-Changing Text .....	37
Insert Bar Codes .....	39
Insert Pictures .....	40
Save a Label .....	41
Use Alignment Tools.....	41
Use Drawing Tools.....	42
Add Variable Fields .....	42
Overview .....	42
Create Keyboard Entry Variable Fields.....	43
Create Serialized Data Variable Fields (Counters).....	44
Create Date and Time Variable Fields.....	44
Use Prefix or Suffix Options .....	45
Change Printer Settings .....	45
Change Common Printer Settings.....	45
Change Dithering Options.....	46
Using Toolbars .....	47
Using Standard Toolbar .....	47
Using Toolbox.....	48
Using Text Toolbar .....	48
Using Design Toolbar .....	49
Working with Objects.....	49
Defining Objects .....	49
Defining Text Object.....	49
Defining Bar Code Object.....	49
Defining Picture Object.....	50
Defining Rectangle Object .....	50
Defining Line Object.....	50

## Table of Contents

Defining Ellipse Object .....	51
Defining Inverse Object.....	51
Using Text Wizard .....	52
Text Wizard.....	52
Text Wizard - Choosing Variable Text.....	53
Text Wizard - Keyboard Input.....	53
Text Wizard - Counter.....	54
Text Wizard - Counter Continuation .....	55
Text Wizard - Date Field .....	56
Text Wizard - Time Field .....	56
Text Wizard - Database .....	57
Text Wizard - Prefix and Suffix .....	58
Using Bar Code Wizard .....	60
Bar Code Wizard .....	60
Bar Code Wizard - Choosing Variable Bar Code.....	60
Bar Code Wizard - Keyboard Input.....	61
Bar Code Wizard - Counter .....	61
Text Wizard - Counter Continuation .....	61
Bar Code Wizard - Date Field .....	62
Bar Code Wizard - Time Field .....	62
Bar Code Wizard - Database .....	62
Bar Code Wizard - Prefix and Suffix.....	62
Using EAN.UCC 128 Wizard .....	63
Using EAN.UCC 128 Wizard.....	63
Step 1: Choosing the application identifier.....	63
Step 2: Application Identifier Input Type.....	65
Step 3: Entering the value for the Application Identifier .....	65
Calculating Check Digit .....	67
Defining New Variable.....	67
Step 4: List of selected application identifiers .....	68
Selecting Bar Code Type .....	69
Settings for Advanced Bar Codes.....	69
EAN.UCC 128 Bar Code.....	69
PDF 417 2D Code.....	70
DataMatrix Bar Code.....	70
MaxiCode 2D Code .....	71
Edit Bar Code Dialog Box.....	71
General Tab .....	72
Check Digit Tab .....	73
Human Readable Tab .....	74
Details Tab.....	75
Supported Bar Code Types.....	76
Selecting Objects.....	77
Editing Objects.....	77
Moving Objects.....	77
Aligning Objects .....	77
Resizing Objects.....	78
Rotating Label.....	78
Rotating Objects.....	79
Supported Graphics Formats .....	79
Working with Pictures.....	80
Working with Variable Data.....	80
Dynamic Data Overview.....	80
Working with Databases .....	80
Using Data from the Databases.....	81

Database Wizard .....	81
Using Database Wizard .....	81
Selecting Database File .....	82
Selecting Desired Fields .....	83
Selecting Which Records will be Printed .....	84
Selecting Variable Quantity from the Database Field .....	85
Adding the Fields to the Label.....	85
Link Label to Text Databases.....	86
Overview .....	86
Connect to a Database .....	86
Format the Data with the Text File Wizard .....	87
Place Database Fields on a Label .....	89
Use Print Preview to Select Data an View a Label.....	90
Print a Label .....	92
Using Text File Wizard.....	93
Text File Wizard.....	93
Choosing Data Type .....	93
Setting the Fields .....	94
Formatting the Fields.....	96
Available Date Formats.....	96
Available Time Formats.....	97
Using Contents Mask .....	98
<b>Printing and Previewing Labels .....</b>	<b>99</b>
Previewing Pictures .....	99
Preview and Print a Label.....	99
Optimize the Printing Speed.....	100
<b>Technical Support.....</b>	<b>101</b>
Online Support.....	101
Contact Information.....	101
<b>Glossary of Terms.....</b>	<b>103</b>

# Introduction

---

## Welcome to NiceLabel

NiceLabel is a family of professional labeling software products that brings a complete bar code printing solution and RFID Smart Label printing to desktop, mobile and enterprise users. NiceLabel offers an easy-to-use interface and meets any label design and printing requirement for efficient label printing solutions to users in retail, logistics, health care, chemical, automotive and other industries. The main product lines include NiceLabel Suite, NiceLabel Pro, and NiceLabel Express.

NiceLabel can be used with any 32-bit or 64-bit Windows operating system: Windows 2000, Windows XP, Windows Server 2003 and Windows Vista.

The latest software is available for free download on the NiceLabel website at [www.nicelabel.com](http://www.nicelabel.com).

---

## Contents of the Package

Before starting the installation of the NiceLabel labeling software check the contents of the package to ensure it is complete. The package must include:

- NiceLabelCD
- Installation Guide
- Quick Start Guide
- Software key, or optionally a hardware key (not available with all editions)

If any of the mentioned items are missing, please contact your software vendor immediately for package replacement.

---

## About this Manual

### About this Manual

The User Guide helps you design and print labels quickly.

The User Guide contains the following sections:

**Introduction:** This chapter will introduce you to NiceLabel software.

**Installation and Activation:** Learn how to install and activate the labeling software.

**Setting up NiceLabel Software:** Learn how to set up and customize software to your preferences.

**Designing Labels:** Learn how to create labels. You should refer to this chapter regularly while designing labels, until you have completely familiarized yourself with the commands. By using the information contained in this chapter, you will be very quickly able to use labeling software efficiently.

**Printing and Previewing Labels:** Learn how to print and preview labels.

**Technical Support:** Contacting technical support.

### Software Restrictions

All features explained in the Quick Start Guide are available in the NiceLabel Suite edition. However, some features are not available in the NiceLabel Pro or NiceLabel Express editions. Sections discussing features not available with NiceLabel Pro or NiceLabel Express will display an alert icon.

### Typographical Conventions

Text that appears in **bold** refers to menu names and buttons like the **OK** button.

Text that appears in *italic* refers to options, confirming actions like *Read only* and locations like *Folder*.

Text enclosed in <Less-Than and Greater-Than signs> refers to keys from the desktop PC keyboard like <Enter>.

Variables are enclosed in [brackets] like [variable].

## Product Overview

### NiceLabel Software Products

NiceLabel is a family of professional labeling software products that brings a complete bar code printing solution and RFID Smart Label printing to desktop, mobile and enterprise users. Software offers an easy-to-use interface and meets any label design and printing requirement for efficient label printing solutions to users in retail, logistics, healthcare, chemical, automotive and other industries.

NiceLabel family of products offers the following:

- **Standard Series**
  - Represent the most complete range of “standard” labeling software
  - Easy to use but offers powerful functions expected from advanced label designers
  - Unique selling points: NiceForm, NiceWatch& Pocket NiceLabel
  - Tight control over printing process – NicePrintQueue & bi-directional drivers, reprint functionality
- **Enterprise Series** (Products for enterprises and toughest demands)
- NiceLabel Print Center
- NiceWatch Enterprise
- **Developer Series** (Integration solution for software publisher - "print engine")

- **NiceLabel SDK:** SDK for software publishers, who need label printing capabilities in their software. NiceLabel SDK can be embedded in existing information systems or existing applications to provide support for label printing. NiceLabel SDK provides all label printing functionality of the software.
- **NiceLabel PocketSDK**
- **NiceLabel WebSDK**

### **NiceLabel Express**

Wizard-based software meeting basic bar code labeling needs. The entry-level software includes many design elements of the NiceLabel Pro edition with the emphasis on simplified user interaction.

### **NiceLabel Pro**

Full-featured software designed for professional label design and printing, including complete database support and ActiveX integration possibilities. A wide range of features and options makes NiceLabel Pro a perfect and easy-to-use tool for any labeling requirement.

NiceLabel Pro includes the following modules:

- **NiceLabel Pro:** Main application for label design and printing.
- **NiceMemMaster:** Download fonts and graphics to the computer's memory card for optimized label printing.
- **NiceData:** Manage your databases.

NiceLabel Pro is available in Print Only edition as well.

### **NiceLabel Suite**

NiceLabel Suite is a complete software solution for any kind of label design and print requirement. Multiple connectivity options allow users to perform stand-alone printing or integrate label printing into any network environment.

NiceLabel Suite offers interactive label printing capabilities such as integrating label printing into existing applications (ActiveX) or non-programming embedding of label printing to existing systems (NiceWatch).

NiceLabel Suite includes the following programs:

- **NiceLabel Pro:** Main application for label design and printing.
- **NiceForm:** Create your own custom designed data-entry applications without requiring any programming skills.
- **NiceWatch:** Integrate and automate label printing to any existing information system.
- **NiceMemMaster:** Download fonts and graphics to the printer's internal memory or memory card for optimized label printing.
- **NiceData:** Manage your databases.
- **NicePrint:** Manage fast and easy label printing.
- **NicePrintQueue:** manage your print jobs.



NiceLabel Suite is available in Print Only edition as well.

For detailed information about a particular program please refer to User Guide, available on the product CD and web site.

### **Pocket NiceLabel**

Pocket NiceLabel is a program package for Windows CE that brings the power of label printing to portable Windows CE computers (Windows Mobile Device).

### **NiceLabel Pocket PC Designer**

NiceLabel Pocket PC Designer is a software package for desktop Windows computers that brings the power of label and form design to Windows mobile devices. After you have designed the required labels on the desktop PC, synchronize the labels with the Windows mobile device and print them from the Windows mobile device.

### **NiceLabel Print Center**

NiceLabel Print Center is enterprise-level labeling solution with centralized control over all clients in the network. The enterprise edition manages the printing process centrally while label design and printing occurs locally on the client computers hosting NiceLabel Suite.

The NiceLabel Print Center software performs the following:

- Centralized print and event logging.
- Centralized control over printers and print queues (print jobs).
- Centralized logging of executed NiceWatch actions.
- Issuing alerts through email, NetSend, Instant Messenger, RSS feed, SMS or pager.
- Flexible licensing for clients.

The NiceLabel Print Center is comprised of two main components:

- NiceLabelEnterprise Print Manager, installed on server,
- NiceLabel Suite, installed on client computers.

The NiceLabel Print Center edition can be used with 32-bit and 64-bit Windows 2000 and Windows 2003 server families.

### **NiceWatch Enterprise**

Centralized label printing middleware software that integrates the label printing process into enterprise-level products, such as Enterprise Resource Planning (ERP) systems, Warehouse Management Systems (WHS) and others.

The NiceWatch Enterprise performs the following:

- Multi-threaded label printing execution to ensure fast and stable operation in heavy-load environments (where a lot of print requests happen simultaneously).
- Remote administration to view list of triggers, start and stop triggers.
- Centralized logging of executed actions.

NiceWatch Enterprise includes the following modules:

- **NiceWatch Server**
- **Enterprise Print Manager (EPM)**

NiceWatch Enterprise also includes one NiceLabel Pro license. You will use NiceLabel Pro for label design.

The NiceWatch Server edition can be used with 32-bit and 64-bit Windows 2000 and Windows 2003 server families.

### **NiceLabel SDK**

NiceLabel SDK is an ActiveX integrator edition of software developed for software publishers who need label printing capabilities in their software. NiceLabel SDK can be embedded in existing information systems or existing applications to provide support for label printing. NiceLabel SDK provides all label printing functionality of the software.

### **NiceLabel WebSDK**

NiceLabel WebSDK is the label printing solution for web applications. Similar to NiceLabel SDK it is developed for software publishers who integrate label printing functionality into their web applications.

# Installation and Activation

---

## System and Software Requirements

### Single User Edition

To run the program you need at least the following:

- Pentium based computer with at least 128 MB of free RAM
- One of the 32-bit or 64-bit Windows operating systems: Windows 2000, XP, 2003 and Vista
- Hard disk with 75 to 250 MB of free disk space (depending on the installation options)
- CD-ROM drive
- Support for OLE DB database drivers. Recent Windows operating systems have included OLE DB database drivers. If your operation system does not have the database support, the installation wizard will prompt you to install it.
- Administrator rights to the local computer during installation

---

## Installing Software

### Installing Software

When you put the product CD in your CD-ROM drive, the installation/demonstration program will start automatically. You can browse the directory of the CD, look at the brochures and technical documentation, sample files and other documents.

**Note:**

**If you are using Windows 2000, XP or 2003, you have to log on with Administrator rights to be able to perform installation.**

### Run **START.EXE**

Use the installation wizard to install the labeling software on your desktop PC. To install the labeling software, do the following:

1. Put the product CD in your CD-ROM drive. An installation window will open automatically.

**Note:**

If the installation wizard does not start automatically, go to the main CD directory of your product CD and double-click on the file **START.EXE**.

2. Click on **Install**. A new window will open showing all available software editions.
3. Click on the software edition you want to install. Follow the prompts.

**Note:**

Make sure to select the appropriate installation type in the installation wizard. The same installation wizard is used for all software editions.

**Close All Software Applications**

To ensure complete installation of the labeling software, close all open software applications before you start installing the labeling software.

**Define Setup Options**

You can select the components of the selected software edition that you want to install. You can choose among the following three types of installations:

- **Full Installation** - installs all software components in all available languages.
- **Compact Installation** - installs only minimal set of components required for software to work correctly. Help and sample files are not installed.
- **Custom Installation** – gives you the option to select individual components for installation.

To continue installation, do the following:

1. Click on the **Next** button.
2. Specify the program group you want to use for the labeling software.
3. Specify if shortcuts to labeling software should be created on the desktop or in Quick Launch area.
4. Click on the **Install** button to finish the installation.
5. The Start menu in your Windows will show a new program group for the labeling software that contains shortcuts for all applications.

**Install Printer Driver**

**Install Printer Driver**

You can use the labeling software to design and print labels to standard office printers (laser, inkjet or matrix) or to professional label printers (thermal printers). If you own a thermal printer, you have to install the appropriate printer driver before you can print with the label printer. You will find NiceDrivers for all major thermal printer brands on the product CD and on the product website.

You can install a printer driver for your thermal printer in the following three ways:

- Install within the labeling software installation.
- Use the Printer Installation Wizard.
- Use the Windows Add Printer Wizard.

**Printer installation within software installation**

To continue installing the NiceDriver after setup has finished the labeling software installation, do the following:

1. Select the option Install printer driver.

2. Click on the **Finish** button.
3. Printer Installation Wizard will open.
4. Select your printer from the list. Click on the **Next** button.
5. Select the port where you have connected your printer and click on the **Finish** button.

**Note:**

This type of printer installation is available only when running installation from the product CD.

## Printer Installation Using the Printer Installation Wizard

1. Put the product CD in your CD-ROM drive. The main installation application should start automatically. If not, start Windows Explorer, browse to the CD and double click on the file **START.EXE**.
2. Click on **Installation**. A new window will open showing all software editions and printer drivers.
3. Click on **NiceDrivers**. The printer installation wizard will start.
4. Select your printer from the list. Click on the **Next** button.
5. Select the port where you have connected your printer and click on the **Finish** button.

**Note:**

If you have downloaded the installation for NiceDriver from the product web site, run the downloaded executable file and follow the steps four (4) and five (5).

## Printer Installation Using the Windows Add Printer Wizard

1. Open **Control Panel** from Settings option in Start menu.
2. Open Printers (Printers and Faxes) and select **Add a Printer**.
3. Follow the Add Printer Wizard prompts. The actual steps vary depending on the version of your Windows operating system. It is only important to click on the **Have disk** button in the step where you can select printer manufacturer and model.
4. Put the product CD in your CD-ROM drive (if not already done so) and browse to the folder \Drivers.
5. Select the folder of your printer name and click on **Open/OK** buttons to return to the Add Printer Wizard. You will see the list of all available printer models of the selected printer.
6. Select your model, click on the **Next** button and finish the installation.

**Note:**

Windows 2000, XP and Vista might prompt you to cancel the installation process because NiceDrivers do not have the digital signature by Microsoft. It is safe to continue with the installation at this point. NiceDrivers have not been certified by

Microsoft but have been subject of intensive pre-release testing and comply with Microsoft's demands for printer drivers.

---

## Activating Software

### Activating Software

The following activation instructions work for single-user and network editions.

You have to activate the software if you want to use it. If you do not complete the activation process, the software will run in demo mode.

The Product Activation utility will always run after installation. If you want to change the activation type or add more licenses to your network edition, you can also start activation from the labeling software. Select **Help -> Manage License**.

There are the following types of the software activation:

- Hardware key activation
- Single-user Software key activation
- Network Software key activation

#### Note:

NiceLabel SE, NiceLabel Express and NiceLabel Pro editions do not have the network licensing, or Enterprise Print Manager license server.

**Hardware key activation:** The software editions with hardware key can be used immediately after installation. If you have a software edition with a hardware key, please skip ahead to the chapter [Activate the Software with a Hardware Key](#).

**Single-user Software key activation:** The software editions with a single-user software key need to run the activation application in order to obtain full functionality. The Software Key number is a sequence of 25 characters.

**Network Software key activation:** You can activate the server part of the Network edition the same way as editions that come with a single-user software key. The Network Software Key number is a sequence of 25 characters. Activating the server part will also activate the client on the current workstation. If you upgrade the network edition with additional users, you have to install and activate each additional workstation separately. Please refer to the chapter [Activate Additional Network Clients](#).


**Enterprise Print Manager license server:** You can activate the labeling client with the license coming from the Enterprise Print Manager (EPM). Enterprise Print Manager is available with the Enterprise Series edition **NiceLabel Print Center**. Before you can activate the client, you must activate the NiceLabel Print Center.

### Activate Software with a Hardware Key

You can activate the single user editions with a parallel or USB key. However, you cannot activate the network edition with a hardware key!

Make sure you have finished installing the software on your PC when you activate your single user edition with a hardware key.

### Activate the with a Parallel Key

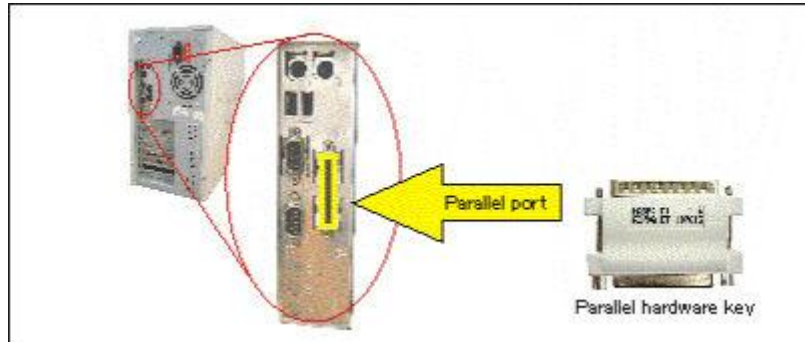

To install a parallel key, do the following:

1. Shutdown your computer and switch off your printer.
2. Connect the hardware key directly to the parallel port (marked as LPT or PRN port) on your computer.
3. Make sure you connect the hardware key in such a manner that pins on the key plug into the holes in the computer port. Fasten the two screws to secure the key.

#### Note:

Do not remove the screws or try to turn them inside out.

Never try to connect the key to a serial port on the computer or directly to a printer.


You can permanently damage the hardware key as well as your computer equipment.

3. Start the labeling software. A *Warning* window will open.
4. Click on the **Manage License** button. The *Manage License* window will open.
5. Select **Activate the package** and click on **Next**.
6. Select **Hardware Key** and click on **Next**. A new *Manage License* window will open showing the key license information for your labeling software.
7. Click on the **Finish** button and the labeling software will start in full working mode.

#### Note:

If you own a serial printer, you cannot connect the printer to the hardware key directly because the connectors are not compatible. Always connect your serial printer to the serial port and hardware key to the parallel port. Your printer does not need to print "through" the hardware key.

### Activate the labeling software with a USB Key

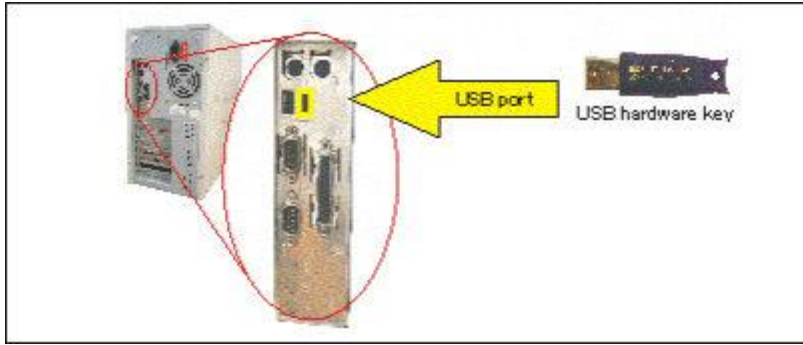

To activate the labeling software using a USB key, do the following:

1. Plug the USB key into an available USB port.
2. Start the labeling software. A *Warning* window will open.
3. Click on the **Manage License** button. The *Manage License* window will open.
4. Select **Activate the package** and click on **Next**.
5. Select **Hardware Key** and click on **Next**. A new *Manage License* window will open showing the key license information for your labeling software.
6. Click on the **Finish** button and labeling software will start in full working mode.

#### Activate Single User Edition

You can activate the labeling software automatically through the Activation Server or manually through the activation Key Number Activation Web site. The activation on the Web only works with single-user software key and network software key. If the computer that uses the labeling software is not connected to the Internet, you will have to open the Activation Web page on a computer with Internet access to obtain the activation information.


Before you start the activation process of the labeling software, get familiar with the following terminology:

- **Key number:** The sequence of 25 characters provided with the labeling software.
- **Registration number:** Unique number generated during the activation process. The registration number validates the entered software key.
- **Activation code:** Issued on the labeling activation Web site. The activation code activates the labeling software on your computer.

To activate the labeling software, do the following:

1. After the installation is complete, run the labeling software. The *Warning* window will open.
2. Click on **Manage License**. The *Manage License* window will open.
3. Select **Activate the package** and click on **Next**.



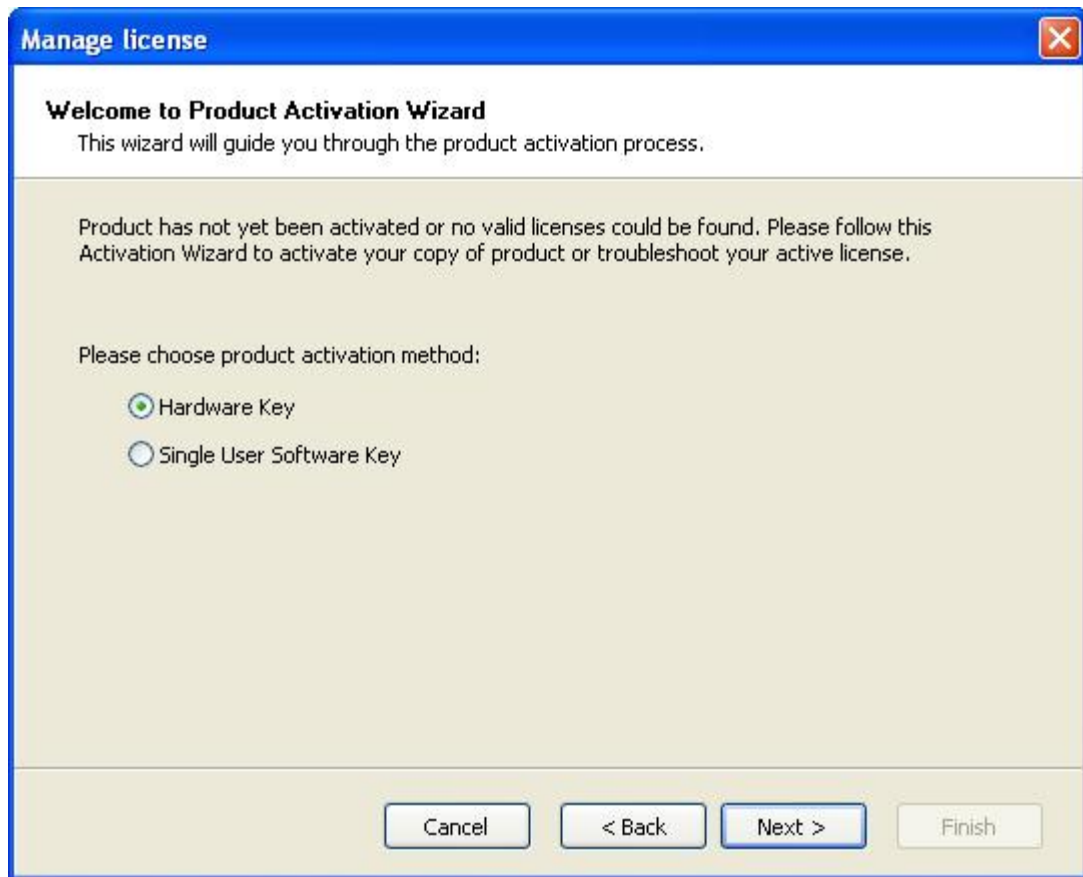

#### Selecting 'Single-user Software Key' activation

2. Select **Single-user Software Key** and click on **Next**.
3. Enter the required customer information and the key number.
4. Click on the **Next** button. The window **Manage License – Activation Code** will open.
5. To activate the software automatically, click on the link **Connect to the Activation server** (recommended).
6. To activate the software manually, click on the Internet link for Web page activation. Your Internet browser will open the Key Number Activation Web site.
  - Enter the key number and the registration number. Enter other user information, if prompted.
  - Click on the **Activate** button to retrieve the Activation code.
  - Copy the Activation code and paste it in the field **Activation Code** in the open **Manage License – Activation code** window of the opened labeling software.
7. Click on the **Next** button and follow the prompts to complete the activation process.

#### Note:

You can still activate the labeling software if the computer does not have access to the Internet.

If the computer where you installed the labeling software does not have Internet access, do the following:

1. Follow the steps one (1) to four (4) from the previous section.
2. Write down the Key number and the Registration number.
3. Write down the Internet activation Web address.

**Note:** You can also click the button **Save Data** and store the activation information to the text file. It will save you some time as you do not have to write down the numbers.

4. Go to a computer with Internet access and open the activation Web site in the Internet Explorer.
5. Enter the Key number and the Registration number. Enter other user information when prompted.

## Key Number Activation

Welcome to the software activation site. Please copy the data from your activation dialog box into the fields below. Then press the ACTIVATE button.

Key Number:  -  -  -  -  \*

Registration Number:  -  -  -  -  \*

Name:

Company:

Address 1:

Address 2:

Zip:  City:

Country:  \*

E-mail:  \*

\* - required

Internet activation website

6. Click on the **Activate** button to retrieve the Activation code. Write it down.

**Note:**

The Key and Registration numbers, the Activation code and information in other fields are case-sensitive, so be careful when writing it down.

7. Go back to the client computer where the window Manage License is still open.
8. Enter the Activation code.

9. Click on the **Next** button and follow the prompts to complete the activation process.

### Move the Software License to Another Computer

The labeling software will run in unlimited mode on each computer, where you have activated the labeling software. You can activate the software with a hardware key, or software key (single user or multi-user license).

To move the software license to another computer when you have the **hardware key**, do the following:

1. Disconnect the hardware key (USB or parallel port variant) from your computer.
2. Install the labeling software on the new computer.  
Follow the steps in the topic **Installing Software**.
3. Activate the labeling software on the new computer.  
Follow the steps in the topic **Activate Software with a Hardware Key**.

To move the software license to another computer when you have the **software key** (25-character number), do the following:

1. Run NiceLabel Pro on currently active computer.
2. Select Help -> Manage License.
3. Enable the option **Manage current software key license**.
4. Click **Next**.
5. Select the option **Deactivate License** and click **Finish**.  
Selecting this option will remove the license from your computer and store it back to the activation server.

**Note:** The computer must have access to the internet to be able to transfer the license to the activation server.

6. Install the software on the new computer.  
Follow the steps in the topic **Installing Software**.
7. Activate the software on the new computer.  
Follow the steps in the topic **Activate Single User Edition**.

---

## Installing Upgrades

### Overview

You can upgrade the labeling software in the following ways:

- Upgrade software within one version (minor version upgrade), for example from **5.0.0** to **5.1.0**.
- Upgrade software version from an older version to the most current one (major version upgrade), for example **2.1.0** to **3.0.0**.

- Upgrade software edition, for example NiceLabel Pro to a more advanced edition like NiceLabel Suite.

### Install Minor Version Upgrade

In a software minor version upgrade, you upgrade an older minor version, for example 3.0.0, to the latest version of 3.x.x. Before you upgrade your labeling software, make sure you

- Backup your label files.
- Do not remove the existing version from your desktop PC.
- Check which software edition you have.

#### Note:

To check your software edition, look at the label on your CD case or start the software and select Help -> About.

To upgrade your **stand-alone/ single user software** (minor version upgrade), do the following:

1. Close the labeling software on your desktop PC.
2. Disable your Virus Scan software.
3. Install the new minor version in the same folder where the old version is currently installed. The new version will replace the old one.
4. Follow the prompts.

### Install Major Version Upgrade

In a labeling software major version upgrade, you upgrade an older version, for example 2.x.x, to the latest version of 3.x.x. Before you upgrade the labeling software, make sure you

- Backup your program files.
- Do not remove the existing version from your desktop PC.
- Check which edition you have.

#### Note:

To check your software edition, look at the label on your CD case or start the software and select Help -> About.

To upgrade your **stand-alone/ single user software** (major version upgrade), do the following:

1. Close the labeling software and any other software on your desktop PC.
2. Disable your Virus Scan software.
3. Put the product CD in your CD-ROM drive.
4. Install the same software edition as you already have; for example, if you have NiceLabel Pro 2.1.x and want to upgrade to NiceLabel Pro 3.x.x, install NiceLabel Pro 3.x.x.
5. Follow the prompts.

## Install Edition Upgrade

When you perform an edition upgrade, you want to upgrade to a more powerful software edition; for example upgrade from NiceLabel Express to NiceLabel Pro or NiceLabel Pro to NiceLabel Suite. Before you upgrade your labeling software, make sure you

- Backup your program files.
- Close the labeling software and any other software on your desktop PC.
- Do not remove the existing labeling software edition.

To upgrade your **stand-alone/ single user software** edition, do the following:

1. Put the product CD in your CD-ROM drive.
3. Install the new edition (Pro or Suite) on your computer. Follow the same instructions as for first-time installation. Refer to the chapter **Installing the Labeling Software**.
4. Follow the prompts.

### Note:

Activate the new edition of the labeling software when you have received the activation document from your vendor with the upgrade package. You won't be able to use the new edition until you have activated it.

---

## Activating Upgrades

### Activate Minor Version Upgrade

When you upgrade to a new minor version of the the same edition, for example NiceLabel Pro version 3.x.1 to NiceLabel Pro version 3.x.2, the software will remain activated. Just make sure you install the new version in the same folder as the existing version. Please follow the same instructions as described in the chapter [Install the Minor Version Upgrade](#).

### Note:

For the **network edition** make sure to install the server part in the same folder on the server that is currently used for the Network edition. You will not have to activate the server again. It will remain activated from the previously installed build.

### Activate Major Version Upgrade

When you upgrade to a new major version of the same edition, for example NiceLabel Pro version 2.1.x to NiceLabel Pro version 3.x.x, you will have to activate the software again. The new version does not override the existing one and you can work with both the old and new version of the same edition. Please follow the same instructions as for the first-time installation of the labeling software in the chapter [Installing the Software](#).

Summary of required steps:

1. Close running labeling applications.

2. Do not remove the existing version of labeling software.
3. Install the new version of the same edition you already have.
4. If your software (old version) has a hardware key (USB or Parallel, see chapter [Activating the Software](#)), plug the key in your computer.
5. Activate the new the version with the upgrade key number.

**Note:**

To upgrade your software version 2.1.x to version 3.x.x, you need to have available both the old 25-digit serial number (for version 2.1.x) and the new 25-digit software key number (for version 3.x.x). Both keys are required to activate your software upgrade.

To activate the new version, do the following:

1. Open the newly installed labeling software. A Warning window will open.
2. Click on the **Manage License** button. The Manage License window will open.

**Note:**

If you activate the labeling software immediately after completing the installation, select Activate the package and click on Next.

3. Select **Single User Software Key** and click on **Next**. A new Manage License window will open showing the key license information of your old version of labeling software.

**Note:**

If your old software came with a USB or Parallel key, plug the key into an available port, select **Hardware Key** and click on **Next**.

4. If your software is protected by a software key, select **Manage current software key license** and click on **Next**.  
If your software is protected by a hardware key, select **Manage current hardware key license** and click on **Next**.
5. In the Manage License – Manage software key license window, select **Upgrade key license** and click on **Next**.
6. In the Manage License – Upgrade code window, enter the **Upgrade Key Number** you received from your vendor.
7. To activate the software automatically, click on the link **Connect to the Activation server** (recommended).
8. To activate the software manually, click on the provided Internet link for Web page activation. Your Internet browser will open the Upgrade Activation Web site.
  - Enter user information and click on **ACTIVATE**. A new window will open with the generated Activation Code.
  - Copy the Activation code from the Web site and paste it in the field **Activation Code** in the open Manage License – Activation code window of the open the software.
9. Click on the **Next** button and follow the prompts to complete the activation process.

**Note:**

You can still activate the software if the computer does not have access to the Internet. Please refer to the chapter [Activate the Single User Edition](#).

**Activate Edition Upgrade**

When you upgrade to a new edition of the labeling software, for example from NiceLabel Express to NiceLabel Pro or NiceLabel Pro to NiceLabel Suite, you keep the existing software edition on your computer and install and activate the new software edition. Please follow the same instructions as for the first-time installation of the labeling software in the chapter Installing the Software. To activate the new edition of the labeling software, follow the activation instructions discussed in the chapter [Activating the Major Version Upgrade](#).

**Note:**

To upgrade your software edition, you need to have available the old 25-digit serial number/ software key and the new 25-digit software key number. Both keys are required to activate your upgrade.

Summary of required steps:

1. Close all labeling software applications.
2. Install the new edition of the software.
3. Activate the new edition with the upgrade key number.

---

## Limitations of the Demo Mode

## Registering the Software

At the end of the activation process, please fill out the registration form in the last step of the Product Activation process. If you have the access to the internet, the product can be activated on-line. You can also print out the registration form and send or fax it to the contact on the form.

Registration is not required but you should register the labeling software to receive the following benefits:

- Free access to downloads and updates.
- Free Technical Newsletter discussing product news.

To register the labeling software, do the following:


1. Start **the label designer**.
2. Select **Help -> Manage Registration**.
3. Follow on-screen instructions.

# Setting Up the Software

## User Interface

### Main Window

This is labeling application main window.

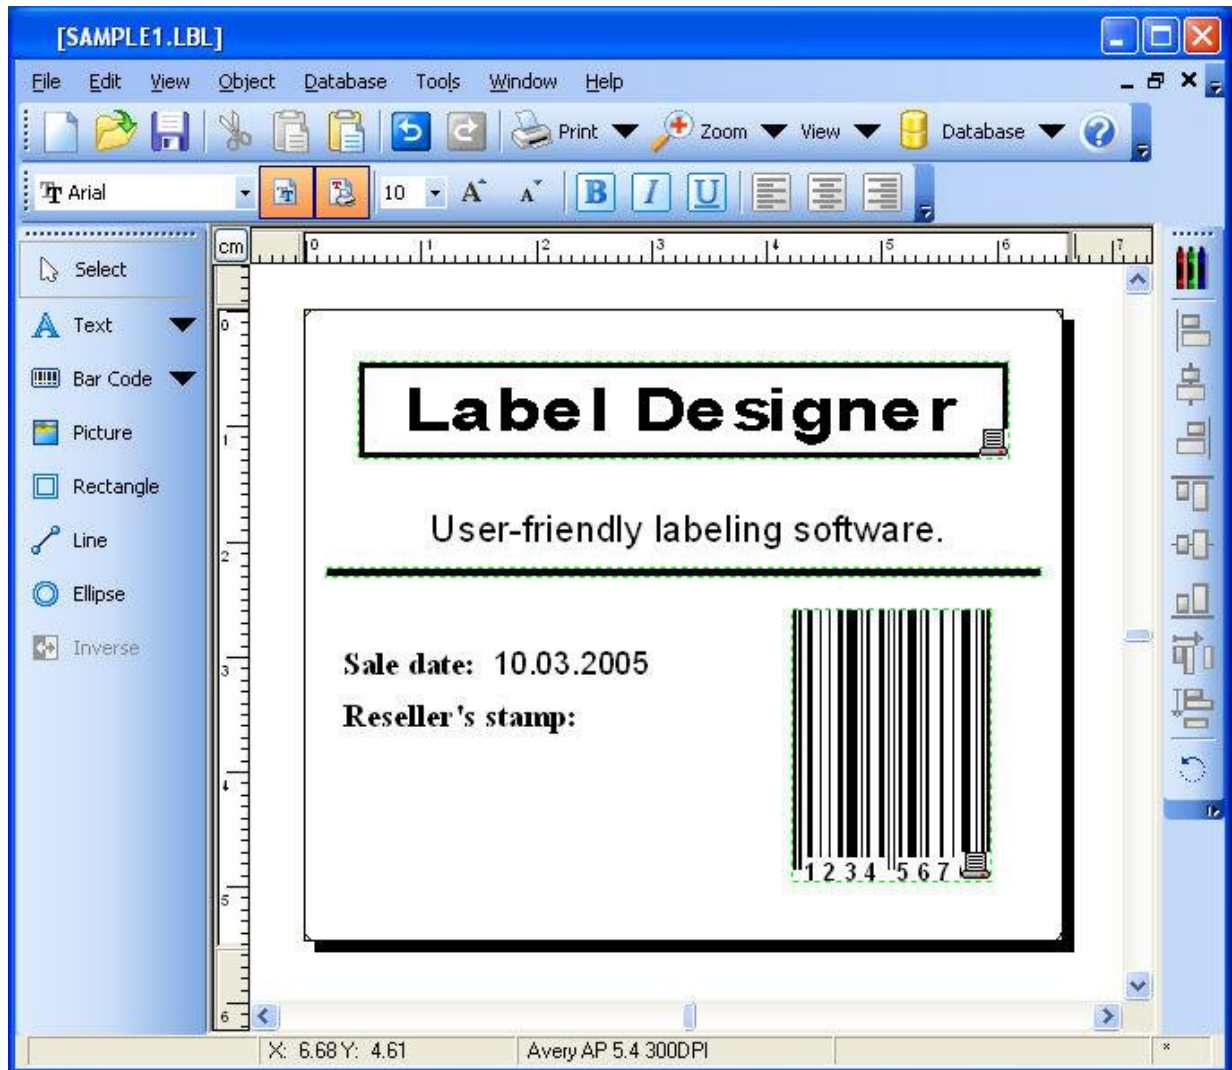

### Mouse Wheel support

If you have mouse, that has a wheel in place of the middle button, you can use it to speed-up zooming and scrolling a lot:

- Turning the wheel, scrolls the label up or down.
- Holding <SHIFT> and turning the wheel scrolls the label left or right.
- Holding <CTRL> and turning the wheel, zooms the label in or out.



**Shortcuts**

<b>Delete</b>	Deletes selected object
<b>Ctrl + X</b>	Cut
<b>Ctrl + C</b>	Copy
<b>Ctrl + V</b>	Paste
<b>Alt + Backspace</b>	Undo
<b>+ (on numeric pad)</b>	Zoom In
<b>- (on numeric pad)</b>	Zoom Out
<b>Alt + Shift + Backspace</b>	Redo
<b>Ctrl + T</b>	Rotate 90°
<b>Ctrl + A</b>	Align
<b>Ctrl + Z</b>	Undo
<b>Ctrl + Y</b>	Redo
<b>Ctrl + N</b>	New
<b>Ctrl + O</b>	Open
<b>Ctrl + S</b>	Save
<b>Ctrl + P</b>	Print
<b>Ctrl + R</b>	Print preview
<b>Ctrl + move the object with mouse</b>	Parallel moving of the object by main axes only.
<b>Alt + move the object with mouse</b>	Objects snap to grid even if it is off.
<b>Ctrl + move the object with cursor keys</b>	Fine tuning the position of the object.

<b>Shift + cursor keys</b>	Fine tuning the dimensions of the object, resize width and height in very small steps.
<b>Right-clicking the object</b>	Opens pop-up menu with shortcuts to commands. The content of the pop-up menu greatly depends on where you clicked your mouse button and what was selected at that time.
<b>Enter F2 or double-click</b>	Opens properties dialog box of the selected element.

### Using the Keyboard and Mouse Effectively

When selecting objects you can use <CTRL> key to adjust object's anchoring point by clicking the object placeholders.

If you have a Wheel Mouse, you can use the wheel to scroll label up and down. Holding <CTRL> when rotating the wheel adjusts zoom factor, <SHIFT> scrolls label left or right.

Double click on printer's name in status bar opens printer properties dialog box in which you can set various options regarding currently selected printer. If you hold <CTRL> while double clicking, printer setup dialog box is opened, in which you can select different printer.

You can quickly move objects from one open label to another by simply dragging desired object to another window while holding <ALT>. If you want to copy objects instead, hold both <ALT> and <CTRL>. Note that you must have both label windows visible to do that.

Different objects on label can be selected using the <TAB> and <SHIFT>+<TAB> keys.

Pressing cursor keys while holding <Ctrl> key can move currently selected object. This can be used to fine-tune position of the object. Holding <SHIFT> while pressing cursor keys will resize the object.

You can use the right mouse button almost anywhere on label to access most common options for that area/object. For example, if you click an object with right mouse button, a pop-up menu is displayed that contains options and actions that can be performed on selected object. Similarly clicking the other parts of label produces pop-up menu with options for that part of label.

Multiple objects can be selected by holding <SHIFT> while clicking them.

Use the element shortcuts in toolbars whenever possible. Each label element that can be connected to some Contents Provider, has a shortcut enabled to quickly access existing variables or define new ones. Click the element's shortcut handle for this shortcut. It is shown as a small arrow by the side of some toolbox icons.

---

## System folder

The labeling application uses its system folder for storing files needed to run the program. The location of the folder varies depending on the Windows operating system used.

The location of the System folder is C:\Documents and Settings\All Users\Application Data\EuroPlus\Express 5\system.

It is vitally important to own **the write access** to this folder on your computer system and the right to write to and modify files in this folder.

### Note:

The Network clients use the System folder on the network server. If you have Network edition all clients must have the full access also to the System folder on the server.

The labeling software stores important system settings in the System folder, as follows:

- User data and user rights
- Custom application settings
- Label printing logs
- Bar code standards
- Definition of global variables (GLOBALS.TDB).

---

## Welcome Wizard

When you start the labeling software a Welcome Wizard will be shown. It provides a quick access to most used commands when starting working on a label layout.

<b>Create a new label</b>	A blank label will be created and Label Setup Wizard will be started. You will be able to design a new label from a scratch.
<b>Open recently used label</b>	A list of recently used labels will be displayed to provide a quick access to commonly used labels.
<b>Open some other existing label</b>	A common Windows dialog box will open to let you browse for the appropriate label file.

---

## Use Project Folders

You should always design the appropriate folder layout on disk for your label projects. With that in mind you can increase your work efficiency significantly and always know where certain types of files are stored. The applications also finds required files faster this way.

Using consistent folders is important with more demanding projects, where you have a lot of labels, databases, pictures and printing forms. Of course, you can always change the file location in application preferences (**Tools -> Options**). But this approach is not really recommended, when you work with different projects and do not want to mix the files between the projects.

You should do the following:

1. Make a separate folder for each project, you are building, e.g. Project1.
2. Beneath this folder make the following subfolders.
  - Database (for databases)
  - Forms (for forms)
  - Graphics (for images)
  - Labels (for labels)

**Note:** Use the English names for the folders.

3. Store appropriate files in each of these subfolders.
4. Do not change any folder location in application preferences (Tools -> Options).

When the applications will require some file the relative links between the files is always the same. Even if you copy the main project folder to some other location or disk, the relative links between the subfolder Database, Forms, Graphics and Labels remain the same.

**For example:** The image is placed on the label. The original image location was c:\My Project 10\Grahics\logo.jpg on your local disk. When the label project for the customer is complete, you copy the folder structure "My Project" to the customer's computer and rename it to "Labels". The location is d:\Labels. Because you use the subfolders, the relative link between the label in Labels folder and the image logo.jpg in the Graphics folder is the same. The application can find the image.

# Designing Labels

## Using Label Setup Wizard

### Using Label Setup Wizard

Label Setup Wizard offers defining dimensions of the label and changing printer setup. It consists of a few simple steps. Click on the **Related Topics** button for more information.

### Selecting Printer




### Label setup Wizard - Selecting printer

Select desired printer and optionally click **Properties** button if you want to set the printer parameters. Print setup dialog box is shown, allowing you to set the printer parameters such as print speed, print darkness and print direction. Note that this is standard Windows printer setup dialog box and its options may differ from printer to printer as it is based on the printer driver.

If the check box **Always use default printer** is checked, the default window's printer and its settings will be used always when opening this label.

Click the **Next** button to continue with the next step.

## Stock

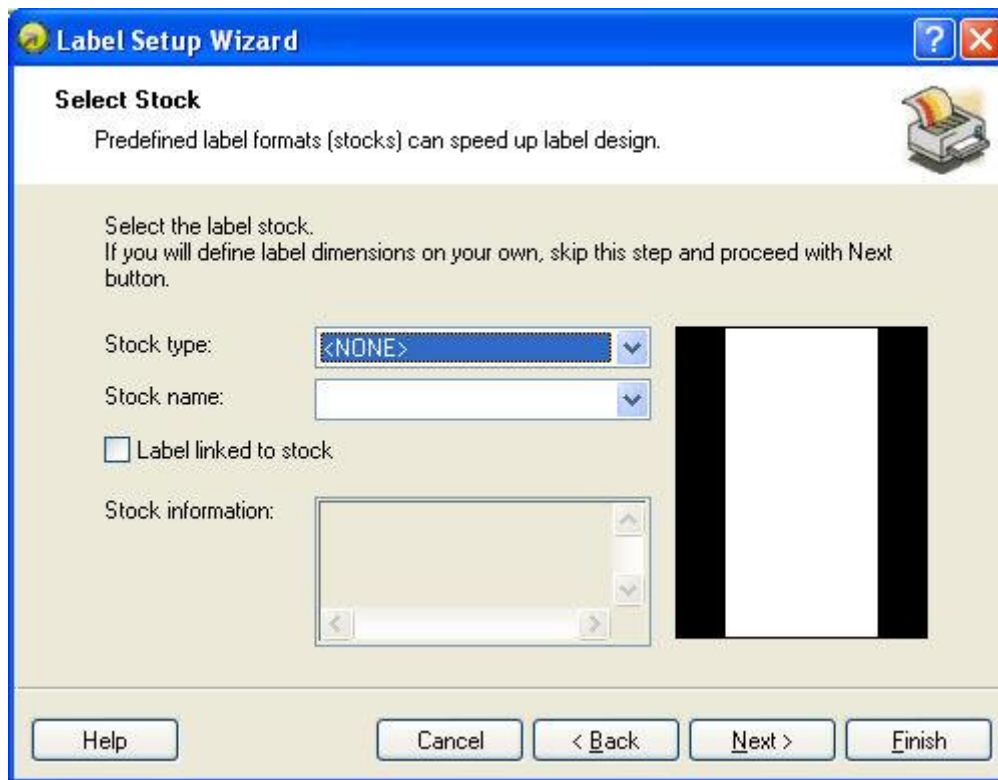

Label setup Wizard - selecting Label Stock

If you use one of the standard predefined label formats, you can specify it here.

**Stock Type:** Select the type of stock.

**Stock name:** Select the stock from the list.

**Stock information:** The information about label dimensions, printer settings, background images as defined by the selected stock.


**Label linked to stock:** If you enable this option, you cannot change the dimensions of the label, because the stocks locks the dimensions.

**Note:**

Using pre-defined stocks simplifies the process of label creation as you do not have to define the label dimensions manually.

Click on the **Next** button to continue with the next step.

## Defining the Page Size

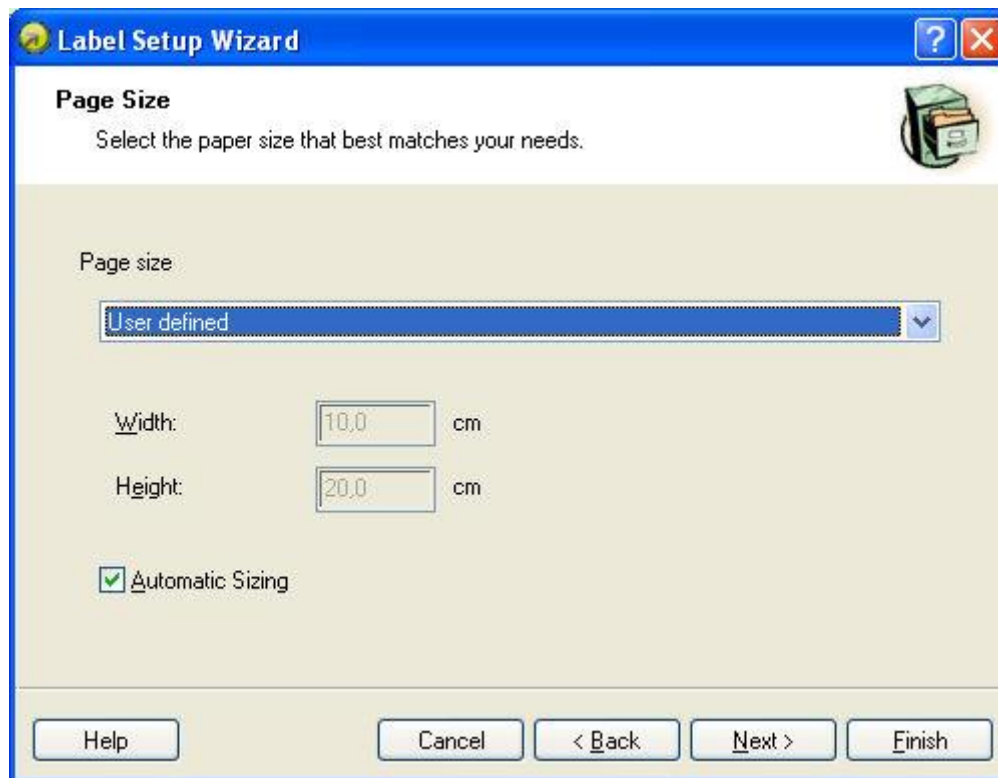


### Label setup Wizard - choosing Label Dimensions

Select the page size for your labels. This step is only necessary for the office printers.

**Automatic Sizing:** Tick this option, if you are using thermal printer with NiceDrivers. The labeling software and NiceDrivers will negotiate about the label dimensions.

Click on the **Next** button to continue with the next step.

## Selecting Label Orientation

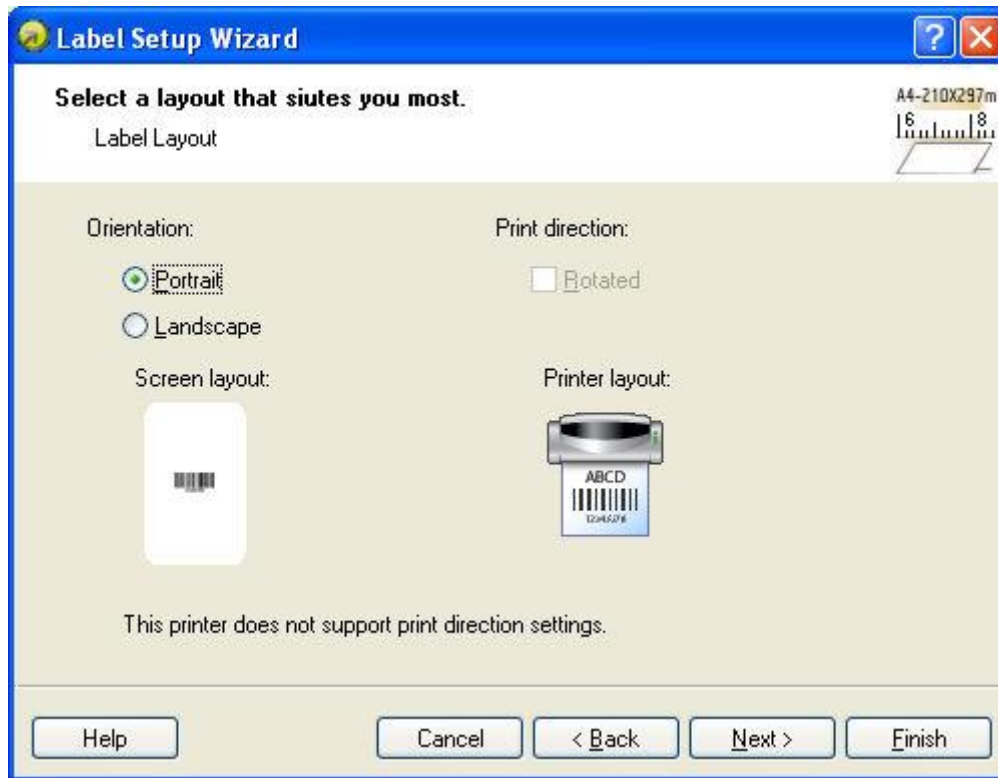

Selecting label layout

**Orientation:** Select the label orientation. Look at the screen and printer layouts for suggestion how the label will really be printed from the printer.

**Print directions:** Tick the option **Rotated** to rotate the label for 180 degrees, when printed.

Click on the **Next** button to continue with the next step.


## Defining Label Dimensions

Here you can enter the label dimensions.

**Note:**

The values for dimensions are entered automatically if you selected the label stock in the previous step.



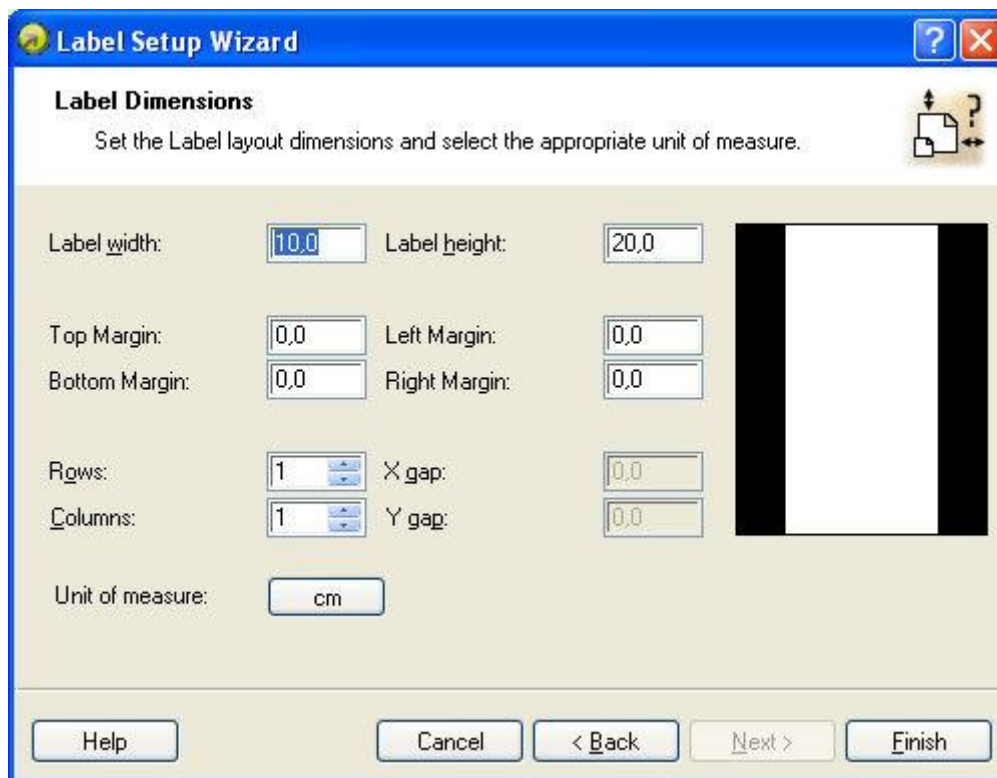

Label setup Wizard - defining the label format

**Width, height:** Define the label dimensions.

**Margins:** Define the label margins.

**Rows, columns:** Define the number of labels in horizontal and vertical directions. This option is commonly used with office printers (laser and inkjet printers).

**Gaps:** Define the gaps between the labels.

**Note:**

Define gaps only if you have changed rows and columns option. If you have rolls of labels, the gaps between the labels are auto-identified by the gap sensor in the printer.

**Unit of measure:** Change the unit of measure you want to use.

When you are satisfied with the label dimensions, click on the **Finish** button to close the Label setup wizard.

---


## Designing a Basic Label

### Overview

In this section you will learn how to design a simple label file with fixed and variable objects. The variable objects can obtain values from several sources. You will learn how to:

- Provide object values with a keyboard prompt.
- Obtain object values from a database.
- Preview the label on the screen.
- Print the label.

The label you create will look like this:

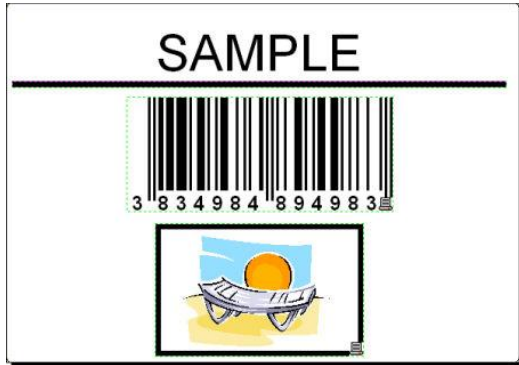


Basic label

### Create a Basic Label

### Create a New Label

To create a basic label, do the following:

1. Open the labeling software.
2. Select **New label** under **File** menu or click on the icon  in the standard toolbar.

Each time you create a new label, a Label Setup Wizard will start to help you setup the label and connect to the printer.

#### Note:

You can leave the Wizard at any time and accept the default settings for the label by clicking on the **Finish** button.

### Select a Printer

1. Select the printer you want to use for label printing.

#### Note:

If you don't find your printer on the list, refer to chapter [Install Printer Driver](#) for installation instructions.



Selecting a printer

2. Click on the **Next** button.

## Define Label and Page Dimensions

1. If you want to use the label stock, select your choices in the window **Select Stock**.
2. Click on the **Next** button. A new window will open to define the label dimensions manually.
3. Leave the option Page Size on 'User defined' default and check **Automatic Sizing**.
4. Click the Next button. A new window will open.
5. Select label orientation and print direction.




### Selecting label layout

6. Click on the **Next** button. A new window will open.  
Enter 10 for label width and 7 for label height.

**Note:**

Dialog box differs from thermal and office printers.

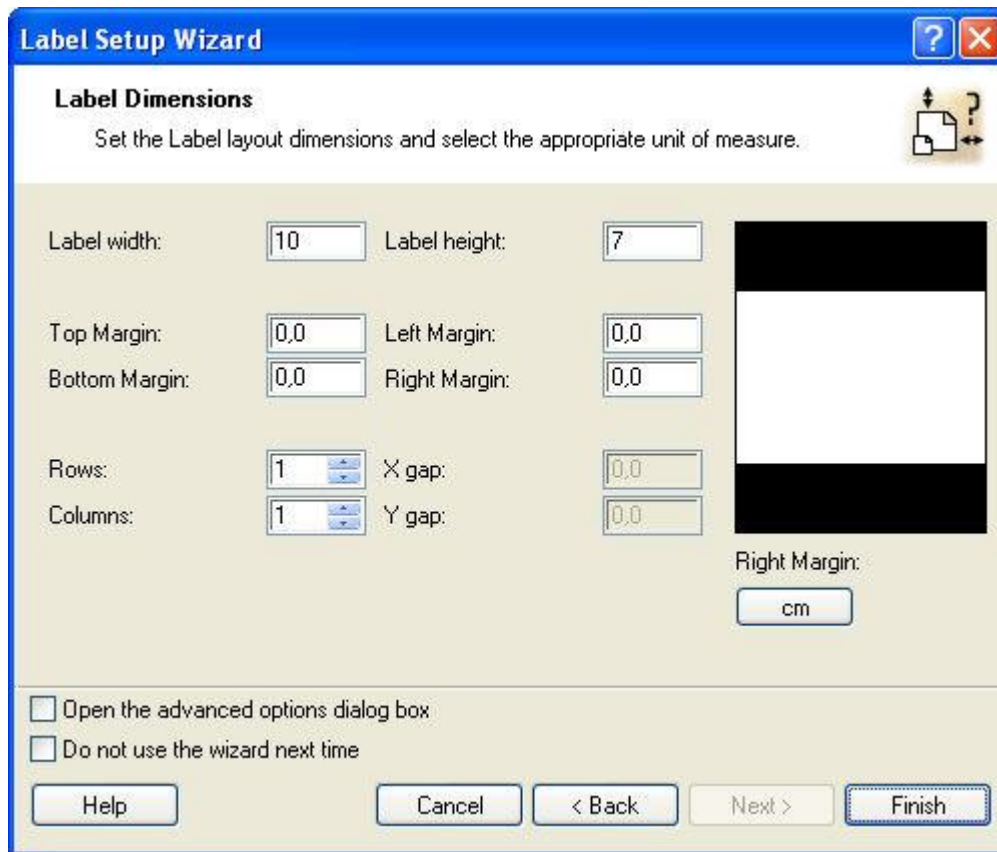


### Defining label dimensions


#### Note:

To change the unit of measure from centimeters to inches or other supported units, click on the button with unit of measure below the label preview in the dialog box.

7. Click on the **Finish** button. New empty label will open.

### Enter Non-Changing Text

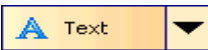1. Click on the  button in the Toolbox. The text cursor appears on the screen.

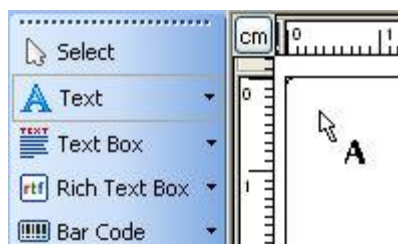

#### Cursor for text object

2. Move the cursor to the location on the label where you want to place the text object and click on the mouse button. The dialog box with object properties will open.

3. Enter the text "SAMPLE" and click on the Finish button.



#### Entering content for text object

4. Click on the text object to select the object.
5. Change the font for the text object using the Text toolbar. Choose Arial font, 28 point size and bold style.



#### Using format options in the text toolbox

6. To change the position and size of the text object, select the text object and drag object with your mouse to the position where you want to have it.

 

The screen should show the following:




The text object is placed on the label

## Insert Bar Codes

Now you will add a non-changeable Code128 bar code on the label.

1. To insert the bar code, click on the  Bar Code  button in the **Toolbox**.
2. Move the cursor to the desired position on the label and click on the mouse button.
3. The dialog box with object properties will open.
4. Enter the value 1234567890 for the bar code contents.
5. Click on the **Define** button.  
Edit Bar Code dialog box opens.
6. Make sure you select bar code Code128 and click on the OK button.

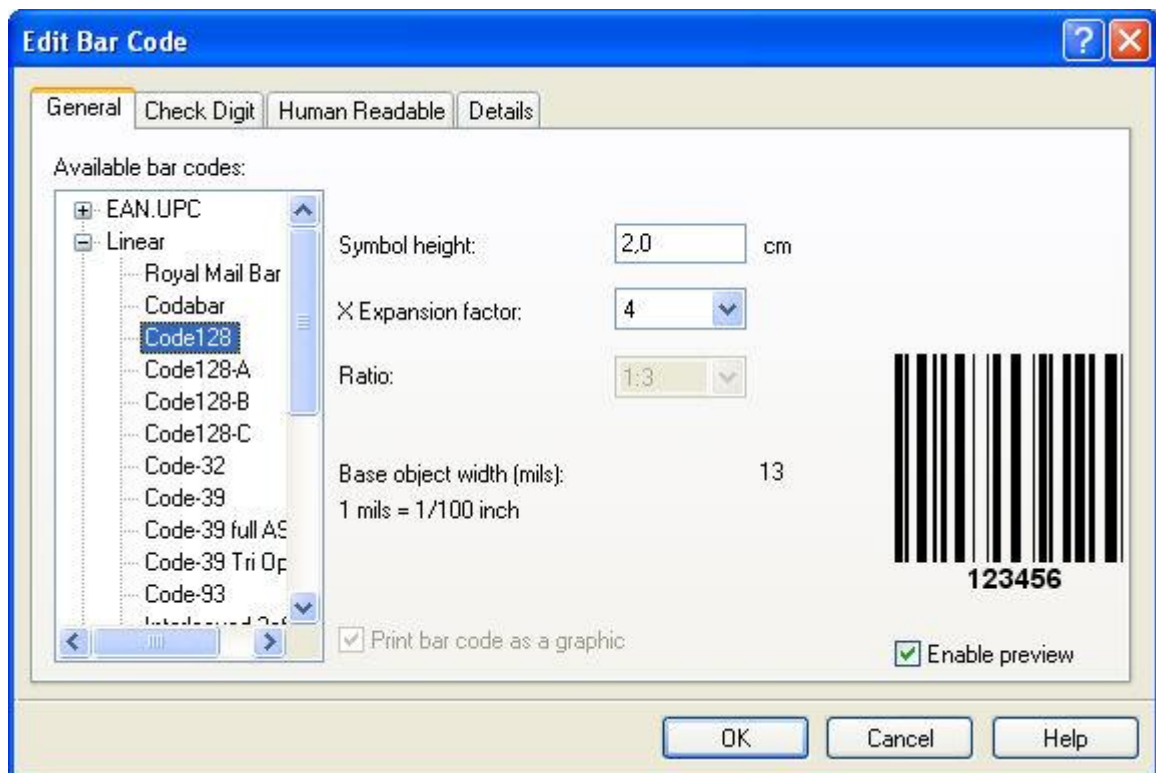

Selecting bar code type

7. Click on the Finish button to return to the label.
8. Change the position of the bar code by selecting the bar code and dragging it to the desired position.
9. Change the object size by dragging the object handles. The handles are small rectangles surrounding the object when it is selected.


The label should now show the following:



Label with text and bar code objects

### Insert Pictures

 The labeling software works with BMP, PCX, GIF, WMF, JPEG and many other popular graphic formats.

1. To insert the picture, click on the  button in the Toolbox.
2. Move the cursor to the desired position on the label and click on the mouse button.
3. The Open dialog box will open allowing you to browse for your picture on your hard drive. Go to the folder Sample Graphics and select the picture LEISURE.WMF. Click on the Open button.

The screen should show the following:




Label with text, bar code and picture objects



## Save a Label

Always save your label during the design process. To save a label, do the following:

1. Select the  icon.
2. Type in the name of the label. For example, enter 'label' for the name of the label.
3. The name of the label is visible in the program caption.

Name of the label in the program caption

## Use Alignment Tools

You have placed the objects on the label. Now you want to make sure they are aligned on the horizontal center of the label. You can align objects on the label by using the Align toolbar on the right side of the working window.


To align objects on the label, do the following:

1. Select all objects on the label.


### Note:

The first object you select determines the alignment orientation for all selected objects.

2. Choose a select arrow in the **Toolbox** and draw a frame around all objects to select all objects.

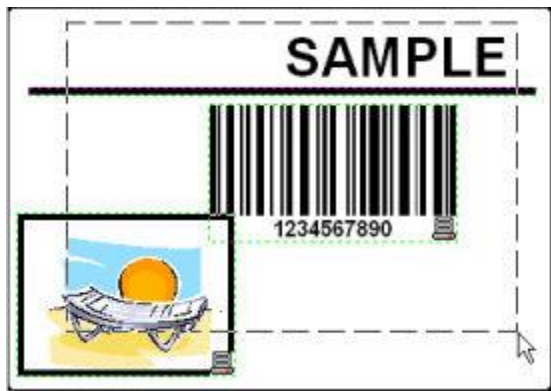

Selecting the objects on the label

3. In the Align toolbar on the right, click on the  icon to arrange the objects. The selected objects will be rearranged and positioned on the horizontal center of the label.

### Note:



There are also other alignment commands available in the Align Toolbar.

**Note:**


You can also align the objects to the label grid. The option Snap to Grid is available in the View menu.

## Use Drawing Tools

Now you will insert a line to separate a text object from other objects and a rectangle around the picture object.

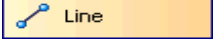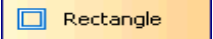1. Select the  icon from **Toolbox** and move the cursor to the required starting point of the line.
2. Press and hold down the mouse button while drawing the line. Move the mouse to the end position of the line and release the button. The Line object is placed on the label.
3. Click on the  icon in the **Toolbox** and point the mouse to the upper left corner of the picture.
4. Click and hold the mouse button while you stretch the rectangle to the lower right corner of the picture.
5. To change the thickness of the vertical and horizontal line, double-click on the rectangle object to open its properties. Select the thickness you want and click on the **Finish** button.
6. To edit the drawing object, double-click on the line or rectangle to open the dialog box with its properties.

The label should show the following:

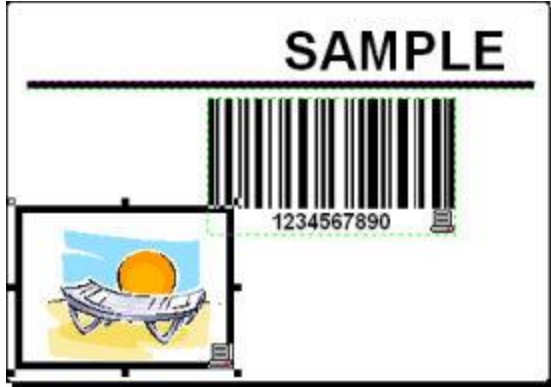

Label with fixed objects

## Add Variable Fields

### Overview

You may want to print the label on which the data changes for each label. The labeling software offers different variable fields (counters, date/time fields, operator's input from the keyboard) that you can use with text, graphics and bar code objects.


For this example a new label was created. The following steps explain how to create a label that contains a prompted field, a counter and date/time fields. The captions in the following screenshots were added separately.



The left label shows design mode, the right two labels are two consecutive labels from print preview

## Create Keyboard Entry Variable Fields

The content of a prompted field can be different for every print job. Before you print the label, you enter the value for the field.

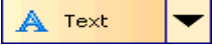1. Click on the small arrow next to the  icon in the **Toolbox** to display a list of available variable types.
2. Select **New Keyboard Input** from the list and click on the label where you want to position the object.  
A dialog box with the Variable Wizard will open.



Creating new keyboard input variable field

3. Type 'Enter product name' for the option Display this text to the print operator.
4. Click on the **Finish** button. The cursor changes its shape to an arrow with a text object.
5. Click on the label where you want to position the prompted field.


The text object is placed on the label and linked to the new variable.

### Note:

When you print the label, you will be prompted to enter the product name, which will be shown in preview on the label and on the printed label.

## Create Serialized Data Variable Fields (Counters)

Now create a counter field on the label. The value of that variable field will automatically increase by one on every label.

1. Click on the small arrow next to the  icon in the **Toolbox** to display a list of available variable types.
2. Select **New Counter** from the list.
3. A dialog box with counter properties opens.



Creating new counter variable field

4. Leave everything as default so that the counter will always start from 1 and increase by one on each label.
5. Click on the **Finish** button.
6. Click on the label where the counter should be placed.


The new variable is linked to the text object on the label.


### Note:

Typically, the counter will increase by 1 on each label. For example, 1, 2, 3, 4, 5, etc. You can also define different incremental steps.

## Create Date and Time Variable Fields

Content of the variable field can be filled automatically with the date or time stamp from the computer clock or printer clock (for supported printer models).

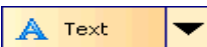
1. Click on the small arrow next to the  icon in the **Toolbox** to display a list of available variable types.
2. Select **New Date Field** from the list. A dialog box with date properties opens.

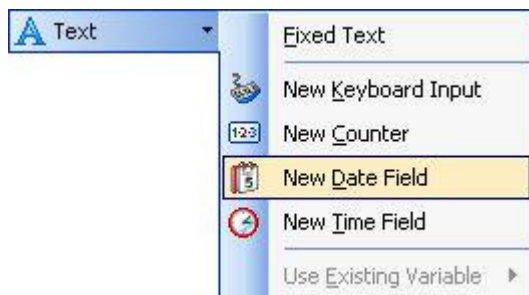

Creating new date variable field

3. Leave everything as default and the date will be used on the label using the format as defined in your Windows operating system.


To place a time stamp on the label, do the following:

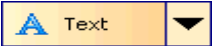1. Click on the small arrow next to the  icon in the Toolbox to display a list of available variable types.
2. Select **New Time Field** from the list.
3. Click on the **Finish** button.
4. Click on the label where the counter should be placed.  
The new variable is linked to the text object on the label.

The date and time fields are updated when you preview or print the label. In this example the values will come from the system clock of your computer.

## Use Prefix or Suffix Options

You can add a prefix and suffix to each variable field on the label. Both are added to the value when you preview and print the label.

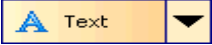1. Click on the small arrow next to the  icon in the Toolbox to display a list of available variable types.
2. Select **New Keyboard Input** from the list.
3. A dialog box with variable properties will open.
4. Type the text 'Enter product weight' for the option Display this text to the print operator. Set the allowable characters to digits and click on the **Next** button.
5. Enter ' kg' for the **Suffix** option.



Defining the variable suffix

6. Click on the **Finish** button.
7. Click on the label where you want to position the prompted field.  
The text object is placed on the label and linked to the new variable. When you will preview or print the label, the suffix ' kg' will be appended to the entered value on the right side.


---


## Change Printer Settings

### Change Common Printer Settings

When you start designing a label you specify to which printer the label should be connected. Each label file remembers the printer settings for the selected printer driver on the label.

As an example, you will change the printing speed and darkness. To change the printer settings, do the following:

1. Go to File – Printer Settings. The window with the printer settings will open.
2. Open the Options tab.
3. Change the **Speed** and **Darkness** options.
4. Click on the **OK** button.
5. Save the label by clicking the  button in the Standard toolbar or selecting the command **Save** in the File menu.

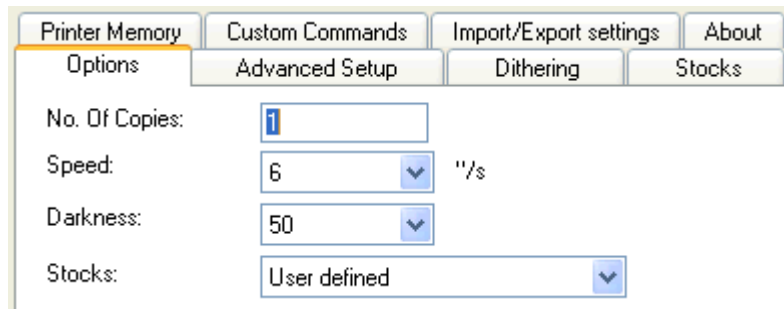

### Printer driver properties

#### Note:

Any changes in the printer settings dialog box will be saved to the label and applied to future print actions.

You can also change the printer settings right before the label is printed.

1. Select the **Print** command in the File menu.
2. Go to the **Printer** tab.  
This tab allows you to change the printer just before printing begins, but it also enables you to change common printer settings like speed, darkness and print direction.

#### Note:

Changes to the settings in the Printer tab will not be saved in the label but used only at print time.


### Change Dithering Options

Dithering is a process of converting color or gray scale pictures to black and white pictures that can be printed on thermal printers. Thermal printers normally cannot print color images and can either print a dot on the label or not. There are no intermediate shades of grey.

During the dithering process all colors and shades of grey in the picture are converted to black and white dots, creating the illusion of new colors and shades by varying the pattern of dots. Different shades of gray are produced by varying the patterns of black and white dots. There are no grey dots at all. In printing, dithering is usually called halftoning, and shades of gray are called halftones.

To change the dithering settings, do the following:





 
 







1. Go to File – Printer Settings. The window with the printer settings will open.
2. Open the **Dithering** tab.

3. Change the Dithering type option to suit your needs. Look at the preview on the right side how you can expect the selected type to be applied on the label.
4. Click on the **OK** button.
5. Save the label by clicking the  button in the Standard toolbar or selecting the command **Save** in the File menu.

## Using Toolbars

### Using Standard Toolbar

 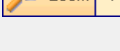Click on the icons in the standard toolbar will execute the following actions:

	Create new label.
	Open existing label.
	Save currently opened label.
	Cut the selected objects to clipboard.
	Copy the selected objects to clipboard.
	Paste the objects from the clipboard.
	Undo last action.
	Redo last action.
	Access to the print functionality. Click on the small arrow for more commands.
	Access to the zoom functionality. Click on the small arrow for more commands.
	Access to the view functionality. Click on the small arrow for more commands.
	Access to the variables. Click on the small arrow for more commands.
	Access to the databases. Click on the small arrow for more commands.
	Open the help file.

## Using Toolbox

To use the toolbox, do the following:

1. Click on the icon in the toolbox to select the object.
2. Move the mouse over the label. See how the cursors has changed.
3. Click on the label where you want to place the selected object.

Some objects have additional shortcut on the right side of the icon. Using this shortcut you can quickly create a new object with fixed content, create a new variable and connect it to the selected object or connect the object to one already defined variable.

## Using Text Toolbar

You can use text toolbar to quickly format the text objects on the label.





Here is how:

1. First select it the text object by clicking it.
2. Click the appropriate shortcut button in the text toolbar.
3. To change the font, select the appropriate font from the list in the list box.

### Note:

You can limit the display of fonts in the list. You can list all fonts on the system, only graphic fonts (truetype, opentype, type1, bitmap Windows fonts) or only thermal printer resident fonts. Click on the two icons next to the list of fonts.

4. To change the size of the text, click on the list with font sizes and select appropriate size. You can also click on the buttons  and  that will enlarge/reduce the size of the font to the next step.

### Note:

You can change the fonts size also directly on the label by resizing the text element with a mouse.

5. To format the text bold, italic or underline, click on the appropriate formatting buttons.



Formats the selected text in bold style.



Formats the selected text in italic style.



Formats the selected text in underline style.

6. To change the alignment of the text object, click on the appropriate alignment buttons.

### Note:

These buttons are accessible only for multi-line text objects.



Aligns text to the left edge.



Aligns text to the horizontal center.





Aligns text to the right edge.

## Using Design Toolbar

The design toolbar is used for:

- Changing color of the objects.
- Aligning objects.
- Rotating objects.
- Arranging objects.

---

## Working with Objects

### Defining Objects

#### Defining Text Object

To place the text object on the label, do the following:

1. Click on the **Text** icon in the Toolbox.
2. Click the position on the label, where you want to place the object. Text Wizard dialog box will open.
3. Define the contents for the text object.
4. Click on the **Next** button to advance to the next step of the wizard.
5. Follow on-screen instructions in the next steps.
6. Click on the **Finish** button.

#### Note:

Should you later want to edit the object, select it then double-click it. The wizard with properties appears.

#### Defining Bar Code Object

To place the bar code object on the label, do the following:

1. Click on the **Bar Code** icon in the Toolbox.
2. Click the position on the label, where you want to place the object. Bar Code Wizard dialog box will open.
3. Define the contents for the bar code object.
4. Click on the **Next** button to advance to the next step of the wizard.
5. Follow on-screen instructions in the next steps.
6. Click on the **Finish** button.

**Note:**

Should you later want to edit the object, select it then double-click it. The wizard with properties appears.

## Defining Picture Object

To place the picture object on the label, do the following:

1. Click on the **Picture** object in the Toolbox.
2. Click on the label, where you want to place the picture.  
The **Open** dialog box opens.
3. Browse for the picture on the hard disk, then click on the **Open** button.

**Note:**

Should you later want to edit the object, select it then double-click it. The wizard or dialog box with properties appears.

## Defining Rectangle Object

To place the rectangle object on the label, do the following:

1. Click on the **Rectangle** icon in the Toolbox.
2. Click the position on the label, where you want the upper-left position of the object to be set.
3. Drag to bottom-right direction until the object size is as requested.
4. The other method of positioning the rectangle object on the label is simply selecting the Rectangle tool and then clicking the label. A default-sized rectangle will appear and you can resize it using handles around the object.

**Note:**

If you want to draw a square, grab a handle on one of the rectangle corners, simultaneously press and hold Shift key, then resize the rectangle. A square will be drawn. For more useful shortcuts available in the software refer to the chapter

**Shortcuts.**

4. To move a rectangle to a different position simply select it and drag it elsewhere on the label.

**Note:**

Should you later want to edit the object, select it then double-click it. The dialog box with properties appears.

## Defining Line Object

To place the line object on the label, do the following:

1. Click on the **Line** object in the Toolbox.
2. Define the line starting point by clicking the mouse at the start position.
3. Move the cursor to the end point, while holding down the mouse button.  
A line will be drawn from the left to right side of the label.

**Note:**

If you need to draw a vertical line, just click for starting point then drag the cursor in the up-down direction.

**Defining Ellipse Object**

To place the ellipse object on the label, do the following:

1. Click on the **Ellipse** icon in the Toolbox.
2. Click the position on the label, where you want the upper-left position of the object to be set.
3. Drag to bottom-right direction until the object size is as requested.
4. The other method of positioning the object on the label is simply selecting the Ellipse tool and then clicking the label. A default-sized ellipse will appear and you can resize it using handles around the object.

**Note:**

If you want to draw a circle, grab a handle on one of the ellipse corners, simultaneously press and hold Shift key, then resize the ellipse. A circle will be drawn. For more useful shortcuts available in the software refer to the chapter

**[Shortcuts](#)**.

4. To move an ellipse to a different position simply select it and drag it elsewhere on the label.

**Defining Inverse Object**

To place the inverse object on the label, do the following:

1. Click on the **Inverse** icon in the Toolbox.
2. Click the position on the label, where you want the upper-left position of the object to be set.
3. Drag to bottom-right direction until the object size is as requested.

**Note:**

If you want to draw a square, grab a handle on one of the rectangle corners, simultaneously press and hold Shift key, then resize the rectangle. A square will be drawn. For more useful shortcuts available in the software refer to the chapter

**[Shortcuts](#)**.

4. To move an inverse to a different position simply select it and drag it elsewhere on the label.

## Using Text Wizard

### Text Wizard



First screen of Text Wizard

Text Wizard guides you to define all parameters for the text object.

**Fixed text:** Select this option if you would like to have a fixed non-changeable content of the object. If you select this option, you can enter the text directly in this dialog box.

**Variable text:** Select this option, if you would like to have variable content of the object. Defining the content is defined in the next step.

**Font:** Currently selected font type is shown in this field.


- **Inverse:** Enable this option to use the text in inverse.

**Note:**

The option is not available for all printers.

- **Select button:** You can select different font type for this text object among available fonts in the system.

## Text Wizard - Choosing Variable Text

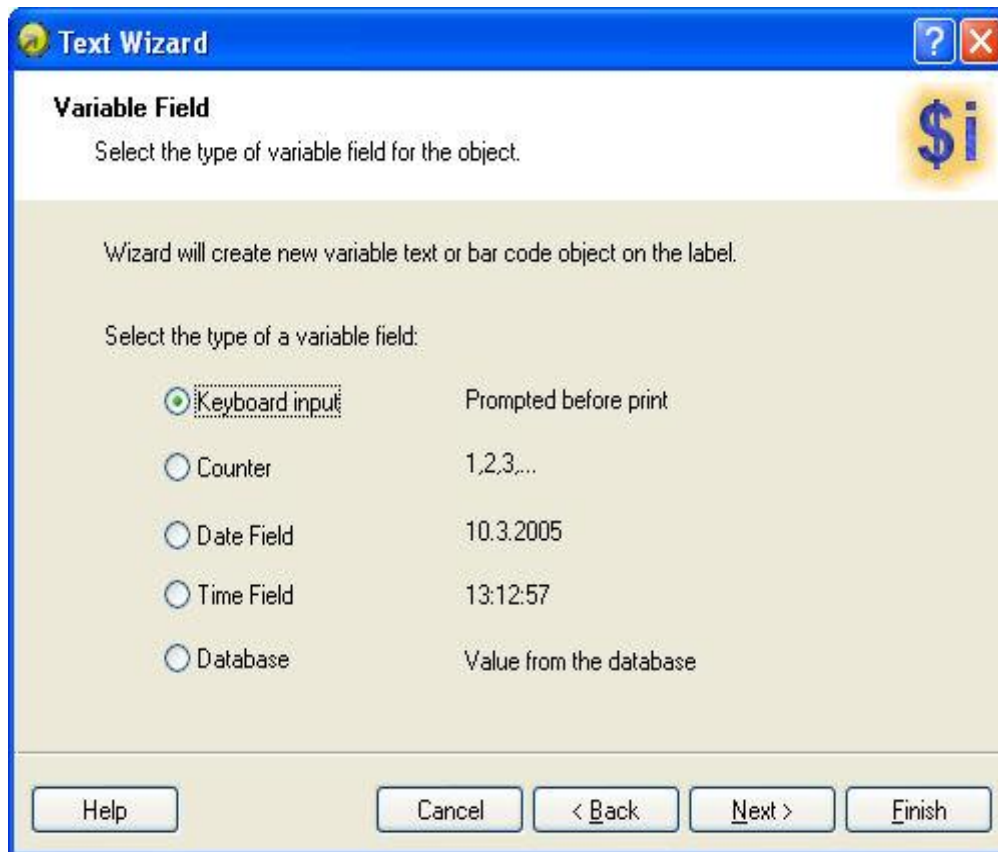

### Text Wizard - Choosing variable text


Select the type of the variable field you want to use. If some of the option in the list is not accessible, the functionality is not available.

**Variable name:** Type in the name of the variable that will be linked to the bar code object and will provide the value for it.

The next page of the wizard depends on your selection here.

### Text Wizard - Keyboard Input

Use this variable type when you want the operator to enter a value of the variable from the keyboard before printing the specified numbers of labels.

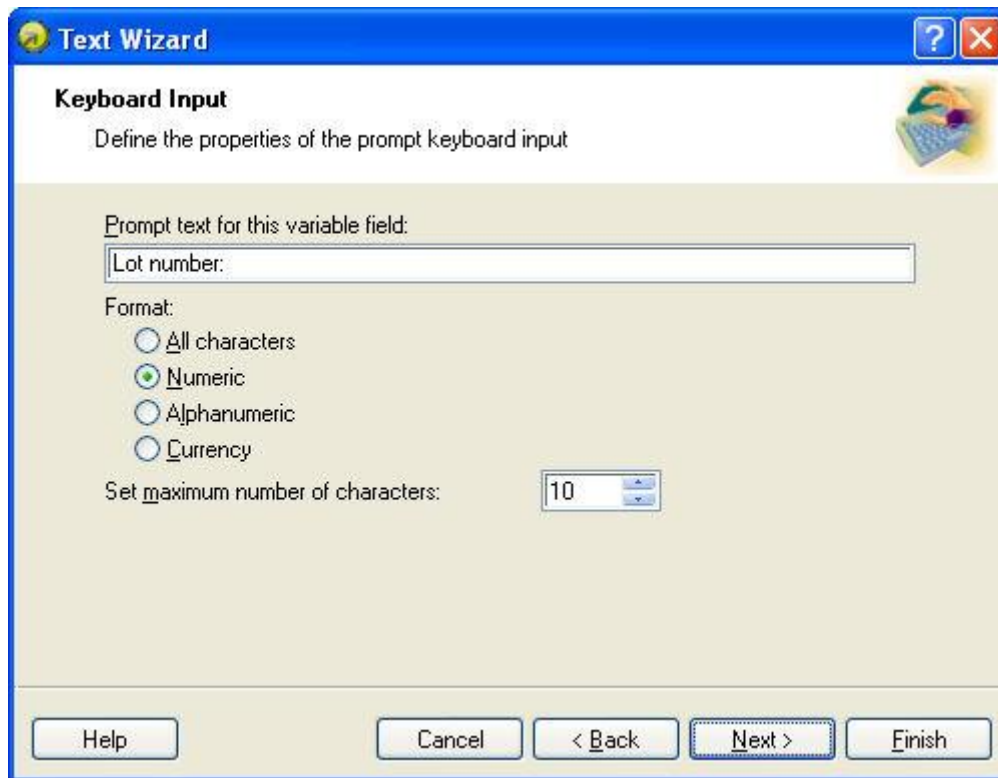

Dialog box for Text Wizard when Keyboard input option is chosen


**Prompt text for this variable field:** Fill in the message that will be shown to the user when he will enter the values for the variable field.

**Format:** Select the format of data you allow to be entered for the variable field.

**Set maximum number of characters:** Define the maximum length of characters that can be entered for the variable field.

### **Text Wizard - Counter**

On this page of the wizard, you define the counter variable.

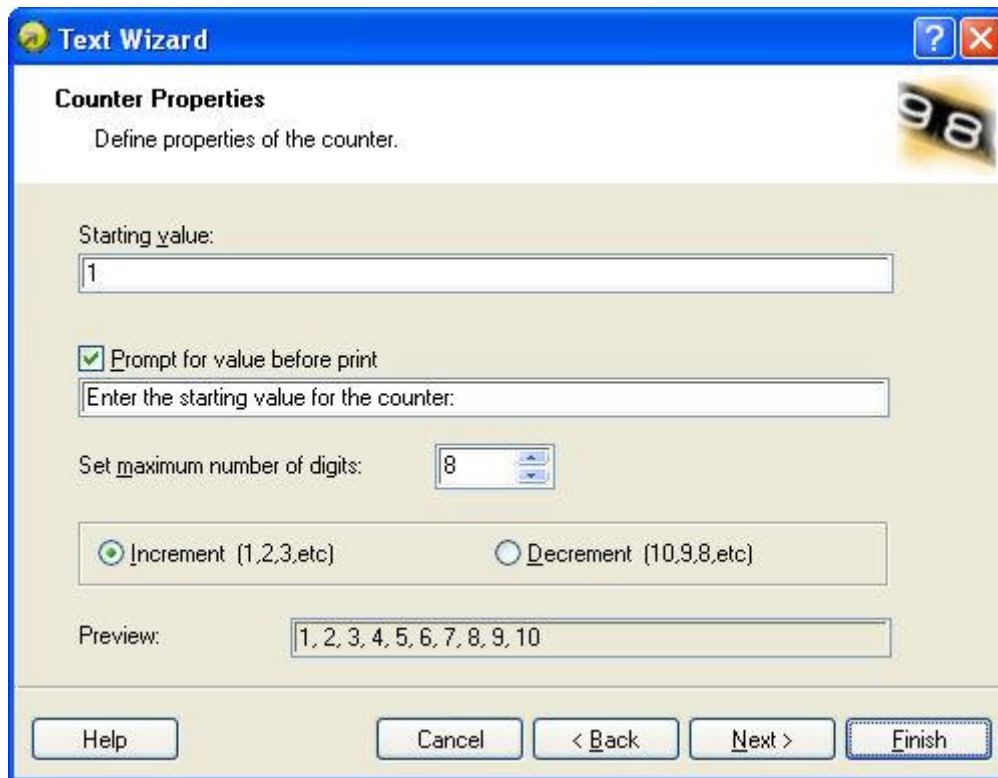

Dialog box for Text Wizard when Counter option is chosen

**Starting Value:** Set the starting value for the counter. The counter will increment or decrement from the starting value.

**Note:**

You can enter only digits for the starting value.

**Prompt for value before print:** Tick this option to enable entering the starting value of the counter when you start printing labels. Enter the text that will be shown to the user before printing.

The message will be shown on the screen each time when the label is to be printed.

**Set maximum number of digits:** Define the maximum length of digits the counter can occupy.

**Increment or decrement:** You can define that the variable value will increase from label to label, or decrease.

**Preview:** The field shows the preview of the counter, based on your selection.

### Text Wizard - Counter Continuation


**Step:** Define the step for your counter. The counter will increase by this number on every label.

**Change value every <n> labels:** Define the number of labels, when the counter will change the value.

**Rollover when reached:** Enter the value, when reached, will cause the counter to reset the value to the starting value.

## Text Wizard - Date Field

Define the properties of the date field. The variable field will get the value from a computer clock.

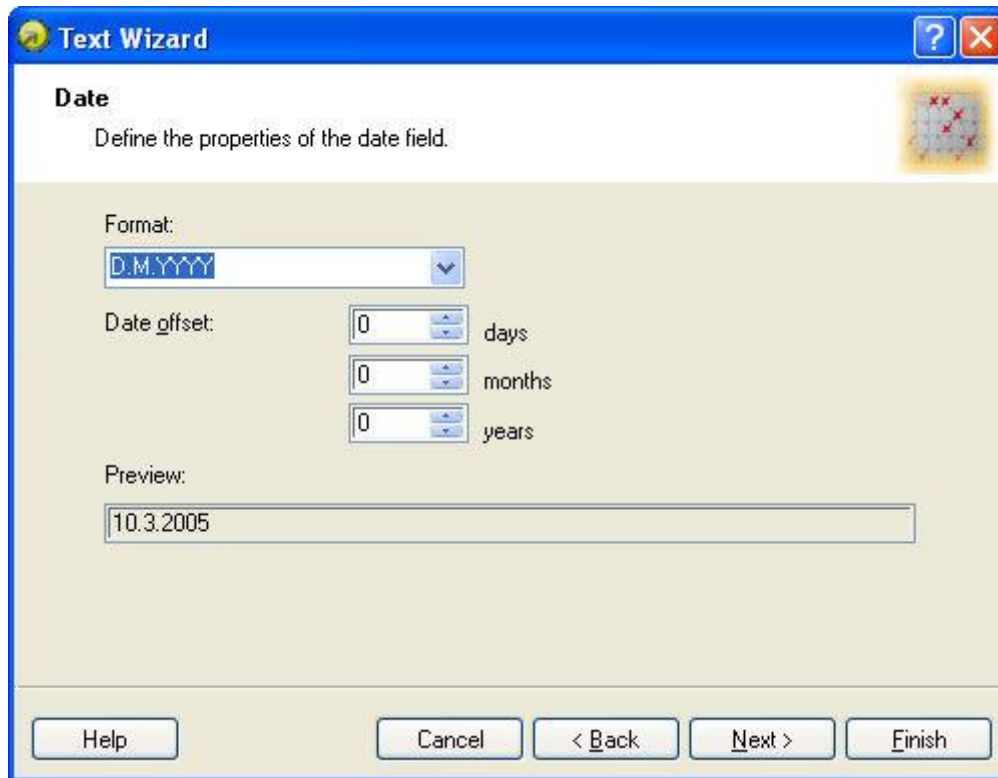

Dialog box for Text Wizard when Date field option is chosen

**Format:** Select the format for your date from the list. You can also enter the custom format.


**Date offset:** You can add a certain numbers of days, months or years to a current date and print that date instead of the current one.

**Preview:** The printer will print the date as shown on the Preview field. This way you can see how the selected date format will look on the label.

## Text Wizard - Time Field

Define the properties of the time field. The variable field will get the value from a computer clock.



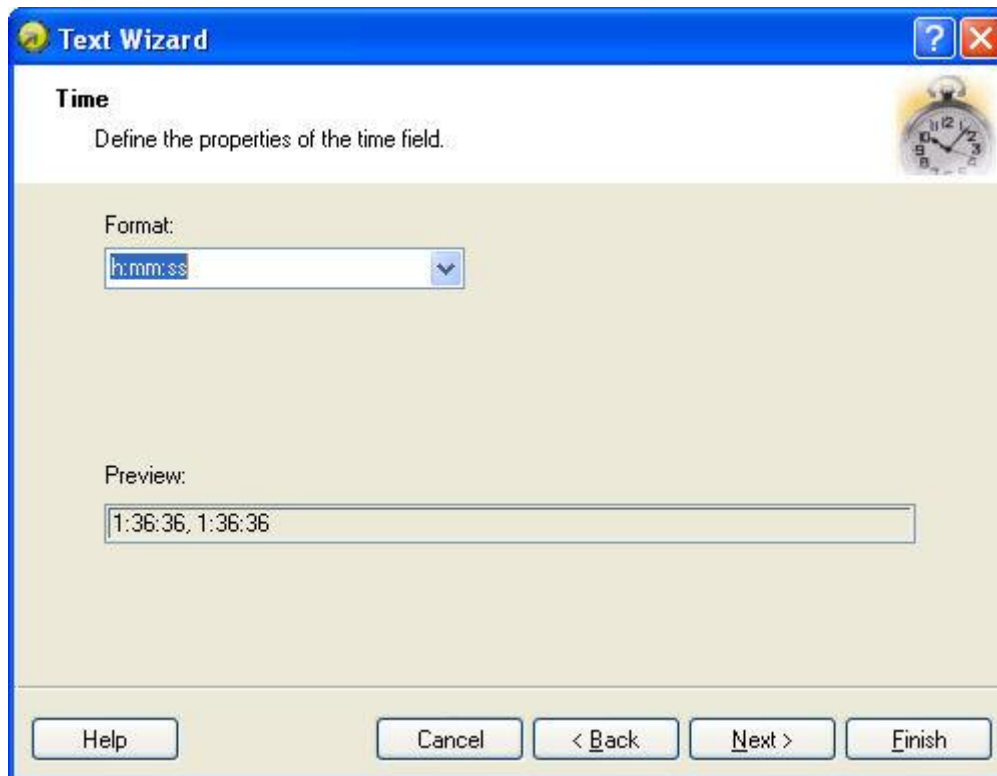


Dialog box for Text Wizard when Time field option is chosen

**Format:** Select the format for the time from the list. You can also enter the custom format.

**Preview:** The printer will print the time as shown on the Preview field. This way you can see how the selected time format will look on the label.

### **Text Wizard - Database**

Variable field linked to the database gets the value from the specified database field.

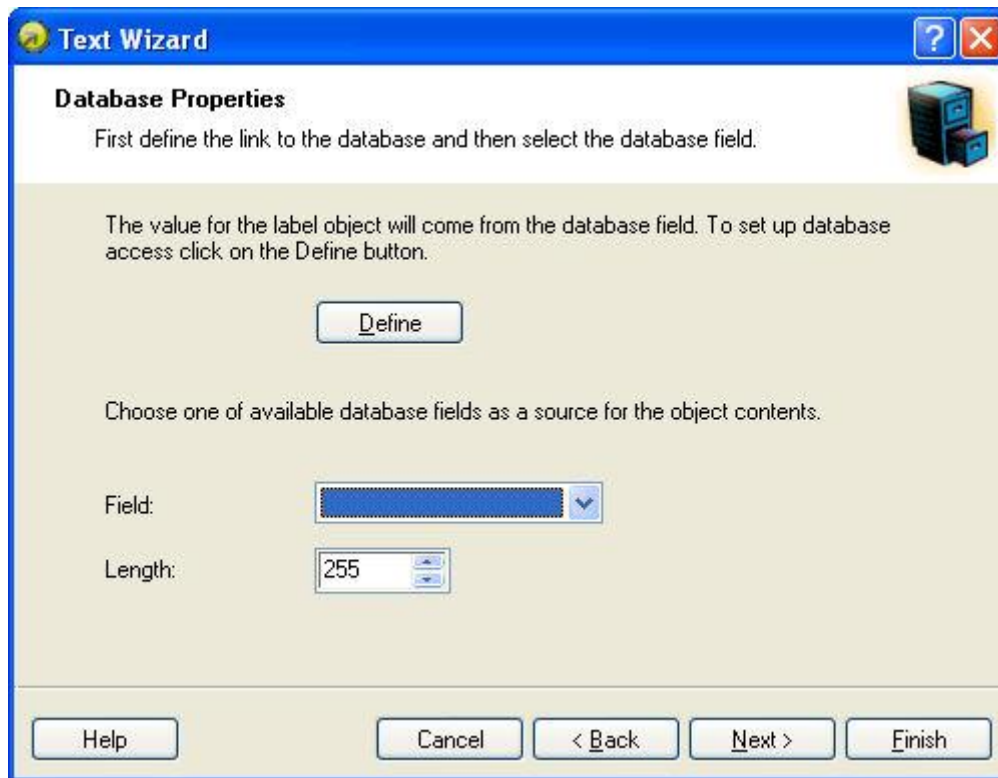

Dialog box for Text Wizard when Database option is chosen


**Define:** Click on this button to open the database wizard that will help you define the link to the database.

**Field:** Choose one of the available database fields as a source for the variable field.

**Length:** Define the maximum length of the string in variable. If field in database contains more characters, they will not be printed. This option is useful if the field length in your database is not fixed (for example tab delimited ASCII file), or if you don't want to reserve space for all the characters in database's field.

### Text Wizard - Prefix and Suffix

The variable element can have a prefix and suffix values. The prefix text is placed in front of the variable's value. The suffix text is place at the end of the variable's value.

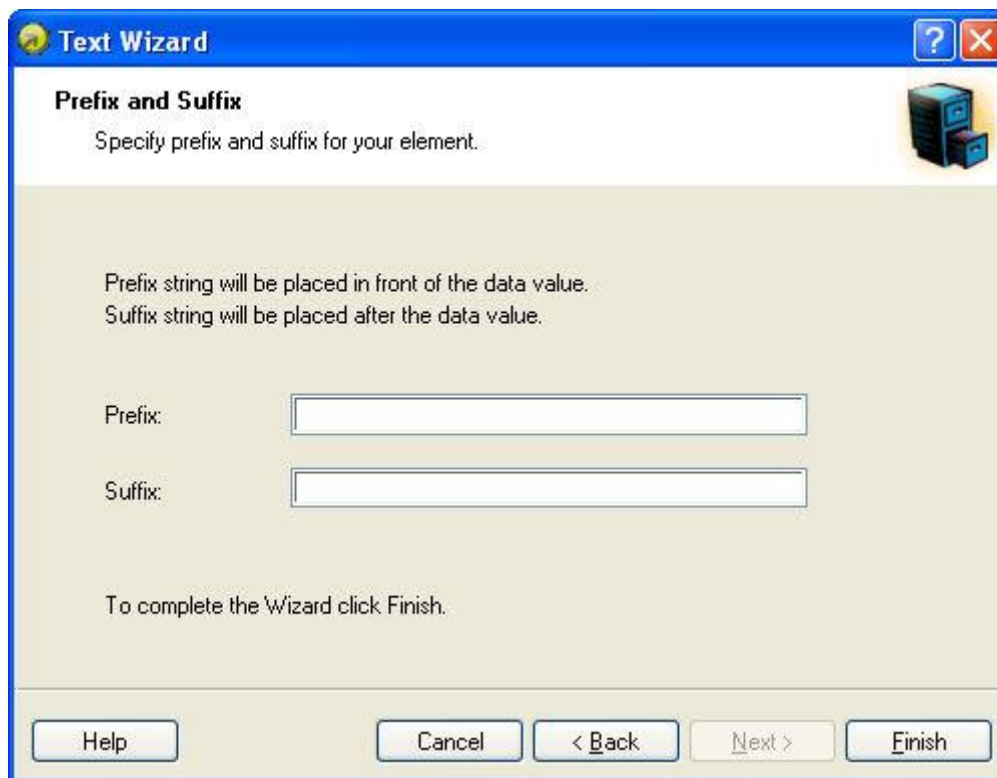

Setting Prefix and Suffix string for the variable text element


**Note:**

If you leave the edit fields empty, the prefix/suffix will not be used.

Prefix and suffix can be used in situations where they are required only if the variable has set some value. If the variable is empty, the prefix/suffix will not be printed as well.

## Using Bar Code Wizard

### Bar Code Wizard

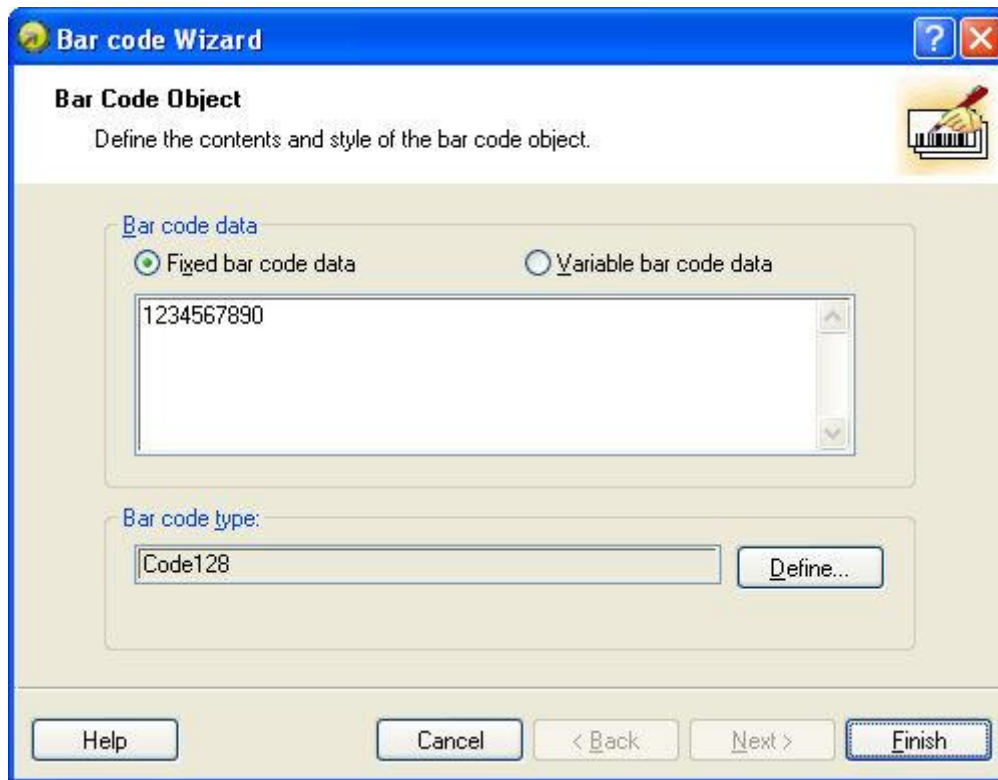

First page of bar code Wizard

Bar Code Wizard guides you to define all parameters for the bar code object.

**Fixed bar code data:** Select this option if you would like to have a fixed non-changeable content of the object. If you select this option, you can enter the text directly in this dialog box.

**Variable text:** Select this option, if you would like to have variable content of the object. Defining the content is defined in the next step.

**Note:**

When entering values for RSS composite bar codes, you need to provide the value for the linear and composite (2D) parts at the same time.

Use the following syntax for entering values for RSS composite bar codes. The pipe character (|) is used to distinguish between the components.

**The syntax:** <linear part>|<composite part>

**The example:** 12345|description

### Bar Code Wizard - Choosing Variable Bar Code

Select the type of the variable field you want to use.

**Variable name:** Type in the name of the variable that will be linked to the bar code object and will provide the value for it.

The next page of the wizard depends on your selection here.

### Bar Code Wizard - Keyboard Input

Use this variable type when you want the operator to enter a value of the variable from the keyboard before printing the specified numbers of labels.

**Prompt text for this variable field:** Fill in the message that will be shown to the user when he will enter the values for the variable field.

**Format:** Select the format of data you allow to be entered for the variable field.

**Set maximum number of characters:** Define the maximum length of characters that can be entered for the variable field.

### Bar Code Wizard - Counter

On this page of the wizard, you define the counter variable.

**Starting Value:** Set the starting value for the counter. The counter will increment or decrement from the starting value.

**Note:**

You can enter only digits for the starting value.

**Prompt for value before print:** Tick this option to enable entering the starting value of the counter when you start printing labels. Enter the text that will be shown to the user before printing.

The message will be shown on the screen each time when the label is to be printed.

**Set maximum number of digits:** Define the maximum length of digits the counter can occupy.

**Increment or decrement:** You can define that the variable value will increase from label to label, or decrease.

**Preview:** The field shows the preview of the counter, based on your selection.

### Text Wizard - Counter Continuation

**Step:** Define the step for your counter. The counter will increase by this number on every label.

**Change value every <n> labels:** Define the number of labels, when the counter will change the value.

**Rollover when reached:** Enter the value, when reached, will cause the counter to reset the value to the starting value.

## Bar Code Wizard - Date Field

Define the properties of the date field. The variable field will get the value from a computer clock.

**Format:** Select the format for your date from the list. You can also enter the custom format.

**Date offset:** You can add a certain numbers of days, months or years to a current date and print that date instead of the current one.

**Preview:** The printer will print the date as shown on the Preview field. This way you can see how the selected date format will look on the label.

## Bar Code Wizard - Time Field

Define the properties of the time field. The variable field will get the value from a computer clock.

**Format:** Select the format for the time from the list. You can also enter the custom format.

**Preview:** The printer will print the time as shown on the Preview field. This way you can see how the selected date format will look on the label.

## Bar Code Wizard - Database

Variable field linked to the database gets the value from the specified database field.

**Define:** Click on this button to open the database wizard that will help you define the link to the database.

**Field:** Choose one of the available database fields as a source for the variable field.

**Length:** Define the maximum length of the string in variable. If field in database contains more characters, they will not be printed. This option is useful if the field length in your database is not fixed (for example tab delimited ASCII file), or if you don't want to reserve space for all the characters in database's field.

## Bar Code Wizard - Prefix and Suffix

The variable element can have a prefix and suffix values. The prefix text is placed in front of the variable's value. The suffix text is place at the end of the variable's value.

**Note:**

If you leave the edit fields empty, the prefix/suffix will not be used.

Prefix and suffix can be used in situations where they are required only if the variable has set some value. If the variable is empty, the prefix/suffix will not be printed as well.


## Using EAN.UCC 128 Wizard

### Using EAN.UCC 128 Wizard

This wizard allows you to define the data structure for EAN.UCC 128 bar code. This kind of bar code has different areas of application that include trade items, logistic units, assets and locations.

The EAN.UCC 128 bar code is an extremely flexible symbology. It allows representation of data of variable length, and makes it possible to encode several pieces of information in one bar code symbol. This is called concatenation. An **Application Identifier** is the field of two or more characters at the beginning of an data value. Application identifiers are prefixes that uniquely identify the meaning and the format of the data field following. The data fields are either of fixed or variable length, depending on the AI.


### Step 1: Choosing the application identifier

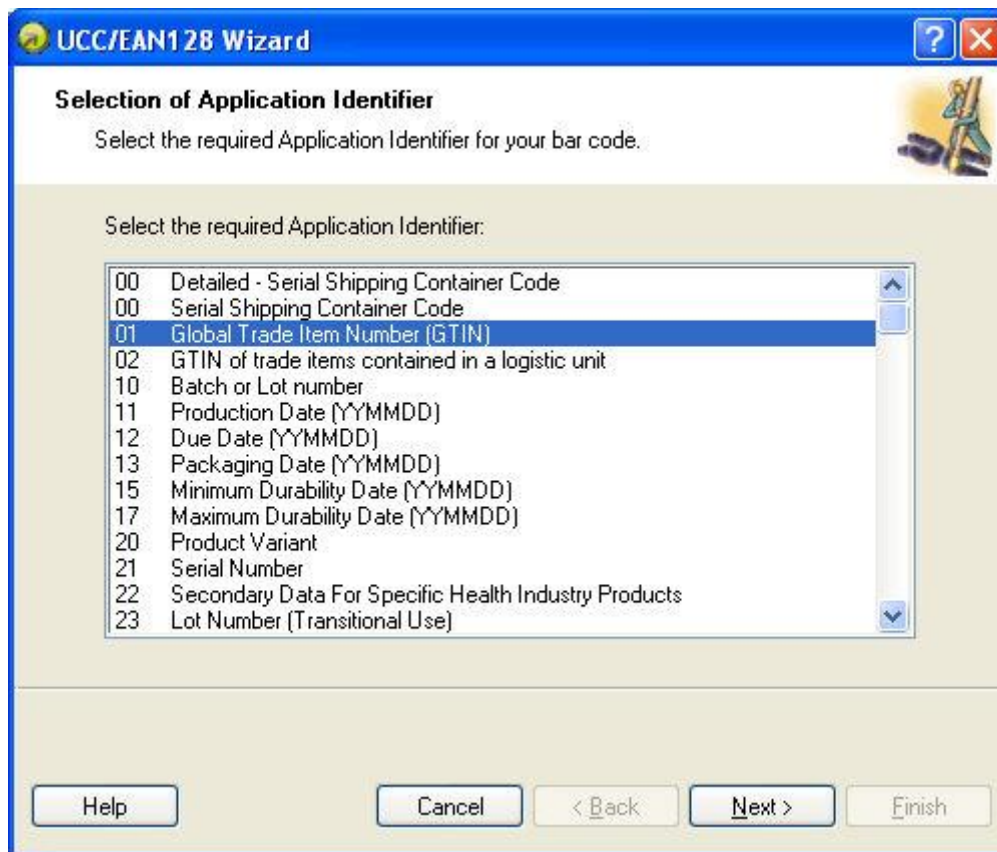

EAN.UCC 128 Wizard: Choosing application identifier

The dialog in the first step of Wizard allows you to select the EAN.UCC 128 bar code data structure. Each bar code is composed out of one or more Application Identifiers and the corresponding data.

Choose one of the Application Identifiers in this list. You can add, edit or delete Application Identifiers from the bar code later in the process.

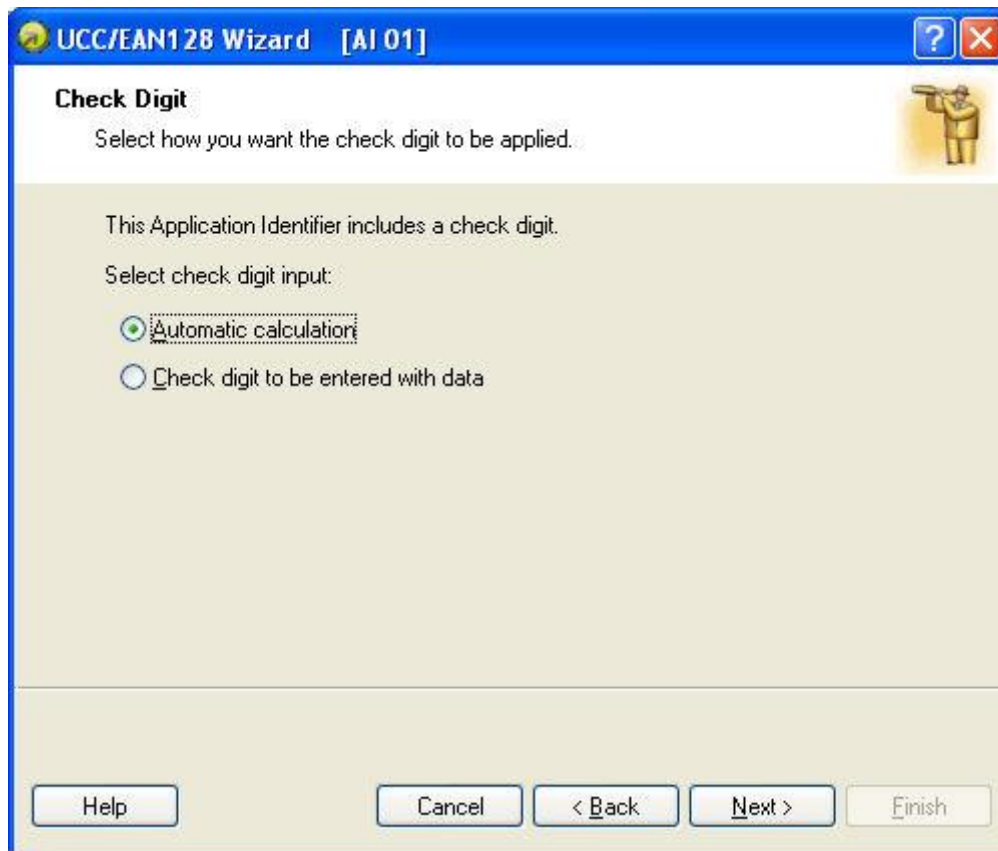


#### EAN.UCC 128 Wizard: How check digit should be applied

If you have selected the Application Identifier which data includes a check digit (for example, AI (01) - GTIN, Global Trade Item Number), then first you will have to select how the check digit will be applied. The possible options are:

- **Automatic calculation:** Check digit will be calculated by the application.
- **Check digit to be entered with data:** Manually enter the data and check digit. The application will verify, if the entered check digit is valid.



## Step 2: Application Identifier Input Type

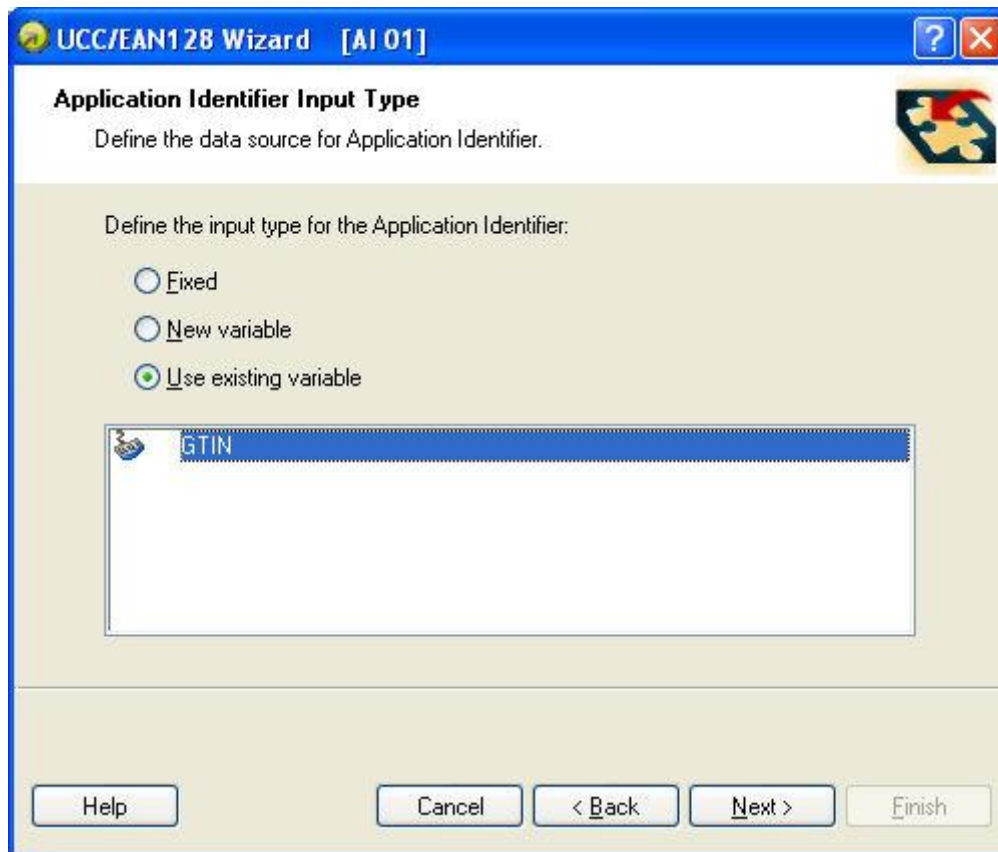

EAN.UCC 128 Wizard: Where the data for AI is obtained from

When the Application Identifier is selected, you will have to define where is the data for its value obtained from. There are three possible options:

- **Fixed:** The application identifier will have the fixed value on every label.
- **New variable:** The application identifier will be linked to the variable and have variable value on each label. You will define a new variable.
- **Use existing variable:** The application identifier will be linked to the variable and have variable value on each label. Select the existing variable from the list.

## Step 3: Entering the value for the Application Identifier


Entering fixed value for the application identifier

The screenshot shows a Windows-style dialog box titled "UCC/EAN128 Wizard [AI 01]". The main heading is "Application Identifier Value". Below the heading, it says "Enter the data for Application Identifier." There is a small icon with the number 3 and a pencil. The text "AI 01: Global Trade Item Number (GTIN)" and "Data format: n14" is displayed. Below that, it says "Enter data for the Application Identifier:" followed by a text input field containing "1234567890123". Below the input field, it says "13 digits must be entered for the Application identifier." and "Data format will be numeric." At the bottom, there are five buttons: "Help", "Cancel", "< Back", "Next >", and "Finish".

#### Entering fixed value for the application identifier

If you have selected fixed value in the previous dialog box, you should enter value for the Application Identifier here. The Wizard will let you know about the required data format for this AI and how long the AI value should be. For some AI's the field length is fixed to certain number of digits, for others only the maximum number of possible digits is stated. You will also be reminded of the AI's proper field format (numeric, alphanumeric) if you enter incorrect data.

#### Entering variable value for the application identifier

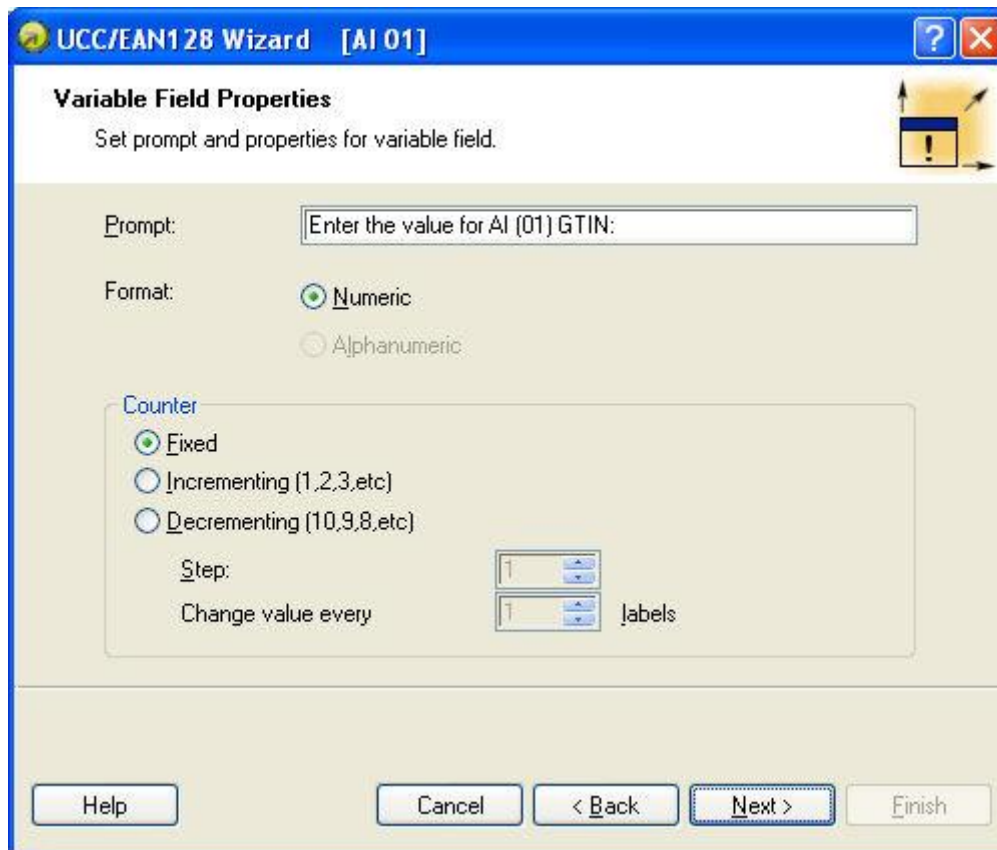

Creating new variable for the application identifier

If you have selected new variable value in previous dialog box, a new variable field will be created. You will have to provide some information about variable being used.

## Calculating Check Digit

Select how the check digit will be calculated.

1. You can enter the check digit with the data and the software will validate it.
2. The software can calculate the check digit.

## Defining New Variable


Define the properties of the variable that will provide value for the application identifier.

**Prompt:** Enter the text that will be displayed to the user at print time.

**Format:** Define the format of the variable.

**Counter:** If the variable will be a counter, define its properties.

## Step 4: List of selected application identifiers

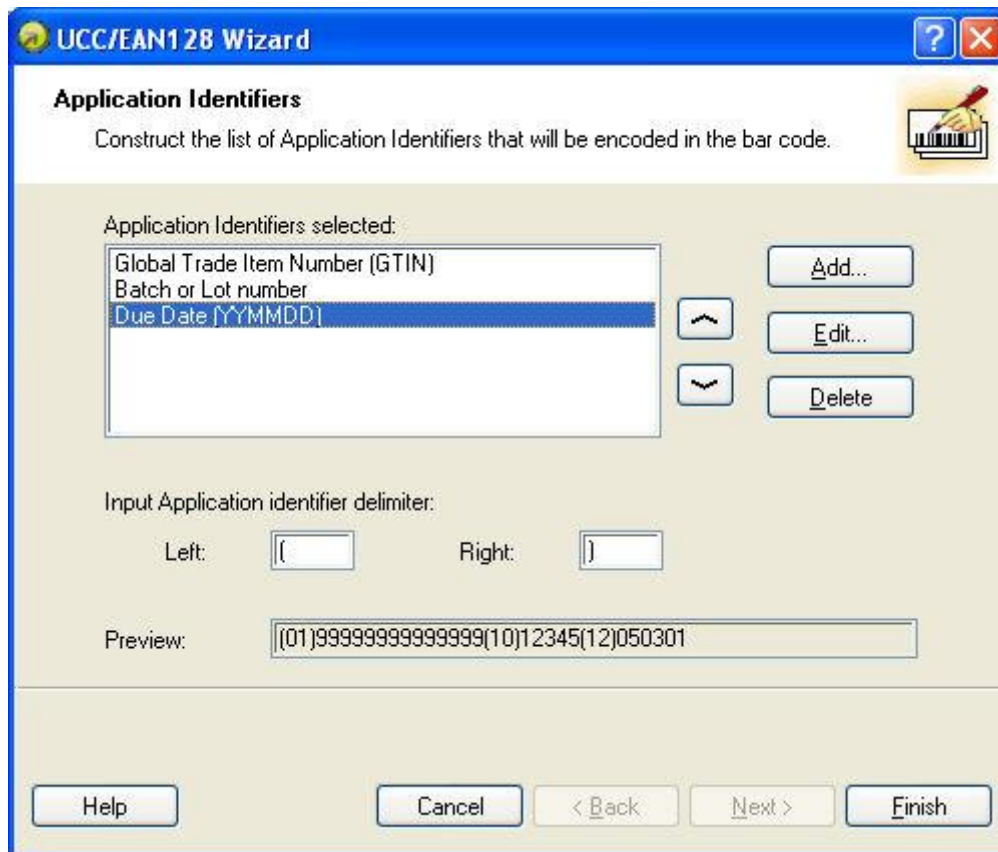

Listing the selected application identifiers

This is the last step of the EAN.UCC 128 Wizard. Here you can add, edit or delete Application Identifiers and define separator among them.

**Application Identifiers selected:** In this field all selected application identifiers for the bar code are listed in the order of creation. You can change the order with the arrow buttons.

**Add, Edit or Delete buttons:** Use these buttons to add additional application identifiers and edit or delete existing ones.

**Input Application identifier delimiter:** Define left and right separator among different application identifiers. The default setting is to use round parenthesis.

**Preview:** A sample bar code content based on your application identifier selection is shown here.

Click the **Finish** button to exit the wizard.

## Selecting Bar Code Type

### Settings for Advanced Bar Codes

#### EAN.UCC 128 Bar Code

This bar code is combined from one or more input values and standard AID - Application Identifiers. Each AID must be followed by the standard values. These values can be fixed or variable.

When the EAN.UCC 128 bar code is selected, the Bar code data field in the **Bar code Wizard** dialog box is disabled. To define the contents of the bar code, click the Next button.

From the list of available Application Identifiers select the first identifier. It will be written in bracket bellow the bar code.

When the Application Identifier includes also check digits, you have to define whether it will be calculated or entered together with data.

Next, define how you will set the values for the selected identifier. You may enter fixed value or define variable value.

#### Fixed values

When values are fixed, the Wizard dialog box will inform you what is expected to be entered – digits the maximum places...

The defined AID is presented on the list of selected Application Identifiers. Click the **Add** button to add a new AID or on the Delete to delete existing one.

Should you need to change the AID and the data, select the AID and click the **Edit** button.

You can sort the listing of AID by using the **Up** and **Down** buttons.

All the settings can be previewed on the **Preview** field.

The separator among Application Identifier can be defined by entering the required separator for the left and for the right side of the Application Identifier. The default separator is bracket.

#### Variable values

EAN.UCC 128 bar code supports keyboard variables – the variable data will be entered from the keyboard.

You can define the Prompt – the message for the operator, who will enter the data.

The data can be numeric only or the operator is allowed to enter all characters.

The value can be fixed or incremented/decremented on every label or certain number of labels with the desired step.

The variable data will be written in the **Preview** field as a series of "A" character.

When you are satisfied with the settings, click the Finish to put the EAN.UCC 128 bar code to the label.

### PDF 417 2D Code

#### **General tab**

##### **Y expansion factor**

This option defines the height of the bar code symbol.

#### **Security tab**

Accordingly to the standard, you can select among 9 levels of security. Higher security level allows more reliable reading regardless errors, but the bar code symbol is bigger.

Truncated bar codes can be used where label damage is unlikely and there is no demand for very high level of security. The truncated symbol is smaller.

##### **Aspect Ratio**

**It is the ratio between number of columns and number of rows.**

#### **Contents**

PDF 417 code can encode:

- Full 128 ASCII character set
- All 128 Extended ASCII characters
- 8-bit binary data

### DataMatrix Bar Code

#### **General tab**

##### **Y expansion factor**

This option defines the height of the bar code symbol.

##### **Aspect Ratio**

It is the ratio between number of columns and number of rows. Enter the wanted value in the fields.

#### **Details tab**

##### **ECC Type**

Error Correction Codes define the security level. You can select one from the standard levels in the pull-down menu.

##### **Format ID**

This option defines which character set will be used in the bar code. You can select one of the formats with the following filter.

01 and 11	0..9, space
-----------	-------------

02 and 12	A..Z, space
03 and 13	A..Z, 0..9, space
04 and 14	A..Z, 0..9, space,.-/
05 and 15	7-bit ASCII lower part (from 0 to 127)
06 and 16	all
07 and 17	7-bit ASCII

The formats from 1 to 7 allow the data length to 500 characters, while formats from 11 to 17 allow to 2000 characters.

### Border Size

Factors from 1 to 15 set the dimension of the border in the shape of the character “L”.

Data Matrix can encode:

- Full 128 ASCII character set
- All ISO characters
- All EBCDIC characters

MaxiCode 2D Code

### General tab

#### Y expansion factor

This option defines the height of the bar code symbol.

### Details tab

When the option **Structured** is not selected, the content of the bar code is optional.

For Structured bar code you may encode only standard contents.

### Edit Bar Code Dialog Box

This dialog box is displayed when you click the **Define** button on the Bar Code dialog box.

In this dialog box you specify the type of bar code you want to use on the label and all bar code properties:

- How the bar code should be generated
- Automatic or manual check digit calculation
- Position of the human readable
- Other options dependant on the bar code type


Click the option **Enable preview** to preview the bar code. The bar code symbol was displayed on the right side of the dialog box.

Click the **OK** button to confirm the changes you made.

Click the **Cancel** button to discard the changes.

## General Tab

On this tab you can select the bar code type you want to use and the properties of the bar code.

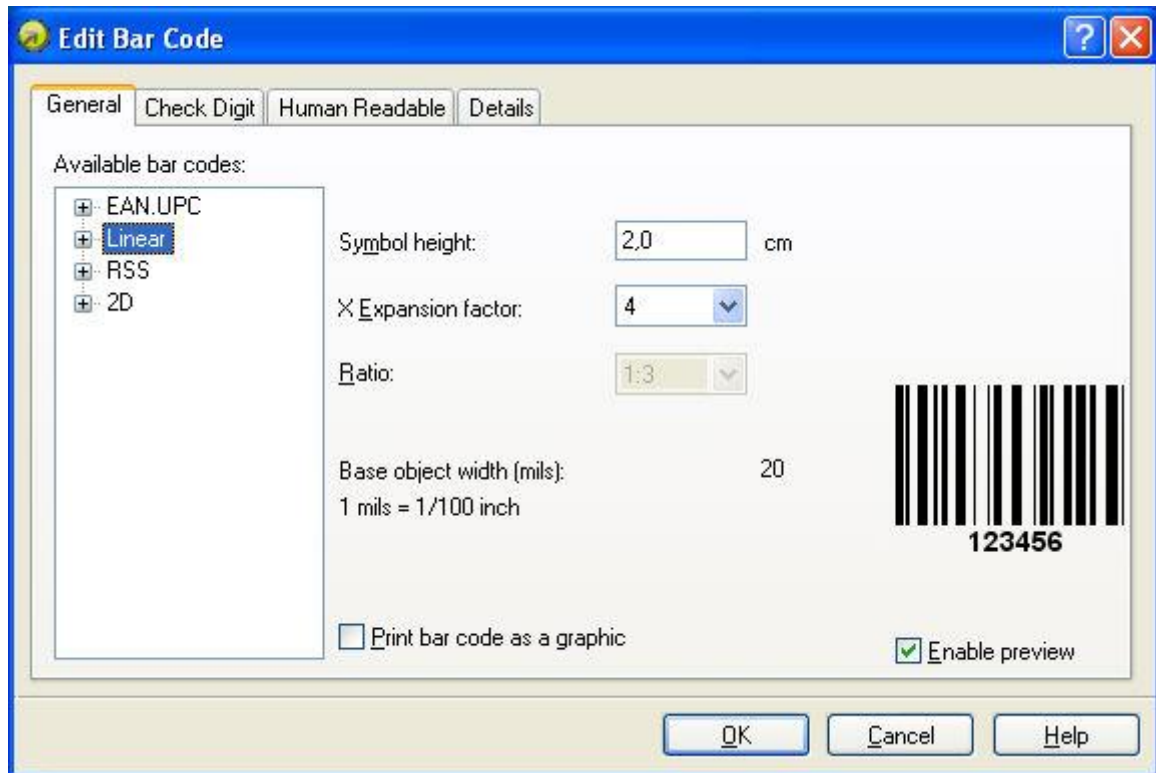

Edit bar code dialog box – General tab

**Type of bar code:** The required bar code symbology is selected from the tree list of available bar codes.

**Symbol height:** The height dimension of a bar code can be specified either by entering a value here or by resizing the bar code symbol directly on the label.

**Narrow bar width:** The width of the narrowest bar in the bar code. This is the base bar width. The widths for all wider bars are calculated by the formula: 'narrow bar width' \* 'ratio'. The result of the formula must be a whole number (it represents number of pixels).

**Ratio:** This is the ratio between narrowest and widest bar in the bar code. The ratio is locked for majority of bar codes and you cannot change it. However, for some bar codes you can change it and adjust the bar code size to your needs.

**Print bar code as graphics:** Select this option to convert the bar code object into the image and sent to the printer as image. If not selected, the bar code will print as



printer internal object. Printing bar codes as internal printer objects will speed up label printing, because less data must be transferred to the printer.

**Note:** To disable the option Print bar code as graphics, you must use the printer drivers that ship with the software.

**Enable preview:** Enable this option to see the preview of the selected bar code type. The preview will show on the right side of the dialog box.


## Check Digit Tab

This tab is used to specify if you want to use the check digit in the bar code or not. This option can only be modified for the bar codes that allow you to enable and disable the check digit.

Some bar code standards include the check-digit by the definition and it cannot be omitted. An example of such bar codes are EAN and UPC bar codes, where check digit cannot be disabled at all. But some codes allow you to freely enable/disable check-digit.

### Note:

It is always recommended to include the check digit character in the bar code. It will increase the scanning reliability.

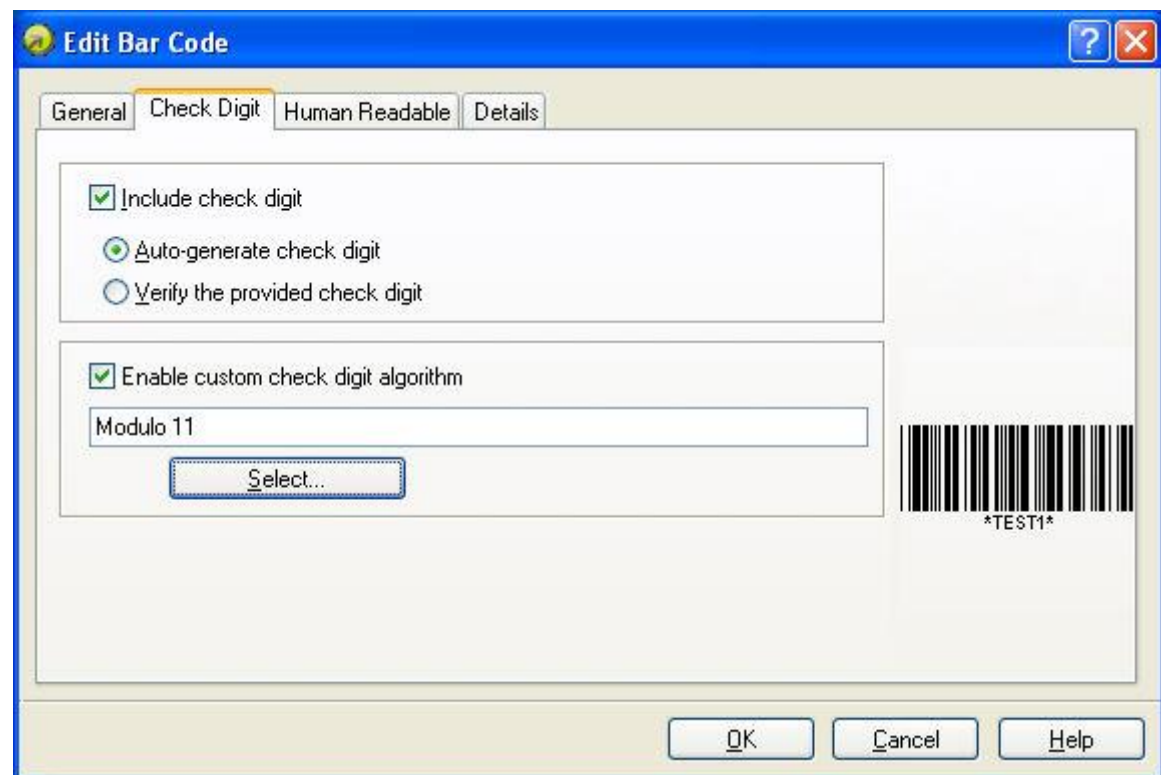

Edit bar code dialog box – Check digit tab

You can choose whether you want to input the check digit value, or let the program calculate it for you:

**Auto-generate check digit:** Check digit is calculated by the software. You must only enter the bar code data. For example: when using EAN-13 bar code input the first 12 digits, check digit on 13th place will be calculated and added automatically.

**Verify the provided check digit:** Use this command when you want to enter the value for the check-digit. At print time the entered check digit it will be verified for validity.

**Enable custom check digit algorithm:** You can set some other algorithm you want to use for calculating the check digit. Click on the button **Select** to choose the algorithm.

### Human Readable Tab

On this tab you can set the options regarding position and format of the bar code interpretation.

**No interpretation:** Bar code object does not have any human interpretation.

**Below bar code:** All data encoded in the bar code is placed beneath the bar code symbol as human readable characters.


**Above bar code:** All data encoded in the bar code is placed above the bar code symbol as human readable characters.

**Font:** Using the **Font** button, you can choose the suitable font for auto-translation text. The option **Auto font scaling** will adjust the font of the auto translation text to the size of the bar code.

#### Note:

You can only format the font for human interpretation, if the bar code is printed as graphics. When printing bar code as internal printer object, the printer will print the interpretation using resident built-in fonts.

**Contents mask** sets the custom format of the human interpretation.

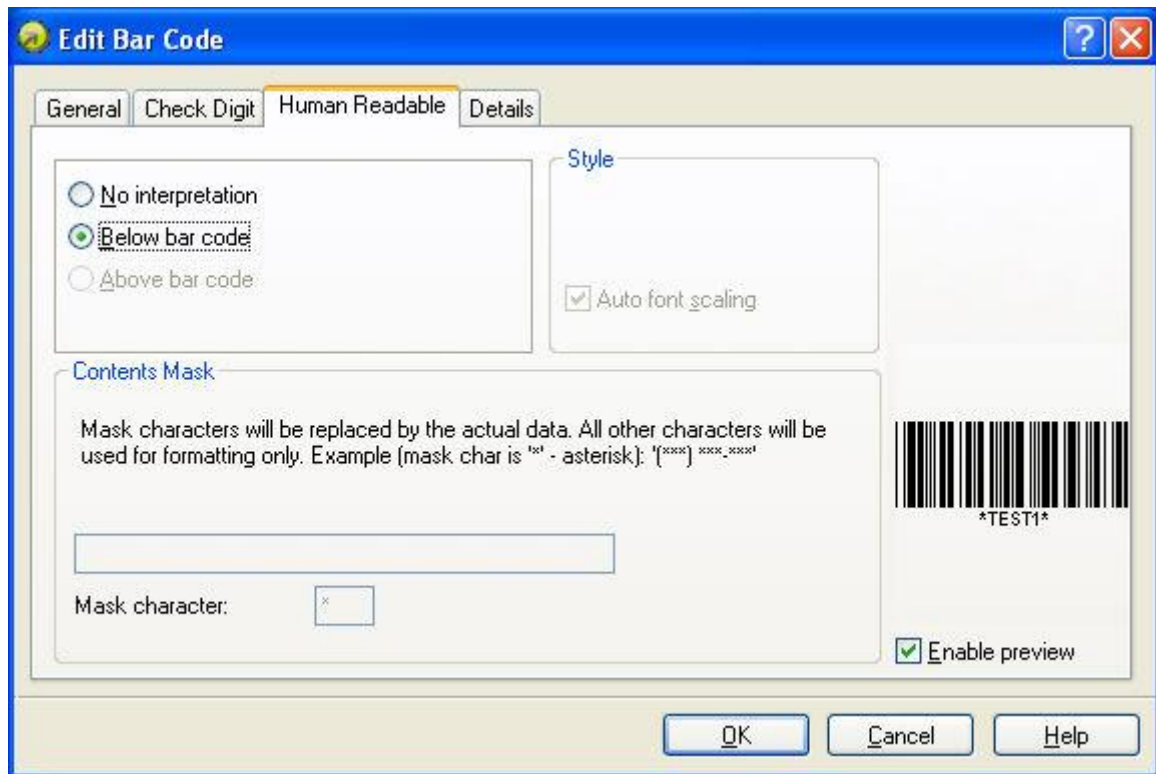

Edit bar code dialog box – Human readable tab

## Details Tab

On this tab you can define advanced settings for the bar code.

### Note:

Not all of these options are available for all bar codes and printers.


**Include quiet zones:** By checking this field you set, that the bar code will have some white space in the front and in the end for increased readability.

**Descender bars:** Some bars of a bar code will be longer than others. This is typically used with EAN and UPC bar codes that have longer bars in the beginning, in the middle and in the end of the bar code.

**Mirror horizontally/mirror vertically:** The bar code can be mirrored vertically and horizontally. bar code will usually have to be printed as graphics for this option to be accessible.

**Intercharacter gap:** Some bar codes allow you to change the gap between characters in the bar code (e. g. Code-39).

**Include EAN white space:** Before and after the bar code a special character is inserted, < or >. It indicates the width of the bar code. If you put any other object in the extent of the bar code, it will reduce the readability of the bar code. This option is only valid for EAN bar codes.

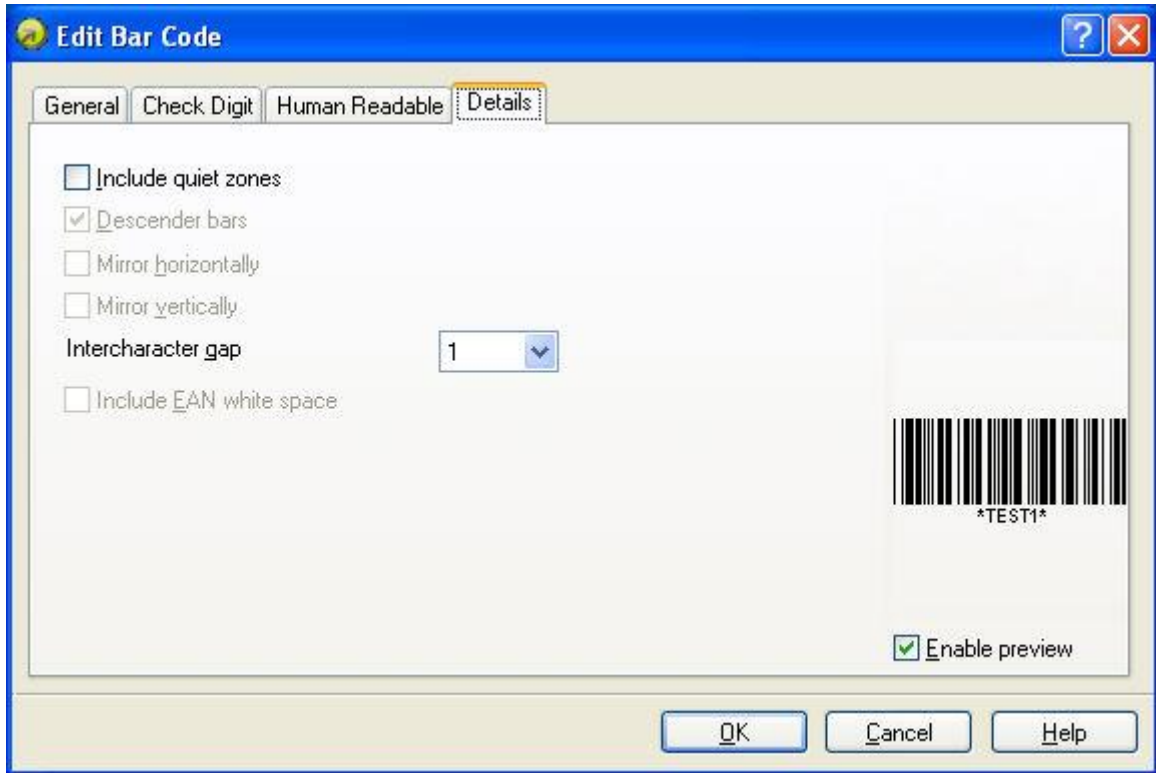

Edit bar code – Details tab

### Supported Bar Code Types

Bar code Group	Bar code Types
EAN and UPC	EAN-8, EAN-8 + 2-digit supplement, EAN-8 + 5-digit supplement, EAN-13, EAN-13 + 2-digit supplement, EAN-13 + 5-digit supplement, EAN-14, DUN-14, UPC Case Code, UPC-A, UPC-A + 2-digit supplement, UPC-A + 5-digit supplement, UPC-E, UPC-E + 2-digit supplement, UPC-E + 5-digit supplement, UPC-E(1), GS1-128 (EAN.UCC 128), SSCC, Bookland, Addon 2, Addon 5
Linear	Interleaved 2 of 5, ITF 14, ITF 16, Code 39, Code 39 Tri Optic, Code 39 Full ASCII, Code 32, Code 93, CODE 128 (A, B and C subsets), Code 128 Pharmacy, MSI, Codabar, Postnet-32, Postnet-37, Postnet-52, Postnet-62, Kix, Pharmacode, Plessy, Anker
GS1 Databar	<p><b>Linear GS1 Databar symbologies</b>                      RSS14, RSS14 Truncated, RSS14 Stacked, RSS14 Stacked Omnidirectional, RSS Limited, RSS Expanded</p> <p><b>Composite GS1 Databar symbologies</b>                      RSS14, RSS14 Truncated, RSS14 Stacked, RSS14 Stacked Omnidirectional, RSS Limited, RSS Expanded, UPC-A, UPC-E, EAN-8, EAN-13, EAN.UCC 128 &amp; CC-A/B, EAN.UCC 128 &amp;</p>

	CC-C
Two-dimensional	2D-Pharmacode, PDF-417, DataMatrix, MaxiCode, Aztec, QR, MicroQR, Codablock F, MicroPDF, InfoGlyph

### Selecting Objects

To select two or more objects, you should press the <Shift> key, and hold down, while clicking the object with a mouse.

The objects can be selected, cut, copied, pasted and edited with the right mouse button. If you click the right mouse button on the object, the menu shows all the available commands. Note that these commands are equivalent to correspondent menu commands.

You can also change the anchoring point of a selected object by holding <CTRL> while clicking the placeholders (corners of the bounding box) of the object.

### Editing Objects

To edit the properties of the object, do the following:

1. Double-click the object on the label.  
The dialog box with object properties will open.

#### Note:

You can also press the <Enter> key, while the object is selected.

2. Make modifications to the object properties.
3. Click on the **Finish** button.

### Moving Objects

To move the object on the label, do the following:

1. Select the object.
2. Click on the object with the left mouse button.
3. Hold the mouse key pressed.
4. Move the position of the cursor on the screen.  
The object will move with the cursor.

### Aligning Objects

First you have to select objects that you want to align.

#### Note:

All objects are aligned relatively to the first selected object.

Then click appropriate buttons in **the Design toolbar** to align selected objects to each other. If Align toolbar is not visible (by default it is located on the very right side of the window), enable the Design toolbar in Toolbar option in View menu.

You can align objects to:



Left



Right



Horizontal center



Top



Bottom



Vertical center

You can also distribute object evenly, so that spacing between them is equal:



Horizontally



Vertically

**Note:**

If you hold the <CTRL> key while clicking the buttons, objects are aligned relative to label and not to the first selected object.

The shortcut <Ctrl> + A opens the [Align](#) dialog box with same functionality as the Design toolbar.


**Resizing Objects**

To resize the object on the label, do the following:

1. Select the object.  
The selected object is framed with a rectangle.
2. Click on one of the small rectangles in the corners of the rectangle.
3. Hold the mouse key pressed.
4. Move the position of the cursor on the screen.  
The object will resize with the cursor.

**Rotating Label**

To rotate the label on the screen, do the following:

1. Click on the  icon in the top left corner of label design area (where vertical and horizontal ruler collide).
2. The label will rotate for 90° clockwise.


Each click on the button will rotate the label for additional 90 degrees. The initial rotate position is portrait. Each click will rotate the label to the next position. The positions in line are: portrait, landscape, rotated portrait, rotated landscape.

Rotating the label on screen will help you define label easier, when the objects on the label must be printed rotated, but you want to be able to design the label in the upside orientation.

**Note:** If you do not use NiceDriver or your printer does not support 180° printing, then only two rotations are possible (portrait and landscape).

### Rotating Objects

To rotate the object, do the following:

1. Select the object.
2. Click on the  icon in the design toolbar.  
The object will be rotated for 90° clockwise.

**Note:**

If the design toolbar is not visible, select the command Toolbars in the View menu, then click on the **Design**.

### Supported Graphics Formats

The following graphical formats are supported:

File extension	Graphics type
BMP, DIB, RLE	Windows Bitmap
GIF	CompuServer Bitmap
JPG, JPEGM JPE	JPEG Bitmap
TIFF, TIF, FAX, G3N, G3F	TIFF Bitmap
PNG	Portable Network Graphics
WMF	Windows Metafile
EMF	Enhanced Windows Metafile
ICO	Windows Icon
CUR	Windows Cursor
TGA, TARGA, VDA, ICB, VST, PIX	Targa Bitmap
PXM, PPM, PGM, PBM	Portable Pixmap, GreyMap, BitMap
JP2	JPEG2000
J2K, JPC	JPEG2000 Code Stream
PCX	Paintbrush

## Working with Pictures

### Place pictures on the label

Images can be various sizes. If the original size of the graphics is not valid for your label, you can freely resize the image by dragging the handles surrounding it. The image can be resized proportionally or stretched in both directions.

The graphics objects can also be placed on the label from the clipboard or imported from another applications (i.e. Corel Draw, scanning programs...), using either the Insert Object or Paste command from the Edit menu. In this case, the graphics is embedded in the label file. The graphics is entirely stored in the label file, not separately on the hard disk.

**Note:** When you insert the graphics as OLE object on the label (copy/paste from other software), the entire design environment of that other software is available in label design. When you double click such OLE object, that other application opens on the label. When using OLE object, the label processing might be slower. A label also occupies more space on the disk and takes more RAM. If possible, avoid using OLE objects on the label.

---

## Working with Variable Data

### Dynamic Data Overview

You may want to print labels on which the data changes for each label, for example, counter, serial numbers, date and time. To accommodate the changing data, the application can easily be used to format labels using the variable fields. Variable field can be used with text and graphics objects.

There are several types of variables you can choose to best suit your needs. Data, which must be printed as a variable, is prepared at the time of printing. It can be entered in the program from different ways:

- by the operator from the keyboard
- automatically from the computer's clock (date and time)
- automatically from the label design (using counters with predefined starting values and steps)
- database can be used to provide data for the fields

The variable data can be the same for many labels and/or specific for one label only.

### Working with Databases

The labeling software allows you to use databases, in which your data is stored. Database type can be:

1. ASCII (text file) where fields are fixed-length or are separated with any selected character.
2. Microsoft Excel database.



You can use a single database on the same label.

Database is very useful when printing labels with a large quantity of different data and variable values. You don't have to enter values for every variable before label production any more, you can use previously prepared database instead. Database in the ASCII text file can be created in any text editor (e.g. Notepad), it can be also exported from other applications (e.g. Microsoft Word. You can also use Microsoft Excel to edit your data.

Before you can use the data from the database, you have to link the database on the label. During this process the database fields get connected to the variable fields on the label.

When you start printing labels, every variable field will automatically get the value from the linked database field. Each record in the database is used on a single label.

### Using Data from the Databases

Imagine that you have the following database that contains first and last names of the people:

field1	field2
John	Smith
Jane	Wright
Bob	Doe

1. To use the data on the label, you must first define this database using the Database Wizard.
2. To include two variable texts on label create two text objects.
3. In the text wizard select **Variable** contents and click on the **Next** button.
4. Select the Database option as the source of variable data.
5. Link both text objects to the variable fields. Each to a separate field.

When you print the labels, each of the text objects on the label will get the value from the corresponding field in the database. When one label is printed, next record is used for the second label and process is repeated. Each name and surname are printed on the separate label.

### Database Wizard

#### Using Database Wizard

Process of defining a new Database access function consists of four steps (pages). On those pages you enter the data required by Wizard. You can go to the next step (page) by clicking **Next** button or return to previous with **Previous** button.

When all data needed has been entered, **Finish** button will become available, allowing you to complete the process of defining a new Database access function. Note that some options have predefined values, so you don't really need to go through all the steps of a wizard..

## Selecting Database File



Database wizard – Selecting database file

Enter the full path name of the database file in edit box or use Browse button to find the file on your computer.

**Note:** You can only select databases that are stored in files. If you use databases via ODBC or OLE DB drivers, you will have to set that manually in Database dialog box.


## Selecting Desired Fields



### Database wizard – Selecting fields

On this page you can select the fields you want to use on the label. All fields in a table are selected by default, but you will probably want to de-select some of them, especially if you have large table. Variable will be created for each selected field and can later be attached to objects.

## Selecting Which Records will be Printed

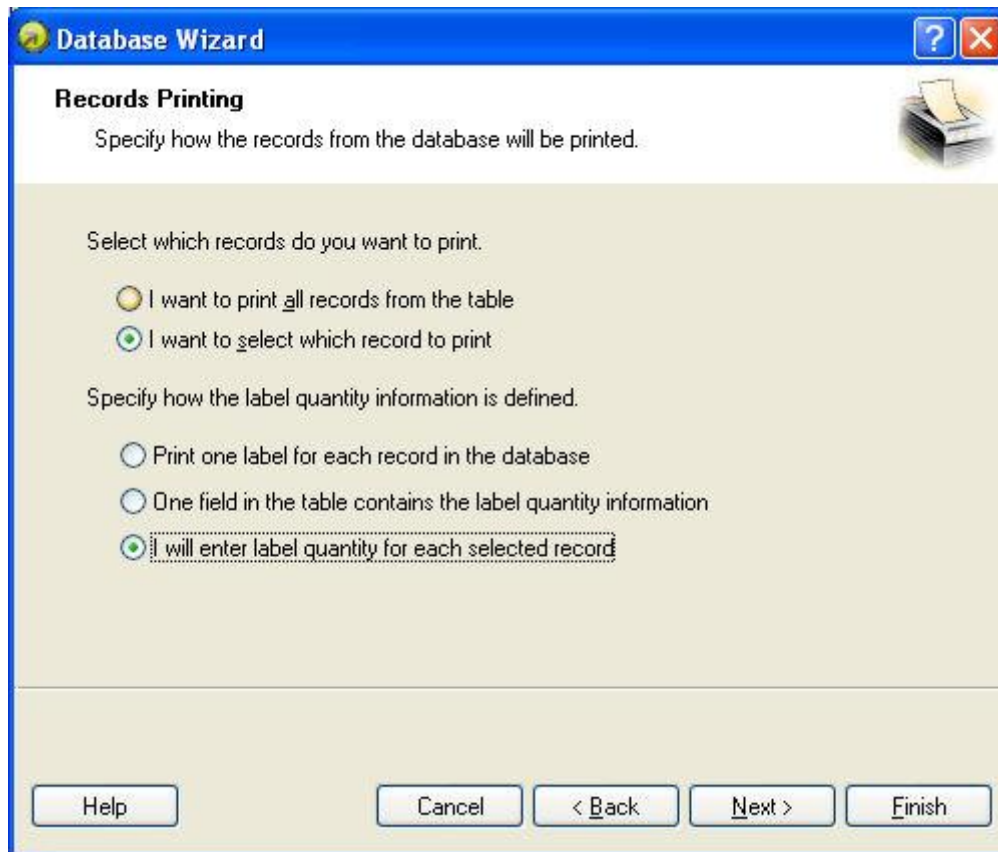

Database wizard – Selecting which records will be printed

Select the desired option how you want to use the records in the database. By default the option I want to print all records from the table is set and all records in a table will be printed one at a time. Each record will be printed only once.

If you do not want to print the entire database, you can select which records should be printed. In this case select the option **I want to select which record to print**. Prior printing you will be shown a dialog box with all records from the database. Then you will be able to select which records should be printed.

By default records are used once for a single label. If you would like to print several copies of a label with database data, you can define it in the second part of this step of the Wizard.

**A field in table contains quantity to print** option will let you chose some field in the database. This field has the information about the quantity of labels for each record. For example: You have database with records of your products. It contains a field with a numeric value, where the required number of label copies is stored. Select this field and let the application print the quantity of labels specified here.

**I will enter print quantity for each record:** This option is only accessible if you have defined to select which records should be printed. Prior printing you will be able

to select which records will be printed in the selection dialog box. At the same time you will be able to type in the exact label copy for each selected record.


## Selecting Variable Quantity from the Database Field

Select a field in the database that contains the label quantity information. The database record will be printed on as many consecutive labels as the selected field contains.

### Note:

Make sure to select the field that has been formatted with the numeric data.

## Adding the Fields to the Label

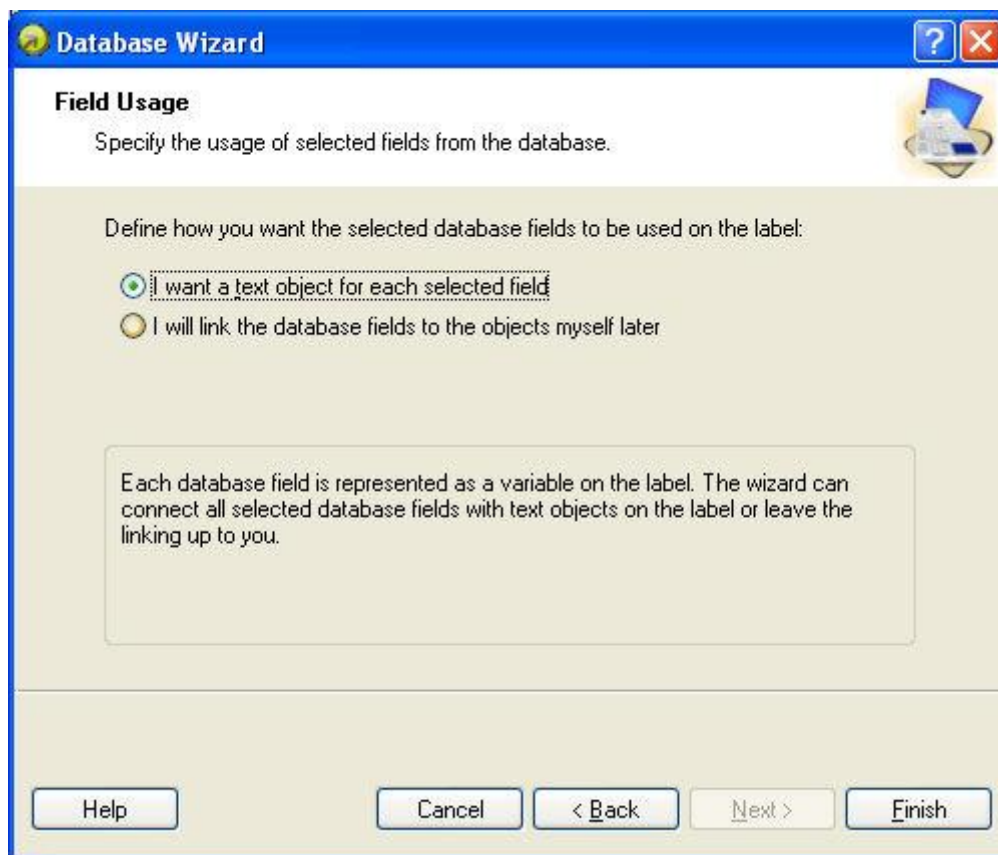


Database wizard – Adding fields to the label

On this page you specify if you want the wizard to generate text objects on the label that are already linked to the corresponding fields in table. Text objects are created in upper left corner of a label, but you can later move them to another position.

## Link Label to Text Databases

### Overview


Text databases are text files containing data values that can be used for variable objects on the label. The text database is not a real database. It contains the data values but lacks the information of the data structure, name of the fields and maximum lengths of the fields. You have to provide the missing information before the labeling software can use the data from such a text database.

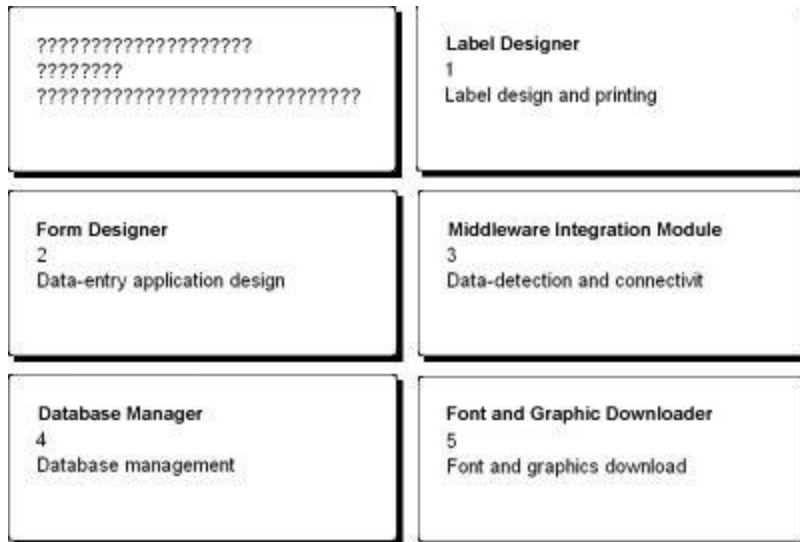


The label in design mode (on the left) and preview of the five labels with data from the database

### Connect to a Database

The labeling software offers a Database Wizard that guides you through the necessary steps to connect the database to a label. To connect your label to a database using the Database Wizard, do the following:

1. Click on the  button in the Standard Toolbar.
2. Click on the **Browse** button and point to the text database data.txt from sample folder.

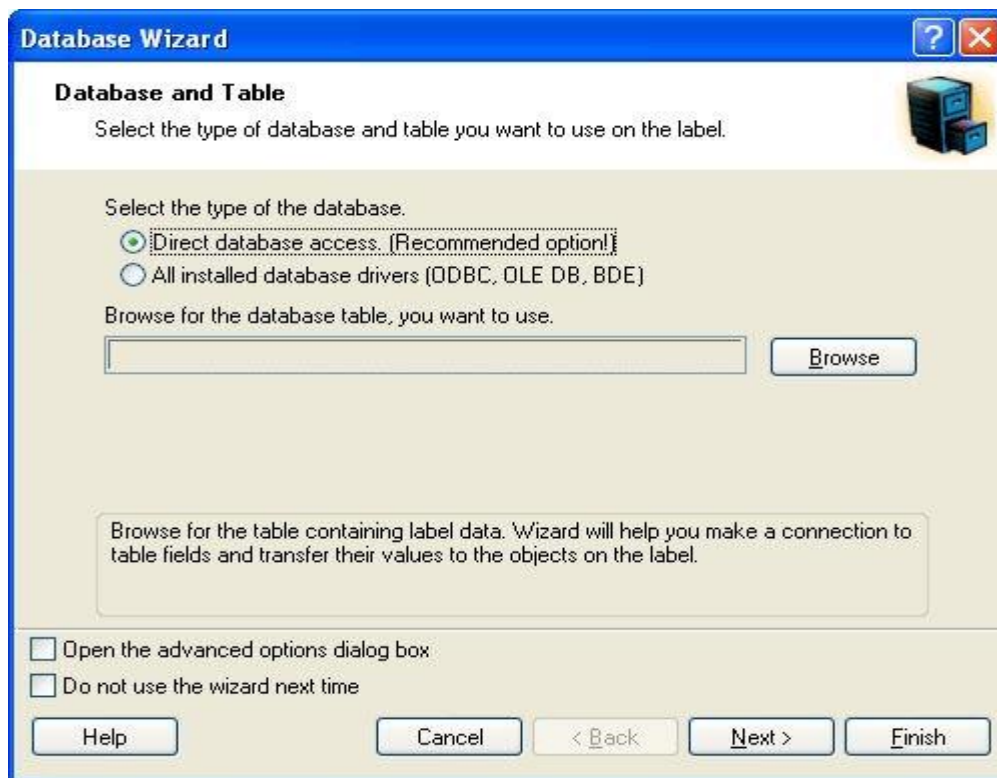

Selecting the text database

3. Click on the **Next** button.


**Note:**

If you connect to the database for the first time, you need to define the database structure. Continue with the next section.

## Format the Data with the Text File Wizard


Because the text files do not contain the structural information like real databases do, you must define the fields and their data structure. When you use the same text database some other time, you won't have to define the structure again.

1. Select the encoding of the data in your text file. The encoding selection is important when your file has multi-lingual contents (Unicode data). If in doubt what to use, first try the option **Automatic detection**. Refer to the preview, it must display to correct values.

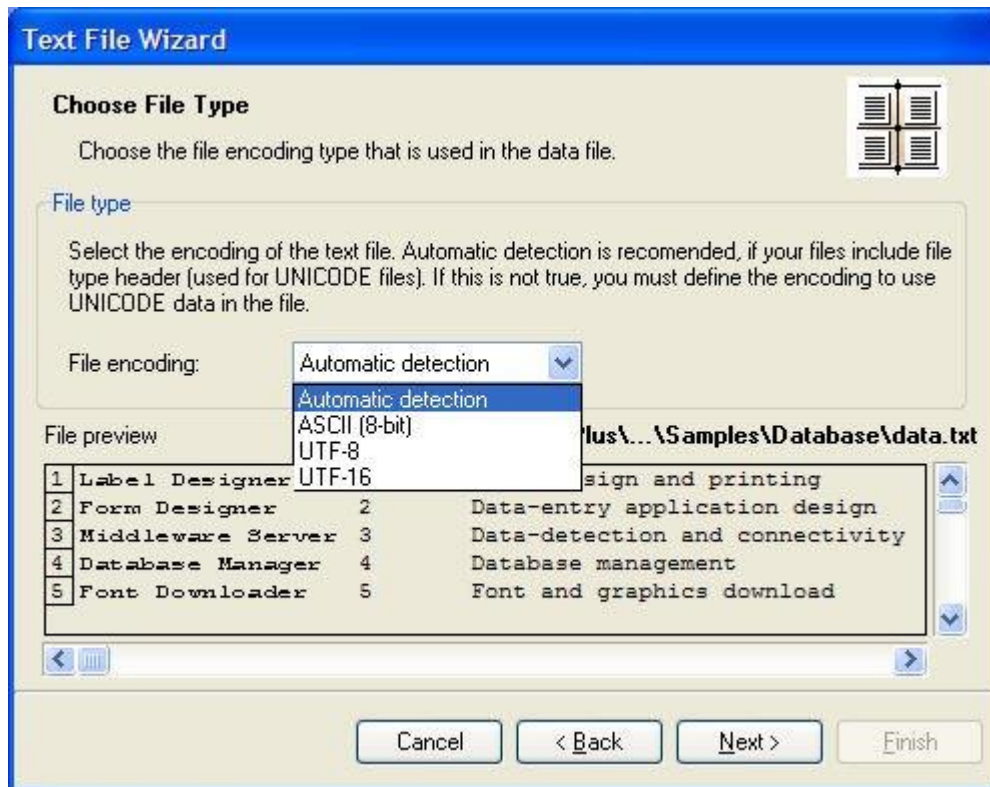

### Defining the file encoding


2. Choose the data type for the selected text database. The fields are aligned in columns, so you must select the option **Fixed**.

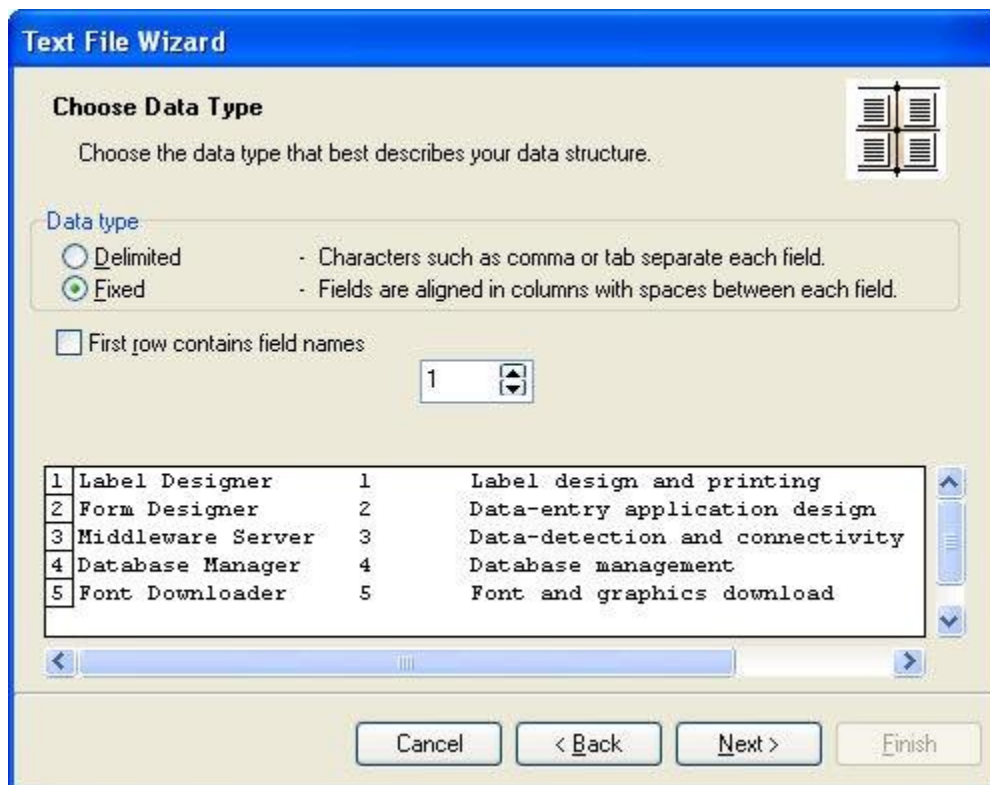



Defining the type of the text database

2. Click on the **Next** button.
3. Define the widths of the individual columns by placing a break line before the second column and before the third column.

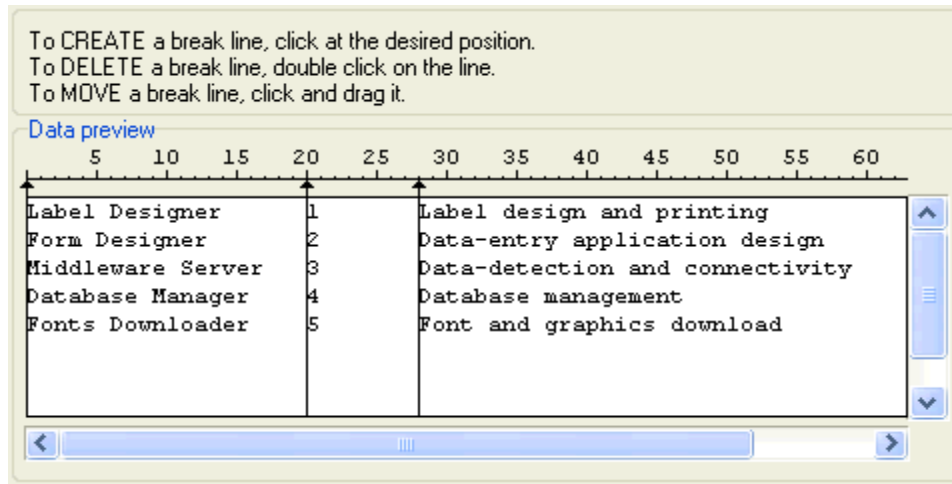

Defining the fields in the text database

4. Click on the **Next** button.
5. Accept the default field names and click on the **Next** button.
6. Review the text database structure. The field names and their maximum lengths are displayed. Click on the Finish button to close Text File Wizard.


The link to the database has been created and database fields are available on the label.

The labeling software brings you back to the Database Wizard.

## Place Database Fields on a Label

The next step in the Database Wizard opens the dialog box with the list of available fields from the database.

1. By default all fields from the database will be used on the label. Click on the Next button.

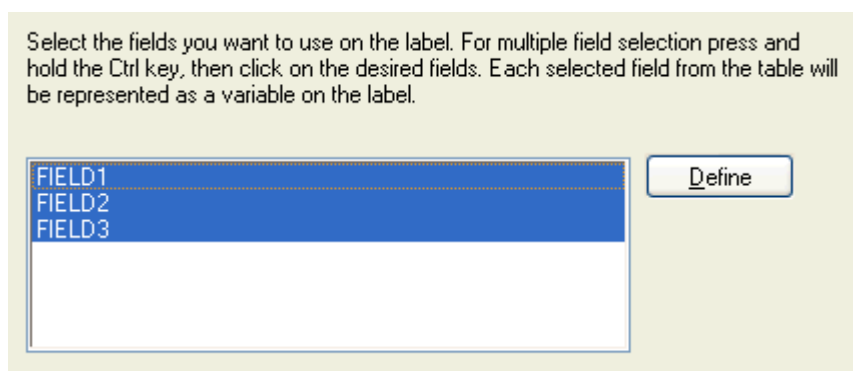

### Using all fields in the text database

2. Specify what records and how many you want to print:  
Select the options **I want to select which record to print** and **I will enter label quantity for each selected record**. Before printing labels, the table with the records will open and you will be able to select the records you want to print and the quantity of labels for each record.

Select which records do you want to print.

I want to print all records from the table

I want to select which record to print

Specify how the label quantity information is defined.

Print one label for each record in the database

One field in the table contains the label quantity information

I will enter label quantity for each selected record

### Specifying which records from the database will be printed and in what quantity

3. Click on the Next button.
4. Select if the Database Wizard should link all selected fields from the database to the text objects on the label or if you want to link the fields manually to the label.
5. Click on the Next button.
6. Select I want a text object for each selected field and click on the Finish button.

Define how you want the selected database fields to be used on the label:

I want a text object for each selected field


I will link the database fields to the objects myself later

Each field from the database will be linked to a text object

The label will show several text objects. Every field from the database is linked with the text object on the label.

## Use Print Preview to Select Data and View a Label

Now you will simulate label printing using print preview.


1. Click on the print icon  in the Standard Toolbar.
2. The Print dialog box opens with the Quantity of labels set to **Variable quantity (entered for each database record)**. This setting corresponds to your selection in the Database Wizard when you have selected the options **I want to select which record to print** and **I will enter label quantity for each selected record**.

Only the records you select will be printed in the defined quantity.




Print / Print preview dialog box

3. To choose which records to print from the database click on the **Select Records** button. The **Record Selection** dialog box will open.
4. Select the records from the database you want to print and enter the number of labels you want to print for each selected record.

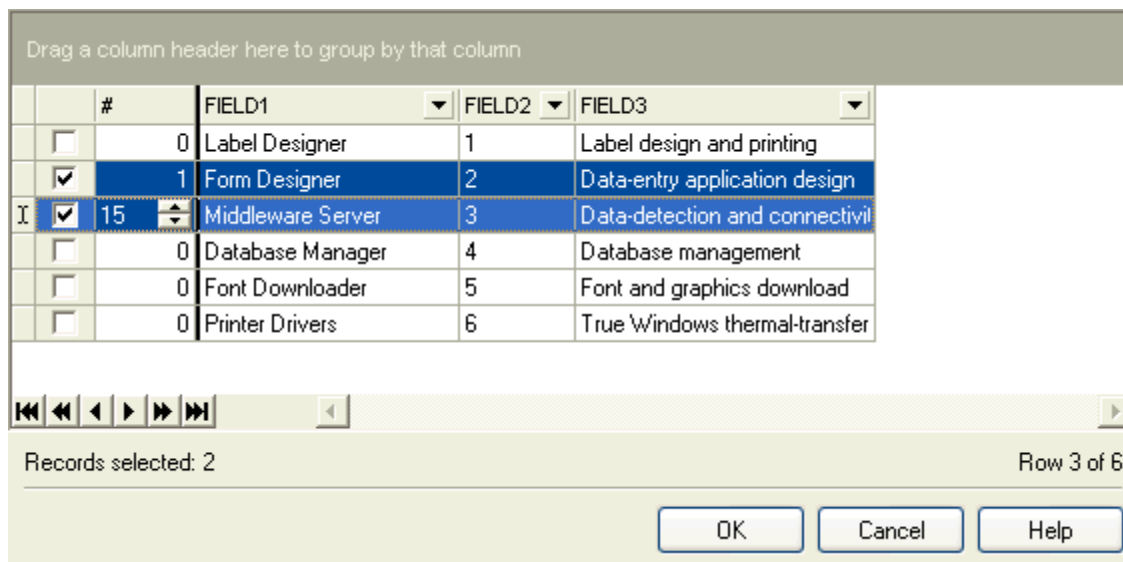

Record selection dialog box

5. Click on the **OK** button. You will return to the Print dialog box.
6. Click on the **Preview** button. Now you can preview the labels on the screen. Note that the text objects on the label change for each new record.

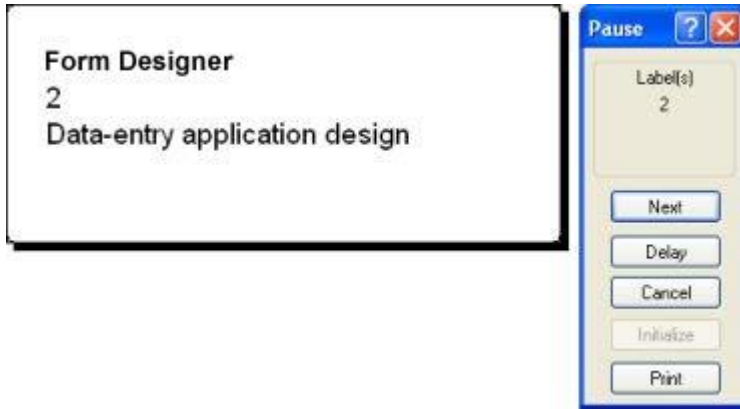


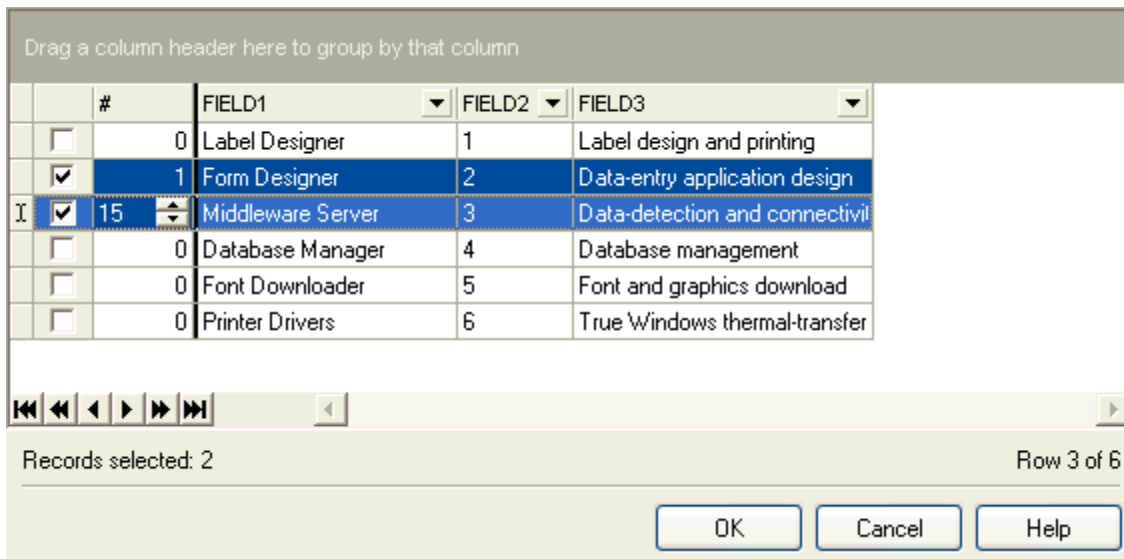
Preview of the second label in the series

7. Click on the **Next** button in the command window to advance to the next label in the series. After you see the last label in the preview series, the application will re-open the Print dialog box.
8. Click on the **Close** button to close the Print dialog box.

### Print a Label

When you are certain that the label design is correct and label preview shows the correct values from the database, you can start sending the labels to the printer. To print a label, do the following:

1. Click on the print icon  in the Standard Toolbar. The Print dialog box will open (same as the print preview dialog box).
2. Click on the button **Select Records** and select the records you want to print and specify the label quantity for each record.



Selecting records and specifying label quantity

3. Click on the **OK** button.

4. Click on the **Print** button to start printing labels.
5. Click on the **Close** button to close the dialog box.

### Using Text File Wizard


#### Text File Wizard

When the input database file is a plain ASCII text file or formatted CSV (Comma Separated Values), **Text File Wizard** will be started within Database Wizard and it will guide you through quick and easy steps of text data acquire. The main difference between real database and text file is in their data structure information. Databases include the whole information about their fields (names, data format, length) and can be automatically used with the application. Text files, on the other hand, do not have stored such information and you will have to instruct the application how the data is encoded.

When Text File Wizard finishes, it will return control back to Database Wizard, that will guide the rest of the way.

#### Choosing Data Type

Before you can use text file, you will have to define its data structure. Fields can be delimited by some sort of a separator (tab, semicolon, comma or some entirely user-defined separator) or can be of a fixed length.

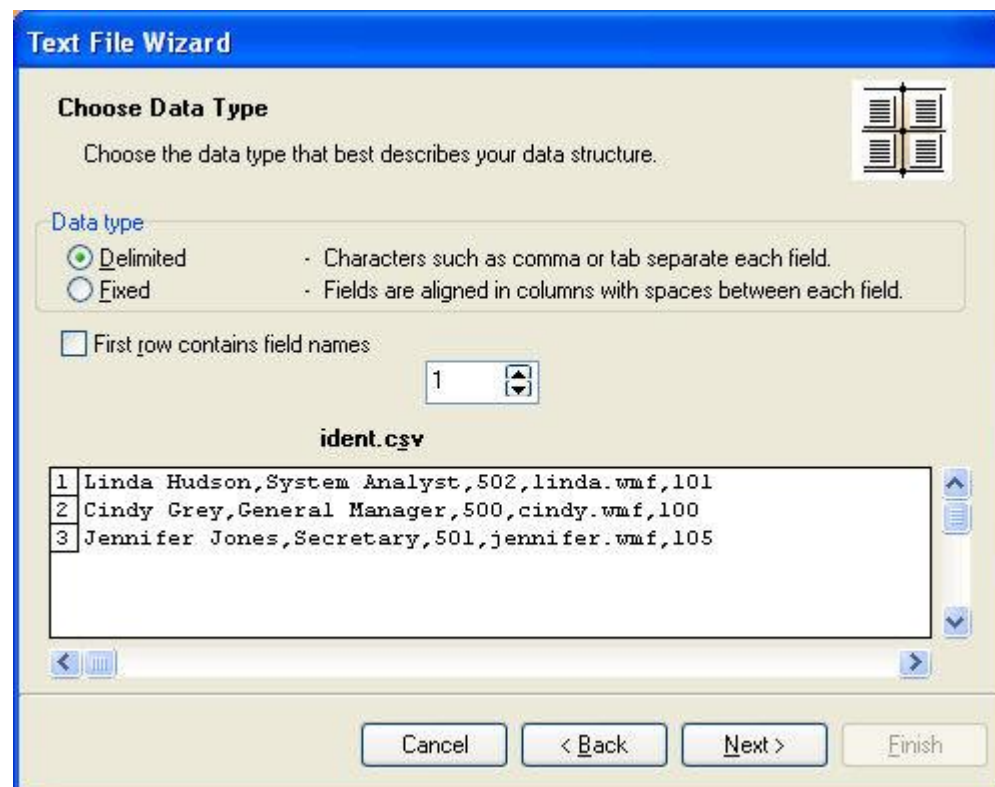


Database Wizard –Choosing Data Type

Choose Delimited, if you know that data fields are separated with some special character. File preview at the bottom of the dialog box can be helpful, if you do not know exactly how the data is organized.

Choose Fixed if you know, that your data fields always occupy the same number of characters.

Start import at row option is useful, when you do not want to import some rows at the top of the file. Most usual situation, when you would want to use this option is when text file contains some header on top of actual data fields.

## Setting the Fields

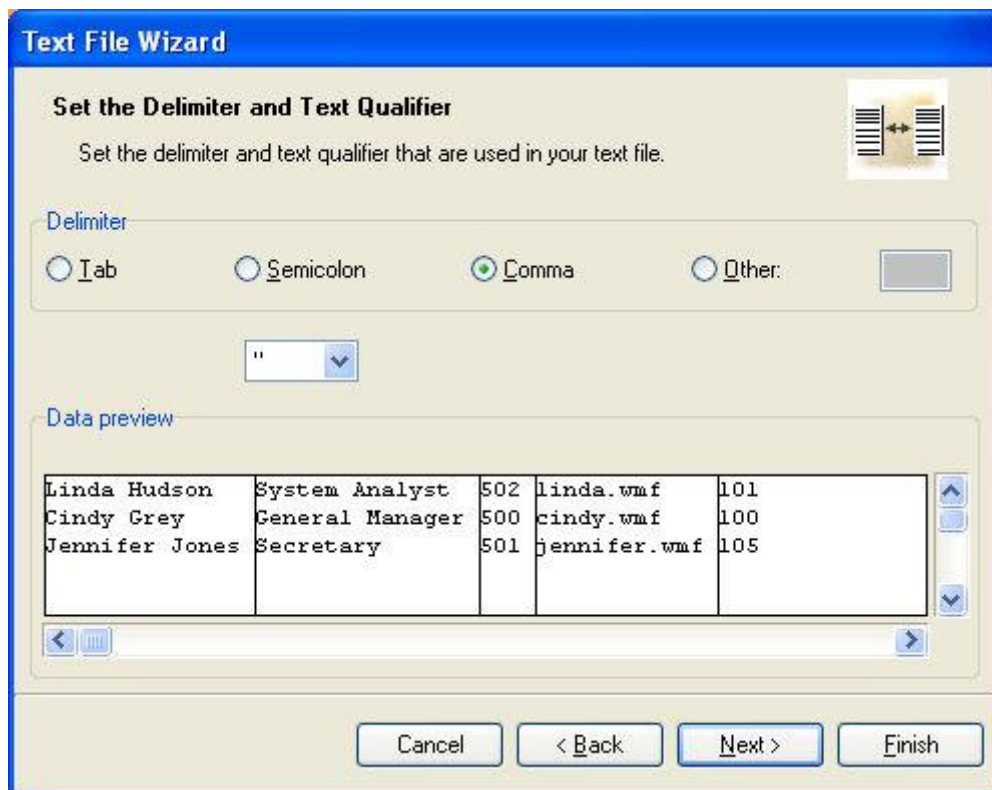


Database Wizard –Setting separator and delimiter

In the second step of the Text File Wizard you have to set the fields in the text file. If you have selected Delimited in the previous step, choose the appropriate separator here. The ones that are usually used with text files are already pre-defined. But if you require some other, there is an option to use a custom-defined one.

You can also select the Delimiter character that is used when separator character is used in the text field itself. The delimiter should be used to enclose such field. Text between two delimiter characters is treated as one field although it contains the field separator character.


The data preview in the bottom part of the dialog box will let you know if your choice of a separator character is a correct one. Fields will be separated with vertical lines, if a separator is valid.

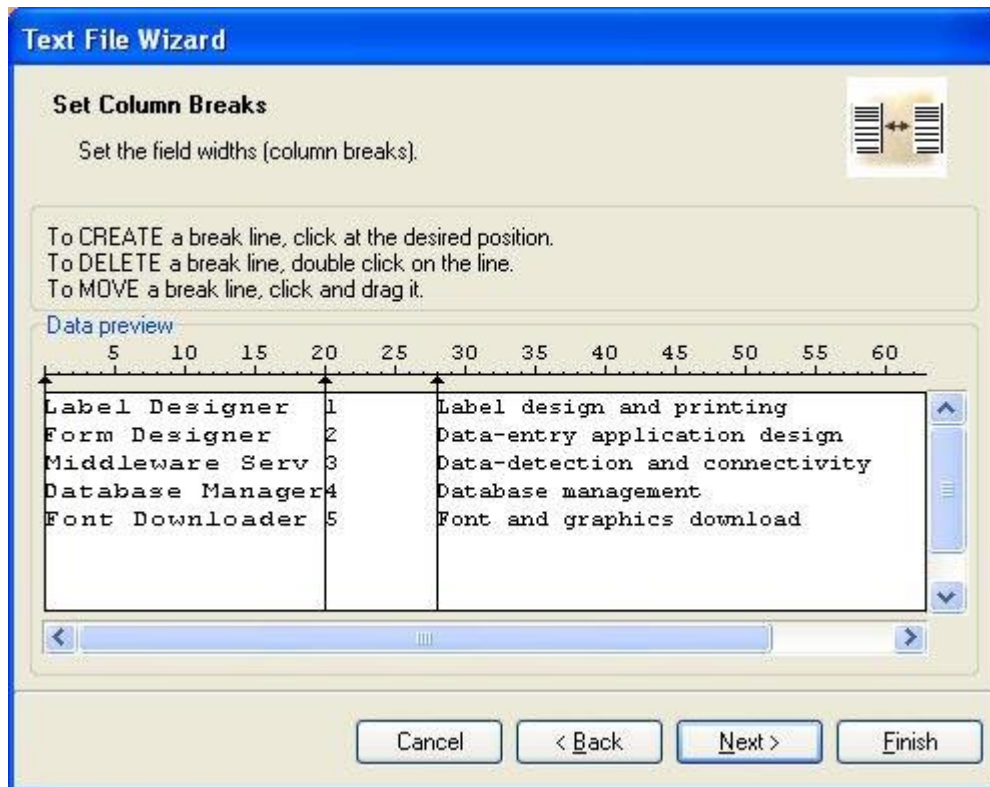

#### Database Wizard –Setting column breaks

If you have selected that your data is formatted with fixed widths, the second step of the Wizard will be slightly different. Instead of selecting character for field separation, you will have to define field widths. The Wizard makes it as simple as possible. Use a mouse and draw a vertical line to the start positions of the fields. Lines will indicate where the new field starts.

## Formatting the Fields

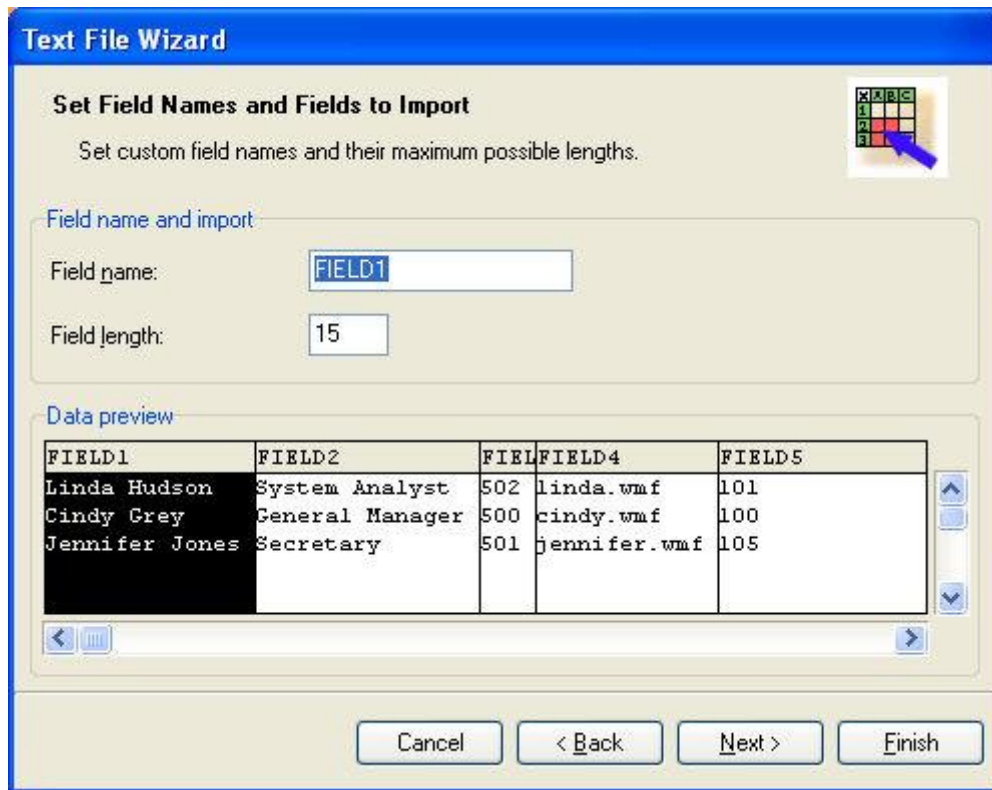

### Database Wizard –Formatting the fields

In this step of the Wizard you can review the fields' names and lengths and modify them, if necessary. You will probably use more friendly field names, so you can distinguish between them more easily.

When you are finished with Text File Wizard, the structure information of the used text file is stored to a separate file with a extension of .SCH (Scheme File). If you will try to use the same text file some other time on a different label, you will be spared all efforts of structure creating. SCH file will be automatically used and Text File Wizard will be skipped entirely.

### Available Date Formats

The date fields can be printed in various formats. In this field you define, how the date will look. You can select some of the predefined date formats or enter you own. When defining the formats, the following notation is used:

<b>D</b>	Number of the day in a month. Can occupy one or two characters.
<b>DD</b>	Number of the day in a month. Always occupies two characters. (leading zeros will be added as necessary).
<b>M</b>	M is number of the month. Can occupy one or two characters.
<b>MM</b>	MM is number of the month. Always occupies two characters.



<b>YY or YYYY</b>	The year as 2 or 4 digits number.
<b>DDD</b>	Abbreviation of the day of week name.
<b>DDDD</b>	The full day of week name.
<b>MMMM</b>	The full name of the month.
<b>MMM</b>	The abbreviation of the name of month.
<b>J</b>	The number of days since 1. January. Can occupy from one to three characters.
<b>JJJ</b>	The number of days since 1. January. Always occupies three characters.
<b>W</b>	The week number in current year. Can occupy one or two characters.
<b>WW</b>	The week number in current year. Always occupies two characters.
	Any other sequence of characters will be displayed unchanged. This way you can insert dots, commas and other characters needed to properly write the date.

**The examples:**

<b>Format</b>	<b>How the date will look</b>
D/M/YYYY	10/3/2005
DD/MM/YY	10/03/05
DDDD, D. MMMM YYYY	Thursday, 10. March 2005
JJJWWYYYY	069102005

**Available Time Formats**

The time can be printed in various formats. In this field you define, how the time will look. You can select some of the predefined time formats or enter you own. When defining the formats, the following notation is used:

<b>h</b>	Hours in 12-hour format (AM/PM will be added if they follow the time). Can occupy one or two characters.
<b>hh</b>	Hours in 12-hour format (AM/PM will be added if they follow the time). Always occupies two characters. (leading zeros will be added as necessary).
<b>H</b>	Hours in 24-hour format. Can occupy one or two characters.

<b>HH</b>	Hours in 24-hour format. Always occupies two characters.
<b>mm</b>	Used for minutes.
<b>ss</b>	Used for seconds.

**The examples:**

<b>Format</b>	<b>How the time will look</b>
h:mm {AM/PM}	8:25PM
H:mm	20:25
hh:mm:ss	08:25:36

**Using Contents Mask**

Contents mask is very useful when you must display the input data differently on the label. With contents mask you can simply reformat the data to suit your needs.

For example, you must use differently formatted human interpretation text below bar code than the data is formatted in the bar code. You do not want to define two variables for this purpose and enter the similar data twice.

The mask character will be replaced by the actual data and any other used character will be used as-is. If the current bar code value is

"AD951"

and the contents mask is

"\*\*C - \*\* /\*/"

the resulting output will be

"ADC - 95 /1/"

Powerful formatting structures can be defined using Contents mask, but it is only available with bar codes that allow custom formatting of the human interpretation. You should also make sure to print bar codes as graphics, otherwise the contents mask is not available.

**Note:**

If your data contains the asterisk "\*" character, then you will have to change the default mask character to something else. It should be a unique value, not appearing anywhere in the data.

The contents mask functionality is available with Text and Bar code objects.

# Printing and Previewing Labels

---

## Previewing Pictures

When you place a picture on the label, in design mode it is always shown in color-depth as defined in the picture.

However, when previewing the labels on-screen, the preview of the pictures depends on the dithering option set in the printer driver. All color pictures (except WMF and EMF files) are converted to monochrome images. The illusion of colors and shades of grey is accomplished by varying the pattern of dots. More dots close together will provide darker shade of grey.

The preview of the label will show pictures in the same way as they will be printed accordingly to the dithering setting. More accurate print preview is guaranteed this way.


If the picture is not previewed as you would like to print it, change the dithering setting in the printer driver.

---

## Preview and Print a Label

If you want to print a label, you can use the print preview to simulate a print output. The label preview shows the label on the screen.

Simulate printing 10 labels on the screen to check label layout and printing procedure.

1. Click on  icon in the **Standard toolbar** or select the command **Print** in the File menu. The Print dialog box appears.
2. Enter 10 for Label Quantity and click on the **Preview** button. The software will close the dialog box and simulate the production for 10 labels on the screen.

### Note:

You can select between the quantity of the labels and the quantity of the pages. The page can have one or more labels and the labels are arranged on the page in columns and rows. If you have eight labels on the page, the quantity of ten pages will print 80 labels.

When you are certain that the labels will be printed correctly and the preview shows the correct values, you can proceed to real printing. To actually print the labels, do the following:

1. Click on  icon in the **Standard toolbar**. The Print dialog box appears.

2. Enter 10 for the Label Quantity and click on the **Print** button. Your printer will now print 10 labels.

---

## Optimize the Printing Speed

There are many factors that affect the printing speed. By following the guidelines below you can dramatically increase the speed of printing:

- If your printer supports parallel and serial port, use the parallel port. Computer can send data to printer over parallel port much faster than over serial port.
- Use printer's internal fonts instead of Windows' true-type fonts. True-type fonts must be sent to printer as graphics and therefore the size of data sent to printer is much bigger (couple of kilobytes). When using internal fonts, only the text is sent to printer (couple of bytes).
- Avoid use of graphics on labels.
- When using bar codes, make sure that you don't print bar codes as graphics, if your printer supports printing bar codes.
- When using counters, the printer will internally increment the numbers if the internal fonts are used. (if supported by the printer) This means, that the printer will only receive the first number of object, and will later increment this number to print other labels. Using this option also reduces the amount of data transferred between computer and printer, but the difference is noticeable only with high quantity of labels.
- Set the printing speed to a higher value (if your printer supports it). Note that setting the printing speed usually affects the quality of printing. The higher the speed, the lower the quality. You will have to find an acceptable compromise for this.
- Don't print too much data on labels. If the speed of printing is an important factor, you should consider using preprinted labels, and only print the data, that is different on each label.

# Technical Support

---

## Online Support

You can find the latest builds, updates, workarounds for problems and Frequently Asked Questions (FAQ) on the product web site at [www.nicelabel.com](http://www.nicelabel.com). If you cannot solve the problem on your own, please contact your local vendor or representative offices listed in the topic [Contact Information](#).

For more information please refer to:

- Support FAQ: <http://kb.nicelabel.com>
  - NiceLabel FAQ: [www.nicelabel.com/Learning-center/Sales-FAQ](http://www.nicelabel.com/Learning-center/Sales-FAQ)
  - NiceLabelTutorials: [www.nicelabel.com/Learning-center/Tutorials](http://www.nicelabel.com/Learning-center/Tutorials)
  - NiceLabel Forums: [forums.nicelabel.com](http://forums.nicelabel.com)
- 

## Contact Information

### Head Office

#### Euro Plus d.o.o.

Ulica Lojzeta Hrovata 4c  
SI-4000 Kranj  
Slovenia  
Tel: +386 4 280 50 00  
Fax: +386 4 233 11 48  
[support@nicelabel.com](mailto:support@nicelabel.com)  
[www.nicelabel.com](http://www.nicelabel.com)

### North American Office

Niceware International, LLC.  
10437 Innovation Drive  
Suite 147  
Milwaukee, WI 53226  
Tel: +1 414 476 6423  
Fax: +1 414 476 7955  
Tech Support: +1 414 476 6408  
[support@nicewareintl.com](mailto:support@nicewareintl.com)  
[www.nicewareintl.com](http://www.nicewareintl.com)

### French Office

**Technical Support**

Cobarsoft SARL  
Le rempart  
32320 Montesquiou  
France  
Tel: +33 (0) 562 709 201  
Fax: +33 (0) 562 708 004  
[support@nicelabel.fr](mailto:support@nicelabel.fr)  
[www.nicelabel.fr](http://www.nicelabel.fr)

# Glossary of Terms

## **Auto translation**

Bar code interpretation in human readable characters.

## **Darkness**

The print-head temperature defines the print darkness. The higher is the temperature, the darker is the printout. (thermal printers only)

## **Descender bars**

Longer first and last bar in the EAN 13 bar codes.

## **Quiet zone**

The empty place before and after the bar code symbol. This is necessary for the bar code reader to properly read the bar code.

## **Security**

The definition of the control check-digit with some bar code types.