


LEFT SIDE

ARMREST ROTATION Flip armrest backwards at convenience if easier access or more space is required.

BACKREST ADJUSTMENT Twist lever gently upwards to recline the seat back to desired position. The max reclining is limited depending on the type of Alutech 200 delivered.

FOOTPLATE ADJUSTMENT The footrest folds back easily if space is needed either for rotation of the seat or simply to change working position

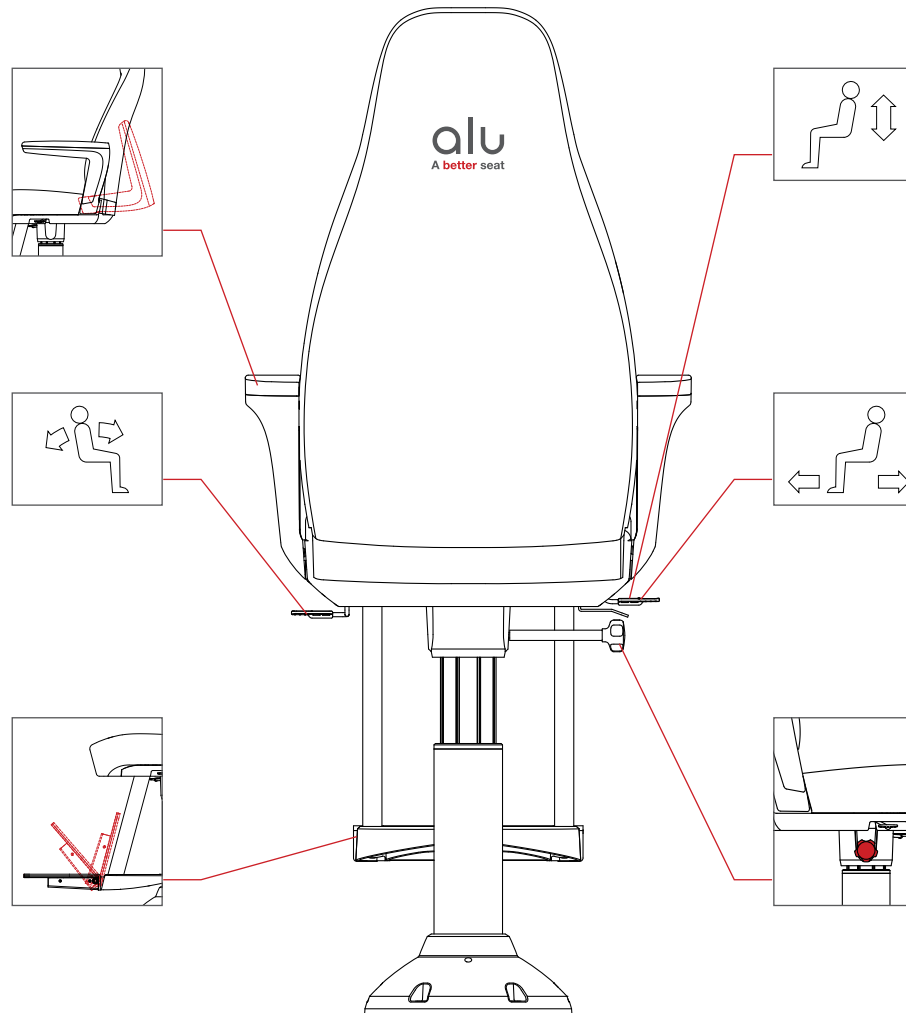

RIGHT SIDE

CHAIR HEIGHT ADJUSTMENT Gently lift the lever to adjust sitting height to desired position. As the function is operated by gas struts, please leave the seat to lift the height, but/or remain in the seat to lower the height.

DECKRAIL ADJUSTMENT Lift the lever gently to release the break from the deck rail. Please assure to push the lever back to lock the seat onto desired position. The chair should always be locked on the rail to avoid personal damage. NOTE: This function applies only if the chair is mounted onto a deckrail.

CHAIR ROTATION LOCK To rotate the chair, loosen the adjustment wheel and rotate to desired position. Remember to tighten the wheel. You may leave the chair in open position, but it is not recommended in heavy seas.

For more detailed information please refer to Installation Manual.
Please maintain the seat upholstery with mild detergents or as recommended.

© Alu Design & Services AS | Skibåsen 20b, Norway, 4636 Kristiansand | www.alu-design.no
T: +47 46 82 60 00 | F: +47 38 02 33 03 | info@alu-design.no

Page 1 | Revision A | Specifications can be changed at any time | Please contact us for updated specifications before ordering



1 REMOVING AND REPLACING THE SEAT CUSHION

Removing the seat cushion

1. Recline the backrest.
2. Remove the screw underneath the front of the seat cushion.
3. Grip the seat cushion at the front and back edge.
4. Lift the front edge of the seat cushion 30 mm.
5. Push the seat cushion back towards the rear of the chair.
6. Lift the back edge of the seat cushion.
7. Remove the seat cushion.

Replacing the seat cushion

1. Recline the backrest.
2. Align the seat cushion centrally on the chair.
3. Push the seat cushion down and back towards the rear of the chair.
4. When the cushion engages at the rear allow the cushion to move forward until the slot in the plate on the underside of the cushion engages with the raised edge on the chair plate.
5. Replace and fix the screw underneath the front of the seat cushion.

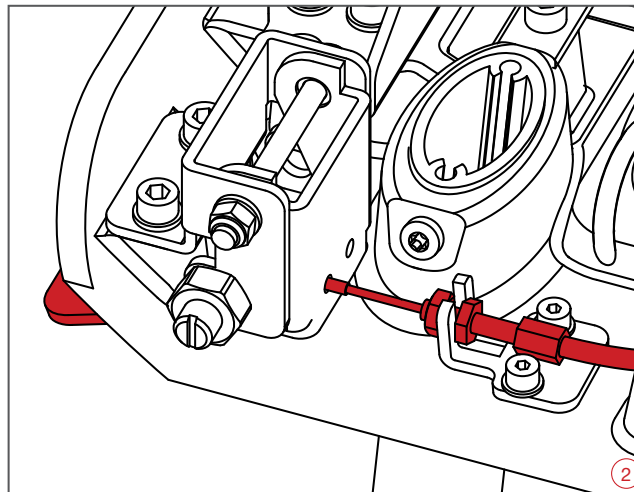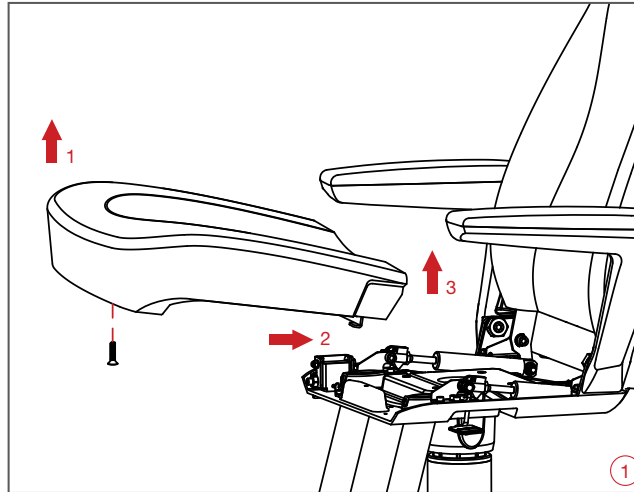

2 DECKRAIL BRAKE To adjust the deckrail brake, first remove the seat cushion as described. The deckrail brake cable is mounted under the right side of the seat.

Issue: Chair cannot be moved on the deckrail

Cause: Deckrail brake will not disengage from the deckrail.

Solution: Move the brake handle upwards until the spring loaded ball is engaged in the hole in the lever. Tighten the nuts on the outer brake cable with a 10 mm spanner until the chair can be moved on the deckrail.

Issue: Chair will not lock on the deckrail

Cause: Deckrail brake will not engage with the deckrail.

Solution: Move the brake handle down. Loosen the outer brake cable until the chair locks on the deckrail.

NOTE: The gas-struts may be stiff when new, but will relax and soften after use.