

Instruction manual

Chamber machine C200

MC06



Serial number:

.....

Service address:

Manufacturer:

MULTIVAC
Sepp Haggenmüller GmbH & Co. KG
Bahnhofstraße 4
D-87787 Wolfertschwenden
Tel.: +49 (0) 8334 601-0

www.multivac.com

Date: 26.10.2011

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization is prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

Contents

Important information on the manual	6
Machine documentation	6
Changes not covered in the manual	7
Symbols used	7
1 Safety.....	9
1.1 General safety instructions.....	9
1.1.1 Target group.....	9
1.1.2 Unauthorised modifications and manufacture of spare parts.....	10
1.2 EC Conformity.....	11
1.3 Intended use	11
1.3.1 Electromagnetic compatibility (EMC)	11
1.3.2 Non-ionising radiation	12
1.4 Reasonably foreseeable incorrect use.....	12
1.5 Warning of incorrect use	12
1.6 Residual risks	13
1.7 Obligations of the operating company.....	13
1.7.1 Selection of personnel and personnel qualifications	14
1.7.2 Personal protective gear	14
1.7.3 Specific dangers.....	14
1.7.4 Measures for avoiding hygienic risks	14
1.7.5 Gas supply stop valve	15
1.7.6 Checking the packs.....	15
1.7.7 Pump protection function	16
1.7.8 Power supply connection	16
1.8 Safety devices.....	17
1.8.1 Safety devices.....	17
1.9 Machine labels	18
1.9.1 Safety labels and notices	18
2 Description.....	21
2.1 Design of the machine	21
2.1.1 Front view.....	21
2.1.2 Rear view	22
2.2 Control terminal.....	22
2.3 Display	24
2.3.1 Startup display	24
2.3.2 Status display.....	24
2.3.3 Function display	25
2.3.4 Diagnostic display	26
2.3.5 Access rights.....	26

2.4	Menu tree	28
2.5	Process sequence.....	28
2.6	Packaging process.....	29
2.7	Preset recipes	29
2.8	Technical data.....	30
3	Start-up.....	33
3.1	Initial start-up.....	33
3.1.1	Setting up the machine	33
3.1.2	Adding oil to the vacuum pump.....	33
3.2	Connecting the power supply.....	34
3.3	Connecting inert gas	34
3.4	Cleaning the machine (basic cleaning)	35
4	Operation	36
4.1	Switching on the machine	36
4.2	Switching off the machine	36
4.3	Packing products.....	37
4.4	Opening and closing menus.....	40
4.4.1	Calling up menus	40
4.4.2	Quitting menus	40
4.5	Modifying values	40
4.6	Selecting and resetting access rights.....	41
4.6.1	Selecting access authorisations.....	41
4.6.2	Resetting the access authorisation to operator (blocking access).....	41
4.6.3	Change password for authorisation access creator	41
4.6.4	To reset authorisation access creator	41
4.7	Language selection	42
4.7.1	Selecting the language via menu	42
4.7.2	Selecting the language via the shortcut key.....	42
4.8	Working with recipes	42
4.8.1	Load recipe	42
4.8.2	Load factory settings.....	43
4.8.3	Save recipe	43
4.8.4	Delete recipe	43
4.9	Select and set process.....	44
4.9.1	Set standard process	44
4.9.2	To set MCV process.....	44
4.10	Setting the sealing.....	45
4.11	Entering basic settings	45
4.12	Modifying and resetting machine cycles	45
4.13	Display production data.....	45
4.13.1	Display total cycles of the machine	45
4.13.2	Display hours of operation	46
4.13.3	Display cycle time	46
4.13.4	Show settings.....	46

4.14	Setting the brightness of the display	46
5	Adjustment work and setup	47
5.1	Insert and remove the diagonal insert	47
6	Cleaning	48
6.1	Notes on cleaning	48
6.1.1	Rules of conduct	48
6.1.2	Creating a company cleaning directive	48
6.1.3	Measures for ensuring a long service life.....	48
6.1.4	Parameters for pre-rinsing and after-rinsing water.....	49
6.1.5	Handling cleansers.....	49
6.1.6	Use with disinfectant	50
6.1.7	Corrosion protection and lubrication	50
6.1.8	Cleaning devices.....	51
6.2	Cleaning the machine	51
6.2.1	Performing daily cleaning.....	52
6.2.2	Performing intensive cleaning	57
6.3	Care products table.....	59
7	Maintenance.....	61
7.1	Maintenance schedule	61
7.2	Recommended maintenance	62
7.2.1	Vacuum pump. - Perform the pump protection function.....	62
7.2.2	Entire machine - Visual inspection	62
7.2.3	Entire machine - Alkaline cleaning and disinfection	62
7.2.4	Entire machine - Wipe test.....	63
7.2.5	Entire machine - Acidic cleaning and disinfection	63
7.2.6	Entire machine - Intensive cleaning	63
7.2.7	Chamber lid viewing window - Visual inspection.....	63
7.2.8	Chamber lid gasket - Visual inspection	63
7.2.9	Sealing bar - Visual inspection.....	63
7.2.10	Connections - Visual inspection	63
7.2.11	Vacuum pump. - Checking oil level, refilling	64
7.2.12	Vacuum pump. - Oil change.....	64
7.2.13	Vacuum pump. - Exchanging the air de-oiling element.....	64
7.2.14	Vacuum system - Check	64
7.3	Performing the vacuum test	64
7.4	Replace the sealing bar	65
7.4.1	Remove the sealing bar	65
7.4.2	Install the sealing bar	65
7.5	Change the oil in the vacuum pump.....	66
7.5.1	Drain oil	66
7.5.2	Adding oil to the vacuum pump.....	67

8	Troubleshooting	70
8.1	Malfunctions with diagnostic message	70
8.2	Malfunctions without diagnostic message	71
9	Shutdown, transport, storage	73
9.1	Shutting down the machine	73
9.1.1	Cleaning the machine	73
9.1.2	Preserving the machine	73
9.1.3	Closing and disconnecting supply lines	73
9.2	Transporting the machine	73
9.2.1	Transporting the machine	73
9.3	Storing the machine	74
10	Disposal	75
10.1	Disposing of the machine	75
10.2	Dispose of operating materials	75
10.2.1	Disposing of oil and grease	75
10.2.2	Disposing of film	76
10.2.3	Dispose of chemicals	76
11	Spare parts	78
	Glossary	80
	Index	83

Important information on the manual

Read the manual carefully before you begin working with the machine.

- This manual is an integral component of the unit. Keep the manual for future reference.
- Do not work with the machine until you have read through the manual and completely understood its contents.
- Please contact MULTIVAC as soon as possible if there is something you do not understand in the manual! Your comments will help us to further improve the manual.
- Do not start up the machine if there are any visible defects!
- Only trained persons are permitted to install, operate and service the machine. The operating company is responsible for the qualifications and training of operating personnel.
- If you sell, transfer ownership or lend the machine to others, you must provide the manual along with it!

For reasons of clarity, some illustrations show the machine without the prescribed safety guards. Operating the machine without the safety guards is prohibited.



Injury hazard!

Altered, damaged, defective or incorrectly applied or missing safety devices will render the danger zones unprotected.

Unprotected danger zones can cause serious or even fatal injuries.

- Do NOT alter the safety devices.
- Use only genuine MULTIVAC spare parts and accessories.

Before switching on the machine each time:

- Check that all safety guards close completely and prevent reaching into the danger zones.
- Check that only those safety devices are used which are suitable for the machine equipment.
- Check that all safety devices are functional and in a technically flawless condition.

Machine documentation

- Instruction manual.
- EU Declaration of Conformity
- Supplementary sheet "Super-PIN" (loose page enclosed with the machine).



Info

The complete scope of delivery is listed in the order confirmation.

Changes not covered in the manual

Continuous development is the foundation for ensuring that our machines are technically advanced and of high quality. For this reason, you may discover slight deviations between the specifications in the manual and your machine. We also cannot rule out errors. The specifications, figures and descriptions in this manual do not constitute a legal contract between the manufacturer and customer.

Symbols used

Warnings draw your attention to hazards. Warnings are displayed in the following form:



Danger from electrical shock!

Used to indicate that serious danger of electrical shock is imminent. Ignoring this danger can cause serious or even fatal injuries.

- Observe the notices for avoiding danger.



Immediate danger!

Used to indicate that serious danger is imminent. Ignoring this danger can cause serious or even fatal injuries.

- Observe the notices for avoiding danger.



Dangerous situations!

Used to indicate dangerous situations. Non-observance can cause serious or even fatal injuries.

- Observe the notices for avoiding danger.



Potentially dangerous situations!

Used to indicate potentially dangerous situations. Ignoring this danger can cause injuries.

- Observe the notices for avoiding danger.

NOTICE

Danger of equipment damage!

Used to indicate potentially dangerous situations. Ignoring these situations can cause equipment damage.

- Observe the notices for avoiding danger.

Information that contributes to a better understanding of how the machine functions is shown in the following form:



Info

Indicates information on special features deserving your attention.

Instructions to follow are displayed in the following form:

➤ Press key A.

➤ Release screw B.

➤ Press key C.

- Enumerated items are marked with bullet points.
 - Dashes are used to mark sub-items of enumerated lists or sequences of steps to be taken.

1 Safety

1.1 General safety instructions

The machine incorporates the latest technological principles. Nevertheless, potential hazards for persons, the machine and other materials cannot be entirely excluded.

- Before you start up the machine, read through the instruction manual and follow the instructions contained therein.
- Keep the instruction manual near the machine for future reference.
- Observe the safety and accident prevention regulations valid in your country.

1.1.1 Target group

The tasks described in this manual may only be performed by trained personnel under observance of the operating manual. The manufacturer will not be liable for any damages resulting from improper operation.



Injury hazard!

Operating the machine in a negligent and inattentive manner is dangerous.

Negligent handling, inattentiveness and a disorderly work area can cause serious injuries.

- Do NOT operate the machine if you are tired or under the influence of alcohol or medication.
- Work attentively and with care.
- Wear personal protective equipment.
- Keep the work area clean and orderly.
- Only carry out work for which training has been given.

NOTICE **Danger of equipment damage!**

Improper use of the machine can damage it.
Damage can cause the machine to malfunction, which in turn can result in reject packs.

- Do NOT overload the machine.
 - Clean and service the machine on a regular basis.
 - Check if the machine is in full working order prior to starting work.
 - Do NOT start the machine if you notice defects, damage or a change in the operating behaviour of the machine.
 - Have malfunctions and damage repaired immediately by an authorised technician.
 - Repairs and service work should only be carried out by an authorised technician.
-

1.1.2 Unauthorised modifications and manufacture of spare parts

Genuine MULTIVAC spare parts and accessories provide the highest level of safety for personnel. Parts and equipment from other manufacturers have not been tested by MULTIVAC and are therefore not approved. The use of such parts can alter the properties of the machine and thereby impair safe operation.



Injury hazard!

It is very dangerous to use third-party parts.
The use of third-party parts endangers safe operation and can cause serious injuries.

- Do NOT perform any unauthorised modifications or conversions.
 - Do NOT modify or remove any protective or safety devices.
 - Use only genuine MULTIVAC spare parts and accessories.
-

The manufacturer disclaims any liability for damage caused by the use of third-party parts or unauthorised modifications.



**Choose the Original
Choose Success!**

Fig. 1: Pro Original

1.2 EC Conformity

In the design and construction of packaging lines, packaging machines or auxiliary packaging machines, the following regulations have been observed:

- EC Machinery Directive 2006/42/EC.
- EC Electromagnetic Compatibility Directive 2004/108/EEC (exception: industrial trucks such as lift trucks and die change trolleys).

The safety objectives of the EC Low Voltage Directive 2006/95/EC are complied with in accordance with point 1.5.1 of Annex I to the EC Machinery Directive 2006/42/EC (exception: industrial trucks such as lift trucks and die change trolleys).

Agent authorised to compile the relevant technical documentation according to Directive 2006/42/EC:

MULTIVAC Sepp Haggenmüller GmbH & Co. KG
Department of Technical Services
Bahnhofstrasse 4
87787 Wolfertschwenden, Germany

Manufacturer:

MULTIVAC Sepp Haggenmüller GmbH & Co. KG
Bahnhofstrasse 4
87787 Wolfertschwenden, Germany

Managing Director:

H.-J. Boekstegers

1.3 Intended use

This machine is a technical piece of equipment to be used exclusively for production purposes. Use the machine only to package products in prefabricated film pouches. The film pouches are closed with a seal seam.

For specifications see "Technical Specifications".

Any other use is considered improper and can endanger persons, the product and the machine.

1.3.1 Electromagnetic compatibility (EMC)

The machine has been designed for use in residential, business and industrial areas (without a separate power substation, it can be connected directly to the public mains). Operation can be impaired when used in an industrial environment.

1.3.2 Non-ionising radiation

The machine produces unintended non-ionising radiation. This is only emitted by electrical operating equipment as a function of its inherent technical nature. e.g. from electric motors, high voltage wires, magnetic coils. There are moreover no strong permanent magnets built into the machine. Any effect on active implants can therefore be excluded with a high degree of probability as long as a safety distance of 30 cm is maintained between the implant and the field source. Active implants can be: heart pacemakers, defibrillators etc.

1.4 Reasonably foreseeable incorrect use

The following work methods are not in accordance with regulations and therefore are prohibited:

- Operating in an atmosphere capable of explosion.
- Packing of highly flammable, combustible or explosion-prone products.
- Packing of dust-forming or powder-forming material.
- Gas flushing of film pouches with explosive gas mixtures (e.g. oxygen proportion over 21 %).
- Use of the viewing window in the chamber lid as a storage, working or cutting surface.
- Cleaning of the viewing window in the chamber lid with cleaning agents which have an abrasive effect (e.g. abrasive household liquid cleaner, scouring pads, steel wool etc).
- Aseptic packing of products.



Info

Misuse will exclude any liability on the behalf of the manufacturer. In such a case, the operating company is solely responsible.

1.5 Warning of incorrect use

- Incorrect use
For example: sealing times that are too short or too long and therefore result in improperly sealed packs which in turn damage the product.
- Neglecting the following work tasks:
 - Inspections.
 - Cleaning work.
 - Maintenance work.
- Use of third-party parts, i.e. parts that are not genuine MULTIVAC spare parts.
- Operation under impermissible environmental conditions.

1.6 Residual risks

The safety instructions in this manual serve as guidelines for trained operating personnel in safe working practice with the machine. The manufacturer cannot however foresee all possible product-related hazards. This is why the safety instructions and warnings on the machine and in this manual cannot be considered exhaustive. The operating company and operating personnel remain ultimately responsible for safety.

1.7 Obligations of the operating company

The machine and operating materials are a potential source of hazards. The operating company is required to draw up a directive that explains how to handle dangerous machines or operating supplies. The required information can be found in the following documents:

- The EC directives for occupational safety.
- National legislation.
- Accident prevention regulations.
- This manual.

The operating company is also responsible for issuing directives for conduct in emergencies.

The operating company is required continuously to monitor the technical condition of the entire machine, for example:

- Visible defects or damage
- Changes in the operating behaviour



Info

Do NOT start up the machine if there are visible defects!

1.7.1 Selection of personnel and personnel qualifications



Injury hazard!

Ignorance of proper machine handling is very dangerous.

Improper handling can lead to serious injuries.

- Instruct operating personnel on how to handle the machine correctly.
- Assign only instructed and qualified operating personnel.
- Operating personnel who are being trained or instructed should only operate the unit under the constant supervision of an experienced trained person.
- Observe the legal minimum age for personnel.
- Delegate responsibilities.
- Inform operating personnel about measures for avoiding hygienic risks.
- Have clearly written instructions available for operating personnel. If necessary, order a manual from the manufacturer in the respective official language.
- Only qualified electricians are permitted to work on the electrical equipment.
- Service operations and repair work should be carried out by authorised specialists only.

1.7.2 Personal protective gear

The operating company must ensure that the operating personnel wear the required personal protective equipment (foot protection, head gear, gloves, etc.) in accordance with the national guidelines which apply. In Europe, the directive 89/656/EEC specifies the minimum mandatory requirements for the use of personal protective equipment.

1.7.3 Specific dangers

The operating company must check whether specific dangers are present during operation, for example, dangerous vapours. The operating company must take any measures required to avoid or, if not possible, to limit danger.

1.7.4 Measures for avoiding hygienic risks

A high standard of hygiene is achieved through design, choice of materials and workmanship. It is imperative that this high level of hygiene be maintained by every operating company. Particularly where food or sterile medical products are being packed, the currently valid hygiene standards must be strictly observed. Before the machine is put into operation, the person charged with safety and/or hygiene must clarify which regulations (laws, directives, standards

etc.) apply to the product that is to be packed and how they can be put into practice.

The manufacturer assumes no liability whatsoever for any warranty claims and damage claims of any kind resulting from insufficient hygiene and insufficient cleaning.



Health hazard!

Insufficient or sporadic cleaning can promote the growth of micro-organisms which can change unfavourably the product that is to be packed.

This can severely damage the health of people, especially of the consumers.

Among other measures the following are definitely required:

- Create a company cleaning directive.
 - Perform cleaning regularly.
 - Check the effectiveness of cleaning procedures on a regular basis.
 - Follow instructions in the chapter "Cleaning".
-

1.7.5 Gas supply stop valve

The operating company is required to provide the machine with a stop valve for the gas supply. When the stop valve is closed, the supply of gas to the machine is shut off.

1.7.6 Checking the packs



Health hazard!

Faulty or damaged packs (reject packs) have far-reaching consequences, for example, spoiled products.

Spoiled products can pose a health hazard.

- Check packs on a regular basis during running operation.
 - Do NOT put faulty or damaged packs (reject packs) into circulation.
-

**Info**

It is the operating company's responsibility to determine the overall testing procedure.

Testing procedure

Depending on the type of film used and the demands placed on the packs, various types of tests are available, e.g.:

- Check seal seam width.
- Visual inspection (visual assessment).
- Storage test (store a 'good pack' for a defined period and then re-inspect).

- Stacking test (stack 'good packs' on top of each other for a defined period and then re-inspect).
- Checking the seal seam strength with a tensile testing machine.
- Low-pressure test (for vacuum packs).
- Measuring the residual oxygen (for gas-flushed packs).

The following errors can result in a pack not being airtight:

- A leaky seal seam.
 - The packing material is dirty in the seal seam area.
 - The sealing time is too short.
- Damage on the pack.
 - Sharp-edged products piercing through the pack.

Time of inspection

The pack always requires inspection at the following times:

- Initial putting of the machine into operation.
- A defined time interval has been reached in running operation.
- A different pack size was used.
- Other types of film or other film thicknesses were used.
- Spare parts or parts subject to wear were installed.
- A machine malfunction was resolved.
- Settings were changed on the machine.

1.7.7 Pump protection function

After the machine has been switched off, the vacuum pump continues running for a set time. During this time, the undesired liquid in the oil of the vacuum pump evaporates. This increases the lifespan of the vacuum pump. When packaging moist or liquid products, the operator is obligated to perform this function at least once a day, at the end of a working day. The manufacturer assumes no liability whatsoever for any warranty claims and damage claims of any kind that result from the insufficient performance of this function.

NOTICE Danger of equipment damage!

Penetration by foreign matter (e.g. liquids, product residue, foreign bodies) will damage the vacuum pump.

Damage can cause the machine to malfunction, which in turn can result in reject packs.

- Cancel the evacuation procedure immediately if foreign matter is sucked in.
- Change the oil in the vacuum pump.

1.7.8 Power supply connection

The operating company is obliged to connect the machine to the mains electricity at an always easily accessible place. In the case of

an emergency the machine must be capable of being disconnected immediately from the mains electricity.

1.8 Safety devices

Safety devices on the machine:



Fig. 2: Safety devices

- 1 Protective device



Injury hazard!

Altered, damaged, defective or incorrectly applied or missing safety devices will render the danger zones unprotected. Unprotected danger zones can cause serious or even fatal injuries.

- Do NOT alter the safety devices.
 - Use only genuine MULTIVAC spare parts and accessories.
- Before switching on the machine each time:
- Check that all safety guards close completely and prevent reaching into the danger zones.
 - Check that only those safety devices are used which are suitable for the machine equipment.
 - Check that all safety devices are functional and in a technically flawless condition.

1.8.1 Safety devices

Safety devices cover the danger zones lying beneath them. Depending on the equipment of the machine, various safety devices are used, e.g. side panels, doors, protective plates, etc.



Injury hazard!

Missing safety devices result in unprotected danger zones. Reaching into unprotected danger zones can lead to serious or even fatal injuries.

- Do NOT put the machine into operation without safety devices.
- Check that all safety devices are attached and in a technically flawless condition.
- Check that all safety devices are completely closed without gaps.

1.9 Machine labels

Safety and information labels have been attached to the machine.

- Do NOT remove these labels.
- Make sure all labels are intact and legible.
- If necessary, clean the labels with soap and water.
 - Do NOT clean the labels with solvents.
- Replace damaged, scratched or illegible labels with new ones.



Info





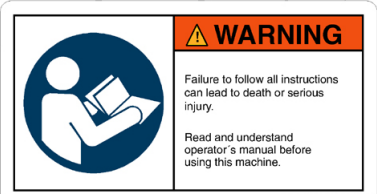
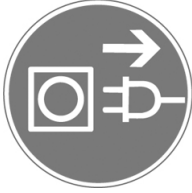
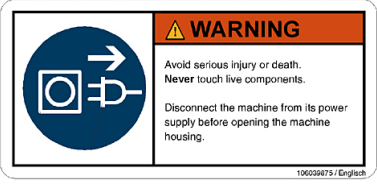
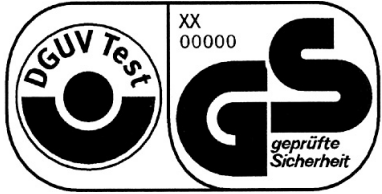
Labels can be obtained from the manufacturer.

1.9.1 Safety labels and notices

Front view



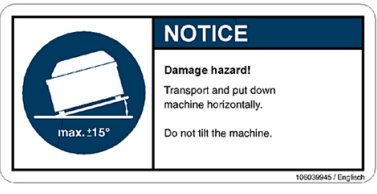

Fig. 3: Front view of the position of the signs

Position	Sign
1	 <p>Fig. 4: Type plate</p>
2	<div>  <p>Fig. 5: ISO Mandatory advisory sign: inclination of the machine</p> </div> <div>  <p>Fig. 6: ANSI Mandatory advisory sign: inclination of the machine</p> </div>
3	<div>  <p>Fig. 7: ISO Mandatory advisory sign: Read the operating manual</p> </div> <div>  <p>Fig. 8: ANSI Mandatory advisory sign: Read the operating manual</p> </div>
4	<div>  <p>Fig. 9: ISO Mandatory advisory sign: unplug the power plug</p> </div> <div>  <p>Fig. 10: ANSI Mandatory advisory sign: unplug the power plug</p> </div>
5	 <p>Fig. 11: Safety approved symbol</p>

Rear view



Fig. 12: Rear view of the position of the signs

Position	Sign
1	 <p>Fig. 13: Safety label on gas connection (Optional)</p>
2	 <p>Fig. 14: Inert gas input pressure sign (Optional)</p>

2 Description

2.1 Design of the machine

2.1.1 Front view



Fig. 15: Front view

- 1 Chamber lid
- 2 Counter-pressure bar or sealing bar (option)
- 3 Chamber lid gasket
- 4 Chamber
- 5 Sealing bar
- 6 Gas nozzle (option)
- 7 Control terminal
- 8 Locking for lid

2.1.2 Rear view

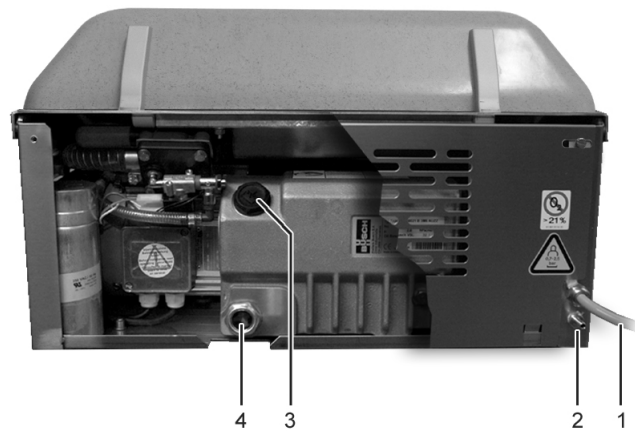


Fig. 16: Rear view

- 1 Power supply connection
- 2 (Optional) Inert gas connection
- 3 Screw plug of fill opening
- 4 Screw plug of drain opening with oil sight glass

2.2 Control terminal

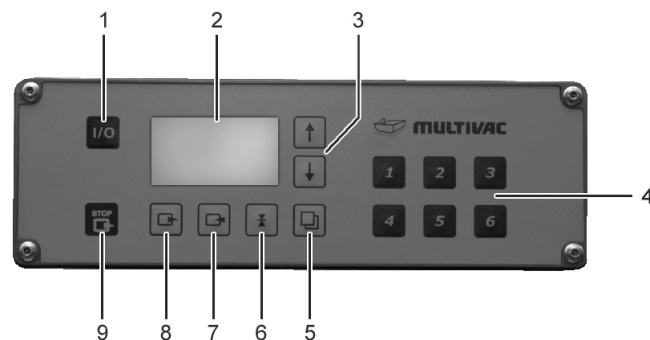











Fig. 17: Control terminal

- 1 <Control On/Off> key
- 2 Display
- 3 Keys <Arrow key>
- 4 Keys <1> to <6>
- 5 <Function selection> key
- 6 <Sealing> key
- 7 <Gas flushing> key
- 8 <Evacuation> key
- 9 <Stop> key.

	<Controls on/off>	<ul style="list-style-type: none"> Switch machine controls on and off
	Display	<ul style="list-style-type: none"> Display process data. Show menus. Show parameters and functions. Graphic support. Display diagnostic messages.
	<Arrow key>	<ul style="list-style-type: none"> Increase values. Navigation within menus.
	<Arrow key>	<ul style="list-style-type: none"> Decrease values. Navigation within menus.
	Keys <1> to <6>	<ul style="list-style-type: none"> Load and save recipes. Enter password.
	<Function selection>	<ul style="list-style-type: none"> Call up additional recipes. Scroll to previous screen.
	<Sealing> key	<ul style="list-style-type: none"> Press and hold down: Call up "Sealing" menu. Press briefly: Call up values for sealing.
	<Gas flushing> key	<ul style="list-style-type: none"> Press and hold down: Call up "Gas flushing" menu. Press briefly: Call up values for gas flushing.
	<Evacuation> key	<ul style="list-style-type: none"> Press and hold down: Call up "Evacuation" menu. Press briefly: Call up values for evaluation.
	<Stop> key.	<ul style="list-style-type: none"> Skip current machine process and proceed with the next process. <ul style="list-style-type: none"> Press during evacuation procedure: Cancel evacuation procedure and continue with gas flushing procedure. Press during gas flushing procedure: Cancel gas flushing procedure and continue with sealing procedure. Press during sealing procedure: Cancel sealing procedure and ventilate the chamber. Acknowledge diagnostic message. Return from the menu to the status display.

2.3 Display

The display shows various views with differing information according to the machine's phase of operation.

2.3.1 Startup display

The startup screen appears after switching on the machine.

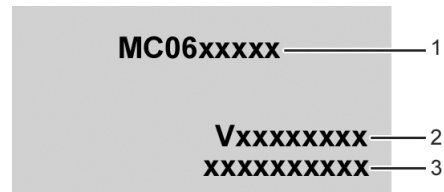


Fig. 18: Startup display

- 1 Type designation of machine control
- 2 Software version
- 3 Configuration code

2.3.2 Status display

Process data status display

The process data status display shows information on the last packaging procedure.

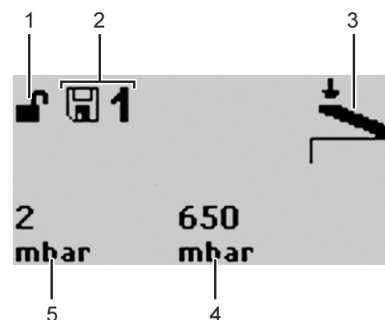


Fig. 19: Process data status display

- 1 Current access right (lock closed = user; lock open = creator)
- 2 Currently loaded recipe
- 3 Chamber lid symbol, machine is ready.
- 4 Gas flushing pressure
- 5 Evacuation pressure

Process sequence status display

The process sequence status display shows the progress of a currently running process. During a packaging procedure process the corresponding symbol flashes on the display. If time runs out during a process, then a clock with the remaining time will flash in place of the symbol.



Fig. 20: Evacuation status display (047)



Fig. 21: Gas flushing status display (049)



Fig. 22: Sealing status display (050)

2.3.3 Function display

Depending on the access rights, the function display will offer the following options:

- View values.
- Enter values.
- Switch functions on and off.

Example of a function display with values:

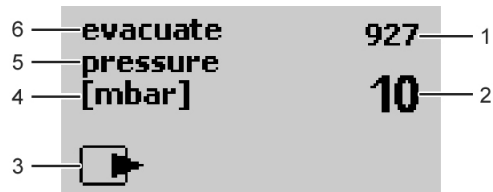


Fig. 23: Function display with value (052)

- 1 Actual value
- 2 Setting
- 3 Symbol of function (e.g. evacuation)
- 4 Measurement
- 5 Selected parameter
- 6 Selected function

Example of a function display for switching a function on and off:

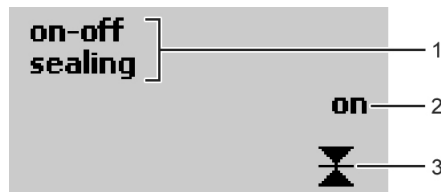


Fig. 24: Function display on/off (013)

- 1 Selected function
- 2 Switch status
- 3 Symbol of function (e.g. sealing)

2.3.4 Diagnostic display



Fig. 25: Diagnostic display

- 1 Diagnostic number
- 2 Type of error acknowledgement
- 3 Error text (in ticker)

Eliminate the malfunction, see Section 8 "TROUBLESHOOTING".

2.3.5 Access rights

To avoid incorrect operation, the following access rights are assigned.

Touch the	Explanation
Operator	Not password protected. The operator may enter settings that are required to operate the machine (e.g. Language choice). The operator cannot modify values.
Creator	Password protected. The creator can modify values and switch statuses. Only a limited number of settings in the service menu are possible (e.g. vacuum test).
Service	Unrestricted authorisation.
Super-PIN	<ul style="list-style-type: none">• Reset password for access authorisation <i>Creator</i> to factory setting.• Reset machine control.

2.4 Menu tree



 


Fig. 26: Menu tree

2.5 Process sequence

The film pouch is filled and laid in the chamber. When the chamber is closed, the following procedures run automatically:

	evacuate	Evacuate chamber and film pouch.
	Gas flushing option	Feed in inert gas.

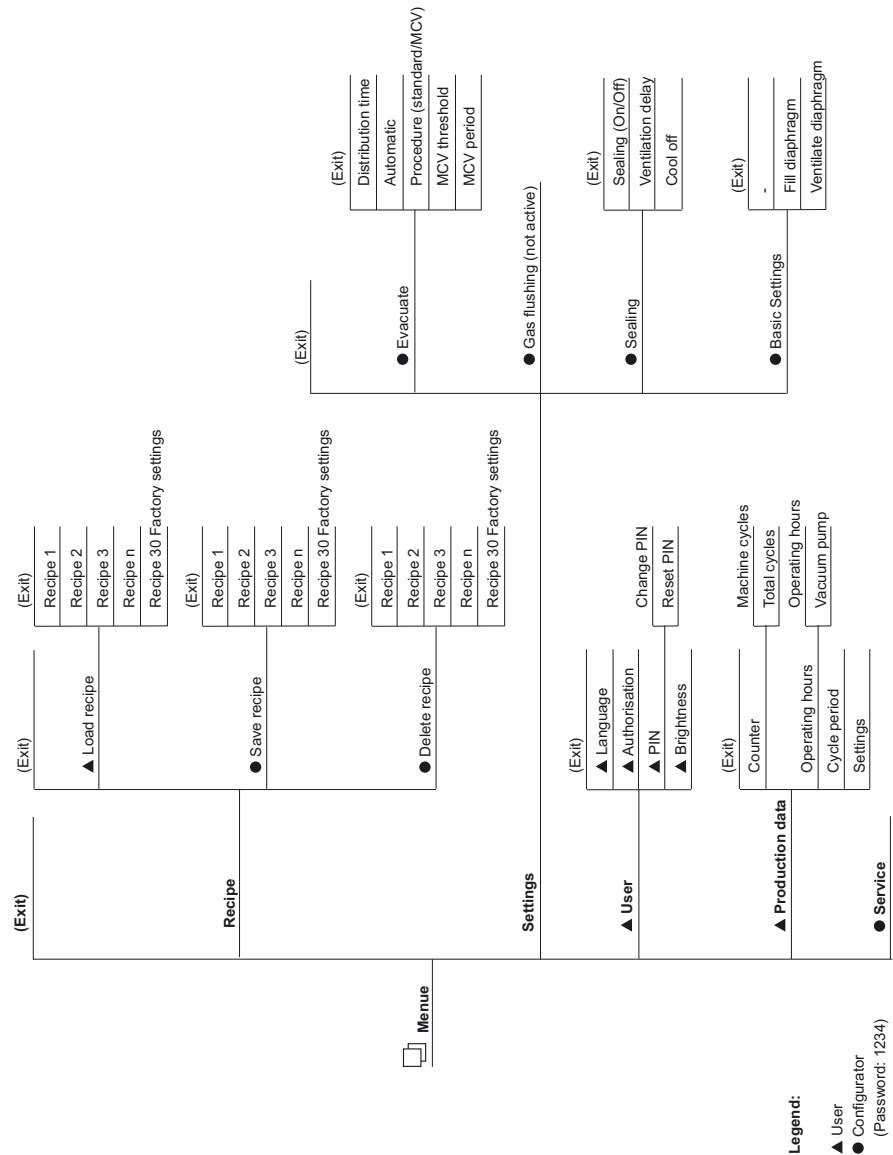

Sealing	Seal film pouch.
---------	------------------

Depending on the settings on the machine, the processes *evacuation* and *gas flushing* repeat.

2.6 Packaging process

The following processes are available for packing products.

Processes	Example of use
Standard	Technical products or products without special requirements.
MCV	Testing airtightness of packs or for drying products.

2.7 Preset recipes

Recipes 1 to 6 are preset at the factory. The settings depend on the machine equipment.



Info

Recipes 1 to 6 contain presettings which have to be adjusted to the individual cases.

Recipe	Example of use	Evacuation pressure	Automatic sensitivity	Gas flushing pressure	Sealing time	MHP
No. 1	For dry products without gas flushing.	Automatic	4	Off	1.8 s	Off
No. 2	For moist products without gas flushing.	Automatic	10	Off	1.8 s	Off
No. 3	For dry products with little gas flushing.	Automatic	4	100 mbar to 150 mbar	1.8 s	Off
No. 4	For dry products with medium gas flushing.	Automatic	4	250 mbar	1.8 s	Off

Recipe	Example of use	Evacuation pressure	Automatic sensitivity	Gas flushing pressure	Sealing time	MHP
No. 5	For dry products with strong gas flushing.	Automatic	4	500 mbar	1.8 s	Off
No. 6	For products with a big air pocket.	12 mbar	10	Off	1.8 s	Evacuation time: 2 s Evacuation pause: 4 s
No. 30	Factory settings	10 mbar	6	Off	1.3 s	Evacuation time: 2 s Evacuation pause: 2 s

2.8 Technical data

Power supply connection

Mains voltage	See type plate.
Phases	See type plate.
Nominal power	See type plate.
Nominal current	See type plate.
Maximum pre-fuse	See type plate.
Max. short-circuit current	See type plate.
Protection type	IP54

Dimensions

Height (a) with open chamber lid	640 mm
Height (a) with closed chamber lid	370 mm
Width (b)	560 mm
Depth (c)	520 mm
Operating height approx.	256 mm
Effective chamber size (W/H/D)	465 mm/150 mm (optional 220 mm)/355 mm
Sealing length	465 mm

Dimensions

Weight approx.	70 kg
----------------	-------



Fig. 27: Dimensions

Installation conditions and ambient conditions

Ambient temperature	+2 °C to +40 °C
Storage temperature	-25 °C to +80 °C
Relative air humidity during operation or storage of the machine, max.	90 % non-condensing
Inclination of the machine during transport, max.	15 °
Minimum room size for machines with the gas flushing option*	40 m ²

*For safety reasons, a minimum room size is mandatory to prevent high concentrations of gas.

Inert gas (option)

Max. input pressure	2.5 bar
Min. input pressure	0.7 bar
Inner diameter of supply line	8 mm

Vacuum pump.

Vacuum pump	21 m ³ /h
-------------	----------------------

Vacuum pump.

Achievable final pressure approx. 2 mbar

Noise exposure at the workplace

Based on	Machinery Directive (2006/42/EG)
Measuring instrument	Sound level meter, IEC 61672- 1, class 1, fault limit +/-1,1 dB
Condition of the machine	New condition with optimum settings at the time of delivery.
A-weighted emission sound-pressure level at the workplace L_{pA} (DIN ISO 11204, accuracy class 3)	<70 dB

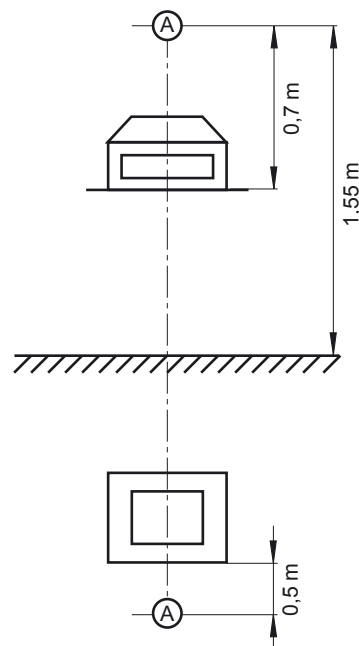


Fig. 28: Noise exposure measuring point



Info

The readings of the noise data have been adjusted to take extraneous and ambient noises into account.

Higher readings may be produced as a result of the following:

- Highly sound-reflecting rooms.
- Modified settings.
- Wear.

3 Start-up

3.1 Initial start-up

3.1.1 Setting up the machine

- Prepare a firm, level site for the machine.
 - Ensure there is adequate access to the connections at the desired location.
 - Observe the technical specifications.
-



Danger of explosion!

Operating the machine in a potentially explosive atmosphere can result in explosion due to hot machine parts. Explosions can cause serious injuries or even death.

- Do NOT use the machine in rooms that are exposed to explosion hazards.
-

NOTICE Danger of equipment damage!

At an inclination of more than 15°, the oil in the vacuum pump shifts.

The air de-oiling elements will get wet from the oil and become ineffective. This will damage the vacuum pump.

- Transport and set the machine down as horizontally as possible.
 - Do NOT tilt the machine.
-

- Transport the machine to the desired location, see Section 9.2.1 "TRANSPORTING THE MACHINE".
-

- Set up the machine on a firm, level base.
-

3.1.2 Adding oil to the vacuum pump

- Fill oil into the vacuum pump, see Section 7.5.2 "ADDING OIL TO THE VACUUM PUMP".
-

3.2 Connecting the power supply

NOTICE Danger of equipment damage!

If the voltage of the machine does not match that of the mains, the machine will be overloaded.

This can damage the vacuum pump.

- Connect the machine to the mains electricity only if the voltages are identical.

- Check the mains voltage on the type plate and compare it with the voltage of the mains electricity.

- If the values match, connect the machine to the mains electricity in an always easily accessible place.

3.3 Connecting inert gas



Danger of explosion!

Gas mixtures with oxygen proportions over 21% are explosive.

A gas mixture with an oxygen proportion over 21 % can cause an explosion and fire if it comes in contact with heat, oil or grease.

- Do NOT use a gas mixture with an oxygen proportion of over 21%.



Risk of death!

During the packing process, inert gases are released.

Inhaling inert gas can impair your breathing. Over a longer period of time, this can be fatal.

- A surface area of at least 40 square meters per machine must be made available.
- Air the rooms sufficiently and avoid any accumulation of gas.
- Observe the maximum input pressure, see "Technical specifications".
- Cut off the gas supply at the end of work.
- Adhere to the safety regulations in effect in the country where the machine is used.



Info

Observe the minimum and maximum permitted input pressure, see "Technical specifications".

- Attach a stop valve to the gas supply on the operating side.
- Attach the gas hose to the inert gas connection of the machine.

-
- Fasten the hose with hose clamps.
 - Open the stop valve for the gas supply.
 - Set the input pressure; see the section "Technical specifications".
-

3.4 Cleaning the machine (basic cleaning)

- After putting the machine into service carry out an intensive cleaning of the machine, see Section 6 "CLEANING".
-

**Info**

The machine is only to be used for production after a basic cleaning.

4 Operation

4.1 Switching on the machine

- Before switching on the machine for the first time fill the vacuum pump with oil, see Section 7 "MAINTENANCE".
 - If present, open the stop valve for the gas supply.
 - Connect the machine to the mains electricity, see Section 3.2 "CONNECTING THE POWER SUPPLY".
 - Press the <Control On/Off> key.
 - The machine control performs a self-test.
 - The software version of the machine control briefly appears in the display.
 - The status display appears.
 - The machine is ready for operation.
-

4.2 Switching off the machine

- Press the <Control On/Off> key.
 - The screen for performing the pump protection function appears.
 - If necessary, perform the pump protection function.
 - Close and press down the chamber lid.
 - The vacuum pump runs for a set time.
 - A counter counts to zero.
 - The display goes out.
 - The chamber lid opens automatically if it is not locked.
 - To cancel the pump protection function, press the <Control On/Off> key again.
 - The display goes out.
-



Info

The display goes out automatically after 10 s without input or without closing the chamber lid.

- Close chamber lid and lock it in place.
 - Close the stop valve for the gas supply, if part of the machine.
 - If required disconnect the machine from the mains electricity.
-

4.3 Packing products

- Switch on the machine.
- Load the desired recipe.
 - For the first test packs, use a preset recipe, see Section 2.7 "PRESET RECIPES " and see Section 4.8.2 "LOAD FACTORY SETTINGS ".



Health hazard!

Insufficient or sporadic cleaning can promote the growth of micro-organisms which can contaminate the product.


This can pose serious health hazards for consumers.

- Disinfect your hands should they come into contact with any machine part other than the operating elements.
- Do NOT lay the product on the machine.
- Observe the company cleaning guidelines.
- Follow instructions in the chapter "Cleaning".


- Fill the film pouch.



- Insert film pouch.
 - The opening of the film pouch extends 2 to 3 cm beyond the sealing.

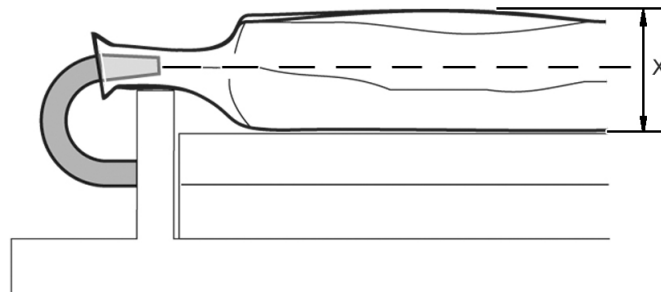

- If necessary, use spacer plates.
 - The pouch neck is centred on the pouch height x.
- Use the diagonal insert for packaging liquids, see Section 5.1 "INSERT AND REMOVE THE DIAGONAL INSERT".
 - Liquid cannot escape from the film pouch.

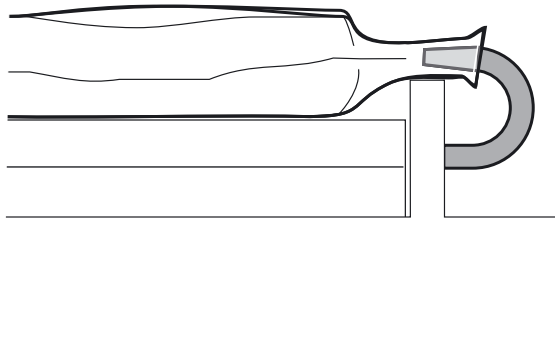

- Gas flushing option: Pull the pouch opening over the gas nozzles so that the inert gas flows into the film pouch.
- Pull the pouch neck flat on the sealing bar.
 - The pouch neck lies on the sealing bar without creases.



NOTICE Danger of equipment damage!

Penetration by foreign matter (e.g. liquids, product residue, foreign bodies) will damage the vacuum pump.

Damage can cause the machine to malfunction, which in turn can result in reject packs.

- Cancel the evacuation procedure immediately if foreign matter is sucked in.
 - Change the oil in the vacuum pump.
-

- Close and press down the chamber lid.
 - The processes in the machine run automatically.
 - The chamber lid opens automatically if it is not locked.
-



-
- Remove the finished pack.
 - Check the pack.
-



Info

Visually inspect the packs on a regular basis while the machine is running. Depending on product and pack it may be necessary to carry out additional and considerably more complex test procedures. This is the responsibility of the operator, see Section 1.7.6 "CHECKING THE PACKS".

-
- If necessary, adapt the settings to the product.
 - Enter all required times and values.
-
- Save recipe, see Section 4.8.3 "SAVE RECIPE".
-

4.4 Opening and closing menus

4.4.1 Calling up menus

-
- Press the <function selection> key.
 - The "main menu" appears.
-
- Select the desired menu with the <arrow> keys.
-
- Press the <function selection> key.
 - The desired menu appears.
-
- Select the desired submenu with the <arrow> keys.
-
- Press the <function selection> key.
 - The desired submenu appears.
-

4.4.2 Quitting menus

-
- Using the <arrow> keys, select the respective menu heading.
 - The text of the menu heading changes and becomes the (menu) function *quit*.
-
- Press the <function selection> key.
 - The menu is exited and the system changes to the next highest display level.
-

4.5 Modifying values

-
- Call up the desired menu.
-
- Using the <arrow> keys, select the desired parameter.
-
- Press the <function selection> key.
 - The display for the selected parameter appears.
-
- Set the value with the <arrow> keys.
 - The set value is adopted.
-

-
- To exit display, press the <function selection> key.
-

4.6 Selecting and resetting access rights

4.6.1 Selecting access authorisations

- Call up "User" menu.
 - Select *Authorisation*.
 - Enter the password with the keys <1> to <6>.
 - The corresponding access authorisation appears in the status display.
 - If the selected access authorisation is no longer needed, reset the access to *operator*, see Section 4.6.2 "RESETTING THE ACCESS AUTHORISATION TO OPERATOR (BLOCKING ACCESS)".
-

4.6.2 Resetting the access authorisation to operator (blocking access)

- Call up "User" menu.
 - Select *Authorisation*.
 - Enter the password of the current access authorisation with the keys <1> to <6>.
 - The *Operator* access authorisation appears in the status display.
-

4.6.3 Change password for authorisation access creator

- Call up "PIN" menu.
 - Select *Change PIN*.
 - Enter old password with keys <1> to <6>.
 - Enter new password with keys <1> to <6>.
 - Confirm the new password again.
 - The password has been changed.
 - The status display appears.
-

4.6.4 To reset authorisation access creator

- Call up "PIN" menu.
 - Select *Reset PIN*.
-

-
- Enter Super-PIN, see supplementary sheet "Super-PIN".
 - The reset password for the authorisation access *Creator* appears.
 - The status display appears.
-

4.7 Language selection

4.7.1 Selecting the language via menu

-
- Call up "User" menu.
-
- Select *Language*.
-
- Using the <arrow> keys, select the desired language.
-
- Press the <Function selection> key.
 - The language is activated.
-

4.7.2 Selecting the language via the shortcut key

-
- Switch off the display with the <control on/off> key.
-
- Switch on the display with the <control on/off> key.
-
- While the startup display is shown, press the <function selection> key.
 - The "language selection" display appears.
-
- Using the <arrow> keys, select the desired language.
-
- Press the <Function selection> key.
 - The language is activated.
-

4.8 Working with recipes

4.8.1 Load recipe



Info

If no recipe is saved, the message "recipe missing" appears. The last settings remain active.

Load using keys <1> to <6>

-
- Press the desired key briefly <1> to <6>.
 - The selected recipe is loaded.
-

Loading through the “load recipe” menu

-
- Call up "Load recipe" menu.
 - Select the desired recipe with the <arrow> keys.
 - Press the <Function selection> key.
 - The selected recipe is loaded.
-

4.8.2 Load factory settings



Info

Factory settings cannot be overwritten or deleted.

-
- Call up "Recipe loading" menu.
 - Select recipe no. 30 with the <arrow> keys.
 - Press the <Function selection> key.
 - The factory settings are loaded.
-

4.8.3 Save recipe



Info

When selecting an already assigned recipe number, the recipe stored under this number is directly overwritten.

Saving via keys <1> to <6>

-
- Press and hold down desired key <1> to <6>.
 - The message "Recipe saved" appears.
 - The current values are stored in the selected recipe.
-

Saving via the “save recipe” menu

-
- Call up "Recipe, saving" menu.
 - Using the <arrow> keys, select the desired memory location.
 - Press the <Function selection> key.
 - The current values are stored in the selected recipe.
-

4.8.4 Delete recipe



Info

If the currently loaded recipe is deleted, a new recipe must be loaded.

-
- Call up "Recipe, deleting" menu.
-
- Select the recipe to be deleted with the <arrow> keys.
-
- Press the <Function selection> key.
 - The message "completed" appears.
 - The recipe has been deleted.
-

4.9 Select and set process

4.9.1 Set standard process

-
- Press <Evacuation> key briefly and enter value for *Evacuation pressure*.
 - For automatic evacuation, decrease the value until *Automatic* appears.
 - The machine controls the evacuation process automatically.
-
- Press <Evacuation> key briefly again and set value for *Post-evacuation time*.
-
- Call up the "evacuation" menu.
 - Set *Distribution time*.
 - Set *Automatic*.
 - Select *Standard* process.
-
- Call up the "gas flushing" menu (Optional).
 - Switch on *On/off gas flushing*.
 - Set *Distribution time*.
 - Set *Rinse time*.
-
- Press <Gas flushing> key briefly and set value for *Gas flushing pressure*.
-

4.9.2 To set MCV process

-
- Press <Evacuation> key briefly and enter value for *Evacuation pressure*.
-



Info

Do not set an *Evacuation pressure* value in *Automatic*.

-
- Press <Evacuation> key briefly again and set the value for *Post-evacuation time* to 0 s.
-
- Call up the "evacuation" menu.
 - Set the value for *Distribution time* to 0 s.
-

- Select *MCV* process.
 - Set *MCV threshold*.
 - Set *MCV duration*.
-
- Call up the "gas flushing" menu (Optional).
-
- Switch off *Gas flushing On/Off*.
-
- Call up the "sealing" menu.
-
- Switch off *Sealing On/Off*.
-

4.10 Setting the sealing

- Call up the "sealing" menu.
 - Switch on *On/off sealing*.
 - Set *Delayed ventilation*.
 - Set *Cooling down*.
-
- Press <Sealing> key briefly and set value for *Sealing time*.
-

4.11 Entering basic settings

- Call up the "basic settings" menu.
 - Set *Fill diaphragm*.
 - Set *Ventilate diaphragm*.
-

4.12 Modifying and resetting machine cycles

- Call up the "production data" menu.
-
- Call up "Counter" menu.
-
- Call up *machine cycles*.
-
- Set the value with the <arrow> keys.
 - The set value is adopted.
-

4.13 Display production data

4.13.1 Display total cycles of the machine

- Call up "Counter" menu.
-
- Select *Total cycles*.
-

4.13.2 Display hours of operation

Display machine's hours of operation

-
- Call up "Hours of operation" menu.
 - *Select* Hours of operation.
-

Display vacuum pump's hours of operation

-
- Call up "Hours of operation" menu.
 - *Select Vacuum pump.*
-

4.13.3 Display cycle time

-
- Call up the "production data" menu.
 - *Select Cycle time.*
-

4.13.4 Show settings

-
- To view the settings of recipes 7 through 30, load the desired recipe via the menu, see Section 4.8.1 "LOAD RECIPE".
 - Call up the "production data" menu.
 - *Select Settings.*
 - The settings of the loaded recipe appear in a list.
-



Info

The settings of recipes 1 through 6 can be speed dialed from the list. To do so, load the respective recipe with the keys <1> through <6>.

4.14 Setting the brightness of the display

-
- Call up "User" menu.
 - *Select brightness.*
 - Using the <arrow> keys set the desired brightness.
-


5 Adjustment work and setup

5.1 Insert and remove the diagonal insert

- If necessary, use diagonal inserts for the desired inclination.



- Hook the diagonal insert on the screws of the sealing bar.

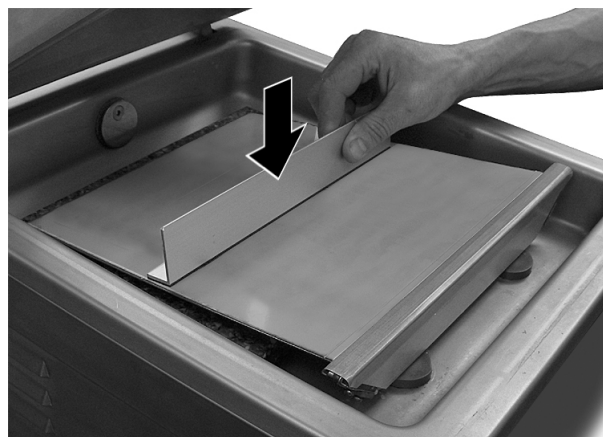

- Install the support bracket on the required position on the diagonal insert.
- If the diagonal insert is no longer needed, remove it, along with the support bracket, from the chamber.

6 Cleaning



Info

Observe the safety instructions, see Section 1 "SAFETY".
Clean the machine after maintenance work and repairs and
disinfect if necessary.

6.1 Notes on cleaning

6.1.1 Rules of conduct

The objective of the cleaning work is to avoid hygienic risks. If the cleaning is insufficient or not performed properly, this may result in the contamination of the products and to health hazards for end consumers. In addition, the machine may be damaged. Assign only properly instructed and qualified personnel. Information on qualification and training can be obtained from MULTIVAC Service. The ability to handle materials effectively and efficiently depends on:

- Using the proper dosage of care products.
- Observing the contact time of the care products.
- Proper temperature of the mixing water.

Data sheets for the care products can be obtained from their manufacturers. The manufacturers also provide information on the maximum permissible dosages for food processing.

6.1.2 Creating a company cleaning directive

Specify the following points:

- Required cleaning intervals.
- Care products to be used. Care products, refer to "Care products table".
- Using the proper dosage of care products.
- Persons in charge of cleaning.
- First aid measures.

6.1.3 Measures for ensuring a long service life

NOTICE Danger of equipment damage!

Highly acidic or alkaline cleansers that contain chlorine create strong vapours.

These vapours cause corrosion.

- Do NOT use any care products that contain chlorine or are highly acidic or alkaline. Also, do NOT use such care products to clean the machine surroundings.
- Observe the specifications of the care product manufacturers.

NOTICE Danger of equipment damage!

Acidic cleansers are caustic.

These can cause plastics to become brittle and age prematurely.

- Do NOT shorten the cleaning intervals for acidic cleaning and disinfection.

Regular and correct maintenance prolongs the life of the unit. The best protection against harmful influences is to clean and disinfect the machine on a regular basis. The longer product residue and other aggressive deposits remain on the unit, the more harmful their corrosive effects will be.

If used incorrectly, care products can damage components made of rubber or plastic. Before applying care products, please take time to read the notes and warnings provided by the manufacturer.

6.1.4 Parameters for pre-rinsing and after-rinsing water

- Low pressure of max. 4 bar to 6 bar (58 psi to 88 psi).
- Do not rinse with steam jets or high-pressure cleaners.
- Fan nozzle: 5 ° to 15 ° inclination, approx. 3/16 " nozzle opening.
- Temperature: max. 60 °C (140 °F).
- Quality of after-rinsing water: drinking water quality.

6.1.5 Handling cleansers**Chemical burn hazard!**

Acidic cleansers are caustic. Caustic effects are NOT noticed immediately.

Contact with the skin can cause burns.

- Wear the prescribed personal protective gear when handling cleansers.
- Observe the manufacturer's instructions.

- For type of cleander refer to the "Care products table".
- The quantity of cleanser is not the decisive factor for successful cleaning.
 - Applying amounts in excess of the proper dosage does not improve or accelerate cleaning efficiency, but only hinders the required rinsing off of the cleanser.
- Dried cleanser residues make cleaning more difficult and prolonged.
 - Even smallest residues can inhibit the effect of the disinfection.
 - Check by measuring the pH factor of the re-rinse water.
- Regular checks of cleaning (i.e. by contact tests) reduce the risk of product contamination.

- Insufficient cleaning cannot be compensated for by doubling the concentration of the disinfection agents.

6.1.6 Use with disinfectant



Fire hazard!

Alcohol-based disinfectants are highly flammable. Fire, naked light or smoking ignites the disinfectant and can thus cause fires.

- When disinfecting the machine, flames or naked lights are prohibited.
- Smoking is prohibited.
- Observe the instructions of the disinfectant manufacturer.



Health hazard!

Incorrect use of disinfectant can contaminate the product with chemicals or decrease the effectiveness of disinfection. This can pose serious health hazards for consumers.

- Follow the instructions of the disinfectant manufacturer.
- Only rinse after disinfection if required by disinfectant manufacturer.
- Observe regional hygiene regulations.
- Create a company cleaning directive.

- For type of disinfectant refer to the "Care products table".
 - For water-sensitive components only use alcohol-based disinfectant.
 - For all other components use for example QAV based disinfectant (quaternary ammonium compound).

6.1.7 Corrosion protection and lubrication



Health hazard!

Excess lubricants can accumulate at lubricating points. Excess grease has no lubricating function; however, it can breed micro-organisms and contaminate the product.

- Check the lubricating points regularly for the accumulation of excess lubricants.
- Remove any excess lubricants.

NOTICE **Danger of equipment damage!**

Residues of cleansers and disinfectants produce corrosion.
Corrosion can destroy the machine.

- After every cleaning, including cleaning of the surroundings (floor, adjacent machines, etc.), thoroughly rinse with water of drinking water quality or clean by hand.

-
- Kind of anti-corrosion agent, refer to "Care products table".
 - Only use H1 or FDA-approved lubricants and anti-corrosion agents.
 - Checking the microbiological stability of the anti-corrosion agent and lubricants regularly helps reduce the risk of product contamination.

6.1.8 Cleaning devices



Health hazard!

The cleaning devices will spread germs if they are not cleaned often enough.

This can cause cross contamination, which will damage the product.

- Use only brushes and brooms that have plastic bristles.
 - Clean the cleaning equipment daily and apply disinfectant afterwards.
-

6.2 Cleaning the machine



Info

- The recommended daily cleaning tasks recommended here must be supplemented by the intensive cleaning procedure according to the degree of dirt.
- Cleaning personnel must be instructed for the cleaning work by the operating company.
- The sequence of the described tasks is to be followed exactly.

6.2.1 Performing daily cleaning




Info

- The intensive cleaning may only be performed by specially trained personnel. see Section 1.7.1 "SELECTION OF PERSONNEL AND PERSONNEL QUALIFICATIONS"
- The sequence of the described tasks is to be followed exactly.
- In the following, optional equipment versions are also described. Only perform steps that correspond to the version of the machine.
- Always clean the machine from top to bottom.
- For all cleaning work, follow the safety instructions, see Section 6.1 "NOTES ON CLEANING".
- The illustrations are examples.

Preparing for cleaning


-
- Remove all products from the machine.
-
- Switch off the machine.
-
- Disconnect the machine from the mains electricity.
-
- Cover the mains plug with waterproof plastic bags.
-
- Close the stop valve for the gas supply, if part of the machine.
-
- Allow the machine and sealing bars to cool down.
-
- Store empty, new film pouches outside the room in a clean, dry place during the cleaning procedure.
-
- Remove all waste (e.g. product scraps, film trim) on or around the machine.
-

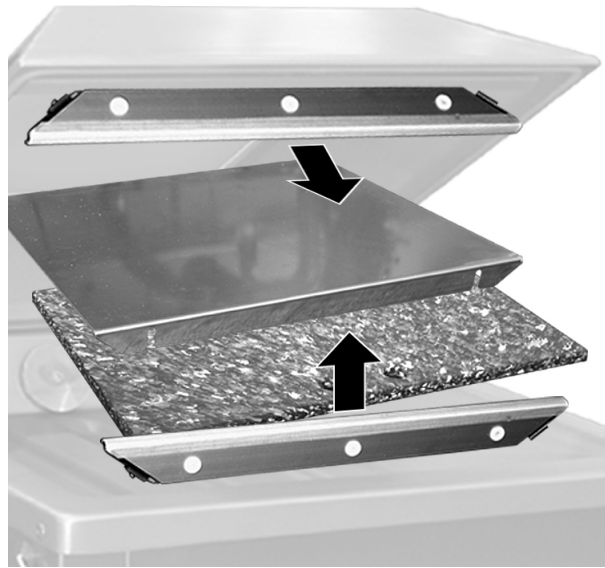

-
- Remove the following components:
 - Diagonal insert with support bracket.
 - Spacer plates.
 - Sealing bars
 - Insertable counter-pressure bar.
-

Cleaning and disinfecting dismantled components

-
- Take the removed components to a separate room suitable for wet cleaning
-

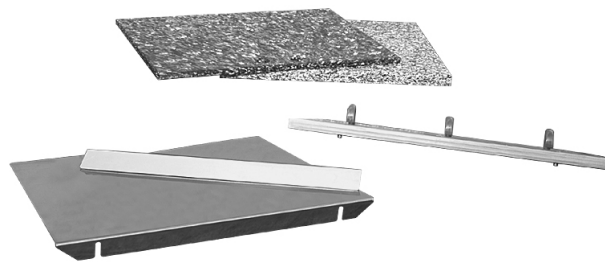

NOTICE Danger of equipment damage!
The teflon tape of the sealing bar is very sensitive.
Improper cleaning can damage the teflon tape.

- Clean the teflon tape only with a soft cloth.
 - Do NOT scratch the teflon tape.
-
- Clean dismantled components manually with cleaning solution.
 - Thoroughly clean the inert gas nozzles.
-

-
- Wait until the contact time has elapsed (see instructions of cleanser manufacturer).
-
- Wipe with new cloth and water of drinking quality.
-
- Inspect for dirt and cleanser residues.
-
- If necessary, perform another manual cleaning and wipe it off.
-
- Disinfect components with alcohol-based disinfectant:
 - Thoroughly disinfect the inert gas nozzles.
-
- Wait until the contact time has elapsed (see instructions of disinfectant manufacturer).
-

Clean the machine and the floor.

-
- Clean the floor with a rubber wiper.
-
- Dispose of the waste properly.
-
- Apply cleanser to the floor with a low-pressure foaming device.
-
- Wait until the contact time has elapsed (see instructions of cleanser manufacturer).
-
- Rinse off the floor with water of drinking quality.
-

NOTICE Danger of equipment damage!

Penetration by foreign matter (e.g. liquids, product residue, foreign bodies) will damage the vacuum pump.
Damage can cause the machine to malfunction, which in turn can result in reject packs.

- Do NOT spray directly on the covers of the suction openings in the chamber.
-
- Manually clean the entire machine, including the table, with cleaning solution.
 - Only clean the viewing window in the chamber lid manually with a soft cloth or a soft brush.
-
- Wait until the contact time has elapsed (see instructions of cleanser manufacturer).
-
- Wipe with new cloth and water of drinking quality.
-
- Inspect the entire machine and the floor for dirt and cleanser residues.
-

-
- If necessary, clean and wipe off again.
-

**Disinfect the machine
and the floor.****NOTICE Danger of equipment damage!**

Penetration by foreign matter (e.g. liquids, product residue, foreign bodies) will damage the vacuum pump.

Damage can cause the machine to malfunction, which in turn can result in reject packs.

- Do NOT spray directly on the covers of the suction openings in the chamber.
-

- Disinfect entire machine, including table, with alcohol-based disinfectant.
-

- Close chamber lid and lock it in place.
-

- Use a hand-held spray lance to apply disinfectant to the floor.
-


- Wait until the contact time has elapsed (see instructions of disinfectant manufacturer).
-

- If necessary, rinse the floor with water of drinking quality; see instructions of the disinfectant manufacturer.
-

Complete cleaning

-
- Remove the plastic bag from the mains plug.
-

- Dispose of plastic bags properly. For reasons of hygiene, never reuse bags
-

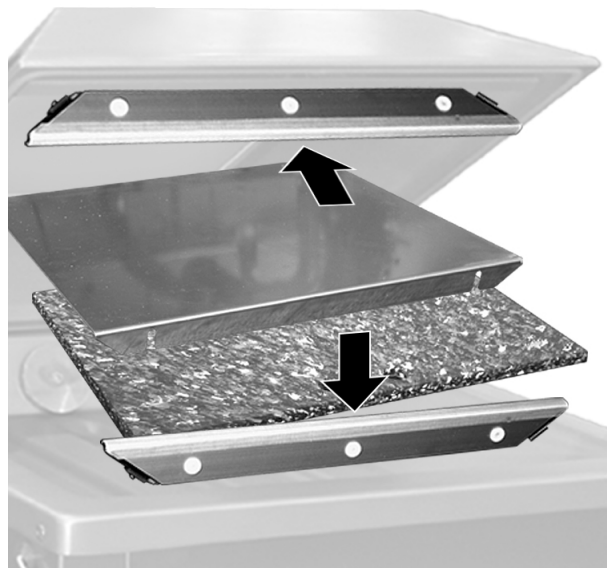

-
- Attach the following components:
 - Insertable counter-pressure bar.
 - Sealing bars
 - Spacer plates.
 - Diagonal insert with support bracket.
-
- Disinfect the entire loading area with alcohol-based disinfectant.
-
- Leave the chamber lid open to dry.
-
- If present, open the stop valve for the gas supply.
-
- Connect the machine to the mains electricity.
-
- Clean cleaning implements (e.g. rubber wipers, brushes).
-
- Place cleaning implements in disinfectant solution-
-
- Unpack the film pouches and lay them ready.
-

6.2.2 Performing intensive cleaning



Info

- Intensive cleaning complements daily cleaning. As part of this process additional cleaning measures are required depending on the degree of contamination of the components described in this chapter.
- The intensive cleaning may only be performed by specially trained personnel. Information on qualifications and training can be obtained from our service personnel.
- The sequence of the described tasks is to be followed exactly.
- Always clean the machine from top to bottom.
- In the following, optional equipment versions are also described. Only perform steps that correspond to the version of the machine.
- For all cleaning work, follow the safety instructions, see Section 6.1 "NOTES ON CLEANING".
- The illustrations are examples.



-
- Remove chamber lid gasket from the groove.
-
- Perform daily cleaning, see Section 6.2.1 "PERFORMING DAILY CLEANING".
 - Clean and disinfect the chamber lid gasket together with the removed components.
-



- Insert the dry chamber lid gasket in the groove of the lid.
- If the chamber lid gasket or groove is wet, dry with a new cloth or sterile compressed air.



Info

During insertion, do not stretch the gasket.



- Smooth out gasket.
- Disinfect gasket with alcohol-based disinfectant.
- Switch on the machine.
- Close and press down the chamber lid and observe the pressure shown in the display.
 - The pressure drops: the chamber is airtight.
 - The pressure does not drop: the chamber is not airtight.
- If the chamber is not airtight, check the chamber lid gasket:
 - Smooth out gasket.

- Disinfect gasket with alcohol-based disinfectant.
 - Wait until the contact time has elapsed (see instructions of disinfectant manufacturer).
-
- Switch off the machine.
-

6.3 Care products table

Recommended care products:

Type	Manufacturer	Designation
Cleansers and disinfectants	Ecolab Europa	P3-steril
	Diversey Europe	JD Delladet VS2
	Diversey USA	
	Finktec	FINK-FC 2062
Cleansers, neutral	Ecolab Europa	P3-topax 12
	Ecolab USA	Quorum Pink II
	Diversey Europe	Shureclean VK10
		JD Shureclean Plus VK9
	Diversey USA	Shureclean VK10
		JD Shureclean Plus VK9
	Finktec	FINK-Industrial rinsing agent 2
Cleansers, alkaline	Ecolab Europa	P3-topactive LA
	Ecolab USA	TFC Pink
	Diversey Europe	JD Ultraclean VK3
		Diverfoam SMS HD VF22
	Diversey USA	JD Ultraclean VK3
		Diverfoam SMS HD VF22
Cleansers, acidic	Ecolab Europa	P3-topax 52
		P3-topax 56
	Ecolab USA	Quorum Purple
		Quorum Red
	Diversey Europe	JD Acifoam VF10
	Diversey USA	
	Finktec	FINK aluminium cleanser
		FT-43 SR

Type	Manufacturer	Designation
Disinfectants	Ecolab Europa	P3-topax 91
		P3-topax 990
	Ecolab USA	Quorum Whisper
		Quorum Clear
	Diversey Europe	JD Divosan extra VT55
		JD Suredis VT1
	Diversey USA	JD Divosan extra VT55
		JD Suredis VT1
	Finktec	FINK- Antisept G
Disinfectants (alcohol-based)	Ecolab Europa	P3-alcodes
	Diversey Europe	JD Divodes FG VT29
	Diversey USA	
	Finktec	FINK- Antisept E
Anti-corrosion agents	Esso	Primol 352
	Castrol	Optimol F+D Fluid Spray
	Klüber Lubrication	Klüberfood NH1 K 32
Stainless steel care products	Ecolab Europa	P3-proguard CP
	Finktec	FINK-FC 332

All recommended anti corrosion agents and stainless steel care products are food compatible.

Buying source:

- Ecolab: www.ecolab.com
- Diversey: www.diversey.com
- Finktec: www.fink-service.com
- Esso: www.exxonmobil.com
- Castrol: www.castrol.com
- Klüber Lubrication: www.klueber.com

7 Maintenance



Dangerous voltage!

Switching off the machine does not rid it of electrical current. Touching electrically charged parts can cause serious or even fatal injuries.

Before performing any cleaning or maintenance work:

- Disconnect the machine's power supply from the mains electricity.
- Have work in the control cabinet performed by authorised specialists only.



Info

Observe the safety instructions, see Section 1 "SAFETY". Clean the machine after maintenance work and repairs and disinfect if necessary.

7.1 Maintenance schedule

As needed

		Page	Completed
Entire machine	Wipe test	63	

Every 8 operating hours or daily

		Page	Completed
Vacuum pump.	Perform the pump protection function.	62	
Entire machine	Visual inspection	62	
Entire machine	Alkaline cleaning and disinfection	62	
Entire machine	Intensive cleaning	63	
Chamber lid viewing window	Visual inspection	63	
Chamber lid gasket	Visual inspection	63	
Sealing bar	Visual inspection	63	
Vacuum pump.	Checking oil level, refilling	64	

Every 50 operating hours or weekly

		Page	Completed
Entire machine	Acidic cleaning and disinfection	63	
Connections	Visual inspection	63	
Vacuum system	Check	64	

Every 1000 operating hours or yearly

		Page	Completed
Vacuum pump.	Oil change	64	
Vacuum pump.	Exchanging the air de-oiling element	64	

7.2 Recommended maintenance

7.2.1 Vacuum pump. - Perform the pump protection function.

- Perform the pump protection function, for this switch off the machine, see Section 4.2 "SWITCHING OFF THE MACHINE".

7.2.2 Entire machine - Visual inspection

- Check the entire machine exterior for damage.
- Check that all warning signs are present.
- Check that all safety guards are mounted and intact.

7.2.3 Entire machine - Alkaline cleaning and disinfection

- See company cleaning guidelines.
- See the cleaning measures specified by the manufacturer, see Section 6 "CLEANING".

7.2.4 Entire machine - Wipe test

- Perform wipe tests to check the result of the cleaning and disinfection procedures.
See the company cleaning instructions and recommendations, see Section 6 "CLEANING".
-

7.2.5 Entire machine - Acidic cleaning and disinfection

- See company cleaning guidelines.
 - See the cleaning measures specified by the manufacturer, see Section 6 "CLEANING".
-

7.2.6 Entire machine - Intensive cleaning

- See company cleaning guidelines.
 - Check the components described in Intensive Cleaning for contamination
 - If any contamination perform Intensive Cleaning see Section 6.2.2 "PERFORMING INTENSIVE CLEANING"
-

7.2.7 Chamber lid viewing window - Visual inspection

- Check the viewing window in the chamber lid for damage (e.g scratches, cracks).
 - If the viewing window in the chamber lid is damaged have it replaced immediately by the manufacturer.
-

7.2.8 Chamber lid gasket - Visual inspection

- Check gasket for damage.
 - Have the chamber lid gasket replaced by the service department if necessary.
-

7.2.9 Sealing bar - Visual inspection

- Check sealing bar for damage.
 - If necessary, replace the sealing bar, see Section 7.4 "REPLACE THE SEALING BAR".
-

7.2.10 Connections - Visual inspection

- Disconnect the machine from the mains electricity.

-
- Check power cable for damage.
 - If present, check that the line for inert gas is fitted tightly and undamaged.
-

7.2.11 Vacuum pump. - Checking oil level, refilling

- Disconnect the machine from the mains electricity.
 - Check the oil level on the oil sight glass.
 - If water is present in the oil, notify the service department.
 - If necessary, refill oil.
-

7.2.12 Vacuum pump. - Oil change

- Change the oil in the vacuum pump, see Section 7.5 "CHANGE THE OIL IN THE VACUUM PUMP".
-

7.2.13 Vacuum pump. - Exchanging the air de-oiling element

- Have the air de-oiling element exchanged by the service department.
-

7.2.14 Vacuum system - Check

- Perform a vacuum test, see Section 7.3 "PERFORMING THE VACUUM TEST".
-

7.3 Performing the vacuum test

- Call up the "Service" menu.
 - Call up the "test" menu.
 - Select *Vacuum test*.
 - Switch on the *vacuum test*.
 - Return to the status display.
 - Close and press down the chamber lid.
 - The vacuum system is tested for airtightness.
 - The processes in the machine run automatically.
 - The corresponding diagnostic message appears.
 - The chamber lid opens.
-

-
- Acknowledge the diagnostic message.
 - The vacuum test is switched off.
-
- If the vacuum test is not successful, see the displayed diagnostic message to correct the malfunction, see Section 8 "TROUBLESHOOTING".
-

7.4 Replace the sealing bar

7.4.1 Remove the sealing bar

-
- Switch off the machine.
-
- Disconnect the machine from the mains electricity.
-
- Open chamber lid.
-
- Let the sealing bar cool down.
-




-
- Pull out the sealing bar.
-

7.4.2 Install the sealing bar

-
- Disconnect the machine from the mains electricity.
-



-
- Install the sealing bar on the carriers.
-

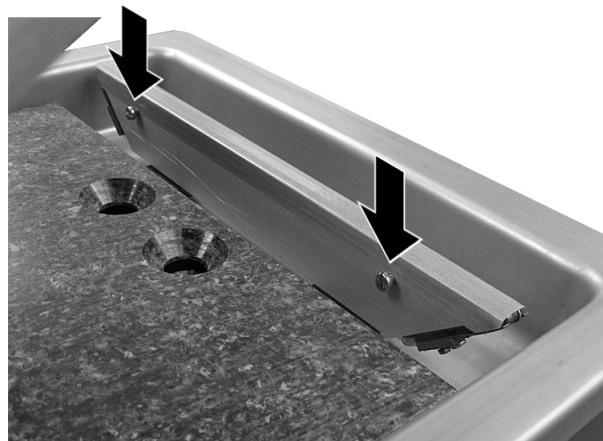

-
- Install the sealing bar in such a way that the screws on the sealing bar point to the middle of the chamber.
-

7.5 Change the oil in the vacuum pump

7.5.1 Drain oil

- Switch off the machine.
 - Disconnect the machine from the mains electricity.
-



Burn hazard!

The surface of the vacuum pump can reach temperatures of over 70 °C during operation.

Touching the vacuum pump can lead to burns.

Before performing any work on the vacuum pump:

- Wear personal protective equipment.
-
- Unscrew the screws on the safety guard and remove the safety guard.
-
- Allow the vacuum pump to cool down.
-
- Hold a container to catch the oil under the drain opening (e.g. an empty oil bottle).
-
- Unscrew the screw plug of the drain opening.
-
- Drain the oil completely.
-
- Replace the sealing ring in the screw plug.
-
- Insert the screw plug with the sealing ring in the drain opening and screw it tight.
-
- Dispose of old oil properly.
-
- Fill new oil into the vacuum pump, see Section 7.5.2 "ADDING OIL TO THE VACUUM PUMP".
-
- Fasten the safety guard with the screws.
-

7.5.2 Adding oil to the vacuum pump

- Switch off the machine.

-
- Disconnect the machine from the mains electricity.
-



WARNING


Burn hazard!

The surface of the vacuum pump can reach temperatures of over 70 °C during operation.


Touching the vacuum pump can lead to burns.

Before performing any work on the vacuum pump:

- Wear personal protective equipment.
-
- Unscrew the screws on the safety guard and remove the safety guard.
-
- Allow the vacuum pump to cool down.
-

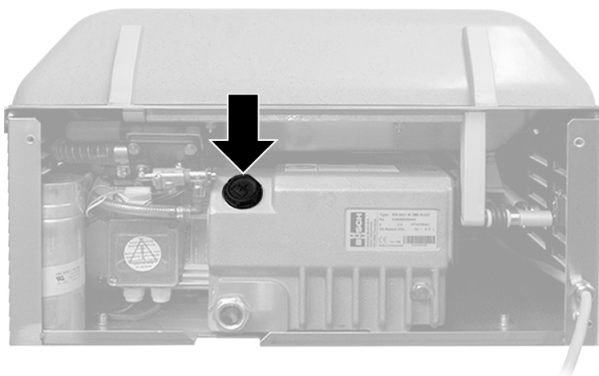


-
- Unscrew the screw plug of the oil fill opening.
-

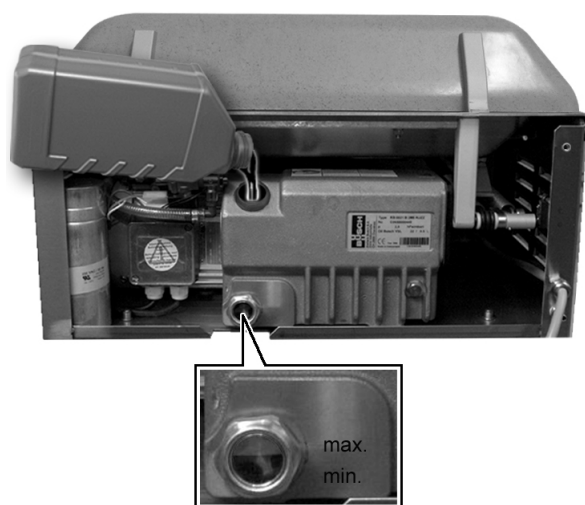

-
- Fill the vacuum pump with oil up to the middle of the oil sight glass. Use only oils that are approved by the manufacturer, see 'Spare Parts' section or the spare parts list.
-

**Info**

Only use low odour synthetic oil if foodstuffs are being packed.

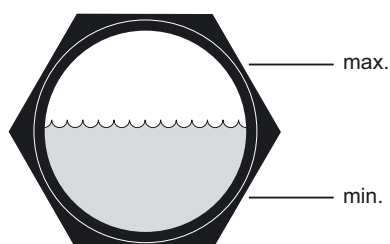

-
- Check oil level on the oil sight glass:
 - The oil level should reach the middle of the oil sight glass.
 - If oil level is under the MIN mark, add oil.
-
- Replace the sealing ring in the screw plug.
-
- Insert the screw plug with the sealing ring in the fill opening and screw it tight.
-
- Fasten the safety guard with the screws.
-
- Connect the machine to the mains electricity.
-
- Switch on the machine.
-
- Check the oil level after a couple of machine cycles.
-

8 Troubleshooting



Injury hazard!

Ignorance of proper machine handling is very dangerous.

Improper handling can lead to serious injuries.

For all service operations and repair work:

- Make sure you observe the safety instructions and accident prevention regulations.
- Disconnect the unit's power supply from the mains.
- Only qualified electricians are permitted to work on the electrical equipment.
- Service operations and repair work should be carried out by authorised specialists only.

8.1 Malfunctions with diagnostic message

Symptom	Cause	Solution
67	• Vacuum pump does not switch off.	• Notify the service.
	• Ventilation valve does not open.	• Notify the service.
68	• No gas available or near end.	• Connect inert gas or ensure that there is sufficient gas supply (e.g. change gas bottle).
	• Stop valve for the gas supply is closed.	• Open the stop valve for the gas supply.
	• Gas hose has a kink in it.	• Remove the kink in the gas hose.
	• Value for the <i>gas flushing pressure</i> is set such that it cannot be reached.	• Correct the value for <i>Gas flushing pressure</i> .
	• The vacuum sensor is incorrectly calibrated.	• Notify the service.
	• Vacuum sensor is defective.	• Notify the service.
	• Gas valve does not open.	• Notify the service.
69	• Value for the <i>Evacuation pressure</i> is set so low that it cannot be reached.	• Correct the value for <i>Evacuation pressure</i> .

Symptom	Cause	Solution
	<ul style="list-style-type: none"> Vacuum hose between the chamber and the vacuum sensor is clogged, missing or leaking. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Vacuum hose is loose, leaking or clogged. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Chamber lid gasket is not airtight. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Vacuum sensor is defective. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Vacuum pump is not being triggered or the vacuum pump is defective. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Vacuum pump is leaky. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Filter in the line to the vacuum sensor is dirty and blocked. 	<ul style="list-style-type: none"> Notify the service.
80	<ul style="list-style-type: none"> Leak in hose connections. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Leak in vacuum hose. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> The vacuum sensor and associated line is leaking. 	<ul style="list-style-type: none"> Notify the service.
81	<ul style="list-style-type: none"> Sealing diaphragm leaks. 	<ul style="list-style-type: none"> Notify the service.

8.2 Malfunctions without diagnostic message

Symptom	Cause	Solution
Machine does not run.	<ul style="list-style-type: none"> Machine is switched off. 	<ul style="list-style-type: none"> Switch on the machine.
	<ul style="list-style-type: none"> Power plug is unplugged. 	<ul style="list-style-type: none"> Plug in the power plug.
Chamber lid does not remain closed despite pump running.	<ul style="list-style-type: none"> Chamber lid pressed closed too briefly. 	<ul style="list-style-type: none"> Press chamber lid closed more firmly and for longer.
	<ul style="list-style-type: none"> Chamber lid gasket is dirty. 	<ul style="list-style-type: none"> Clean the chamber lid gasket.
	<ul style="list-style-type: none"> Chamber lid gasket is damaged. 	<ul style="list-style-type: none"> Notify the service.
Seal seam not airtight - pack is slack.	<ul style="list-style-type: none"> Sealing time is set incorrectly. 	<ul style="list-style-type: none"> Correct the sealing time.
	<ul style="list-style-type: none"> Target pressure value incorrectly set. 	<ul style="list-style-type: none"> Correct the target pressure value.
	<ul style="list-style-type: none"> Pouch neck is clamped by chamber lid. 	<ul style="list-style-type: none"> Insert the film pouch so that the pouch neck lies within the chamber.

Symptom	Cause	Solution
	<ul style="list-style-type: none"> Seal seam is dirty. 	<ul style="list-style-type: none"> Keep sealing bar and film pouch clean.
	<ul style="list-style-type: none"> Pack not air-tight. 	<ul style="list-style-type: none"> Use a new film pouch.
	<ul style="list-style-type: none"> Film pouch not suitable. 	<ul style="list-style-type: none"> Use a film pouch suitable for sealing.
	<ul style="list-style-type: none"> The sealing force is not sufficient. 	<ul style="list-style-type: none"> Test settings. Sufficient sealing force is only achieved if the target pressure is set under 400 mbar.
	<ul style="list-style-type: none"> Sealing bar damaged. 	<ul style="list-style-type: none"> Replace sealing bar.
The target pressure value is not reached.	<ul style="list-style-type: none"> The set target pressure is not achieved (e.g. product contains water). 	<ul style="list-style-type: none"> Set a higher target pressure.
	<ul style="list-style-type: none"> Chamber lid gasket is dirty. 	<ul style="list-style-type: none"> Clean the chamber lid gasket.
	<ul style="list-style-type: none"> Insufficient oil quantity or oil in the vacuum pump is too old. 	<ul style="list-style-type: none"> Refill or replace oil.
	<ul style="list-style-type: none"> Chamber lid gasket is damaged. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Evacuation system is not air-tight. 	<ul style="list-style-type: none"> Notify the service.
Odour or smoke.	<ul style="list-style-type: none"> Air de-oiling element defective. 	<ul style="list-style-type: none"> Notify the service.
	<ul style="list-style-type: none"> Oil return valve of vacuum pump is blocked. 	<ul style="list-style-type: none"> Notify the service.

9 Shutdown, transport, storage



Info

Observe the safety instructions, see Section 1 "SAFETY".

9.1 Shutting down the machine

9.1.1 Cleaning the machine

- Perform intensive cleaning of the machine, see Section 6.2 "CLEANING THE MACHINE".
-

9.1.2 Preserving the machine

- Preserving the machine, see Section 6.1.7 "CORROSION PROTECTION AND LUBRICATION".
-

9.1.3 Closing and disconnecting supply lines

- Close lid.
 - Lock lid in place.
 - Close stop valve for the gas supply, if present.
 - If present, remove the gas hose from the inert gas connection.
 - Disconnect the machine from the mains electricity.
-

9.2 Transporting the machine

9.2.1 Transporting the machine

- Wear personal protective equipment.



Injury hazard!

The machine is heavy.
Carrying the machine can cause injuries.

- Have a second person assist you.
-

NOTICE **Danger of equipment damage!**

At an inclination of more than 15°, the oil in the vacuum pump shifts.

The air de-oiling elements will get wet from the oil and become ineffective. This will damage the vacuum pump.

- Transport and set the machine down as horizontally as possible.
 - Do NOT tilt the machine.
-

- Carefully raise the machine.
 - For machine dimensions and weight, see "Technical specifications".
 - Transporting the machine
 - Avoid severe jolts.
-

9.3 Storing the machine

- Shutting down the machine.
 - Select a suitable storage site.
 - Observe the ambient conditions for storing the machine, see "Technical specifications".
 - Ensure that the storage location is of adequate load-bearing capacity and keep the weight of the machine in mind, see "Technical specifications".
 - If necessary, cover the machine with film.
-

10 Disposal

10.1 Disposing of the machine



Info

- Sealing bars can be reused on other machines of the same series.
- If disposal of the machine is not handled by the manufacturer, dispose of the machine as described below.

-
- Disconnect the machine from the mains electricity, see Section 9.1.3 "CLOSING AND DISCONNECTING SUPPLY LINES".
-
- Dispose of the materials properly, observing all legal and company-internal regulations regarding environmental protection.
-

10.2 Dispose of operating materials

10.2.1 Disposing of oil and grease

NOTICE **Protect the environment!**

Operating materials and fluids are hazardous to the environment. Improper disposal is harmful to the environment.

- Handle operating materials and fluids properly.
- Dispose of operating materials and fluids at suitable collection points.
- Observe the environmental directives.

-
- Handle and dispose of lubricants and operating materials properly.
-



Info

Excerpt from the disposal directive:

- It is prohibited to mix used oil with other waste.
- Used oils may NOT be mixed with each other.
- Used oil filters should be collected, stored, transported and disposed of separately from other waste.

10.2.2 Disposing of film

NOTICE **Protect the environment!**

Operating materials and fluids are hazardous to the environment. Improper disposal is harmful to the environment.

- Handle operating materials and fluids properly.
- Dispose of operating materials and fluids at suitable collection points.
- Observe the environmental directives.

-
- Handle and dispose of films properly.
-



Info

Films are resources which can be recycled:

- Improper disposal damages our environment.
- Recycle films and film trim.
- Observe the disposal instructions of the film manufacturer.

10.2.3 Dispose of chemicals



WARNING

Chemical burn hazard!

Acidic cleansers are caustic. Caustic effects are NOT noticed immediately.

Contact with the skin can cause burns.

- Wear the prescribed personal protective gear when handling cleansers.
- Observe the manufacturer's instructions.



WARNING

Fire hazard!

Alcohol-based disinfectants are highly flammable.

Fire, naked light or smoking ignites the disinfectant and can thus cause fires.

- When disinfecting the machine, flames or naked lights are prohibited.
- Smoking is prohibited.
- Observe the instructions of the disinfectant manufacturer.

-
- Handle and dispose of cleansers and disinfectants properly.
-

**Info**

Improper disposal damages the environment:

- Observe the safety data sheets of the cleanser and disinfectant manufacturers.
- Follow the disposal instructions of the cleanser and disinfectant manufacturers.
- Observe regionally applicable disposal regulations.

11 Spare parts

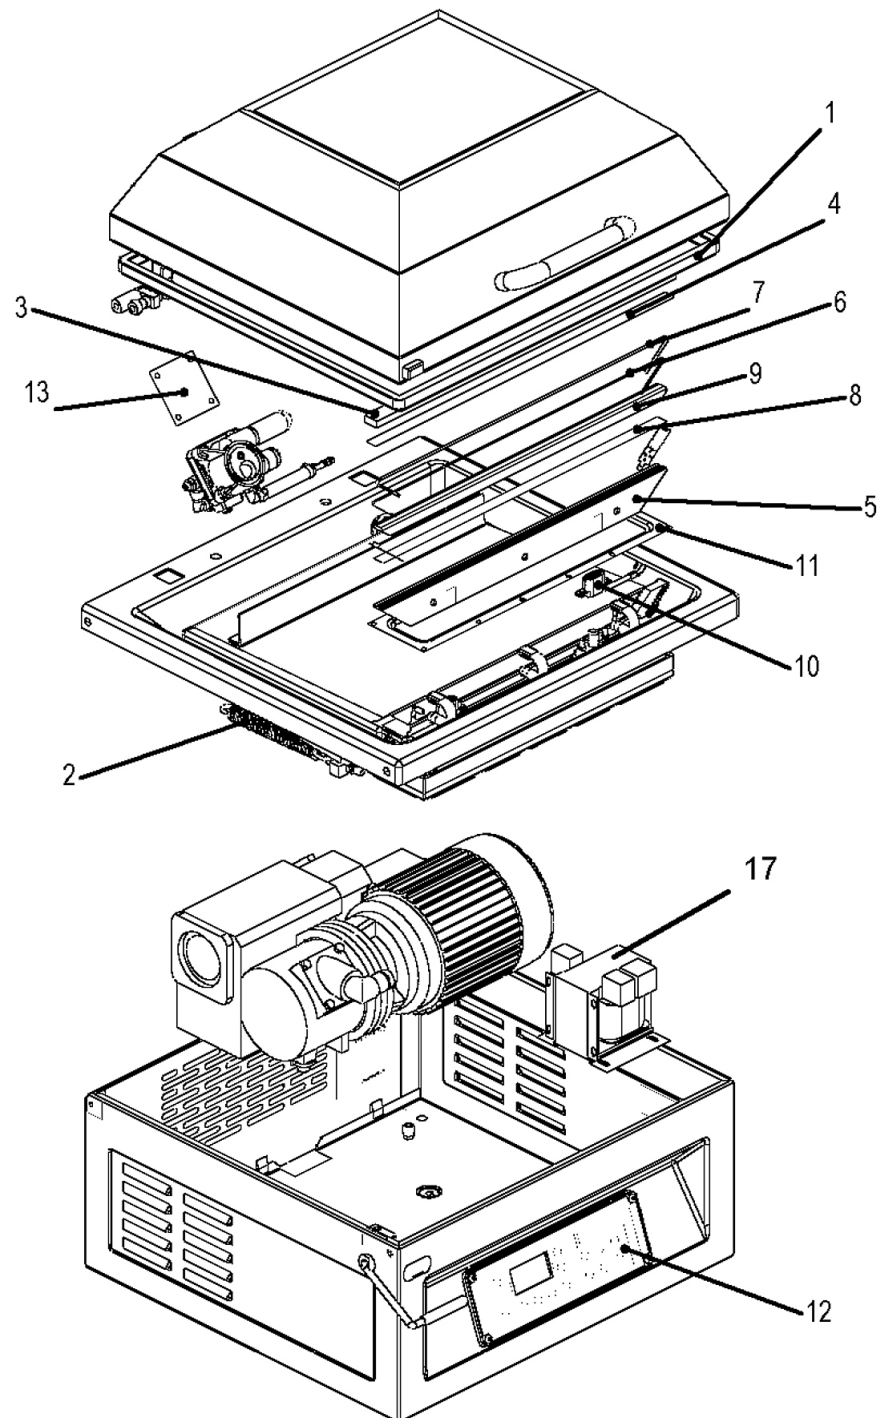


Fig. 29: Spare parts drawing (SAP-DIS 16000022467)

Item	Material number	Designation	Quantity and unit of measurement
1	105893127	Round cord (chamber lid gasket), for chamber height 150 mm	2.0 m
1	81863140000	Profile thread (chamber lid gasket), for chamber height 230 mm	2.0 m
2	105003538	Tension spring for chamber height 230 mm	2 pc.
2	101643292	Tension spring for chamber height 150 mm	1 pc.
3	81863151040	Profile thread	0.5 m
4	81848121000	Teflon tape 0.13 mm x 16 mm	0.5 m
5	105413026	Sealing bar, complete	1 pc.
6	11131198180	Heating tape, 3 mm	1 pc.
7	85662802090	Round wire	0.65 m
8	81848121001	Teflon tape 0.25 mm x 16 mm	0.61 m
9	81848121006	Teflon tape 0.13 mm x 40 mm	0.5 m
10	85123126100	Contact bushing	2 pc.
11	11181798050	Diaphragm	1 pc.
12	105326253	Control	1 pc.
13	11181798040	Diaphragm	1 pc.
14	105048117	Low odour synthetic oil for vacuum pumps (food grade)	1 l
14	91111114013	HD mineral oil (not food grade)	1 l
15	105865631	Air de-oiling element for vacuum pump RB 0021 B	1 pc.
16	11131117103	Repair kit (contains items 6, 7, 8, 9)	1 pc.
17	85641281115	Transformer 220_240/20 volt	1 pc.
17	85641281117	Transformer 110/20 volt	1 pc.

Glossary

Automatic	<p>If the function <i>Automatic</i> is set, the machine will reach the optimum evacuation time and pressure depending on the product. The automatic evacuation is suitable for the following cases:</p> <ul style="list-style-type: none">• Achieving the best possible vacuum for long shelf life.• Packing of products for which the optimum evacuation pressure is not known.• Packing of the same product but one which has varying properties (e.g. varying moisture content, varying temperature). <p>If the evacuation is automatic the value for <i>Automatic sensitivity</i> can be adapted to the product.</p>
Automatic sensitivity	<p>Determines the evacuation time and the evacuation pressure reached when evacuating with the <i>Automatic</i> function. The sensitivity is adjustable from 1 to 10. The lower the sensitivity, the lower the evacuation pressure reached. The value for <i>Automatic sensitivity</i> is dependant on the product.</p> <p>High value for <i>Automatic sensitivity</i> (value 10):</p> <ul style="list-style-type: none">• Is suitable for very moist or fluid products.• Evacuation process ends early.• Evacuation pressure reached in the pack is high. <p>Low value for <i>Automatic sensitivity</i> (value 1):</p> <ul style="list-style-type: none">• Is suitable for dry products.• Evacuation process ends late.• Evacuation pressure reached in the pack is low.
Cooling down Sealing	<p>Value for the cooling down time of the seal seam. The vacuum in the chamber and the sealing pressure are maintained for this length of time. The seal seam can harden. The sealing is switched off during this time.</p>
Cycle time	<p>The display contains the times of the individual procedures of the last packaging procedure.</p>
Delayed ventilation - Sealing	<p>The ventilation of the chamber begins with a delay after sealing.</p>
Distribution time - evacuation	<p>Switching interval between the completed evacuation process and the beginning of the gas flushing process. During the distribution time remaining air pockets in the products can escape before the package is sealed.</p>
Distribution time - Gas flushing	<p>Switching interval after the gas flushing process, during which the gas can distribute itself in the the film pouch.</p>

Evacuation pressure	<p>Is the pressure to which the film pouch and the chamber are evacuated. The pressure is measured in the chamber. Evacuation to a pre-determined pressure is suitable for the following cases:</p> <ul style="list-style-type: none">• Achieving a package result which is different from that of the optimum evacuation pressure.• Packing of products for which the optimum evacuation pressure is known.• Packing of the same product which has identical properties.
Fill diaphragm	<p>During this time sealing pressure is applied to the sealing diaphragm.</p>
Gas flushing pressure	<p>Indicates the pressure until the film pouch is filled with inert gas. Pressure is measured in the chamber.</p>
Gas flushing time	<p>Indicates the amount of time for which the film pouch will be filled with inert gas. Pressure is not influenced by this.</p>
Hours of operation	<p>Shows the time the machine has been operating. The counter begins to count as soon as the machine is switched on and can not be reset.</p>
Machine cycles	<p>Counts the number of complete machine cycles. The counter can be modified and reset. It is used to control the quantities produced.</p>
MCV duration	<p>During this time the set vacuum is maintained during the MCV process (Pressure value + threshold).</p>
MCV threshold	<p>If the pressure value set here is exceeded during the MCV process, further evacuation automatically takes place.</p>
Post-evacuation time	<p>This time extends the evacuation process. Through this, the reached evacuation pressure is lower than the set value. This time begins, when the set pressure is reached. Suitable for damp products.</p>
Rinsing time, gas flushing	<p>During this time the vacuum valve and gas valve are opened simultaneously. On one side of the chamber a vacuum is created, on the other side gas is supplied. The film pouch is thoroughly flushed with gas. This reduces the residual oxygen content.</p>
Sealing time	<p>During this time the film pouch is sealed. The sealing time depends on the material and the thickness of the film pouch.</p>
Sealing time max	<p>This time determines the maximum value for the sealing time.</p>
Settings - Production Data	<p>Shows all currently set target values.</p>
total cycles	<p>Shows the completed machine cycles.</p>

Vacuum pump - Production data	Counts the vacuum pump's hours of operation. Counting starts as soon as the vacuum pump is turned on. The display cannot be changed.
Vacuum test	Automatic leakage test of the vacuum system and the sealing diaphragm.
Ventilate diaphragm	During this time the sealing diaphragm is evacuated. The sealing is without sealing pressure.

Index

A

Access authorisation, resetting 41
Access authorisations, selecting 41
Access right 41
Access rights 26
Access, blocking 41
Adjustment work 47
Against regulations 12
Air de-oiling element 33, 74
Air humidity 31
Airtightness testing 29
Ambient conditions 31
Ambient temperature 31
Anti-corrosion agents 51
Automatic 80
Automatic evacuation 80
Automatic sensitivity 80

B

Basic cleaning 35
Basic settings 45
Buying source 60

C

Calling up menus 40
Care products table 59
Chamber 21
Chamber lid 21
Chamber lid gasket 21
Chamber size 30
Change password 41
Checking packs 15
Cleaning 52
Cleaning device 51
Cleansers 49
Conduct in emergencies 13
Configuration code 24
Control terminal 21, 22
Control unit 22
Cooling down Sealing 80
Corrosion protection 50
Counter-pressure bar 21
Cycle time 80

D

Daily cleaning, performing 52
Delayed ventilation - sealing 80

Depth 30

Diagnostic display 26
Diagnostic message 70
Diagnostic message, acknowledging 23
Diagnostic number 26
Diagonal insert, inserting 47
Diagonal insert, removing 47
Dimensions 30
Disinfectant 50
Disinfection 52
Display 24
Display cycle time 46
Display hours of operation 46
Display production data 45
Display total cycles 45
Display, setting 46
Disposal directive 75
Dispose of chemicals 76
Disposing of the machine 75
Distribution time - evacuation 80
Distribution time - gas flushing 80
Drying packaging 29

E

EMC 11
Entering basic settings 45
Error 26
Error number 26
Evacuation Pressure 81
Evacuation procedure, cancelling 23
Evacuation, automatic 80

F

Factory setting 43
Fill diaphragm 81
Film, disposal 76
Final pressure 32
Foreseeable incorrect use 12

G

Gas flushing pressure 81
Gas flushing procedure, cancelling 23
Gas flushing time 81
Gas nozzle 21
Gas purging 81
Gas supply 15
Gas supply stop valve 15
Grease disposal 75

H

Height 30
High-pressure cleaners 49
Hygiene 14
Hygiene standard 14

I

Incorrect use 12
Inert gas 31
Inert gas connection 22
Inert gas, connecting 34
Inputs, sealing 45
Installation conditions 31
Instructions to follow 8
Intended use 11
Intensive cleaning, performing 57

K

Key 22

L

Label 18
Language selection 42
Load recipe 42
Load recipe quickly 42
Lock 24
Locking for lid 21
Login 41
Low-pressure test 16

M

Machine control 22
Machine cycles 81
Machine cycles, modifying 45
Machine cycles, resetting 45
Machine labels 18
Machine shutdown 73, 74
Machine storage 74
Machine, cleaning 51, 52
Machine, disinfecting 52
Machine, switching off 36
Machine, switching on 36
Machine, transporting 73
Machine's hours of operation 46
Mains voltage 30, 34
Malfunctions 70, 71
Manufacture of spare parts 10
Max. short-circuit current 30
Maximum pre-fuse 30
MCV 29
MCV Duration 81

MCV threshold 81
Measuring residual oxygen 16
Menu tree 28
Misuse 12
Modifications 10

N

Noise exposure 32
Nominal current 30
Nominal power 30
Non-ionising radiation 12
Notices 18

O

Official language 14
Oil disposal 75
Oil level 69
Oil sight glass 22
Oil, adding 67
Oil, changing 66
Oil, draining 66
Operating fluids 75, 76
Operating height 30
Operating hours 81
Operating materials 75, 76

P

Packaging process 29
Packing products 37
Parameters, setting 40
Password 41
Performing daily disinfection 52
Personal protective gear 14
Phases 30
Post evacuation time 81
Power supply connection 16, 22, 30
Power supply, connecting 34
pre-fuse 30
Preset recipes 29
Process data 24
Process data status display 24
Process sequence 28
Production data 81
Program 42
Protection type 30
Protective gear 14
Pump protection function 16
Purging time gas flushing 81

R

Rear view 22

Recipe 42
Recipe keys 42
Recipe, deleting 43
Recipe, saving 43
Recipes 29
Recommended maintenance 62
Relative air humidity 31
Reset password 41
Residual risks 13

S

Safety devices 17
Safety instructions 9
Safety labels 18
Scope of delivery 6
Screw plug, drain opening 22
Screw plug, fill opening 22
Seal seam width 15
Sealing 45
Sealing bar 21
Sealing bar, installing 65
Sealing bar, removing 65
Sealing bar, replacing 65
Sealing length 30
Sealing procedure, cancelling 23
Sealing time 81
Sealing time max 81
Sealing, setting 45
Select process 44
Selection of personnel 14
Sensitivity 80
Set MCV 44
Set process 44
Set standard 44
Setting up the machine 33
Settings - Production data 81
Setup 47
Short-circuit current 30
Show settings 46
Software version 24, 36

Spare parts 78
Stacking test 16
Standard process 29
Startup display 24
Status display 24
Steam jets 49
Storage temperature 31
Storage test 15
Supply lines, closing 73
Supply lines, disconnecting 73
Symbols 7

T

Target group 9
Target values 81
Technical data 30
Technical products 29
Testing procedure 15
Third-party parts 12
Total cycles 45, 81
Transport 73
Transport equipment 73
Troubleshooting 70
Type designation of machine control 24

V

Vacuum pump 31, 33, 74
Vacuum pump - production data 82
Vacuum pump hours of operation 46
Vacuum test 82
Vacuum test, performing 64
Values, modifying 40
Ventilate diaphragm 82
Visual inspection 61, 62

W

Warnings 7
Weight 31
Width 30