

SAFETY INSTRUCTIONS	4
INFORMATION CONCERNING MAINTENANCE AND EXPLOITATION	4
REMARKS CONCERNING SAFETY	4
OUTLOOK DESCRIPTION	6
BASIC OPERATIONS RELATED WITH TABLET USAGE	6
<i>Starting the device</i>	6
<i>Unlocking touch screen</i>	7
<i>Screen lock settings</i>	7
<i>Turning off the system</i>	8
<i>Connecting tablet to PC</i>	8
MAIN MENU	9
<i>Widgets</i>	10
TABLET OPERATING	11
<i>Touch screen handling</i>	11
<i>Voice entering of the text</i>	12
<i>Search</i>	12
<i>Adding shortcuts</i>	12
<i>Removing shortcuts</i>	12
<i>Removing shortcuts</i>	12
SETTINGS	13
<i>Wireless and network - Wi-Fi</i>	13
<i>Connecting with Wi-Fi network</i>	13
<i>Deleting Wi-Fi settings</i>	14
<i>Wi-Fi advanced settings</i>	14
<i>Device - Sound</i>	14
<i>Device - Display</i>	15
<i>Device - Storage</i>	16

<i>Device - Battery</i>	16
<i>Device - Applications</i>	17
<i>Personal - Location Services</i>	18
<i>Personal - Security</i>	18
<i>Personal - Language and Input</i>	19
<i>Personal - Backup and Reset</i>	19
<i>System - Date and Time</i>	20
<i>System - Accessibility</i>	21
<i>System - About Tablet</i>	21
GOOGLE PLAY	22
<i>Setting up the Google account</i>	22
<i>Setting up the Google account</i>	22
FAQ	24
GOOGLE PLAY FAQ	26

Thank you for purchasing this tablet.

The present instruction manual comprises important information concerning the product; therefore you should get acquainted with it prior to start use the product. Improper maintenance and use not in accordance with its main applicability can cause product damage and be a threat of accidents.

We hope that the quality and functionality of the appliance will meet your expectations. In order to provide answers to any questions which might arise when using the appliance, we ask you to read the below Instruction Manual.

This product meets all the requirements and provisions of the applicable European Union directives.

Detailed warranty information can be found in the warranty card.

The information contained in this document is subject to change without notice.

ET Ltd reserves the right to mistakes and printing errors.

Copyright©2013 ET Ltd. All rights reserved.

Any reproduction, reprint, adaptation or translation without permission is prohibited.

SAFETY INSTRUCTIONS

- Instruction manual is an integral part of the product.
- Carefully read and follow the below manual before using this product.
- Keep this Instruction Manual and the Warranty Card along with the proof of purchase for any claims.
- Never attempt any repairs of the appliance. Any repairs must be performed by an
- Authorized Service Station or a Central Service (If you have questions, please email us at vip@hsuuk.com).
- Never use the appliance in a manner inconsistent with the intended use and this Manual.

INFORMATION CONCERNING MAINTENANCE AND EXPLOITATION

- Before using this product, check if the appliance is not damaged. Particular attention must be paid to the power cord. Should any component, including the power cord, be damaged the appliance must not be used.
- Use dry delicate cloth for cleaning.
- Switch off the device prior to begin cleaning and make sure that the plug is pulled out of the outlet.
- During the cleaning follow the general safety rules and be especially careful.
- Product is designed only and exclusively for indoors use.
- Never immerse the appliance in water or any other solution because it can cause corrosion of electronic circuits.
- The product should be safeguard from children and in any case should not be the subject of play.
- The product should be protected against dust pollution and moisture, because this can lead to components damage.
- Do not store the device in high and low temperatures. Unsuitable weather conditions can shorten the life of components and cause distortion in housing.
- Do not tie and do not bend excessively the power cord.
- Do not use near flammable objects. Do not cover the device.
- Do not drop, strike, bend and shake the device.
- Do not attempt to modify or repair device in any way - it can cause electric shocks.
- Use only AC adapter included with the device.
- The manufacturer is not liable for any damages that may arise as a result of installation and use of the device not in accordance with the technical specification described in this manual.

REMARKS CONCERNING SAFETY

- Do not turn on the tablet in the places where it is not allowed to use wireless devices such as during takeoff and landing aircraft, near medical equipment, chemicals.
- Do not use the device during driving a car.
- Do not connect incompatible products.

NOTE:

Manufacturer is not responsible for any data loss or other consequences arising out of use of the software installed in a tablet. Making a copy of any important data or files.

Playing media files should be made only in relation to medias that you own the copyright. Users in violation of copyright may be prosecuted according to the law.

I. OUTLOOK DESCRIPTION



II. BASIC OPERATIONS RELATED WITH TABLET USAGE

1. Starting the device

To start the device press and hold for few seconds POWER button (marked with  symbol) placed on the side of device. Your battery has been partially charged at the factory, but you may need to recharge it before you can switch on your device for the first time. Connect the charger to a wall outlet, then connect the charger to the device. Do not connect incompatible products.


- Charging time is around 5 hours
- If you are using device during charging process, charging process will be extend.
- Use your tablet at least once a week.
- Charge the device only indoor.
- Do not store the adapter in high temperature.

As with all batteries, the capacity of the battery reduces each time it is charged/depleted. However, you can still try to prolong the battery's lifetime by following the suggestions below:

- Use your tablet at least once a week.
- Charge the battery regularly and fully.
- Never leave the battery fully discharged for a long period of time.
- Never overcharge your battery.
- Always keep the device and the battery away from heat.

2. Unlocking touch screen

After system start or after longer period of idle tablet's touch screen become locked. To unlock it drag lock symbol in the direction indicated on the device screen.

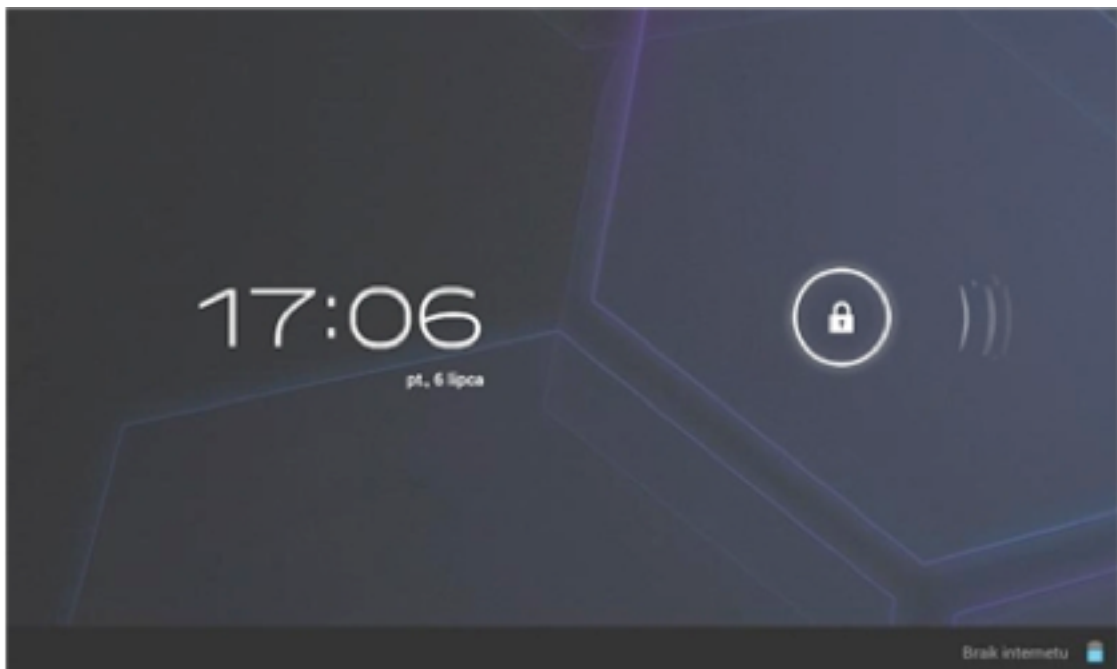

Note:

During longer period of idle, system turns into “power saving” mode automatically turning off the screen.

User can lock the screen by pressing  button.

3. Screen lock settings

Settings of screen lock can be adjusted.


On the main screen or in All Applications screen touch Settings icon



- (1) Select **Security**
- (2) Select **Set screen lock**
- (3) Select type of lock which you want to use

4. Turning off the system


To turn off tablet, press and hold power button  then select “Power off”.

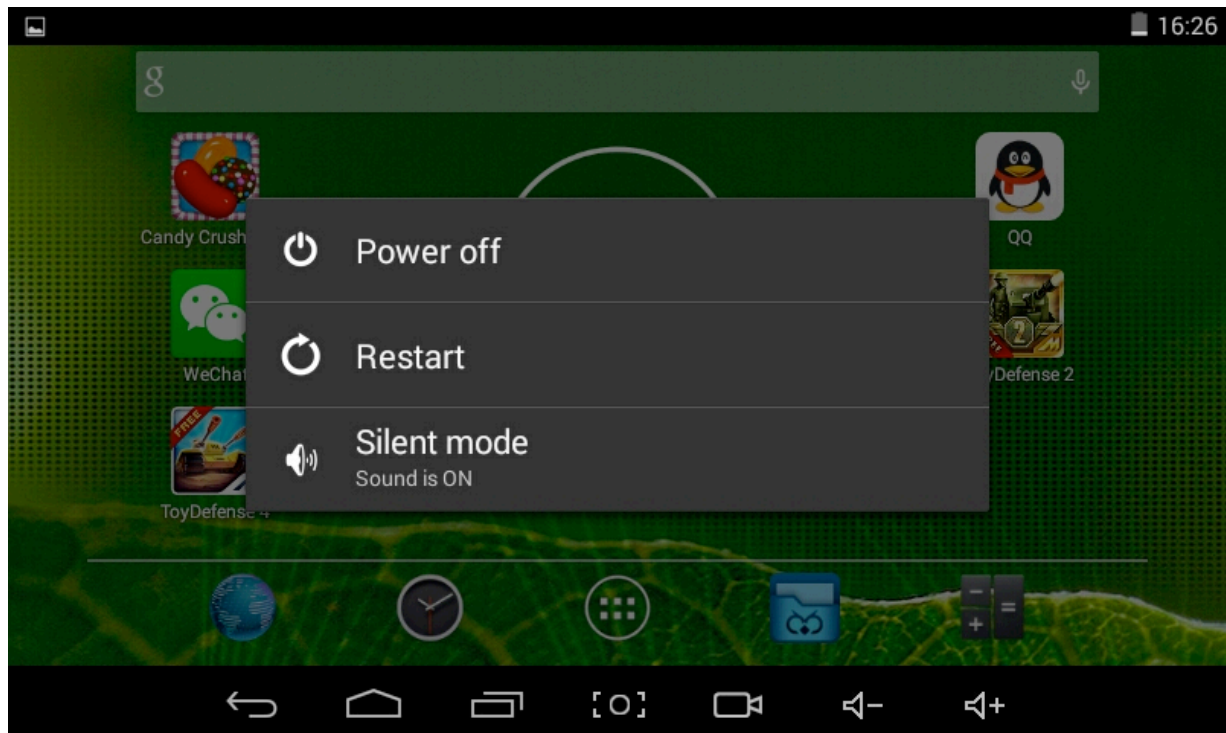

5. Connecting tablet to PC

USB connection allows to exchange files between the tablet and PC computer. This function allows to upload into device memory pictures, films, music or using tablet as portable memory. Connection can be established by using special adapter or USB cable (included with the device). When you connect tablet to a computer, there will be visible message on screen:


To make the connection, press **“Turn on USB storage”**

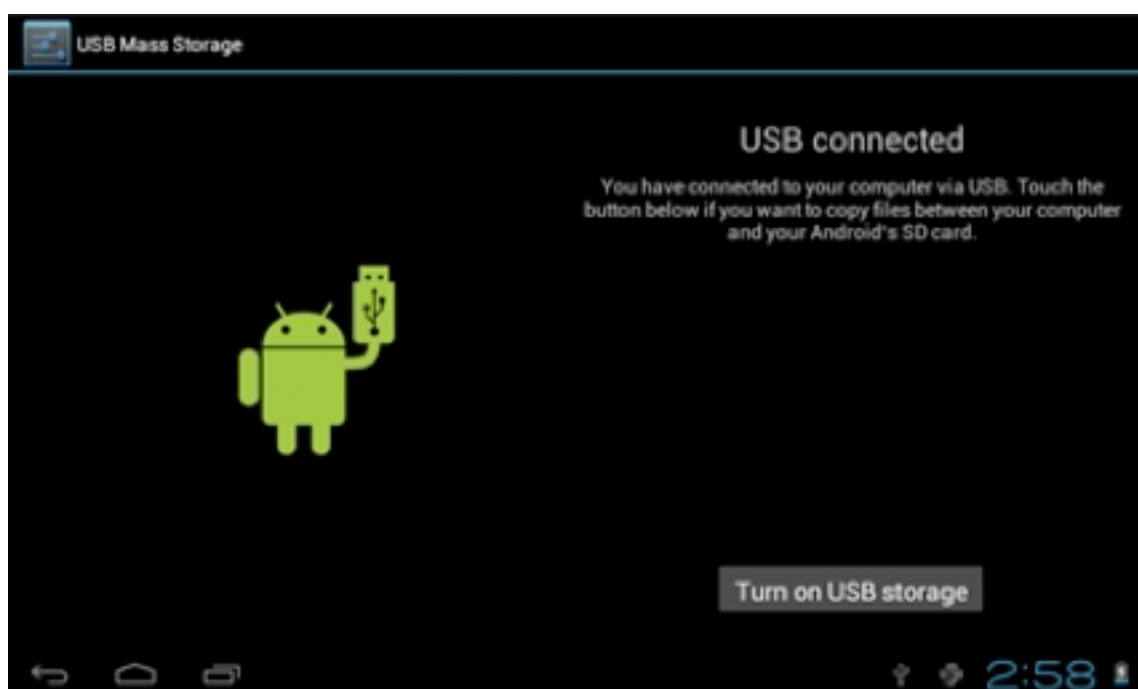

III. MAIN MENU

After starting the tablet the main Menu on touch screen is visible.


Using  button you can always turn to “MAIN MENU”

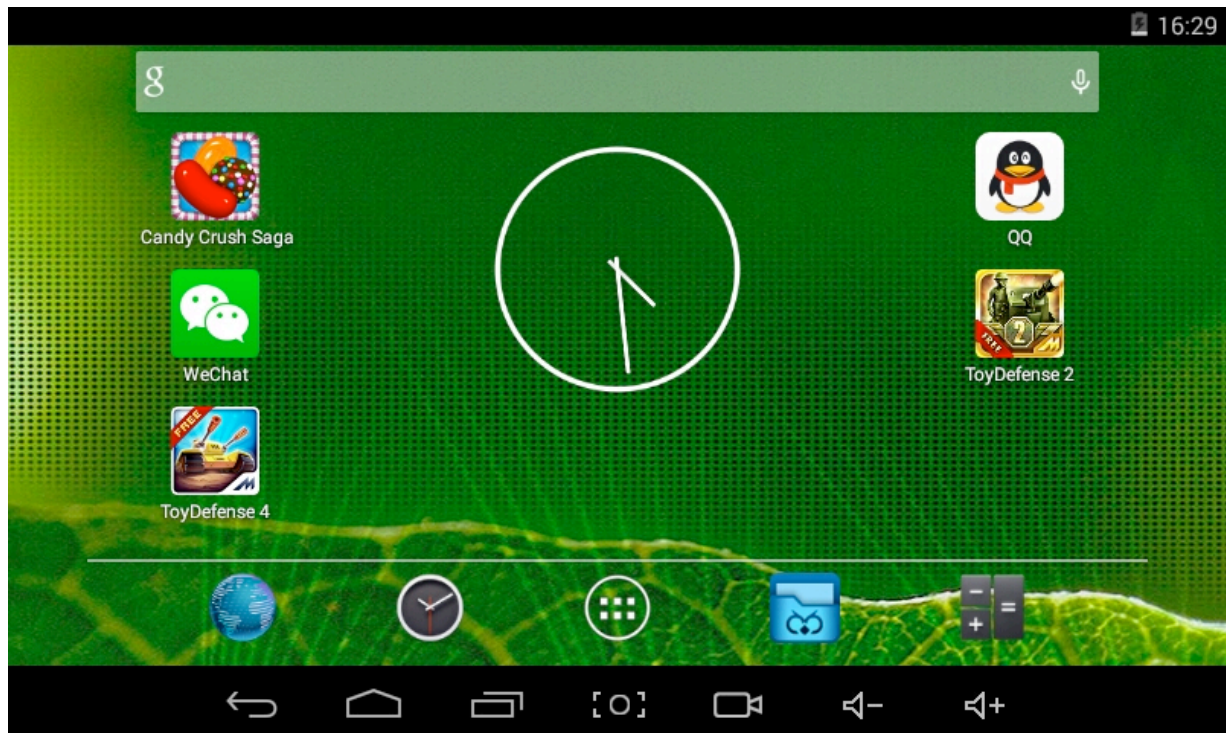

Top of the screen:



Google Browser: Allows to open internet browser along with available keyboard

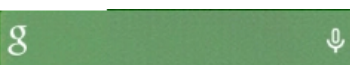


Voice Input: Allows to enter the text by voice (to use this function it is necessary to connect to the Internet)



All Applications: Icon is placed in right bottom place of the screen
Activation of the icon allows to: display installed applications, switch between applications



 USB Connection: Icon is displayed when the USB port is in use.

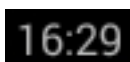

Local Time: Displays the time preset by the user in system.



Wi-Fi Network: Icon is display when the Wi-Fi network is active.




Charge Status: Icon informs about actual battery level.



Mobile Network: Icon informs about active 2G/3G mobile network connection.

Center of the screen

contains view of desktops that can be modified, adjusted to user individual needs. On desktops shortcuts to applications, widgets, folders and wallpapers can be changed.

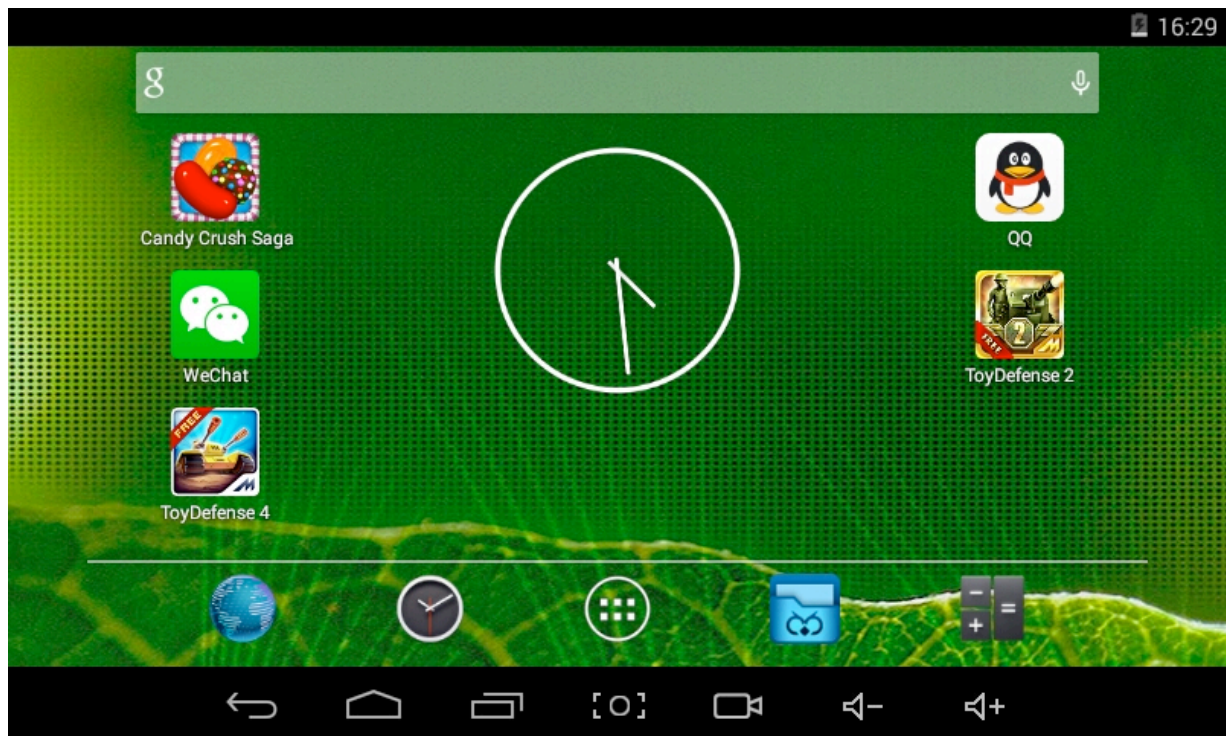

Bottom of the screen:

there is placed status bar which contains function keys and information icons.



Back: Opens previously used screen, even if it is placed in other applications. After returning to main screen you can't go back any more.



Main Screen: Opens the main screen. If the left or right desktop is visible, the main screen is opened.



Recent Applications: Open list of thumbnails of recently used applications. To open the application touch its thumbnail. To remove thumbnail from list move it to the left or right.

1. Widgets

Widgets are usually simple applications displayed on the desktop screen. They are designated to do one certain activity, for example displaying the time, actual weather, adding

notes. Thanks to their functionality, widgets are becoming more and more popular within users as an essential part of operating system.

IV. TABLET OPERATING

1. Touch screen handling

Operation of tablets with touch screens is realized by a system of gestures.

Most of applications work with gravity sensor (the so-called G-Sensor), which allows to automatic rotation when you change the position of tablet. This feature allows you to use tablet both horizontally and vertically.



TAB

Single tap on the screen element (for example icon or button) to select it



DOUBLE TAP

Quick double tap on the screen element to start automatic zoom (text, photo etc.). Another double tap to undo an action.



LONG PRESS

Tab and holding finger to view context menu (same as right button in PC mouse)



SCROLL

Scrolling on the screen or menu with controlled speed



FLICK

Fast scrolling of menu or page



PINCH

Closing two fingers together to gradual zoom out text/picture



SPREAD

Spreading two fingers to gradually zoom in text/picture

2. Voice entering of the text

This functions uses speech recognition service, so to be able to use it, active connection with the internet by mobile network or Wi-Fi is necessary. In most of places where you input text by screen keyboard, you can also input the text by voice.

To do this you have to:

- (1) tap text field or choose place in the text
- (2) choose  on screen keyboard
- (3) after choosing the microphone icon, you can start voice entering of the text

3. Search

Google search engine (on the left top corner of screen) allows to search for all necessary information.

- (1) Select **Google** from the top left corner of screen
- (2) Using screen keyboard or microphone  enter search term

4. Adding shortcuts

You can modify desktops by adding shortcuts from the Main Menu. To do this you have to:

- (1) Choose  to display all of installed apps
- (2) Long press the chosen app icon and a window of Main Menu will pop up
- (3) Move the icon to free space then release it

5. Removing shortcuts


When you need to remove shortcuts form Main Menu, you have to:

- (1) Long press the icon which you want to remove.
- (2) Drag the icon to X or Trash-Bin (varies from system version) symbol to remove it

6. Removing shortcuts


While using the tablet, a lot of unused apps can slow down the system. To close those apps you have to:

- (1) Choose  to display thumbnails of running apps
- (2) Long press the app which you want to close
- (3) Select **"Remove from List"**

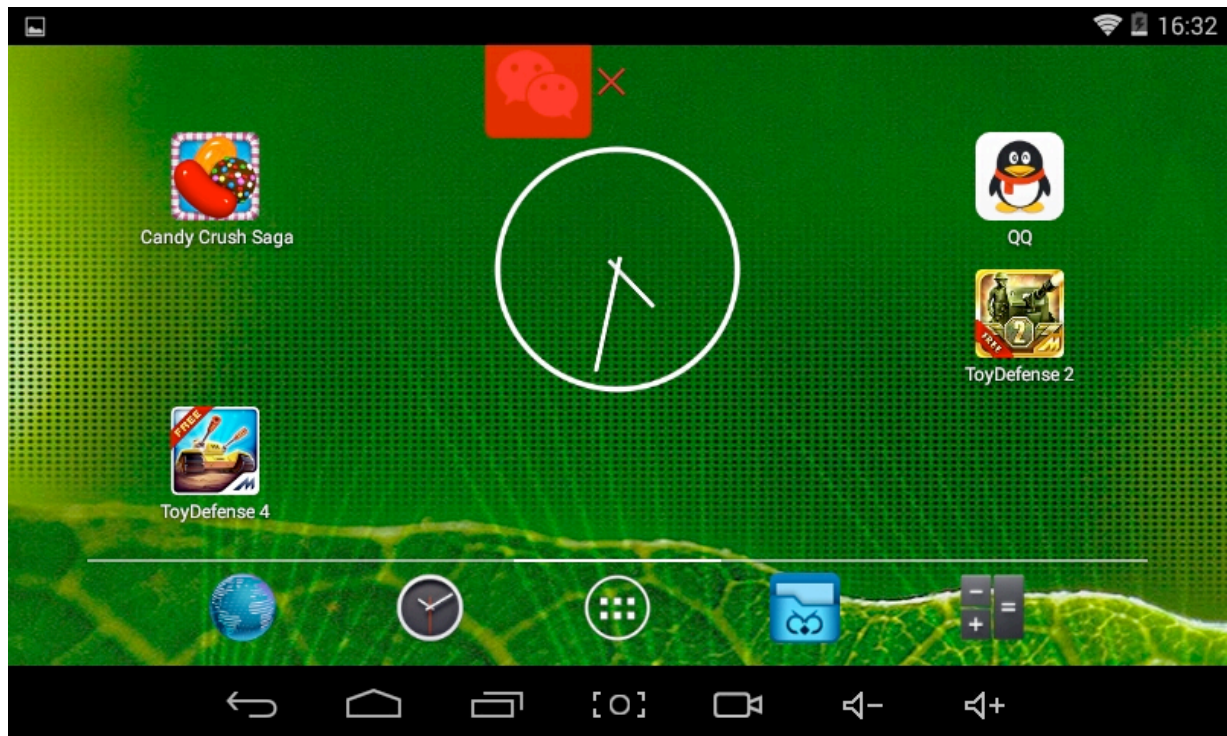

V. SETTINGS

1. Wireless and network - Wi-Fi

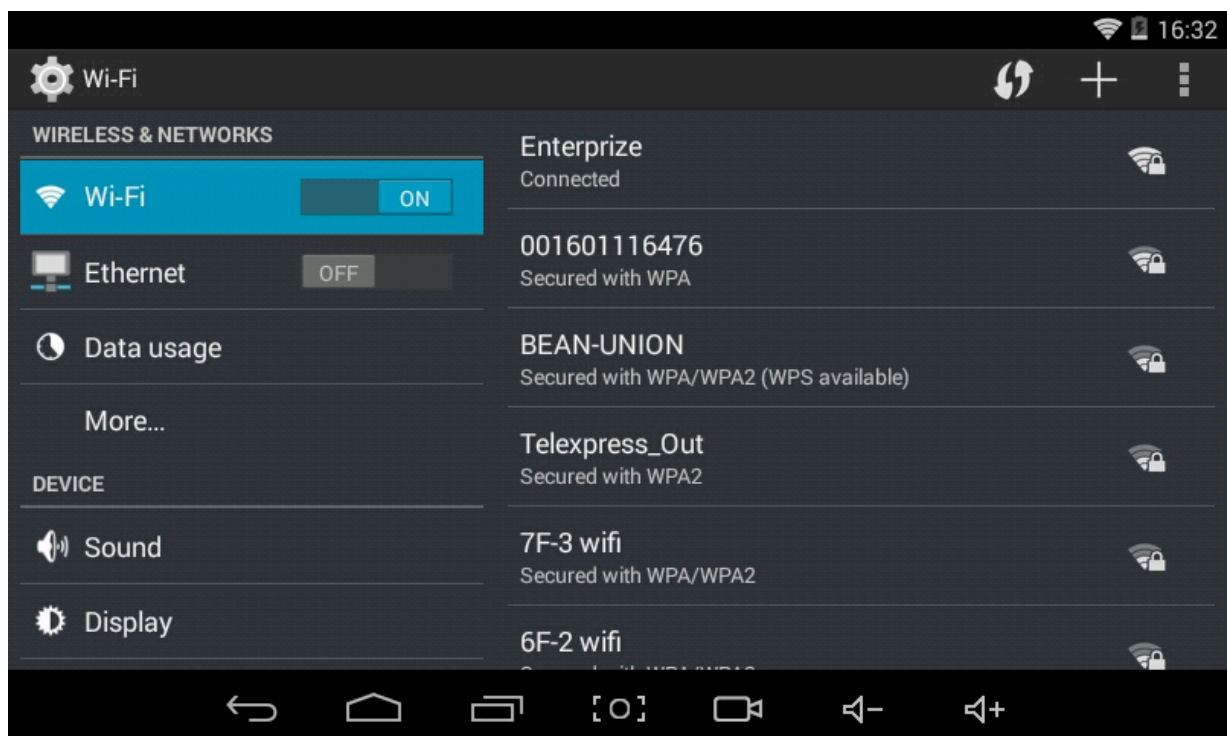

2. Connecting with Wi-Fi network

To set menu press  icon, then to start connection with Wi-Fi access point, set Wi-Fi switch into position ON. After this procedure, scanning for available Wi-Fi networks will begin. After searching available Wi-Fi networks containing names and additional informations

concerning security will be listed. Networks that are secured will have lock icon placed near the Wi-Fi icon.

To connect to a secured Wi-Fi network you to have proper data for logging. To do this you have to:

- (1) Turn on Wi-Fi networks service
- (2) From the list of available networks choose the network with which you want to establish a connection
- (3) Select “**Add Network**” (function situated in upper right corner of the screen)
- (4) Enter the password
- (5) Select “**Connect**”

To extent the battery life of your tablet, we advise you to turn off Wi-Fi when not in use.

3. Deleting Wi-Fi settings

When you want to delete previously used network you have to:

- (1) Turn on Wi-Fi
- (2) Long press the name of the network
- (3) Select “**Forget Network**”

4. Wi-Fi advanced settings

To enter advanced Wi-Fi setting you have to:

- (1) From the main menu select Settings 
- (2) Select  placed in upper right corner of the screen
- (3) Chose “**Advanced**”

In advanced Wi-Fi settings you can change following features:


- **Network notification:** while this option is on, when the Wi-Fi is enabled on status bar are shown notifications informing about found opened Wi-Fi networks. Unselecting this option disables notifications.
- **Keep Wi-Fi on during sleep:** this function allows to disable Wi-Fi data transmission while the device is turned into sleep mode

Screen contains also additional informations:


- **MAC Address:** MAC (Media Access Control) address of the device
- **IP Address:** IP address (Internet Protocol) assigned by the Wi-Fi network with which connection was established (unless you are using a static address specified in IP settings).

5. Device - Sound

Preferences related to volume options and type of sound notifications

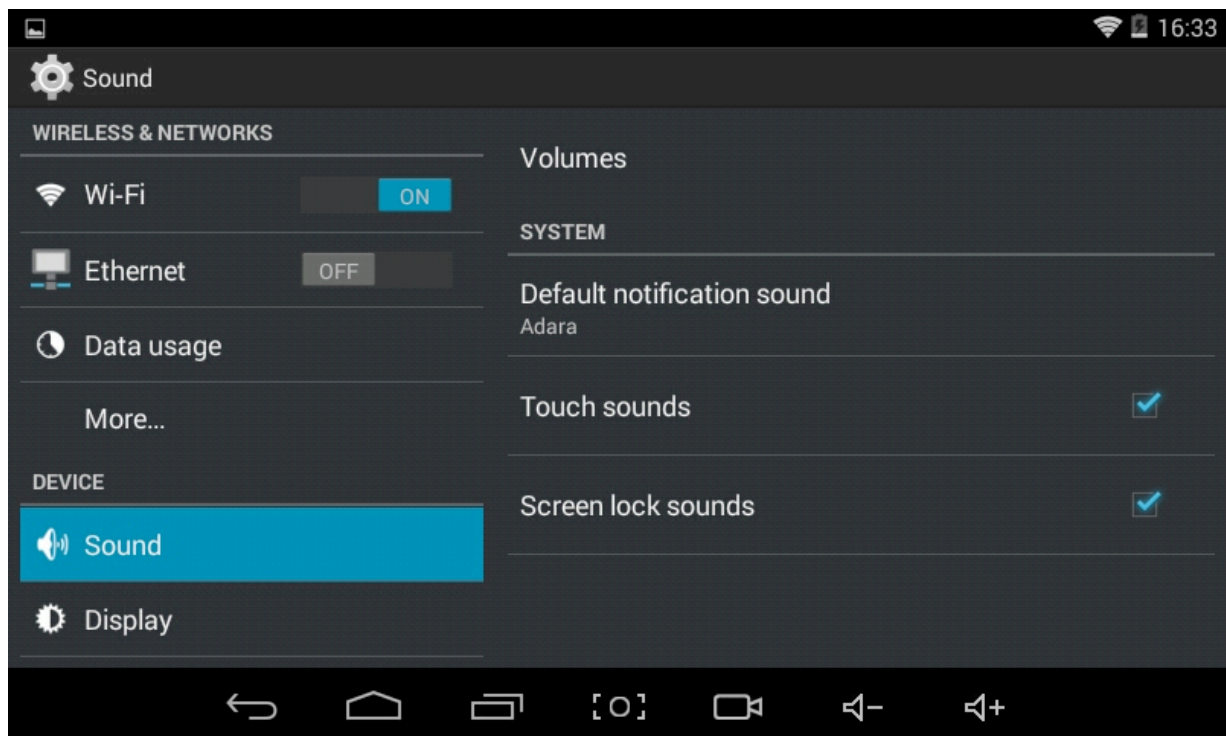

6. Device - Display

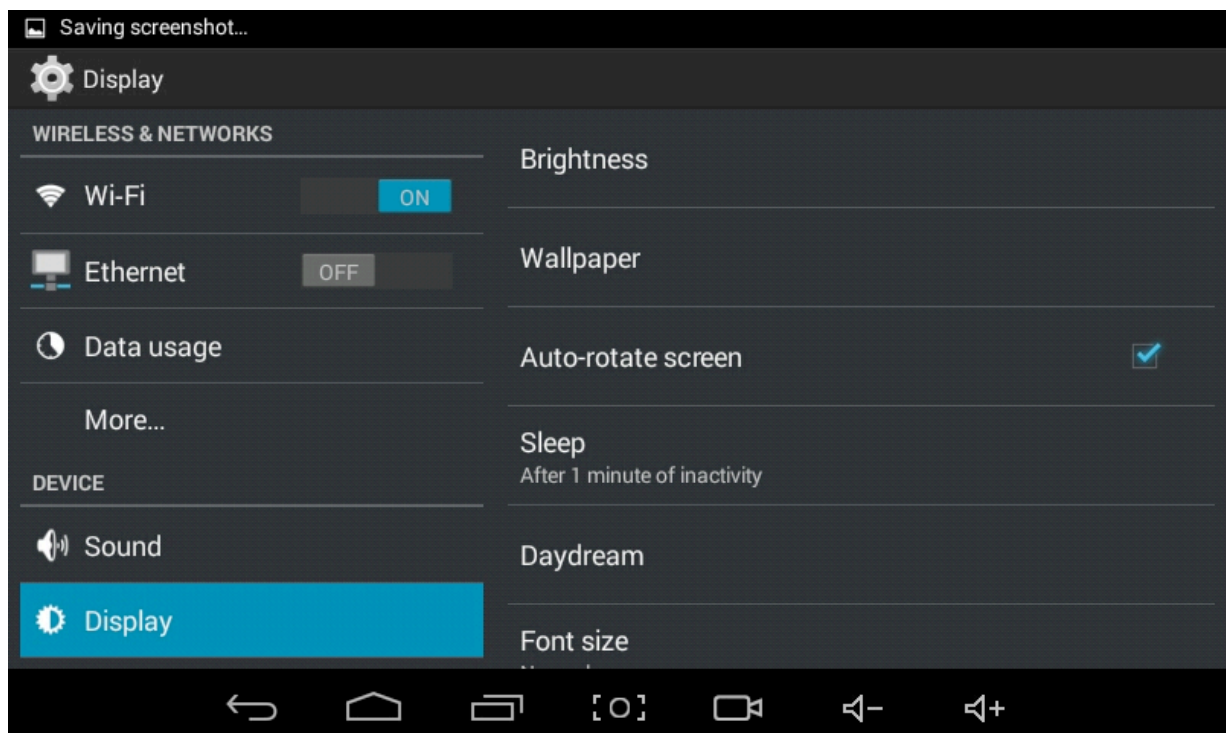


Setting options:

- Brightness of the screen
- Auto-rotate of the screen
- Screen timeout (setting options: 15s, 30s, 1min, 2min, 5min, 10min, 30min)
- Font size (available options: Small, Normal, Big, Huge)
- Changing the settings of motion sensor
- Setting associated with adjusting applications appearance to the size of screen

7. Device - Storage

Graphic visualization of used internal memory.

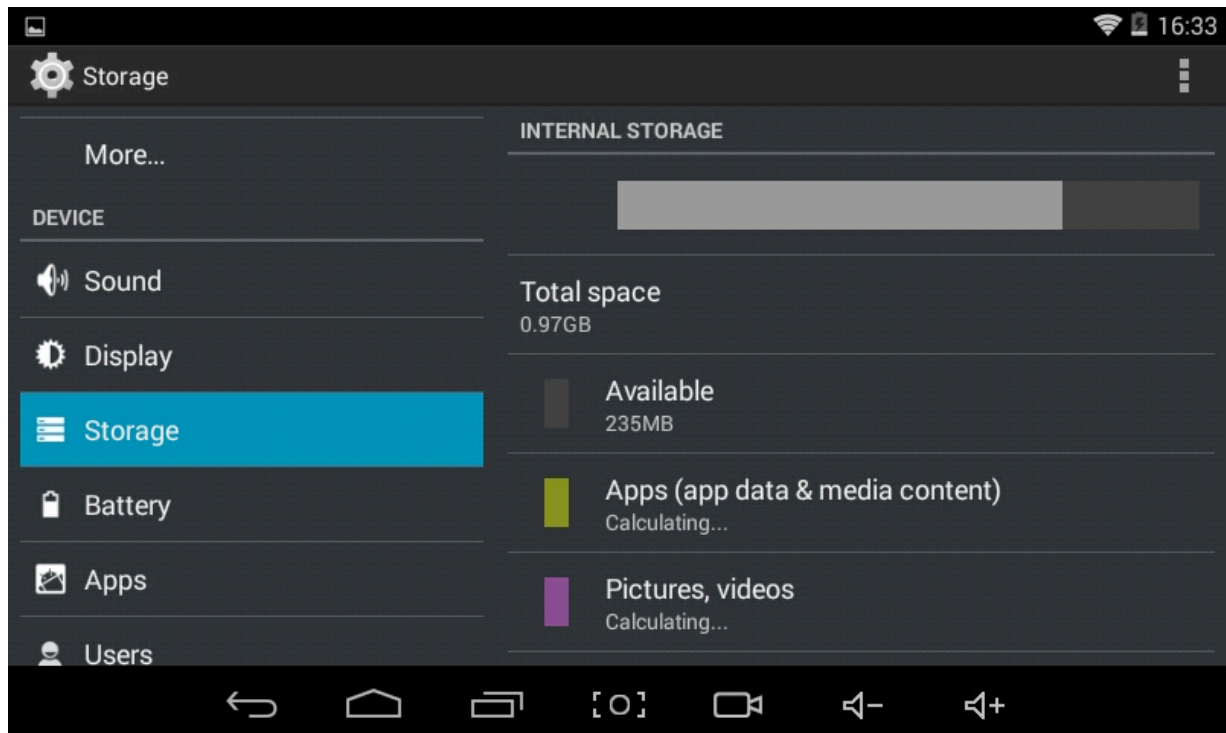


Available options:

- Format SD card: erase data from the SD card, including music or pictures
- EXTSD: external micro SD card
- USB Host: allows to direct connection of flash


8. Device - Battery

Here shows the battery level and charging status.

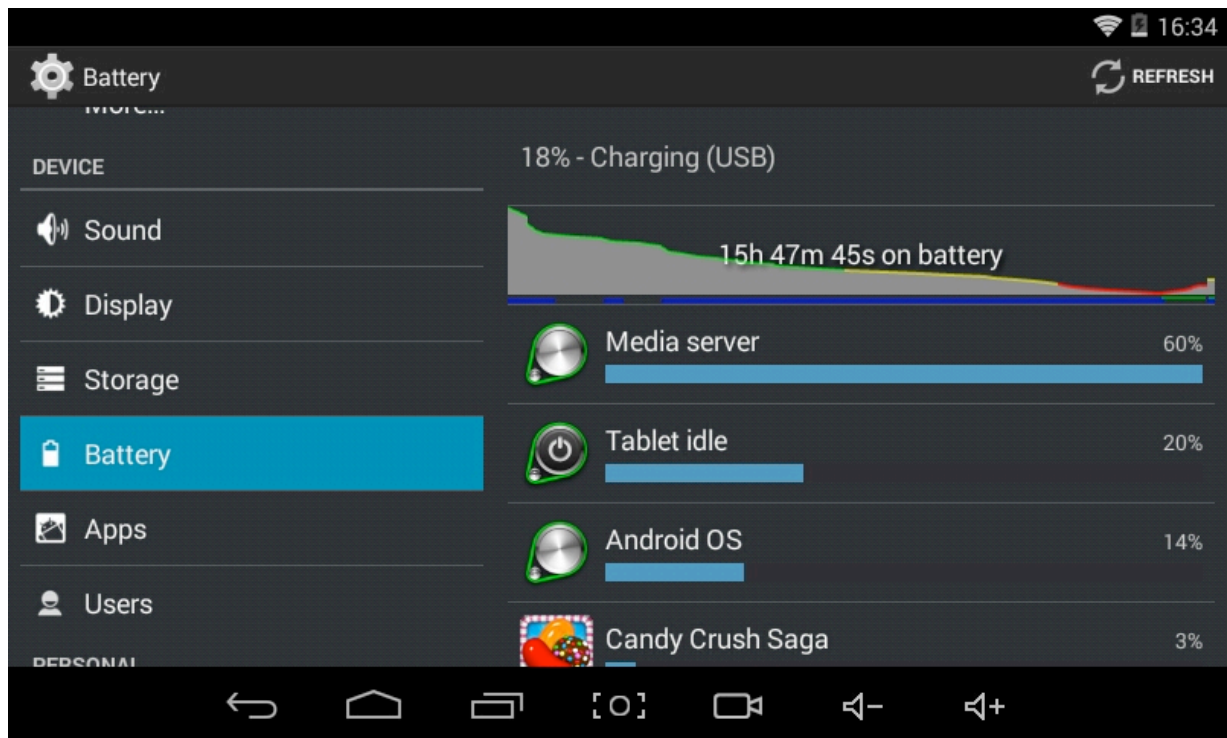


9. Device - Applications

List of installed applications

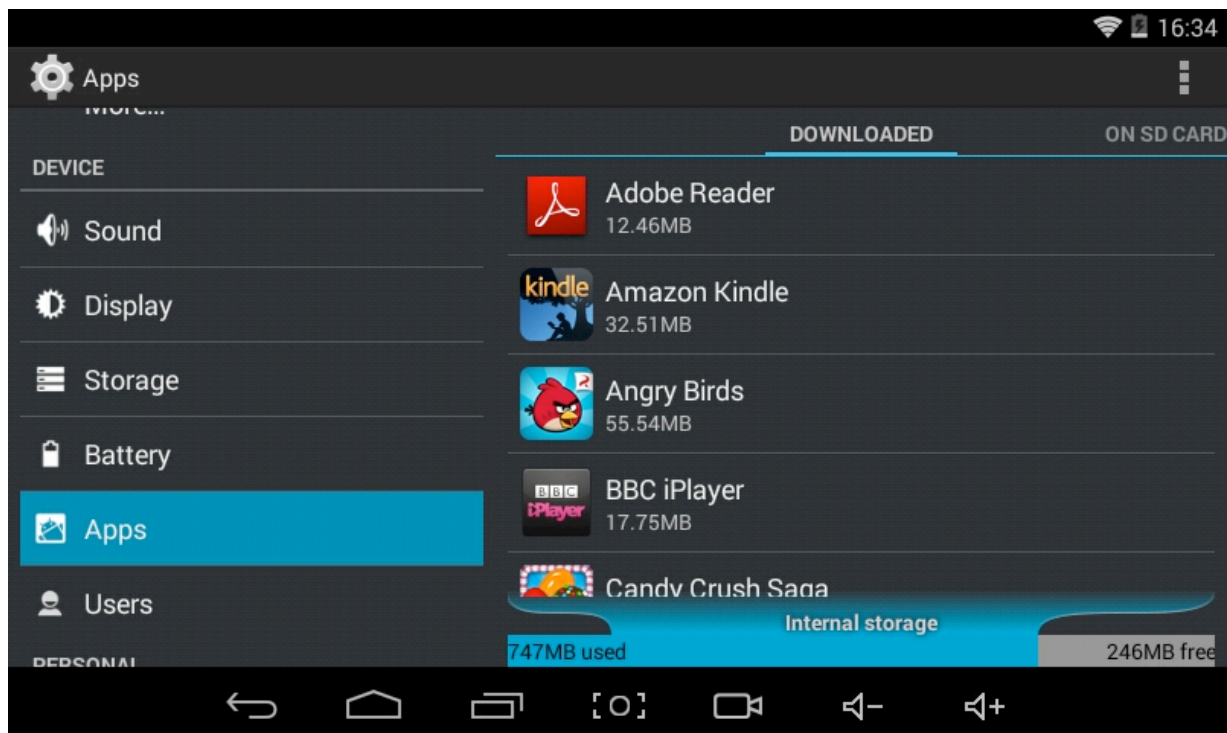


10. Personal - Location Services

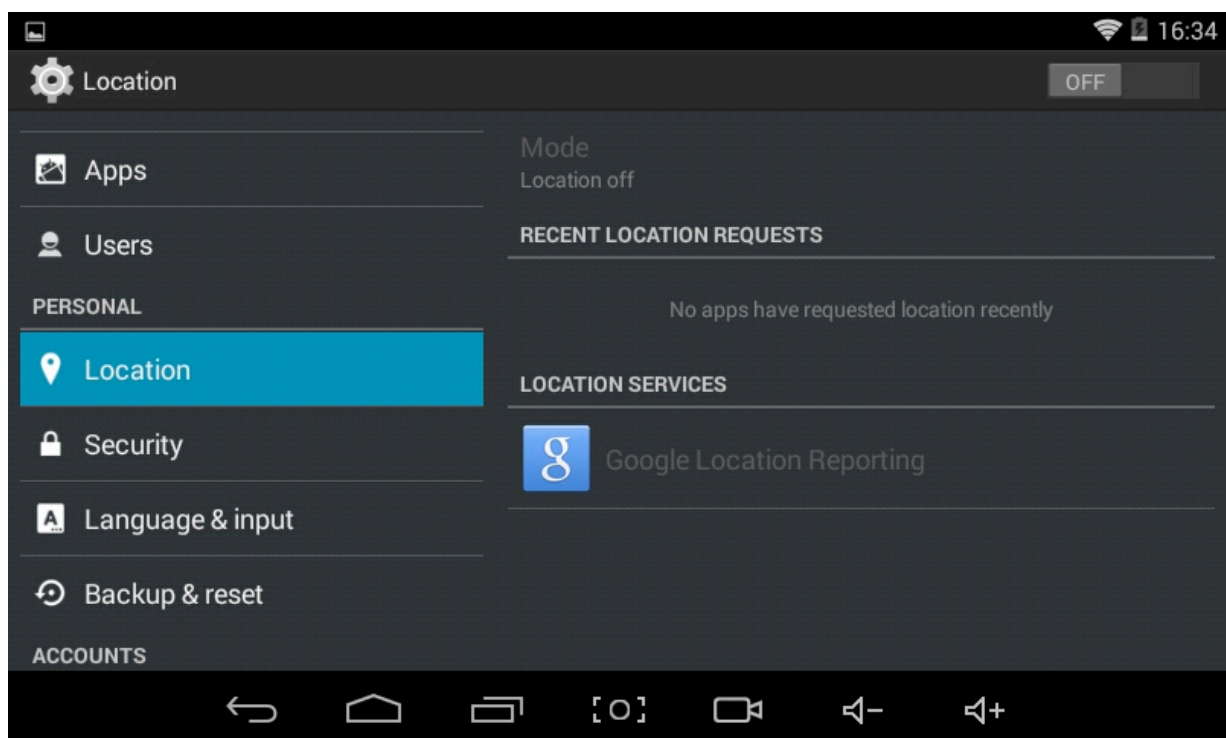

Available options:

- Location service: allowing applications to use the data to determine approximate location
- Location in network: allowing Google to use your location data improve search results.


11. Personal - Security

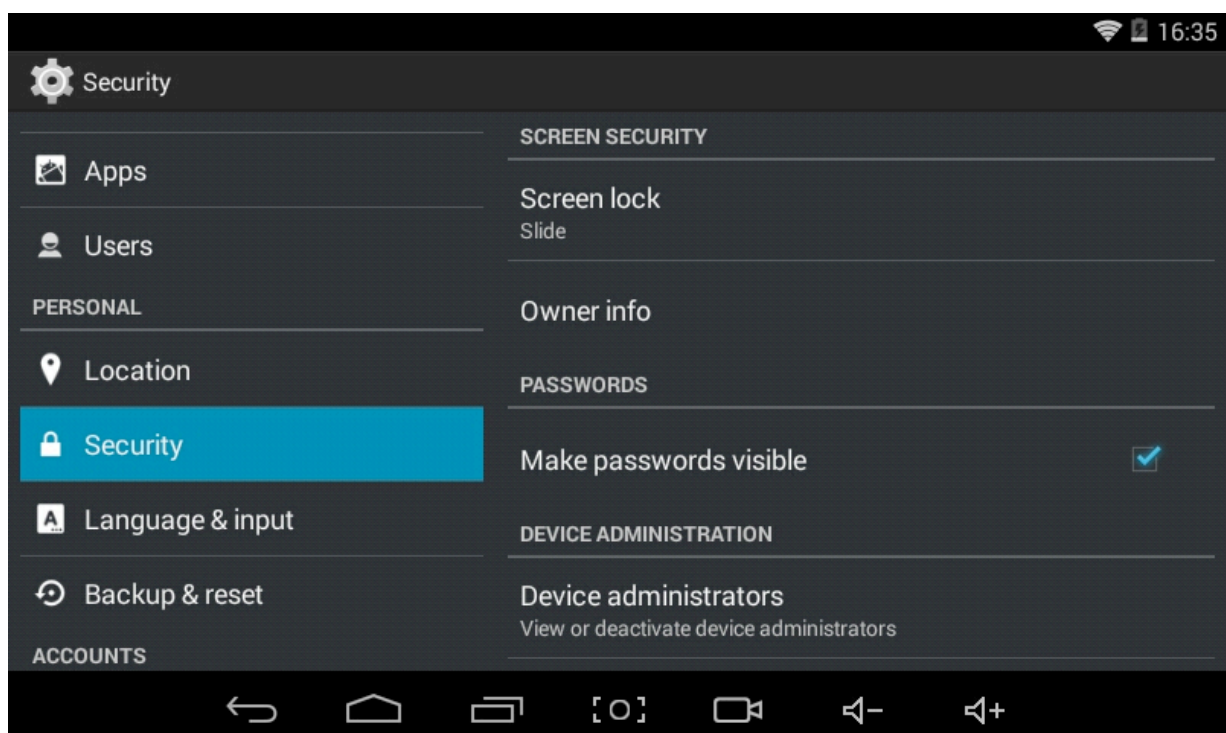

Available options:

- Screen unlock security: available options related to screen locking
- Encryption: setting related to gaining access to the device after entering PIN code or password
- Passwords: available options are passwords visible passwords/passwords hidden
- Device administrator: displaying or deactivation of available administrators; allow installation of non-market applications; displaying CA certificates
- Login data storage: install certificates from the SD card


12. Personal - Language and Input

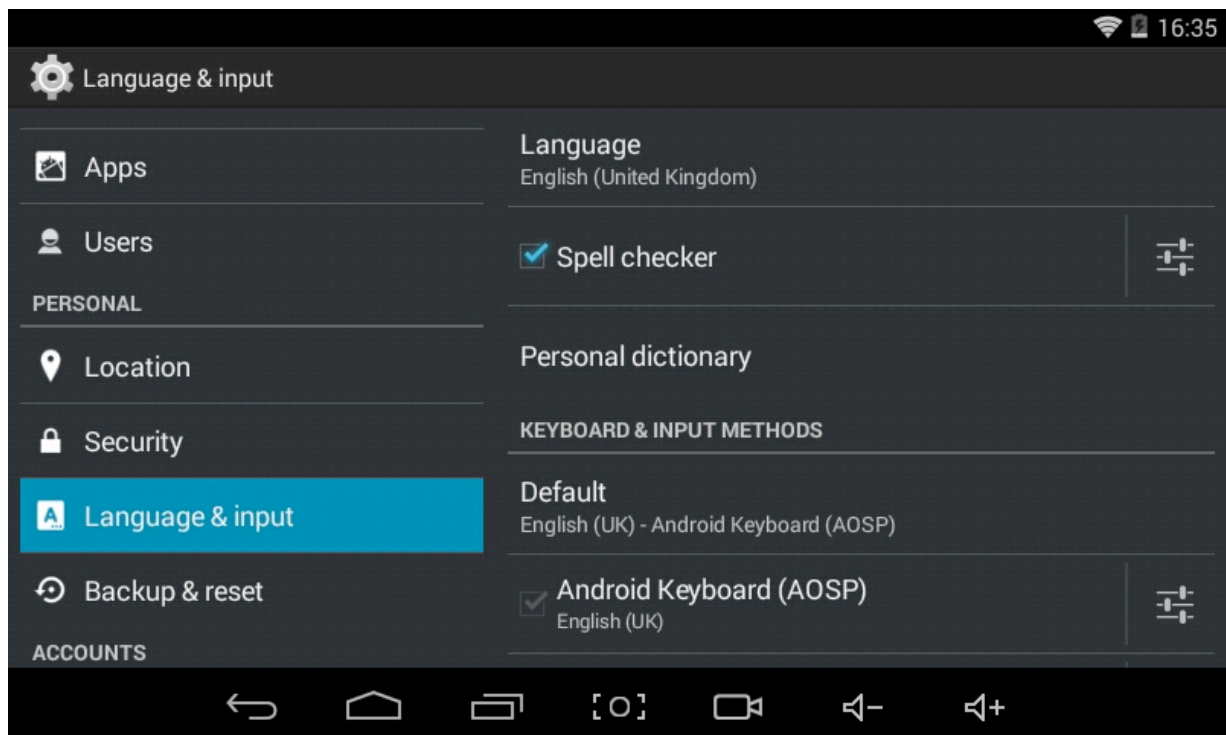

Available options:

- Language: here you can choose system language version
- Correction of spelling
- Personal dictionary
- Google speech-to-text
- Android keyboard


13. Personal - Backup and Reset

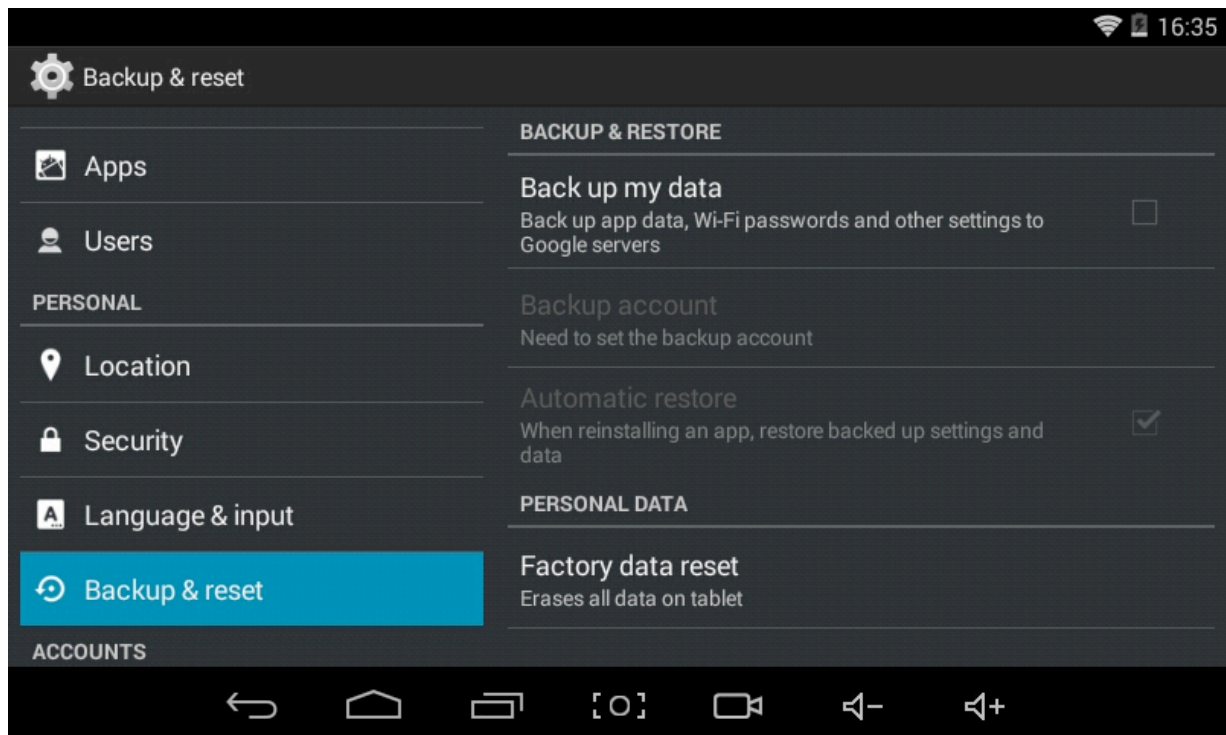

Available options:

- Backup my data: backup on Google server's current settings and application data
- Automatic restore: when reinstalling an application backed up settings and data will be restored
- Recovery Mode


14. System - Date and Time

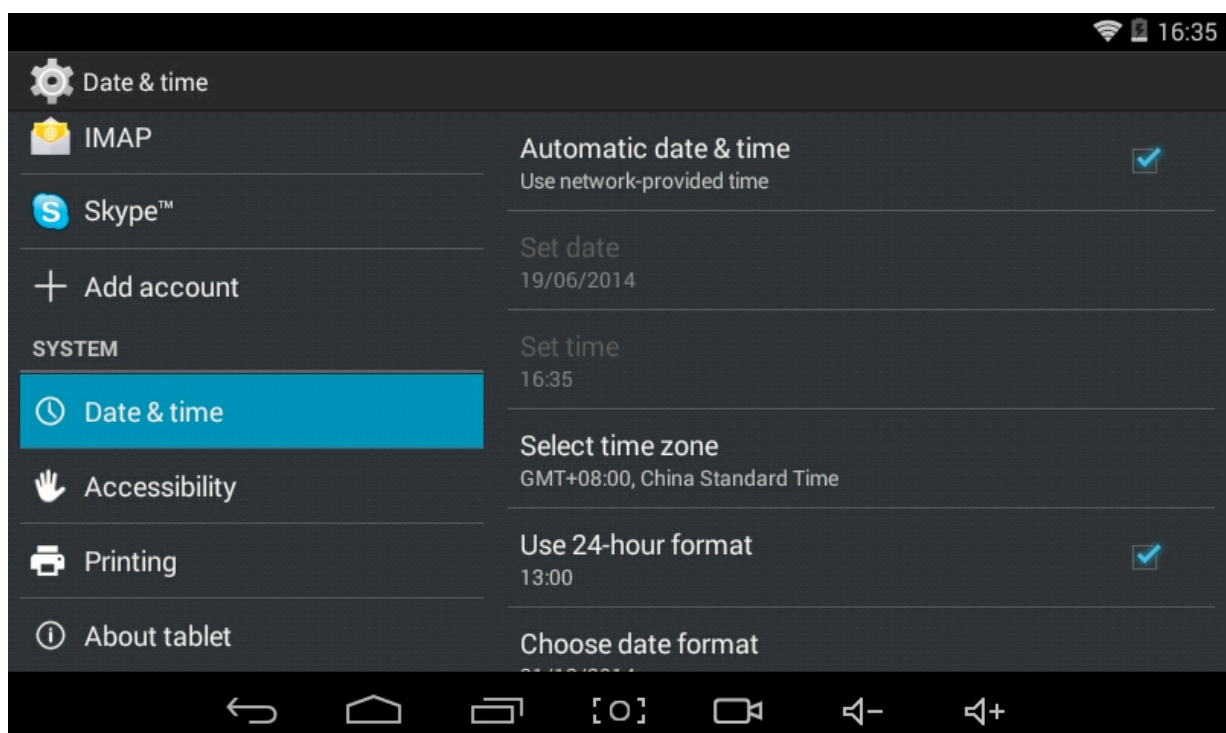

Available options:

- Automatic date and time
- Auto time zone
- Set date
- Set time
- Select time zone
- Use 24-hour format
- Select date format

15. System - Accessibility

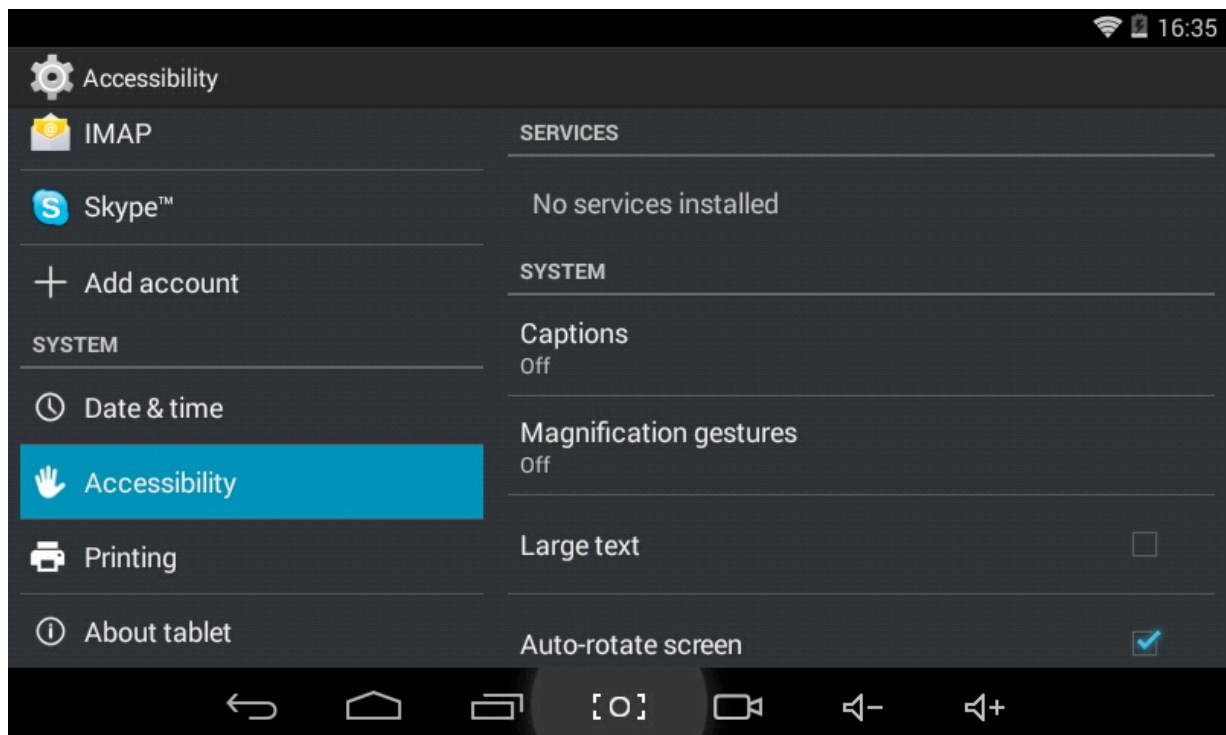


Available options:

- Large text
- Auto-rotate of the screen
- Speak out loud passwords
- Time of tap and hold
- Install web scripts

16. System - About Tablet

Provides information about this device model, version of the Android system and firmware version.

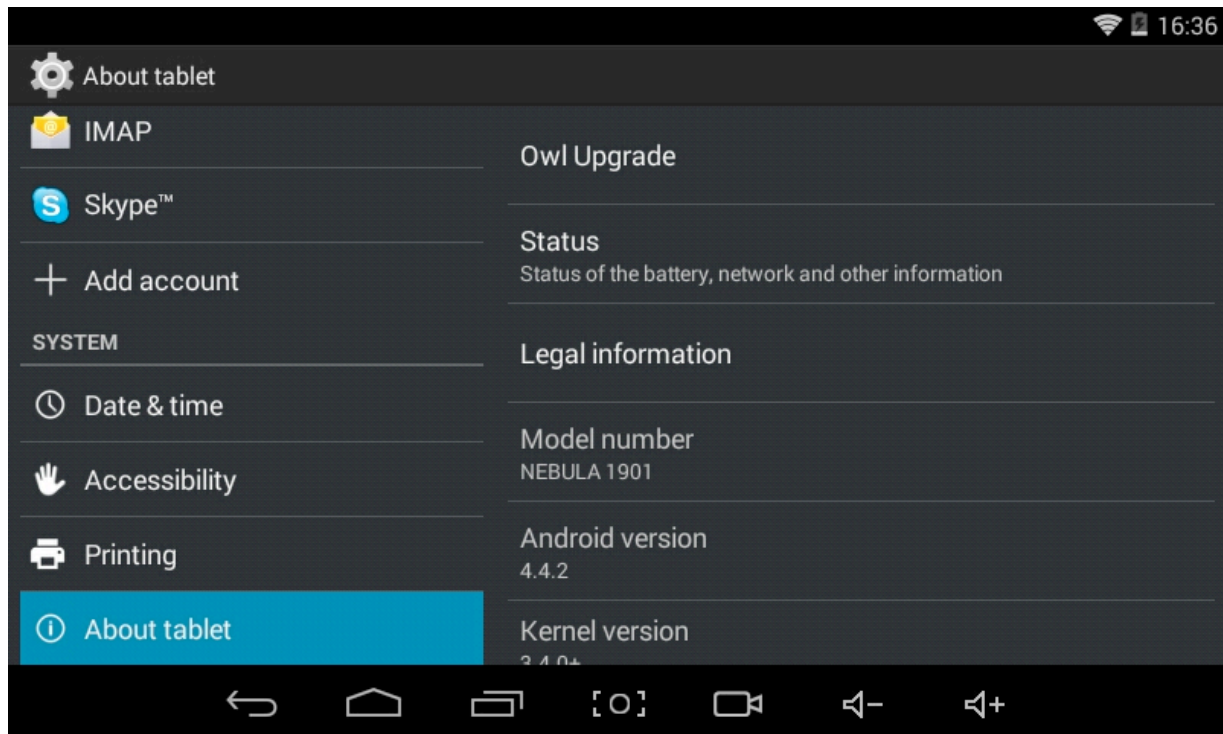

VI. GOOGLE PLAY

1. Setting up the Google account

Through Google Play store (former Android Market) you can download applications provided there. Using Google Play is free. Some of the applications available on Google Play are free of charge, while other are paid.

To start using Google Play you must have a Google account email address. To set up the Google account with the device system you have to:

- (1) Turn on the device and select **GooglePlay**
- (2) If the email account has not been added, there will be displayed message **“To use GooglePlay, you must have a Google account”**
- (3) Select “Create a Google account” and follow the instruction displayed on the screen.

After setting up the Google account you can download application from the Google Play.

4. Setting up the Google account

From Google Play you can download free and applications.

Free applications:

- Large text
- Auto-rotate of the screen
- Speak out loud passwords
- Time of tap and hold

- Install web scripts Auto time zone

Paid applications:

- Choose an application which you want to install
- When you decided to buy and install application choose button with the price (If it would be your first GooglePlay shopping, you will be asked to log on Google Wallet)
- Select payment method or add a new card.
- Tap **Accept and download** to complete the purchase.

Note:

Download of the application begins after payment confirmation. Purchased application will be associated with Google account, allowing to install them unlimited number of times on the device.

VII. FAQ

❖ How the update process is made?

Updates are downloaded automatically after Connecting the device to the Internet.

❖ Is it possible to replace battery in tablet?

Battery in device is installed permanently. Any attempt of individual battery replacement is equivalent to loss of device guaranty. All matters regarding replacement of the tablet batteries please consult with ET Ltd service.

❖ Where can I find apps for the tablet?

There are about 200,000 apps available for the Android system; you can download them through Google Play store (former Android Market).

❖ Is it possible to edit photos using tablet?

On Google Play there are apps allowing to edit photos on Android devices.

❖ Is it possible to run Java games on tablet?

Normally you cannot, because Android system doesn't support Java apps. In Google Play you can find Java emulators.

❖ What the USB Host means?

In USB Host mode you can connect to tablet mouse, keyboard, flash drive, portable disk or gamepad.

❖ If I have USB/micro USB port in tablet is it possible to connect to it an external hard drive?

Yes, if the tablet has USB Host.

❖ Does Android have the ability to read doc, docx, ppt, zip, rar, PDF files?

While using proper apps available on Google Play, you can read all of popular file formats.

❖ Is it possible in Android system to copy files, create folders etc.?

All of those operations can be make while using file managers.

❖ Are there any programs designated for Android system allowing to torrents download?

Yes, there are and they are available on Google Play.

❖ Does apps developed for smartphone would be properly displayed on tablet?

There is possibility that programs developed for smartphones would run in lower resolution.

❖ **Does apps developed for smartphone would be properly displayed on tablet?**

There is possibility that programs developed for smartphones would run in lower resolution.

❖ **In case of connecting mouse to tablet USB port should the cursor on screen appears?**

Yes, after connecting mouse to the tablet USB port the pointer on screen should appear.

❖ **Does tablets with Android system allow to watch movies on TV screen with subtitles (for example avi, rmvb with txt or subtitles)?**

Yes, you can connect tablet to TV with DLNA or HDMI cable and watch movies with subtitles via proper player (which you can down from Google Play)

❖ **Does tablets with Android system allow to run flash add-ons on websites?**

Yes, thanks to Adobe Flash Player for Android system it is possible to brows websites made in Flash technology.

❖ **Is it possible to run flash games on Android system?**

Yes, but it is necessary to install Adobe Flash Player.

❖ **How to open PDF or EPUB files?**

To open PDF or EPUB files it's necessary to download proper program from Google Play.

❖ **Is it possible to change Android system in to Windows 7?**

There is no such possibility. Only tablets based on x86 architecture can be run with windows7. Tablets with Android are based on ARM architecture.

❖ **Are there available Polish characters on virtual keyboard?**

Operation of virtual keyboard is the same as in case of PC keyboard, you can enter Polish characters by using Alt key and with Shift uppercase letters.

VIII. GOOGLE PLAY FAQ

❖ Position of my device is inactive in Google Play

Inactive position concerning the device means that device is incompatible with the apps which you want to install. The key reason is that app is not suitable for display size of Android version.

❖ Downloading of app is blocked and message is displayed “Initiating download”

- (1) In case of downloading paid apps, check your credit card if it is correctly stated or check your Google Wallet account.
- (2) Cancel and start again your download
- (3) Check whether tablet is connected to the network
- (4) Check whether firewall is not blocking access to the Google Play.
- (5) Clear the cache and Google Play data: **Main Menu - Settings - Applications - All - Google Play - Clear data and Clear cache**

❖ Displaying message “Download failed”

- (1) In case of downloading paid apps, check your credit card if it is correctly stated or check your Google Wallet account.
- (2) Clear the cache and Google Play data: **Main Menu - Settings - Applications - All - Google Play - Clear data and Clear cache**
- (3) Restart your tablet then try again your download
- (4) Check whether tablet is connected to the network
- (5) Check whether firewall is not blocking access to the Google Play
- (6) Check whether there is enough space on internal memory
- (7) Clear the SD card: **Main Menu - Settings -Storage - Clear SD Card**

❖ Download from the Google Play can't be started

- (1) Check whether tablet is connected to the network
- (2) Check whether firewall is not blocking access to the Google Play
- (3) Check whether you are logged to the Google Play
- (4) Check whether there is enough space on internal memory

Warranty Certificate

Name

Address

User ID

Email

Tablet Model

Date of Purchase