Android Car Navigation User Manual

The use of certain features of these devices depends on your network service provider's network settings and performance. In addition, due to the different network service providers, some certain functions of this device may not be able to apply or restrict to apply. And please contact your network service provider for consulting the network functions and availability of this device.



This mark indicates that the product uses a label which is classified CLASS1 laser, indicating that the device uses the weakest level of laser beam, and there is no risk of radiation outside the unit.

Note: Do not expose the batteries to extreme heat. Put the plug in place easy access to it always.

Contents

Contents	3
1. Quick Review	5
1.1 Turning On and Turning Off	
1.2 Panel Function Button	
1.3 Tips for Using Touch Screen	6
1.3.1 Clicking Function	
1.3.2 Pressing Function	6
1.3.3 Dragging Function	7
1.3.4 Zooming Function	7
1.4 Main Screen	7
1.5 Status bar indicator	8
1.6 Time and Date Setting	8
1.7 Text Inputting.	9
2. Function Operations	10
2.1 Basic Settings	10
2.1.1 User Defined Home Screen	10
2.1.2 Setting Wallpaper	11
2.1.3 Shortcut	11
2.1.4 Widget	11
2.2 General	
2.2.1 Steering Wheel	
2.2.2 Screen Calibration	
2.2.3 Navigation application	
2.2.4 Factory settings	
2.3 Navigation	
2.3.1 Navigation Software Installation	
2.4 Radio	
2.4.1 Radio	
2.4.2 RDS	
2.5 Bluetooth Wireless Connection	
2.5.1 Startup bluetooth application	
2.5.2 Bluetooth pairing	
2.5.3 Bluetooth Phone Book	
2.5.4 Phone	22
3	

2.5.5 Call Record23
2.5.6 Bluetooth Music24
2.5.7 The whole Bluetooth hardware settingss24
2.6 3G Application25
2.6.1 Allow data roaming25
2.6.2 Set the access point information25
2.7 WLAN
2.8 Multimedia33
2.8.1 Equalizer
2.8.2 DVD Play
2.8.3 CD Play
2.8.4 IPod Play
2.8.5 Audio Play
2.8.6 Video Playing
2.8.7Picture Browse40
2.8.8 Digital TV43
2.8.9 Analog TV43
2.9 AUX IN Function43
2.10 Rear View43
2.11 E-mail44
2.11.1 Email Setting44
2.11.2 Sending E-mail46
2.11.3 E-mail input47
2.12 Message Functions48
2.12.1 Compose New Mails48
2.12.2 E-mails Reply49
2.13 Applications50
2.13.1 Weather50
2.13.2 Calculator51
2.13.3 Electronic reader51
3. Firmware Upgrading52
3.1 Preparing for upgrade52
3.2 Update MCU52
3.3 Update system53
3.4 Update DVD53
4. Trouble handle53
5. Specification



1. Quick Review

Warning: Before using this device, please read the manual safety and law information.

1.1 Turning On and Turning Off

Turning On	When you plug in the car keys, open the car's ACC power, the device will be automatically turned on, displaying the boot animation LOGO.
Turning Off	When you take off the key, turn off the car's ACC power, the device will automatically be shut down.

1.2 Panel Function Button

lcon	Button	Function		
PWR/VO L	Power/ Volume	 When power off, short press this button, the system is switched on In the boot state, press this button short, the system becomes mute; long press this button, the system is shutdown Turn this button clockwise, the volume is increased Turn this button counterclockwise, the volume is decreased 		
HOME	Main Interface	 Click to enter into main interface Long press for 3secs to show the running function 		
MENU	Main Menu	 In each function, for extended manipulation of information, press the MENU key to pop up In main interface, press the MENU key for the system to quickly set functions 		
BACK	Back	 ①Click to get back to the last interface ②Long press for 3secs to quit the running function 		
NAVI	Navigation	Click to enter into GPS navigation interface		
DVD	DVD Play	Click to enter into disk play interface		



PHONE	PHONE	 Click to enter into Bluetooth telephone interface Bluetooth dailing keyboard will pop up by long pressing this button in other function interfaces. Phone will be hung up by short press 		
RADIO	RADIO	Click to enter into radio interface for receiving FM1/FM2/ AM radio		
TUNE	Compound	 In the audio and video playback interface, up / down one player In the radio interface up / move down frequency 		
	In/Out Disc Button	Disk in and out		
SD	SD Media Card slot	Insert the appropriate memory card, multimedia file system can read the card		
USB	USB Socket	 Connect other devices by USB socket. Connecting an external WIFI/3G dongle 		
RESET	Reset Button	Click reset button to reset system and re-start.		
MIC	Microphoe	Receive voice from bluetooth telephone call.		

Remark: All long press means press time at least lasting 3 seconds; Please noted button and socket are different according to different car types.

1.3 Tips for Using Touch Screen

When using the touch screen, you can use several ways to perform corresponding operations on the device.

1.3.1 Clicking Function

You could select an application icon or option on the screen to use clicking function. For example, click Bluetooth to enter into bluetooth application.

1.3.2 Pressing Function

You could press the current user interface, icon, and inputting column by pressing function. For example,



press on the blank area of the main interface, then comes a pop-up menu, you could perform some function on the menu.

1.3.3 Dragging Function

Drag the touch screen or press the scroll bar for up and down operation. For example, browse the contact list of the bluetooth phones by dragging function.

1.3.4 Zooming Function

When browsing the web, click the screen twice, then you could zoom in or out the page content. Or you could press the screen with two fingers by control the sliding distance between the fingers to zoom in or out the page content.

1.4 Main Screen

You can use the touch screen operation to use the various functions of the device. This equipment has a total of five main screens, and left or right sliding can be switched with each other. In any interface, press the HOME physical buttons on the panel to return to the main screen interface, display the application icon in the main screen interface, and click any application icon to open the program.



Note: You can add or remove programs in the main screen to customize your unit.

Click the application icon and you can view all of the

programs preinstalled.

1.5 Status bar indicator

Icons on the left top of the screen are notifications for messages and events; Icons on the right top of the screen are device status indicator.

If there is new message, it will be displayed on the status bar, slide your finger gently from the status bar, all prompts would be displayed. Then you could click the message and view the content.

 Indicators on the left
 Description
 Indicators on the right
 Description

 Network signal
 Network signal
 Network signal

	strength		
Ę	New Message	÷4-	USB connection instructions
\$	WIFI signal indicator	4:25 PM	Current Time indication

Tip: You can tap and hold the status indication bar to view the current date.

Note: The device software is under upgrading, the status indicator may be different with your device; please refer to the actual device software.

1.6 Time and Date Setting

This device has the function to automatically calibrate the current time when GPS is active. You could also manually set the date, time zone and format. Applications> Settings

> Date and Time

> Setting Date or Setting Time

Tip: You can set the time zone and time format according to request.

Terr & time settings						1.460	100
	🛇 Date						
		+	+	+			
		Jan –	02	1970 -			
	5	iet .		Can	cel		
	mat						
🕆 🕹 Tara Krane serregi						÷ 2 i	d 1248
	O 12:48 A	٩M					
		+ 12	+				
		12	48	AM			
	5	iat .		Can	cel		
	rmat						

1.7 Text Inputting

When editing text, you could use existing inputting method and Android keyboard to edit English, numbers, and symbols etc., such as editing message, searching key words etc.

Tip: The display format would be different according to different status and keyboard of the entering. Please refer to the actual status.

1.7.1 Switch on the Inputting Method

Open the text editing interface

Click in the editing area, then the editing menu would appear.

Click the input method, you can choose the Android keyboard or install third-party input method.

24								E al 1251
9.1								
				-			-	_
Edit tex	5							
Input m	ethod							
q	Ŵ	.0	6	t	y	u	1.	o p
a	5	d	T T	g	h	i in	k	1
		x	C)	¥.	b	n,	(11)	
1,71438								
2+		_	_	_				i 🛃 1251
S. F.		_	_	_	_		_	
Select i	nput me	thod						
Androi	d keybo	ard						۲
								_
q	w	0	T	t	ý	ц	1	o p
a	5	d	f	g	'n	Ĩ	.	
	ż	×.	e	. V.	Б	n	m	
+933								

1.7.2 Android Keyboard Input

Switch the input method into Android keyboard (see switch input method)

Remark:

- ① You can click the number sign key rus to switch to numbers and symbols input mode.
- ② Click to switch letter case.

2. Function Operations

2.1 Basic Settings

2.1.1 User Defined Home Screen

There are 5 main screens of this device, sliding left or right to switch. In any interface, you just need to click the HOME to get back to main screen. **Note:** You could add shortcut, widget and file in the

blank area of the main screen on the condition that there is enough room for placing.



2.1.2 Setting Wallpaper

Click the blank area of main screen> Wallpaper > Wallpaper or Pictures Bank

Choose your preferred wallpaper and click to set as wallpaper.

2.1.3 Shortcut

Click the blank area of main screen> shortcut > Choose Shortcut

Click the shortcut needed.



2.1.4 Widget

Click the blank area of main screen> Widget > Choose widget Click the widget needed.

9 #		♥ id 437 m
Choo	se widget	
10	Calendar	
f	Facebook	
2	Fancy Widgets 1x1	
	Fancy Widgets 2x1	
2	Fancy Widgets 4x1	
1	Fancy Widgets 4x2	

2.2 General

2.2.1 Steering Wheel

Users could set the steering wheel according to hint. Note: Steering wheel interface is special for cars with buttons, but some cars' steering button are not able for learn but by "canbus", such as Ford MONDEO

Application>Setting

- > General Settings
- > Steering wheel Settings

Touchscreen calib	ration		
Steering wheel	(ked)		
Navi application			
MCU update Warning: No ignition and No			
Factory settings			
Extra settings			
VOL+	VOL-	MUTE	MODE
HOME	MENU	ВАСК	NEXT
PREV	ANSWER	BRIGHTNESS	NAVI
RADIO	EJECT	AUDIOOFF	DISC
START	RESERVE	RESERVE	CLEAR

Steering Wheel Interface

a. First to click "Start"

b. Click the buttons as you want.

c. Press the corresponding button on the wheel. If the study displays successful, there will be a change on the corresponding color on the main screen.

d. Repeat step 1 and 2 till you complete all the buttons' setting on the steering wheel.

e. Click "END" to ensure that the steering wheel setting is completed.

If you want the steering wheel button to re-learn, press the [CLEAR] and repeat a, b, c, three steps.

2.2.2 Screen Calibration

Applications> Settings

- > General Settings
- > Touch screen calibration

Enter the calibration to calibrate the screen interface. Please click as close as possible to the cross until a successful calibration, then exit the calibration interface.

4 *	🕈 🗐 452 <i>m</i>
General	
Touchscreen calibration	
Steering wheel Set or update steering wheel keys	
Navi application Select navi application from installed applications	
MCU update Warring No ignition and No power off	
Factory settings	
Extra settings	
Calibration +	

2.2.3 Navigation application

Select appropriate map application, then it can be associated with the navigation button on the physical and navigation icon on the main screen. Applications> Settings

- > General Settings
- > Navigation options
- > For example: IGO

Genera		🗢 🕍 452 P
Tou	chscreen calibration	
	ering wheel update steering wheel keys	
	i application navi application from installed applications.	
MCU	J update ng: No Ignition and No power off	
Fact	ory settings	
Extr	a settings	
9 #	and a state	🗢 🕍 454 n
Navi ap	pplication	
	BLOWSET	
igo	IGO	D
Θ	SBD	
(<u>X</u>)	Radio	
	Search	
2	Gallery	

2.2.4 Factory settings

When the system is unable to work or problems occur after user used the system, it can be restored to the factory settings. Once it's restored to factory settings, all the third-party software would be deleted, and the current system settings would be lost. For navigation software, just need to install corresponding APK. Please operate carefully.

Applications> Settings

- > General Settings
- > Factory settings

2.3 Navigation

2.3.1 Navigation Software Installation

1. Copy the application program with suffix name "APK" to SD card or U disk. There are two installation methods:

① Click into the document management interface to find SD card or U disk directory and select "APK" application, and click install directly.



File Management Interface

Applications> File Management Interface > Expansion card or U disk

② Extra Interface->Application Program->Install Application Program

Select the application program with suffix named "APK" and install.

	00:02
ridcard _	
SygicNavigator_11.2.6.apk	
Res	
Maps	
Android	

Application Program Interface Application > Settings

> Applications

> Application Program Installation

Note: Please copy the navigation map software to the system storage memory first, and then install the navigation APK. Steps are as follows:

- Insert navigation data packets to SD card or U disc
- 2) Start the ES file browser (or other document management software)
- Enter the" /sdcard/extsd" (SD) or" /sdcard/udisk" (U) directory, find the navigation packet directory (for example: NaviOne (Kelid navigation)), and select Copy command according to the catalog in the pop-up menu.



4) Go back to the "/sdcard/" directory, choose the paste command



5) Copy completed (30 mins approximately/3.5G). After successful installation, select the navigation program you need, associate panel physical keys NAVI to it and the interface of the navigation application icon in main menu. (See 2.2.4navigation options).

2.4 Radio

2.4.1 RADIO

Press the RADIO button on panel or click the icon on the main menu to enter the radio interface, the specific functions and operations are as follows:



Radio Interface

The functions of Icons in the radio interface are described below:

lcon	Button Name	Function Description
BAND	Band Switching	Click BAND to switch between mode FM1/FM2 /AM
M	Search Channel Backwards	Click to search channel backwards then stop when find clear channel
×	Search Channel Forwards	Click to search channel forwards then stop when find strong and clear channel
SCAN	Scan all Channels	Scan automatically and save channels(Coupled with a scanning radio signals broadcast for 10 seconds, no signal of the radio scan play 3 seconds)
LOC DX	Locate and DX	Change between locate and DX models
EQ	Audio settings	Click enter the EQ setup
1 87.50 MHz	list of radio stations	List of radio stations, according to the storage for the playing frequency point
<	Forward tuning	Forward tuning radio
>	Back tuning	Backward tuning radio
*	Main Menu	Click to back to main menu
5	Back	Click to go back to last interface
AS	Automaticall y search	Search and save band automatically

2.4.2 RDS Radio interface with RDS Icon details as below:

	ialis as De	siow.
	Traffic	Click TA symbol to light up, and it can source automotive the station which can broadcast traffic
TA	Annou	information. The system will source every minute,
	nceme	it will stop to display traffic matter when we get the
	nt	news, and it will directly go back to the situation
		after traffic information displays
	Alterna	When click AF to light it up, RDS can swift to the
	tive	station which has stronger signal when the
AF		frequency is weak, but the content of RDS
	Freque	station will not change, yet just move to the other
	ncies	frequency. It only sources RDS station.
		When click PTY to light it up, RDS radio displays
ΡΤΥ	Progra	the station type info once it receives RDS station,
	m Type	and the corresponding PTY information is
	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	automatically displayed
		Click REG symbol, it will only search the RDS
		stations with the same national area code (PI 8-bit
REG	Region	representation of the high country area code) of
REG	al Link	the current RDS station. If REG is not highlighted,
		you can search RDS station while ignoring the
		area code (excluded the high 8-bit PI code)

2.5 Bluetooth Wireless Connection

You could create a wireless connection between a mobile phone and this device for phonebook and music.

Note: ① There may be prohibition or restriction for Bluetooth devices, please follow local laws

②In order to ensure bluetooth security by the greatest degree, you should be in safe and non-public place when connecting a bluetooth device.

2.5.1 Startup bluetooth application

Under the default status, the bluetooth would be turned on when the power is connected. Panel "PHONE" key to quickly enter the Bluetooth interface;



2.5.2 Bluetooth pairing

The whole information of the Bluetooth interface, the mobile search auto-complete matching (the default passkey: 0000)

Matching refers to the mutual recognition process of two Bluetooth devices for the first communication. After the first connection, the subsequent communication connection will automatically pair and not have to pair every time (Depending on mobile phones).

Press in Bluetooth pairing interface, it will get into the status of the Bluetooth search mode and this machine is searching for

Bluetooth devices around, press again will automatically terminate the search state.

≣	c	6112C(64*	*)	
ρ	× ۲	liaomin		
	N	1B525		
* Þ				
Ŵ				
-	6:		¢	

Choose the Bluetooth device name on the search results to match connection. It will automatically after the connection is successful jump to the matching list, and there will be a Bluetooth icon besides the successful connected Bluetooth devices

2	ſ	٦
4	ι	,

≣	C	6112C(64*	*)		
ρ	x	iaomin			
	M	IB525			*
* Þ					
Ŵ					
	(:	-	63	8	45

Note: The following operations are performed in the Bluetooth pairing success status.

2.5.3 Bluetooth Phone Book

In the Bluetooth interface, click " to enter the

Bluetooth Address book interface, and follow the download the phone book.

	191						
	8						
	*	Downlo	ad the pho		Cancel		
fi +		(:	3	Ø	8+	¢.,	*) 5:20
			inda		+86138	376543210	
		L	isa		+86139	12345678	
	¥	N	ancy		+86139	01234567	
	-	v	lado		+86139	87654321	
	ŵ	E	rno 315 R	ecords	+86139	98765432	
ñ		6	1	¢			•

A list of dial-up operation when long names and numbers are used to scroll the display

Bluetooth Phone Book Interface

-	
\mathbf{n}	1
L	н

CIOFCOD

	Download the phone book Again after the download is complete, clicking the phone is the search function
301	Download Mobile phone SIM card phone book Again after the download is complete, clicking the phone is the search function
*	Download all mobile phone book
Ē	Delete all phone book imported.

2.5.4 Phone

2.5.4.1 To achieve the dialing function via Bluetooth

In the Bluetooth interface, click """ "to enter into the Bluetooth Dial interface.



Bluetooth phone Dial Records Interface

① Click numbers on the interface, if the input is wrong,

click 🗲 to delete

② Click after entering phone number; Click to end up the call.

③ When in a call, press **u** to switch to the phone call, press **w** to mute for MIC.

④ Function keys on the panel are unavailable when in the call; the function keys return to normal after hang up.

2.5.4.2 To achieve the 'being called' function via Bluetooth

When the mobile phone is connected with Bluetooth device and there is an incoming call, the interface is divided into two situations:

1) In the Bluetooth Application Interface



② In other function interfaces



Note: Click for the call is to pick up the phone, and click for means to hang up, then the small window will automatically disappear.

2.5.5 Call Record

In the Bluetooth interface, click " ^(*)" to enter into bluetooth call history interface. Click for doing dial operation,





Call recording interface

Remark: When the names and numbers are long, they would be displayed rollingly.

\$	Missed calls
15	Received calls
5	Dialed calls
Ē	Delete all call information

2.5.6 Bluetooth Music

In the Bluetooth interface, click " ^c" into Bluetooth Music Interface.

When connected with bluetooth mobile phone, it can operate play/pause/down music function.



Bluetooth Music Interface

Note: Some kinds of mobile phones need to start playing music player for bluetooth music when using bluetooth music function.

2.5.7 The whole Bluetooth hardware settings

Bluetooth interface, enter the Bluetooth settings screen.



²⁴

👘 ตกวล อเว

Device name	The whole phone name
PIN password	Pair settings
1	Click to back to main menu.
¢	Click to go back to last interface.
 (1)	Back to matching the main interface

2.6 3G Application

Applications> Settings

- > Wireless and Network
- > Mobile network
- > Access Points

2.6.1 Allow data roaming

Applications> Settings

- > Wireless and Network
- > Mobile network
- 1) Click data roaming, select OK.

2 If the recognition is successful, the access would automatically identify the type of 3G device to populate the appropriate access, as shown below:

🔆 🖶 Aobile network settings	af 125
Data enabled truble data access over Mobile network	×
Data roaming Connect to data services when roaming	
Access Point Names	
Use only 2G networks Seven hattery	
Network operators Select a network operator	

Note: please confirm data roaming open; otherwise you cannot use the 3G function

2.6.2 Set the access point information

Before using 3G function, make sure 3G dongle connected to the USB port with a 3G card inserted in.



양 USB connecte	d jet					
i i		=	D		<u>+</u>	
AUX	Browser	Calculator	Calendar	CD/040	Downloads	
DTV		THI	2	0	:)	
UTV	teal	EQ.	Gallery	Pod	Messaging	ñ
	*	0 <u>8</u> 4	Q	ê		
Mesic	those	Radie	Search	Settings		

b. Select the "Settings" to enter the main interface.

Set	ngs .	
10.0	Wireless & networks	
٩	Sound	
•	Display	
1	Applications	
ŝ	Storage	
Z	Language & keyboard	


c. Select "Wireless networks", access to the network selection screen.

Wi-Fi Turcion Wi-Fi Wi-Fi settings	
Wi-Ei settings	
Set up & manage wireless access points	
VPN settings Set up & manage Virtual Private Networks (VPNs)	
Mobile networks Set options for rearing, networks, APNS	

d. Select Mobile networks, and enter the 'mobile network' settings of the main interface.



e. First make sure the data roaming 'Data roaming' is selected, if you have no choice, point the" Data roaming "pop-up prompt menu, select" Ok ",

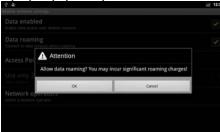

f. Results shown in Figure 7 aftering successful selection:

1

g. Set the 'Access Point Names', enter the name of the network access point settings to the main interface.

^	7
2	1



h. Press the 'Menu' button on the machine panel, pop-up menu option.



i. Select 'New APN' new 'APN' into the 'APN' to set the main interface.

Ý #	id] 12:40
Edit access point	
Name «Not set»	
APN «Not set»	
Proxy -Not sets	
Port -Natiset*	
Username <not sets<="" td=""><td></td></not>	
Password -Natisetx	
Server	

j. Select the "Name" to set APN name. "Name" can be randomly set, and when input is complete, select "OK" to finish.

•								10 14	-
fallecers point .									
	Nar	me							
		0		T		Cancel			
q w		e r		t	у	u	i o	р	
a	5	d	f	g	h		k	1	
÷	z	×	c	v	b	п	m	-	
1123	0	e						Dane	
eccess paint								id 12	41
ime								C	0
l Set2									
xy set-									
t Set2									
ername									
ssword									
rver									


K. Select "APN", enter "the Apn access name in the Chinese mainland of China Unicom's 3G the APN settings for:" 3gnet "in Hong Kong, Macao and Taiwan and foreign, should be consulted local 3G network supplier, enter the correspondingAPN value.





Y 🗣	(E) 14741
Edit access point	
Name #	
APN 3gret	
Proxy -Not set*	
Port <host sets<="" td=""><td></td></host>	
Username <not set="</td"><td></td></not>	
Password <not set=""></not>	

I.Press the "Menu" button on the machine panel, pop-up menu option.

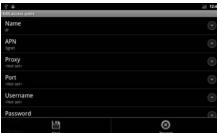


m. Select "Save" to save the settings content, and return to the main interface of Apn settings



n. When the following interface pops up, make sure that Step 1 is complete, press Home to return to the main interface, then repeat 1-15 steps:

Edit Access point		4
	Attention MCC field must be 3 digits.	
	ox	

o. In the Apn the main interface, select New APN network behind the circle, so that it is selected can.

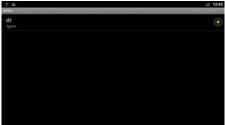

p. Back to the main interface, the3G network has opened, the search to the 3G signal, can use3G network.

2.7 WLAN

You can use the WLAN high-speed Internet access and download.

Applications> Settings

> Wireless & networks setting

USB ports using guide:

- 1. The front USB and rear USB can not be plugged by U disk at the same time, orelse the U-disk won't be read.
- 2. Normally the front USB port is defined to connect U disk while the rear USB port to WLAN and 3G dongle
- 1. Open WI-FI device

2. WI-FI settings search, WI-FI is open, the device will automatically scan the network, listing all of the network within the search range



Ŷ. #	💎 🔐 5:53 m
Wireless & network settings	
Wi-Fi Connected to tonghai	
Wi-Fi settings Set up & manage wireless access points	
VPN settings Set up & manage Virtual Private Networks (VPNs)	
Mobile networks Set options for narming, networks, APHs	
Ý #	🗣 🔐 5:55 m
Wi-Fisettings	Selection and
WI-FI Connected to tonghat	
Network notification Notify me when an open network is available	
W5-Fi networks	
tonghai Connected	
ChinaNet-QhAY Secured with WPA/WPA2 PSK	19
TP-LINK_4BBCD6 Secured with WPA/WPA2 PSK	1
ChinaNet-fr3v	

3. Click on the link to the connectivity of the network

4. If required, enter wireless password, click on the link, as shown below:



The first input password to connect successfully, then don't do this, reboot the system will automatically connected to a matching wireless network.

4.4	🎔 🕍 558 m
wi-Fi settings	
WI-FI Connected to tonghar	
Network notification Natify me when an open network is available	
Wi-Fi networks	
tonghai Connected	(in
ChinaNet-QhAY Secured with WPA/WPA2 P5K	(P
СМСС	([]•
ChinaNet-fr3v Secured with WPA-WPA2 PSK	

Successful connection interface

2.8 Multimedia

2.8.1 Equalizer

Applications > Equalizer

Click equalizer application icon into the equalizer interface. Or click **EQ** to enter into EQ Setup operation in all audio or video playing interface. Equalizer settings interface is divided into two functions: namely, equalizer and sound field settings function.

(1) In the equalizer settings interface, it provides 8 kinds of audio playback mode to choose:



Equalizer settings interface

Note: In the Normal mode, users can customize effects model through the effect adjuster.

② In a field setting interface, the user can freely adjust the bass and loudness of the contrast, to the front left,

front right, rear left, and rear right after the four angularly audio settings, as shown below:



Balance Setup Interface

Note: the subwoofer adjustment is only effective when it is linked to external 5.1 amp.

2.8.2 DVD Play

Insert the DVD disk the system will automatically enter the DVD interface and read the disk information automatically when a disk is detected and then start to play normally.



DVD Play Interface Function details as below:

lcon	Button Name	Function Description
	Play/Pause	When playing, click it to pause. When pause, click it to continue playing.
	Next Track	Click to play the next track or next chapter.
	Last Track	Click to play the last track or next chapter.
*	Fast forward	Click to fast forward increasingly as by 2X / 4X / 8X / 20X DVS: Click to fast forward increasingly as by 2X / 4X / 8X / 16X / 32X
*	Fast Backward	Click to fast rewind increasingly as by 2X / 4X / 8X / 20X DVS: Click to fast rewind increasingly as by 2X / 4X / 8X / 16X / 32X
>	Extended function	Used to eject the expansion function
TITLE	Title	Click to show title (need disk support)
Ċ	Cycle Play Mode	Click to set up playback mode, DVD: Chapter cycle / heading cycle / full catalog circulation / cycle cancellation; VCD : single cycle / all cycle / cycle cancellation.
X	Random play mode	Options for ON and OFF, ON, switch on the next song, random play
40	Channel Switch	Click to switch in different languages and audio tracks (need disk support).
SUB.T	Subtitle	Click to switch subtitle display(need disk support)
EQ	EQ Setup	Click to enter into EQ setup interface.
Â	Main Interface	Click to back to main interface.
U U	Back	Click to back to the last interface.

2.8.3 CD Play

Insert a CD disc, the system will automatically enter the CD interface. When a disc is detected, it will automatically read the disc information and start normal play.




CD Play Interface

lcon	Button Name	Function Description
	Play/Pause	Click to play or pause.
	Next Track	At one time to play the next song, press down roll list for tracks
Ð	Cycle Play Mode	Click to set up playback mode
X	Random play mode	Click to set the random playback mode
\bigstar	Last Track	Click to play the last track or next chapter.
EQ	EQ Setup	Click to enter into EQ setup interface.
Â	Main Menu	Click to go back to main menu.
U	Back	Click to go back to the last interface.

Function details as below:

2.8.4 IPod Play

Application> iPod Click the iPod application icon to enter into the iPod play interface, just as shown below.

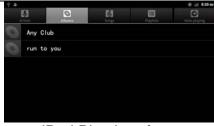

iPod Play Interface Function details as below:

lcon	Button Name	Function Description
- 11	Play/Pau se	Click to play or pause.
M	Next Track	Click to play the next track.
M	Last Track	Click one time to replay the current track; Click twice to play the last track.
•	Fast Forward	Press to fast forward.
	Fast Rewind	Press to fast rewind.
11	Cycle Play Mode	Click to set up play modes: sequential play, single cycle, the whole catalog circulation.
X	Random play mode	Click to start random play mode or cancel random play
Ŷ	Artist	Click to play the iPod's song in the form of an artist.
0	Album	Click to display the iPod's song in the form of album.
÷.	Song	Click to display all the songs in the iPod.
	Play List	Click to display the listed songs in the iPod.

2.8.5 Audio Play

Audio player supports the following formats: mp3/aac/flac/wav/amr/m4a/ogg Application>Music Click music application icon to enter into the music player interface, as shown below:



Music Play Interface Function details as below:



2.8.6	Video Playing	
lcon	Button Name	Function Description
	Play / Pause	Click to play or pause
	Next Track	Play the next track
M	Last Track	Play the last track
tł	Cycle Play Mode	Click to set up play mode: sequential play, single cycle, the whole catalog circulation
X	Random Play	Click to start or cancel random play.
Ì	Play List	Click to display the most recently added songs.
Ų	Artist	Click to play all the song as if to be performed by an artist.
0	Album	Click to display all the songs in the form of album.
¢.	Songs	Click to display all the songs.
	Play List	Click to display the most recently added songs.

Supporting form of the video player: mp4/avi/wmv/3gp/flv/saf/mov/mkv/mpg Application >Video

Press Video application icon to enter into video playing interface, for example.





The detail of the button function of video playing

lcon	Button Name	Function Explanation
П	Play/Pause	Press Pause when play Press Play when pause
••	Forwards Fast	Click to forwards fast
*	Backwards Fast	Click to backwards fast

interface

2.8.7Picture Browse

Applications > photo Album.

Click the symbol under the application menu to enter into picture browse interface, the detail as below.



Picture Browse Interface

Click to get back and you can move the $\frac{40}{40}$

CIOFCUD

picture at random or click to move pictures right and left. Click symbol shown as below.



Picture Browsing Interface (Customized display) Click any picture enter into single picture display mode, shown as below.



To move the picture left and right by one's hand to view the photo, under the normal states to double-click the photo to change the photo's size. Click Slideshow to enter into the browsing mode

for all photos. Click Menu, it will change for other function operation.



Single Picture Display Interface (Other Function Operation) Function Explanation,

Icon	Bottom Name	Function Instruction
Delete	Delete	To delete the selected picture.
() Details	Detail Setting	Click to show title, type, shooting time, photo album and place on the picture.
🖸 Set as	Setting	According to your choice to setup image screen
다 Crop	Trim	According to your choice to trim it.
3 Rotate Left	Rotate Left	According to Auticlockwise to turn picture for 90
C Rotate Right	Rotate Right	According to clockwise to turn picture for 90

Note: Insert and plug SD card when power on is prohibited, otherwise it may cause data loss.

2.8.8 Digital TV

Application > Digital TV

Click analog TV application icon into the digital TV interface

The details of digital TV function interface are as below.

Note: For more details of description of the digital TV, please

lcor	١	Button Name	Function Explanation
	•	Menu	Click to back into menu
Ú		Back	Click to back into last content
EC	2	EQ	Click to enter into EQ interface

refer to the digital TV instruction.

2.8.9 Analog TV

Application > Analog TV

Click Analog TV Icon to enter into Analog TV playing interface.

2.9 AUX IN Function

Make sure video source is under the normal state of output in this function.

Application > AUX IN

Press screen to come out a hide menu, click to enter into EQ setting interface, it can adjust EQ

EO

D to get back into last interface, effects. Click

Â click to get back into system menu.

2.10 Rear View

When the car starts reverse gear and if with a mirror,

the system switches to the rear-view mirror screen output automatically, and keeps audio output sound; if not equipped with rear-view mirror, the system remains the same video playback.

2.11 E-mail

Users could use "Email" to send or receive email mess age.


Note: Email messages could be sent and received based on the connection of Internet. Please contact your network service provider for the detailed setting parameters.

2.11.1 Email Setting

Application > E-mail

Enter a email address and password, then click next step to set account name, your name and signature, then click finish.

Users could also manually set the email account: 1. Enter email address and password;

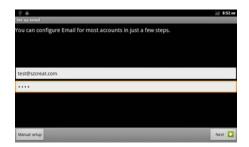

2. Click to manual set, and select the type of E-mail account. (For example: POP3、IMAP、Exchange)



3. Set the receiving server, port, and etc.



4. Set the outgoing server, port, etc.

8 4								at 1544
iscoming server :	settings	_	_	_	_	_	_	
emane								
est								
staword								
IAP server								
szcreat.comw								
et								
43								
q v	v (r	8	у	u	0	o p
a	5	d	f	g	h	1	k	1
÷	z	x	c	v	b	n	m	•
7123	٥	1						Done

5. Establish the new account

8.4								at #544
Incoming server	settings	_	_	_	_	_		
OP3 server								
szcreat.com								
ort in the second								
110								
lecurity type								
None								•
q v	v	e	r	t	у	u	0	o p
a	5	d	1	g	h	1	k	
÷	z	×	c	v	b	n	m	
7123	0	1						Done

6. Enter E-mail Interface




2.11.2 Sending E-mail

You can give one or more recipients to send mail. You can manually add the recipient and choose from your address book before sending E-mail.

Application > E-mail

Press the "MENU" panel, compose open the mail message editing screen

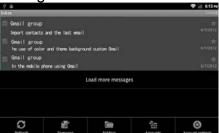

2.4								♥ id 6:15+
Compete								South
To								
Subject								
Compose Ma	1							
	Send			Save at a	nan.		Discard	đ
9 V	N (e 👌 🔄		t	у	u	i o	p p
a	5	d	f	g	h	1	k	1
•	z	x	C	v	b	n	m	
1123	0		-				5	4

1. It needs to input recipient, click recipient, and put in recipient e-mail address.

If necessary, press the panel "MENU" and select menu "If necessary, press the panel "MENU" and select menu "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu "Executed "If necessary, press the panel "MENU" and select menu Bcc recipient address.

compose To		-	_		-	-	-	ST
Subject								
ompose Mail								
benpuse man								
unpuse man								
unpuse man								
	ind		Saw in dr	n.,			Discard	_
9	nd		Serve an di	9				
	nd C		Service de	y 1		1	Discard	P
9	nd e s d	1	Sine a di	y h		1		

2. Click the topic, enter a subject, click the letter input area, enter the desired content. According to the panel "MENU", the pop-up function keys, add an

attachment addated and select the desired option, and insert the required documents

3. Click " to send E-mail

2.11.3 E-mail input

Application > E-mail

Press the "Refresh" in "MENU" or use the mouse to slide



to the end of inbox and click " The second of the late real (The second of the late real (The second of order on the late real (The second of order on the late real (The second of order on the late real (The second of order on the late real (The second of order on the late real (The second of order on the late real (The second of order on the late real (The second of order on the late real (The second of order on the second of the late real (The second of order on the second of the late real (The second of order on the second of th

1. Instruments link the server and download the E-mails, and then save the received E-mails information in the inbox.

a. Choose the E-mail you needed so that you can read it.

b. Press "MENU" key when you are reading the E-mail and click "Forward" to transfer the E-mail to the other customers or click " reply" directly, edit the message and send the E-mail to the sender.



2.12 Message Functions



Messaging You can send and receive short messages or MMS which contains multimedia documents.

2.12.1 Compose New Mails

Application> information >Messaging Button

>New message

Enter into the interface of composition, and follows as below.

Messaging	🌩 id 626)
	10000170000
New message Compose new message	
Compose new message	

- 1. Input the E-mail receiver
- 2. Input the words information you want to send.
- 3. Click "send" and send the E-mails

uple to compose	ype to compose	uple to compose								iii 44
 	qwertyu i op	qwertyu i op	0							
	qwertyu i op	qwertyu i op								
	qwertyu i op	qwertyu i op								
	qwertyu i op	qwertyu i op								

2.12.2 E-mails reply

When you receive new inbox, instructions column will display at the top of the computer and issue the prompts.

Application> information

After click "Corresponding information"

1. Click the "version input area"

2. Edit your replied information in the version input

area and click "Reply-and-send" E-mail.

2.13 Applications

2.13.1 Weather

Application> Weather Interface> long press interface >Widgets

>Fancy widgets 4*2



Enter the region selection, in the input box, enter the query you want to determine the area, click the icon to search as shown in the figure:

2.4	🗢 jill 9:01 M	
Location settings		
Primary location		
Weather Provider		
AccuWeather	•	
Gescoder		
Set location		
Shenzhen	Q	
Geolocation Use GPS		
Other Locations	Location Alias	

Search interface

2.13.2 Calculator

Application> Calculator

There are two display panels, basic and senior on the calculator. Press MENU> senior or basic, or move from left to right, to chance freely between the two panels.



Note: press MENU> delete the record

2.13.3 Electronic reader

According to the user's requirement to install the electronic reader, users can also install the third party reader software.

Note: The system's user manual is placed in the electronic reader.

3.Firmware Upgrading

3.1 Preparing for upgrade

1. First, format your SD card for what you use to firmware upgrade.

3.2. Update MCU

3.2.1 copy "318a2e70-44bf-11e1-b1cf-000c29ba27c0" to the root directory of SD card, and Inserted into the machine SD card slot.

3.2.2 Start to update MCU(Settings->General->MCU update), click OK

🔮 🖨 Trenecal			al 12:35
Navi applicati	MCU update now?		
MCU update	OK	Cancel	

3.2.3Wait for the upgrade is completed. The system will automatically restart after the upgrade is completed, please don't Ignition or shut down during the upgrade process.

Ý 🖶 Gentera)	id 1235
MCU update	
5% 5/100	

~	\mathbf{a}
~	

3.3 Update system

3.3.1. copy "u-boot-skip.bin、ulmage、uramdisk.img、 system.img" to the root directory of SD card, and Inserted into the machine SD card slot.

3.3.2、Shutdown

3.3.3. Press and hold any panel buttons, and boot, the system will <u>enter the upgrade interface automatically</u>.



3.3.4 The system will automatically restart after update. (The system will enter the touch screen calibration interface after the restart, please complete it.)

3.3.5 If one or more errors occur, please Ignore and repeat step 2 to step 4.

3.4. Update DVD

3.4.1 Burn "dvdrom.bin" to CD-ROM, and inserted into the machine dish mouth

3.4.2 Wait for the update is complete.

3.4.3 Eject the disc

4. Trouble handle

When your equipment meets troubles, please check the problems as below.

lte m	Problem	Solution
1	Unable connect to the network	 See 3G Card is installed correctly to make sure the correct and proper 3G terminal operator's SIM card weather launched 3G card data Mobile data roaming setting is connected or not. APN weather selected Whether 3G card arrears
2	It can't to save and mention "MCC" must have 3 letters	Check the 3G card install right or not.
3	Can't install applications	 Verify that the install application suffix is named "APK" Enter into Setting to select unknown sources
4	After the Bluetooth paired successfully, it mentions connection fails	 A. Some cellphones with Android system may occur when first connect. Please just find the paired device in matching list and then connect them once more. B. The unsuccessful connection is compatibility issues between cell phone and Bluetooth. If this occurs, please check the options in pair list of your cell phone. And you will find that the setting of Bluetooth Media and Mobile Media has been turned off. Turn on them and the connection will be successful.
5	How to install applications	 First, please copy the application files with suffix ".APK" to your SD or U disk. And the following are installation methods: 1. Click into the document management interface to find the SD card or U disk directory, and then select the ".APK" suffixed application file and click to install. 2. Find the Setting interface—>Applications—>install application, 3. Select the ".APK" suffixed file and click to install.

6	How to uninstall users APK application	Interface Setting—>Applications—>Installation Applications—>Uninstallation Applications. To click the uninstallation of APK Applications
7	Radio can't research channels	Check the radio antenna whether it's connected and it has signal before using it.
8	No sound	Check if system is muted
9	Media can't be recognized from SD card.	Prohibit hot-swappable SD card (Do not insert or plug SD card when power on)
10	3G、WIFI can't be recognized	Prohibit hot-swappable 3G/WIFI (Do not insert or plug dongles when power on)
11	MUSIC, RADIO and third-party application mixes, can not turn off the MUSIC, RADIO	Long press panel Back to exit the system MUSIC RADIO mode, again into third-party applications can
12	Press NAVI to enter navigation. Pressing again is not able to go back to HOME or quit.	In android system, the button HOME can guide you from navigation interface to main menu. Therefore NAVI is only defined as entering instead of quitting.
13	No keyboard pops up when dialing and receiving calls in other functions interfaces except Bluetooth	Long pressing the button PHONE will go directly to Bluetooth dialing interface; short press to hang up the phone call.

5. Specification

Operating voltage: DC 12V Operating voltage range: 10.8V ~ 16V Maximum operating current: 10A Installation size: 150*178*100mm Installation angle: The front and rear inclination is less than 30°

FM radio part

Frequency range: 87.5-108MHz (Europe) 87.5-107.9MHz (America) 36 stations preset Sensitivity (-30dB):12dBu SNR (-50dB):15dBuV Frequency response range: 30Hz~15KHz (±3dB)

AM radio part

Frequency range: 522-1620KHz (Europe) 530-1710KHz (America) 18 stations preset Sensitivity (SN=20dB): 20dBuV Mirror-image suppression: 60dB Frequency response: 50Hz _2KHz (±3dB)

DVD/CD play part

Compatible discs and format: DVD-R, DVD-RW, DVD+R, DVD+RW, CD-R, CD-RW, CD-DA, MP3, WMA, SVCD, VCD, MPEG, JPEG Audio SNR: 85dBA Dynamic range: 95dB Frequency response: 50Hz ~ 2 KHz (± 3 dB) Digital audio sampling: 24bit Electronic shock protection (ESP): $2 \sim 3$ seconds DVD CD-DA 10s 100s MP3 WMA 200s Mechanical shock protection: 10~200Hz, X/Y/Z:1.0G Power output: 4*45W, impedance 4 Ohm SRN: 70dB

Display screen part

Screen dimension: 8"/7"/6.2" Screen type: TFT Response time: Response =30ms, fall =50ms Pixel: 384,000 Pixels Angular field: Top view =65°, bottom view =40°, Left view =65°, Right view=65°

Ambient temperature

Operating temperature:-20_+70°C Storage temperature: -30_+80°C Operating humidity: 45%_80% (Relative humidity) Storage humidity: 30%_90% (Relative humidity)