

 


The Info Menu

Notes: When you press STOP, the unit stores the point where playback was interrupted...

The Info Menu

- 1. Press INFO on the remote while a disc is playing to display the info menu. The first banner shows title, chapter, and time display information.

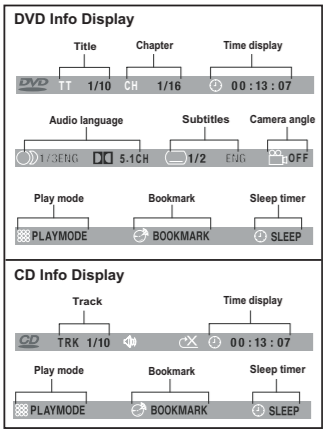

Title/chapter (DVD)/track (audio CD) To directly access a title, chapter (DVD) or a track (audio CD), press INFO, press OK.

Note: Many discs only have one title.

Time display

To access the Time Display, press INFO on the remote. Press the up/down buttons repeatedly to display: DVD: Chapter elapsed time, Chapter remaining time, Title elapsed time and Title remaining time.

Audio CD: Track elapsed time, track remaining time, disc elapsed time, disc remaining time.

To directly access a location on the disc which does not correspond to the start of a title or chapter, press INFO once and press OK, highlight the Time Display icon using the arrow buttons, then enter a time with the number buttons (hh:mm:ss) and press OK.

Note: Time display function may not be available on all discs.

The Info Menu

Audio (DVD)

Some discs have several audio tracks used for different languages or different audio formats.

- To change the language or audio format during playback: 1. Press the INFO button twice. 2. Use the left/right arrow buttons to select the Audio icon, or press the AUDIO button on the remote control.

This option is only available if the disc offers dialog languages or audio formats. When you change the dialog language using the Info menu, it only changes the dialog language of the disc being played.

Subtitles (DVD)

- Subtitles are turned off by default. Turn on subtitles as follows: 1. While the disc is playing, press INFO twice, then select the Subtitles icon using the left/right arrow buttons.

When you change the language of the subtitles using the Info menu, it only applies to the disc currently being played.

This function may not be available on all discs.

Camera angle (DVD)

Some discs offer different camera angles for specific scenes.

- 1. To change the camera angle, press the ANGLE button on the remote or press the INFO button twice and select the Camera angle icon with the left/right buttons.

If the disc was recorded using a single camera angle, this function is not available.

Play mode (all discs except jpeg)

- 1. While the disc is playing, press the INFO button twice for CD and three times for DVD. 2. Select the Play Mode icon using the left/ right arrow buttons.

- DVD play modes: standard, program, A-B repeat, title repeat, chapter repeat, Program play mode is only available if a program list has been created (see below). Repeat mode is only available with discs that display elapsed time and remaining time.

- Audio CD play modes: standard, introscan, random, program, repeat A-B, repeat disc, repeat track.

To stop repeat playback, select the Play Mode icon and use the up/down arrow buttons to choose the Standard option.

The Info Menu

Creating a Program List for Program Play Mode (Audio CDs and DVD discs) To use program play mode, you must first create a program list.

- 1. To create a program list, press the INFO button twice for CD and three times for DVD. Highlight the Play Mode option and press the up arrow to select the Program option.

To stop program play, press STOP or select Standard from the Play Mode option in the INFO display.

- Sleep 1. Press INFO twice for CD and three times for DVD. Select Sleep icon with the left/right arrow buttons.

Note: This function is not available AUX IN /OPTICAL IN / AUDIO IN / TUNER mode.

Radio

The unit has a built-in tuner that allows for FM radio function. The AM loop antenna allows for AM radio function.

Manual tuning

- 1. Connect the FM antenna and the AM loop antenna at the back of the unit. 2. Press TUNER. 3. Tune a station by pressing TUNER +/- repeatedly until the desired station is found.

Storing radio stations

The unit can store up to 30 radio stations in its memory. You can enter every single radio station yourself or the unit can store all available radio stations automatically in ascending order.

Automatic preset programming

- 1. Press TUNER to enter the Tuner mode. 2. Press and hold TUNER for two seconds to start automatic preset programming.

Manual preset

- 1. Tune to a radio station (see "Manual tuning" for details). 2. Press MEMORY. While the Program Preset number is still flashing, input your desired preset number using the numeric buttons, then press MEMORY to store it.

Retrieving preset stations

- 1. Press TUNER to enter the Tuner mode. 2. Press CH +/- to search up or down for the presets stations or directly press the numeric buttons.

Additional information

Troubleshooting

- The unit does not switch on. • Make sure it is plugged in. • Press the ON-OFF button on the remote control or the ON/STANDBY button on the front of the unit.

The device switches off spontaneously.

- The device switches off automatically when it is in STOP mode for more than 30 minutes without any user intervention. Switch it on again. • It might be impossible to read the disc. • Insert the disc with the printed side facing up. • Check that the disc can actually be played by this device.

There is no picture.

- Check you have switched on the TV set. • Check the connections. • Select the AV input assigned to the unit on the TV. • Replace the HDMI cable with a better one. Bad HDMI cable can cause data lost. • Press HDMI key on remote handset several times to toggle among different HD OUTPUT.

The picture is of poor quality (with snow or lines).

- Check the connections.

There is no sound or the sound is of poor quality.

- Check the connections. • Make sure the speakers are connected. • Make sure the MUTE function is not on.

No surround sound.

- Surround the speaker configuration in the Setup menu (See Positioning speaker or Audio Setup).

Notes: When the FM station broadcasts Stereo sound is found, ST is displayed. When you manually tune into a weak FM station, press AUDIO on remote control to switch from Stereo to Mono mode.

AUDIO IN/AUX IN/OPTICAL IN

TV, VCR or Set Top Box can be connected to AUX IN / OPTICAL IN input jacks at the back of the unit or AUDIO IN at the front panel so that sound from the auxiliary component comes into the unit and out through the speakers.

Connecting auxiliary components Refer to "Getting sound from external sources such as TV" for details on connecting the auxiliary components to the unit.

Selecting AUDIO IN/AUX IN/OPTICAL IN mode Press either SOURCE on the main unit or AUDIO/OPTICAL on the remote control to select AUDIO IN, AUX IN or OPTICAL IN mode.

Sound output in AUX IN mode (or AUDIO IN/OPTICAL IN mode)

- You may change the surround setting by pressing SURROUND to select between 5.1 CHANNEL and Stereo modes. • If the AUX IN (or AUDIO IN/OPTICAL IN) audio signal is mono, you may not receive audio on all speakers.

Jpeg Files

Playing jpeg files

Jpeg files are image files. Make sure that they have a resolution of less than 2 megapixels.

- 1. Open the disc tray. 2. Place the disc with the printed side facing up and close the disc tray.

The folders on the disc will be listed in numerical order on the left side of the screen. When you highlight a folder, then press OK button. The list of songs or pictures in the folder are listed in numerical order on the right side of the screen.

- 3. Select a folder using the up/down arrow buttons on the remote, then press the left arrow button to move to the music/picture icons at the bottom of the screen.

The folders on the disc will be listed in numerical order on the left side of the screen. When you highlight a folder, then press OK button. The list of songs or pictures in the folder are listed in numerical order on the right side of the screen.

- 6. During the slide show you can use the left/right button to rotate the picture, the up arrow button to rotate the image vertically, the down arrow button to rotate the image horizontally.

When you highlight a folder, then press OK button. The list of songs or pictures in the folder are listed in numerical order on the right side of the screen.

- 7. When the unit has played all the files, the music or slide show stops and the disc's contents are displayed again.

 
Notes: The time taken for the contents of the disc to be displayed varies according to the size and number of jpeg files on the disc.

Before inserting a disc, make sure it is compatible with the unit.

The Setup Menu

There are four options in the main setup menu: General Setup, Language Setup, Audio Setup and Video Setup.

GENERAL SETUP

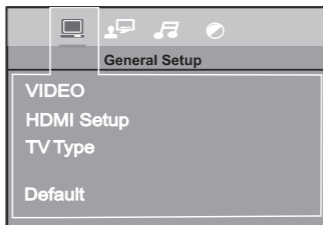

Video Progressive Function provides high quality pictures with less flickering. Turn on Progressive Scan if you used the Component Video jacks of the unit to connect a TV or monitor compatible with a progressive scan signal.

HDMI Setup This lets you select the resolution of the player's output according to the connected TV.

 
TV Type Depending on the format of the DVD disc, you can choose the picture format (aspect ratio) best suited to the format of your TV screen:

Default This option allows you to return the unit's settings to the original factory settings.

IMPORTANT! Once Progressive Scan has been activated, an image will only be visible on a progressive scan TV or monitor.

LANGUAGE SETUP

With this menu, you can set the language for unit menus, dialog, subtitles and the disc menus.

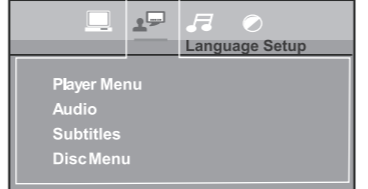

- 1. Select the Language Setup icon in the main menu using the left/right arrow buttons.

Player Menu Select the language of player menus and press OK.

Audio Select the dialog language using up/down arrow buttons and press OK.

The Setup Menu

Subtitles Select the subtitle language using up/down arrow buttons and press OK.

 
Disc Menu To change the language of the disc menus, select the language using the up/down arrow buttons and press OK.

Notes: If the selected language is not available on a disc, the disc's language will be used instead.

Test Tona This function is used to test and adjust the volume level (gain) for each individual speaker channel.

AUDIO SETUP You can adapt your unit to other equipment and access specific functions with the Audio Setup menu.

Video Setup This function is used to test and adjust the volume level (gain) for each individual speaker channel.

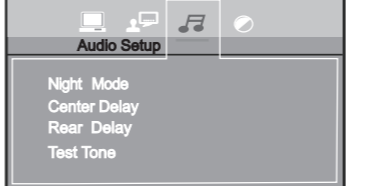

Slide Time The Slide Time option lets you select the amount of time a picture is displayed in a slide show.

Limited Warranty

All warranties implied by state law, including the implied warranties of merchantability and fitness for a particular purpose, are expressly limited to the duration of the limited warranties set forth above.

No person, agent, distributor, dealer or company is authorized to change, modify or extend the terms of these warranties in any manner whatsoever.

This warranty gives you specific legal rights and you may also have other rights, which may vary from state to state.

Important: Also keep your "Bill of Sale" as proof of purchase.

Model no. .... Product name ..... Type of set ..... Invoice no. .... Date purchased .....

FOR SERVICE AND REPAIR, PLEASE VISIT www.RCAav.com

Specifications and external appearance are subject to change without notice.

Additional Information

- This unit is for domestic use only and must not be used for industrial purposes. Total or partial copying of recordings protected by copyright legislation, without the explicit permission of the holder of the rights, contravenes current legislation.

Cleaning

- Use a soft, dry, clean cloth. Regularly dust the vents at the back or sides. Using solvents, abrasive or alcohol-based products risks damaging the unit.

Handling and caring for discs

- Handle your discs with care. Hold the disc with your fingers at the edges or through the hole. Insert the disc with the label facing up (for a single-sided disc).

Compatible Formats

In order to ensure playback, discs must conform with DVD or CD standards.

DVD-Video Digital video discs - 12 cm, single or double sided, single or dual layer. DVDs are high density optical discs on which high quality picture and audio are recorded by means of digital signals.

DVD-R, DVD-RW, DVD+R, DVD+RW Most DVD-R and DVD+R (one recording only), DVD-RW and DVD+RW discs (rewritable), depending on the DVD writer and discs used.

Audio CDs Audio CDs (12 cm).

CD-R, CD-RW Most CD-R (one recording only) and CD-RW discs (rewritable).

CD-Rs written during a multisection recording can be played, provided that the session has ended before the disc is played (depending on the write software).

- Do not use its full capacity. • CD-Rs should be preferably used instead of CD-RWs (rewritable CDs) as, in certain cases, CD-RW playback may be faulty.

Additional Information

Jpeg files

CD-R and CD-RW with jpeg files. Certain jpeg files, including progressive jpeg files, cannot be read by this unit.

When composing your title, use 10 characters or less, no spaces, and avoid the use of special characters including (, / , \ , = , +).

The total number of files and folders on the disc should be less than 650.

Make sure that files have the ".jpg" extension. Files without the ".jpg" extension will not be able to be read by the unit.

Sound Enhancement Systems This receiver is equipped with several built-in sound enhancement systems.

Dolby Pro Logic Manufactured under license from Dolby Laboratories.

The Pro Logic mode uses the built-in circuit to steer the Left, Center, Right and Mono Surround channel audio signals and uses all five speakers to play both stereo and Dolby Pro Logic program source, such as TV and VCR.

The Dolby Digital mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and a more powerful presence than conventional Dolby Surround.

Technical Specifications:

Amplifier Section: RMS Output Power: Dolby Digital Mode with 10% Total Harmonic Distortion Rear Channels: 32 Watts/channel (14H, 4Q) Front and Center Channel: 32 Watts per channel (14Hz, 4Q)

AM Tuner Section: Frequency Response: 2kHz +/-3dB, 400Hz ref. Usable Sensitivity: 3000uV/m @ 5/N 20dB

FM Tuner Section: Frequency Response: 15kHz +/-3dB, 1kHz ref. Quieting: 24dB

Dimensions (H x W x D mm) : Unit: 66 x 430 x 240 Front Speakers: 214 x 78 x 69 Center Speaker: 290.5 x 78 x 69 Rear Speakers: 214 x 78 x 69

Dolby Digital The Dolby Digital mode lets you enjoy full digital surround from software processed in the Dolby Digital format. Dolby Digital provides better sound quality and a more powerful presence than conventional Dolby Surround.

Limited Warranty

AVC MULTIMEDIA ("AVC") makes the following limited warranty. These limited warranties extend to the original consumer purchaser and is limited to non-commercial user of the product.

One Year Parts & Labor Warranty AVC products purchased in the United States are warranted to be free from defects in materials or workmanship for a period of one year from the date of their original retail purchase.

PLEASE DO NOT RETURN YOUR UNIT TO AVC WITHOUT PRIOR AUTHORIZATION. New or remanufactured replacements for defective parts or products will be used for repairs by AVC at its designated Service Center for one year from the defective warranty date.

Packaging and Shipping Instruction When you send the product to the AVC service facility you must use the original carton box and packing material or an equivalent as designated by AVC.

Your Responsibility

- (1) You must retain your bill of sale to provide proof of purchase. (2) These warranties are effective only if the product is purchased and operated in the U.S.A. or Canada.

Out of Warranty

In the event your product requires repair after the limited warranty period has expired, please contact our Customer Support Center at 1-800-506-5746, 1-877-252-6873 or www.RCAav.com