


SC3- μ Seis™

2014

User's Reference Manual

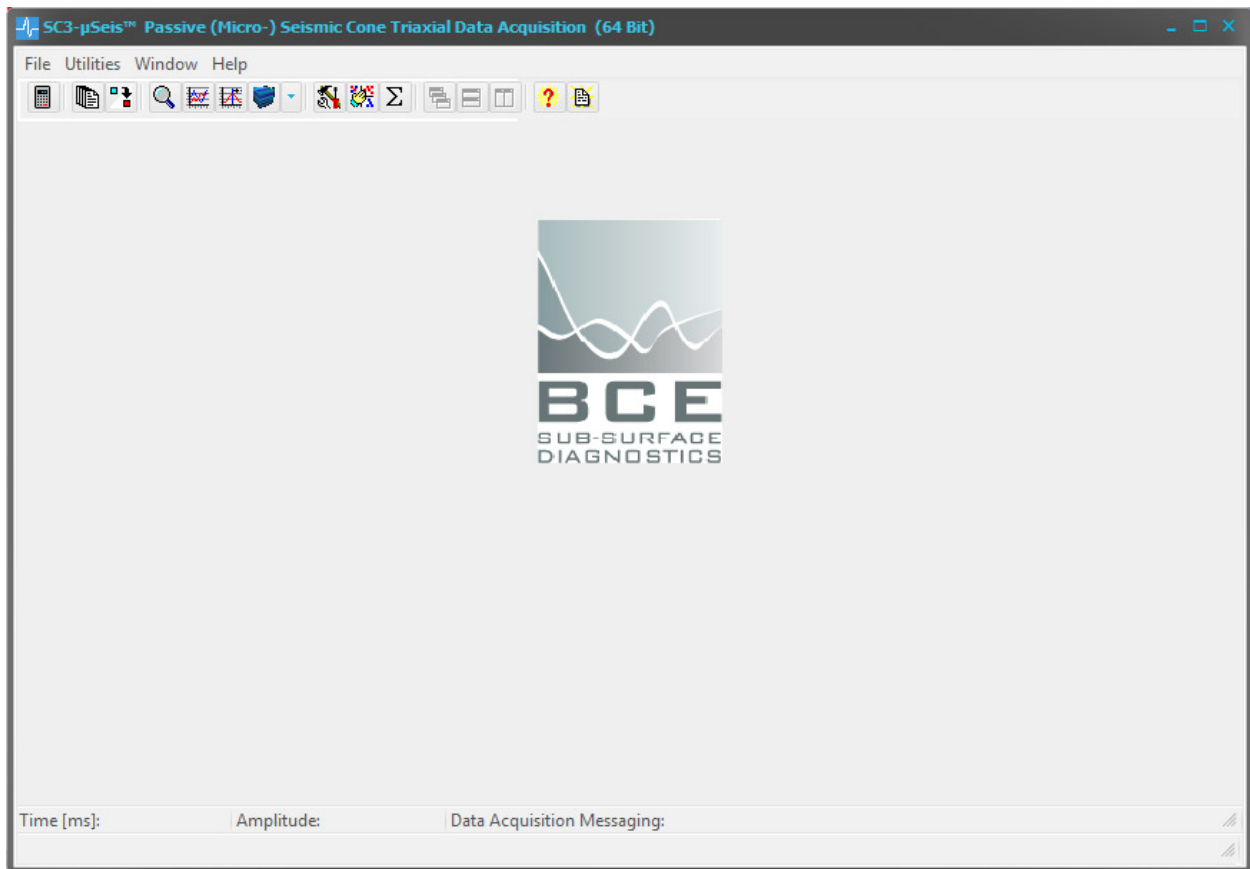

Version 14.1.0 – February 2014.

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

BCE's mission is to provide our clients around the world with state-of-the-art seismic data acquisition and analysis systems, which allow for better and faster diagnostics of the sub-surface.

The company provides state-of-the-art hardware and software solutions for a wide variety of seismic engineering applications. If necessary, we will customize our products to suit the requirements of our clients even better.

BCE's products and services consist of

- Seismic Data Acquisition and Signal Conditioning Hardware
- Seismic Data Processing Software
- Applied Seismology Consulting Services
- Seismic Data Processing
- Professional Seminars

By publishing this manual we will hopefully provide a better understanding of downhole seismic testing and the role it can play in geotechnical investigations.

*Baziw Consulting Engineers Ltd
3943 West 32nd Avenue Vancouver B.C. Canada V6S 1Z4
url: www.bcengineers.com
email: info@bcengineers.com*

© 1998 - 2014 Baziw Consulting Engineers Ltd.. All rights reserved. The content on this work is protected by the copyrights of Baziw Consulting Engineers Ltd.. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior written permission of Baziw Consulting Engineers Ltd. Although every precaution has been taken in the preparation of this manual, we assume no responsibility for any errors or omissions, nor do we assume liability for damages resulting from the use of the information contained in this manual



Table of Contents

Chapter 1	Introduction	1
1.1	What is SC3- μ Seis™?	1
1.2	Organization of users manual	2
Chapter 2	Main Menu and Tool Bar	3
2.1	Introduction.....	3
2.2	File Submenu Options	4
2.3	Utilities Submenu Options.....	4
2.3.1	Default GUI Settings	4
2.3.2	Sensor Type and Units.....	5
2.3.3	Full Waveform Component Specification	5
2.4	Window Submenu Options	6
2.5	Help Submenu Options.....	6
Chapter 3	Seismic Data Acquisition	7
3.1	Data File Specification and A/D Parameters	7
3.2	Trigger Parameters.....	10
3.2.1	Trigger Parameters.....	10
3.2.2	SEED™ Algorithm Event Detection Parameters	11
3.2.3	Pretrigger Parameters	13
3.3	Begin Acquisition and Stop Acquisition Tool Bar.....	13
3.4	Convert to SC3-Rav™ File Format	14
3.5	Data Stack.....	16
Chapter 4	View Seismic Data	17
4.1	View Seismic Data.....	17
4.2	Standard VSP Display.....	20
4.3	X-Y-Z-Full Waveform VSP Display.....	22
4.4	3D Display	25
Chapter 5	Chart Formatting, Exporting, and Printing.....	28
Chapter 6	References	29
Appendix 1	E. Baziw and G. Verbeek, “Passive (Micro-) Seismic Event Detection by Identifying Embedded “event” Anomalies within Statistically Describable Background Noise”, <i>Pure Appl. Geophys.</i> , vol. 169, issue 12, pp. 2107-2126, Dec. 2012.....	30
Appendix 2	E. Baziw, "Real Time Seismic Signal Enhancement Utilizing a Hybrid Rao Blackwellised Particle Filter and Hidden Markov Model Filter", <i>IEEE Geosci. Remote Sensing Letters</i> , vol. 2, no. 4, pp. 418- 422, Oct. 2005.	31
Appendix 3	BCE technical note entitled “Passive (Micro-) Seismic Event Detection by identifying, quantifying and extracting frequency anomalies within statistically describable background noise”.	32
Appendix 4	SC3- μ Seis™ Installation Procedure.....	33
Appendix 5	SC3- μ Seis™ Trouble Shooting.....	36
Appendix 6	SC3- μ Seis™ License Transfer Procedure.....	37



List of Figures

Figure 1: Main Menu and Tool Bar in SC3- μ Seis™	3
Figure 2: Default GUI Settings	4
Figure 3: Sensor Type and Units dialog boxes	5
Figure 4: Full Waveform Component Specification User Interface	5
Figure 5: File Menu	7
Figure 6: Directory Selection Dialog Box	7
Figure 7: Trigger Parameters Input Screen	10
Figure 8: Finite difference source wave with superimposed 140 Hz sinusoid and exponential decay with rate 0.8/ms	11
Figure 9: Low pass filtered (900 Hz) sensor data (green trace), STA/LTA of smoothed AMT (red trace), and Smoothed AMT (blue trace).....	12
Figure 10: SC3- μ Seis™ tool bar.....	14
Figure 11: Convert to SC3-Rav™ File Format user interface	14
Figure 12: File→ Convert to SC3-Rav™ File Format file input dialog box	15
Figure 13: Data Stack file input dialog box	16
Figure 14: Specifying the format to save stacked time series.....	16
Figure 15: Specifying the directory and file name of the stacked time series	16
Figure 16: Main graphical interface in View Seismic Data software option	17
Figure 17: Filter Parameter Specification Window	17
Figure 18: Filtered seismic trace in View Seismic Data software option	18
Figure 19: Overlaying unfiltered seismic time series onto filtered time series	18
Figure 20: Display of frequency spectrum of seismic time series illustrated in Figure 18	18
Figure 21: Seismic data file with Display Pre-Trigger enabled.....	18
Figure 22: Seismic data before time shift	19
Figure 23: Seismic data after time shift of -3.36 ms.....	19
Figure 24: Depth Profile dialog box	20
Figure 25: Depth Profile graphical interface box	20
Figure 26: Filtered (30 to 100 Hz bandpass) Standard VSP Display seismic trace profile illustrating color coded reverse polarized waves	21
Figure 25: Display of the PPA Values for the X-Component Time Series Data.....	22
Figure 26: Example of X-Y-Z-Full Waveform VSP Display Output where the X-component, Y-component, Z-component, and Full Waveform Seismic Time Series Data is Displayed	23
Figure 27: Seismic Time Series Data Shown in Figure 28 with the Globally Normalization Option Enabled	23
Figure 28: Illustration of PPA Values for Captured Triaxial Data. In addition, the interval velocity between depths 1.0 m and 2.0 m is shown.....	24
Figure 29: Typical 3D Display (data unfiltered).....	25
Figure 30: 2D display of the FFT results of the filtered data shown in Figure 32.....	26
Figure 31: Typical 3D Display (same data as in Figure 31, but now filtered and chart copied to clipboard as described below).....	26
Figure 35: Chart Editing Dialog Box.....	28
Figure 36: Chart Printing Dialog Box.....	28



Chapter 1 Introduction

1.1 What is *SC3- μ Seis*TM?

*SC3- μ Seis*TM is a Windows® program that facilitates the autonomous data acquisition of triaxial Seismic Cone (SC) time series data. *SC3- μ Seis*TM utilizes passive (micro-) seismic monitoring technology where a dedicated trigger channel remotely discerns whether an “event” or “trigger” has occurred. When an “event” or a “trigger” is detected the SCPT seismic data is stored to file at the user specified sampling rate and sample time.

*SC3- μ Seis*TM allows for a *Contact* or *Sensor* trigger. The *Sensor* trigger is based on BCE’s so-called *SEED*TM (Signal Enhancement and Event Detection) algorithm, which uses real time Bayesian Recursive Estimation (BRE) digital filtering techniques to analyze in real-time the raw trigger data.

*SC3- μ Seis*TM includes the following features:

- Configurable for either geophones or accelerometers.
- Configurable for either *Contact* or *Sensor* trigger.
- Implementation of the *SEED*TM algorithm.
- Short term average / long term average (STA/LTA) event detection.
- Automatic data gain setting.
- Suitable for P-Wave and S-wave.
- Maximized data sampling rate.
- Ability to save trigger channel and pre-trigger data to file.
- Functionality to convert acquired seismic data into the *SC3-RAV*TM data format.
- Option for post data stacking.
- Bandpass, high pass, low pass, and notch digital filters.
- Automatic full waveform SH-wave interval velocity estimates.
- Displays of peak particle accelerations, velocities, and displacements.
- VSPs with trend line estimation.
- 3D Displays of VSP Profiles.

1.2 Organization of users manual

The purpose of this manual is to instruct users of *SC3- μ Seis*TM in the use of the product by explaining its structure, taking the user step by step through the program menus, and specifying the use of interactive graphics and I/O routines.

In addition, the manual contains the following items:

- Appendix 1 provides a copy of the paper entitled “Passive (Micro-) Seismic Event Detection by Identifying Embedded “event” Anomalies within Statistically Describable Background Noise”. This paper outlines the most recent formulation of the *SEED*TM algorithm.
- Appendix 2 provides a copy of the paper entitled “Real-time seismic signal enhancement utilizing a hybrid Rao–Blackwellized particle filter and hidden Markov model filter.” This paper outlines the initial mathematical details behind the *SEED*TM algorithm.
- Appendix 3 provides a copy of the BCE technical note entitled “Passive (Micro-)Seismic event detection by identifying, quantifying and extracting frequency anomalies within statistically describable background noise”. This technical note concisely outlines the *SEED*TM algorithm and provides examples of the advantages of the *SEED*TM algorithm over standard frequency filtering techniques.
- Appendix 4 provides the user with a detailed installation procedure for this software.
- Appendix 5 offers the user some *SC3- μ Seis*TM trouble shooting tips.

WARNINGS:

- **This program requires a 64 bit Windows operating system**
- **To ensure that the program will function properly it is important that it is installed correctly as outlined in Appendix 4.**

Chapter 2 Main Menu and Tool Bar

2.1 Introduction

SC3- μ Seis™ is a Windows® program that facilitates the autonomous data acquisition of triaxial seismic cone (SC) time series data. As illustrated in Figure 1 the main menu of SC3- μ Seis™ has four options:

- *File*
- *Utilities*
- *Window*.
- *Help*.

The desired submenu is chosen either by moving the mouse over the desired option and pressing the left hand mouse button, by pressing function <F10> on the keyboard and selecting the desired highlighted option, or by pressing the corresponding menu item letter on the keyboard.

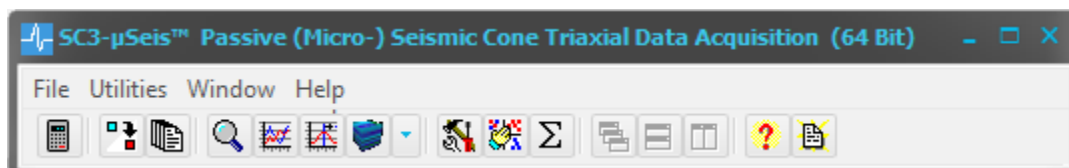


Figure 1: Main Menu and Tool Bar in SC3- μ Seis™

The program can also be operated by clicking on icons. As illustrated in Figure 1 the toolbar of SC3- μ Seis™ consists of 15 different icons:

Icon	Description	Manual Section
	Data Acquisition	3
	Convert to SC3-RAV™ File Format	3.4
	Data Stack	3.5
	View Seismic Data	4.1
	Standard VSP Display	4.2
	X-Y-Z Full Waveform Display	4.3
	3D Display	4.4
	Default GUI Settings	2.3.1
	Sensor Type and Units	2.3.2
	Full Waveform Component Specification	2.3.3
	Cascade	2.4
	Tile Horizontally	2.4
	Tile Vertically	2.4
	About	2.5
	Open User's Manual	2.5

2.2 File Submenu Options

The *File* menu option provides the user with 7 options:

- Data Acquisition (as described in detail in Section 3.1)
- Convert to SC3-Rav™ file format (as described in detail in Chapter 3)
- Data Stack (as described in detail in Chapter 3)
- View Seismic Data (as described in detail in Chapter 4)
- Standard VSP Display (as described in detail in Chapter 4)
- X-Y-Z Full Waveform VSP Display (as described in Chapter 4)
- 3D Display (as described in Chapter 4)
- Exit – to close the program

2.3 Utilities Submenu Options

The *Utilities* menu option provides the user with 3 options

- Default GUI Settings
- Sensor Type and Units
- Full Waveform Component Specification

2.3.1 Default GUI Settings

The *Default GUI Settings* dialog box is shown in Figure 2. Here the user can specify the minimum and maximum frequency axis values, as well as the precision, the number of digits and the increment for both the vertical amplitude axis and the horizontal time axis.

The minimum and maximum frequency axis values are used for the *View Seismic Data* and *3D Display* options. The default settings for these frequencies are zero and the Nyquist frequency ($1/2\Delta$, where Δ is the sampling rate) respectively. If the user wishes to change these values, then check box *Enable* should be checked and the appropriate minimum and maximum frequencies should be specified.

The precision, the number of digits and the increment for both the vertical amplitude axis and the horizontal time axis are used for all charts displayed within SC3- μ Seis™.

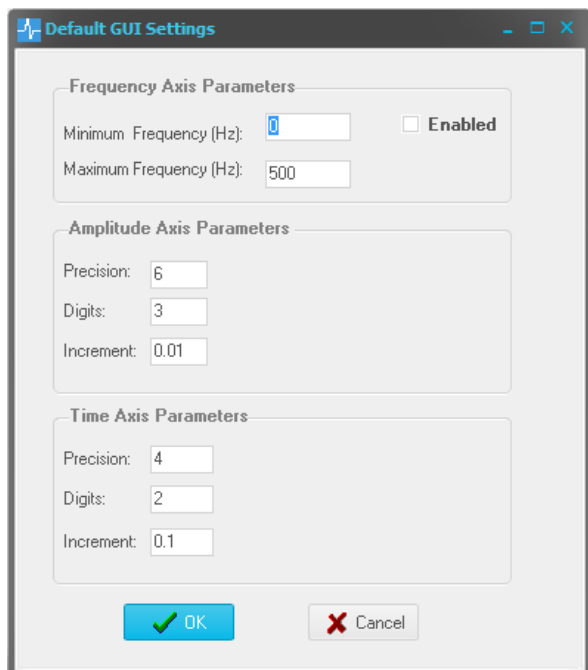


Figure 2: Default GUI Settings

2.3.2 Sensor Type and Units

The *Sensor Type and Units* dialog box is shown in Figure 3. The *Sensor Type Specification* interface allows the user to specify whether *Accelerometers* (output proportional to particle acceleration) or *Geophones* (output proportional to particle velocity) are used for the downhole seismic testing (DST) investigation. The *Unit Specification* interface allows the user to select whether the particle velocities and accelerations recorded are given in units of m/s and m/s² or mm/s and mm/s², respectively. This directly depends upon the amplitude units the seismic data was stored in.

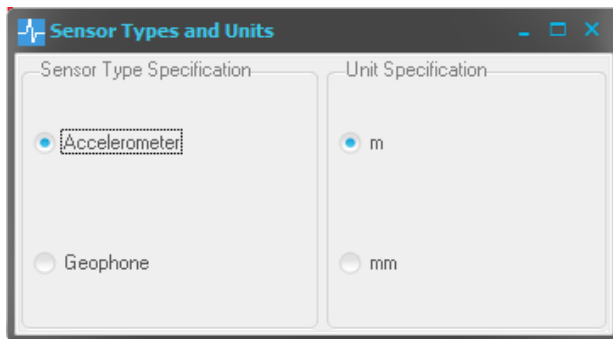


Figure 3: Sensor Type and Units dialog boxes

2.3.3 Full Waveform Component Specification

The *Full Waveform Component Specification* option as shown in Figure 4 allows the user to disable or enable X, Y or Z axis recordings within the full waveform calculation and analysis.

The absolute value of the full waveform is defined as

$$\rho(t) = \sqrt{A x(t)^2 + B y(t)^2 + C z(t)^2}$$

The constants *A*, *B*, or *C* are set to either 0 or 1 depending on whether the related axis has been enabled or disabled. This option covers the situation where there have been faulty recordings on a specific axis and the user does not want to incorporate this time series within the analysis of the full waveform within the VSP displays. It should be noted that whenever *SC3- μ Seis™* is started, the X Axis, Y Axis and Z Axis parameters are enabled.

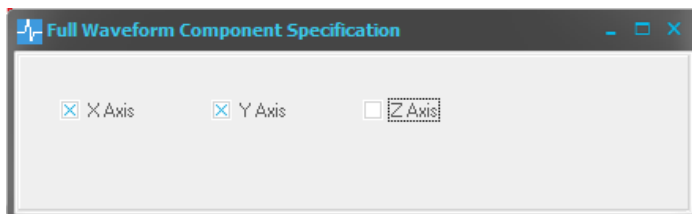


Figure 4: Full Waveform Component Specification User Interface

2.4 Window Submenu Options

The *Window* menu option provides the user with 4 options to arrange the open window(s):

- Cascade
- Tile Horizontally
- Tile Vertically
- Minimize All

2.5 Help Submenu Options

The *Help* option provides the user with 3 options:

- About - provides software version information on *SC3- μ Seis*TM.
- User's Manual - opens the *SC3- μ Seis*TM user's manual in a default pdf browser.
- Appendix 1 opens the paper entitled "Passive (Micro-) Seismic Event Detection by Identifying Embedded "event" Anomalies within Statistically Describable Background Noise" in a pdf browser. This paper outlines the most recent formulation of the *SEED*TM algorithm.
- Appendix 2 opens the paper entitled "Real-time seismic signal enhancement utilizing a hybrid Rao-Blackwellized particle filter and hidden Markov model filter." This paper outlines the initial mathematical details behind the *SEED*TM algorithm.
- Appendix 3 opens the BCE technical note entitled "Passive (Micro-)Seismic event detection by identifying, quantifying and extracting frequency anomalies within statistically describable background noise" in a default pdf browser. This technical note concisely outlines the *SEED*TM algorithm and provides examples of the advantages of the *SEED*TM algorithm over standard frequency filtering techniques.
- Link to BCE - opens the *Baziw Consulting Engineers'* web page in a default web browser.

Chapter 3 Seismic Data Acquisition

The *File*→*Data Acquisition* menu option is used to carry out autonomous data acquisition and allows the user to communicate with the BCE signal conditioning board and the analog/digital (A/D) conversion board. As shown in Figure 5, this menu has two tabs for data input:

- *Data File Specification and A/D Parameters.*
- *Trigger Parameters.*

Once the data has been entered, the tool bar at the top of the screen is used to control the actual data acquisition.

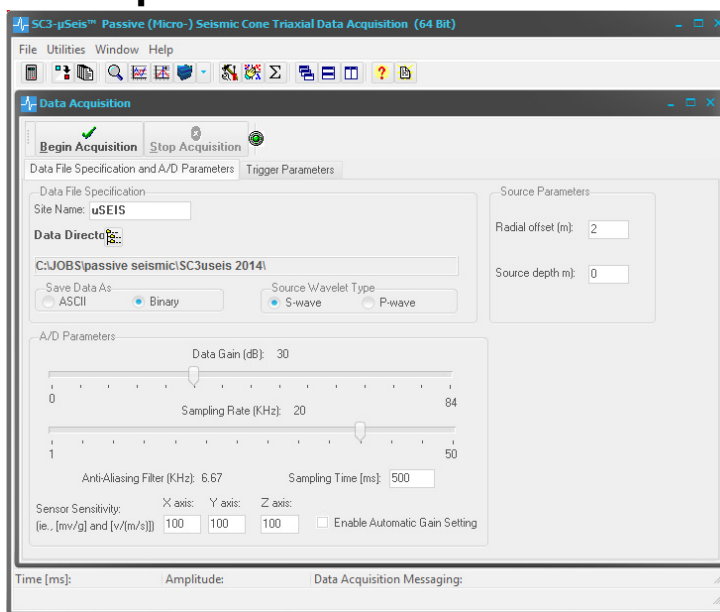



Figure 5: File Menu

3.1 Data File Specification and A/D Parameters

The *Data File Specification and A/D Parameter* tab is illustrated in Figure 5 and the input parameters required on this tab are as follows:

- **Site Name** – the user specified *Site Name* is utilized within SC3- μ Seis™’s automatic seismic data file naming and saving process. The default *Site Name* is *uSEIS*
- **Data Directory** - the default data file storage directory is selected by pressing the directory list icon . Figure 6 illustrates the dialog box which appears when this icon is selected. The user browses the available drives and directories and selects the one most appropriate for seismic data file storage.
- **Save Data As** - the user has the option to store seismic data in either ASCII or binary file formats by selecting the appropriate radio button. The default filenames are *.aci for ASCII file formats and *.bin for Binary file formats. Binary file formats are desirable because they typically require less memory storage, while ASCII data files can easily be read into other programs. The default format is *Binary*.
- **Source Wave Type** - S-wave (S) or P-wave (P) - dominant source wave type under analysis. The default wave type is *S-wave*.

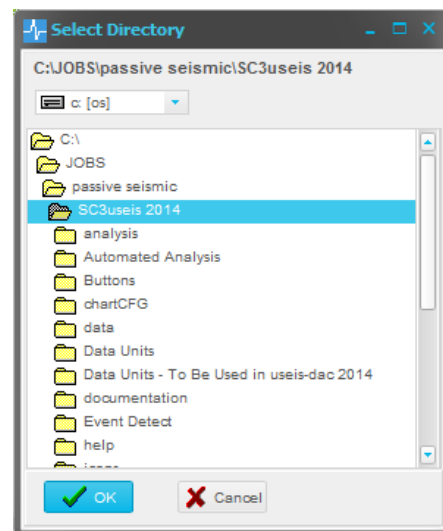


Figure 6: Directory Selection Dialog Box

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

A typical file name for a seismic file saved is outlined and defined as follows:

uSEISS_28_01_2014_15_15_25_152.bin

uSEIS	specified by the user in the <i>Site Name</i> edit box
S	S-wave (S) or P-wave (P) - dominant source wave type
28_01_2014	day data acquired (i.e., day_month_year)
15_15_25_152	time data acquired (i.e., hour-minute-sec-msec)
.bin	user specified data type

If option *Save Trigger Channel to File* option is enabled (see Section 3.2) the associated saved trigger file includes *TRIG* prior to the day information (e.g., *uSEISS_TRIG28_01_2014_15_15_25_152.bin*).

Apart from the Data File Specification input the user also has to enter the following:

- **Radial Offset** - radial offset (m) of the source from the penetration cone.
- **Source Depth** - depth (m) of the source into the ground.
- **Data Gain** - the data gain corresponds to the amplitude gain on the recorded data, and can be set from 0 to 84 dB in increments of 6 dB. The default *Data Gain* is 30 KHz.
- **Sampling Rate** - the sampling rate is specified in KHz and it ranges in value between 1 and 50 KHz. The default *Sampling Rate* is 20 KHz.

Once the user has specified the Sampling Rate, the program will determine the Actual Sampling Rate, which is a multiple of the specified Sampling Rate, to take optimal advantage of the fact that a digital trigger is used.

Listed below are the Actual Sampling Rates for each of specified Sampling Rate for both the *Contact* trigger and the *Sensor* trigger (see Section 3.2):

Sampling Rate (KHz)														
Specified	1	2	3	4	5	6	7	8	9	10	20	30	40	50
Actual														
contact	125	120	120	120	125	120	140	160	180	120	120	120	120	150
sensor	20	20	18	20	20	18	21	24	18		20	30	40	50

From the table above it is clear that there is a distinct difference in actual sampling rates depending on the trigger type. This is due to the computational requirements of the *SEED*™ algorithm used with a sensor trigger. This algorithm must complete filtering and event detection within $\Delta \times$ ring buffer size prior to extracting the next set of data from the ring buffer. This means that the maximum allowable processing time for a 8192 point ring buffer and a sampling rate of 20 KHz is 410 ms. Performance testing of the *SEED*™ algorithm has shown that it requires approximately 140 ms to process 8192 data points with a sampling rate of 20 KHz, or approximately 1/3 of the maximum allowable processing time. The computer system utilized for this test was a Dell Latitude E6520 laptop with a quad-core 2.40 GHz CPU.



WARNING:

The CPU time depends on the computer system utilized and the additional applications that are running simultaneously. If the processing time of the SEED™ algorithm exceeds the allowable time a file with CPUFAILURE appended to the file name will be saved to disk (e.g., uSEIS 24 01 2014 21_15_39_367CPUFAILURE.bin). If this occurs, the user should decrease the specified sampling rate.

It should be noted that the analog anti-aliasing filter is set automatically based on the specified sampling rate (at 1/3 of the sampling frequency).

- **Sampling time** - the *Sampling Time* is specified in ms and it corresponds to the total data acquisition time. For optimal data storage and processing, the sampling time should not be much longer than what is required to capture the P-wave and S-wave. As a first estimate of this parameter's value the user should determine the maximum travel distance of the seismic wave and assume a wave velocity of 100 m/s to calculate the travel time. To determine the recommended *Sampling Time* the user should add to the travel time at least 60 ms to cover three periods of a 60Hz SH source wave. However, since data storage is not really limited in most cases, it is more important that the *Sampling Time* is set large enough to capture all required data within a vertical seismic profile than to optimize this parameter. The default *Sampling Time* is 500 ms.
- **Sensor Sensitivity** - the user inputs the seismic sensor's sensitivity allowing for the recording of the particle accelerations or velocities (in the true units of m/s^2 or m/s respectively). This value is provided by your SC system supplier and should be entered in mv/g or $v/(m/s)$ for accelerometers and geophones respectively.

WARNING:

The program shows a default numeric value of 100, as this is appropriate for the PCB accelerometers commonly used with BCE equipment. However, it is definitely not correct whenever geophones are used, and in any event the user should check this value before data acquisition is started.

- **Enable Automatic Gain Setting** – if this option is enabled then the *Data Gain* is re-adjusted automatically. This adjustment is determined by comparing the maximum absolute recorded amplitude (MARA) measured in true units (e.g., m/s^2) on the X, Y and Z axis with the full scale value (FSV) for the *Data Gain* specified. The *Data Gain* is then adjusted so that the MARA value resides within the amplitude range of 30% FSV to 70% FSV. Each adjustment is limited to 12 dB so that a single erroneous data file does not alter the gain setting dramatically.

3.2 Trigger Parameters

The *Trigger Parameters* tab is illustrated in Figure 7 and it contains three different types of inputs: Trigger related inputs, SEED algorithm related inputs and Pretrigger related inputs.

3.2.1 Trigger Parameters

To specify the trigger the user needs to provide five inputs:

- **Trigger Type** - there are two types of triggers: a *Contact* trigger (whereby the system is triggered when contact is made between source and receiver, e.g., when the source hammer strikes the truck pads) and a *Sensor* trigger (when the signal of a transducer, e.g. an accelerometer or geophone is used to trigger the system).
- **Trigger Gain** - the gain on the trigger channel has four possible settings: 0 dB (1x), 20 dB (10x), 40 dB (100x) and 60 dB (1000x). This parameter is only applicable when a *Sensor* trigger is used (since a zero gain is applied in case of a *Contact* trigger) and has a default value of 40 dB.
- **Trigger level (or sensitivity)** - this value specifies the percentage of full scale trigger amplitude that signifies a trigger event. This parameter is only applicable when a *Sensor* trigger is used (since a *Contact* trigger is an on-off trigger) and has a default value of 10% or 409 for a 13 Bit A/D.
- **Save Trigger Channel to File** – if checked the trigger data is saved to file. In the saved trigger data file the trigger channel is mapped to the X axis, the X axis sensor response is mapped to the Y axis and the Y axis response is mapped to the Z axis. It should be noted that while the Z axis sensor response is not displayed it is saved in the data file.

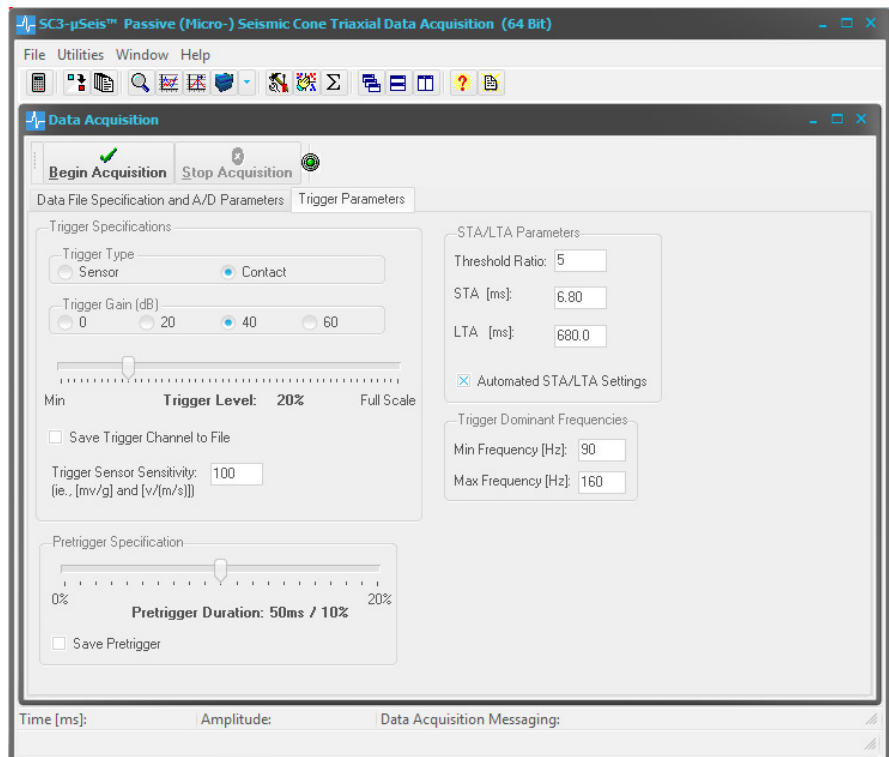


Figure 7: Trigger Parameters Input Screen

- **Trigger Sensor Sensitivity** - the user inputs the trigger sensor's sensitivity allowing for the recording of the particle accelerations or velocities (in the true units of m/s^2 or m/s respectively). This value is provided by your SC system supplier and should be entered in mv/g or $v/(m/s)$ for accelerometers and geophones respectively.

WARNING:

The program shows a default numeric value of 100, as this is appropriate for the PCB accelerometers commonly used with BCE equipment. However, it is definitely not correct whenever geophones are used, and in any event the user should check this value before data acquisition is started.

3.2.2 SEED™ Algorithm Event Detection Parameters

When specifying a *Sensor* trigger the program will use the SEED™ algorithm to detect the seismic event. This algorithm characterizes the trigger source wave (TSW) as a frequency anomaly embedded within background noise, whereby the TSW is uniquely modeled as an Amplitude Modulated Sinusoid (AMS). The AMS wave has proven very accurate in modeling seismic data acquired during passive seismic monitoring and vertical seismic profiling. Figure 8 illustrates the three parameters which define the AMS trigger source wave:

- $\omega = 2\pi f$: the angular frequency with f the TSW's dominant frequency;
 t_{offset} : the offset time from the arrival time of the source wave (t_0) when the sinusoidal component commences;
 h : the exponential decay rate of the source wave.

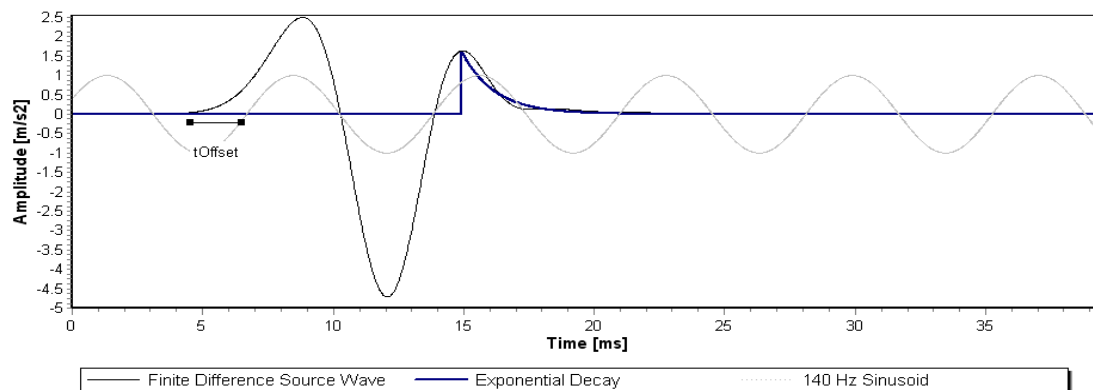


Figure 8: Finite difference source wave with superimposed 140 Hz sinusoid and exponential decay with rate 0.8/ms

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

In general terms, the AMS TSW is defined to be a sinusoid with a dominant frequency and phase modulated by an Amplitude Modulating Term (AMT). The discrete representation of the AMS source wave is given as

$$AMS_k = AMT_k \sin[2\pi f_d \Delta k + \varphi] \quad (1)$$

where k denotes the time index, f_d the dominant frequency, Δ the sampling rate, and φ the phase of the AMS TSW.

The *SEED*™ algorithm estimates on a real time basis the AMT component and the dominant frequency of the AMS. A Short Term Average / Long Term Average (STA/LTA) is then calculated on the smoothed and normalized version of the estimated AMT. Once the trigger channel has exceeded the *Trigger level* and the AMT STA/LTA level has subsequently exceeded the user specified threshold (i.e., parameter *Threshold Ratio*), the system will identify an “event” and store the seismic data. This is illustrated in Figure 9, where the top trace shows the trigger pulse embedded within a high noise environment (*Display Pre-Trigger* enabled with corresponding *Pre-trigger time* = 50 ms). the blue trace the smoothed estimate of the trigger pulse AMT, and the red trace the corresponding STA/LTA of the blue trace.

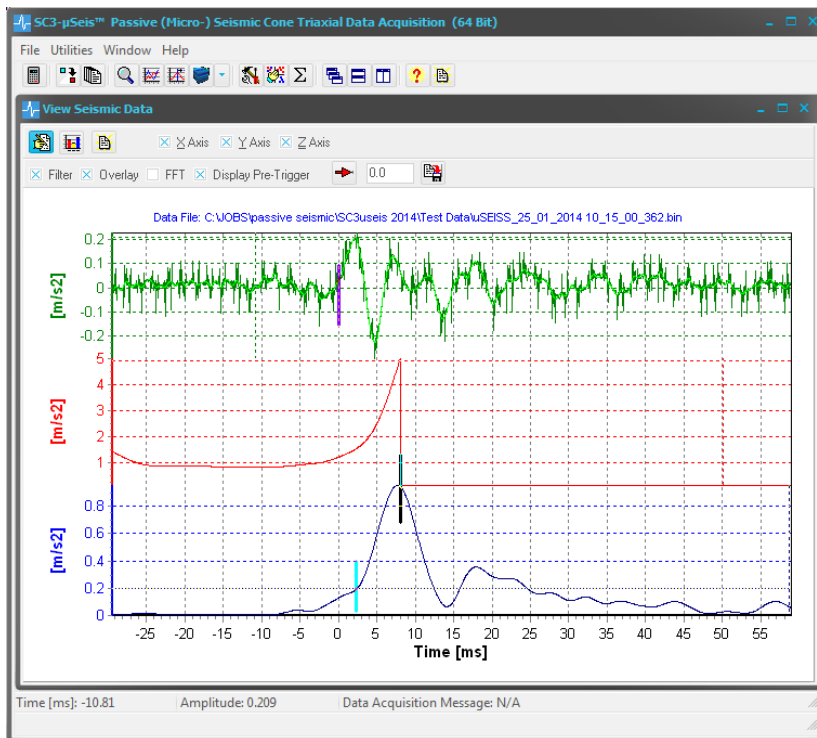


Figure 9: Trigger sensor data (green trace), STA/LTA of smoothed AMT (red trace), and Smoothed AMT (blue trace)

When the STA/LTA ratio exceeds the user specified *Threshold Ratio* (set at 5.0 for this example) an “event” is identified. The corresponding time location is shown in Figure 9 by the **black** short line at $t_1 \approx 9$ ms. In the *SEED*™ algorithm the trigger time $t_0 = 0$ (**magenta** short line in Figure 9) is determined by initially moving back in time from t_1 until the AMT value drops to 20% of the AMT value at t_1 , which is shown in Figure 9 by the **cyan** short line at $t_2 \approx 3$ ms. The trigger time t_0 is then determined by moving back in time from t_2 until the first zero crossing is reached within the trigger trace where a low pass filter (900 Hz) is initially applied to remove false zero crossings.

When obtaining interval velocities from a pseudo-interval SCPT it is important that a common reference point is selected for the trigger channel, and that that reference point is used for the

entire SCPT profile under analysis. The zero crossing is selected as that reference point due to the fact that this is a very distinct time marker (no ambiguity) and can easily be adjusted (e.g., earlier or later zero crossing) if required. It is of paramount importance that a common t_0 or time marker for the trigger channel is used throughout the SCPT profile under analysis.

From the above it shall be obvious that the user has to enter the following SEED™ algorithm event detection parameters:

- **STA/LTA Parameters**
 - **Threshold Ratio** – the STA/LTA threshold required to exceed for a trigger to be identified.
 - **STA Window** – STA Window length specified in ms.
 - **LTA Window** – LTA Window length specified in ms.
 - **Automated STA/LTA Settings** – if the *Automated STA/LTA Settings* Checkbox is checked then the STA and LTA window lengths are set automatically. This carried out by initially calculating an average dominant period where $T_D = 2 / (Min\ Frequency + Max\ Frequency)$. $STA = 85\% \text{ of } T_D$ and $LTA = 10 \times STA$.
- **Trigger Dominant Frequencies**

The dominant frequencies input parameters allow the investigator to specify minimum and maximum expected values for the trigger pulse P- or S-wave dominant frequency.

 - **Min Frequency** – minimum dominant frequency in Hz (default value is 90 Hz).
 - **Max Frequency** – maximum dominant frequency in Hz (default value is 160 Hz).

It highly recommended that the investigator determine the *Min Frequency* and *Max Frequency* parameters from preliminary test and data captures of the trigger channel once the autonomous SCPT system has been mobilized.

3.2.3 Pretrigger Parameters

To specify the pretrigger the user has to provide two inputs:

- **Pretrigger Duration**- the *Pretrigger* slide bar allows the user to specify the amount of information to be stored prior to triggering. The *Pretrigger Duration* is specified as a percentage of the total *Sampling Time*. For example, if the total sampling time is 500 ms and the *Pretrigger Duration* slide bar is set to 10% then the pretrigger is $(500 \times 0.10) = 50$ ms. The maximum allowable pretrigger duration is 20% of the total sampling time specified. The default *Pretrigger Duration* is set at 10% of the *Sampling Time*.
- **Save Pretrigger** – if checked, the pretrigger data is saved to file.

3.3 Begin Acquisition and Stop Acquisition Tool Bar

Once the user has specified the necessary data acquisition and trigger parameters, autonomous seismic cone data acquisition can commence. The SC3- μ Seis™ tool bar options are as follows:

- **Begin Acquisition** - the *Begin Acquisition* option is chosen once the data acquisition parameters have been specified and the user desires to commence autonomous data acquisition. SC3- μ Seis™ stores the current data acquisition parameters in the

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

SC3useis.ini file and these values become the default parameters. As soon as a trigger occurs the seismic cone data files are stored to the hard-drive as previously outlined.

- **Stop Acquisition** - the user may abort the operation by pressing the *Stop Acquisition* push button.



Figure 10: SC3- μ Seis™ tool bar

The graphical LED next to the *Stop Acquisition* push button shows at all times the status:

- Green** - ready to commence data acquisition
- Yellow** - waiting for trigger
- Red** - trigger occurred

It should be noted that the save data file includes the following header information:

sample rate (ms), time delay (ms), probe depth, source radial offset, and source depth.

The *Probe Depth* defaults to 1.0 m, and is subsequently corrected by the user as described in Section 3.4. At that time the user will also add the *Source Polarization*, and both entries will be based on the time stamp of the acquired files (e.g., a relatively large time stamp difference is indicative of a new probe depth).

3.4 Convert to SC3-Rav™ File Format

The data file generated by SC3- μ Seis™ cannot be analyzed by BCE's standard tri-axial data analysis program SC3-RAV™ unless it has undergone a minor conversion. The *File* menu option *Convert to SC3-Rav™ File Format* allows the user to do this. When selecting this menu option the user interface as shown in Figure 11 appears.

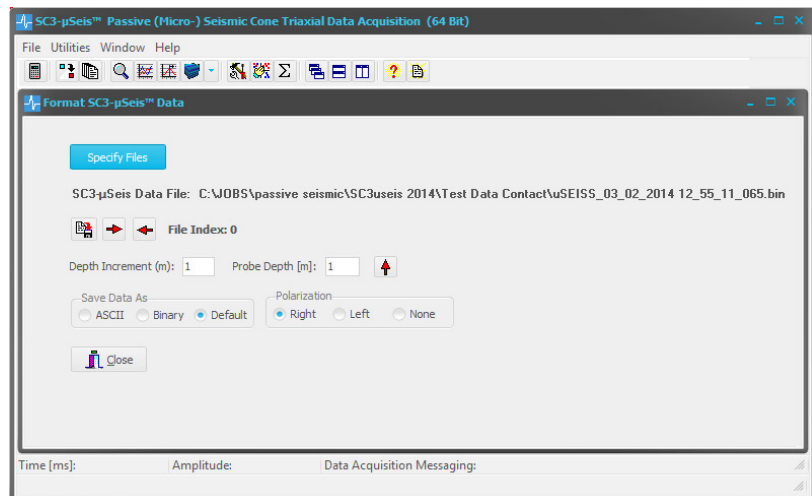




Figure 11: Convert to SC3-Rav™ File Format user interface

The first step is for user to select the desired data files to convert by pressing the *Specify Files* button, after which the file input dialog box shown in Figure 12


appears. Here the user can identify the file(s) to be converted. Multiple files can be selected in this dialog box by <SHIFT> plus left mouse click or <CTRL> plus left mouse click.




BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

The first file under analysis is then displayed under text heading **SC3- μ Seis™ Data File**. The selected data files can be polled forward and backward by selecting buttons  and , respectively. The *File Index* parameter identifies the current file location index within the set of data files selected (starts at index 0).

The user input parameters for menu option *File* → *Convert to SC3-Rav™ File Format* are outlined as follows:

- **Depth Increment** – cone depth increment (m) between tests.
- **Probe Depth** – the user has the option to either enter the probe depth directly or increase the current value by the *Depth Increment* by clicking on the .
- **Save Data As** – the user has the option to store seismic data in either ascii or binary file formats by selecting the appropriate radio button. The default filenames are *.aci for ASCII file formats and *.bin for Binary file formats. Binary file formats are desirable because they typically require less memory storage, while ASCII data files can easily be read into other programs. The *Default* option saves the formatted file in the same format as the file to be converted.
- **Polarization** – right (R), left (L), or no (N) source polarization radio buttons.

Once the *Probe Depth*, *Data Format* and *Source Polarization* have been specified, the reformatted file is saved to disk by selecting button . This file has the identical file naming convention as SC3-DAC™ with the Probe Depth and Polarization incorporated into the file name. For example, the SC3- μ Seis™ file uSEISS_28_01_2014 15_15_25_152.bin would be renamed as

uSEISS_2_00R_28_01_2014 15_15_25_152.bin

uSeis	specified by the user in the <i>Site Name</i> edit box
S	S-wave (S) or P-wave (P) - dominant source wave type
2_00	probe depth specification
R	source polarization (right for this example)
28_01_2014	day data acquired (i.e., day_month_year)
15_15_25_152	time data acquired (i.e., hour-minute-sec-msec)
.bin	user specified data type

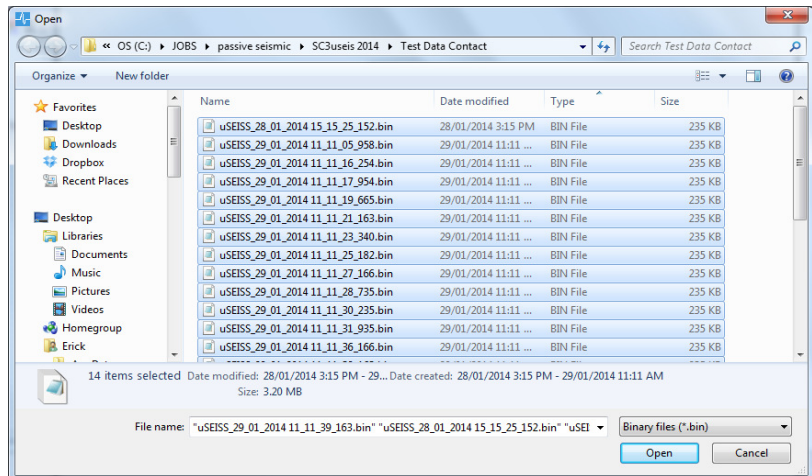


Figure 12: File → Convert to SC3-Rav™ File Format file input dialog box

3.5 Data Stack

The *Data Stack* option allows the user to post-stack acquired seismic cone time series. When selecting this option the file input dialog box shown in Figure 13 appears where the user can select the seismic files to stack. The user can input multiply seismic files in this dialog box (i.e., <SHIFT> plus left mouse click or <CTRL> plus left mouse click).

After specifying the files to be stacked, the user is asked to specify the format of the stacked data file (either ASCII or Binary format, as shown in Figure 14) and the directory and name for this file (as shown in Figure 15).

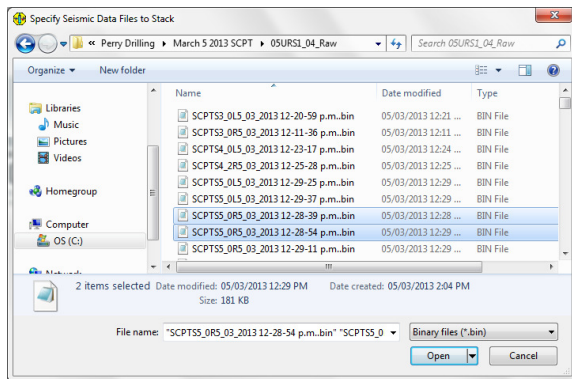


Figure 13: Data Stack file input dialog box

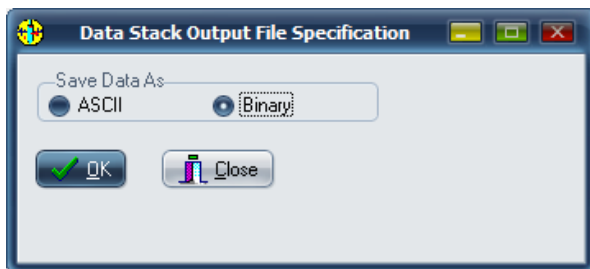


Figure 14: Specifying the format to save stacked time series

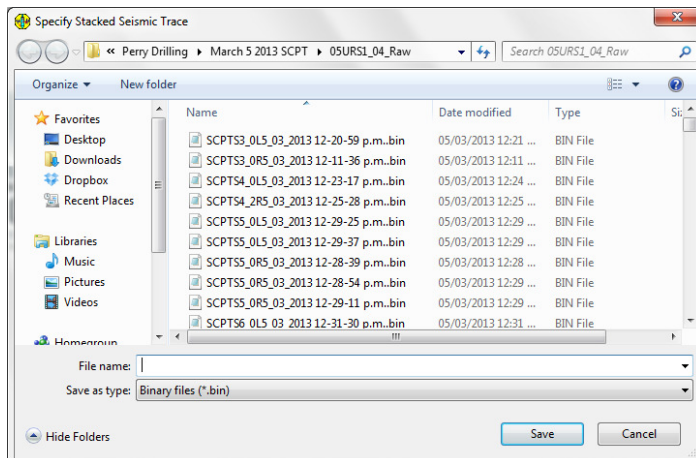


Figure 15: Specifying the directory and file name of the stacked time series

Chapter 4 View Seismic Data

SC3- μ Seis™ provides four advanced graphical interfaces, which allow the user to filter and plot captured triaxial seismic traces:

- View Seismic Data
- Standard VSP Display
- X-Y-Z Full Waveform Display
- 3D Display

4.1 View Seismic Data

The *View Seismic Data* option allows the user to analyze an individual seismic file. Analysis features consists of filtering the seismic trace, overlaying the unfiltered trace onto the filtered trace and displaying the smoothed Fourier transform of either the unfiltered or filtered seismic time series.

Upon selecting this option an input dialog box appears where the user specifies the seismic file to process. Figure 16 shows the graphical output which appears once the appropriate seismic file has been selected. At the top of this figure there are four checkboxes (*Filter*, *Overlay*, *FFT* and *Display Pre-Trigger*) and option to time shift the graphical output. At the bottom the numeric values of the time and amplitude at the current location of the graphical crosshair are shown.

If the *Filter* check box is selected the Filter Parameter Specification Window as shown in Figure 17 appears, which allows the user to specify four different types of filters as well as the start time.

Figure 18 shows the graphical results after specifying a bandpass of 30 to 100 Hz. The user may then overlay the unfiltered seismic trace onto the filtered trace by selecting checkbox *Overlay* as illustrated in Figure 19.

The smoothed Fast Fourier Transform (FFT) of either the unfiltered or filtered seismic trace is derived and displayed by selecting checkbox *FFT*. The frequency spectrum of the filtered trace is displayed if the checkbox *Filter* is selected along with the *FFT* checkbox. Otherwise the unfiltered seismic trace's frequency spectrum is displayed. Figure 20 shows the frequency spectrum of the filtered data file shown in Figure 18.

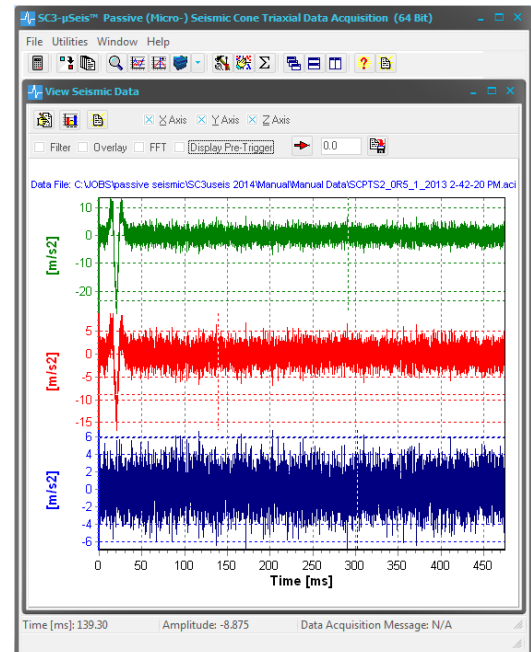


Figure 16: Main graphical interface in View Seismic Data software option

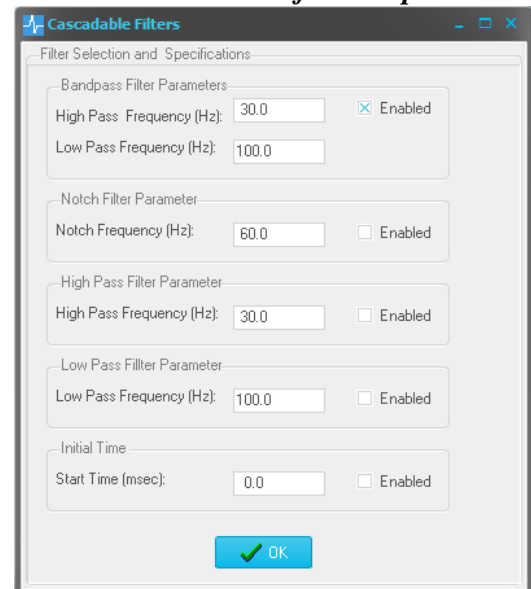


Figure 17: Filter Parameter Specification Window

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

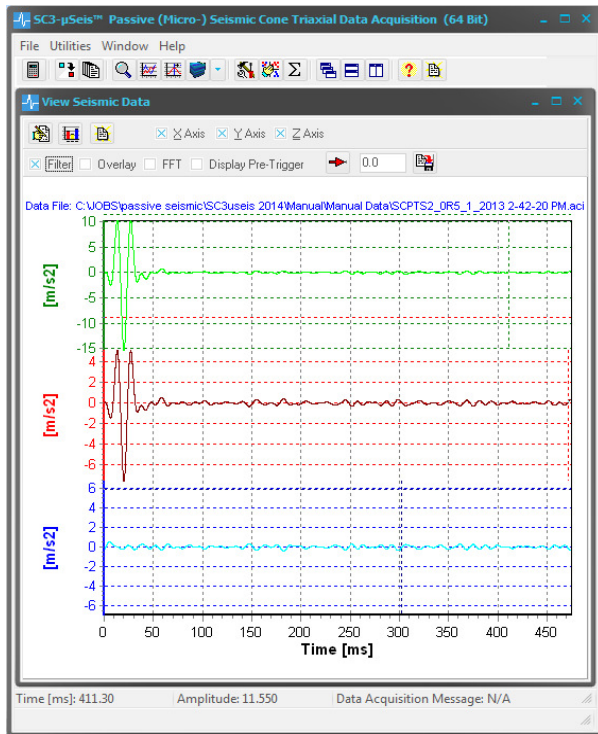


Figure 18: Filtered seismic trace in View Seismic Data software option

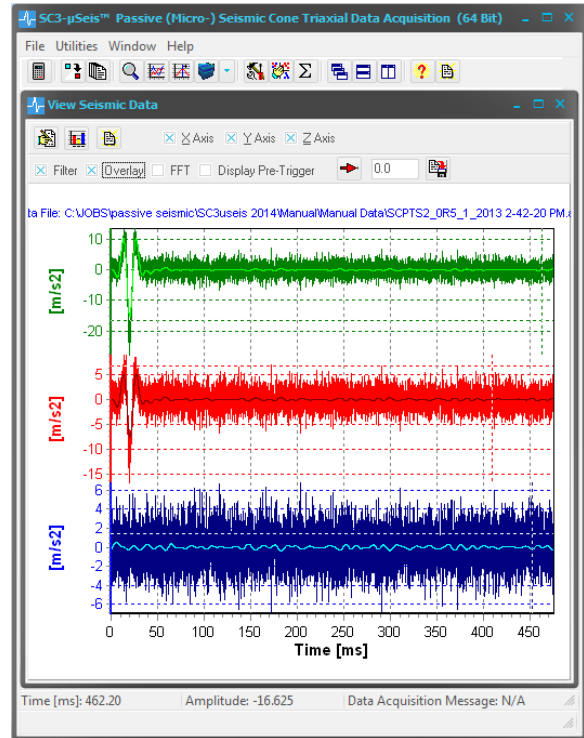


Figure 19: Overlaying unfiltered seismic time series onto filtered time series

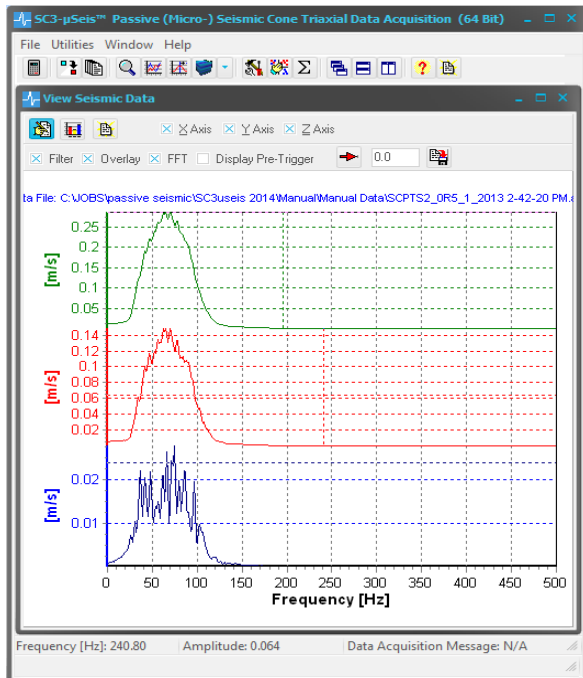


Figure 20: Display of frequency spectrum of seismic time series illustrated in Figure 18

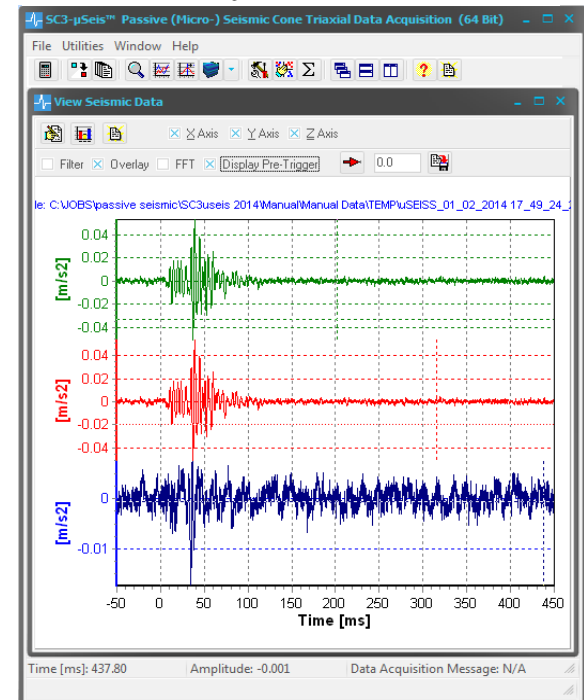




Figure 21: Seismic data file with Display Pre-Trigger enabled



BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

As mentioned in Section 3.3.2 it may be necessary to time shift the recorded traces to modify t_0 (common trigger zero crossing). This is done by entering the required tie shift (in ms) and then selecting the  button. To illustrate this feature, Figure 23 shows the same data as Figure 22 but with a -3.36 ms time shift. The time shifted file is saved to disk by selecting button , in which case the file is saved at the same location as the original files, but with the subscript “_SHIFTED” added to the file name, e.g., uSEISS_TRIG25_01_2014 10_15_00_362_bin becomes uSEISS_TRIG25_01_2014 10_15_00_362_SHIFTED.bin.

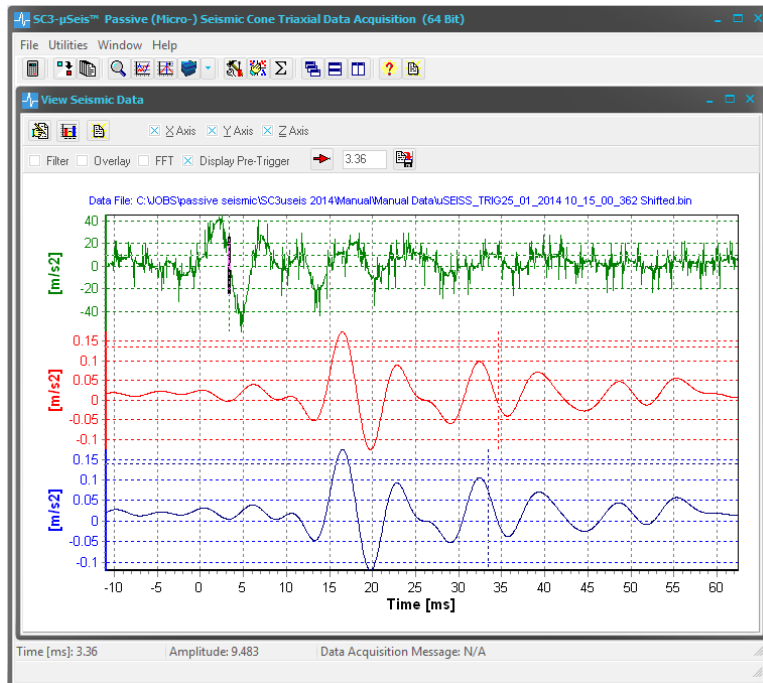


Figure 22: Seismic data before time shift



Figure 23: Seismic data after time shift of -3.36 ms

Note:
The filter applied to the raw sensor data illustrates that with filtered data the crossing can be identified more easily).



4.2 Standard VSP Display

When the user selects the *Standard VSP Display* option, the file input dialog box shown in Figure 24 appears. The user can input multiply seismic files in this dialog box (i.e., <SHIFT> plus left mouse click or <CTRL> plus left mouse click). After the *Open* button has been selected by the user, the main *Standard VSP Display* graphical user interface dialog box appears as is illustrated in Figure 25. In addition, a vertical seismic depth profile appears as is illustrated in Figure 26.

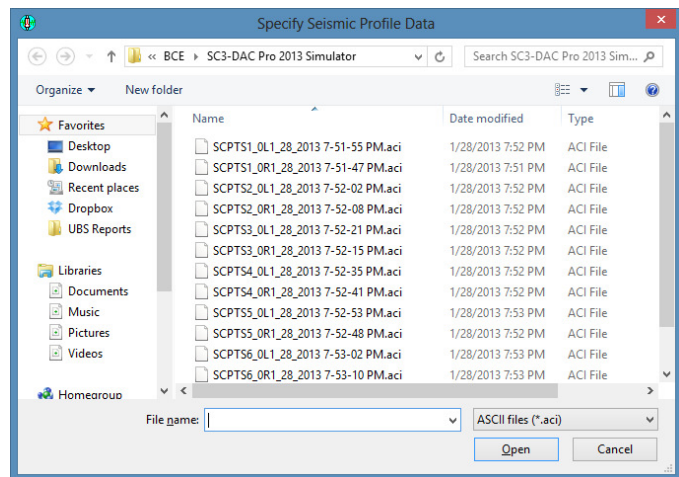


Figure 24: Depth Profile dialog box

The graphical interface box provides extensive chart display configuration options:

- Axis options
 - None: do not display the axis component of the selected seismic data files.
 - Display X/Y/Z Axis: display all axis component data of the selected seismic data files.
 - Depth Range: specify a desired depth range for which the axis component data should be displayed.

- Full wave options

The same options exist as described for the axes, with one additional option:

- Absolute Value - if checked then the absolute value of the full waveform is displayed; otherwise the θ_{yx} angle (either derived from the Incident Angle analysis or guessed) should be specified.

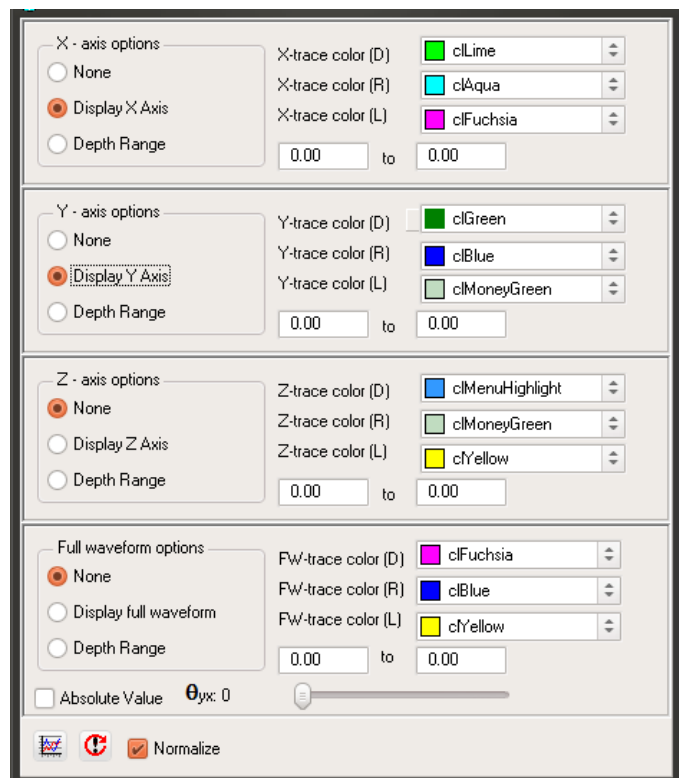



Figure 25: Depth Profile graphical interface box



BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

As previously outlined the user can automate the seismic data file naming and saving process. In that case the program may be able to recognize whether and if so, how the signals have been polarized. Based on this information the traces will be given the colors as indicated in the graphical interface box:

 - D: for traces that are not polarized or where the filename does not meet the BCE naming convention
- R: for traces polarized on the right side
- L: for traces polarized on the left side.

The user can modify the seismic trace coloring scheme by selecting the appropriate color button. The coloring scheme is then saved within the *sc3uSeis.ini* file for future applications. The user should select user button  in order to implement newly specified chart configuration parameters.

If check box *Normalize* is checked in the Depth Profile graphical interface box, then the displayed seismic wave traces are normalized to +/- 1.0. Alternatively, the seismic amplitudes are scaled relative to the maximum amplitude within the displayed seismic profile.

Figure 26 illustrates a typical Standard VSP Display of reversely polarized SH waves. The trend line shown in Figure 26 is specified by pressing the middle mouse button (or <shift> + right mouse button or <shift> + left mouse button) to identify individual points of interest. *SC3- μ Seis™* then automatically draws a line between the points specified and provides a velocity estimate¹. Pressing options <Ctrl> + left mouse button or <Ctrl> + right mouse button will delete the previously specified trend line. Double clicking the middle mouse button will delete all the specified trend lines.

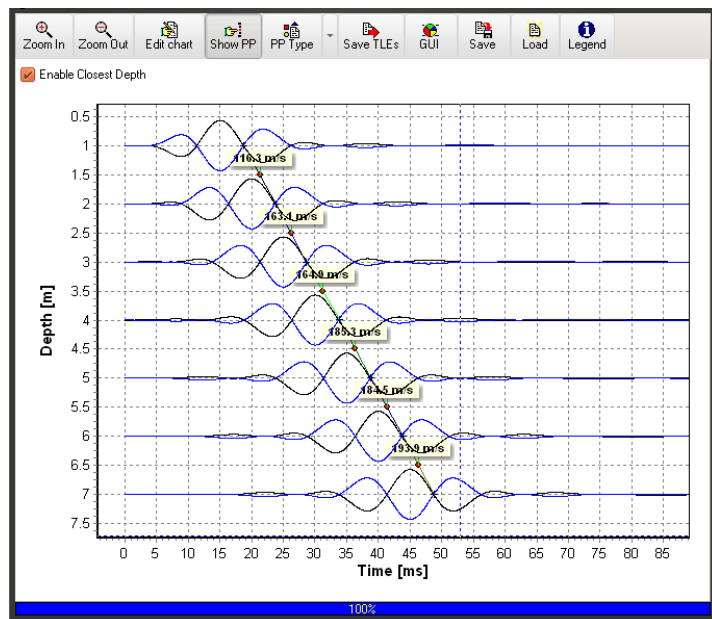




Figure 26: Filtered (30 to 100 Hz bandpass) Standard VSP Display seismic trace profile illustrating color coded reverse polarized waves

¹ To obtain accurate interval arrival times utilizing the trend line specification, it is mandatory that the user selects the appropriate time index at the exact depth of the probe from which the seismic data was recorded. Alternatively, if check box Enable Closest Depth is enabled the *SC3- μ Seis™* software relates back to the closest data depth when specifying trend lines.

As shown in Figure 26, immediately above the display there are 10 buttons to assist the user in working with this display. The function of these buttons can be described as follows:

- Zoom in: to scale the seismic amplitudes up in 10% increments;
- Zoom out: to scale the seismic amplitudes down in 10% increments;
- Edit Chart: to allow for chart formatting, printing, and exporting;
- Show PP: to enable and disable the display of peak particle values;
- PP Type: Select the peak particles values to display (i.e., acceleration, velocity or displacement);
- Save TLEs: to save the trend line data;
- GUI: to open the graphical interface box shown in figure 20;
- Save: to save the latest defined chart settings;
- Load: to enable the latest defined chart settings;
- Legend: to enable and disable the display of chart legend.

Figure 27 illustrates a Standard Display VSP of the PPA values of the data used to generate figure 18. As mentioned above, the display of these values can be enabled and disabled by toggling user interface button .

As the user moves the cursor over individual traces, the corresponding file name of the seismic trace is displayed at the bottom right hand corner of the chart. The user can display acceleration, velocity or displacement profiles by pressing the PP Type button  and selecting the desired particle motion.

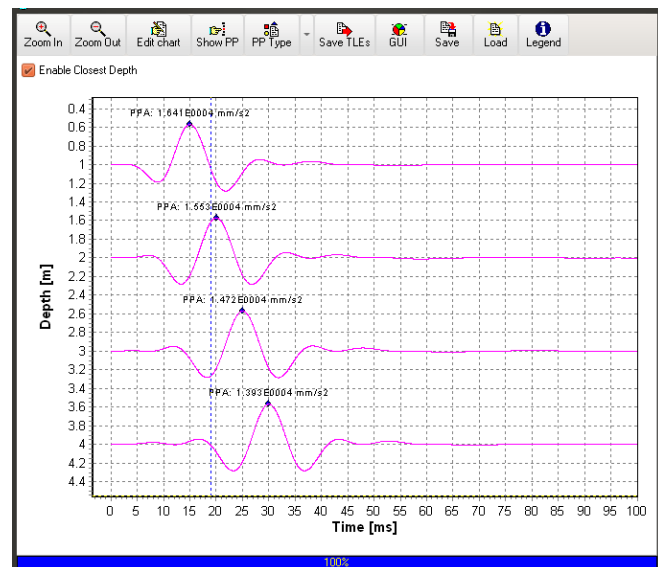


Figure 27: Display of the PPA Values for the X-Component Time Series Data

4.3 X-Y-Z-Full Waveform VSP Display

The *X-Y-Z-Full Waveform VSP Display* option allows the user to simultaneously display the X, Y, Z and Full waveform responses onto a VSP graphical display. In the software option the user selects the files to be displayed as previously described for the *Standard VSP Display* option, and the graphical interface box shown in Figure 25 also appears.

Figure 28 illustrates a typical *X-Y-Z-Full Waveform VSP Display* where the time series data for the X-component, Y-component, Z-component and full waveform are displayed. The user can normalize the display *locally* or *globally* by opening the *Normalize* pull down menu and then selecting the appropriate normalization option. By normalizing the seismic data *locally*, the amplitudes of a X-component, Y-component, Z-component and full waveform set of time series data for a specific depth are normalized with respect to the absolute maximum value recorded for

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

this set of triaxial data. Normalizing the data *globally*, all of the displayed seismic data is normalized with respect to the absolute maximum amplitude recorded within the entire set of displayed data. Figure 29 illustrates the seismic data shown in Figure 28 following a global normalization.

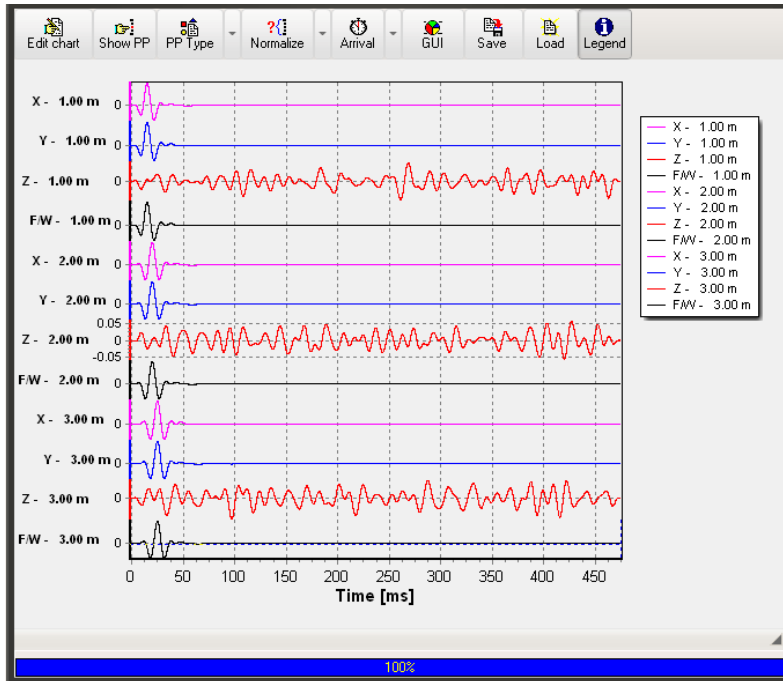


Figure 28: Example of X-Y-Z-Full Waveform VSP Display Output where the X-component, Y-component, Z-component, and Full Waveform Seismic Time Series Data is Displayed

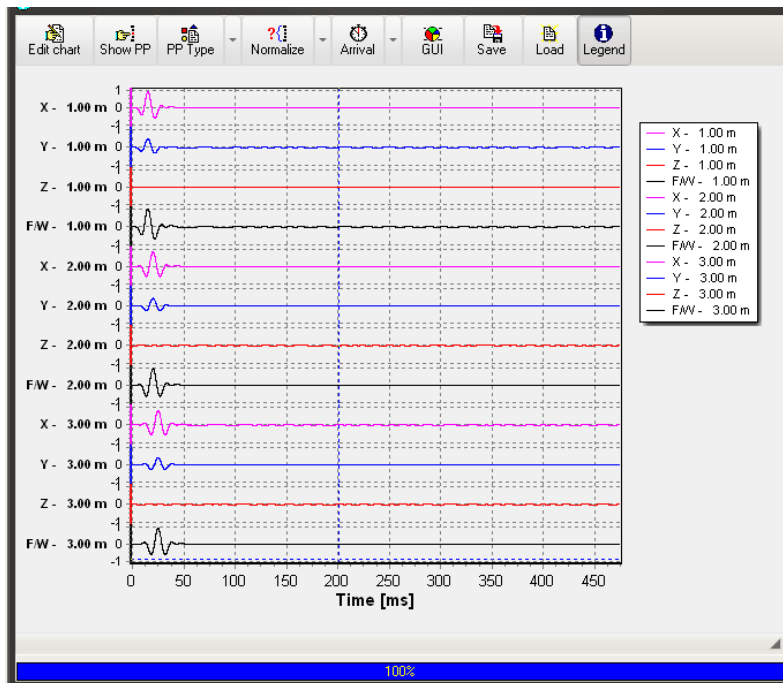


Figure 29: Seismic Time Series Data Shown in Figure 28 with the Globally Normalization Option Enabled



BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

Similar to the *Standard VSP Display* software option, the user can display peak particle values for acceleration, velocity and displacement within the *X-Y-Z-Full Waveform* display. In addition, the *X-Y-Z-Full Waveform VSP Display* allows for the automation of the interval velocities based upon the relative arrival time differences of the peak particle values. To implement this, the user should first select the axis component (i.e., X, Y, Z or full waveform) from which the relative arrival time will be calculated by enabling pull down menu *Arrival*. Next the user selects menu button *Show PP* so that the peak particle values are displayed. For example, Figure 29 illustrates the PPA values for recorded triaxial data. The user then selects the appropriate peak particle (PP) text box and moves it as desired so that the location of the PP value can be identified. As the user moves the cursor through the graphical profile, interval velocity estimates will be displayed within the bottom message window. The two PP values utilized to obtain the relative arrival times will be blink red for easy identification. For example, in Figure 30 the PPA values at depths 1.0 m and 2.0 m are identified by blinking red dots. The corresponding interval velocity is displayed at the bottom of the chart as follows:

Interval Velocity, X- 1.00m to X - 2.00 m: 118.5 m/s

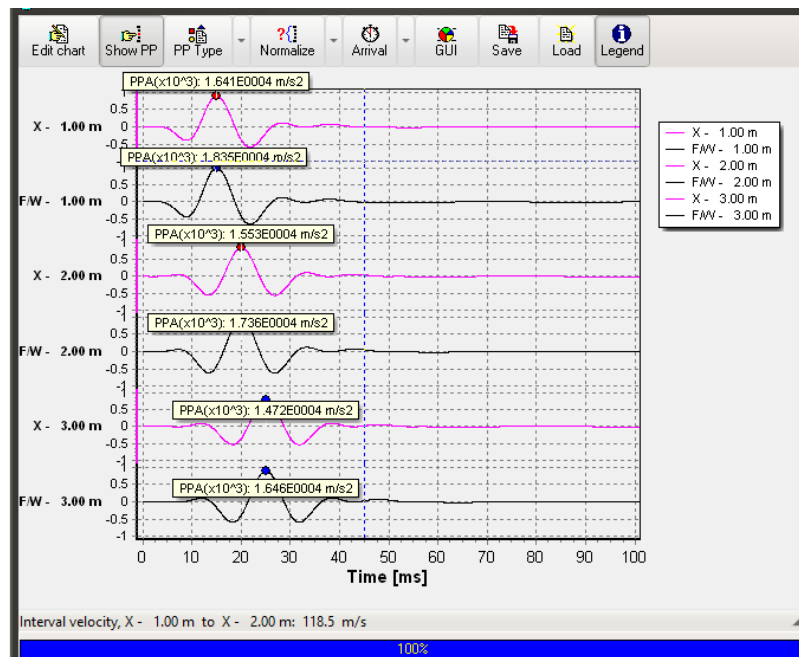


Figure 30: Illustration of PPA Values for Captured Triaxial Data. In addition, the interval velocity between depths 1.0 m and 2.0 m is shown

As shown in Figures 28 - 30, immediately above the display there are 9 buttons to assist the user in working with this display. The function of these buttons can be described as follows:

- Edit Chart: to allow for chart formatting, printing, and exporting;
- Show PP: to enable and disable the display of peak particle values;
- PP Type: to select whether the acceleration, velocity or displacement values of the time series data are displayed;

- Normalize: to allow either local or global normalization of the data;
- Arrival: to define select the axis component (i.e., X, Y, Z or full waveform) from which the relative arrival time will be calculated;
- GUI: to open the graphical interface box shown in Figure 25;
- Save: to save the latest defined chart settings;
- Load: to enable the latest defined chart settings;
- Legend: to enable and disable the display of chart legend.

4.4 3D Display

The *3D Display* option allows the user to display the time series data for the X-component, Y-component, or Z-component at various depths into a 3D display. In this software option the user selects first the axis and then the files to be displayed as previously described for the *VSP Display* options. Figure 31 illustrates a typical *3D Display* where the time series data for the X-component are displayed

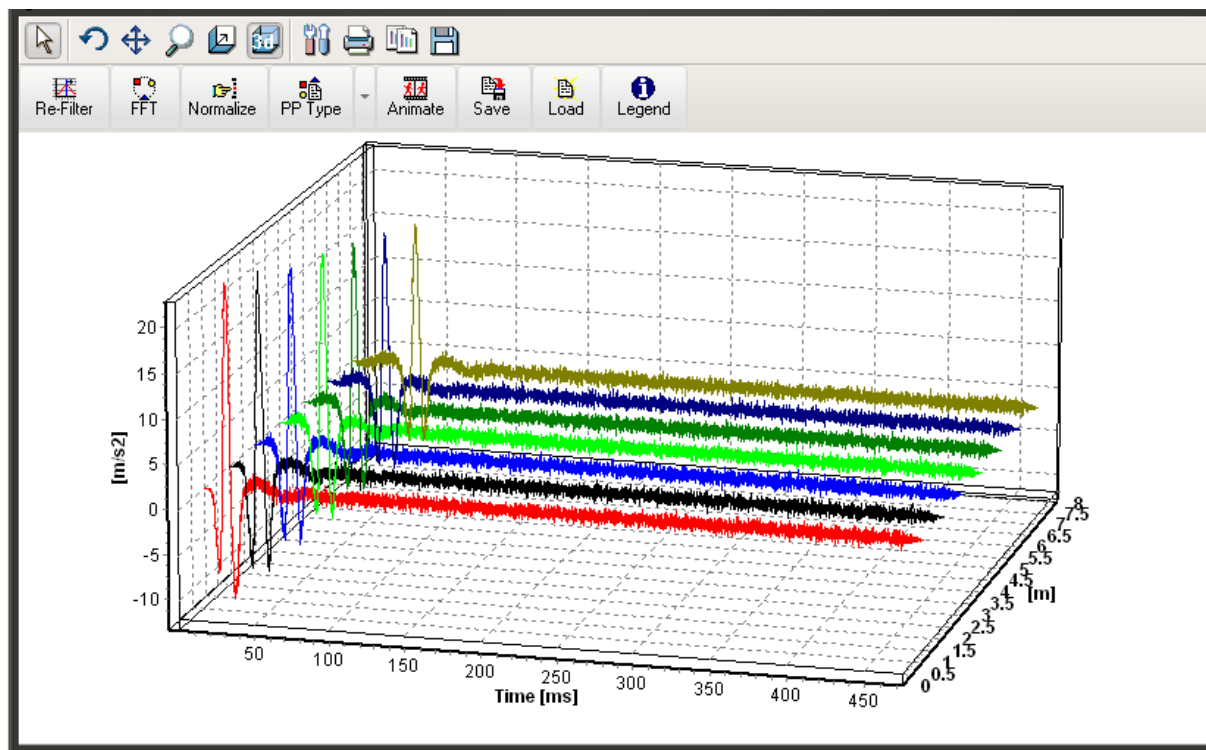


Figure 31: Typical 3D Display (data unfiltered)

These graphs (in the time and frequency domains) can illustrate very well how the earth acts as a low-pass filter as the seismic source wave travels deeper into the soil stratigraphy, a phenomenon directly related to the absorption (Q value) of the soil profile.

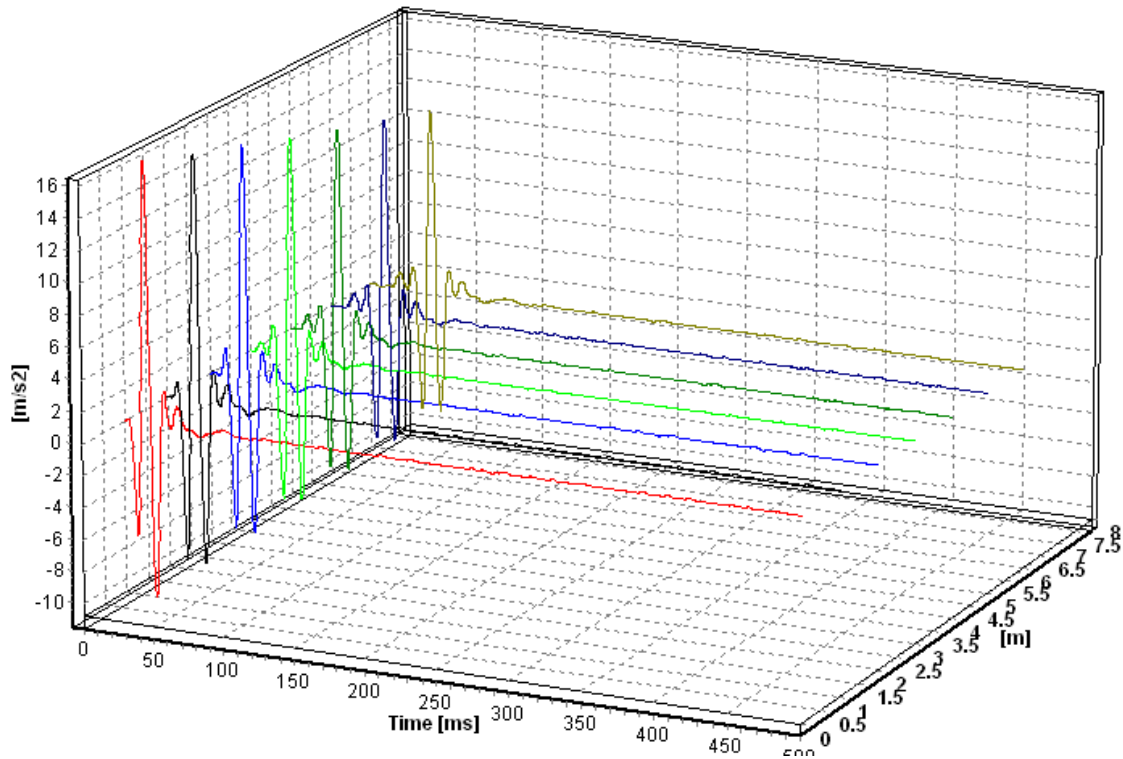


Figure 33: Typical 3D Display (same data as in Figure 31, but now filtered and chart copied to clipboard as described below)

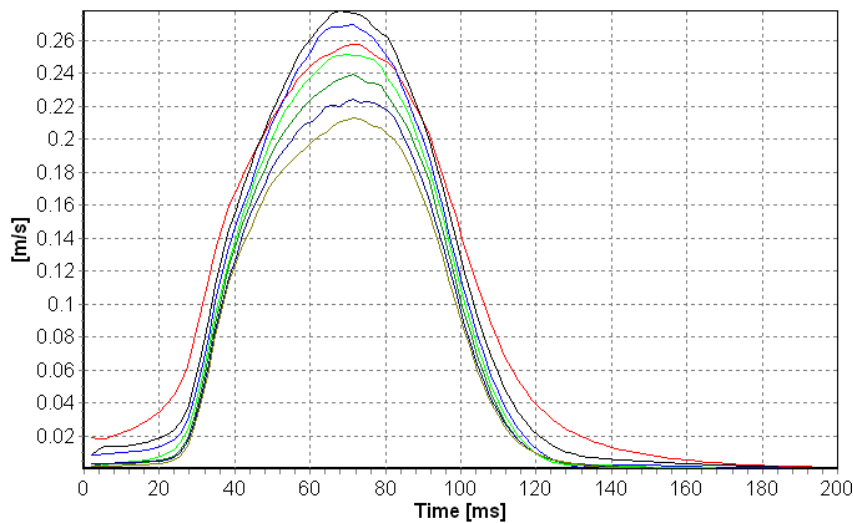












Figure 32: 2D display of the FFT results of the filtered data shown in Figure 32


As shown in Figure 31, immediately above the display there are 8 buttons to assist the user in working with this display. The function of these buttons can be described as follows:

- Re-Filter: the Filter Parameter Specification Window as shown in Figure 15 appears, to allow specification of four different types of filters as well as the start time;
- FFT: to derive and display the smoothed Fast Fourier Transform (FFT) of selected (filtered or unfiltered) time series data;
- Normalize: to allow normalization of the data;
- PP Type: to select whether the acceleration, velocity or displacement values of the time series data are displayed;
- Animate: to start or stop rotation of the display;
- Save: to save the latest defined chart settings;
- Load: to enable the latest defined chart settings;
- Legend: to enable and disable the display of chart legend.

Above these 8 buttons there is another toolbar with 10 options that allow the user to perform the following:

- : drag the data series with the left mouse button down to zoom, and with the right mouse button down to scroll;
- : drag the chart to rotate;
- : drag the chart to move;
- : drag the chart to zoom;
- : drag the chart to adjust the depth;
- : click to toggle between a 2D and 3D display of the data;
- : click to allow for display formatting, printing and exporting;
- : click to allow for display printing;
- : click to copy the display to the clipboard;
- : click to save the display as a TeeChart Pro file.

Chapter 5 Chart Formatting, Exporting, and Printing

The graphical edit button  displayed in various screens allows for chart formatting, printing, and exporting. Figure 34 illustrates the graphical interface that appears when this button is selected, which allows for extensive modification of the displayed data and chart attributes. In addition the data can be printed by selecting the *Print* tab, which brings up the *Chart Printing Dialog Box* as shown in Figure 35. Finally, this utility has an extensive electronic Help function, which is accessed through the *Help* button at the bottom left of the screen.

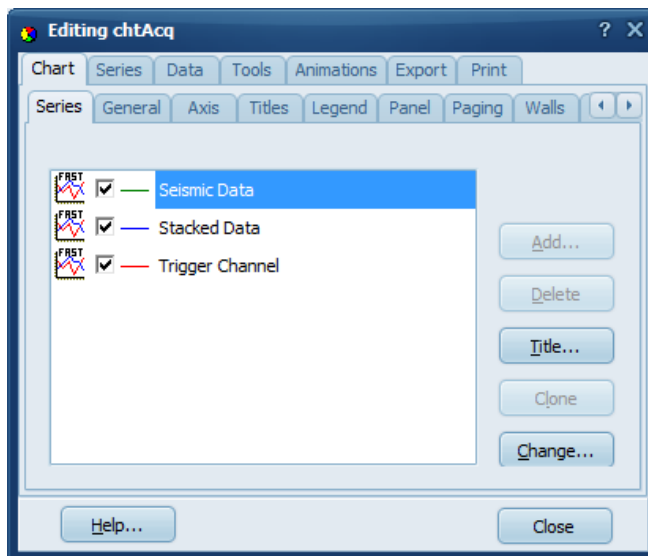


Figure 34: Chart Editing Dialog Box

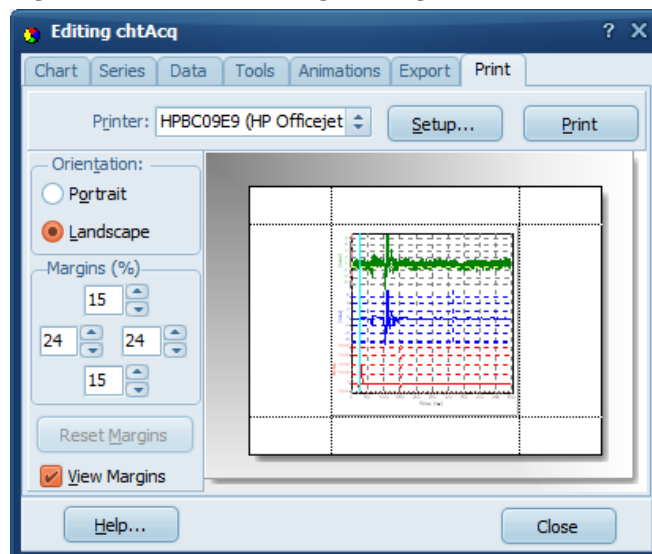


Figure 35: Chart Printing Dialog Box

Chapter 6 References

- [1] E. Baziw and I. Weir-Jones, “Application of Kalman filtering techniques for microseismic event detection”, *Pure Appl. Geophys.*, vol. 159, pp. 449-473, Jan. 2002.
- [2] E. Baziw, B. Nedilko, and I. Weir-Jones, “Microseismic event detection Kalman filter: derivation of the noise covariance matrix and automated first break determination for accurate source location estimation”, *Pure Appl. Geophys.*, vol. 161, pp. 303-329, Feb. 2004.
- [3] E. Baziw, "Real Time Seismic Signal Enhancement Utilizing a Hybrid Rao Blackwellised Particle Filter and Hidden Markov Model Filter", *IEEE Geosci. Remote Sensing Letters*, vol. 2, no. 4, pp. 418- 422, Oct. 2005.
- [4] E. Baziw and G. Verbeek, “Passive (Micro-) Seismic Event Detection by Identifying Embedded “event” Anomalies within Statistically Describable Background Noise”, *Pure Appl. Geophys.*, vol. 169, issue 12, pp. 2107-2126, Dec. 2012.

Appendix 1 E. Baziw and G. Verbeek, “Passive (Micro-) Seismic Event Detection by Identifying Embedded “event” Anomalies within Statistically Describable Background Noise”, *Pure Appl. Geophys.*, vol. 169, issue 12, pp. 2107-2126, Dec. 2012.



Appendix 2 E. Baziw, "Real Time Seismic Signal Enhancement Utilizing a Hybrid Rao Blackwellised Particle Filter and Hidden Markov Model Filter", *IEEE Geosci. Remote Sensing Letters*, vol. 2, no. 4, pp. 418-422, Oct. 2005.



Appendix 3 BCE technical note entitled “Passive (Micro-) Seismic Event Detection by identifying, quantifying and extracting frequency anomalies within statistically describable background noise”.



Appendix 4 SC3- μ Seis™ Installation Procedure

WARNINGS:


In order for SC3- μ Seis™ to function properly it is important that the all software (incl. the *InstaCal* software) is installed in the right sequence. Therefore do not connect the USB-1208HS A/D device until step 3.

The software should be installed as follows:


1. Download the software; navigate to sub-directory *InstaCal* and install *InstaCal* (select file *icalsetup.exe*).
2. After installation, reboot the computer.
3. Plug USB-1208HS A/D into USB port and execute program *InstaCal*. *InstaCal* insures that the USB A/D device is recognized by the Windows® operating system and allows for configuration and calibration. Verify that the USB-1208HS device is configured as Board #0 as illustrated below.



If not, select the USB-1208HS A/D device and right mouse click and select the *Change Board #* as shown below.

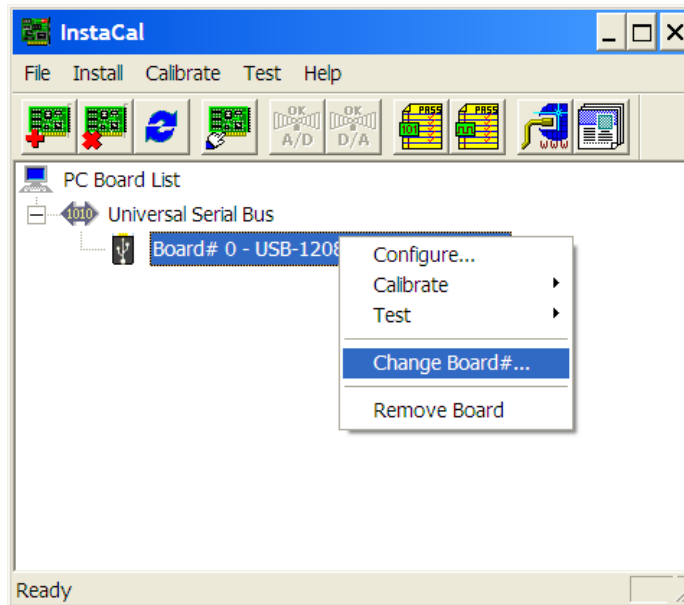


4. Configure the USB-1208HS A/D device as *Single Ended* by selecting the *Configure* option shown above and selecting *8 Single Ended* as illustrated below.

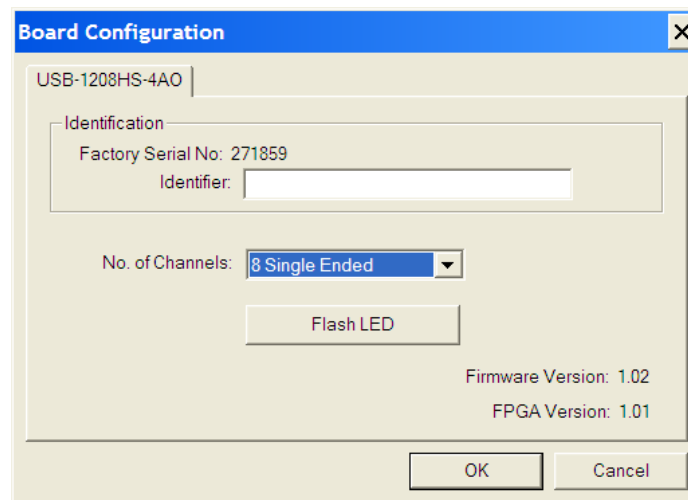


5. Navigate to sub-directory *SC3-uSeis*. Execute program *setup.exe*.
6. Execute program *sc3Useis.exe* as an Administrator.

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software


- When the screen below appears – leave “Launch the program” checked. This will allow for the CrypKey drivers to be automatically installed.

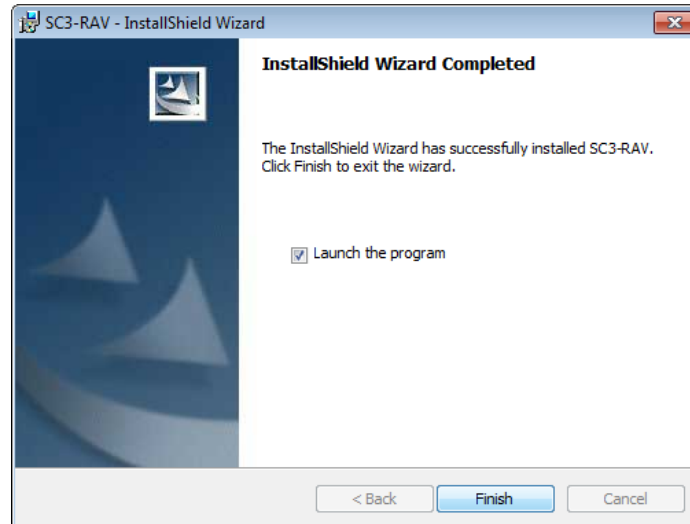

Upon Installation of the CrypKey drivers the screen below appears.

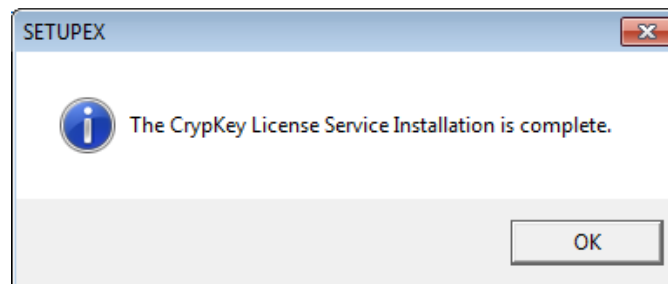

- Run SC3- μ Seis™ as an administrator. On the first execution of SC3- μ Seis™ the interface below appears. Email (cut and paste) BCE the Site Code (e.g., “8B3C 7C73 13DE FAF5 8A”). BCE email will then email the required Site Key for validation.

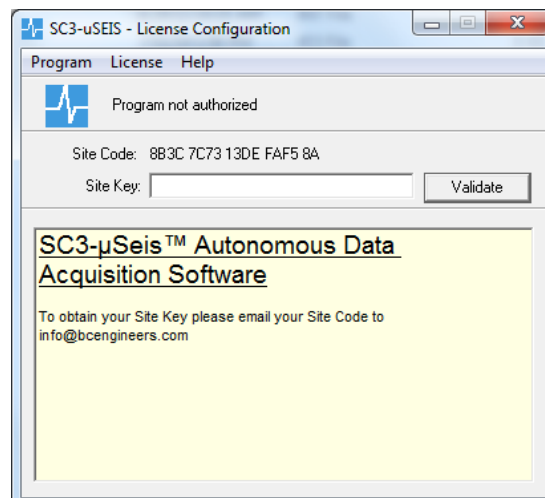


Appendix 5 SC3- μ SeisTM Trouble Shooting

There may be instances where the USB A/D device is reporting errors during data acquisition. This issue is most commonly addressed by resetting the USB A/D. The resetting of the USB A/D device is implemented by simply unplugging the USB A/D cable from the computer and then reconnecting the USB A/B cable back into the computer.

If this doesn't work then the following procedure should be followed:

1. Reboot the laptop.
2. Execute instacal.
3. Make sure the 2 settings outlined in Appendix 1 are set (Board is configured a #0 and set as 8 single ended).
4. Test A/D (TEST -> Digital) (Press TEST).

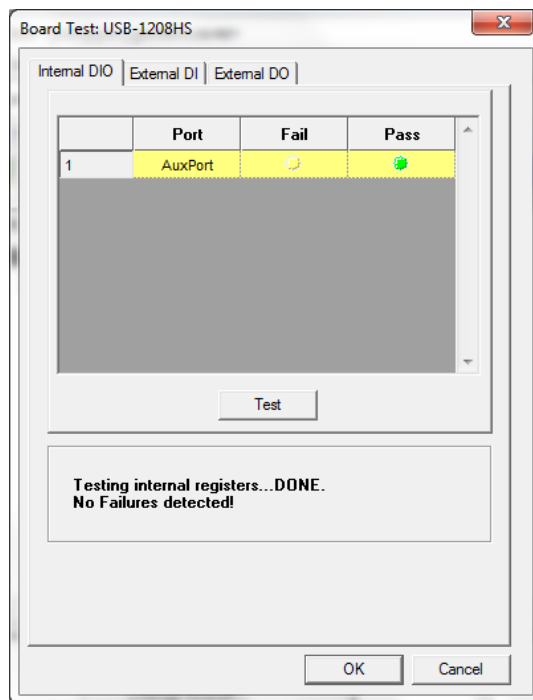

5. Re-run *SC3- μ Seis*TM.

Appendix 6 SC3- μ Seis™ License Transfer Procedure

This type of operation transfers a license from an existing authorized copy of an application on one computer to an unauthorized copy of the product on a second computer.


The transfer process does not jeopardize your license in any way and is completely secure because the USB Flash Drive is registered to a specific PC in a specific location. This ensures the license can only be transferred to the target PC you specify.

Please note where the software shows “floppy drive” a USB flash drive can be used as the medium instead.

Example


You want to transfer the license for the *Calculator* example program from PC-1 to PC-2.

1. Ensure that you have an authorized copy of the application on PC-1, an unauthorized copy of the application on PC-2, and a USB Flash Drive inserted into PC-2.
2. Your first operation is on the *unauthorized* computer (i.e., PC-2). Start the program on PC-2. As soon as the splash screen appears hit to space bar to open the License Configuration window shown below:

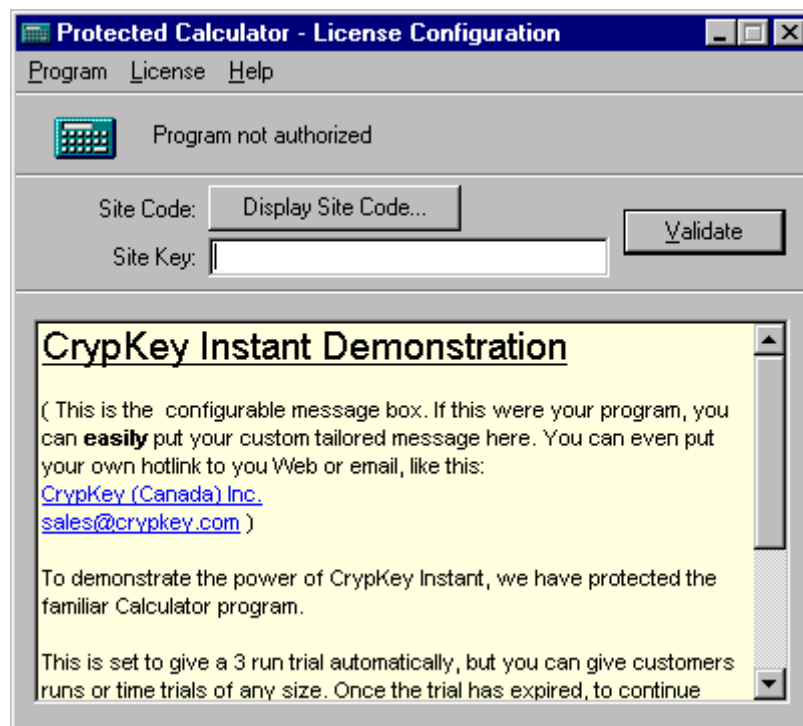


BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

3. Click the **License** option to display the **Transfer in from another computer** command, as shown below:

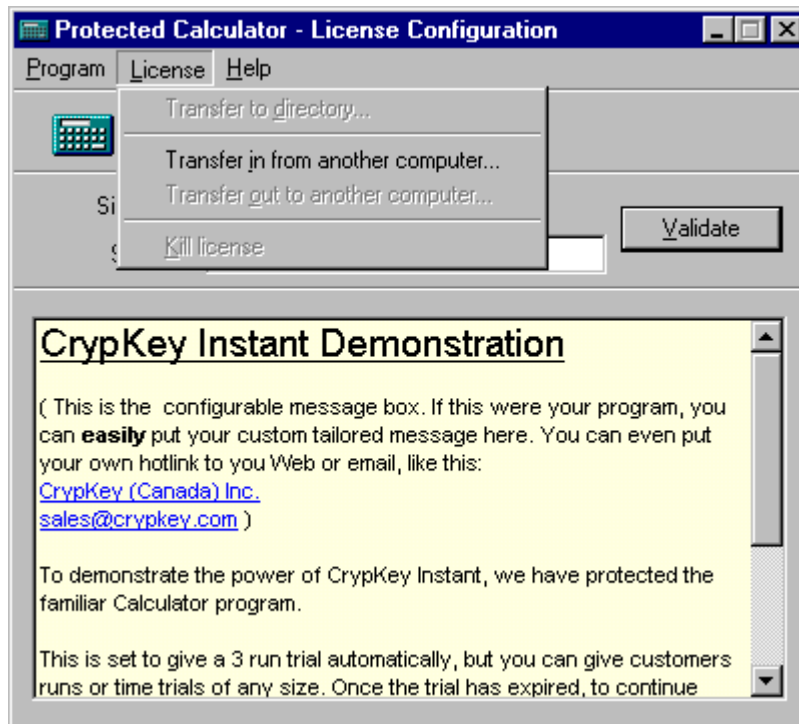


The system then displays the following window:

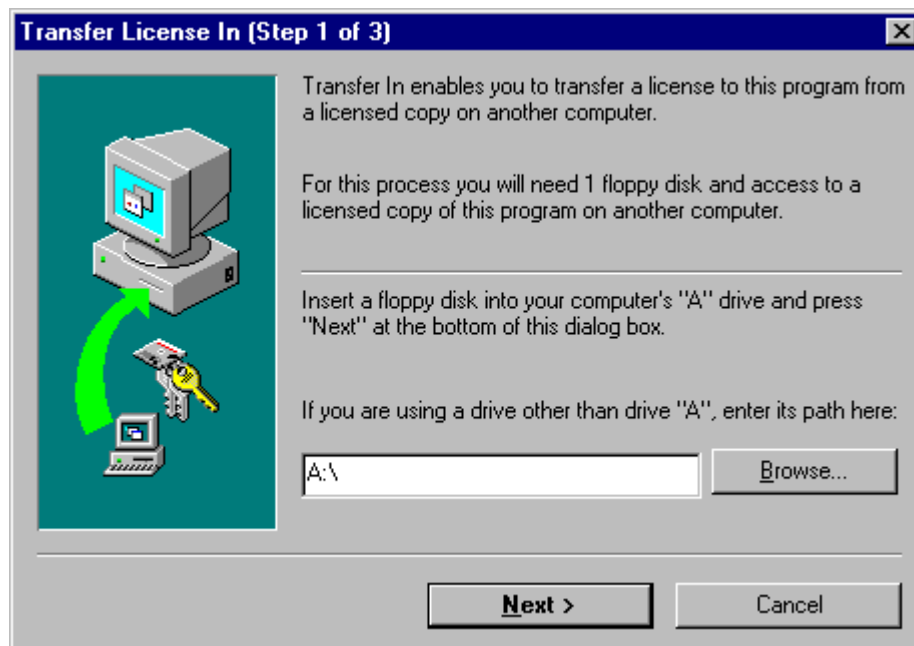


BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

4. Use the **Browse** button if necessary to supply the USB Flash Drive path, then click **Next**. The program imprints its registration on the USB Flash Drive and the system displays the following window:

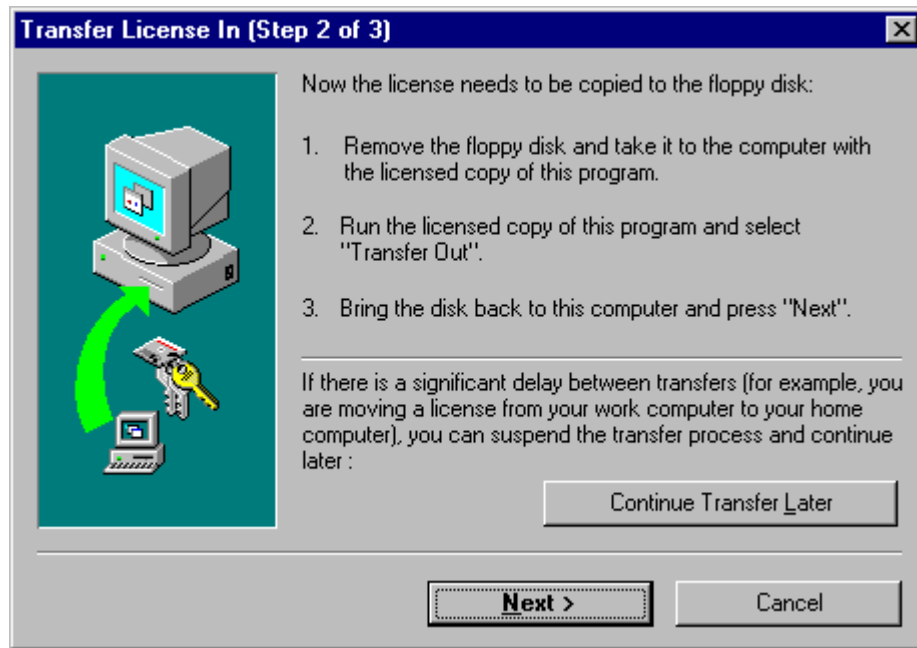

5. If you need to close the PC-2 program while you work with the PC-1 program, click the **Continue Transfer Later** button in the above window. The system displays the following popup message:

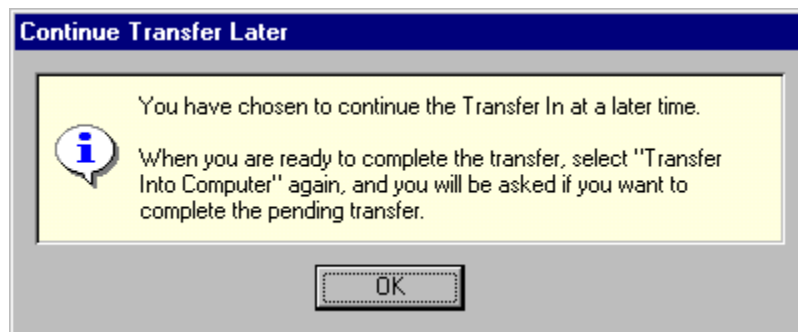


6. Click **OK** to acknowledge the above popup.
7. Remove the USB Flash Drive from PC 2, and insert it into PC 1.

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software


8. Start the program on PC 1 and press the space bar as soon as the BCE flash screen appears.



9. By doing this the License Configuration screen will open. Click the **License** button and select **Transfer out to another computer** as shown below:

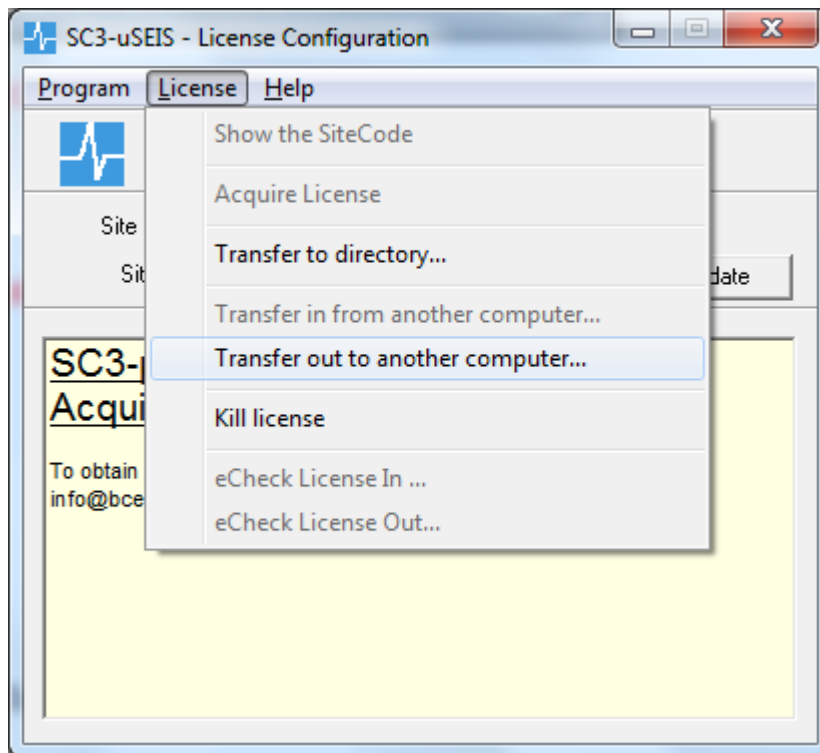

10. The system displays the following window:

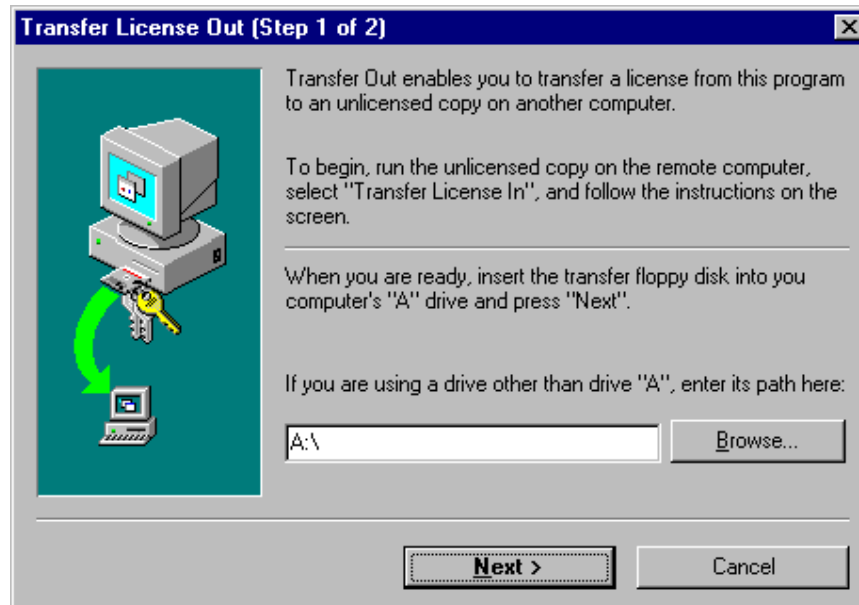


10. In the above window, use the **Browse** button if necessary to supply the USB Flash Drive path, then click **Next**. The program reads the registration imprint file and then writes a matching file to the USB Flash Drive, decrementing the license count at the source or discontinuing it (if it is a single user license).

11. Remove the USB Flash Drive from PC-1, and return it to PC 2.


12. Resume the program on PC-2.

- If you did **not** exit from the program in Step 5, proceed to **Step 14**.
- If you exited the program in Step 5, the following window appears when you start the program again:

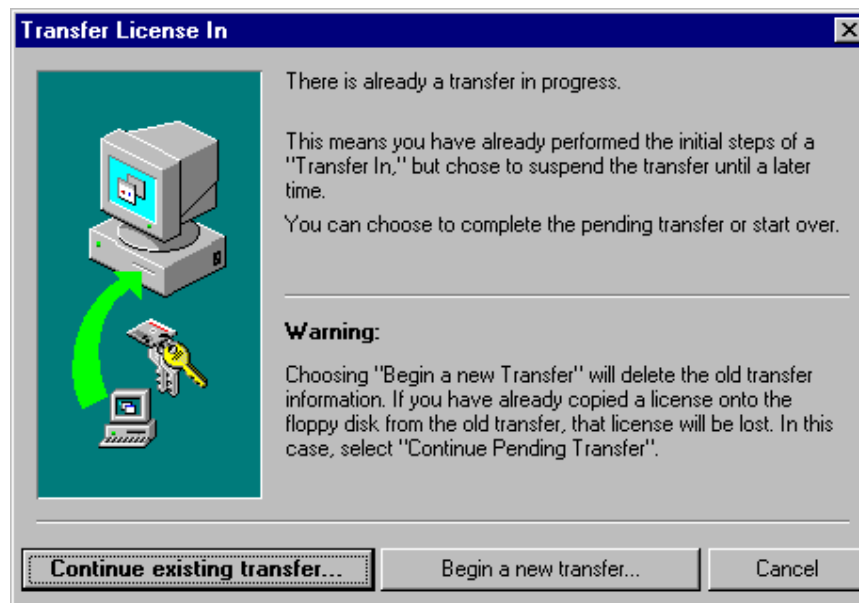


BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

13. The above window simply advises you that you have previously initiated a license transfer. To continue this operation, click **Continue existing transfer** in the above window. The following window is displayed:

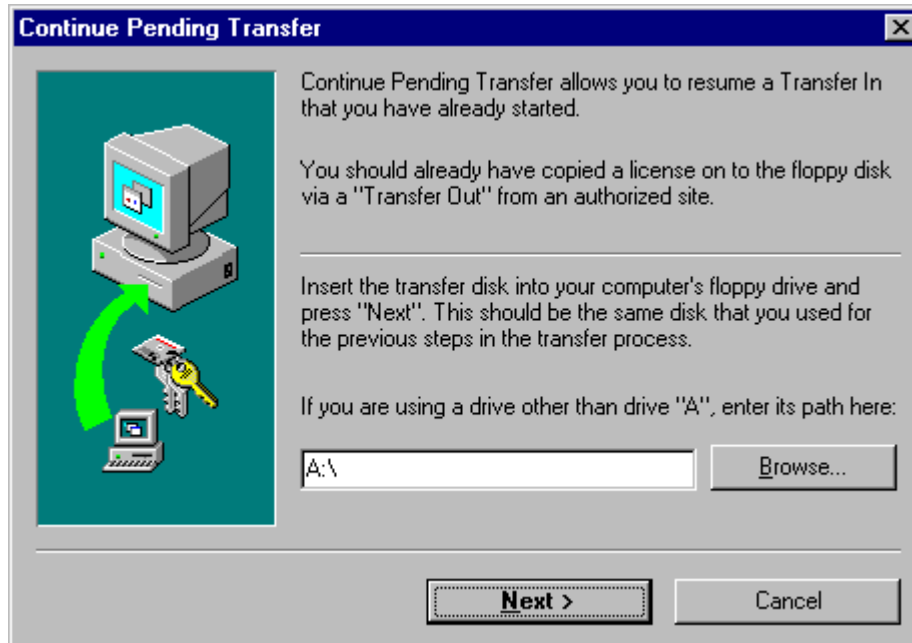

14. If you did **not** exit the program on PC-2, the program window appears as follows:

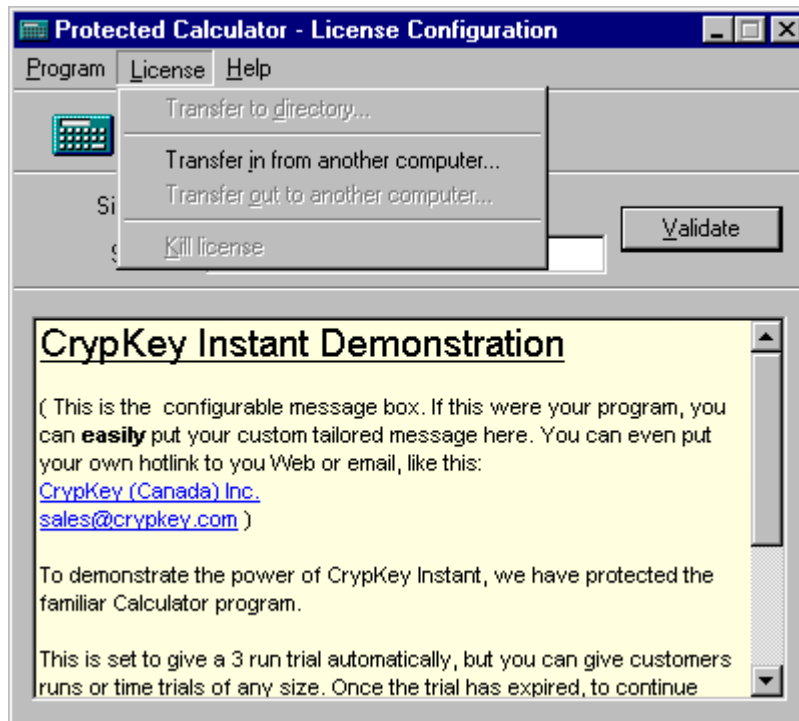

In the above window, click **Transfer Into Computer** to complete the transfer. The system displays the Continue Pending Transfer window, shown in **Error! Reference source not found.9**.

BCE SC3- μ Seis™ 2014 Seismic Data Acquisition Software

15. Click **Next** in the Continue Pending Transfer window. The following window appears, indicating that the transfer is complete:



16. Click **Finish**. The License Configuration window on PC-2 appears, showing that you are authorized to use it.