 


AKAI



- ❖ 2- MANUEL D'UTILISATION
- ❖ 16- USER MANUAL
- ❖ 30- HANDLEIDING
- ❖ 44- BEDIENUNGSANLEITUNG

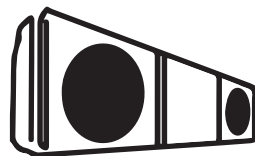

TB340-47

Lire attentivement la notice avant d'utiliser l'appareil
Before operating this product, please read user manual completely
Lees de handleiding voordat u deze apparaat
Lesen Sie die Bedienungsanleitung bevor Sie das Gerät gebrauchen.

Contenu **FR**

Avant de commencer	2
Importateur exclusif	2
Consignes importantes de sécurité	3
SECURITE	3
PRUDENCE	4
Mise en place et Instructions de montage	5
Mise en place	5
Montage mural	6
Description de l'appareil	7
Description de la télécommande	8
Préparation de la télécommande	8
Remplacement de la batterie de la télécommande	9
Connexions & Branchements	9
ENTREE OPTIQUE	9
ENTREE AUXILIAIRE	9
PRISE MP3 LINK	10
Connexion à l'alimentation	10
Fonctionnement de base	11
Mise en marche/ Mise en veille	11
Sélection de la source	11
Réglage du volume	11
Égaliseur	11
Fonctionnement AUX/MP3 LINK /OPTIQUE	12
Fonction BLUETOOTH	12
Écouter de la musique à partir du périphérique Bluetooth	13
Guide de dépannage	13
Spécifications techniques	14
Accessoires	14
Mise au rebut en fin de vie	15

Contents **GB**

Before we begin	16
Exclusive Importer	16
Important Safety Instructions	17
Safety	17
Warning	18
Placement and Mounting	19
Placement	19
Wall Mounting	20
Identifying the Parts	21
Remote Control	22
Prepare the Remote Control	22
Replace the Remote Control Battery	23
Connections	23
Use the OPTICAL Socket	23
Use the AUX Socket	23
Use the MP3 Link Socket	24
Connect Power	24
Basic Operation	25
Standby/ON	25
Select Modes	25
Adjust the Volume	25
Select a Preset Sound Effect	25
Aux/Mp3 Link/Optical Operation	26
Play with Bluetooth Device	26
Pair Bluetooth-enabled Devices	26
Listen to Music from Bluetooth Device	27
Troubleshooting	27
Specifications	28
Standard Accessories	28
End of Life Disposal	29

Inhoud NL

VOORDAT WE BEGINNEN	30
EXCLUSIEF IMPORTEUR	30
Belangrijke veiligheidsinstructies	31
SECURITE	31
Voorzichtigheid	32
Plaatsing en montage	33
Plaatsing	33
Wandmontage	34
De onderdelen identificeren	35
Afstandsbediening	36
De afstandsbediening voorbereiden	36
De batterij van de afstandsbediening vervangen	37
Aansluitingen	37
De OPTISCH-aansluiting gebruiken	37
De AUX-aansluiting gebruiken	37
De MP3 Link-aansluiting gebruiken	38
De voeding aansluiten	38
Basisbediening	39
Stand-by/AAN	39
Standen selecteren	39
Het volume regelen	39
Een vooraf ingesteld geluidseffect selecteren	39
Werken met Aux/Mp3 Koppeling/Optical	40
Afspelen met Bluetooth-apparaat	40
Bluetooth-apparaten koppelen	40
Muziek van het Bluetooth-apparaat beluisteren	41
Problemen oplossen	41
Specifications	42
Accessoires	42
Afvoer einde levensduur	43

Inhalt DE

BEVOR WIR BEGINNEN	44
EXKLUSIVER IMPORTEUR	44
WARNHINWEISE	45
SICHERHEITSHINWEISE	45
WARNUNGEN	46
Implementierung und Installationsanleitung	47
Implementierung	47
Wandmontage	48
AUFBAU DES GERÄTS UND BEDIENELEMENTEN	49
Afstandsbediening	50
Vorbereiten der Fernbedienung	50
Ersetzen die Batterie der Fernbedienung	51
Verbindungen und Anschlüsse	51
OPTICAL EINGANG	51
AUX IN	51
MP3 / LINK-Buchse	52
Anschließen der Stromversorgung	52
Grundsätzliche Bedienung	53
Einschalten / Standby	53
Wählen Sie die Quelle	53
Stellen Sie die Lautstärke	53
Ausgleich	53
Betrieb AUX/MP3 LINK / OPTICAL	54
Bluetooth Betrieb	54
Anmerkungen	54
Hören Sie Musik von Bluetooth-Gerät	55
Fehlerbehebung	55
Technische Spezifikationen	56
Standard-Zubehör	56
Entsorgung	57

Before we begin

Thank you for purchasing the **AKAI TB340-47 a BT sound bar with FM radio and USB port.**



This is your assurance of quality, performance and value. This product was manufactured using the highest quality components and standards of workmanship. Our engineers have included many useful and convenient features in this product. Please be sure to read this instruction Manual completely to make sure you are getting the maximum benefit from each feature. It was tested by inspectors and found to be in perfect working order before it left our factory. If, after reading this manual, you experience any problems with the operation of this product, please refer to the instructions for obtaining services at the end of this Manual.

For future reference, record the serial number in the space provided.

Model No: **AKAI TB340-47**

Serial Number: _____

Important Safety Instructions

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Safety

- Read these instructions** - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions** - The safety and operating instructions should be retained for future reference.
- Heed all warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions** - All operating and use instructions should be followed.
- Do not use this apparatus near water** - The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool and the like.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
-  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
-  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

GB

Important Safety Instructions

Caution:

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
 - To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
 - The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
 - Danger of explosion if battery is incorrectly replaced.
 - Replace only with the same or equivalent type.
- 8 Do not attempt to clean the unit with chemical solvents as this might damage the finish. Use a clean, dry or slightly damp cloth.
 - 9 When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
 - 10 No naked flame sources, such as lighted candles, should be placed on the apparatus.
 - 11 Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The marking label is pasted on the back or the underside of the equipment.

Warning

- 1 The battery (battery or batteries or battery pack) must not be exposed to excessive heat such as sunshine, fire or the like.
- 2 Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- 3 The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc. Make sure there is at least 20 cm of space above and at least 5cm of space on each side of the unit.
- 4 Do not place this unit close to strong magnetic fields.
- 5 Do not place the unit on the amplifier or receiver.
- 6 Do not place this unit close to damp areas as the moisture will affect the life of the laser head.
- 7 Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.



 
 
DO NOT INGEST BATTERY,CHEMICAL BURN HAZARD

The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Placement and Mounting

Placement

- A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

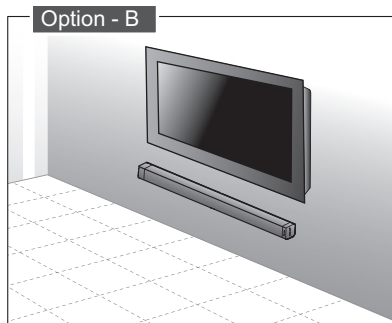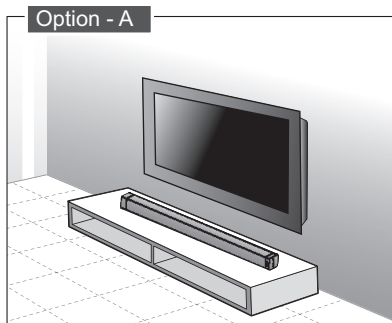

GB

 
Wall Mounting (if using option-B)

Note:


- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the unit and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

Placement and Mounting


- 1** Remove the screws from the main unit.

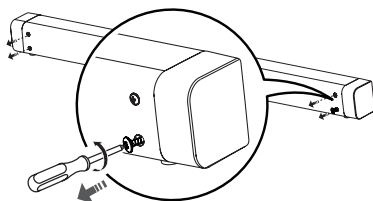

 
- 2** Attach the wall brackets to the main unit with the screws removed from the main unit.

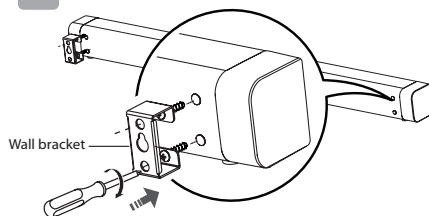


 
- 3** Drill 2 parallel holes (Ø 3-8 mm each according to wall type) in the wall. The distance between the holes should be 979 mm.

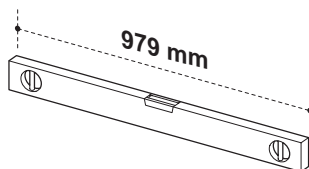

 - 4** Firmly fix 1 dowel into each hole in the wall if necessary.

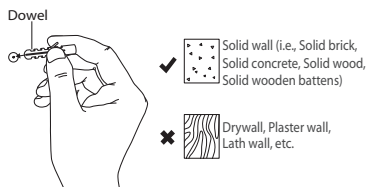

  - 5** Leave a 5 mm gap between the wall and the screw's head. Lift the unit with the attached wall brackets over the heads of the screws and slot into place.

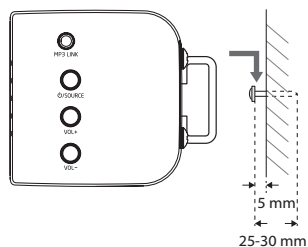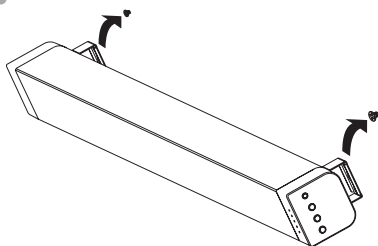

Identifying the Parts

Main Unit



1 Speakers

2 Remote Control Sensor

3 LED Indicators

• POWER:

In STANDBY mode: Light up red.

• AUX/MP3 LINK

In AUX mode: Light turn on.

In MP3 LINK mode: Light flash.

• OPTICAL:

Sound output available: Light turn on.

Sound output unavailable: Light flash.

• BT (Bluetooth):

Bluetooth playing mode: Light turn on.

Bluetooth pairing mode: Light flash.

• MOVIE/MUSIC:

In MOVIE mode: Light turn on.

In MUSIC mode: Light flash.

In FLAT mode: Light turn off.

4 MP3 LINK Socket

Connect to an external audio device.

5 ⏻/SOURCE

Press this button to turn ON or press and hold to Standby mode.

Select the play function.

6 VOL+/VOL-

Increase/decrease the volume level.

7 OPTICAL Socket

 
Connect to an external audio device.

8 AUX (L/R) Socket


Connect to an external audio device.

9 Power Cord


Front View

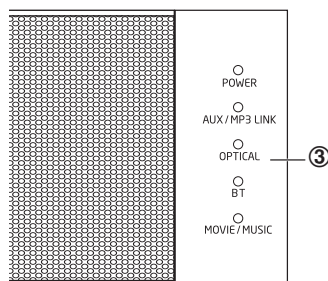

Side View

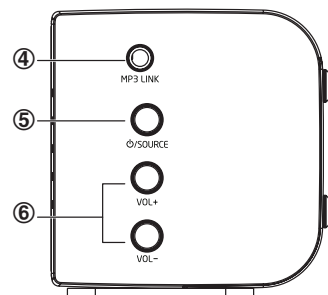 

Rear View

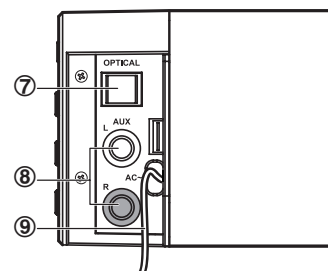 

GB

Remote Control

1

Switch the unit between ON and STANDBY mode.

2 **SOURCE**

Switches the modes.

3 **VOL+/VOL-**

Adjust the volume.

4

In Bluetooth mode, skip to previous/next audio file.

5

In Bluetooth mode, start or pause playback.

6 **PAIR**

 
Activate the pairing function in Bluetooth mode and disconnect the existing paired Bluetooth device.

7 **MUTE**

Mute or resume the sound.

8 **EQ**

Select a preset sound effect.

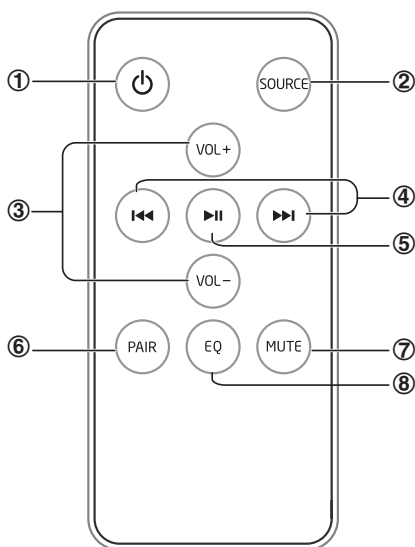


Prepare the Remote Control

The provided Remote Control allows the unit to be operated from a distance.

- Even if the Remote Control is operated within the effective range (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.


First-time use:

 The unit has a pre-installed lithium **CR2025** battery. Remove the protective tab to activate the remote control battery.

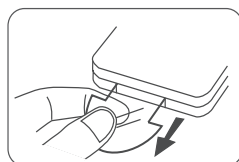

Replace the Remote Control Battery

 - 1 Pull out the battery tray and remove the old battery.
- 2 Place a new **CR2025** battery into the battery tray with correct polarity (+/-) as indicated.
- 3 Insert the battery tray back into the slot.

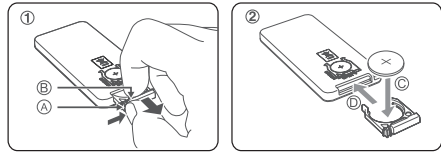

Precautions Concerning Batteries

 
- 1 When the Remote Control is not to be used for a long time (more than a month), remove the battery from the Remote Control to prevent it from leaking.
- 2 If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- 3 Do not use any batteries other than those specified.
- 4 Do not heat or disassemble batteries.
Never throw them in fire or water.
- 5 Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- 6 Never recharge a battery unless it is confirmed to be a rechargeable type.

GB

Connections

Use the OPTICAL Socket

- Remove the protective cap of the **OPTICAL** socket, then connect an OPTICAL cable (not supplied) to the TV's OPTICAL OUT socket and the OPTICAL socket on the unit.

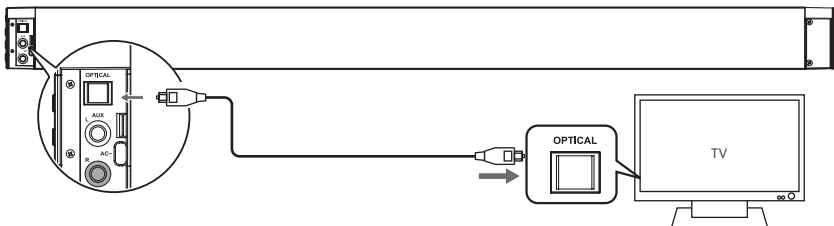


Tip: If there is no sound come out of the soundbar and the indicator light flash fast. Make sure the audio setting of your source player (e.g. DVD player, game player, TV) is set to PCM with optical output.


Use the AUX Socket

- A. Use a RCA to RCA audio cable (supplied) to connect the TV's audio output sockets to the **AUX (R/L)** socket on the unit.

 Connections

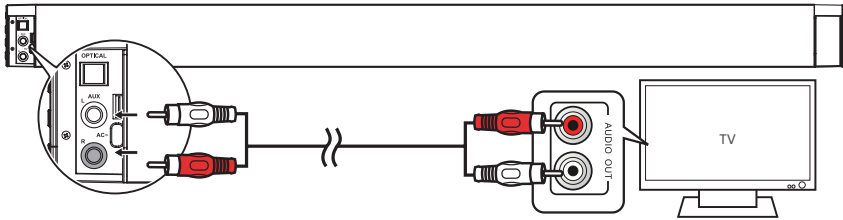

 - B. Use a RCA to 3.5mm audio cable (not supplied) to connect the TV's headphone socket to the **AUX (R/L)** socket on the unit.

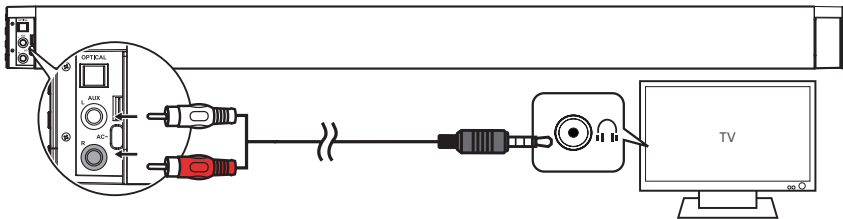


Use the MP3 Link Socket

- Use a 3.5mm to 3.5mm audio cable (supplied) to connect the external audio device headphone socket to the **MP3 LINK** socket on the unit.



Connect Power

 - **Before connecting the AC power cord, ensure you have completed all other connections.**
- **Risk of product damage!** Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Connect the mains plug of the main unit to a mains socket.

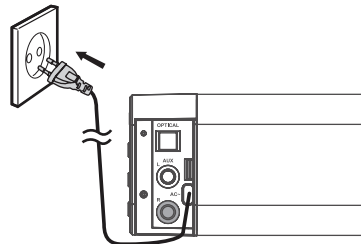

Basic Operation

Standby/ON

When you first connect the main unit to the mains socket, the main unit will be in Standby mode. The **POWER** Indicator will light up red.

- Press the **⏻**/**SOURCE** button on the main unit or the **⏻** button on the remote control to switch the main unit on. The status indicator of the last used mode will light up.
- Press and hold the **⏻**/**SOURCE** button on the main unit or press the **⏻** button on the remote control to switch the main unit back to Standby mode. The **POWER** Indicator will light up red.
- Disconnect the mains plug from the mains socket if you want to switch the unit off completely.
- When the unit volume is close to mute or is idle for approximately 15 minutes, it will automatically switch to Standby mode.

Select Modes

Press the **⏻**/**SOURCE** button on the main unit or the **SOURCE** button on the remote control repeatedly to switch between **AUX**, **MP3 LINK**, **OPTICAL** and **BLUETOOTH** mode.

- When **AUX** mode is selected, the **AUX/MP3 LINK** Indicator will light up steadily.
- When **MP3 LINK** mode is selected, the **AUX/MP3 LINK** Indicator will flash.

Adjust the Volume


- Press the **VOL +/-** button to adjust the volume.
- If you wish to turn the sound off, press the **MUTE** button on the remote control. Press the **MUTE** Button again or press the **VOL +/-** button to resume normal listening.
- While adjusting the volume, the status indicator flashes quickly.
- While the volume level reaches its maximum level, if you press the **VOL +** button again, the status indicator flashes once. While the volume level reaches its minimum level, if you press the **VOL -** button again, the status indicator flashes once.

Select a Preset Sound Effect

While playing, press the **EQ** button on the remote control to select between preset equalisers: Movie (recommended for viewing movies), Music (recommended for listening to music) and default setting (EQ mode off).

- When Movie **EQ** is selected, the **MOVIE/MUSIC** Indicator will light up steadily.
- When Music **EQ** is selected, the **MOVIE/MUSIC** Indicator will flash.
- When **EQ** mode is off, the **MOVIE/MUSIC** Indicator will turn off.
- While using the **OPTICAL** or **AUX** connection, Movie **EQ** will be automatically selected.
- While using the **MP3 LINK** connection or in **BLUETOOTH** operation, Music **EQ** will be automatically selected.

Aux/Mp3 Link/Optical Operation

- 1 Ensure that the unit is connected to the TV or audio device.
- 2 While in ON mode, press the /SOURCE button repeatedly on the main unit or the **SOURCE** button on the remote control to select **AUX** or **MP3 LINK** or **OPTICAL** Mode.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL +/-** button to adjust the volume to your desired level.

 
Play with Bluetooth Device

You can listen to tracks from a media device if connected to the unit via Bluetooth.

Pair Bluetooth-enabled Devices

The first time you connect your Bluetooth device to this player, you need to pair your device to this player.

Note:

- The operational range between this player and a Bluetooth device is approximately 8 meters (without any object between the Bluetooth device and the unit).
 - Before you connect a Bluetooth device to this unit, ensure you know the device's capabilities.
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
 - If the signal strength is weak, your Bluetooth receiver may disconnect, but it will re-enter pairing mode automatically.
- 1 During ON mode, press the /SOURCE button repeatedly on the unit or the **SOURCE** button on the remote control to select **Bluetooth** mode. The BT indicator will flash slowly.
 - 2 The system has entered pairing mode.
 - Or press the **PAIR** button on the remote control to be searchable. The BT indicator will flash rapidly.
 - 3 Activate your Bluetooth device and select the search mode. "**TB340-47**" will appear on your Bluetooth device list.
 - 4 Select "**TB340-47**" in the pairing list. The BT indicator will light up solidly while the pairing succeeds.
 - 5 To disconnect the Bluetooth function, switch to another function on the unit or disable the function from your Bluetooth device.

Tips:

- 1 Enter 0000 for the password if necessary.
- 2 If there is an existing connection, press the **PAIR** button on the remote control to re-activate the pairing mode, the connection will be interrupted.
- 3 If no other Bluetooth device pairs with this player within two minutes, the player will recover its previous connection.
- 4 The player will also be disconnected when your device is moved beyond the operational range.
- 5 If you want to reconnect your device to this player, place it within the operational range.
- 6 If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected to the player.
- 7 If the connection is lost, follow the instructions above to pair your device to the player again.

Play with Bluetooth Device

Listen to Music from Bluetooth Device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
 - If the device also supports Audio Video Remote Control Profile (AVRCP), you can use the player's remote control to play music stored on the device.
1. Pair your device with the player.
 2. Play music via your device (if it supports A2DP).
 3. Use supplied remote control to control play (if it supports AVRCP).
 - To pause/resume play, press the ►|| button.
 - To skip to a track, press the ◀◀, ▶▶ buttons.

Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

No power

- Ensure that the AC cord of the apparatus is properly connected .
- Ensure that there is power at the AC outlet.
- Press standby button to turn the unit on.

Remote control does not work

- Before you press any SOURCE button, first select the correct source.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/-) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn the unit on again.

I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing

- Ensure the Bluetooth function is activated on your Bluetooth device.
- Ensure you have paired the unit with your Bluetooth device.

Specifications

General

Power requirements	AC220-240V~ 50/60Hz
Power consumption	20 W
Output power	100 W
Total harmonic distortion.....	1%(1kHz, 1W)
Audio input sensitivity	700mV
Frequency response	40Hz - 20KHz
Main unit(W x H x D)	1065 x 62 x 60 mm

Speakers

Total impedance	8 Ω
-----------------------	------------

Remote Control

Distance	6m
Angle	30°

Standard Accessories

Remote Control	x 1
Instruction Manual.....	x 1
RCA - RCA audio Cable	x 1
3.5mm - 3.5mm audio Cable	x 1
Wall bracket	x 2

- Design and specifications are subject to change without notice.

End of Life Disposal



Warning! This logo set on the product means that the recycling of this apparatus comes within the framework of the Directive 2002/96/CE of January 27, 2003 concerning the Waste of Electrical and Electronic Equipment (WEEE).

This symbol means that used electrical and electronic products should not be mixed with general household waste. There is a separate collection system for these products.

If you want to dispose of this equipment, please do not use the ordinary dust bin!

- The presence of dangerous substances in the electrical and electronic equipments can have potential consequences on the environment and human health in the cycle of reprocessing this product.
- Therefore, at the end of its lifetime, this product shall not be disposed with other non-recycled waste. Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.
- Local authorities and resellers have set special procedures for the purpose of collecting and recycling this product (please contact your local authority for further details). You have the obligation to use the selective waste collection systems put in place by your local authority.
- If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.
- By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.



**This unit complies with European Council Directive 2006 / 95 CE
(Electromagnetic Compatibility & Low Voltage Directives)**

GB