

# swissvoice

## BTouch

Cordless analogue telephone (DECT)



User manual

## Welcome to Swissvoice

The BTouch is a cordless phone for connection to the analog telephone network. International DECT (GAP)-standard digital technology offers excellent voice quality combined with a very high level of protection against eavesdropping.

You can operate up to 5 handsets on one base station and conduct internal calls between them free of charge.

Your BTouch supports CLIP (Calling Line Identification Presentation) provided the information is available on your connection and the caller's number has not been suppressed. Used in conjunction with the caller list, this provides you with information about calls even during your absence.

The integrated Bluetooth® function allows you to operate compatible headsets and mobile phones.

Your BTouch has a digital telephone answering machine which is easy to operate from the handset and base station.

Set aside some time to read this user manual carefully and get to know and use the wide range of functions offered by your BTouch.

## Contents

<b>Start-up</b>	<b>3</b>
Safety notes	3
Unpacking and assembling the telephone	3
Connecting the phone	5
Removing the cords	6
Putting the handset into operation	6
Displays, keys, symbols	8
The main menu	13
Automatic adjustment of range	13
Base station power consumption	13
Activating/deactivating the keypad lock	14
Calling all handsets (paging)	14
Adjusting the handset / loudspeaker volume	14
Microphone mute	14
<b>Bluetooth</b>	<b>15</b>
Explanation of terms	15
Pairing a Bluetooth device (only on the base station)	16
Paired devices	16
Active devices	17
Making calls using the headset	19
Calls over the mobile network (GSM)	20
Managing Bluetooth devices	20
<b>Telephoning</b>	<b>21</b>
Fixed network calls	21
Mobile network calls	21
Accepting a call from the mobile network during an active fixed network call	22
Accepting a call over the fixed network during an active mobile network call	22
Handset-to-handset calls	23
Hold mode	24
Internal enquiry call / call transfer	24
Brokering / conference calls	24
Brokering / conference calls	24
Last number redial	25
Phonebook	26
Copying phonebook entries from GSM phones to the phonebook	27
Call log	28
Voicebox	29
<b>Network operator functions</b>	<b>30</b>

<b>Telephone settings</b>	<b>30</b>
Changing the system PIN	30
Setting the display language	31
Setting the ringer volume	31
Setting the ringer tone	31
Setting alert tones (handset)	32
Setting the date and time	32
Setting the date/time format	32
Setting automatic keypad lock (handset)	32
Registering a handset (handset)	33
Deregistering a handset	33
Setting the dial mode	33
Setting the flash time	33
Setting the range	34
Programming the voicebox access number (base station)	34
Deactivating the "Message Waiting Indicator" / MWI	34
Resetting the handset or base station	34
<b>Answering machine</b>	<b>35</b>
General	35
Operating the answering machine from the base station	35
Switching the answering machine on or off	36
Editing announcements	36
Playing back/deleting messages	36
Recording a memo	37
Screening incoming messages on the base station	37
Setting the answering machine	37
Remote access / remote setting of the answering machine	38
<b>Appendix</b>	<b>40</b>
Important notes on using the battery	40
Table of available characters (phonebook entries)	41
Using Internet/cable telephone adapters on an analog port	41
Care	42
Recycling (environmental protection)	42
Disposing of the rechargeable battery	42
Warranty conditions	43
Approval and conformity	43

## Start-up

### Safety notes

- Place your telephone on a non-slip mat.
- Store the connection cable carefully to avoid accidents!
- Important notes on using the battery are given at the end of this User Guide.
- Do not position the handset or base station near heat sources, in direct sunlight or in the vicinity of other electrical equipment.
- Protect your telephone against dust and avoid getting it wet or exposing it to aggressive liquids and condensation.
- Do not plug the connection cable into sockets other than the one for which it is intended.
- Connect only authorised accessories.
- Use only the Type S004LV0600045 mains adapter included in the package.
- Make sure that the socket to which the phone is to be plugged in is accessible at all times in order to unplug the phone from the mains.
- Never place the handset in the base station without the battery compartment cover
- Research has shown that under certain circumstances medical devices can be affected by activated cordless telephones (DECT). Always follow the rules of the medical institution in question when using cordless telephones in medical facilities.
- Never - open the telephone yourself!
  - touch contacts with sharp, metallic objects!
  - carry the base station by the connector cables!
- Clean your telephone only with a damp cloth or antistatic cloth.
- Do not use your telephone in damp rooms (e.g. bathroom) or in areas at risk from explosion.

## Unpacking and assembling the telephone

### Unpacking

The package contains the following items:

- 1 handset
- 1 base station
- 1 S004LV0600045 mains adapter
- 1 telephone cable and 1 adapter
- 1 NiMH, 2.4 V, 750 mAh battery pack
- 1 polishing cloth
- 3 User Guides DE, FR, IT

**Location**

To achieve the best possible range, we recommend positioning the base station in a location central to your area of activity. Avoid positioning the telephone in niches, recesses and behind steel doors. The maximum range between the base station and handset is approximately 300 meters.

Depending on the surrounding conditions as well as spatial and structural factors, the range may be smaller. The indoor range is usually less than the outdoor range. Silent zones can occur due to the digital transmission in the frequency range used, and even within the range, depending on the structural environment. Normal call quality may be reduced through the increased incidence of short breaks in transmission. Normal call quality can be restored if you move slightly out of the silent zone. When the range is exceeded, the connection will be broken unless you move back into range within ten seconds.

To avoid radio signal interference from other electronic equipment, we recommend that the base station and handset are situated at the greatest possible distance (at least 1 meter) from other equipment.

**Range of Bluetooth devices**

Bluetooth cordless technology transmits radio signals over a short distance (approximately 9 meters). The connected Bluetooth devices must therefore be within a nine-meter radius of the BTtouch base station (with no obstacles in the way).

**Setting up the base station**


Your telephone is designed for normal operating conditions. Modern furniture features a wide range of varnishes and plastic veneers and is treated with a large number of different polishes. Some of these agents may contain ingredients that corrode and soften the plastic feet of the base station. If this happens, the feet may leave undesirable marks on the furniture surface.

Understandably, the manufacturer cannot accept any liability for such damage. We therefore recommend that you position your telephone on a non-slip underlay or mat, especially if it is placed on new or varnished furniture.

## Connecting the phone

Before you can start using your telephone you must plug in the telephone connection cords and the mains cable.

- Use only the S004LV0600045 mains adapter provided for the base station!
- Use only the connection cable provided. Other connection cables may be configured differently and can cause malfunctions.
- Your telephone will not function if the mains connector is not plugged in or during a power failure.
- To ensure correct functioning, set up the connection to the telephone network only after the battery is fully charged.

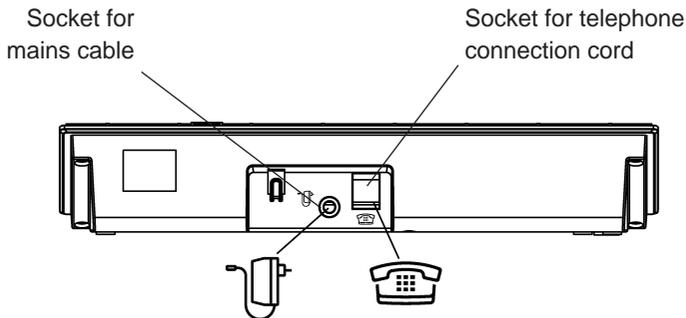

### Telephone connection cord

Insert one end of the telephone connection cord in the socket marked with the telephone symbol, and insert the other end in your telephone wall socket. Use the adapter provided if required.

### Mains cable

First, insert the mains cable in the socket marked with the mains connector symbol on the base of the base station. Then insert the mains connector in the 230 V mains socket.

Make sure that the mains socket is accessible at all times in order to unplug the phone from the mains.

## Removing the cords

First unplug the mains connector from the 230 V socket and the plug from the telephone connection socket.

To release the cord from the device, press the holding hook towards the plug while simultaneously pulling the plug out along with the cord.

## Putting the handset into operation


Your handset is ready to use only when the battery has been fully charged up. Only then can you accept or make calls on this handset.

## Removing the battery compartment cover

Press down lightly on the battery compartment cover in the hollow area, and push up.

## Inserting the rechargeable battery

There is a battery compartment on the bottom of the handset for housing the battery pack. Important notes on using batteries are given at the end of this User Guide.

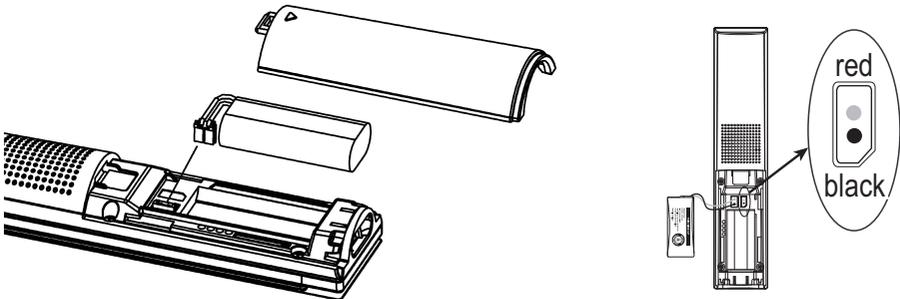

- Insert the battery pack in the battery compartment.
- Connect the battery as illustrated.
- Replace the compartment cover by placing it approximately 5 mm below, offset, and slide it upwards until it clicks into place.

## Charging the battery

The battery is not fully charged when you first unpack the telephone. To charge the battery, place the handset on the base station. The animated battery symbol on the BTtouch handset signals the charging procedure. The battery will take around 16 hours to fully charge. The following symbols indicate the charging status on the handset display.

Modes:

- Empty 
- Approx. 1/4 full 
- Approx. 1/2 full 
- Approx. 3/4 full 
- Full 

Once the battery is fully charged, insert the telephone connector in the telephone socket. Your telephone is now ready to use.

- **Use only the battery pack provided or an approved replacement battery pack.**
- **Never place the handset in the base station without the battery compartment cover!**

**Please note:** after inserting a new battery for the first time, the battery display will indicate the correct information on the charging status only after a complete charging cycle.

You can replace the handset in the base station after every call. Charging is electronically controlled to ensure optimal charging of the battery in different charge states. Avoid removing the battery from the handset without good reason, since this could affect the optimum charging cycle.

You can improve the capacity of the battery if the handset battery is fully discharged and then fully recharged.

You can telephone for up to 10 hours with a fully charged battery.

If the battery charge status has reached its lower limit, the charging symbol flashes in the display and a warning signal is heard (if battery alert is activated). You then have 10 minutes of talk time left.

### Registering a handset

The handset supplied with the package is already registered on the base station. Any additional handsets must first be registered on the base station. You can operate up to five handsets on the base station.

To register your handset, refer to the section "**Registering/deregistering a handset**".

### Setting the date and time


Once the phone is ready for operation, the display shows lines (—:— —/—) where the date and time should be. To set the date and time, refer to the section "**Telephone settings / Setting the date and time**".

### Displays, keys, symbols

The symbols appear on the handset display as well as the base station display.

-  Fixed line is busy.
-  Mobile line is busy (connection via GSM).
-  The answering machine is switched on.
-  New answering machine message.
-  You have new entries in the caller list.
-  Active Bluetooth connection.
-  Bluetooth device 1 is ready.
-  Bluetooth device 2 is ready.
-  Bluetooth device 1 is paired but not ready.
-  Bluetooth device 2 is paired but not ready.
-  Bluetooth headset in operation.
-  The loudspeaker is switched on.
-  Ringtone is off.
-  Microphone switched off.
-  Message Waiting Indication.

Handset operating elements

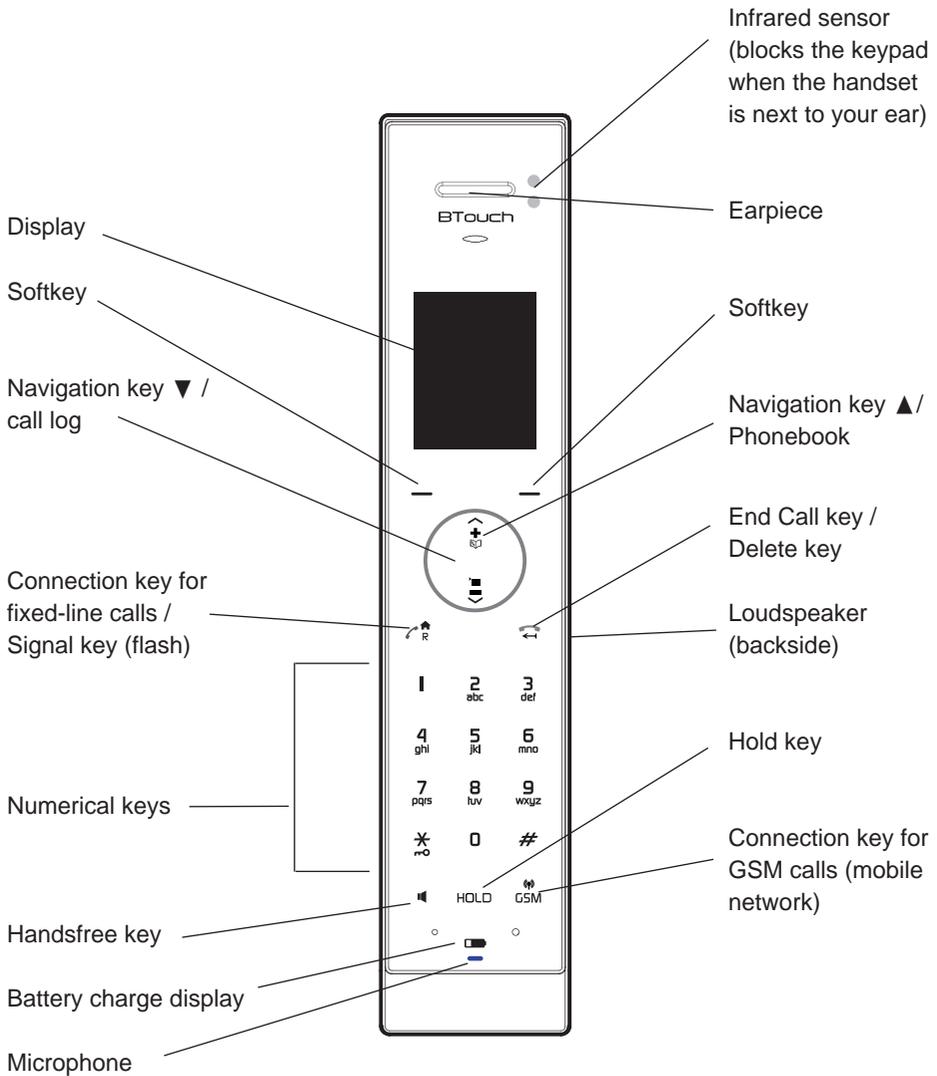

## Handset keys

### Softkeys

The function is defined by the indication shown in the display above the key.

**Navigation key** for scrolling through menus and lists or for positioning the cursor.

#### Standby mode

- ▲ Open phonebook
- ▼ Open call log

#### During calls

- ▼▲ Set earpiece/ loudspeaker volume

#### In menus

- Scroll down/up through menu items

**Connection key** for fixed network calls: Corresponds to “Lift handset” on a corded telephone.

During calls/dialling: signal key (flash)

**End Call key**. Corresponds to “Replace handset” on a corded telephone.

#### In menus

- Return to standby mode (cancel programming).

**Numerical keys** for direct entry of telephone numbers and names.

**Key 1**: Hold down in standby mode to dial the Voicebox number.

**Hash key** for entering the “hash ” symbol.

**Asterisk key** for entering the “asterisk” symbol.

In standby mode: activates keypad lock


Text entries (phonebook): Switching between upper and lower case lettering.

**Handsfree key**. Switches the loudspeaker (on the back of the handset) on or off.

**Hold key**: Puts a call on hold.

**Connection key** for GSM calls (mobile network).

Base station operating elements

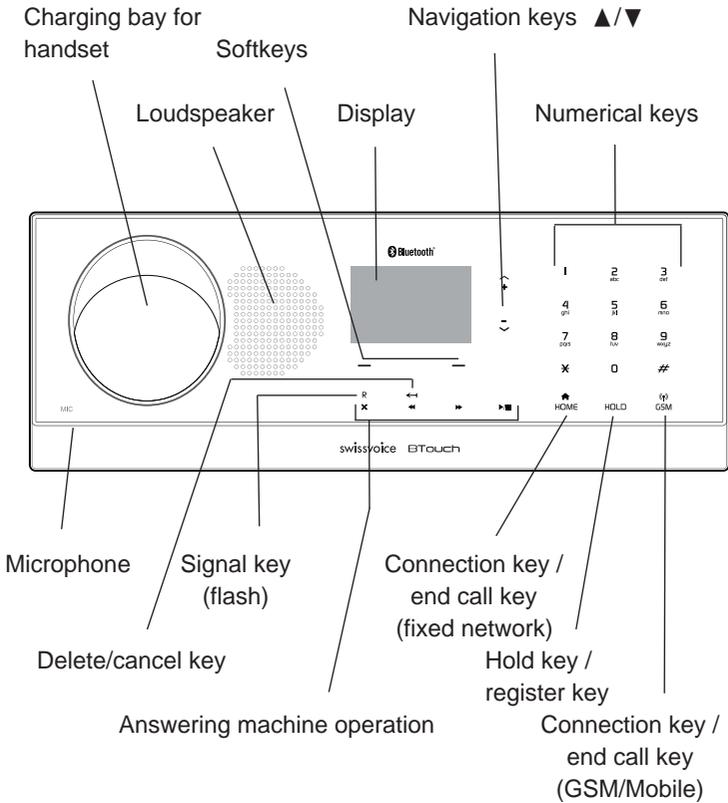

## **Base station keys**

### **Softkeys**

The function is defined by the indication shown in the display above the key.

**Navigation keys** for scrolling through menus and lists or for positioning the cursor.

#### **During calls**

- ▼ ▲ Set loudspeaker volume

#### **In menus**

- Scroll down/up through menu items

**Numerical keys** for direct entry of telephone numbers and names.

**Key 1:** Hold down in standby mode to dial the Voicebox number.

**Hash key** for entering the "hash " symbol.

**Asterisk key** for entering the "asterisk" symbol.

Text entries (phonebook): Switching between upper and lower case lettering.

### **Signal key (flash)**

**Delete key** for deleting characters (e.g. when entering call numbers/names from phonebook).

**Hold key/register key:** Put call on hold. Register handsets (press for 3 seconds), deregister all handsets (press for 10 seconds).

**Connection/end call key** for fixed network calls.

Press key again to end the call.

**Connection/end call key** for GSM calls (mobile network)

Press key again to end the call.

## The main menu

Press the **MENU** softkey to open the menu. To access further menu items, use the **Navigation key ▲/▼ / SELECT**.

Use the **Navigation key ▲/▼** to select a menu item and press **SELECT** to access a submenu. For more details, refer to the section "**Telephone settings**".

## Automatic adjustment of range

The range of the base station is reduced as soon as the handset is inserted in the base station and the telephone is in standby mode. This reduces the range by more than 99% provided only one handset is registered on the base station. During calls the range of the handset is reduced as soon as the handset is in the vicinity of the base station. The range of the handset reduces by approximately 75%.

In addition you can reduce the range during calls to approximately 25% (roughly half the range) – see "**Setting the range**".

## Base station power consumption

The phone is equipped with an energy-efficient mains adapter. Power consumption levels are as follows:

Standby mode:   approx. 0.5 Watts (normal mode)  
                          approx. 1.1 Watts (charging mode)

During calls:     approx. 1.5 Watts

## Activating/deactivating the keypad lock

If you want to carry the handset around in your pocket, activate the keypad lock. This prevents you inadvertently dialling a number. During incoming calls the keypad lock is deactivated for the duration of the call.

### Activating the keypad lock

- Press the **asterisk key** and press **LOCK** to confirm.  
A message appears in the display.

### Deactivating the keypad lock

- Press **UNLOCK**.

## Calling all handsets (paging)

If you have mislaid your handset(s), you can call it (them) from the base station. All handsets that are registered and within range will ring for approximately 60 seconds.

### Paging call (group call) from the base station

- Press **MENU** on the base station.
- Select **Paging** and press **SELECT** to confirm.

### End paging

- Press the **connection key** on the handset or **STOP** on the base station.

## Adjusting the handset / loudspeaker volume

You can adjust the handset or loudspeaker volume (several levels) during a call (provided handsfree mode is activated).

During a call.

- Set the preferred volume using the **navigation key ▲/▼**.

## Microphone mute

If you do not want your call partner to hear what you are saying e.g. to another person in the room, you can temporarily mute your handset or base station.

During a call.

- Press **MUTE**. **Muted** is displayed.
- Your call partner cannot hear you.
- Press **UNMUTE**. Your call partner can hear you again.

## Bluetooth

In addition to fixed network telephone calls, the user-friendly BTtouch allows you to make and receive calls over your Bluetooth GSM connection.

Bluetooth cordless technology transmits radio signals over a short distance (approx. 9 meters). The connected Bluetooth devices must therefore be within a nine-meter radius of the BTtouch base station (with no obstacles in the way).

Locate your GSM phone within the Bluetooth range of the BTtouch, activate the Bluetooth connection and enjoy the convenience of making all GSM calls over the BTtouch. You can pair (register) up to four compatible GSM phones and one Bluetooth headset to the base station. Two of these devices can be simultaneously connected to the base station, one of which can have an active voice connection via the base station.

One Bluetooth headset can be paired (registered) and connected to the base station. This reduces the number of GSM phones which can be paired (see above) to three.

A Bluetooth device must be registered (paired) before it can be used on the BTtouch. Once this has been done, you can set up the connection. The menu for the Bluetooth function is provided on the base station.

### Explanation of terms

#### Bluetooth® mobile phone

A mobile phone with activated Bluetooth® mode.

#### Pairing

Exchange of information between two peripheral devices via Bluetooth®, enabling them to identify each other.

#### Paired devices

Bluetooth® devices "recognised" by BTtouch

Maximum number of paired devices: 4

Under certain circumstances, paired Bluetooth® mobile phones or headsets may be assigned but not yet active. To activate them they must be connected with the BTtouch (i.e. added to active devices) before being used.

#### Active devices

Devices with activated Bluetooth® mode and which are paired AND connected to the BTtouch.

**PIN**

This four-digit code is used to secure the connection between the BTtouch telephone and the Bluetooth® mobile phone. The BTtouch is delivered with the default PIN 0000. To use a Bluetooth® mobile phone with your BTtouch, you must pair and connect the devices.

**Note**

Since Bluetooth® technology is based on short-wave transmission, you must locate the mobile phone in the vicinity of the BTtouch base station when pairing and connecting it.

**Pairing a Bluetooth device (only on the base station)**

- Press **MENU**, select **Bluetooth** and press **SELECT**.
- Select **Setup cell** and press **SELECT**.

or

- Select **Setup headset** and press **SELECT**.
- Prepare the device by following the user instructions for pairing the device, and press **NEXT**.
- Now follow the instructions given on the display. You may be asked to enter a PIN. In this case, please follow the instructions for the device to be paired.

**Provided the maximum possible number of connected devices (1 headset und 1 GSM phone or 2 GSM phones) is not exceeded, they are automatically connected and immediately ready for use. If you wish to add more devices, you must replace devices already connected.**

**Paired devices****Disconnecting/connecting a paired device**

You can disconnect or connect paired devices.

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Paired devices** and press **SELECT**.
- All paired devices are shown. Select the device in question.
- Press **OPTION**.
- Select **Disconnect**.

or

- Select **Connect** and press **SELECT**.
- A confirmation message appears in the display.

**Note**

Depending on how your mobile phone is configured, you may need to confirm the connection on the mobile phone.

**Renaming a paired device**

You can change the name of a device paired with the BTtouch.

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Paired devices** and press **SELECT**.
- All paired devices are shown. Select the device in question.
- Press **OPTION** .
- Select **Rename** and press **SELECT**.
- Change the name and press **SAVE** to confirm.
- A confirmation message appears in the display.

**Removing a paired device**

If you wish to pair a new mobile phone or new headset via Bluetooth® and four devices are already assigned to the BTtouch, you must remove one of the devices from the list of paired devices.

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Paired devices** and press **SELECT**.
- All paired devices are shown. Select the device in question.
- Press **OPTION** .
- Select **Remove paired** and press **SELECT**.
- A prompt is displayed. Press **YES** to confirm.
- A confirmation message appears in the display.

**Active devices****Disconnecting/connecting an active device**

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
  - Select **Active devices** and press **SELECT**.
  - All active devices are shown. Select the device in question.
  - Press **OPTION** .
  - Select **Disconnect**
- or
- **Connect** and press **SELECT**.
  - A confirmation message appears in the display.

### Replacing an active device

You can replace a Bluetooth® device with another device if two devices are already connected.

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Active devices** and press **SELECT**.
- All active devices are shown. Select the device in question.
- Press **OPTION**.
- Select **Replace active** and press **SELECT**.
- A prompt is displayed. Press **YES** to confirm.
- A confirmation message appears in the display.

#### Note

Depending on how your mobile phone is configured, you may need to confirm the connection on the mobile phone.

### Adding an active device (maximum 2 devices)

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Active devices** and press **SELECT**.
- Select **Empty** and press **INSERT**.
- All paired devices are shown. Select the device in question.
- Press **SELECT**.
- A confirmation message appears in the display.

#### Note

Depending on how your mobile phone is configured, you may need to confirm the connection on the mobile phone.

### Removing an active device

If you remove a device from the list of active devices, it remains assigned to the BTtouch (i.e. the device remains on the list of paired devices).

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Active devices** and press **SELECT**.
- All active devices are shown. Select the device in question.
- Press **OPTION**.
- Select **Remove active** and press **SELECT**.
- The device is removed from the list.
- A confirmation message appears in the display.

**Note**

The device removed from the list of active devices remains on the list of paired devices.

**Changing the PIN**

When pairing a device you must enter a pin to confirm the Bluetooth® connection. The default PIN for the BTtouch is 0000.

- Press **MENU** on the base station, select **Bluetooth** and press **SELECT**.
- Select **Change PIN** and press **SELECT**.
- Enter a new 4-digit PIN and press **SAVE**.
- A confirmation message appears in the display.

**Making calls using the headset****Accepting a fixed network call using a Bluetooth headset**

You can use a Bluetooth® headset for your fixed network calls. You must be within a nine-meter radius of the BTtouch base station to maintain the Bluetooth® connection.

- An incoming call is signalled on the base station, handset and headset (depending on the manufacturer).
- Press the Call key on your headset.

**Ending a fixed network call using a Bluetooth headset**

- Press the Call key on your earpiece.  
If you are using your BTtouch base station, you can forward the call to a Bluetooth® headset by selecting **OPTION / Use headset**. The base station remains active but the loudspeaker and microphone are muted.
- Press the End Call key to end the call.

**Dialling a number**

- Enter the number using the numerical keys or select an entry from redial, call log or phonebook.
- Press the fixed network **Connection key**.
- Press **OPTION** and select **Use headset**.

- **During the call you can use OPTION to switch between the headset and handsfree operation.**
- **If you accept a call using a Bluetooth® headset and the Bluetooth®-connection is aborted or the battery is discharged, the call is lost.**

## Calls over the mobile network (GSM)

### Accepting a GSM call

- An incoming call is signalled on the base station, handset and GSM phone.
- Press the GSM **Connection key**.

### Dialling a number

- Enter the number using the numerical keys or select an entry from redial, call log or phonebook.
- Press the GSM **Connection key**.

**The Bluetooth headset cannot be used for GSM mobile calls.**

## Managing Bluetooth devices

The BTouch can be paired with 4 Bluetooth devices (1 headset + 3 GSM or 4 GSM phones), of which up to two can be connected to the base station. You can connect devices on the list of paired devices to the base station. You may be asked to replace one of the devices already connected. Follow the instructions in the menu.

To remove a device definitively from the base station, you must delete it from the list of paired devices (**Remove**).

## Telephoning

Telephoning from the handset and base station is largely identical. If operation varies, you will be prompted accordingly.

### Fixed network calls

#### Telephoning

- Press the **Connection key** (fixed network) or the **Handsfree key** on the handset and enter a telephone number or use **OPTION** to select an entry from the call log, phonebook or redial list.

or

- Enter the telephone number or use **OPTION** to select an entry from the call log, phonebook or redial list and press the **Connection key** (fixed network) or the **Handsfree key** on the handset.

#### Accepting calls

The telephone rings to signal an incoming fixed network call. The caller's number is displayed unless it has been suppressed, or the caller's name appears if entered in the phonebook.

- Press the **Connection key** (fixed network) or the **Handsfree key** on the handset to accept an incoming call.

#### Ending a call (handset)

- Press the **End Call key** or place the handset in the base station.

#### Ending a call (base station)

- Press the **Connection/End Call key** (fixed network).

### Mobile network calls

Two mobile phones can be connected simultaneously to the base station, but only one can make and accept calls over the handset or base station.

#### Telephoning

- Press the **Connection key** (GSM) and enter the telephone number.

or

- Enter the telephone number and press the **Connection key** (GSM).
- If you have two mobile phones connected to the base station, the system will ask you to select the mobile phone over which you wish to make the call.

### Accepting calls

- Press the **Connection key** (GSM)
- You can also accept the call directly on your mobile phone. If you accept the call on your mobile phone, it is automatically disconnected from the base station.

### Ending a call (handset)

- Press the **End Call key** or place the handset in the base station.

### Ending a call (base station)

- Press the **Connection/End Call key**.

### Accepting a call from the mobile network during an active fixed network call

If you are conducting a call over the fixed network and receive a call over your mobile network, a signal tone is heard and 1 or 2 is displayed.

The base station and all free handsets ring (base station only rings if not busy).

- Press the **End Call key** on the handset. The fixed network call is ended and you can accept the call from the mobile network by pressing the **Connection key** (GSM). Press the **End Call key** again on the handset to end the call.

or

- Press the **Connection key** (GSM) on the handset to accept the call from the mobile network. The fixed network call is put on hold. Press the **End Call key** on the handset to end the mobile call. Then press the flashing **Connection key** (fixed network) on the handset to return to the fixed network call which was put on hold.

### Accepting a call over the fixed network during an active mobile network call

If you are conducting a call over the mobile network and receive a call over the fixed network, a signal tone is heard and the incoming call is shown on the handset you are using. The base station and all other free handsets ring (base station only rings if not busy).

- Press the **End Call key** on the handset. The mobile network call is ended and you can accept the call from the fixed network by pressing the **Connection key** (fixed network). Press the **End Call key** again on the handset to end the fixed network call.

or

- Press the **Connection key** (fixed network) on the handset to accept the call from the fixed network. The mobile network call is put on hold. Press the **End Call key** on the handset to end the fixed network call. Then press the flashing **Connection key** (GSM) on the handset to return to the mobile network call which was put on hold.

### Handset-to-handset calls

- Press **MENU**, select **Intercom** and press **SELECT** to confirm.
- Intercom is displayed along with a list of all handsets and the base station. Select the relevant device using the **Navigation key ▲/▼** and press **SELECT** to call it.
- Press the **Connection key** (fixed network) on the dialled handset or base station to accept the call.

### Accepting an external call during a call between handsets

If you receive an external fixed network or mobile network call while conducting a call between handsets, a signal tone is heard and the display shows **Incoming call**. The base station and the free handsets ring (base station only rings if not busy).

- End the internal call by pressing the **End Call key** on the handset or the base.
- Press the **Connection key** (fixed network) to accept a fixed network call or the **Connection key** (GSM) to accept a mobile network call.

### Forwarding an external call

You can forward an active call to another handset, to the base station or to a Bluetooth® headset connected to the base station.

- Press **MENU**, select **Intercom** and press **SELECT** to confirm.
- Intercom is displayed along with a list of all handsets and the base station. Select the relevant device using the **Navigation key ▲/▼** and press **SELECT** to forward the call.
- Press the **Connection key** (fixed network) on the dialled handset or base station to accept the call.
- Press the **End Call key** to complete call forwarding.

## Hold mode

You can put a call from the fixed or mobile network on hold. If you do not return to the call on hold within 14 minutes, a signal tone is heard. After another 30 seconds a second signal tone is heard. The call is automatically ended after 15 minutes on hold.

### Putting a fixed network call on hold

- Press the **Hold key**. A message appears on the display and the connection key for fixed network calls flashes.

### Returning to a fixed network call on hold

- Press the **Connection key** for fixed network calls.

### Putting a mobile network call on hold

- Press the **Hold key**. A message appears on the display and the connection key for mobile network calls flashes.

### Returning to a mobile network call on hold

- Press the **Connection key** for mobile network calls.

## Internal enquiry call / call transfer

During an external call:

- Press **OPTION**, select **Intercom** and press **SELECT** to confirm.
- Select the internal subscriber and press **SELECT** to confirm.
- When the internal subscriber ends the call, you are again connected to the external caller.
- If you end the call yourself, the call is transferred to the internal subscriber.

## Brokering / conference calls

During an internal enquiry call:

- Press **OPTION**, select **Swap** and press **SELECT** to confirm. Talk to the other call partner.
- Press **OPTION**, select **Conference** and press **SELECT** to confirm. You are connected to both call partners.

### Ending a conference call

- Select **OPTION/Single** to return to brokering.
- Select **OPTION/End** to leave the conference call.

## Brokering / conference calls

Over a second external connection (GSM / fixed network)

**Note:** A GSM phone must be paired and connected for this function.

You are connected to a call partner via GSM or the fixed network.

- Press the free connection key (fixed network connection -> GSM, GSM connection -> fixed network).
- Set up the second connection.
- Press **OPTION**, select **Conf. with home** or **Conf. with cell** and press **SELECT** to confirm.

### Ending a conference call

- Press **OPTION/End home call** or **End cell call** to disconnect the call. You are connected to another caller.
- End the conference call by pressing the **End Call key** (handset) or **one of the connection keys** (base station). All connections are disconnected.

### Last number redial

The 20 last-dialled numbers are saved in the redial list (mobile/base station). The oldest entry in the list is overwritten every time an additional number is dialled. You can save and delete numbers in the phonebook.

### Dialling a number from the redial list

- Press **REDIAL**.
- Use the **navigation key** to select the number you wish to call.
- Press the **Connection key**.  
The number is dialled.

### Saving a number in the phonebook

- Press **REDIAL**.
- Use the **navigation key** to select the number you wish to save.
- Press **OPTION**, select **STORE** and press **SELECT** to confirm.
- Change the number if required, and press **NEXT**.
- Enter the name and press **SAVE**.

### Deleting an entry

- Press **REDIAL**.
- Use the **navigation key** to select the number you wish to delete.
- Press **OPTION**, select **Delete** and press **SELECT** to confirm.

## Phonebook

You can save frequently dialled numbers and the names of the called parties. Your telephone provides a shared phonebook (base station and handset) for 200 numbers and names.

### Dialling from the phonebook

Handset

- Press the **navigation key** ▲. The first entry is displayed.
- Using the **numerical keys** (0 - 9), enter the first letters of the phonebook entry you are seeking (e.g. "Smi"). The display shows the first entry featuring the entered letters (e.g. **Smith**).
- Use the **navigation key** to scroll to the required phonebook entry.
- Press the relevant **Connection key**. The number is dialled.

Base station

- Press **MENU**, select **Phonebook** and press **SELECT** to confirm.
- Select **Review** and press **SELECT** to confirm.  
The first entry is displayed.
- Using the **numerical keys** (0 - 9), enter the first letters of the phonebook entry you are seeking (e.g. "Smi"). The display shows the first entry featuring the entered letters (e.g. **Smith**).
- Use the **navigation key** to scroll to the required phonebook entry.
- Press the relevant **Connection key**. The number is dialled.

### Adding a new entry to the phonebook

- Press **MENU**, select **Phonebook** and press **SELECT** to confirm.
- Select **Store** and press **SELECT** to confirm.
- Enter the number and press **NEXT**.
- Enter the name and press **SAVE**.
- Press the **End Call key** (handset) or **Delete key** (base station).

- Press the asterisk key to switch between upper and lower case lettering.
- Enter a dialling pause using **PAUSE** (press the softkey on the left, only during dialling preparation). This is shown in the display by a "P".
- If you need to enter a flash signal in a number, for example to control a network attribute, enter it using the Connection key. The flash signal is shown on the display with an "R".
- When entering the number or name, you can correct it using the End Call key.
- Please refer to the table in the Appendix to this User Guide for the symbols related to name entry.

### Editing phonebook entries

- Press **MENU**, select **Phonebook** and press **SELECT** to confirm.
- Select **Review** and press **SELECT** to confirm.
- Select an entry and press **EDIT**.
- Select the number and press **NEXT**.
- Change the name if required, and press **SAVE**.

### Deleting phonebook entries

- Press **MENU**, select **Phonebook** and press **SELECT** to confirm.
- Select **Review** and press **SELECT** to confirm.
- Select an entry and press **DELETE**.

### Copying phonebook entries from GSM phones to the phonebook

You can use Bluetooth® to copy up to four phonebooks from mobile phones to your BTtouch phonebook. Each copied phonebook can contain up to 1'500 entries (numbers of up to 30 digits and names of up to 15 letters). To do this you must first pair and connect the mobile to the BTtouch (see section Bluetooth®).

## Copying

- Position your mobile phone near the BTtouch base station.
- Press **MENU**, select **Bluetooth** and press **SELECT**.
- Select **Download PB** and press **SELECT**.
- Select one of the devices proposed and press **SELECT**.
- Select one of the following options:
  - **Phone memory** - Copies contacts contained in your telephone's internal memory
  - **SIM card only** - Copies contacts saved on your SIM card
  - **Phone and SIM** - Copies contacts contained in the internal memory and on the SIM card.
- Once the copy procedure is completed, the display shows the number of entries copied/saved.
- Press the **End Call key** to return to the menu.

- **Some mobile phones do not allow the SIM card phonebook to be copied. In this case, forward your SIM card contacts to your telephone's internal memory and then start to copy the phonebook to BTtouch. You will find details of this procedure in your mobile phone user guide.**
- **When copying a phonebook from a mobile phone to BTtouch, several entries may be omitted (e.g. if additional contact details have been saved along with the phone number).**
- **The copy procedure is aborted when:**
  - a call is accepted on the mobile phone
  - the BTtouch base station power supply is interrupted

## Call log

If your network operator supports the function "Calling Line Identification Presentation" (CLIP), numbers disclosed by callers will be saved in the call log. The call log can hold up to 100 entries. If the call log is full, the oldest entry is deleted to make room for a new entry.

**If the number is not available or if a caller has suppressed his/her number, the display shows *Incoming call*. In this case the call is not entered in the call log.**

## Dialling a number from the call log

Handset

- Press the **navigation key ▼**. The latest entry is displayed.

or

- Press **MENU**, select **Call log** and press **SELECT** to confirm.
- Use the **navigation key** to select an entry.
- Press the **Connection key**: The number is dialled.

Base station

- Press **MENU**, select **Call log** and press **SELECT** to confirm.
- Use the **navigation key** to select an entry.
- Press the **Connection key**: The number is dialled.

### Saving call log entries to the phonebook

Handset

- Press the **navigation key ▼**. The latest entry is displayed.

or

- Press **MENU**, select **Call log** and press **SELECT** to confirm.
- Use the **navigation key** to select an entry.
- Press **SAVE** or change the number if required, and press **NEXT**.
- Enter the name and press **SAVE**.

Base station

- Press **MENU**, select **Call log** and press **SELECT** to confirm.
- Use the **navigation key** to select an entry.
- Press **SAVE** or change the number if required, and press **NEXT**.
- Enter the name and press **SAVE**.

### Deleting lists

- Press **MENU**, select **Call log** and press **SELECT** to confirm.
- Select **Delete all calls** and press **SELECT** to confirm.

### Voicebox

You can forward calls directly to your network provider's voicebox. This function must be enabled by your network operator. Voicebox messages are signalled on the display.

### Retrieving Voicebox messages

- Press and hold down **Key 1** to call the voicebox and listen to voice messages. You must first programme the access number to your voicebox (see "**Telephone settings/Programming the voicebox access number**").

## Network operator functions

Your telephone offers the option of making a second external call during a call over the fixed network (enquiry call), switching between call partners (brokering) or simultaneously conversing (3-way conference call).

You can only use these options for external calls over the fixed network if the comfort features in the analog network (enquiry call / brokering / 3-way conference call / call waiting) are activated for your connection.

For more information and operating instructions for network services, contact your network provider.

### Comfort features in the analog network (provider-dependent):

- Accept or reject a second external call.
- Call a second external call partner (external enquiry call)
- Switch between two call partners (brokering)
- Simultaneous conversation with both call partners (conference call)

## Telephone settings

The settings for the handset and base station are largely identical. If operation varies, you will be prompted accordingly.

### Changing the system PIN

The PIN is a secret four-digit password to protect system settings against unauthorised access. The telephone is delivered with the system PIN set to "0000".

Your handset/base station is in standby mode.

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **System PIN** and press **SELECT**.
- Enter the old four-digit system PIN (default on delivery: "0000") and press **OK**.
- Enter the new four-digit system PIN and press **OK**.
- Enter the new system PIN again and press **OK**.

The new system PIN is saved.

**Attention: Please take good note of your new system PIN! If you forget it, a technical intervention is required which will be billed to you.**

## Setting the display language

You can select various languages for the display texts. The BTouch is delivered with German as the default language.

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **LCD language** and press **SELECT**.
- Select the language and press **OK** to activate.

## Setting the ringer volume

- Press **MENU**, select **Audio** and press **SELECT**.
- Select **Ringer volume** and press **SELECT**.
- You can use this menu to make the following settings:
  - **Home**: Set the volume for signalling incoming external calls over the fixed network. Press **OFF** to deactivate the ringer. A symbol to this effect appears in the display.
  - **Cellular 1**: Set the volume for signalling incoming external calls over GSM 1. Press **OFF** to deactivate the ringer. A symbol to this effect appears in the display.
  - **Cellular 2**: Set the volume for signalling incoming external calls over GSM 2. Press **OFF** to deactivate the ringer. A symbol to this effect appears in the display.
  - **All home & cell**: Set the volume for signalling all calls. The individual volume settings (see above) are deactivated. Press **OFF** to deactivate the ringer. A symbol to this effect appears in the display.
- Press **OK** to confirm the changes.

**Unless the volume is set to "Off" for all calls, a flashing "Ringer off" symbol is displayed.**

## Setting the ringer tone

- Press **MENU**, select **Audio** and press **SELECT**.
- Select **Ringer tone** and press **SELECT**.
- You can use this menu to make the following settings:
  - **Home**: Set the ringer tone for signalling incoming external calls over the fixed network.
  - **Cellular 1**: Set the ringer tone for signalling incoming external calls over GSM 1.
  - **Cellular 2**: Set the ringer tone for signalling incoming external calls over GSM 2.
  - **All home & cell**: Set the ringer tone for signalling all calls. The individual ringer tone settings (see above) are deactivated.

- Press **OK** to confirm the changes.

### Setting alert tones (handset)

Alert tones are acoustic signals which alert you to specific events:

- Keypad tone: A click is emitted every time you press a key.
  - Battery empty: An alert is emitted when the battery is almost empty.
  - Range: If you move too far from the base station with the handset and the connection risks being disconnected, the handset emits a warning signal.
- Press **MENU**, select **Audio** and press **SELECT**.
  - Select **Key tone**, **Low battery** or **No coverage** and press **SELECT**.
  - Select **On** or **Off** and press **SELECT**.

### Setting the date and time

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Set date/time** and press **SELECT**.
- Enter the current date in the format shown, e.g. DD/MM/YY (Day/Month/Year) and press **OK**.
- Enter the current time in the format shown, e.g. HH/MM (Hours/Minutes) and press **OK**.

### Setting the date/time format

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Time format** or **Date format** and press **SELECT**.
- Select the preferred format (Time: 12 or 24 hour clock / Date: MM/DD/YY or DD/MM/YY) and press **OK**.

### Setting automatic keypad lock (handset)

If automatic keypad lock is activated, the keypad is blocked after a predefined time.

- Press **MENU**, select **Settings** and press **SELECT**.
- Press **Auto keylock** and press **SELECT**.
- Select one of the timeouts shown or "Never" and press **OK**.

## Registering a handset (handset)

Your BTtouch is delivered with the handset already registered. You can operate up to 5 DECT handsets on your base station.

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Register** and press **OK**.
- Enter the system PIN and press **OK** to confirm.
- Hold down the **Hold key** on the base station for around 3 seconds.  
If registration is successful, the display will show your handset's internal number.

## Deregistering a handset

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **De-register** and press **OK**.
- Enter the system PIN and press **OK** to confirm.
- Select the handset to be deregistered and press **SELECT**.
- When prompted, press **YES** to confirm

- **You can only deregister a different handset i.e. not the handset you are using to deregister a device.**
- **If you want to deregister all registered handsets, hold down the Hold key on the base station for around 10 seconds. When prompted, press YES to confirm.**

## Setting the dial mode

You can change to dial mode in line with your connection conditions.

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Dial mode** and press **SELECT**.
- Select **Tone** or **Pulse** and press **OK**.  
Tone (Dual Tone MultiFrequency): Normal dialling procedure on analog lines.  
Pulse: May be required for connecting older telephone systems. Please refer to the relevant documentation.

## Setting the flash time

- Press **MENU**, select **Settings** and press **SELECT**.
- Press **Flash time** and press **SELECT**.
- Select one of the times shown and press **OK**.

### Setting the range

This setting reduces the transmission power of the base to 25%. The range between base and handsets is reduced by 50%.

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **ECO mode range** and press **OK**.
- Select **Full range** or **Half range** and press **OK**.

### Programming the voicebox access number (base station)

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Set voicemail** and press **OK**.
- Enter the voicebox access number and press **OK**.

### Deactivating the "Message Waiting Indicator" / MWI

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Clr Voicemail** and press **SELECT**.
- Press **YES** or **NO**.

**Only the symbol is deactivated. For information on your voicebox, contact your network provider.**

### Resetting the handset or base station

- Press **MENU**, select **Settings** and press **SELECT**.
- Select **Reset** and press **SELECT**.
- Enter the system PIN and press **OK** to confirm.
- When prompted, press **YES** to confirm.

### When resetting the following items are deleted:

	Reset on handset	Reset on base station
Call list (CID list)	--	Cleared
Redial list	Cleared	Cleared
Phonebook (fixed line)	--	Cleared
Phonebook (mobile)	--	Cleared
TAM messages	--	Cleared
Personal OGM	--	Cleared
Voicebox number	--	Set back to default
GSM pairing	--	Cleared

## Answering machine

### General

Your BTouch has an integrated digital answering machine with a total recording capacity of 25 minutes. You can operate the answering machine from the base station or any registered handset.

If you use a DTMF-enabled phone, you can also access the answering machine remotely by entering your PIN.

You can choose from the following two operating modes:

- Answer and record
- Answer only


The telephone is delivered ready to use, with a standard outgoing message for each operating mode. If "Answer and record" is set and the maximum recording capacity is reached, the device automatically switches to "Answer only".

The handset/base display shows the symbol corresponding to the activated answering machine mode.

**When resetting the base station to default settings, your own announcement as well as recorded incoming messages are deleted.**

### Operating the answering machine from the base station

In addition to using the menu to operate the answering machine, you can also use keys to activate important functions.

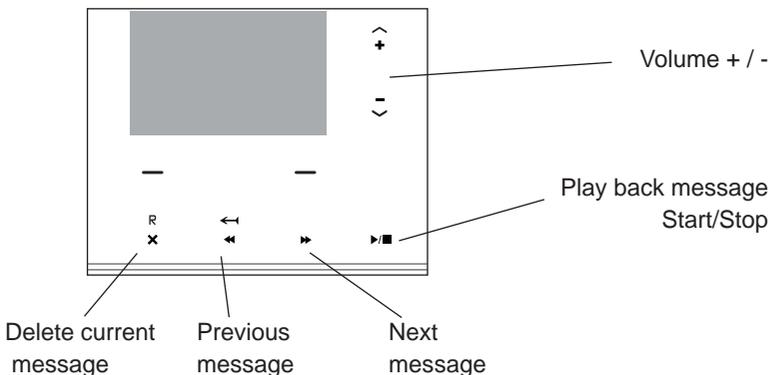

### Switching the answering machine on or off

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Ans. sys. setup** and press **SELECT**.
- Select **Answer on/off** and press **SELECT**.
- Select the preferred setting and press **OK**.

### Editing announcements

#### Recording a new announcement

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Ans. sys. setup** and press **SELECT**.
- Select **Announcement** and press **SELECT**.
- Select **Record** and press **SELECT**.
- Select **Answer only** or **Answer & Record** and press **SELECT**.
- When prompted, record your announcement by speaking into the handset or base station microphone.
- Press **SAVE** to end the recording. Your announcement is played back for control purposes and immediately replaces the old announcement. You can delete the message during playback (**Delete**).

#### Listening to/deleting announcements

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Ans. sys. setup** and press **SELECT**.
- Select **Announcement** and press **SELECT**.
- Select **Play** and press **SELECT**.
- Select **Answer only** or **Answer & Record** and press **SELECT**.
- You will hear the current announcement.  
You can stop the playback by pressing **STOP**.
- Press **DELETE** to delete the announcement. This reactivates the default announcement.

### Playing back/deleting messages

The display alerts you to new incoming messages. The caller's number (if not suppressed) is entered in the call log. The date and time is shown alongside each message.

#### Play back new messages

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Play msgs** and press **SELECT** to confirm. The new messages are played back in chronological order.
- You can choose from the following options during playback:  
2 - Stop playback.

- 4 - Repeat message (while the message is being played back)
- 5 - Delete (current) message.
- 6 - Skip to next message

### Deleting messages

To delete all old messages (already played back):

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Del all old?** and press **SELECT**.
- When prompted, enter **YES**.

### Recording a memo

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Record memo** and press **SELECT**.
- Record the memo and press **SAVE**.

**A memo is treated in the same way as a normal message.**

### Screening incoming messages on the base station

Messages can be screened over the base station loudspeaker.

**You can screen incoming messages on the base station if this function has been activated under "Settings".**

### Accepting calls

You can accept a call already accepted by the answering machine.

- To do this, press the relevant **Connection key**.

### Setting the answering machine

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Ans. sys. setup** and press **SELECT**.
- You can use this menu to make the following settings:
  - **Answer on/off**
  - **Answer mode**: Select whether you want the answering machine to record incoming messages or merely play back your announcement.
  - **Announcement**
  - **Answer delay**: Select 2, 4, 6, 8 rings or ECO mode.

- **Recording time:** Define the maximum recording time per message. Select 30 s, 60 s, 120 s or "Unlimited".
- **Call screening:** Activate or deactivate screening of incoming calls on the base station.
- **Remote access**
- **Voice language:** Select German, French, Italian or English.
- **Msg alert tone:** The alert tone for new incoming messages can be activated or deactivated.
- Press **SAVE** to confirm changes.

### Remote access / remote setting of the answering machine

- Remote access is only possible if this function has been activated.
- Please note that the external telephone you use must send dialling tone (DTMF) during the connection.

### Activating/deactivating remote access

- Press **MENU**, select **Ans. system** and press **SELECT**.
- Select **Ans. sys. setup** and press **SELECT**.
- Select **Remote access** and press **SELECT**.
- Choose whether to activate or deactivate remote access. If you activate remote access, you will be asked to enter a remote access pin (the remote access PIN must not be "0 0 0 0"). This will then be the existing remote access PIN you need to enter to remotely access the answering machine.
- Select the preferred setting and press **SAVE**.

### Using remote access

- Dial your telephone number.
- **If the answering machine is switched off**, the **Answer only** announcement is played after 10 rings . Press the **asterisk key** during the announcement. Enter the remote access PIN.
- **If the answering machine is switched on**, the announcement is played after the set number of rings. Press the **asterisk key** during the announcement. Enter the remote access PIN.

**The connection is disconnected after three incorrect PIN entries.**

- Press:
  - 2** to play back the messages
  - 7** to switch on the answering machine
  - 9** to switch off the answering machine

- During message playback you have the following options:
  - 2 Stop playback
  - 4 Repeat message (while the message is being played back)  
Press twice to skip backwards to previous message
  - 5 Delete current message.
  - 6 Skip to next message
  - 7 Activate answering machine
  - 9 Deactivate answering machine

**In ECO mode the answering machine responds after two rings if there are any new messages. If there are no new messages, it responds after six rings. So you can check whether you have any new messages without setting up a connection.**

## Appendix

### Important notes on using the battery

- Use only the battery pack provided or approved equivalents. The handset operating times (standby/active) and charging times apply only if the battery is charged to the defined minimum capacity (750 mAh). A battery pack is provided with the handset. To order a replacement battery pack, please contact your retailer. Using other rechargeable batteries or non-rechargeable batteries/primary cells can be dangerous and cause malfunctions or damage to the telephone. Understandably, the manufacturer does not accept any liability in such cases.
- Rechargeable batteries can become warm while recharging. This is a normal occurrence and is not dangerous.
- Do not use any other type of charging units since this may damage the phone and battery.
- Do not immerse batteries in water or throw in the fire.
- Do not dismantle batteries, as this may release corrosive electrolytes.
- Once the new battery pack has been inserted in the handset, the handset display indicates the actual charge status only after a complete charging cycle.
- New batteries reach their full capacity only after several charge/discharge procedures.
- You can replace the handset in the base station after every call. Charging is electronically controlled to ensure optimal charging of the battery in different charge states. Avoid removing the battery from the handset without good reason, since this affects the optimum charging cycle. You can improve the capacity of the installed battery if the handset battery is fully discharged after lengthy use and then fully recharged.
- Danger: do not short-circuit batteries. In particular, avoid inadvertent short-circuits during storage and transport e.g. bunch of keys, metal panels or similar objects, and make sure the battery does not come into contact with greasy materials. For this reason, store batteries only in an insulating package when they are not in the handset. Avoid also touching the contacts with greasy objects.



- The Internet/cable telephony provider may not provide the function on its Internet/cable telephony connection.
- The adapter used to convert Internet/cable telephony to analog telephony (usually supplied by the provider) may not forward the functions to connected telephones or may forward them in a non-analog format.

If this happens, please check the BTouch on an analog fixed line and/or contact your Internet/cable telephony provider.

## Care

Your telephone is a sophisticated product in terms of design and construction, and should therefore be handled with care.

To clean the telephone, wipe first with an antistatic cloth or a damp, soft leather cloth and then dry using a dry cloth.

## Recycling (environmental protection)



At the end of the product's life cycle, the telephone must not be disposed of in normal domestic waste. Please take it to a collection point for processing electrical and electronic equipment: see symbol on the product, in the user manual and/or packaging.

Some materials used in this product can be recycled if you take it to a recycling depot. By recycling parts or raw materials from used products you will be making an important contribution to environmental protection. Please contact your local authority if you require information about collection points in your neighbourhood.

## Disposing of the rechargeable battery

By law, all used batteries must be recycled and not disposed of in domestic waste. Please dispose of them according to the official regulations. Take them to a recycling depot. The batteries will be recycled since they contain, for example, nickel cadmium (Ni - Cd), lead (Pb), cadmium (Cd) or mercury (Hg).

The following recycling symbols indicate that the batteries should be disposed of separately:



## Warranty conditions

Your telephone is subject to a guarantee from the date of purchase in accordance with the legal provisions of the country in which the telephone was purchased. As evidence of the date of purchase, please keep the receipt or the warranty card completed by the retailer. All defects attributable to material and manufacturing faults will be corrected free of charge within the warranty period, either by repairing or replacing the defective equipment.

The warranty does not cover expendable materials (battery cells), defects which affect the value or use of the equipment only insignificantly, and damage caused by incorrect use, ordinary wear and tear, or manipulation by third parties.

This warranty does not cover consequential damage caused by the use, failure or defectiveness of the product. In particular, no liability whatsoever is accepted for damage to property and pecuniary loss.

To claim under this warranty, please contact the retailer where you purchased your telephone.

## Approval and conformity

This analog telephone DECT complies with the basic requirements contained in the R&TTE Directive 1999/5/EC on radio equipment and telecommunications terminal equipment and is suitable for connection and operation in the member state indicated on the base station and/or packaging.

The declaration of conformity may be viewed at: [www.swissvoice.net](http://www.swissvoice.net).



The CE symbol confirms the conformity of the telephone with the above directive.



# Warranty Certificate

## swissvoice Warranty Certificate

*Garantieschein, Bon de garantie, Certificato di garanzia, Garantiebewijs, Takuutodistus, Garantibevis, Garantisedel, Garantibevis, Certificado de Garantía, Talão de garantia*

**device type:**

(Gerätetyp, type d'appareil, tipo di apparecchio, toesteltype, laitetyyppi, maskintype, apparattyp, apparattype, modelo del aparato, modelo do aparelho):

**serial number:**

(Seriennummer, numéro de série, numero di serie, seriennummer, sarjanumero, seriennummer, seriennummer, seriennummer, número de serie, número de série):

**dealer's stamp:**

(Händlerstempel, sceau du vendeur, timbro del rivenditore, stempel van de dealer, kauppiaan leima, forhandlerens stempel, försäljarens stämpel, forhandlerstempel, sello del comerciante, carimbo do vendedor):

**dealer's signature:**

(Unterschrift des Händlers, signature du vendeur, firma del rivenditore, handtekening van de dealer, kauppiaan allekirjoitus, forhandlerens underskrift, försäljarens underskrift, forhandlers underskrift, firma del comerciante, assinatura do vendedor):

\_\_\_\_\_

**date of purchase:**

(Kaufdatum, date d'achat, data d'acquisto, datum van aankoop, ostopäiväys, kjøpsdato, datum för köpet, salgsdato, fecha de adquisición, data de compra):



Internet:  
[www.swissvoice.net](http://www.swissvoice.net)

© Swissvoice SA 2011  
20405963\_ba\_a0  
SV 20405963

Photo may differ from the actual product.