

1. Package Content

Thank you for purchasing PLANET 12/24-Port Web Smart PoE Injector Hub, POE-1200 / POE-1200P2 / POE-2400 / POE-2400P4. Terms of "PoE Injector Hub" in following section of this Quick installation guide means the POE-1200 / POE-1200P2 / POE-2400 / POE-2400P4.

Upon open the box of the PoE Injector Hub and carefully unpack it. The box should contain the following items:

- The PoE Injector Hub x 1
- This Quick Installation Guide x 1
- User's manual CD x 1
- Power Cord x 1
- Rubber feet x 4
- Two rack-mounting brackets with attachment screws x 1

If any item is found missing or damaged, please contact your local reseller for replacement.

2. Requirements

The POE-1200 / POE-1200P2 / POE-2400 / POE-2400P4 provide remote Web interface for manage; the following equipments are necessary for further management.

- 1 -


Network cables: Use standard network (UTP) cables with RJ45 connectors.

Subscriber PC installed with Ethernet NIC (Network Card)

The operate system of subscriber PC that running Windows 98/ME, NT4.0, 2000/XP, MAC OS9 or later, Linux, UNIX or other platform compatible with TCP/IP protocols.

3. Start Web Management

The PLANET POE-1200 / POE-1200P2 / POE-2400 / POE-2400P4 provide a built-in browser interface. You can manage the PoE Injector Hub remotely by having a remote host with Web browser, such as Microsoft Internet Explorer, Netscape Navigator or Mozilla Firefox.

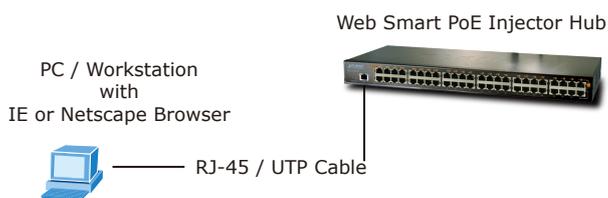

The following shows how to startup the Web Management of the PoE Injector Hub, please note the PoE Injector Hub is configured through an Ethernet connection, make sure the manager PC must be set on the same **IP subnet address**, for example, the default IP address of the PoE Injector Hub

- 2 -

is **192.168.0.100** (the factory-default IP address), then the manager PC should be set at 192.168.0.x (where x is a number between 1 and 254, except 100), and the default subnet mask is 255.255.255.0.

Use Internet Explorer 5.0 or above Web browser, enter default IP address **http://192.168.0.100**

To access the Web interface then the Web login screen appears in Figure 1

Default IP Address: **192.168.0.100**
Default Account: **admin**
Default Password: **admin**



Note

The following screen based on POE-2400P4, for POE-1200 / POE-1200P2 / POE-2400 the display will be the same to POE-2400P4.



Figure 1. Web Login Screen of POE-2400P4

- 3 -

After entering the user name and password (default user name and password is "admin") in login screen (Figure 1 appears). The Web main screen appears as Figure 2.



Figure 2. Web Main Screen of POE-2400P4

Now, you can use the Web management interface to continue the PoE Injector Hub management, please refer to the user manual for more.



Note

For security reason, please change and memorize the new password after this first setup.

- 4 -



802.3af 12/24-Port PoE Injector Hub

POE Series Quick and Easy PoE Environment Deploy



Quick Installation Guide




PLANET Technology Corp.
2010-000043-004



4. While IP Address be changed or forgotten admin password –

To reset the IP address to the default IP Address "192.168.0.100" and the user name /password to factory default mode (default user name and password is **admin**). Press the hardware reset button at the front panel about 10 seconds. After the device is rebooted, you can login the management Web interface within the same subnet of 192.168.0.xx and default user name / password.

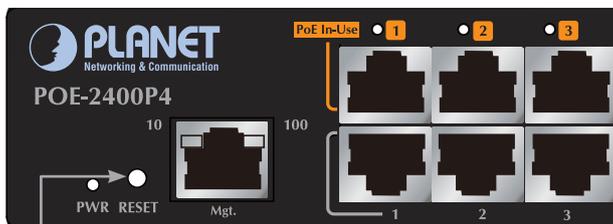

Hardware Reset button

5. Customer Support

Thank you for purchase PLANET products. You can browse our online FAQ resource at the PLANET Web site first to check if it could solve you issue. If you need more support information, please contact PLANET switch support team.

PLANET online FAQ :
<http://www.planet.com.tw/en/support/faq.php?type=2>

Switch support team mail address :
support_switch@planet.com.tw

Copyright © PLANET Technology Corp. 2009.

Contents subject to revision without prior notice.

PLANET is a registered trademark of PLANET Technology Corp. All other trademarks belong to their respective owners.