

# Unlocking the Features for the TWR-MPC5125-KIT

by: Maclain Lobdell  
Austin, Texas

## 1 Introduction

The MPC5125 tower module (TWR-MPC5125) can operate stand-alone or within the Freescale Tower System. This application note describes how to use the MPC5125 Tower System Kit (TWR-MPC5125-KIT) that includes the TWR-MPC5125, TWR-SER peripheral module, and TWR-ELEV connectors.

The MPC5125 Tower System Kit provides access to additional features of the MPC5125 including a second Ethernet port, RS232/RS485 connector, and a second CAN port.

For information on all available Tower System modules go to <http://www.freescale.com/tower>.

## Contents

|     |  |   |
|-----|--|---|
| 1   | Introduction   | 1 |
| 2   | MPC5125 Tower Kit Modules                            | 2 |
| 2.1 | TWR-MPC5125 Microprocessor Module                    | 2 |
| 2.2 | TWR-SER Peripheral Module                            | 2 |
| 2.3 | TWR-ELEV Connector Modules                           | 3 |
| 3   | Assembling the System                                | 3 |
| 4   | Enabling Both Ethernet Ports on the TWR-MPC5125-KIT3 |   |
| 4.1 | Enabling FEC1  | 3 |
| 4.2 | Enabling FEC2  | 3 |
| 4.3 | Testing Dual Ethernet Using MQX RTOS                 | 5 |
| 5   | Using the Serial Port on TWR-SER                     | 7 |
| 5.1 | Configuring the TWR-SER for RS232 Mode               | 7 |
| 5.2 | Changing the Default Serial Port to the TWR-SER      | 7 |
| 5.3 | Changing the Default Serial Port to the TWR-SER      | 8 |
| 6   | Using Both CAN Ports on the TWR-MPC5125-KIT          | 8 |
| 6.1 | TWR-MPC5125 Configuration Options for CAN2           | 9 |
| 6.2 | TWR-SER Configuration Options for CAN1               | 9 |
| 6.3 | Testing the CAN Interfaces Using MQX RTOS            | 9 |
| 7   | Document Revision History                            | 9 |

## 2 MPC5125 Tower Kit Modules

### 2.1 TWR-MPC5125 Microprocessor Module

The TWR-MPC5125 features the MPC5125, a cost and power consumption optimized, industrial networking, automotive, and human-machine interface solution. The MPC5125 provides numerous communication peripherals at a competitive price and delivers ultra-low power without sacrificing performance.

MPC5125 microprocessor highlights:

- e300c4 Power Architecture core running at 400 MHz
- Display interface supporting up to WXGA / 720 p, 24-bit color
- Up to two 10/100 Ethernet media access controller (MAC)
- Up to two USB 2.0 on-the-go (OTG) controller
- Up to four CAN 2.0A/B modules
- Up to two SD/SDIO expansion slots

TWR-MPC5125 Tower module features:

- 4 GB of MLC NAND Flash memory
- 256 MB of DDR2 SDRAM memory
- HDMI port with HDMI-DVI adaptor
- USB2.0 OTG host/device port
- On-board microphone and audio stereo out-jack
- 10/100 BaseT Ethernet port
- CAN 2.0 A/B port
- SD card interface

### 2.2 TWR-SER Peripheral Module

The TWR-SER peripheral module provides access to additional Ethernet, CAN, RS232/485, and USB ports for designers developing with the Freescale Tower System. This peripheral module is designed to be combined and used with compatible microprocessor modules such as the TWR-MPC5125.

TWR-SER peripheral module features:

- RS232/RS485 port
- 10/100 BaseT Ethernet port
- CAN 2.0 A/B port
- USB supporting host, device, and OTG modes (This USB connection is not supported by TWR-MPC5125)

## 2.3 TWR-ELEV Connector Modules

The TWR-ELEV Elevator modules are the basic building block of the Freescale Tower System. Designed to connect microcontroller and peripheral modules, the Elevator modules provide the power regulation circuitry and structural integrity needed for all configurations of an assembled Tower System.

TWR-ELEV connector module features:

- Four card-edge slots
- Standardized bus
- Two 80-pin connectors on the outside to support debugging or expansion
- Includes power regulation circuitry

## 3 Assembling the System

1. Press the Primary card edge of the TWR-MPC5125 module into any slot on the Functional Elevator connector module.

### NOTE

Take care to plug in the Primary card edge into the Functional Elevator. The Primary card edge is labeled **Primary** and typically has a white stripe along the edge. The Functional elevator is labeled **Functional Elevator** and contains power circuitry at the bottom.

2. Do the same for the TWR-SER module. Be sure to match the Primary card edge with the Functional Elevator
3. Finally, press the Dummy Elevator onto the card edges labeled **Secondary**. Be sure that all boards are connected snugly.

## 4 Enabling Both Ethernet Ports on the TWR-MPC5125-KIT

The MPC5125 has two integrated Fast Ethernet Controllers (FEC1 and FEC2).

### 4.1 Enabling FEC1

FEC1 is enabled by default and uses the Reduced Media Independent Interface (RMII) mode to communicate to the Ethernet transceiver on the TWR-MPC5125 module itself. The Ethernet port is accessible through the RJ45 jack on the TWR-MPC5125 module.

### 4.2 Enabling FEC2

FEC2 signals are multiplexed with USB1 on the MPC5125. Therefore only one of these functions can be selected at a time. By default, the USB1 function is enabled. The TWR-MPC5125 module uses demultiplexers to route the signals to the appropriate location depending on what is desired at the time. The path of the signals is selected by jumper J27. See [Figure 4-1](#) for details.

### 4.2.1 Configuring TWR-MPC5125

To enable FEC2, shunt jumper J27 on the TWR-MPC5125 module.

Remember to later remove J27 if it is desired to re-enable USB.

**NOTE**

At the time of publication, the Linux kernel that comes pre-loaded on the TWR-MPC5125 requires USB1 to be enabled to boot-up. Therefore ensure that the jumper on J27 is OFF if you desire to boot the pre-loaded Linux.

When enabled, the FEC2 RMII signals are routed to the primary edge connector that passes them to the TWR-SER module via the Elevator connector modules. FEC2 communicates to the Ethernet transceiver on the TWR-SER module.

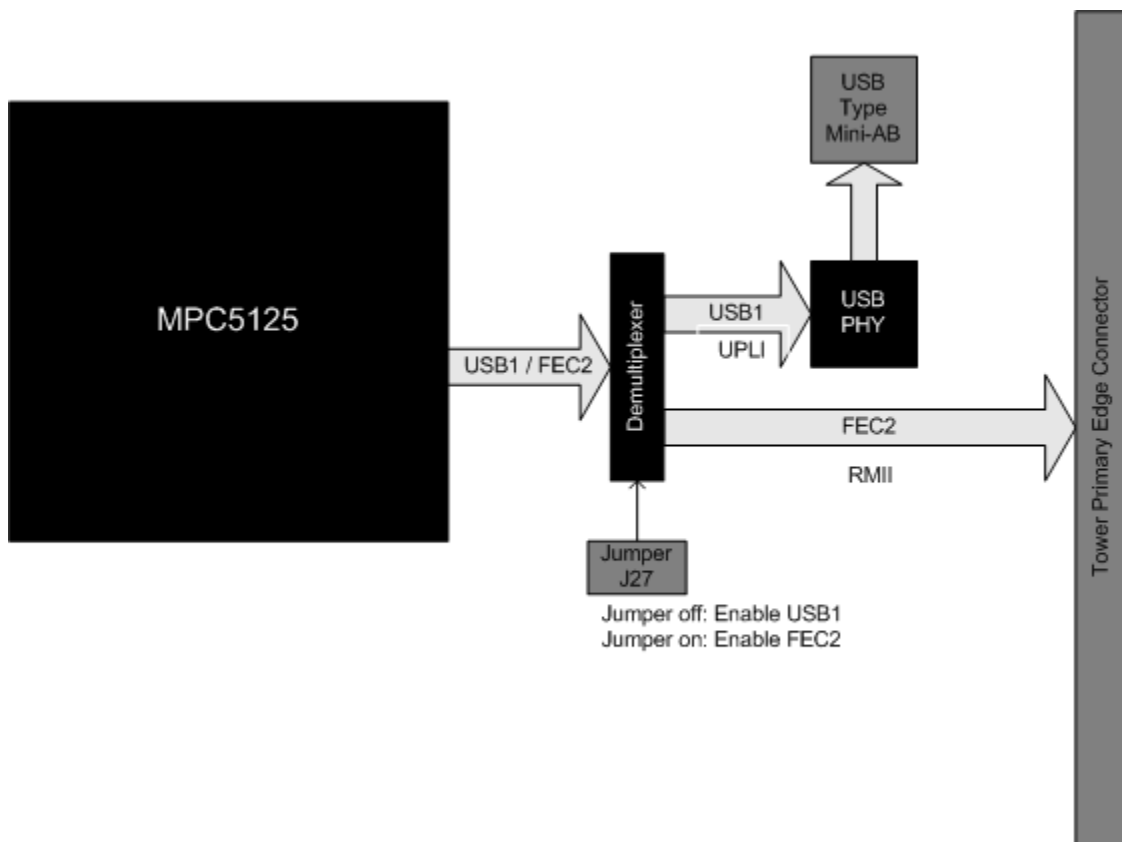


Figure 4-1. Ethernet (FEC2) / USB (USB1) demultiplexing

### 4.2.2 Configuring TWR-SER for RMII Mode

The TWR-SER module supports RMII mode with the following jumper settings.

- Jumper J12 controls the Ethernet PHY configuration. Short pins 9-10 to enable RMII mode.
- Jumper J3 controls which clock is routed to the CLOCKIN0 signal (25 or 50 Mhz). The CLOCKIN0 signal is available to the other modules in the tower system via the Elevator

connectors. On the TWR-MPC5125, this signal is required for RMII\_REF\_CLK and the frequency must be 50 Mhz. Therefore, short pins 2-3 to route the 50 Mhz to CLOCKIN0.

- Jumper J2 controls which clock (25 or 50 Mhz) is routed to the Ethernet PHY. Short pins 3-4 to route the 50 Mhz clock to the Ethernet PHY.

### 4.2.3 Summary of Settings for Enabling FEC2

TWR-MPC5125:

- J27, short 1-2

TWR-SER:

- J12, short 9-10
- J3, short 2-3
- J2, short 3-4

## 4.3 Testing Dual Ethernet Using MQX RTOS

Both Ethernet ports can be tested using the Freescale MQX Real Time Operating System (RTOS) which is available on the Freescale website at <http://www.freescale.com/mpc5125>.

Review the TWR-MPC5125 Quick Start Guide for TWR-MPC5125 (document number MPC512CYMNQSG) and MQX RTOS Lab Tutorial (document number MPC512MQXTTRL) which are available on the Freescale website at

[http://www.freescale.com/webapp/sps/site/prod\\_summary.jsp?code=TWR-MPC5125-KIT](http://www.freescale.com/webapp/sps/site/prod_summary.jsp?code=TWR-MPC5125-KIT).

### 4.3.1 Download and Install the Software

The following software is required and can be downloaded from <http://www.freescale.com/mpc5125>:

- Download and install CodeWarrior for MobileGT v9.2
- Download and install the CodeWarrior patch for MPC5125
- Download and install MQX 3.5.1 or later
- Download and install the MQX patch for MPC5125 (if applicable—see Note)

#### NOTE

A patch is required for the MQX 3.5.1 to support the MPC5125. If MQX 3.5.1 is used, then downloading and installing this patch is required.

### 4.3.2 Assemble the MPC5125 Tower Kit and Plug in the Cables

1. Plug in the USB cable from the host computer to the mini-usb connector next to the SD card slot. This provides the “virtual com port” connection that the HyperTerminal accesses for communication to the MPC5125. See the *Quick Start Guide for TWR-MPC5125* for details.
2. Plug in an ethernet cable to the RJ45 Ethernet Jack on the TWR-SER.
3. Plug in an ethernet cable to the RJ45 Ethernet Jack on the TWR-MPC5125.

4. The two ethernet connections can be made to a network router or hub, directly to a host computer, or directly together.

### NOTE

Direct Ethernet connection between the two Ethernet ports requires a crossover Ethernet cable. Direct Ethernet connection to a host computer may require a crossover Ethernet cable depending on the host computer manufacturer.

### 4.3.3 Launch the Software

1. Open HyperTerminal (or any terminal program of your choice) and select:
  - Bits per second—115200
  - Data bits—8
  - Parity—None
  - Stop bits—1
  - Flow Control—None

Choose the COM port that the Serial-to-USB bridge enumerated as. See the *Quick Start Guide for TWR-MPC5125* for details.

2. Open CodeWarrior for MobileGT v9.2
3. C:\Program Files\Freescale\Freescale MQX 3.x\rtcs\examples\shell\cwmpc92\shell\_twrmpc5125.mcp
4. Build and execute the project using the methods described in the *MPC5125 MQX RTOS Lab* document.

### 4.3.4 Send Commands Through the Terminal

When the software executes, the Shell> prompt will appear in the HyperTerminal window.

1. Type **help** for a list of all the shell commands
2. Type **help ipconfig** for a list of the ethernet commands
3. To initialize FEC1 issue the following command:

```
ipconfig 0 init
```
4. To initialize FEC2 issue the following command:

```
ipconfig 1 init
```
5. To acquire an IP address from the network for each port (if connected to a network) issue the commands:

```
ipconfig 0 dhcp
ipconfig 1 dhcp
```
6. To set a static ip addresses (192.168.0.1 and 192.168.0.2 used as examples) issue the commands:

```
ipconfig 0 staticip 192.168.0.1 255.255.255.0
ipconfig 1 staticip 192.168.0.2 255.255.255.0
```

7. Type `ipconfig 1` or `ipconfig 0` to view the ethernet port information
8. Also try `ping`, `telnet`, `ftp`, `tftp`, or `netstat`

## 5 Using the Serial Port on TWR-SER

The MPC5125 has ten Programmable Serial Controllers (PSC0-9). The PSCs can be configured to support several types of interfaces including UART, SPI, I2S, and AC97 among others.

There are 4 PSC connections supported on the TWR-MPC5125:

- PSC0 and PSC2 are designated for SPI and audio support respectively.
- PSC1 and PSC9 are designated for UART mode.
- PSC1 provides a UART serial port connection to the MCU Debug Port circuit that converts the connection to USB for communication with a host computer (Serial-to-USB bridge). This is the default serial port as described in the Quick Start Guide for TWR-MPC5125.
- PSC9 is routed to the primary edge connector. When configured for UART mode, PSC9 can communicate with the RS232 / RS485 circuit on the TWR-SER board.

### 5.1 Configuring the TWR-SER for RS232 Mode

To communicate with a standard personal computer serial port, make sure the jumpers on the TWR-SER are set for RS232 communication. This is the default option. See the TWR-SER User's Manual for details.

For RS232 operation:

- J15 shunt 1-2
- J17 shunt 1-2
- J18 shunt 1-2
- J19 shunt 1-2

### 5.2 Changing the Default Serial Port to the TWR-SER Serial Connector in MQX

The `BSP_DEFAULT_IO_CHANNEL` define can be changed in the MQX Board Support Package (BSP).

To change the default serial port to PSC9 (TWR-SER):

1. Open the BSP project in CodeWarrior 9.2
2. `C:\Program Files\Freescale\Freescale MQX 3.x\mqx\build\cwmpc92\bsp_twrmpc5125.mcp`
3. Expand the group "twrm5125 BSP Files". Open "twrm5125.h".
4. In the "DEFAULT MQX INITIALIZATION DEFINITIONS" section
5. Change the line

From:

```
#define BSP_DEFAULT_IO_CHANNEL "ittyb:"
```

To:

```
#define BSP_DEFAULT_IO_CHANNEL "ittyj:"
```

6. Click the make icon to compile the project.
7. Now open your MQX application project and recompile. Print statements will now be sent to the RS232 DB-9 Serial port connector on the TWR-SER module.

### 5.3 Changing the Default Serial Port to the TWR-SER Serial Connector in U-Boot

See the TWR-MPC5125 Users Manual for information on re-compiling and flashing U-Boot to the board.

The CONFIG\_PSC\_CONSOLE define can be changed in the board header file ads5125.h.

To change the default serial port to PSC9 (TWR-SER):

1. Download U-Boot
2. Open the file ads5125.h in the \include\configs\ directory.
3. Scroll down to the **Serial console configuration** section.
4. Change **CONFIG\_PSC\_CONSOLE** to 9.
5. Therefore, to enable PSC9, change

From:

```
/*  
 * Serial console configuration  
 */  
#define CONFIG_PSC_CONSOLE 1 /* console is on PSC1 */  
#if CONFIG_PSC_CONSOLE != 1  
#error CONFIG_PSC_CONSOLE must be 1  
#endif
```

To:

```
/*  
 * Serial console configuration  
 */  
#define CONFIG_PSC_CONSOLE 9 /* console is on PSC9 */  
#if CONFIG_PSC_CONSOLE != 9  
#error CONFIG_PSC_CONSOLE must be 9  
#endif
```

6. Compile and re-flash the board using the methods provided in the TWR-MPC5125 Users Manual.

## 6 Using Both CAN Ports on the TWR-MPC5125-KIT

There are two CAN interfaces supported on TWR-MPC5125 (CAN1 and CAN2)

The CAN1 signals are routed to the primary edge connector that passes them to the TWR-SER module via the Elevator connector modules. CAN1 communicates to the CAN transceiver on the TWR-SER module.

CAN2 signals are routed to the CAN transceiver on the TWR-MPC5125 module.



## 6.1 TWR-MPC5125 Configuration Options for CAN2

Jumper J31 enables a 120 ohm termination resistance between the CANH and CANL signals.

To enable this termination, shunt J31.

## 6.2 TWR-SER Configuration Options for CAN1

Jumper header J5 selects the modes and signal connections for CAN1.

J5 Positions:

- 1-2 Put CAN transceiver into sleep mode
- 3-4 Connect Sleep pin to CAN pin (B43)
- 5-6 Connect RXD pin to CANRX pin (B41)
- 7-8 Connect TXD pin to CANTX pin (B42)
- 9-10 Apply 120 ohm termination resistor

For typical operation:

- Shunt positions 5-6 and 7-8 to connected the CAN signals to the connector. Shunt 9-10 if the termination is desired.

## 6.3 Testing the CAN Interfaces Using MQX RTOS

To test out the CAN interfaces in MQX:

1. Launch CodeWarrior for MobileGT v9.2
2. Open and execute the mscan example project:  
C:\Program Files\Freescale\Freescale MQX 3.6\mqx\examples\can\mscan\cwmpc92\  
mscan\_twrmpc5125.mcp

### NOTE

Requires the MQX RTOS 3.6 or higher.

# 7 Document Revision History

Table 7-1. Document Revision History

| Rev. No. | Substantive Change(s) |
|----------|-----------------------|
| 0        | Initial release.      |

## How to Reach Us:

### Home Page:

[www.freescale.com](http://www.freescale.com)

### Web Support:

<http://www.freescale.com/support>

### USA/Europe or Locations Not Listed:

Freescale Semiconductor, Inc.  
Technical Information Center, EL516  
2100 East Elliot Road  
Tempe, Arizona 85284  
+1-800-521-6274 or +1-480-768-2130  
[www.freescale.com/support](http://www.freescale.com/support)

### Europe, Middle East, and Africa:

Freescale Halbleiter Deutschland GmbH  
Technical Information Center  
Schatzbogen 7  
81829 Muenchen, Germany  
+44 1296 380 456 (English)  
+46 8 52200080 (English)  
+49 89 92103 559 (German)  
+33 1 69 35 48 48 (French)  
[www.freescale.com/support](http://www.freescale.com/support)

### Japan:

Freescale Semiconductor Japan Ltd.  
Headquarters  
ARCO Tower 15F  
1-8-1, Shimo-Meguro, Meguro-ku,  
Tokyo 153-0064  
Japan  
0120 191014 or +81 3 5437 9125  
[support.japan@freescale.com](mailto:support.japan@freescale.com)

### Asia/Pacific:

Freescale Semiconductor China Ltd.  
Exchange Building 23F  
No. 118 Jianguo Road  
Chaoyang District  
Beijing 100022  
China  
+86 10 5879 8000  
[support.asia@freescale.com](mailto:support.asia@freescale.com)

### For Literature Requests Only:

Freescale Semiconductor Literature Distribution Center  
1-800-441-2447 or 303-675-2140  
Fax: 303-675-2150  
[LDCForFreescaleSemiconductor@hibbertgroup.com](mailto:LDCForFreescaleSemiconductor@hibbertgroup.com)

Information in this document is provided solely to enable system and software implementers to use Freescale Semiconductor products. There are no express or implied copyright licenses granted hereunder to design or fabricate any integrated circuits or integrated circuits based on the information in this document.

Freescale Semiconductor reserves the right to make changes without further notice to any products herein. Freescale Semiconductor makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Freescale Semiconductor assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters that may be provided in Freescale Semiconductor data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals", must be validated for each customer application by customer's technical experts. Freescale Semiconductor does not convey any license under its patent rights nor the rights of others. Freescale Semiconductor products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Freescale Semiconductor product could create a situation where personal injury or death may occur. Should Buyer purchase or use Freescale Semiconductor products for any such unintended or unauthorized application, Buyer shall indemnify and hold Freescale Semiconductor and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Freescale Semiconductor was negligent regarding the design or manufacture of the part.

RoHS-compliant and/or Pb-free versions of Freescale products have the functionality and electrical characteristics as their non-RoHS-compliant and/or non-Pb-free counterparts. For further information, see <http://www.freescale.com> or contact your Freescale sales representative.

For information on Freescale's Environmental Products program, go to <http://www.freescale.com/epp>.

Freescale™ and the Freescale logo are trademarks of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners.  
© Freescale Semiconductor, Inc. 2010. All rights reserved.