

EGA *Master* S.A.
ART IN INNOVATION

LASER DISTANCE DETECTOR

COD. 51269



EGATRONIK



PRODUCT INTRODUCTION

Code 51269, Handheld Laser Distance Meter, is specially designed for users. It is a meter with high-precision and multi-function distance measurement. Code 51269 can measure distance, area and volume, Pythagorean Laws can also be used in code 51269 to measure indirectly. Code 51269 which is light, easy to use and reliable to measure, can make sure your measurement more accuracy, easier and faster.

Code 51269 can widely apply to Construction, Upholster, Property, Traffic, Fire-Fighting, Gardens, Urban Planning, Water Monitoring, Electric Power Overhaul, etc. As the replacer of traditional measuring instrument (for example, measuring tape), code 51269 is your best choice.



UNPACKING INSPECTION

Unpack and check, if there is any damage or loss.

1. Mainframe one unit
2. User manual one copy
3. AAA battery(2 × 1.5V) one piece
4. Carrying case one unit
5. Mini screwdriver one piece



SAFETY INSTRUCTION



PERMITTED USE

- Measuring distances
- Computing functions, e. g. areas and volumes
- Indirect Measuring with Pythagorean Prohibited use
- Using the instrument without instruction
- Using outside the stated limits
- Deactivation of safety systems and removal of explanatory and hazard labels
- Opening of the equipment by using tools (screwdrivers, etc.), as far as not specifically permitted for certain cases
- Carrying out modification or conversion of the product

- Use of accessories from other manufacturers without the express approval of manufacturer.
- Deliberate or irresponsible behavior on scaffolding, when using ladders, when measuring near machines which are running, or near parts of machines or installations which are unprotected
- Aiming directly into the sun or glare
- Deliberate dazzling of third parties; also in the dark Inadequate safeguards at the surveying site (e.g. when measuring on roads, construction sites, etc.)



LASER CLASSIFICATION

The code 51269 produced a visible laser beam which emerges from the front of the instrument.

Laser Class II products:

Do not stare into the laser beam or direct it towards other people unnecessarily. Eye protection is normally afforded by aversion responses including the blink reflex.

WARNING

Looking directly into the beam with optical aids (e.g. binoculars, telescopes) can be hazardous.

Precautions:

Do not look directly into the beam with optical aids.

CAUTION

Looking into the laser beam may be hazardous to the eyes.

Precautions:


Do not look into the laser beam. Make sure the laser is aimed above or below eye level.



METER STRUCTURE


Keypad

1. ON / MEAS (On/measuring) button
2. Area / volume button
3. Indirect measurement button
4. Continuous measurement button
5. Plus (+) button
6. Minus (-) button
7. Storage button
8. Reference level button
9. Illuminating button
10. Clear/off button

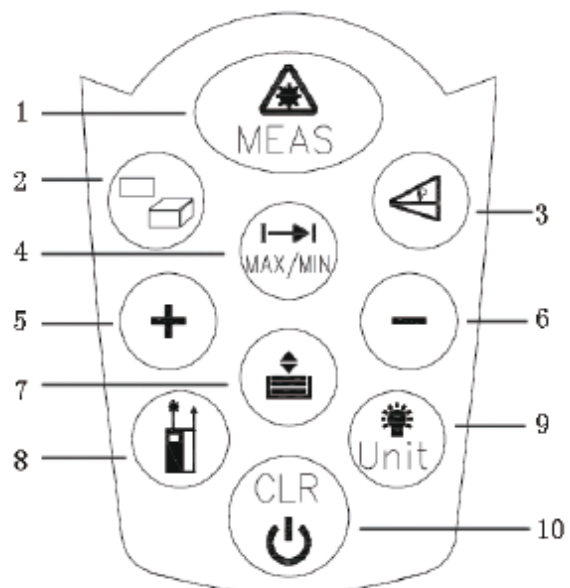

LCD Display

- 1 Laser active
- 2 Reference level (front)
- 3 Reference level (rear)
- 4 Reference level (End piece)
- 5 Continuous measurement
- 6 Instrument error warning
- 7,8,9,10,11
Variable measuring functions
Length measurement
Area measurement
Volume measurement
Indirect (2 times) measurement
Indirect (3 times) measurement
- 12 Battery status
- 13 Historical memory, call up values
- 14 First value display line, minimum value
- 15 Second value display line, maximum value
- 16 Third value display line
17. Summary line for last measure or calculation result

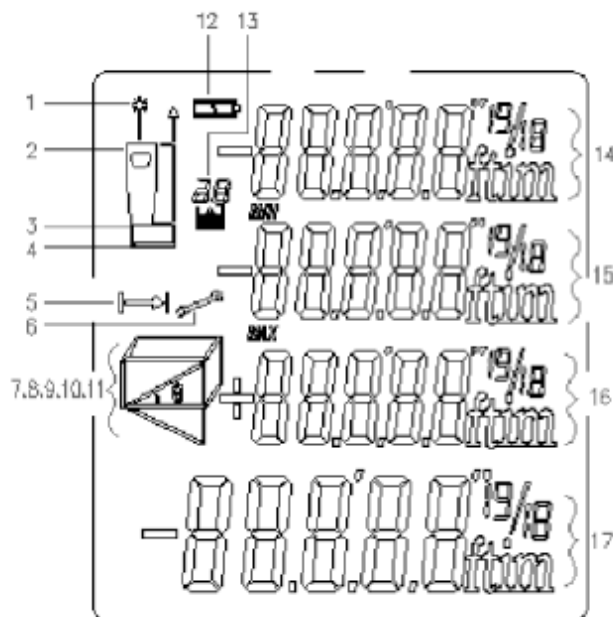

SETTING AND OPERATION OF METER



Switching on and off



Switches on the instrument and laser.

Press this button longer to switch off the instrument..

The instrument switches off automatically after three minutes of inactivity.

CLEAR button



The last action is cancelled or the data display is cleared.



REFERENCE LEVEL SETTING



The default reference setting is from the rear of the instrument.

Press this button  to take the selection from the front edge . A special beep sounds whenever the reference setting is changed. After a re-startup the reference returns automatically to the default setting (rear reference).

Press this button  again to take the next selection from end piece edge.

Press this button , to set the rear reference again.

In a word, to select the reference level, push button  repeatedly until the required reference level is indicated in the display. Each time after switching on, the rear edge of the measuring tool is preset as the reference level.



DISPLAY ILLUMINATION

 Click illumination button of the display can be switched on or off, User can trigger the function when he/she is in darkness situation. The value is clear viable on the LCD.



DISTANCE UNIT SETTING FOR INSTRUMENT

 Click the button longer change the next type of unit, m, ft. in, ft/in then to continue click the button for the next unit selection.



MEASURING



SINGLE DISTANCE MEASUREMENT




Press to activate the laser. Press again to trigger the distance measurement. The measured value is displayed immediately.

Continuous Measurement & Max and Min Measurement The continuous measurement function (tracking) is used for the transferring of measurements, e.g., from construction plans. In continuous measurement mode, the measuring tool can be moved close to the target, whereby the measured value is updated approx. every 0.5 seconds. The corresponding dynamically maximum and minimum values are displayed in the first and second line.

As an example, the user can move from a wall to the required distance, while the actual distance can be read continuously. For continuous measurement, press  button until the indicator for continuous measurement appears in the display. And press it again or press  to stop the function.

The function is terminated after 5 minutes' continuous measurement.

With this function, customers can measure the max and min distance from a certain point.

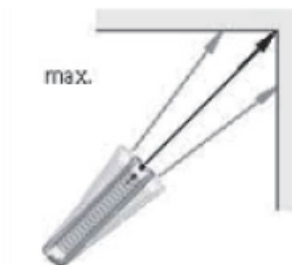



FUNCTIONS



ADDITION / SUBTRACTION DISTANCE MEASURING.

 The next measurement is added to the previous one, then press the button , the second measured value is shown and the result is shown automatically.  The next measurement is subtracted from the previous one. Then press the button , the result is shown in the summary line with the previous value in the second line. Operate the above steps repeatedly, the meter will add or reduce cumulatively.  The last step is cancelled.



AREA

 Press once. The  symbol appears in the display.
Press  button to take the first length measurement (e.g. length).
Press  again to take the second length measurement (e.g. width).
After taking the second measurement, the area/surface is automatically calculated and displayed in the summary line. The last individual measured value is indicated at the second line in the display.



VOLUME

For volume measurements, push button  twice until the  indicator for volume measurement appears in the display.

Afterwards, Press this button  to measure the length.
Press this button  for width.

Press button  to take the height,
After taking the third measurement, the volume is automatically calculated and displayed. The last individual measured value is not displayed.



INDIRECT MEASUREMENT

when measuring heights that require the measurement of two or three measurements ,as following step:



USING 2 MEASUREMENTS



Press this button , the display  shows.

 Aim at the upper point (1) and trigger the measurement. After the first measurement, the value is adopted.

Keep the instrument as horizontal as possible.

Aim at the lower point (2), press this button , the second distance is measured and adopted. Meanwhile, the height of (1) and (2) are displayed in the summary line.




USING 3 MEASUREMENTS

Press this button  twice; the display shows the symbol .

Aim at the upper point (1) and press the button  to trigger the measurement. After the first measurement the value is adopted.

Keep the instrument as horizontal as possible.

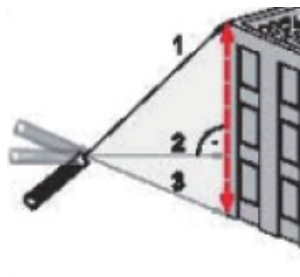

Aim at the upper point (2) and press the button . The value is measured and adopted.

Aim at the lower point (3) and press the button  to trigger the measurement.

Meanwhile, the height of (1) and (3) will be shown in summary line.

Press the button , the meter will return to single measurement status.



HISTORICAL STORAGE

Continue press  the next value of previous 20 records (measurements or calculated results) are shown in the reverse order.

Press  to retrieve the next value of 20 records .

Press  then retrieve the previous value of 20 records.



TECHNICAL SPECIFICATIONS



GENERAL CHARACTERISTICS

Measurement Distance	0.1m ~ 60m (4 in ~ 197 ft)
Measurement Speed	3 times / s
Battery Type	AAA 2 x 1.5V
Battery Life	up to 3,000 measurements
Battery indicator	Three states: full, medium, low
Dimension	116 x 49 x 28 mm
Weight	100g (Including batteries)
Laser Type	635nm < 1mW
Laser	Class Class II
Dust Protect/Splash	proof IP54
Auto power off	after 3 min
Auto laser switch-off	after 0.5 min



ENVIRONMENTAL REQUIREMENTS

Altitude:	2000m
Operating Temperature	0°C to +40°C (+32°F to +104°F)
Storage Temperature	-10 °C to +60°C (14°F to +140°F)



FOLLOWING STANDARDS

EN61326-1	EMC;
EN60825-1	Laser Safety



SPECIFICATIONS

Laser distance meter	Code 51269	
Basic functions	Range	Accuracy
Measuring distances	0.1m ~ 60m*	± 1.5 mm**
	4 in ~ 197 ft	± 0.06 in
	Measuring units: m / in / ft	
Special functions		Explanation
Area, Volume Calculations	√	m2 / ft2 / m3 / ft3
Indirect Measuring with Pythagorean	√	Two or three measurements
Addition/Subtraction	√	

Continuous Measurement	√	
Max/Min	√	
multi-line display	√	Up to four lines show
Reference level setting	√	Front edge or end piece edge
Buzzer indication	√	
Backlight	√	white
Auto Bias Technology™	√	Support for external calibration
error indication	√	Display error code
Hold	√	Automatic
History measurement recodes	√	20 records
Clear	√	
Keyboard Type	Super Soft-Touch (Long life) Over 1 Million Times	

* during daylight or if the target has poor reflection properties!

** in favorable conditions (good target surface properties, room temperature)

up to 60 m. In unfavorable conditions, such as intense sunshine, poorly reflecting target surface (black surface) or high temperature variations, the deviation over distances above 10m may increase more.



MAINTENANCE



Warning: during replacing battery or measuring, keep the sensitive mirror from scratch or dirt to avoid damaging the mirror or influencing the measuring precision; and do not charge the replaced battery to avoid explosion and safety accident!




BATTERY INSTALLATION AND REPLACEMENT

- When the symbol  flashes permanently in the display replace the battery immediately. Use alkaline batteries only.
- Remove the batteries before any long period of non-use to avoid the danger of corrosion.

As following steps:

- Turn of the screw, remove battery compartment lid.
- Insert batteries in the two space respectively, observing correct polarity.
- Close the battery compartment again, and fix the screw for reliability.

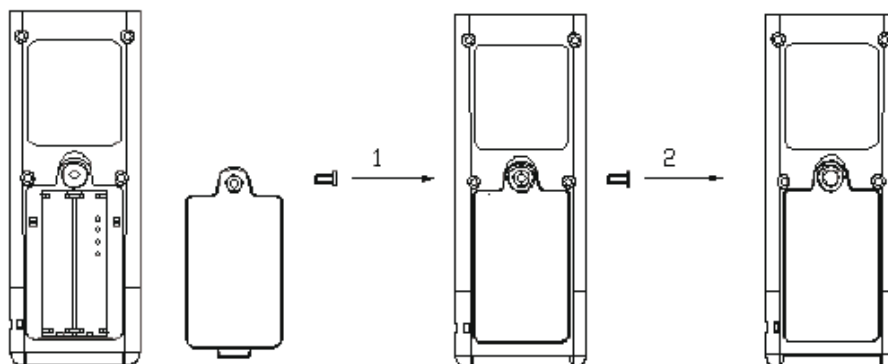

GENERAL MAINTENANCE

When the surface of meter is dirty, clean with wet cloth and neutral detergent, grinding miller and solvent are forbidden.

When the meter is damaged and needs to be repaired, please send it to the designated maintenance center of our company for repair by professional service man, do not repair it without authorization.

Especially in the process of using, keep the sensitive mirror of meter away from scratch or dirt to avoid damaging the mirror or influencing the measuring precision.

Remove the battery if it won't be used for a long time.

Troubleshooting – Causes and Corrective Measures

All message codes are displayed with either or "Error". The following errors can be corrected:

Code	Cause	Corrective Measure
204	Calculation error	Refer to user menu, repeat the procedures
208	Temperature too high The measuring tool is outside the operating temperature range from 0 °C to +40 °C	Cool down instrument, make it working in stable temperature environment
253	Temperature too high	Cool down the instrument
255	Receiver signal too weak, measurement time too long	Use target plate or change a good refraction
256	Received signal too strong	Target too reflective use target plate or do not aim at strong light objective
Error	Hardware error and uncertainty error	Switch on/off the device several times. If the symbol still appears, try to replace the battery, Otherwise your instrument is defective. Please call your dealer for assistance



NOTES

IMPORTANT!

The maker will not take responsibility for damage or malfunction as a result of the device being incorrectly used or, applied for a purpose for which it was not intended.



■ According to Waste Electrical and Electronic Equipment directive (WEEE), these ones must be collected and arranged separately. If you have to throw them out, please, do not use the usual rubbish. Please, contact your distributor for free recycling.



GUARANTEE

The maker guarantees to the device owner 12 months against any manufacture defect.
This guarantee do not cover the parts which are consumables.

Note: to apply the guarantee its necessary to send the “GUARANTEE CERTIFICATE” duly filled within one week after purchased the machine to the maker.

ARTICULO / ITEM / ARTICLE:

Nº DE SERIE / SERIE Nº / Nº SERIE:

DISTRIBUIDOR / DISTRIBUTOR / DISTRIBUTEUR:

PAIS / COUNTRY / PAYS: TEL:.....

FECHA DE VENTA / SALE DATE / DATE VENTE:.....

NOMBRE DEL COMPRADOR / BUYER NAME / NOM DE L'ACHETEUR:.....

TEL. COMPRADOR / BUYER TEL. / TEL. DE L'ACHETEUR:.....

EGA MASTER GARANTIZA AL COMPRADOR DE ESTA MAQUINA LA GARANTIA TOTAL (DURANTE 12 MESES), DE LAS PIEZAS CON DEFECTOS DE FABRICACION. ESTA GARANTIA NO CUBRE AQUELLAS PIEZAS QUE POR SU USO NORMAL TIENEN UN DESGASTE. PARA OBTENER LA VALIDEZ DE LA GARANTIA , ES ABSOLUTAMENTE IMPRESCINDIBLE QUE COMPLETE Y REMITA ESTE DOCUMENTO A EGA MASTER , DENTRO DE LOS SIETE DIAS A PARTIR DE LA FECHA DE COMPRA.

EGA MASTER GUARANTEES TO THE BUYER OF THIS MACHINE THE TOTAL WARRANTY (DURING 12 MONTHS), OF THE PIECES WITH MANUFACTURING FAULTS. THIS GUARANTEE DOES NOT COVER THOSE PIECES WORN OUT DUE TO A NORMAL USE. IN ORDER TO OBTAIN THE VALIDITY OF THIS WARRANTY , IT IS ABSOLUTELY NECESSARY TO FULFILL THIS DOCUMENT AND RESEND IT TO EGA MASTER WITHIN 7 DAYS FROM SALE DATE.

EGA MASTER GARANTIE A L'ACHETEUR DE CETTE MACHINE LA GARANTIE TOTALE (PENDANT 12 MOIS) DES PIECES AVEC DEFATS DE FABRICATION. CETTE GARANTIE NE COUVRE PAS LES PIECES QUE PAR UN USAGE NORMAL, SOIENT DETERIOREES. POUR OBTENIR LA VALIDITE DE LA GARANTIE, IL EST ABSOLUMENT IMPERATIF COMPLETER ET ENVOYER CE DOCUMENT EGA MASTER, DANS UN DELAI DE 7 JOURS A PARTIR DE LA DATE D'ACHAT.

SELLO / STAMP / CACHET

EJEMPLAR PARA EGA MASTER / COPY FOR EGA MASTER / EXEMPLAIRE POUR EGA MASTER

ARTICULO / ITEM / ARTICLE:

Nº DE SERIE / SERIE Nº / Nº SERIE:

DISTRIBUIDOR / DISTRIBUTOR / DISTRIBUTEUR:

PAIS / COUNTRY / PAYS: TEL:.....

FECHA DE VENTA / SALE DATE / DATE VENTE:.....

NOMBRE DEL COMPRADOR / BUYER NAME / NOM DE L'ACHETEUR:.....

TEL. COMPRADOR / BUYER TEL. / TEL. DE L'ACHETEUR:.....

EGA MASTER GARANTIZA AL COMPRADOR DE ESTA MAQUINA LA GARANTIA TOTAL (DURANTE 12 MESES), DE LAS PIEZAS CON DEFECTOS DE FABRICACION. ESTA GARANTIA NO CUBRE AQUELLAS PIEZAS QUE POR SU USO NORMAL TIENEN UN DESGASTE. PARA OBTENER LA VALIDEZ DE LA GARANTIA , ES ABSOLUTAMENTE IMPRESCINDIBLE QUE COMPLETE Y REMITA ESTE DOCUMENTO A EGA MASTER , DENTRO DE LOS SIETE DIAS A PARTIR DE LA FECHA DE COMPRA.

EGA MASTER GUARANTEES TO THE BUYER OF THIS MACHINE THE TOTAL WARRANTY (DURING 12 MONTHS), OF THE PIECES WITH MANUFACTURING FAULTS. THIS GUARANTEE DOES NOT COVER THOSE PIECES WORN OUT DUE TO A NORMAL USE. IN ORDER TO OBTAIN THE VALIDITY OF THIS WARRANTY , IT IS ABSOLUTELY NECESSARY TO FULFILL THIS DOCUMENT AND RESEND IT TO EGA MASTER WITHIN 7 DAYS FROM SALE DATE.

EGA MASTER GARANTIE A L'ACHETEUR DE CETTE MACHINE LA GARANTIE TOTALE (PENDANT 12 MOIS) DES PIECES AVEC DEFATS DE FABRICATION. CETTE GARANTIE NE COUVRE PAS LES PIECES QUE PAR UN USAGE NORMAL, SOIENT DETERIOREES. POUR OBTENIR LA VALIDITE DE LA GARANTIE, IL EST ABSOLUMENT IMPERATIF COMPLETER ET ENVOYER CE DOCUMENT EGA MASTER, DANS UN DELAI DE 7 JOURS A PARTIR DE LA DATE D'ACHAT.

SELLO / STAMP / CACHET

EJEMPLAR PARA EL CLIENTE / COPY FOR THE CUSTOMER / EXEMPLAIRE POUR LE CLIENT



EGA *Master* S.A.
ART IN INNOVATION

C/ ZORROLLETA 11, POL. IND. JUNDIZ
01015 VITORIA, SPAIN P.O.B. APTDO. 5005
TEL. 34 - 945 290 001 FAX. 34 - 945 290 141
master@egamaster.com

www.egamaster.com