

Scale Printer

BC-3000

USER'S MANUAL



WARNING

- Do not carry out installation, operation, service, or maintenance until thoroughly understanding the contents of this manual.
- Keep this manual available at all times for installation, operation, service, and maintenance.

ISHIDA CO., LTD.

You can help improve this manual by calling attention to errors and by recommending improvements. Please convey your comments to the nearest Ishida Company regional representative. **Thank you!**

Copyright • 1996 by Ishida Co., Ltd. All Rights Reserved.

No part of this manual may be reproduced in any form, by mimeograph or any other means, without written permission of the publisher.



SAFETY CONSIDERATIONS

To ensure safe operation, the general safety considerations below must be followed.

Grounding

This instrument is a Class 1 device which requires protective grounding for safe operation.

To avoid potential shock hazards, a protective grounding conductor for the instrument must be securely connected to the main grounding provision by qualified service personnel.

Do not remove covers or enclosures

To avoid personal injury and shock, do not open or remove any covers or enclosures of the instrument unless specified in the manual.

Do not perform unspecified maintenance

 
For your personal safety, do not perform any maintenance procedures which are not specified in the manual.

Disconnect power supply before servicing


To ensure your personal safety, disconnect the power supply before servicing.




CAUTIONS FOR USE

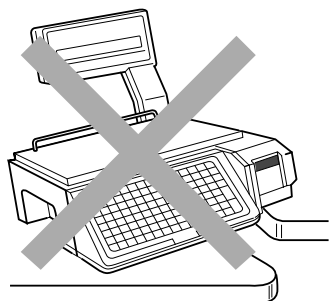

 
- ▶ Always operate the scale on a level surface.

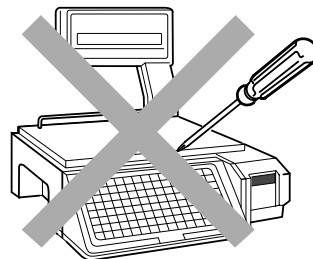


- ▶ Do not disassemble the scale.

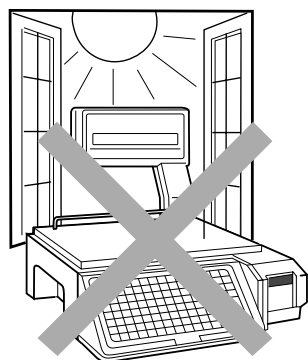 

 
- ▶ Do not expose the scale too long periods of direct sunlight.

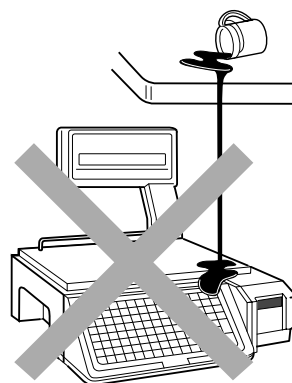

 
- ▶ Do not allow any liquids to come into contact with the scale or terminal.

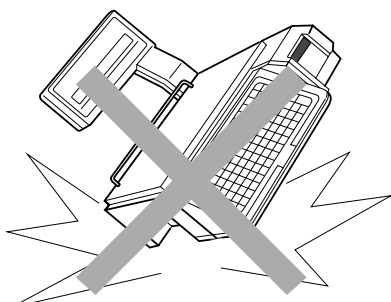

 - ▶ Do not drop or apply a strong shock to the scale.

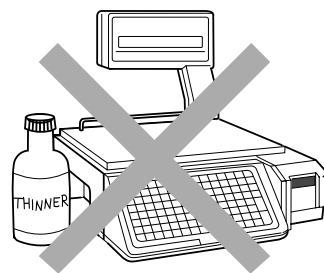

 - ▶ When cleaning the scale, only use a soft dry cloth or a cloth wetted with a neutral cleanser. Never use thinner or other volatile liquids.

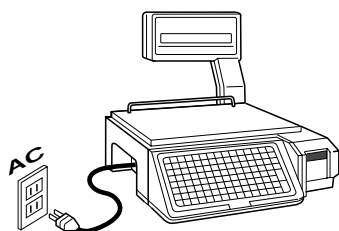

Always operate the scale with the same rated AC power supply shown on the specification plate.

Contents

Chapter 1 Overview

1.1	Appearance	2
1.2	Display	2
1.3	Operation Keys	3
1.3.1	Operation Key Sheet	3
1.3.2	Basic Function Keys	4
1.3.3	Additional Function Keys	5
1.4	Program Keys	6
1.4.1	Program Key Sheet	6
1.4.2	Program Key Functions	7
1.4.3	Speed Key Functions	8
1.5	Loading Label/Paper Roll	9

Chapter 2 Daily Operation

2.1	Pre-operation Inspection	12
2.2	Power On	13
2.3	Sales by Weight	14
2.4	Fixed-price Sales	15
2.5	Fixed-price Sales with Weight	16
2.6	Prepack for Sales by Weight	17
2.7	Prepack for Fixed-price Sales	18
2.8	Prepack for Fixed-price Sales with Weight	19
2.9	Label Batch Print	20
2.10	Pack Count Sub-total	21
2.11	Mark Down Functions	22
2.11.1	Amount Discount	22
2.11.2	Percentage Discount	22
2.11.3	Special Price	22
2.12	Unit Price Override	23
2.13	Voiding the Last Label	23
2.14	Switching from Sale by Weight to Fixed-price Sale	23
2.15	Selecting Lower Preset Data	23
2.16	Pack Date Override	24
2.17	Save Function	24

Chapter 3 Subtraction

3.1	Subtraction Mode	26
-----	------------------------	----

Chapter 4 Total Reports

4.1	Total Reports	30
4.2	Total Mode	30

4.3	Daily Total Report	31
4.3.1	Daily Report Categories	31
4.3.2	Operation Procedure	32
4.4	Monthly Total Report	33
4.4.1	Monthly Report Categories	33
4.4.2	Operation Procedure	34
4.5	Hourly Total Report	35
4.6	Operator Total Report	36
4.7	Total Clear	37

Chapter 5 Programming

5.1	Programming PLUs	40
5.2	Deleting PLUs	45
5.3	Programming Message Files	46
5.4	Deleting Message Files	47
5.5	Programming Date and Time	48
5.6	Programming Store Names and Addresses	49
5.7	Deleting Store Names and Addresses	50
5.8	Programming Preset Keys	51
5.9	Deleting All Preset Keys	52
5.10	Printing PLU/Message Information	53
5.11	Programming Department Codes and Names	55
5.12	Deleting Department Codes and Names	56
5.13	Programming Group Codes and Names	57
5.14	Deleting Group Codes and Names	58
5.15	Programming Operator Codes and Names (Optional)	59
5.16	Deleting Operator Codes and Names (Optional)	60

Chapter 6 Text Editing

6.1	Text Entry Screen	62
6.1.1	Indicators	62
6.1.2	7-Segment Display Characters	62
6.2	Character Size	63
6.3	Text Editing Keys	64
6.4	How to Create/Edit Text	65
6.5	How to Reverse Text	66
6.6	How to Insert Characters	68

Chapter 7 Troubleshooting

7.1	Troubleshooting	70
7.2	Other Problems	71

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)