



INSTALLATION GUIDE

RC1000 7" LCD MONITOR



BOX CONTENTS



- 1 x 7" Monitor,
- 1 x Dashboard mounting bracket,
- 1 x Power/audio/video wiring loom
- 1 x Remote control

MONITOR




- 1 Power
- 2 V1 (channel 1) V2 (channel 2)
- 3 Decrease Setting
- 4 Menu
- 5 Increase Setting

1 2 3 4 5

SPECIFICATION



Model	RC1000
Screen Size	7 inch
Aspect Ratio	16:9
Luminance	300 cd/m ²
Resolution	480 x 234 RGB
Audio & Video	2 video/2 audio input (dual channel, single image display)
System	PAL & NTSC automatically
Voltage	12V~24V
Language	English, French, German, Turkish, Spanish, Portuguese, Italian, Dutch.
OSD Menu	
Built-in Speaker	

REMOTE CONTROL

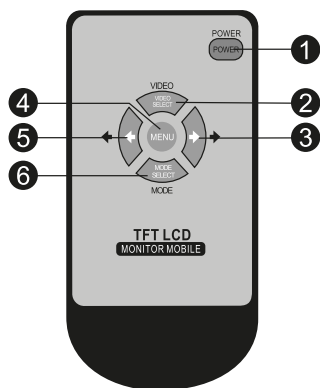


- 1 Power
- 2 V1 (channel 1) V2 (channel 2)
- 3 Up
- 4 Menu
- 5 Down
- 6 Mode Selection

CONNECTION

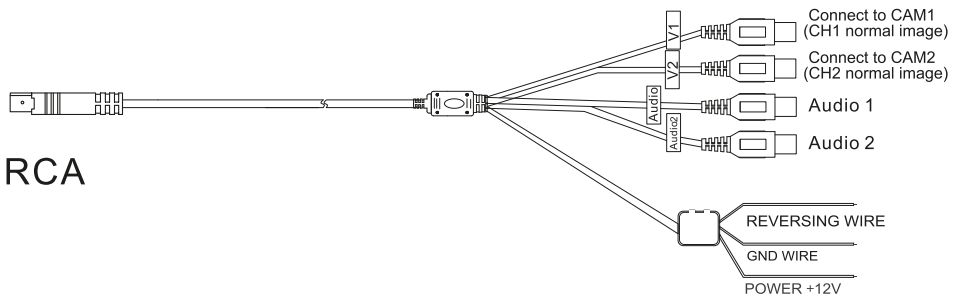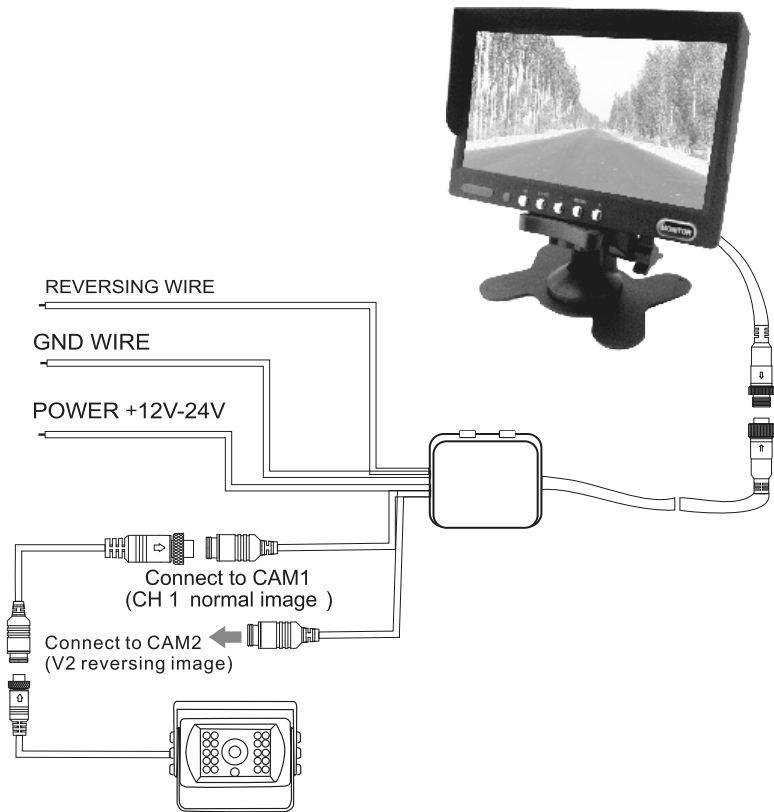


INSTALLATION

1

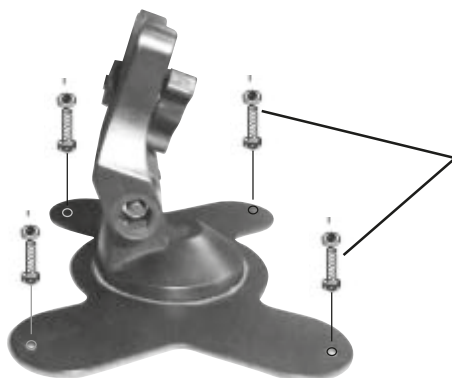

2

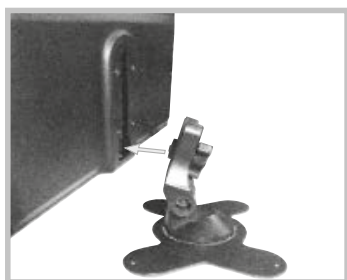


3



4



5

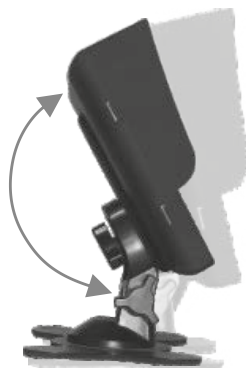

SERVICE UNDER WARRANTY

RC1000 comes with a standard 12 month manufacturer's warranty. If, for some reason your unit requires service under warranty return RC1000 by special delivery and in suitable packaging to:

**The Returns Dept., Performance Products Limited,
Cleaver House, Sarus Court, Manor Park, Runcorn WA7 1UL**

Enclose the following information:

- (a) Your name, address and a full description of the problem.
- (b) A telephone number where you can be reached during business hours.
- (c) Serial number of your unit.
- (d) Proof of Purchase

PLEASE NOTE: We cannot process any warranty claims unless proof of purchase is provided. Please retain your receipt as a precaution. Full terms and conditions of warranty are available on request.

Disposal of Old Electrical & Electronic Equipment

This symbol on a product or its packaging indicates that this product shall not be treated as household waste. It should be handed over to an applicable collection point for the recycling of electrical equipment.



By ensuring that this product is disposed of correctly you will help/ prevent potential negative impact on the environment. The recycling of materials will help to conserve natural resources.

For further details about recycling please contact your local civic office or the shop where it was originally purchased.

Disposing of the Battery

Please check with your local waste management service authority regarding regulations for the safe disposal of the battery. The battery should never be placed in municipal waste. Use a battery disposal facility if available.

Copyright UK

Copyright ©2014 SNOOPER. All rights reserved. Product specifications and features are for reference only and are subject to change without prior notice.

Declaration

This User Manual is published by SNOOPER without any warranty. Improvement and changes to this User Manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Performance Products Limited any time and without notice. Such changes will, however, be incorporated into new editions of this User Manual.