ActiView

Visual Presenter Image Software User Manual

Date: 2009/06/16



English - 0

Contents

Introduction	2
System requirement	2
Before install	2
Install ActiView in Windows XP	3
Install ActiView in Windows Vista	5
Verifying the Installation is Completed	.6
Operation	6
Main Menu	6
Annotation Tools	.7
Camera Settings	.8
Options	.8
	Introduction System requirement



1.Introduction

ActiView PC and USB driver which support WIA and TWAIN standards.

After installing the USB driver and ActiView application, you can use the software to:

- Control the AV322.
- Capture and record images.
- > Annotate images, highlight important details and save them for later use.

2.System requirement

Windows XP	Windows Vista	MAC OS X v10.4.10, v10.5
 CPU: P4 2.8 GHz and above Memory: 512MB Support Direct X 9 Resolution: 1024x768 Minimum Hard Disc Space Required: 100MB 	 CPU: P4 2.8 GHz and above Memory: 1GB Support Direct X 9 Resolution: 1024x768 Minimum Hard Disc Space Required: 100MB 	 CPU: PowerPC G4 866MHz or Intel Pentium[®] 1.83GHz Intel Core 2 Duo processor Memory: 512MB 1,024x768 screen resolution and 24-bit color display Minimum Hard Disc Space Required: 1GB QuickTime 7.4.5 above

3.Before install

- 3.1. Connect the power cord of the Visual Presenter.
- 3.2. Turn on the Visual Presenter.
- 3.3. Connect USB cable to the Visual Presenter and your computer. Then, as shown below, the computer will automatically detect new hardware.
- 3.4. Press Cancel to skip the [Found New Hardware]





4.Install ActiView in Windows XP

4.1. Click the [Setup.exe] to start the installation wizard of ActiView.



4.2. Follow the screen instructions and press [Next].



4.3. Press [Yes] to create a ActiView shortcut at your desktop.

Question	ı 🔣
2	Do you want to create a ActiView shortcut at your desktop?
	Yes No



4.4. Follow the screen instructions and press [Next].



4.5. Please select [Continue].



4.6. Once the installation is completed, press [Finish] to reboot the system.





5.Install ActiView in Windows Vista

- 5.1. Click the [Setup.exe] to start the installation wizard of ActiView.
- 5.2. Follow the screen instructions and press [Next].

ActiView - InstallShield Wizard		ActiView - InstallShield Wizard	
	Welcome to the InstallShield Wizard for ActiView	License Agreement Please read the following license agreement carefully.	4
	The InstallShield Wizard will install ActiView on your computer. To continue, click Next.	Lumens Digital Optics Inc. Software License Agreement ATTENTION: USE OF THE SOFTWARE IS SUBJECT TO THE LUMENS SOFTWARE LICENSE TERMS SET FORTH BELOW. Lumens Digital Optics Inc. Software License Terms The following License Terms gover use of the accompanying Software unless you have a separate written agreement with Lumens. 1. License Grant Lumens grants you a license to Use one copy of the Software. "Use" means storing, loading, installing, executing or displaying the Software. 2. Ownership I accept the terms of the license agreement I do not accept the terms of the license agreement Installing	•
	<back next=""> Cancel</back>	< Back Next > Cancel	I
ActiView - InstallShield Wizard		ActiView - InstallShield Wizard	
Customer Information Please enter your information.		InstallShield Wizard Complete	
User Name:		Click Finish to exit the wizard.	
Company Name:			
Promethean			
Install this application for:			
Anuoni	e who uses this computer (all users)		
 Only for 	r me (SW)		
	а Шо (о м).		
InstallShield	< <u>B</u> ack Next > Cancel	< <u>B</u> ack Finish Cane	el

5.3. Press **[Yes]** to create a <u>ActiView shortcut at your desktop.</u>



5.4. Please click the **[Finish]** button then reboot the system.





6. Verifying the Installation is Completed

6.1. Find the ActiView icon on the desktop of the computer.



6.2. Double click on the icon or select [Program] / [Start] / [Programs] / [ActiView].



7. Operation

7.1 Main Menu



G	POWER : Turn the visual presenter on / off	0	LAMP : Turn the lamp on / off
3	AUTO TUNE: Automatically adjust the image for best possible quality.	B	PREVIEW : Display live images
•	OPTIONS : Select video compression method and the audio source.	***	BRIGHTNESS: Adjust image brightness
×	MAIN: Launch the main functions menu Right click on this icon to show information about the ActiView.	9	ZOOM: Zoom in/out from the image
	CAMERA SETTING: Launch the Camera Setting window to adjust live images		ADVANCE: Launch the advanced functions menu
0	FREEZE: Freeze a live image	Q	ANNOTATION: Display annotation tools
×	CLOSE: Close the advanced functions menu	3	TIME LAPSE PHOTOGRAPHY: Capture images at a pre-set intervals
F	RECORD: Record videos	E Contraction de la contractio	CAPTURE: Capture still images

PROMETHEAN

7.2 Annotation Tools



ICON	Description
	Pointer tool
•••	Laser tool
T	Insert text
	Draw a line
0	Draw an ellipse
	Draw a rectangle
	Free-hand drawing tool
۲	Eraser
	Clear all
	Select pen color
Line Width 1	Select line thickness



7.3 Camera Settings

Control the live image via the *Camera Settings* interface. The operating procedure is the same as the **remote control** and **control panel** of the **Visual Presenter**. Refer to the <u>user manual</u> for more information.

<note> The display of the button may vary depending on product functions.</note>	. An inactive button
will grey out.	



7.4 Options

Options 🛛
Language
English
Video Compression Type:
Microsoft Video 1 ?
✓ Enable Video Compression
Enable Audio Recorder
Audio Source:
Realtek HD Audio Input
Volume
OK

- **Language** : Set the Chinese or English user interface.
- > Video Compress Codec Format : Set the video format.



> <Note>You need to enable the [Enable Video Compress] before setting.



- **Enable Video Compress** : Enable the video format setting.
- > Enable Audio Recorder : Enable the MIC record device.
- > MIC Record Device : Set the MIC record device.

<Note>You need to enable the [Enable Audio Recorder] before setting.

MIC Record Device :	
Realtek AC97 Audio	-
Realtek AC97 Audio	

