

IPSDMV22D1 DOME CAMERA




Please read this manual thoroughly before use and keep it handy for future reference.


WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT INSERT ANY METALLIC OBJECTS THROUGH THE VENTILATION GRILLS OR OTHER OPENINGS ON THE EQUIPMENT.

CAUTION

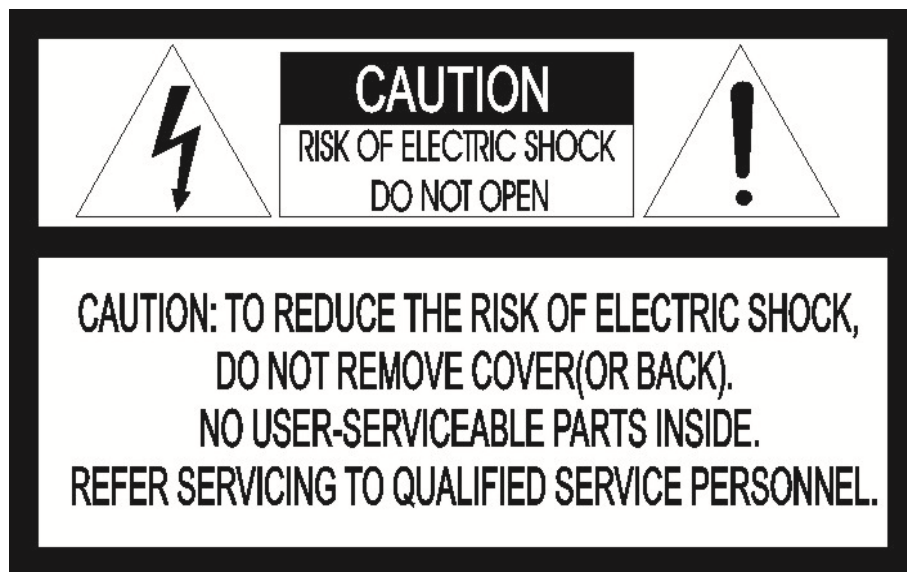

EXPLANATION OF GRAPHICAL SYMBOLS

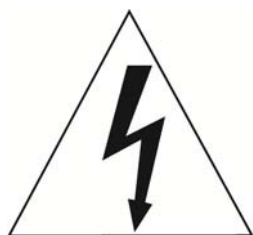

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FCC COMPLIANCE STATEMENT

FCC INFORMATION: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

CE COMPLIANCE STATEMENT

WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been moisture, does not operate normally, or has been dropped.
15. **CAUTION – THESE SERVICING INSTRUCTIONS ARE FOR USE BY QUALIFIED SERVICE PERSONNEL ONLY. TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT PERFORM ANY SERVICING OTHER THAN THAT CONTAINED IN THE OPERATING INSTRUCTIONS UNLESS YOU QRE QUALIFIED TO DO SO.**
16. **Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.**



Table of Contents

Chapter 1 — Introduction	1
1.1 Features	1
Chapter 2 — Installation and Configuration	2
2.1 Package Contents.....	2
2.2 Installation	3
2.3 Basic Configuration of Dome Camera System	6
2.4 Setting Dome Camera Address (ID).....	7
2.5 Connections.....	7
2.6 IP Assignment	8
2.7 Getting Started	9
Chapter 3 — Program and Operation	10
3.1 Dome Camera Selection	10
3.2 Accessing the On-Screen Menu Utility	10
3.3 How to control the On-Screen Menu Utility	10
3.4 Auto Scan (Shortcut: SCAN)	11
3.5 Preset (Shortcut: PRST)	13
3.6 Shortcut of Preset Program	14
3.7 Tour (Shortcut: TOUR)	15
3.8 Pattern (Shortcut: PTRN).....	17
3.9 Area Title	18
3.10 Privacy Zone.....	19
3.11 Camera Menu	20
3.12 Dome Setup	23
3.13 Dome Communication	29
3.14 Function Run	30
3.15 Factory Setup	30
Chapter 4 — Operation by Web Browser	31
4.1 Access from a browser	31
4.2 Access from the internet	32
4.3 Setting the admin password over a secure connection.....	32
4.4 Live View Page	32
4.5 Network Camera Setup	34
4.5.1 Basic Configuration.....	35
1) Users	35
2) Network.....	36
3) Video & Image	37

4) Audio.....	39
5) Date & Time	40
4.5.2 Video & Image	41
1) Basic	41
2) Webcasting – Channel1.....	41
4.5.3 Audio	42
4.5.4 Event.....	42
1) Event-In.....	42
2) Event-Out.....	46
3) Event Map	52
4.5.5 System	54
1) Information	54
2) Security.....	54
3) Date & Time	57
4) Network.....	58
5) Language	65
6) Maintenance	65
7) Support	66
4.5.6 About.....	67
4.6 PTZ Control	67
4.7 Help	68
4.8 Resetting to the factory default settings.....	69
4.9 System Requirement for Web Browser	69
Appendix A — Specifications	70
Appendix B — Troubleshooting	73
Appendix C — Glossary	73
Appendix D — Short Cut Key	76

Chapter 1 — Introduction

1.1 Features

The **IPSDMV22D1** camera and the keyboard controller, PC software makes up the building blocks for any surveillance/security system. Using multiple keyboard controllers and multiple dome cameras, no place is too large for monitoring. Extensible and flexible architecture facilitates remote control functions for a variety of external switching devices such as multiplexers and DVRs.

- Built-in optical power zoom camera with True Night Shot function
- Dual video streams simultaneously at full frame rate in all resolutions up to D1 (720X480 in NTSC, 720X576 in PAL) using Motion JPEG and H.264 (or MPEG-4)
- Intelligent capabilities such as enhanced video motion detection
The encoder's external inputs and outputs can be connected to devices such as sensors and relays, enabling the system to react to alarms and activate lights or open/close doors.
- Supports two-way audio
- Logs all user access, and lists currently connected users. Also, full frame rate video can be provided over HTTPS.
- Interface Protocol: TCP/IP, UDP, IPv4/v6, HTTP, HTTPS, QoS, FTP, SNMP, uPnP, RTP, RTSP, RTCP, DHCP, ARP
- 120 Preset positions with the individual Camera AE setup
- 4 Tours consist of Presets, Patterns, Auto Scans and other Tours can be programmed with over 150 functions and Preset locations. While moving, each Preset scan can be watched in smooth **Vector Scan** mode.
- 4 Auto Scans with the normal, the vector, and the **random** mode and the Endless Auto-Pan with 13 speed steps
- 4 Patterns (up to 200 second) and 4 Privacy Zones
- 8 Area Titles
- 1 Alarm input / 1 Alarm output
- Variable speed from 0.1°/sec to 380°/sec
Three Variable speed (SLOW, NORMAL, TURBO)
Turbo speed is 380°/sec with Ctrl key pressed.
- Pan / Tilt speed is inversely proportional to the zoom ratio with the option.
- Maximum speed is 380°/sec when Preset command.
- Auto Calibration from 0.1° to 6° (Tilt range is 0° to 180°)
- Programmable user preferences (alarm, preset, title, etc.)
- 180° Digital Flip
- Up to 255 selectable camera addresses
- Multi-language Menu Display, Password Confirmation
- Function Run menu using DVR without function key (Pattern, Scan, ...)
- Built-in RS-485 receiver driver
- 12VDC for Dome
- Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.

Chapter 2 — Installation and Configuration

2.1 Package Contents


The **IPSDMV22D1** camera is design to a compact, small size, hard dome camera housing. The housing is constructed of aluminum, steel and plastic. The housing is designed to be mounted both wall and ceiling type.

The housing meets the Protection Classification IP66 standards for dust and moisture resistance.


* Dome Camera	1
* Installation Guide/CD	1
* Template Sheet	1
* Mounting Bracket	1
* Safety Lanyard	1
* Accessory Kit	1
1) Mounting screws (PH6 x 35.0)	(4)
2) Plastic anchors	(4)
3) O-Rings	(4)
4) Torx wrench	(1)
* Accessory Connector	1
1) 2Pin Terminal Block	(1)
2) 6Pin Terminal Block	(1)



Dome Camera

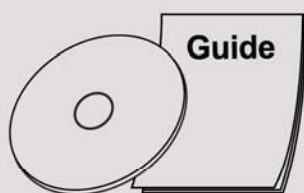


Installation Guide/CD

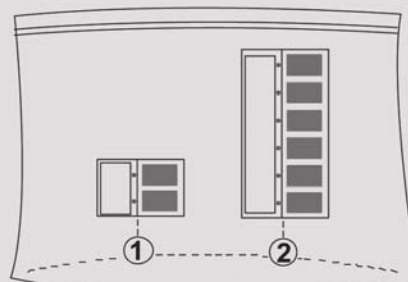

Accessory connector




Mounting Bracket

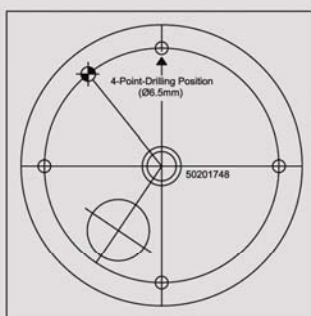

Template sheet



Safety Lanyard

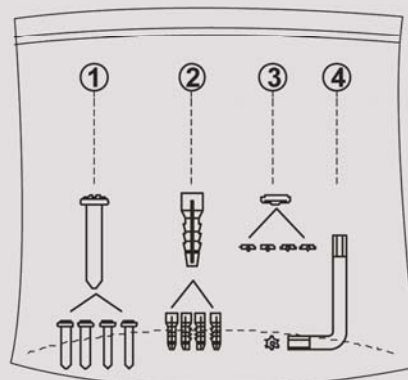


Accessory kit

2.2 Installation

The **IPSDMV22D1** camera is for use in surface or pendent mounting applications and the mounting member must be capable of supporting loads of up to 3.5lb (1.6kg). (Pendent mounting must use pendent mount accessory.)

The dome camera's mounting bracket should be attached to a structural object, such as hard wood, wall stud or ceiling rafter that supports the weight of the dome camera.

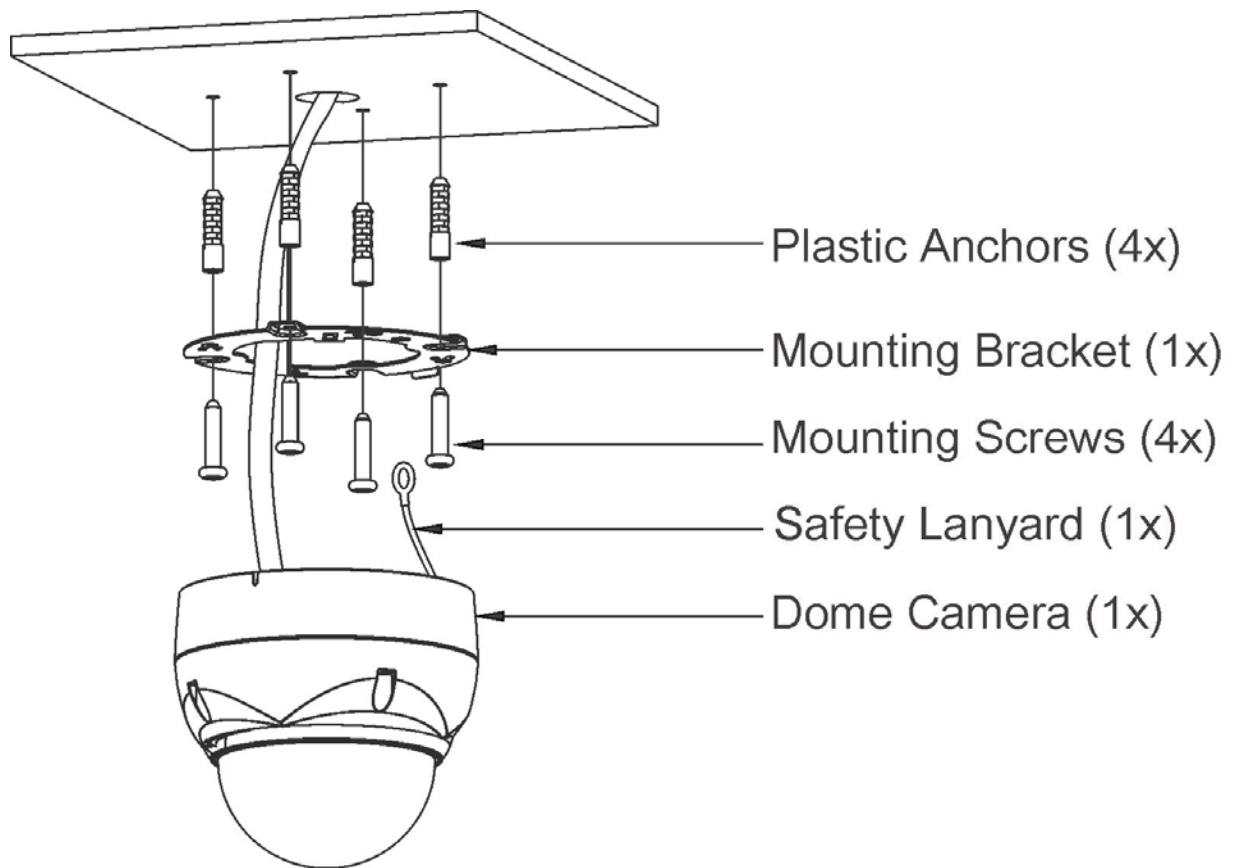

CAUTION: A silicone rubber sealant must be applied to seal the housing to secure waterproofing.

2.2.1 Locking Dome Camera

- Make screw holes on the ceiling using the supplied mounting Template Sheet (Figure A).
- Fix the Mounting Bracket using Anchors(4x) and Mounting Screws(4x) to the ceiling (Figure B).
- Hook up the Safety Lanyard to the Safety Lanyard Hook of the Mounting Bracket (Figure C).
- Align the locking tap on the bracket and the locking slot on the base of the dome (Figure D).
- Turn the dome to the counterclockwise about 10 degree to the locked position (Figure E).

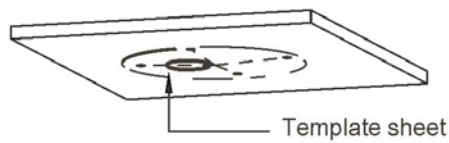


Figure A

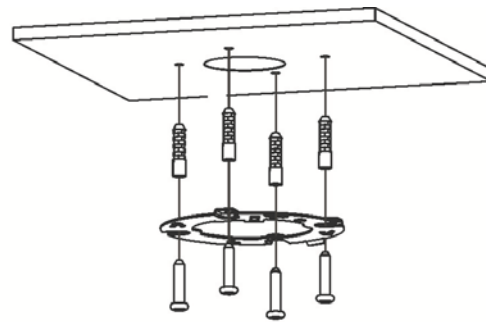


Figure B

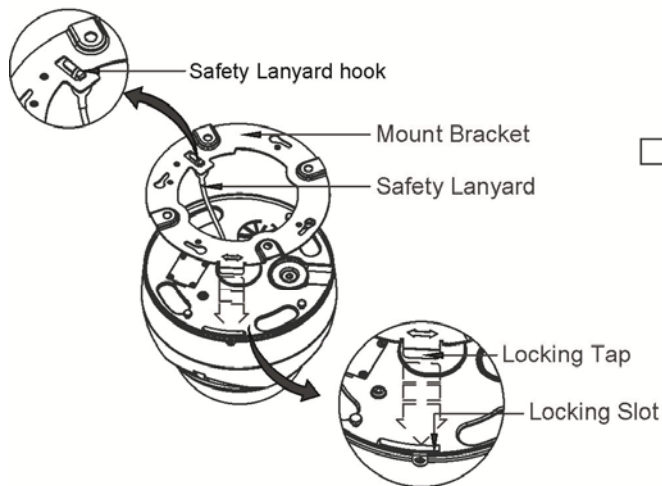


Figure C

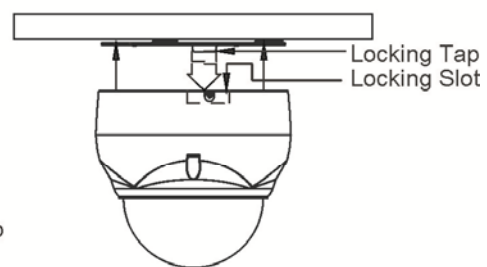


Figure D

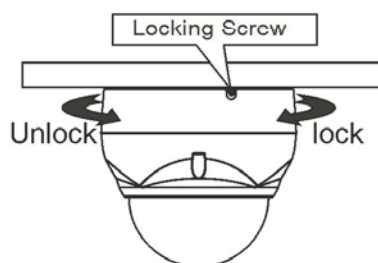


Figure E

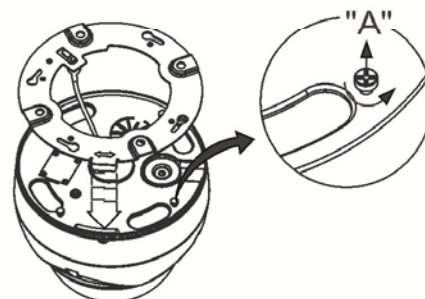


Figure F

CAUTION: Before installing mounting bracket to surface pre-adjust the four mounting screws "A" on the base of the dome camera to best match the mounting bracket locked position. Unscrew the locking screw on the side of the dome's base and fit the tab of the mounting bracket into the locking slot. Screws "A" should not be too tight or too loose when the dome is in the locked position. After setting the proper positions of screws "A" remove the mounting bracket and install it to the proper surface. If it is too difficult to lock the dome in position after the mounting bracket has been installed readjust the screws "A" by unscrewing them a small amount and try to install dome camera again.

2.2.2 Heater Kit Installation

1. Assemble the Heater board to two bosses with screws.


Take a reference "B" in the bottom case as below.

2. Place the Heater in the slot "A".

Heater cable should be placed away from the Main board.

3. Plug the power connector to the socket "C"(J1) of the Heater board.

4. 12VDC is recommended to use for the camera power for stable operation with heater kit.

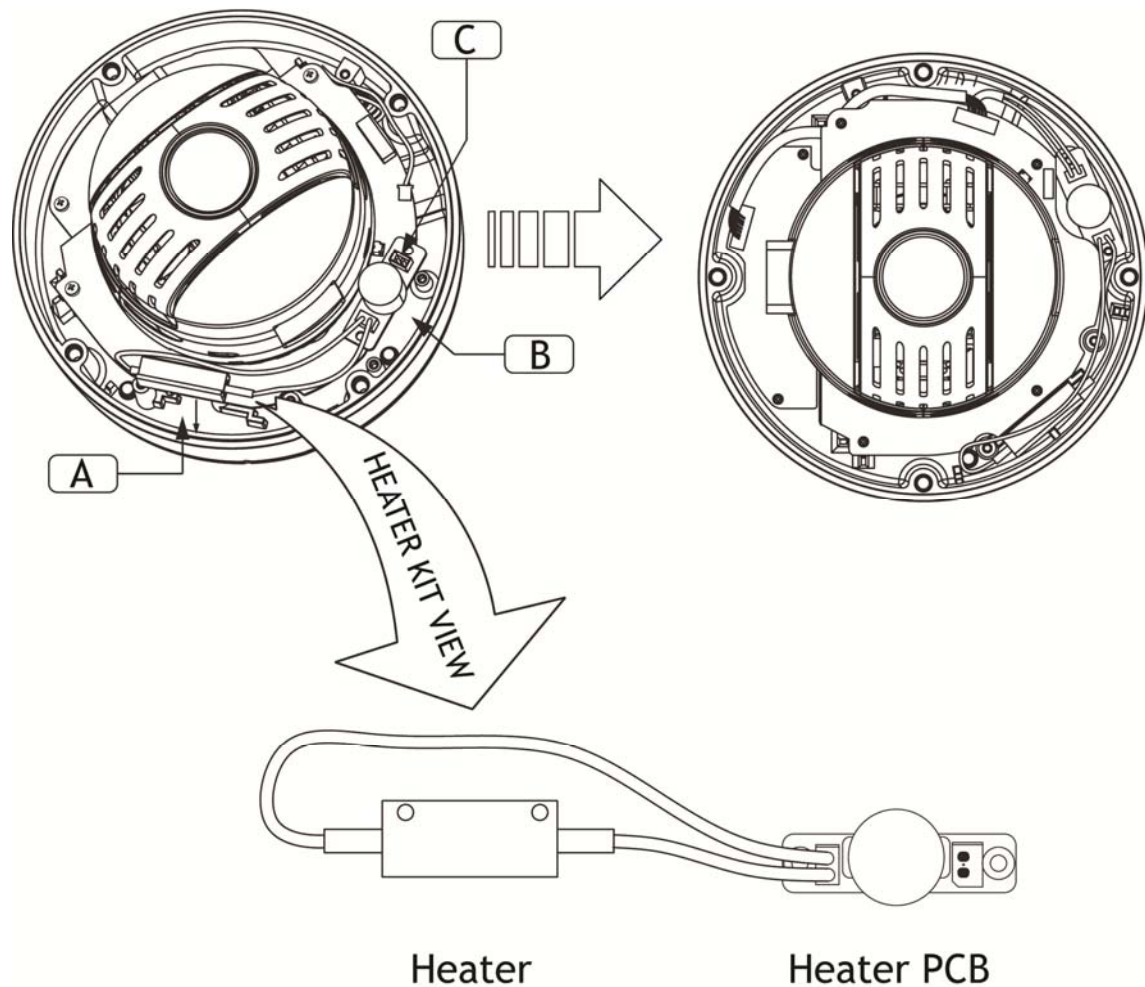


• HEATER (IF APPLICABLE)

Power Supply	12VDC
Power Consumption	10W
Heater ON	at 59°F (15°C)
Heater OFF	at 77°F (25°C)

• POWER

Use Certified/Listed Class 2 power source only.

2.3 Basic Configuration of Dome Camera System

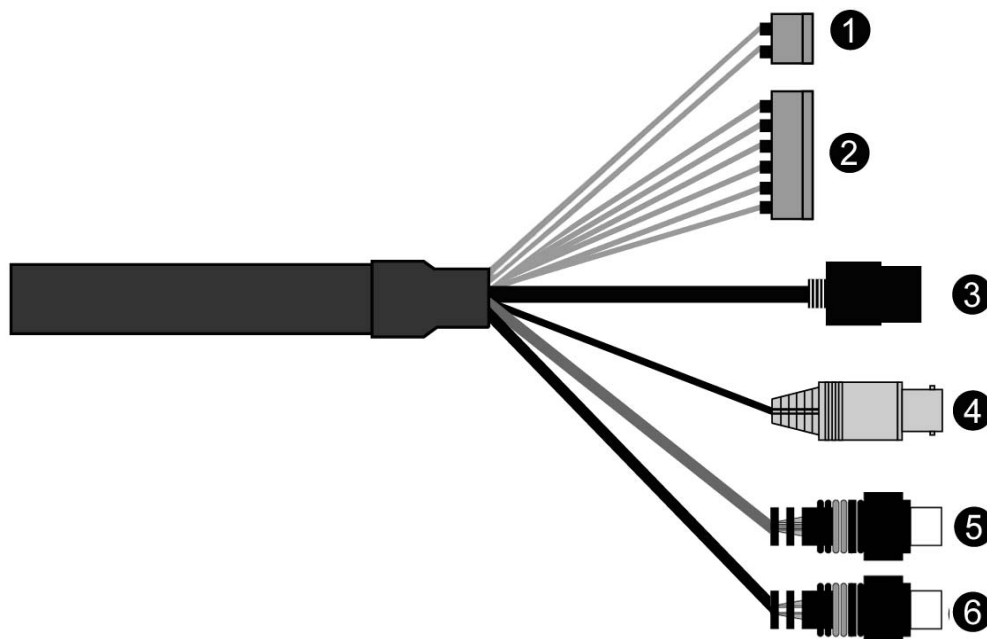

No.	Wire Color	Description
1	Red: 12VDC+ White: 12VDC-	Main Power: 2pin terminal
2	Black: GND Gray: Alarm Input Yellow: GND Black&White: Alarm Output Green: RS485+ Blue: RS485-	Alarm Input/Output, RS485: 6pin terminal
3	Black	Ethernet: RJ45 Modular Jack
4	Yellow	Video Composite Output: BNC Jack
5	Red	Audio line output: RCA Jack
6	White	Audio line input: RCA Jack

The **IPSDMV22D1** camera must be installed by qualified service personnel in accordance with all local and federal electrical and building codes.

2.4 Setting Dome Camera Address (ID)

To prevent damage, each dome camera must have a unique address (ID).

When installing multiple dome cameras using a multiplexer, it is suggested that the dome camera address match the multiplexer port number.

The factory default setting is 1.

Refer to '3.13 Dome Communication' section for detailed information.

2.5 Connections

• Connecting to the RJ-45

Connect a standard RJ-45 cable to the network port of the dome camera. Generally a cross-over cable is used for directly connection to PC, while a direct cable is used for connection to a hub.

• Connecting Alarms

AI (Alarm Input)

You can use external devices to signal the dome camera to react on events. Mechanical or electrical switches can be wired to the AI (Alarm Input) and G (Ground) connectors.

Please see "4.5.4 Event > 1) Event-In > ② Alarm In" for configuring alarm input.

G (Ground)

NOTE: All the connectors marked G or GND are common.

Connect the ground side of the alarm input and/or alarm output to the G (Ground) connector.

AO (Alarm Output)

The dome camera can activate external devices such as buzzers or lights. Connect the device to the AO (Alarm Output) and G (Ground) connectors.

Please see "4.5.4 Event > 2) Event-Out > ④ Alarm Out" for configuring alarm output.

• Connecting to the RS485

The dome camera can be controlled remotely by an external device or control system, such as a control keyboard, using RS485 half-duplex serial communications signals.

• Connecting Video out connector

Connect the video out (BNC) connector to the monitor or video input.

• Connecting the Power

Connect the power of 12VDC 2.0A for the dome camera.


When using a 12VDC adapter, connector the positive(+) pole to the '+' position and the negative(-) pole to the '-' position.

Use satisfy clause 2.5 of IEC60950-1/UL60950-1 or Certified/Listed Class 2 power source only.


2.6 IP Assignment

When the **IPSDMV22D1** dome camera, encoder or decoder is first connected to the network it has no IP address. So, it is necessary to allocate an IP address to the device with the “SmartManager” utility on the CD.


1. Connect the dome camera / device to the network and power up.
2. Start SmartManager utility (Start > All programs > SmartManager > SmartManager), the main window will be displayed, after a short while any network devices connected to the network will be displayed in the list.

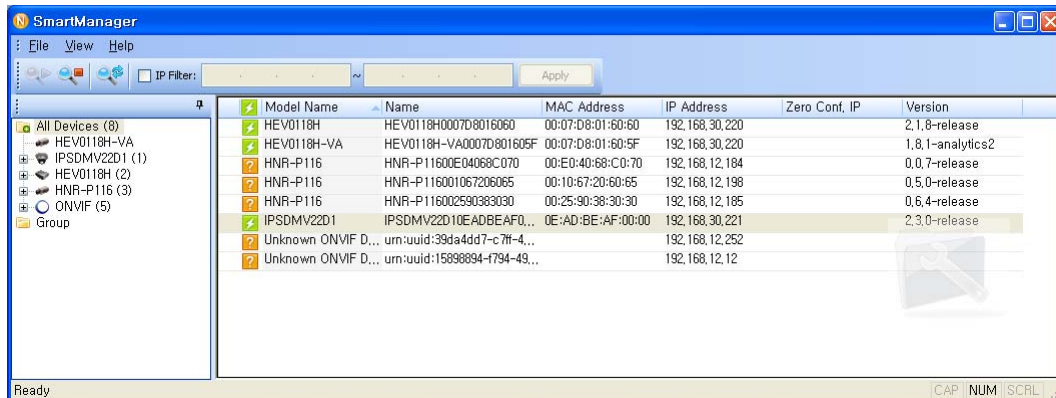

3. Select the dome camera on the list and click right button of the mouse. You can see the pop-up menu as below.

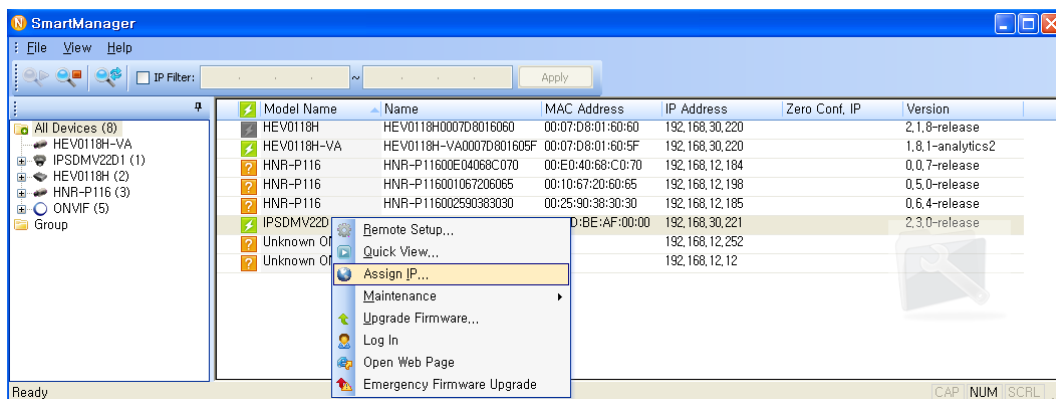


4. Select Assign IP Address. You can see Assign IP window. Enter the required IP address.

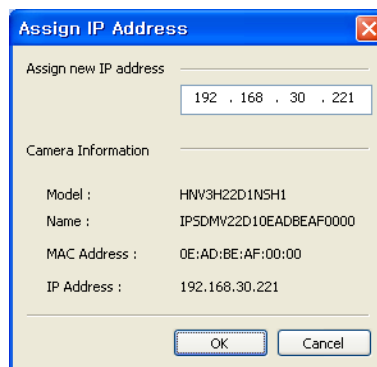


Note: For more information, refer to the SmartManager User's Manual.

2.7 Getting Started

Once installed apply power to the **IPSDMV22D1** dome camera. The dome camera will start a configuration sequence.

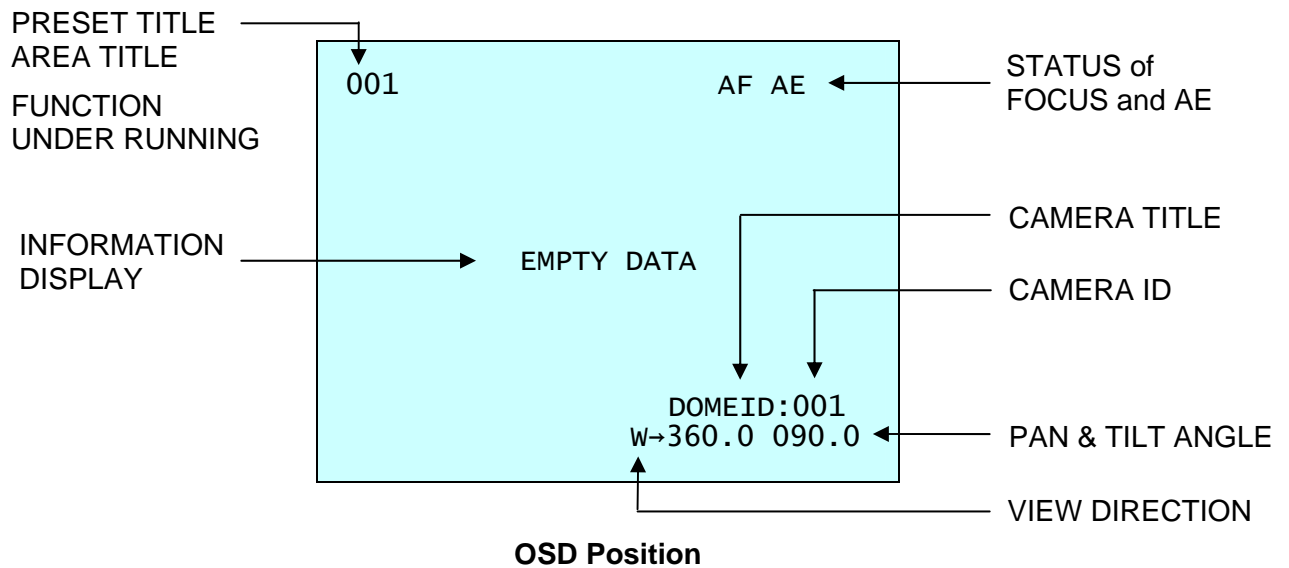

The dome can move the OSD position in the OSD position setup.

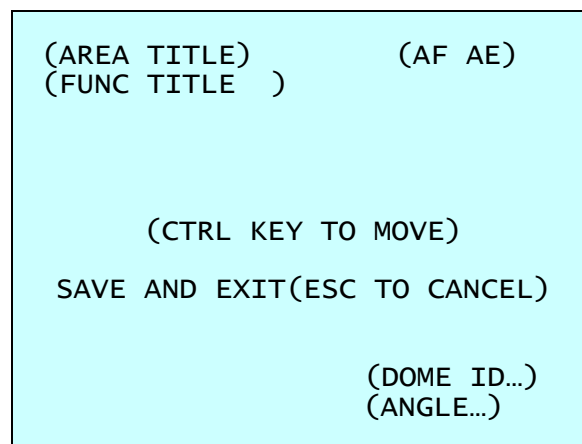

Chapter 3 — Program and Operation


3.1 Dome Camera Selection

Before you program or operate a dome camera, you must select the dome camera by pressing **No.** + **CAM** keys.

Example: Pressing **1**, **0** + **CAM** keys sequentially will select dome camera 10. The selected dome camera ID will be displayed on the LCD monitor of the keyboard controller.

3.2 Accessing the On-Screen Menu Utility

You can call up the On-screen menu utility on your monitor by pressing the **MENU** key on the keyboard controller, the following On-screen menu utility will appear:

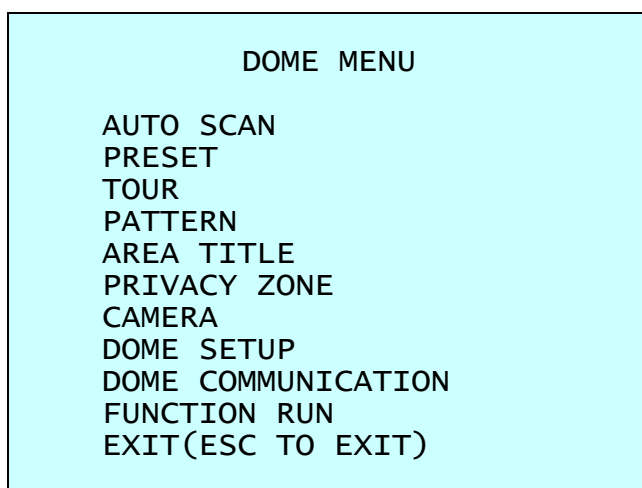

3.3 How to control the On-Screen Menu Utility

Function	Button
Call the On-screen menu utility.	MENU
Navigate through the menu items.	Joystick up or down
Go into the sub-menu items.	Joystick left or right or IRIS Open
Change value. Enter the editing title mode.	Joystick left or right or Zoom handle twist or Tele , Wide
Change value of angle.	CTRL + Joystick
Enter the changing angle mode.	IRIS Open
Exit the changing angle mode.	IRIS Close
Escape (EXIT)	ESC

3.4 Auto Scan (Shortcut: **SCAN**)

The Auto Scan supports up to 5 programmed angles at user-programmable speeds. Follow these steps to program Auto Scan:

AUTO SCAN SETUP	
NUMBER	: 01
TITLE	: A01
MODE	: NORMAL
SPEED	: 5 STEP
START ANGLE	: -----
END ANGLE	: -----
SCAN DIR	: CCW
SWAP	: OFF
DWELL	: 03 SEC
SAVE AND EXIT(ESC TO CANCEL)	

NUMBER : 01 ~ 04, **09**:AUTO PAN mode.

TITLE : up to 12 characters.

MODE : NORMAL, VECTOR, RANDOM (AUTO PAN mode: NORMAL, RANDOM only).

NORMAL : Move from start point to end point in panning only.

VECTOR : Move from start point to end point including tilt and zoom simultaneously and linearly.

RANDOM : Move randomly between the start point and the end point.

SPEED : 01 ~ 13 step, the lower number means the slower speed.

SCAN DIR : Set the Scan direction, CCW(Counter Clock Wise), CW(Clock Wise).

SWAP : Swap the start point for the end point.

DWELL : Set the dwell time at the both end, 01 ~ 99 seconds.

1. Press the **SCAN** key to enter the Auto Scan menu directly. Or press the **MENU** key to display the main menu on the monitor. Scroll to Auto Scan and push the **Joystick** to the right.
2. Select "**NUMBER**" and set the desired number by pushing the **Joystick** to the left or right.
3. Select "**TITLE**" and twist the **Joystick** to enter the title edit mode.
4. Twist the **Joystick** by changing the alphanumeric characters and move the next position. Or move down to the character table and press the **CTRL** or **IRIS Open** key at the desired character then the cursor position moves to the next position automatically. Push the **Joystick** to the left or right at the "ALL DELETE" field to delete all characters. Push the **Joystick** to the left or right at the "EXIT" field to finish title edit menu.

TITLE EDIT MENU	
A01	
*	
A	B C D E F G H I J
K	L M N O P Q R S T
U	V W X Y Z 0 1 2 3
4	5 6 7 8 9 ()
ALL DELETE	
EXIT(ESC TO EXIT)	

5. Select "**MODE**" and "**SPEED**".

6. Select **"START ANGLE"**. Hold down the **CTRL** key while selecting the start position using the **Joystick**. Current panning position will be displayed. Release the **CTRL** key to complete the selection of the start position. Or press the **IRIS Open** key then the "CTRL" displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the "CTRL" disappears. To adjust at the 0.1 degree interval, twist the **Joystick** at the pan field and the tilt field. To adjust at the one zoom interval, twist the **Joystick** at the zoom field.
7. Select **"END ANGLE"**. Hold down the **CTRL** key while moving the **Joystick** to select the end position. The end position angle should be larger than start position. Release the **CTRL** key to complete the selection of the end position. Or press the **IRIS Open** key then the "CTRL" displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the "CTRL" disappears. To adjust at the 0.1 degree interval, twist the **Joystick** at the pan field and the tilt field. To adjust at the one zoom interval, twist the **Joystick** at the zoom field.
8. Set **"SCAN DIR"** to CCW or CW.
9. Select **"SWAP"**, Set to ON, to exchange the start angle and the end angle.
10. Set **"DWELL TIME"**.
11. Select **"SAVE AND EXIT"** and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Pressing the HOME key delete stored data at the angle field.

To set the position using the Preset position:


- a. Before entering the Auto Scan menu, select a Preset position as a starting point for Auto Scan.

Example: **2** + **PRST** keys and do step 1 to 5. In step 6, just press the **Ctrl** key at the start angle position, the current position will be displayed as a start position.

- b. Save and exit from the menu.

- c. In normal mode, call a Preset to be the end point of Scan. Press **3** + **PRST** keys then press the **SCAN** key to enter the Auto Scan menu. Move the cursor position to END ANGLE. Just press the **CTRL** key at the end angle position. Save and exit from the menu.

Press the **SCAN** key on the angle field to display with the small OSD. Then the screen will show as below.

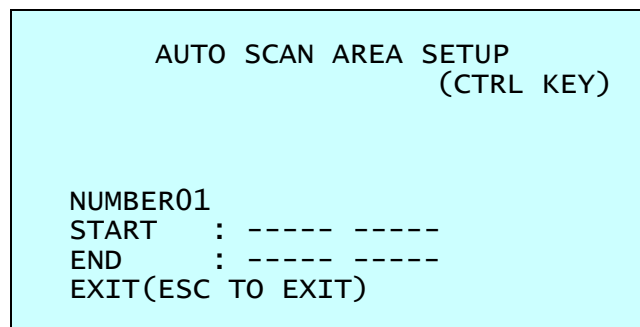

The setting procedure is the same as above.

NOTE: 09: AUTO-PAN mode (Endless panning)

3.5 Preset (Shortcut: **PRST**)

If you need to view specific places routinely, you should program Presets. A Preset is a programmed video scene with automatic pan, tilt, zoom, focus and AE settings. Once programmed, placing the number position and pressing the **PRST** key on your controller calls up that Preset automatically. In addition, Presets may be assigned to alarm action or as the “home” position for the dome camera. As many as 120 Presets, whose positions are saved in the dome’s firmware, may be programmed.

There are two pages of Preset menu. Each page has 60 Presets. Pages can be scrolled by pushing the **Joystick** to the left or right on the first or last No. of Preset.

PRESET SETUP

NUMBER : 001
TITLE : ---
CAMERA SET
DWELL : -- SEC
12345678901234567890
00 ■**-----
02 -----
04 -----
NEXT PAGE
SAVE AND EXIT(ESC TO CANCEL)

- : blank Preset position
- * : position has the Preset
- : current cursor position

Follow steps below to store the Preset positions:

1. Press the **PRST** key to enter the Preset menu directly. Or press the **MENU** key to display the main menu on the monitor. Scroll to Preset and push the **Joystick** to the right.
2. Select the blank Preset position to be stored by pushing the **Joystick** up, down, right, or left.
3. After selecting a blank position, press and hold the **CTRL** key. Use the **Joystick** to control the direction of the camera and lens.
4. After aiming the camera (view direction and lens control), release the **CTRL** key. The cursor will be on the “**TITLE**” after saving data then twist the **Joystick** or press the **Tele** or **Wide** key to edit the Preset title. Follow the procedure of the Auto Scan above to edit titles.
5. Select “**CAMERA SET**” and pushing the **Joystick** to the left or right. Then the Preset camera setup displays.

PRESET CAMERA SETUP

FOCUS : AUTO
AE SETUP
SAVE AND EXIT(ESC TO CANCEL)


Set **FOCUS** : AUTO, MANUAL, ONE PUSH

Select “**AE SETUP**” and pushing the **Joystick** to the left or right. Then the AE setup displays. Refer to the AE SETUP in the camera setup.

6. Set “**DWELL TIME**”. (03 ~ 99 seconds)
7. To select the next page of Presets, scroll the page by pushing the **Joystick** to the left on the first and last columns of the menu.
8. Repeat step 2 through 7 for each additional Preset position.
9. Select “**SAVE AND EXIT**” and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Press the **HOME key at programmed Preset position(*) to delete a programmed Preset view.**

The position, which is marked with the *, already has the Preset view assigned. To review the stored Preset, press the **PRST** key on the *. The camera will show the stored Preset scene.

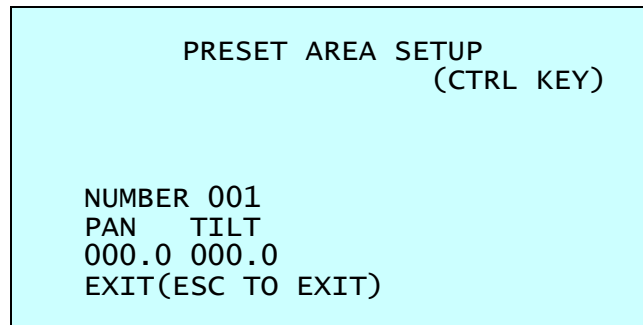

Hold down the **CTRL** key while selecting the desired scene using the **Joystick**. Current position will be displayed. Release the **CTRL** key to complete. Or Press the **IRIS Open** key then the “CTRL” displays. Move the desired position and the zoom position. Press the **IRIS Close** key then the “CTRL” disappears. Select “EXIT” and push the **Joystick** to the right.

3.6 Shortcut of Preset Program

After selecting the desired scene, press No. (1 to 120), and press the **CTRL** and **PRST** keys subsequently. The current view will be stored to the selected Preset number if the Preset number is empty. If selected Preset number is not empty, “OVER WRITE” message will be displayed on the monitor and select the “OK” and push the **Joystick** to the right to overwrite.

Example: **1**, **0**, **1** + **CTRL** + **PRST** keys will store current view as Preset no. **101**. In this case, focus will be programmed as Auto, dwell time will be set to 3 second, and the current AE mode will be programmed.

3.7 Tour (Shortcut: **TOUR**)

There are 4 programmable Tours. Each Tour consists of up to 42 Preset positions, Patterns, Scans or other Tours (second-level). Using second-level Tours, it can be expanded to over 150 functions in a single Tour.

TOUR SETUP	
NUMBER	: 01
TITLE	: T01
SCAN TYPE	: NORMAL
SPEED	: 5 STEP
DWELL	: -- SEC
003 A04	--- --- --- ---
---	---
---	P01 --- --- ---
---	T02 --- --- ---
---	---
---	---
SAVE AND EXIT(ESC TO CANCEL)	

---	: blank position
SCAN TYPE	: NORMAL, VECTOR
DWELL	: 03 ~ 99 SEC
003	: Preset (1 ~ 120)
A04	: Auto Scan (1 ~ 4)
P01	: Pattern (1 ~ 4)
T02	: Tour (1 ~ 4)

Follow the steps below to program the Tours:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Tour and push the **Joystick** to the right to enter the Tour menu. Or just press the **TOUR** key on the keyboard.
2. Select "NUMBER" and set the desired number by pushing the **Joystick** to the left or right.
3. Choose a blank position to be programmed by pushing the **Joystick** up, down, right, or left.
4. To add a stored Preset, twist the **Joystick** then the stored Preset number displays.
5. To place functions other than Preset, press the **TOUR**, **PTRN**, or **SCAN** keys for Tour, Pattern or Auto Scan respectively.
6. You can also overwrite the programmed number and to remove a stored number from the Tour, press the **HOME** key on the stored number, a blank position mark (---) will be displayed.
7. Repeat step 2 through 6 for each desired position. Each title will be displayed on top of the line.
8. To edit the "TITLE", follow the procedure of the Auto Scan above to edit titles.
9. Select "SAVE AND EXIT" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

You can expand the Tour sequence by calling other programmed Tours.

NOTE: The speed applies in the vector mode only.

NOTE: In the Tour mode, in conjunction with Preset and Auto Scan, you can make the camera travel from a Preset position to another Preset position at a specific speed.

Example: Preset 001>002>003>004>005>006, Auto Scan 01 starts at Preset 002, ends at Preset 003, Auto Scan 02 starts at Preset 005, ends at Preset 006; Tour 001, 002, A01, 004, A02.

1 → 2 2~3 → 4 → 5~6, repeat
where → : Quick move, ~ : Programmed speed

To change the dwell time of the Preset in the Tour:

Use the **Joystick** to move the cursor to a stored Preset position.

By pressing the **PRST** key, the camera will move to the stored Preset view and the cursor moves to the dwell time field.

After changing the dwell time, press the **PRST** key and the cursor moves to the Preset number.

To assign the functions other than Preset in the Tour when the function key is not existed:

Use the **Joystick** to move the cursor to a stored Preset position.

Pressing the **CTRL** or **IRIS Open** key will change the Preset number to other function (Auto Scan, Pattern, Tour, Preset) with the first programmed number.

To change the number, twist the **Joystick** or press the **Tele** or **Wide** key.

3.8 Pattern (Shortcut: **PTRN**)

The Pattern feature records user control of the selected dome camera. Up to 4 Patterns can be stored and played back by pressing **No.** + **PTRN** keys subsequently.

PATTERN SETUP			
		(CTRL KEY)	
NO	TITLE	SEC	PERCENT
01 :	P01	000	00.0%
02 :	P02	000	00.0%
03 :	P03	000	00.0%
04 :	P04	000	00.0%
TOTAL		000	00.0%
SAVE AND EXIT(ESC TO CANCEL)			

Follow steps below to program the Pattern:

1. Press the **MENU** key to display the main menu on the monitor. Scroll to Pattern and push the **Joystick** to the right to enter the Pattern menu. Or just press the **PTRN** key on the keyboard.
2. Select the desired Pattern to be programmed by pushing the **Joystick** up or down. If the Pattern is not 000, a Pattern has already been recorded. Patterns can be overwritten.
3. Press and hold down the **CTRL** key while controlling the camera direction and zoom with the **Joystick**. The dome will be automatically recorded until you release the **CTRL** key. Or press the **IRIS Open** key then the "CTRL" displays. Move the position and the zoom position. Press the **IRIS Close** key then the "CTRL" disappears.
4. To edit the "TITLE", follow the procedure of the Auto Scan above to edit titles.
5. Select "SAVE AND EXIT" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Press the **HOME** key at any programmed position to delete the Pattern.

NOTE: If Pattern recording time reaches 200 seconds, it will automatically stop for a moment.

Press the **PTRN** key on the title field to display with the small OSD. Then the screen will show as below.

PATTERN AREA SETUP	
(CTRL KEY)	
NUMBER 01	
000	00.0%
000	00.0%
EXIT(ESC TO EXIT)	

The setting procedure is the same as above.

3.9 Area Title

Enter a specific name on programmed angle between START and END. For the screen below, when the camera points at an angle between 124.3° (PAN), 30.7° (TILT) to 359.5° (PAN), 45.4° (TILT), ABC will be displayed on the screen.

AREA TITLE SETUP			
NUMBER	:	01	
TITLE	:	ABC	
START ANGLE	:	124.3	30.7
END ANGLE	:	359.5	45.4
SWAP	:	OFF	
SAVE AND EXIT(ESC TO CANCEL)			

NUMBER : 01 ~ 08
TITLE : up to 12 characters.
SWAP : Swap the start point for the end point.

1. Select "**NUMBER**" and set the desired number by pushing the **Joystick** to the left or right.
2. To edit the "**TITLE**", follow the procedure of the Auto Scan above to edit titles.
3. Select "**START ANGLE**". Hold down the **CTRL** key while selecting the start position using the **Joystick**. Current panning position will be displayed. Release the **CTRL** key to complete the selection of the start position. Or press the **IRIS Open** key then the "CTRL" displays. Move the desired position. Press the **IRIS Close** key then the "CTRL" disappears. To adjust at the 0.1 degree interval, twist the **Joystick** at the pan field and the tilt field.
4. Select "**END ANGLE**". Hold down the **CTRL** key while moving the **Joystick** to select the end position. Release the **CTRL** key to complete the selection of the end position. Or press the **IRIS Open** key then the "CTRL" displays. Move the desired position. Press the **IRIS Close** key then the "CTRL" disappears. To adjust at the 0.1 degree interval, twist the **Joystick** at the pan field and the tilt field.
5. Select "**SWAP**". Set to ON, to exchange the start angle and the end angle.
6. Select "**SAVE AND EXIT**" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

3.10 Privacy Zone

Hide up to 4 unwanted scenes in a camera.

PRIVACY ZONE SETUP			
		(CTRL KEY)	
NO	TITLE	METHOD	
01	ABC	ON	BLOCK
02	DEF	ON	V.OFF
03		OFF	----
04		OFF	----
SAVE AND EXIT(ESC TO CANCEL)			

1. Place the cursor at the title field.
2. Hold down the **CTRL** key displays the privacy area menu while selecting the position using the **Joystick**. Current position will be displayed. Release the **CTRL** key to complete the selection of the position.

Or press the **IRIS Open** key then the privacy area menu displays. Move the desired position.


Press the **IRIS Close** key then the "CTRL" disappears and returns to the previous menu.

PRIVACY AREA MENU		
(CTRL KEY)		
		CONTROL
NUMBER	001	
354.8	344.8	

3. Place the cursor at the "TITLE" field. Twist the **Joystick** to enter the title edit mode. Follow the procedure of the Auto Scan above to edit titles.
4. To turn the stored zone On or Off, twist the **Joystick** or press the **Tele** or **Wide** key.
5. Set the "METHOD", "BLOCK" or "V.OFF(video off)".
6. Select "SAVE AND EXIT" and push the **Joystick** to the right or press the **IRIS Open** key. Press the **ESC** or **IRIS Close** key to exit the program without saving.

NOTE: Press the **HOME** key to delete programmed Privacy Zone at the title field.

3.11 Camera Menu

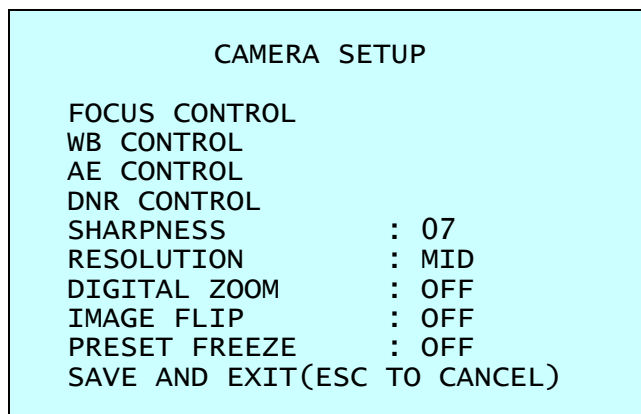

SHARPNESS The higher the value, the more edges in the picture will be enhanced. (0 ~ 15)

RESOLUTION Select high resolution mode. (LOW / MID / HIGH)

DIGITAL ZOOM OFF: Zoom range is limited to the optical.

2X: Zoom is extendable up to 2X of digital range.

4X: Zoom is extendable up to 4X of digital range.

8X: Zoom is extendable up to 8X of digital range.


MAX: Zoom is extendable Max digital zoom range.

IMAGE FLIP This function turns the video output from the camera upside down and reverses it horizontally.

This option is helpful to install in the opposite side.

PRESET FREEZE ON: the image is frozen during calling Preset.

• FOCUS CONTROL

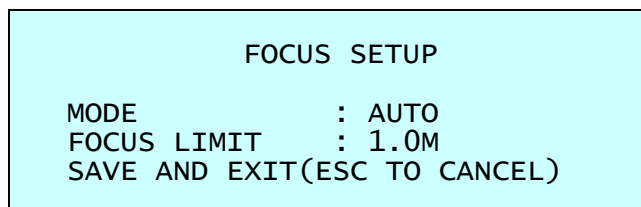

MODE AUTO / MANUAL / ONE PUSH / CONSTANT MANUAL

Use manual mode in normal use.

FOCUS LIMIT This distance is approximate value and the focus operate from the setting value.

CAUTION: Avoid continuous, 24-hour use of the auto focus. This will shorten the lifespan of the lens.

• WB (White Balance) CONTROL

WB SETUP	
MODE	: AWB
R GAIN	: ---
B GAIN	: ---
SAVE AND EXIT(ESC TO CANCEL)	

MODE AWB / WAWB / INDOOR / OUTDOOR / MANUAL

AWB Computes the white balance value output using color information from the entire screen automatically. (2500 to 9500 °K)
WAWB Wide range auto white balance mode (1800 to 10500 °K)
INDOOR Indoor white balance mode
OUTDOOR Outdoor white balance mode
MANUAL Manual mode, you can change R and B Gain manually.

RGAIN 0 ~ 255
BGAIN 0 ~ 255

RGAIN / BGAIN modes are controllable only in MANUAL Mode.

• AE CONTROL

AE SETUP	
MODE	: MANUAL
SLOW SHUTTER	: ---
GAIN	: MIN
BRIGHT	: 003
SHUTTER	: 1/50
FLICKERLESS	: ---
BACK LIGHT	: OFF
WDR	: ---
WDR LEVEL	: ---
NIGHT SHOT	: AUTO
SAVE AND EXIT(ESC TO CANCEL)	

MODE AE1 / AE2 / SHUTTER PRIO / MANUAL

AE1 Auto exposure mode1 (Use to normal surroundings: indoor)
AE2 Auto exposure mode2 (Use to high brightness surroundings: outdoor)
SHUTTER PRIO Variable Shutter speed, Auto Gain
MANUAL Variable Shutter speed, Gain

SLOW SHUTTER ON / OFF
GAIN MIN / LOW / MID / HIGH
BRIGHT 1 ~ 15
SHUTTER 1/50(60), 1/120(100), ..., 1/2000, 1/10000, 1/100000
FLICKERLESS ON / OFF
BACK LIGHT ON / OFF (**NOTE: When ON, WDR will be disabled.**)
WDR ON / OFF (**NOTE: When ON, BACKLIGHT will be disabled.**)
WDR LEVEL 10 ~ 50
NIGHT SHOT AUTO / ON / OFF / GLOBAL

NOTE: Values in () are for NTSC Camera. The WDR operates in AE1 mode only.

NOTE: When BACKLIGHT set ON, focus issues may occur in certain lighting conditions.

The NIGHT SHOT option removes the IR cutoff filter of the camera and makes the camera sensitive to near infrared.

AUTO Camera goes in to B&W mode at low light.
GLOBAL Controlled by the keyboard

(NOTE: GLOBAL function operates F2E protocol only)

The operator can enable NIGHT SHOT for all dome cameras at the same time.

If the NIGHT SHOT mode is set to GLOBAL, "999" + **ENTER** will turn Off the NIGHT SHOT mode and "888" + **ENTER** will turn On the NIGHT SHOT mode.

ON B/W mode
OFF Color mode

NOTE: AUTO in NIGHT SHOT function is not applied in "MANUAL" mode of AE Control.


• DNR CONTROL

DNR SETUP	
2DNR(1)	: 001
3DNR(1)	: 010
2DNR(2)	: 001
3DNR(2)	: 003
SAVE AND EXIT(ESC TO CANCEL)	

2DNR(1), 2DNR(2) Select 2D noise reduction level (OFF / 1 ~ 7)
3DNR(1), 3DNR(2) Select 3D noise reduction level (OFF / 1 ~ 31)

NOTE: DNR(1) applied when motor stopped. DNR(2) applied when motor moving.


3.12 Dome Setup

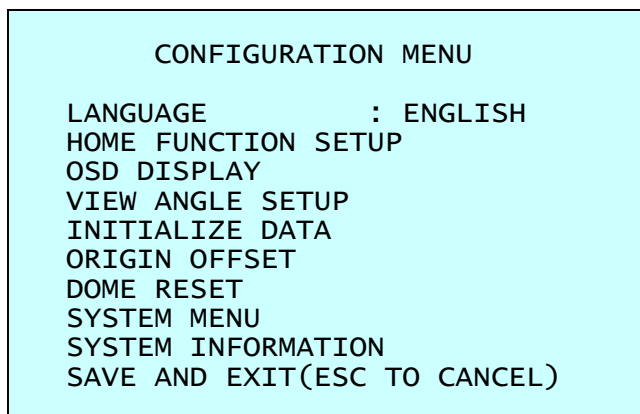

• LANGUAGE SETUP

LANGUAGE : Select the language you want.

• HOME FUNCTION SETUP

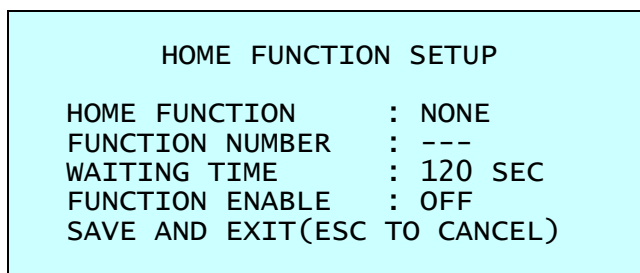


HOME FUNCTION : None / Tour / Pattern / Auto Scan / Preset
FUNCTION NUMBER : ---
WAITING TIME : 10 ~ 240 seconds
FUNCTION ENABLE : ON / OFF

The Home function can be set so that the camera automatically goes to Tour, Pattern, Auto Scan or Preset after the keyboard controller has been idle for a amount of time. For example, if the controller is idle for 120 seconds, the camera goes to Preset 1.

Follow these steps to program the Home position:

1. Select "**HOME FUNCTION**" by pushing the **Joystick** to the left or right to scroll through the None, Tour, Pattern, Auto Scan or Preset functions.
2. Select "**FUNCTION NUMBER**" and push the **Joystick** to the left or right. The recorded function number will scroll.
3. Select "**WAITING TIME**" and push the **Joystick** to the left or right to select from 10 to 240 seconds.
4. Select "**FUNCTION ENABLE**" and turn to ON or OFF by pushing the **Joystick** to the left or right.

• OSD DISPLAY

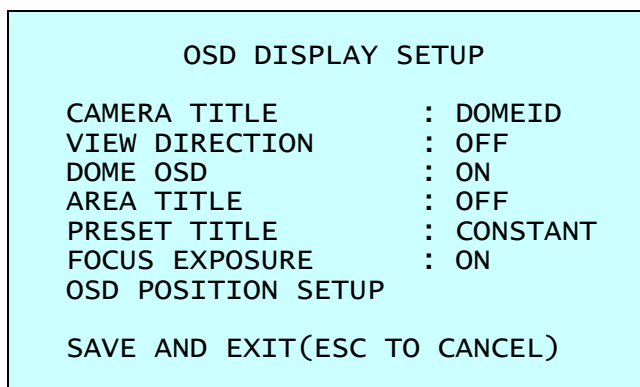

CAMERA TITLE : up to 6 characters.

VIEW DIRECTION : ON / OFF

“ON” sets current direction as N(North) and the coordinate angle to 000. “OFF” hides the directional title. Every 90 degrees of clockwise rotation will change the title to E(East), S(South), W(West). If using the ON/OFF option frequently, it is recommended that you set “North” as a Preset. Recall the “North” Preset before enabling the directional title.

DOME OSD : ON / OFF

All display or title will disappear when DOME OSD DISPLAY sets OFF.

AREA TITLE : ON / OFF

If this option is enabled, the area title displays when the camera moves.


NOTE: The DOME OSD DISPLAY must be enabled.

PRESET TITLE : CONSTANT / OFF / 3, 30, 60, 120, 180 seconds
Set the Preset title display time.

FOCUS EXPOSURE : ON / OFF
ON: FOCUS and EXPOSURE displays. (AF AE)

OSD POSITION SETUP

Select the OSD option with the **Joystick** up and down, press the **CTRL** key and adjust the position by the **Joystick**.

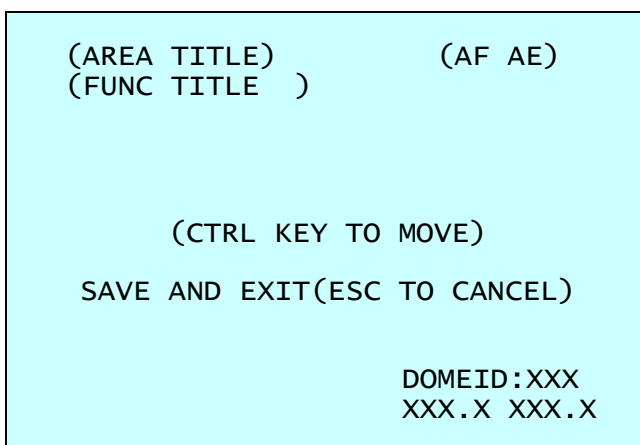

• VIEW ANGLE SETUP

VIEW ANGLE SETUP	
PANNING RANGE	
FLIP	: 90°
TILT LIMIT	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

FLIP: OFF, AUTO, 90°, 100°, 110°, 120°,

OFF: the dome camera moves until 90° vertically.

AUTO: When the camera reaches the floor directly above the moving object, it will stop. At that time, release the **Joystick** instantly and pull it down again to run the auto-flip function.

When you use the panning range, we recommend using the flip mode to AUTO.

90°, 100°, 110°, 120° : allows the image to flip digitally when the camera moves over the setting angle vertically.

TILT LIMIT:

This option has been designed to limit the view angle as there is some obstruction in zooming out on specific area of the tilt angle.

ON: When this option is enabled, the range of the tilt angle will be limited to 10 degree.

This can prevent from obstruction or bad focus problem caused by the horizontal line of the semi sphere in the bubble.

OFF: When this option is disabled, the range of the tilt angle will not be limited.

When you zoom out within the range of the tilt angle, you will see the horizontal line of the semi sphere in the bubble. Focus issues may occur in certain lighting conditions.

PANNING RANGE

When the dome camera is installed near a wall, panning range can be limited by user.

PANNING RANGE SETUP (CTRL KEY)	
RIGHT LIMIT	: 000.0
LEFT LIMIT	: 000.0
ENABLE	: OFF
SWAP	: OFF
AUTO PAN	: ON
SAVE AND EXIT(ESC TO CANCEL)	

1. Place the dome camera under 90 degree vertically.
2. Set "**RIGHT LIMIT**" by pushing the **Joystick** to the right.
3. Set "**LEFT LIMIT**" by pushing the **Joystick** to the left.
4. Set "**ENABLE**" to ON to use.

To exchange the right and the left limit, set "**SWAP**" to ON.

To apply limits on the auto pan (endless panning), set "**AUTO PAN**" to ON.

NOTE: When the flip mode is 90°, 100°, 110° or 120° and you moves over 90° vertically, the panning range operates in opposite side.

• INITIALIZE DATA

```
INITIALIZE DATA

FACTORY DEFAULT
ERASE PROGRAMMED DATA
PRESET FOCUS DEFAULT
EXIT(ESC TO EXIT)
```

FACTORY DEFAULT

Select “**FACTORY DEFAULT**” to initialize the Data.

```
FACTORY DEFAULT

ARE YOU SURE ?

CANCEL
OK
```

ERASE PROGRAMMED DATA

Erase all stored data from the Flash-ROM of the selected dome camera. You will be asked to enter ON or OFF. If you desire to erase all data then select “ERASE” run, otherwise press the **ESC** key to exit without erasing. The erased data includes all stored data (Auto Scan, Preset, and Tour....) except origin offset.

The offset value is still valid after all data is erased. The offset value can be zero with default set of Offset origin menu.

```
ERASE PROGRAMMED DATA

AUTO SCAN      : ON
PRESET         : ON
TOUR           : ON
PATTERN        : ON
AREA TITLE     : ON
PRIVACY ZONE   : ON
CAMERA         : ON
DOME SETUP     : ON
ERASE
SAVE AND EXIT(ESC TO CANCEL)
```

PRESET FOCUS DEFAULT

This menu set the default mode of the focus when you save the Preset.

```
PRESET FOCUS DEFAULT

FOCUS      : AUTO

SAVE AND EXIT(ESC TO CANCEL)
```

FOCUS : AUTO / MANUAL / ONE PUSH

• ORIGIN OFFSET

OFFSET SETUP (CTRL KEY)	
PAN OFFSET	: 000.0
TILT OFFSET	: 000.0
ENABLE	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

This feature is useful to align a new dome camera exactly the same as the previously installed dome camera.

Dome camera's origin set and all data initialize option do not override offset values. Only the default set option in this menu will set the offset value to zero. This can be used to avoid ceiling obstructions.

• DOME RESET

DOME RESET	
ARE YOU SURE ?	
CANCEL	OK

This feature is used to re-calibrate the orientation of a selected dome camera. Origin offset value is not affected by this function. (Offset is still valid after origin set.)

• SYSTEM MENU

SYSTEM MENU	
MOTOR SETUP	
PASSWORD EDIT	
ORIGIN CHECK	
CALIBRATION	: ON
PASSWORD ENABLE	: OFF
MENU TIME OUT	: OFF
BLINK CURSOR	: ON
DOMES ANSWER	: OFF
SAVE AND EXIT(ESC TO CANCEL)	

CALIBRATION	: ON(Auto origin check) / OFF
PASSWORD ENABLE	: ON(requires the password to enter menu) / OFF
MENU TIME OUT	: ON(5mintues) / OFF(always menu display)
BLINK CURSOR	: ON / OFF(no blinking cursor)
DOMES ANSWER	: ON / OFF(no acknowledge command from the dome)

This option is helpful to escape the collision of the command using some DVR.

MOTOR SETUP

Motor Setup menu provides the pan and tilt speed of a camera. User can set the desired speed with pushing the **Joystick** to the left or right. During operation, pressing **153** + **ON** keys will change the speed to the SLOW mode and pressing **153** + **OFF** keys will change the speed to the Normal mode.

Press and hold the **CTRL** key and moving the **Joystick** will operate with the TURBO speed mode.

MOTOR SETUP	
PROPOTIONAL P/T	: ON
P/T MODE	: NORMAL
SAVE AND EXIT(ESC TO CANCEL)	

PROPOTIONAL P/T	: ON / OFF
P/T MODE	: SLOW / NORMAL / TURBO
SLOW MAXIMUM SPEED	: 40 ° /second
NORMAL MAXIMUM SPEED	: 90 ° /second
TURBO MAXIMUM SPEED	: 380 ° /second

PASSWORD EDIT

PASSWORD EDIT SETUP	
(CTRL KEY)	
INPUT PASSWORD	
PASSWORD :	
A B C D E F G H I J	
K L M N O P Q R S T	
U V W X Y Z 0 1 2 3	
4 5 6 7 8 9 ()	
SAVE AND EXIT(ESC TO CANCEL)	

You can change the password with 6-digit character in this menu.

The default password is **555555**.

When the password enable is on, the input password window displays to enter the menu. At this time, move the cursor to the desired character by the **Joystick** and press the **CTRL** or **IRIS Open** key.

ORIGIN CHECK

When you find the wrong position of the dome during operation, execute this origin check and the dome camera will arrange the right position after the origin check operation.

ORIGIN CHECK	
ARE YOU SURE ?	
CANCEL	
OK	

Pressing **151** + **ON** keys will execute the origin check.

• SYSTEM INFORMATION

SYSTEM INFORMATION	
CAMERA TYPE	: xxxxx-Vx.xxxx
H/W VERSION	: Vx.xx-xxxx
ROM VERSION	: Vx.xxxxx
PROTOCOL	: xxxx
BAUDRATE	: 9600
EXIT(ESC TO EXIT)	

The system information provides essential information about the dome camera if service is required. When you view this screen, you can determine the camera type, ROM version. The information on this screen cannot be modified.

3.13 Dome Communication

DOME COMMUNICATION SETUP	
DOME ID	: 001
PROTOCOL	: AUTO
BAUDRATE	: 9600
SAVE AND EXIT(ESC TO CANCEL)	

To prevent damage, each dome camera must have a unique address (ID).

When installing multiple dome cameras using a multiplexer, it is suggested that the dome camera address match the multiplexer port number.

The factory default setting is 1.

Example: Port 1 = Dome 1, Port 2 = Dome 2 ... Port 16 = Dome 16. If more than 16 dome cameras are installed using two or more multiplexers, ID of the dome camera should be ID of MUX x No. of camera IN. (e.g. multiplexer ID= n, Camera IN= m then ID of Dome =16x(n-1)+m)

3.14 Function Run

This Function Run menu allows you to execute the function when you use a keyboard or a DVR without the function keys (Preset, Pattern, Tour and Scan).

FUNCTION RUN SETUP (CTRL KEY)	
PRESET	: ---
PATTERN	: ---
TOUR	: ---
SCAN	: ---
HOME	
AUTO PAN	
EXIT(ESC TO EXIT)	

1. Select the desired Function by pushing the **Joystick** up or down.
2. Select the number by twist the **Joystick** in PRESET, PATTERN, TOUR, and SCAN.
3. Press the **CTRL** or **IRIS Open** key to execute.

NOTE: To execute the function, you should save the function (PRESET, PATTERN, TOUR, and SCAN) first.

- HOME

Select "HOME" and press the **CTRL** key. Then dome camera goes to the default position to which the dome camera returns after an assigned period of inactivity passes. The default position may be a Preset, Tour, Pattern or no action.

- AUTO PAN

You can execute the endless auto pan which is to turn one direction continuously by select the Auto Pan.

3.15 Factory Setup

FACTORY SETUP	
TOUR DWELL TIME	: 03 SEC
ANSWER DELAY	: 03 SEC
SAVE AND EXIT(ESC TO CANCEL)	

Pressing **250** + **PRST** keys pops up this menu.

TOUR DWELL TIME means the dwell time between Tours.

ANSWER DELAY means the response time of the dome and you don't need to change in normal condition.

Chapter 4 — Operation by Web Browser

The **IPSDMV22D1** network camera can be used with Windows operating system and browsers. The recommended browsers are Internet Explorer, Safari, Firefox, Opera and Google Chrome with Windows.


Note: To view streaming video in Microsoft Internet Explorer, set your browser to allow ActiveX controls.

4.1 Access from a browser

- 1) Start a browser (Internet Explorer).
- 2) Enter the IP address or host name of the network camera in the Location/Address field of your browser.
- 3) You can see a starting page. Click Live View or Setup to enter web page.



- 4) The encoder's **Live View** page appears in your browser.

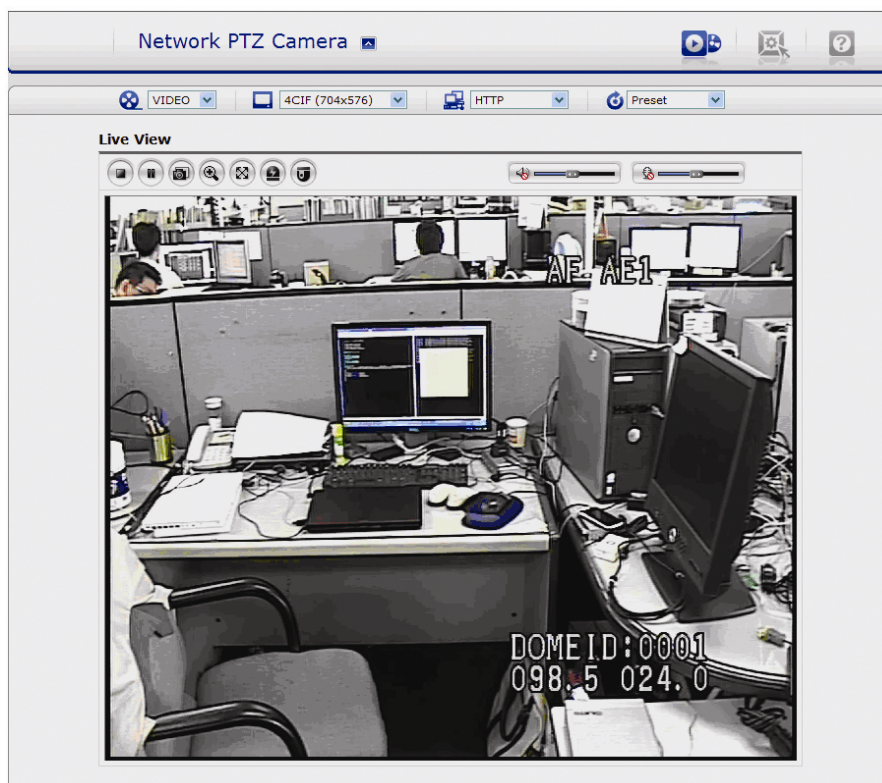

4.2 Access from the internet

Access from the internet once connected, the network camera is accessible on your local network (LAN). To access the video encoder from the Internet you must configure your broadband router to allow incoming data traffic to the video encoder. To do this, enable the NAT traversal feature, which will attempt to automatically configure the router to allow access to the video encoder. This is enabled from Setup > System > Network > NAT Traversal.

For more information, please see NAT traversal (port mapping) for IPv4, on “4.5.5 System > 4) Network > ⑥ NAT Traversal”.

4.3 Setting the admin password over a secure connection

To gain access to the product, the password for the default administrator user must be set. This is done in the “Admin Password” dialog, which is displayed when the network camera is accessed for the setup at the first time. Enter your admin name and password, set by the administrator.

Note: The default administrator username and password is “admin”. If the password is lost, the network camera must be reset to the factory default settings.
Please see “4.8 Resetting to the factory default settings” for more details.



To prevent network eavesdropping when setting the admin password, this can be done via an encrypted HTTPS connection, which requires an HTTPS certificate (see note below).

To set the password via a standard HTTP connection, enter it directly in the first dialog shown below. To set the password via an encrypted HTTPS connection, please see Setup > System > Security > HTTPS, on “4.5.5 System > 2) Security > ② HTTPS”.

 
Note: HTTPS (Hypertext Transfer Protocol over SSL) is a protocol used to encrypt the traffic between web browsers and servers. The HTTPS certificate controls the encrypted exchange of information.

4.4 Live View Page

The live view page comes in seven screen modes like 704x576(480), 704x288(240), 352x288(240), 176x144(120), 640x480, 320x240 and 160x120. Users are allowed to select the most suitable one out of those modes. Please, adjust the mode in accordance with your PC specifications and monitoring purposes.



1) General controls



The video drop-down list allows you to select a customized or pre-programmed video stream on the live view page. Stream profiles are configured under Setup > Basic Configuration > Video & Image. Please see “4.5.1 Basic Configuration” for more information.



The resolution drop-down list allows you to select the most suitable one out of video resolutions to be displayed on live view page.



The protocol drop-down list allows you to select which combination of protocols and methods to use depends on your viewing requirements, and on the properties of your network.



The preset drop-down list allows you to select the preset number for the PTZ camera being used. This icon is inactivated if the PTZ settings are not set.

2) Control toolbar

The live viewer toolbar is available in the web browser page only. It displays the following buttons:



The Stop button stops the video stream being played. Pressing the key again toggles the start and stop. The Start button connects to the network camera or start playing a video stream.



The Pause button pause the video stream being played.



The Snapshot button takes a snapshot of the current image. The location where the image is saved can be specified.



The digital zoom activates a zoom-in or zoom-out function for video image on the live screen.



The Full Screen button causes the video image to fill the entire screen area. No other windows will be visible. Press the 'Esc' button on the computer keyboard to cancel full screen view.



The Manual Trigger button activates a pop-up window to manually start or stop the event.



The Camera Menu button activates a pop-up window for camera menu control.



The PTZ button activates a pop-up window for Pan, Tilt and Zoom control.



Use this scale to control the volume of the speakers.



Use this scale to control the volume of the microphone.



Use this scale to control the volume of the speakers and microphones.

3) Camera Menu controls

If the network camera has been appropriately configured, the Live View page displays the controls available for the OSD menu.

For more information, please see “Chapter 3 — Program and Operation”.

4) Pan/Tilt/Zoom controls

If the network camera has been appropriately configured, the Live View page displays the controls available for the PTZ (Pan Tilt Zoom) or PT device installed. The administrator can enable/disable the controls for specified users.

Please see “4.6 PTZ Control” for more information.

5) Video and Audio Streams


The network camera provides several images and video stream formats. Your requirements and the properties of your network will determine the type you use.

The Live View page in the network camera provides access to H.264, MPEG-4 and Motion JPEG video streams, and to the list of available video streams. Other applications and clients can also access these video streams/images directly, without going via the Live View page.

4.5 Network Camera Setup

This section describes how to configure the network camera, and is intended for product Administrators, who have unrestricted access to all the Setup tools; and Operators, who have access to the settings for Basic, Live View, Video & Image, Audio, Event, and System Configuration.

You can configure the network camera by clicking Setup in the top right-hand corner of the Live View page. Click on this page to access the online help that explains the setup tools.

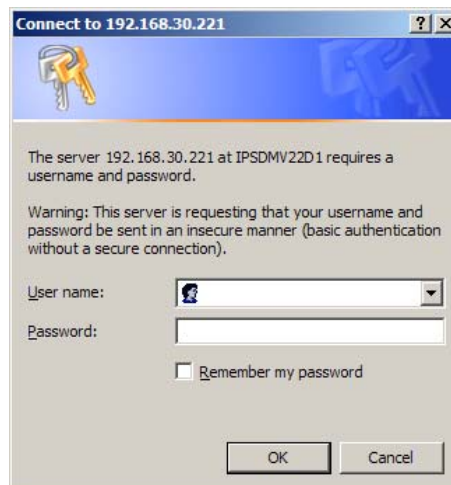


When accessing the network camera for the first time, the “Admin Password” dialog appears. Enter your admin name and password, set by the administrator.

Note: If the password is lost, the network camera must be reset to the factory default settings. Please see “4.8 Resetting to the Factory Default Settings”.

4.5.1 Basic Configuration

1) Users

User access control is enabled by default. An administrator can set up other users, by giving these user names and passwords. It is also possible to allow anonymous viewer login, which means that anybody may access the Live View page, as described below:

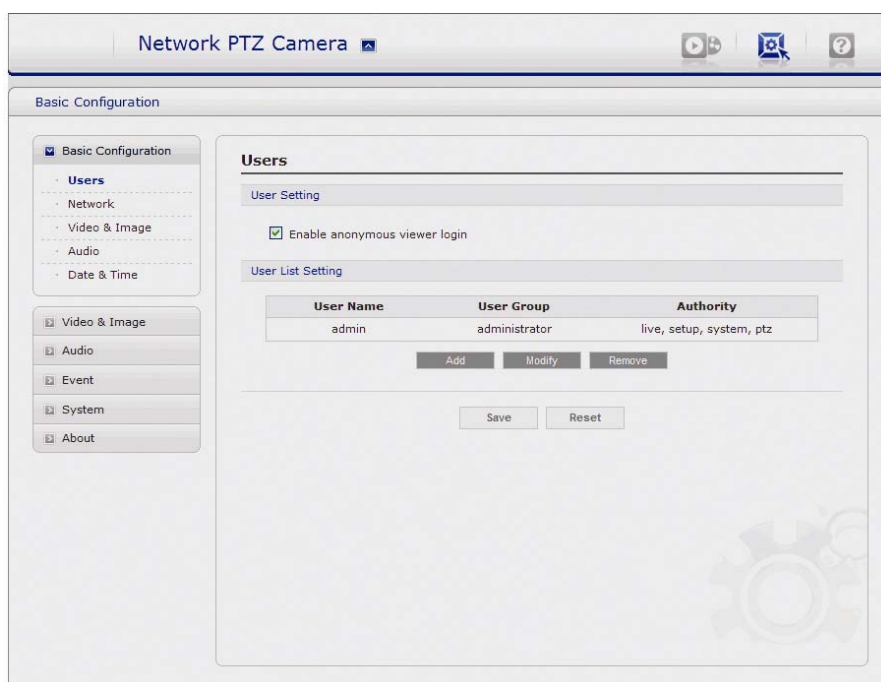


The **user list** displays the authorized users and user groups (levels):

User Group	Authority
Guest	Provides the lowest level of access, which only allows access to the Live View page.
Operator	An operator can view the Live View page, create and modify events, and adjust certain other settings. Operators have no access to System Options.
Administrator	An administrator has unrestricted access to the Setup tools and can determine the registration of all other users.

- **Enable anonymous viewer login:** Check the box to use the webcasting features. Refer to “4.5.2 Video & Image” for more details.

2) Network

The network camera support both IP version 4 and IP version 6. Both versions may be enabled simultaneously, and at least one version must always be enabled. When using IPv4, the IP address for the video encoder can be set automatically via DHCP, or a static IP address can be set manually. If IPv6 is enabled, the video encoders receive an IP address according to the configuration in the network router. There is also the option of using the Internet Dynamic DNS Service. For more information on setting the network, please see Setup > System > Network, on “4.5.5 System > 4) Network”.

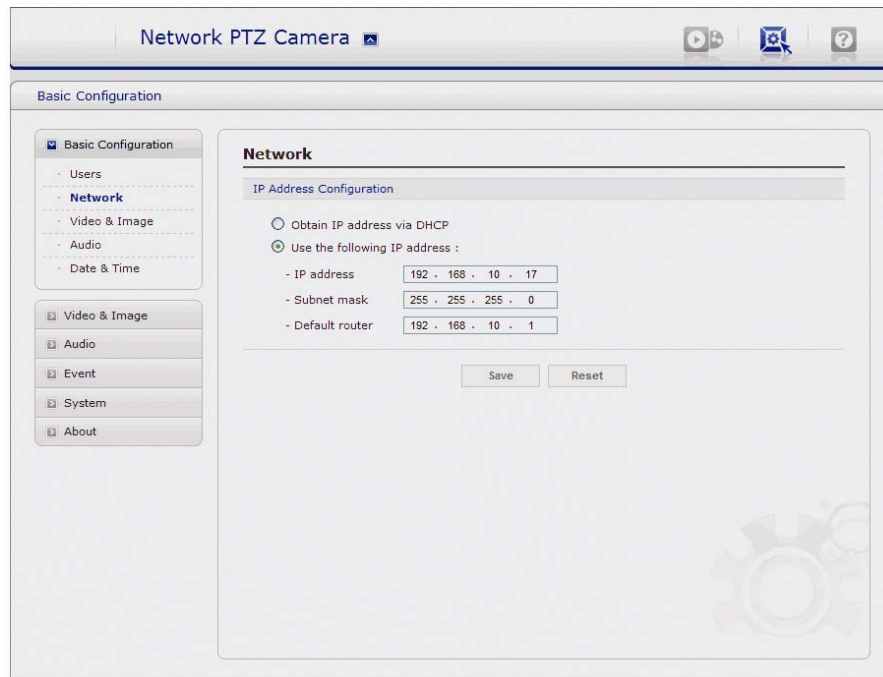


- **Obtain IP address via DHCP:** Dynamic Host Configuration Protocol (DHCP) is a protocol that lets network administrators centrally manage and automate the assignment of IP addresses on a network. DHCP is enabled by default. Although a DHCP server is mostly used to set an IP address dynamically, it is also possible to use it to set a static, known IP address for a particular MAC address.
- **Use the following IP address:** To use a static IP address for the network camera, check the radio button and then make the following settings:
 - **IP address** - Specify a unique IP address for your network camera.
 - **Subnet mask** - Specify the mask for the subnet the network camera is located on.
 - **Default router** - Specify the IP address of the default router (gateway) used for connecting devices attached to different networks and network segments.

Notes:

1. DHCP should only be enabled if using dynamic IP address notification, or if your DHCP server can update a DNS server, which then allows you to access the network camera by name (host name). If DHCP is enabled and you cannot access the unit, you may have to reset it to the factory default settings and then perform the installation again.
2. The ARP/Ping service is automatically disabled two minutes after the unit is started, or as soon as an IP address is set.
3. Pinging the unit is still possible when this service is disabled.

3) Video & Image

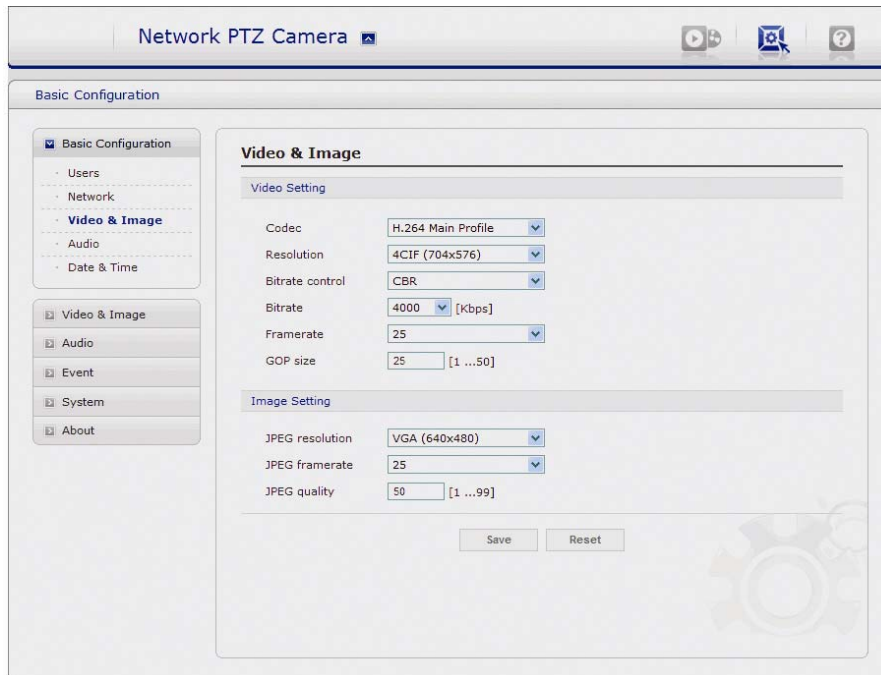

- **Video Setting:**

- **Codec:** The codec settings are separated into MPEG4 and H.264. H.264 is also known as MPEG-4 Part 10. This is the new generation compression standard for digital video. This function offers higher video resolution than Motion JPEG or MPEG-4 at the same bit rate and bandwidth, or the same quality video at a lower bit rate.
- **Profile:** There are 4 pre-programmed stream profiles available for quick set-up. Choose the form of video encoding you wish to use from the drop-down list:
 - * **H.264 MP(Main Profile):** Primarily for low-cost applications that requires additional error robustness, this profile is used rarely in videoconferencing and mobile applications, it does add additional error resilience tools to the Constrained Baseline Profile. The importance of this profile is fading after the Constrained Baseline Profile has been defined.
 - * **H.264 BP(Base Profile):** Originally intended as the mainstream consumer profile for broadcast and storage applications, the importance of this profile faded when the High profile was developed for those applications.
 - * **MPEG4 SP(Simple Profile):** Mostly aimed for use in situations where low bit rate and low resolution are mandated by other conditions of the applications, like network bandwidth, device size etc.
 - * **MPEG4 ASP(Advanced Simple Profile):** Its notable technical features relative to the Simple Profile, which is roughly similar to H.263, including "MPEG"-style quantization, interlaced video, B pictures (also known as B Frames), Quarter Pixel motion compensation (Qpel), Global motion compensation (GMC).
- **Resolution:** It enables users to determine a basic screen size when having an access through the Web Browser or PC program. The screen size control comes in seven modes like 4CIF(704x576(480)), 2CIF(704x288(240)), CIF(352x288(240)), QCIF(176x144(120)), VGA(640x480), QVGA(320x240), and QQVGA(160x120). Users can reset the selected screen size anytime while monitoring the screen on a real-time basis.

- **Bitrate control:** Limiting the maximum bit rate helps control the bandwidth used by the H.264 or MPEG-4 video stream. Leaving the Maximum bit rate as unlimited maintains consistently good image quality but increases bandwidth usage when there is more activity in the image. Limiting the bit rate to a defined value prevents excessive bandwidth usage, but images are lost when the limit is exceeded.

Note that the maximum bit rate can be used for both variable and constant bit rates.


The bit rate can be set as Variable Bit Rate (VBR) or Constant Bit Rate (CBR). VBR adjusts the bit rate according to the image complexity, using up bandwidth for increased activity in the image, and less for lower activity in the monitored area.

CBR allows you to set a fixed target bitrate that consumes a predictable amount of bandwidth. As the bit rate would usually need to increase for increased image activity, but in this case cannot, the frame rate and image quality are affected negatively. To partly compensate for this, it is possible to prioritize either the frame rate or the image quality whenever the bit rate needs to be increased. Not setting a priority means the frame rate and image quality are equally affected.

- **Compression:** When it is necessary to adjust a smooth transmission status according to network situations, users can increase the compressibility to carry out the network transmission stably. On the other hand, when it is necessary to maintain a detailed monitoring screen by enhancing the image quality, users can do so by decreasing the compressibility. In ease case, please adjust this function according to the network status and monitoring purposes. The default is 2000(Kbps).
- **Frame rate:** Upon the real-time play, users should select a frame refresh rate per second. If the rate is high, the image will become smooth. On the other hand, if the rate is low, the image will not be natural but it can reduce a network load.
- **GOP size:** Select the GOP(Group of Picture) size. If users want to have a high quality of fast image one by one, please decrease the value. For the purpose of general monitoring, please do not change a basic value. Such act may cause a problem to the system performance. For the details of GOP setting, please contact the service center.
- **Image Setting:** Sometimes the image size is large due to low light or complex scenery. Adjusting the frame rate and quality helps to control the bandwidth and storage used by the Motion JPEG video stream in these situations. Limiting the frame rate and quality optimizes bandwidth and storage usage, but may give poor image quality. To prevent increased bandwidth and storage usage, the Resolution, Frame rate, and Frame Quality should be set to an optimal value.
 - **JPEG resolution:** Same as the video settings.
 - **JPEG frame rate:** Same as the video settings.
 - **JPEG quality:** Select the picture quality. If users want to have a high quality of fast image one by one, please decrease the value. For the purpose of general monitoring, please do not change a basic value. Such act may cause a problem to the system performance.

When satisfied with the settings, click **Save**, or click **Reset** to revert to previously saved settings.

4) Audio

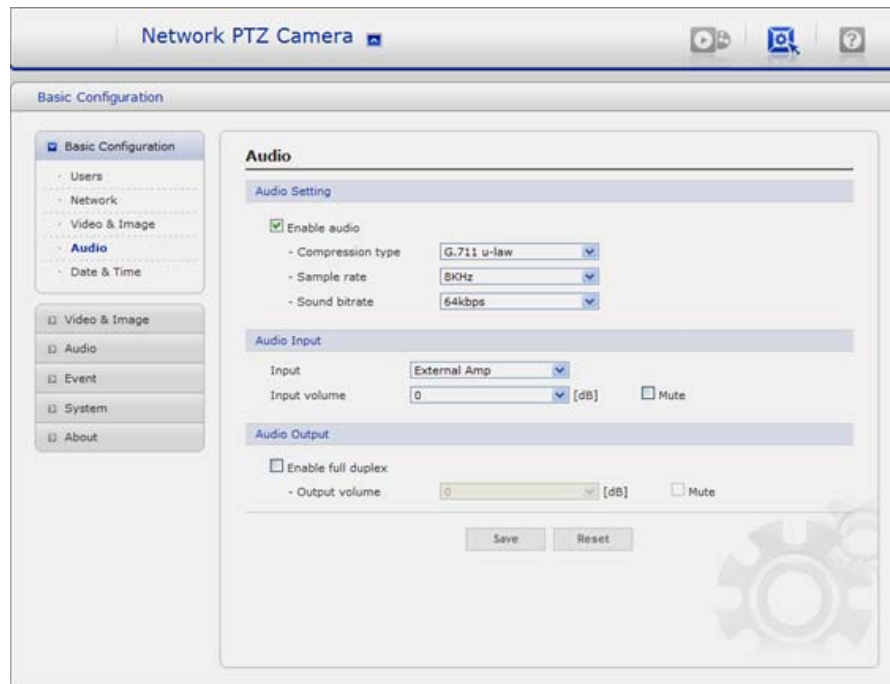

The network camera can transmit audio to other clients using an external microphone and can play audio received from other clients by attaching a speaker. The Setup page has an additional menu item called **Audio**, which allows different audio configurations, such as, full duplex, and simplex.

• Audio Setting:

- **Enable audio:** Check the box to enable audio in the video stream.
- **Compression type:** Select the desired audio Compression format, G.711.
- **Sample rate:** Select the required Sample rate (number of times per second the sound is sampled). The higher the sample rate, the better the audio quality and the greater the bandwidth required.
- **Sound bitrate:** Depending on the selected encoding, set the desired audio quality (bitrate). The settings affect the available bandwidth and the required audio quality.

• Audio Input:

Audio from an external line source can be connected to the RCA Jack I/O of the network camera.

- **Input volume:** If there are problems with the sound input being too low or high, it is possible to adjust the input gain for the microphone attached to the network camera.

• Audio Output:

- **Enable full duplex:** Check the box to enable Full Duplex mode. It means that you can transmit and receive audio (talk and listen) at the same time, without having to use any of the controls. This is just like having a telephone conversation.

This mode requires that the client PC has a sound card with support for full-duplex audio.

Uncheck the box enable Simplex mode. The simplex mode only transmits audio from the network camera to any web client. It does not receive audio from other web clients.

- **Output volume:** If the sound from the speaker is too low or high it is possible to adjust the output gain for the active speaker attached to the network camera.

When satisfied with the settings, click **Save**, or click **Reset** to revert to previously saved settings.

5) Date & Time

The screenshot shows the 'Basic Configuration' window for a 'Network PTZ Camera'. The left sidebar contains a menu with 'Basic Configuration' (selected), 'Users', 'Network', 'Video & Image', 'Audio', 'Date & Time', 'Event', 'System', and 'About'. The main content area is titled 'Date & Time' and includes the following sections:

- Current Server Time:** Displays 'Date : 2001-01-02' and 'Time : 00:50:47'.
- New Server Time:**
 - Time zone:** A dropdown menu showing '(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London'. Below it is a checkbox for 'Automatically adjustment for daylight saving time changes'.
 - Time mode:** Three radio button options:
 - Synchronize with computer time:** Selected. Shows 'Date : 2010-07-27' and 'Time : 11:16:07'.
 - Synchronize with NTP server:** Shows 'NTP server : time.nist.gov' and 'NTP Interval : 12 [hour]'.
 - Set manually:** Shows 'Date : 2001-01-02' and 'Time : 00:50:45'.
- Date & Time Format:** Two dropdown menus: 'Date Format : YYYY-MM-DD' and 'Time Format : 24 Hour'.

At the bottom right of the configuration area are 'Save' and 'Reset' buttons.

• Current Server Time:

It displays the current date and time (24h clock). The time can be displayed in 12h clock format in the overlay (see below).

• New Server Time:


Select your time zone from the drop-down list. If you want the server clock to automatically adjust for daylight savings time, select the “Automatically adjustment for daylight saving time changes”.

From the **Time Mode** section, select the preferred method to use for setting the time:

- **Synchronize with computer time:** sets the time from the clock on your computer.
- **Synchronize with NTP Server:** the video encoder will obtain the time from an NTP server every 60 minutes.
- **Set manually:** this option allows you to manually set the time and date.

4.5.2 Video & Image


1) Basic

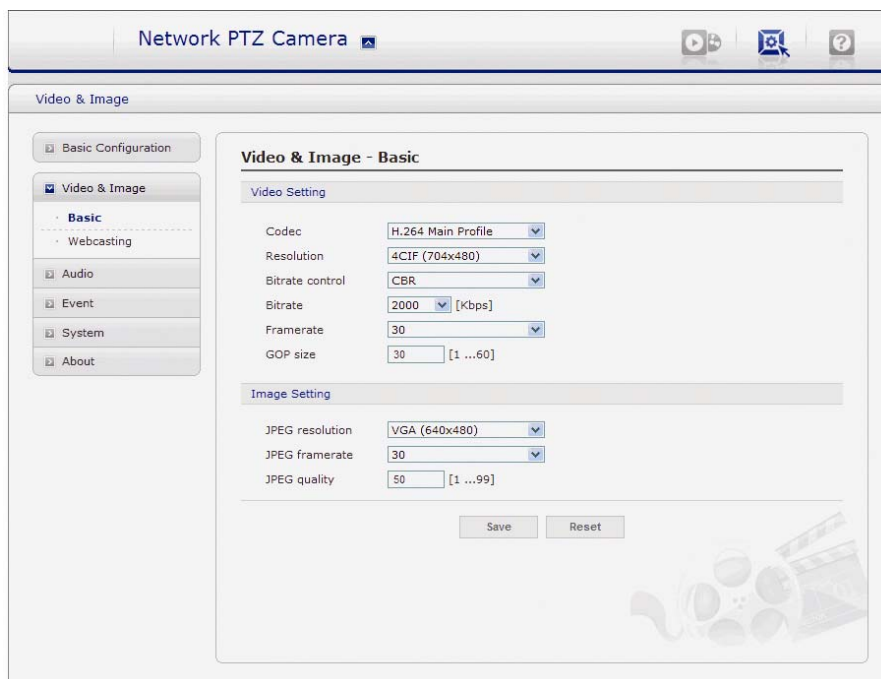

Refer to “4.5.1 Basic Configuration > 3) Video & Image” for more details.

2) Webcasting – Channel1

The network camera can stream live video to a website. Copy the HTML code generated on the screen and paste it in page code of the website you want to display live video.

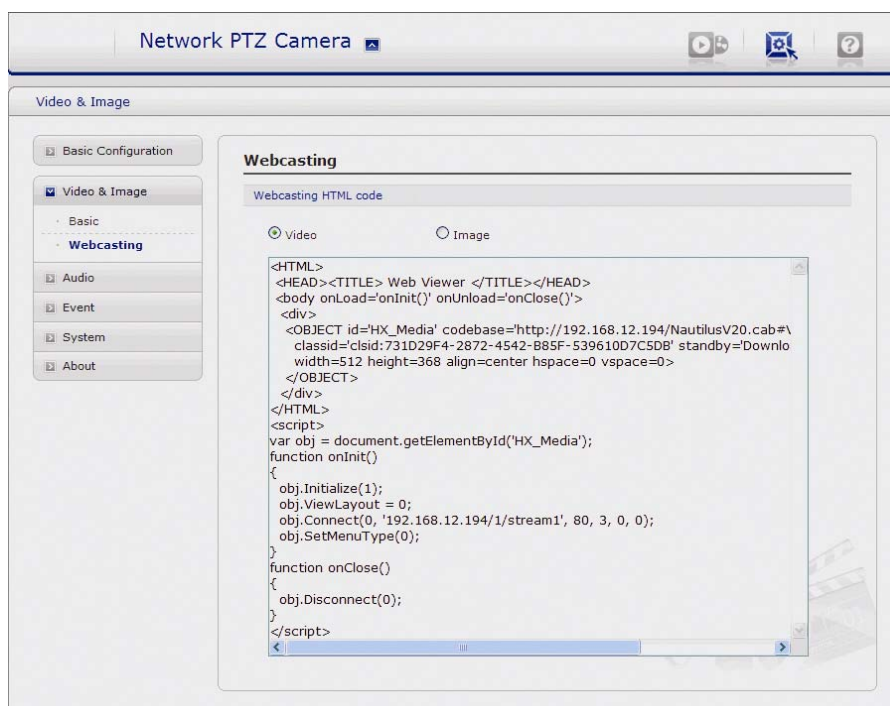

Note: To use webcasting service, the Enable Anonymous viewer login option must be checked. Refer to “4.5.1 Basic Configuration > 1) Users” for more details.

4.5.3 Audio

The screenshot shows the 'Audio' configuration window. On the left is a sidebar with a tree view containing 'Basic Configuration', 'Video & Image', 'Audio' (selected), 'Event', 'System', and 'About'. The 'Audio' section is expanded, showing 'Basic' as the selected sub-option. The main area is titled 'Audio - Basic' and contains three sections: 'Audio Setting', 'Audio Input', and 'Audio Output'. In 'Audio Setting', there is a checkbox for 'Enable audio' (unchecked) and three dropdown menus for 'Compression type' (G.711 u-law), 'Sample rate' (8KHz), and 'Sound bitrate' (64kbps). In 'Audio Input', there is a dropdown for 'Input' (External Amp), a numeric field for 'Input volume' (0) with '[dB]' next to it, and a 'Mute' checkbox (unchecked). In 'Audio Output', there is a checkbox for 'Enable full duplex' (unchecked) and a numeric field for 'Output volume' (0) with '[dB]' next to it, and a 'Mute' checkbox (unchecked). At the bottom are 'Save' and 'Reset' buttons. A decorative graphic of musical notes and a speaker is in the bottom right corner.

Refer to “4.5.1 Basic Configuration > 4) Audio” for more details.

4.5.4 Event

1) Event-In

① On Boot

The screenshot shows the 'Event' configuration window. The title bar says 'Network PTZ Camera'. The sidebar on the left has a tree view with 'Basic Configuration', 'Video & Image', 'Audio', 'Event' (selected), 'System', and 'About'. The 'Event' section is expanded, showing 'Event In' as the selected sub-option, which is further expanded to show 'On Boot', 'Alarm In', 'Manual Trigger', and 'Motion'. The main area is titled 'Event In - On Boot' and contains an 'On Boot Setting' section. It has a checkbox for 'Enable on boot' (unchecked) and a numeric field for 'Dwell time' (3) with '[1... 180] sec' next to it. At the bottom are 'Save' and 'Reset' buttons. A decorative graphic of a bell is in the bottom right corner.

This is used to trigger the event every time the Network Transmitter is started. Select “Enable” to activate the motion event.

② Alarm In

The screenshot shows the 'Network PTZ Camera' web interface. On the left is a navigation menu with options: Basic Configuration, Video & Image, Audio, Event (selected), Event Out, System, and About. Under the 'Event' menu, there are sub-options: Event In (selected), On Boot, Alarm In, Manual Trigger, and Motion. The main content area is titled 'Event In - Alarm In' and contains the 'Alarm In Port 1 Setting' section. This section has a checkbox for 'Enable alarm in port 1', a dropdown for 'Type' (set to 'NO'), and a text input for 'Dwell time' (set to '3') with a range '[1... 180] sec'. At the bottom of the settings are 'Save' and 'Reset' buttons. A faint camera icon is visible in the background.

Select “Enable” to activate the alarm event. The network camera support 1 alarm input ports.

- **Type:** Choose the type of alarm you wish to use from the drop-down list.
- **Dwell Time:** Set the dwell time an event lasts for the specified dwell time from the point of detection of an alarm input.

③ Manual Trigger

The screenshot shows the 'Network PTZ Camera' web interface. On the left is a navigation menu with options: Basic Configuration, Video & Image, Audio, Event (selected), Event Out, System, and About. Under the 'Event' menu, there are sub-options: Event In, On Boot, Alarm In, Manual Trigger (selected), and Motion. The main content area is titled 'Event In - Manual Trigger' and contains four sections for 'Manual Trigger 1 Setting' through 'Manual Trigger 4 Setting'. Each section has a checkbox for 'Enable manual trigger', a text input for 'Dwell time' (set to '3') with a range '[1... 180] sec', and 'Save' and 'Reset' buttons at the bottom. A faint camera icon is visible in the background.

This option makes use of the manual trigger button provided on the live view page, which are used to start or stop the event type manually. Alternatively the event can be triggered via the product's API (Application Programming Interface).

④ Motion



Motion detection is used to generate an alarm whenever movement occurs (or stops) in the video image. A total of 8 Motion and/or Mask windows can be created and configured.

Motion is detected in defined **Motion** windows, which are placed in the video image to target specific areas. Movement in the areas outside the motion windows will be ignored. If part of a motion window needs to be masked, this can be configured in a **Mask** window.

• Pre-Viewer:

Motion detection windows are configured by Motion or Mask windows. Each window can be selected by clicking with the mouse. It is also possible to **resize or delete, or move** the window, by selecting the appropriate window at the mouse menu on the video screen.



To create a motion or mask window, follow steps:

1. Click the right button of mouse to see the mouse menu.
2. Select New Motion (or Mask) Window in the mouse menu.
3. Click and drag mouse to designate a motion area.

- **Motion Detection Setting:**

The behavior for each window is defined by adjusting the Threshold and Sensitivity, as described below.

A motion index is a set of parameters describing Window Name, Type, Threshold, Sensitivity, and Dwell Time. Window Types is one of Motion and Mask windows.


- **Threshold:** Sets up the sensitivity for the motion detection.
- **Sensitivity:** Sets up the sensitivity for the motion detection.
- **Dwell Time:** Set the hold time an event lasts for the specified hold time from the point of detection of a motion.

You can also modify or delete a motion index. Select an index and then, click the Modify or Delete button.

Select “Enable” to activate the motion window.

Note: Motion event could be occurred by the movement of manual control & function operation.

⑤ Network Loss

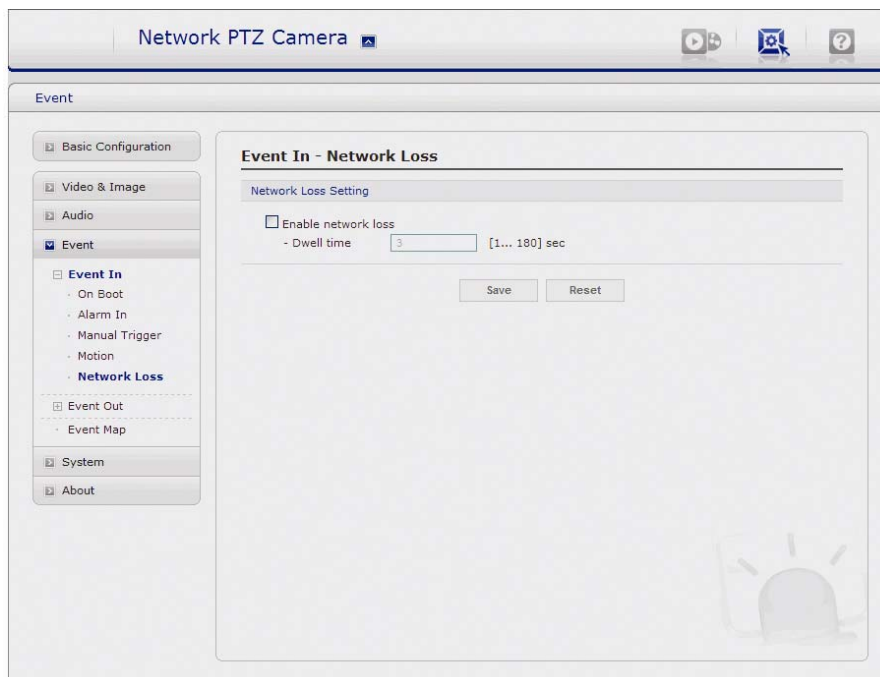

This is used to trigger the event every time the network connection is failed. Select “Enable” to activate the Network Loss event.

2) Event-Out

① SMTP(E-Mail)

Network PTZ Camera

Event

Basic Configuration

Video & Image

Audio

Event

Event In

Event Out

SMTP(E-Mail)

FTP & JPEG

HTTP Server

Alarm Out

Audio Alert

PTZ Preset

Event Map

System

About

Event Out - SMTP(E-Mail)

SMTP(E-Mail) Setting

☐ Enable SMTP

- Sender

- Interval [1... 86400] sec

- Aggregate events [1... 100]

☐ Use mail server

- Mail server

- Port

☐ Enable use(SMTP) authentication

- User name

- Password

- Login method

SMTP(E-Mail) Receiver

Receiver 1 Receiver 2

Receiver 3 Receiver 4

Receiver 5 Receiver 6

Receiver 7 Receiver 8

SMTP(E-Mail) Test

Receiver

The network camera can be configured to send event and error email messages via SMTP (Simple Mail Transfer Protocol).

• SMTP(E-Mail) Setting:

Select “Enable” to activate the SMTP operation.

- **Mail Server / Port:** Enter the host names (or IP addresses) and port numbers for your mail server in the fields provided, to enable the sending of notifications and image email messages from the camera to predefined addresses via SMTP.
- **Sender:** Enter the email address to be used as the sender for all messages sent by the Network Transmitter.
- **Interval:** Represents the frequency of the email notification when an event occurs.
- **Aggregate events:** Shows the maximum number of emails sent within each interval. If your mail server requires authentication, check the box for Use authentication to log in to this server and enter the necessary information.
- **User Name / Password:** Enter the User Name and Password as provided by your network administrator or ISP (Internet Service Provider). To ensure that the login procedure is performed as securely as possible when using SMTP authentication, you must define the weakest authentication method allowed.
- **Login Method:** Set the Weakest method allowed to the highest/safest method supported by the mail server. The most secure method is listed in the drop-down list:

Login / Plain

- **SMTP(E-Mail) Receiver:**

- **Receiver:** Enter an email address. You can also register the e-mail address of recipients up to 8.

- **SMTP(E-Mail) Test:**

- **Receiver:** Enter an email address and click the Test button to test that the mail servers are functioning and that the email address is valid.

② FTP & JPEG

The screenshot shows the 'Event Out - FTP & JPEG' configuration page in a web browser. The browser title is 'Network PTZ Camera'. On the left is a sidebar menu with options: Basic Configuration, Video & Image, Audio, Event (selected), Event In, Event Out (expanded), SMTP(E-Mail), FTP & JPEG (selected), HTTP Server, Alarm Out, Audio Alert, PTZ Preset, Event Map, System, and About. The main content area is titled 'Event Out - FTP & JPEG' and contains two sections: 'FTP Setting' and 'JPEG Setting'. In the 'FTP Setting' section, there is a checkbox for 'Enable FTP' which is currently unchecked. Below it are input fields for 'Server', 'Port' (set to 21), 'Remote directory', 'User name', and 'Password'. There are also checkboxes for 'Passive mode' and 'Anonymous login'. The 'JPEG Setting' section includes 'Pre-event' and 'Post-event' time and FPS settings, a 'Prefix file name' field (set to 'basename_'), and an 'Additional suffix' section with radio buttons for 'None', 'Date/Time' (selected), and 'Sequence number'. At the bottom are 'Save' and 'Reset' buttons.

When the network camera detects an event, it can record and saves images to an FTP server. Images can be sent as e-mail attachments. Check the box to enable the service.

- **FTP Setting**

- **Server:** Enter the server's IP address or host name. Note that a DNS server must be specified in the TCP/IP network settings if using a host name.
- **Port:** Enter the port number used by the FTP server. The default is 21.
- **Use passive mode:** Under normal circumstances the network camera simply requests the target FTP server to open the data connection. Checking this box issues a PASV command to the FTP server and establishes a passive FTP connection; whereby the network camera actively initiates both the FTP control and data connections to the target server. This is normally desirable if there is a firewall between the camera and the target FTP server.
- **Remote directory:** Specify the path to the directory where the uploaded images will be stored. If this directory does not already exist on the FTP server, there will be an error message when uploading.
- **User name / Password:** Provide your log-in information.

- **JPEG Setting:**

- **Pre-event:** A pre-event buffer contains images from the time immediately preceding the event trigger. These are stored internally in the server. This buffer can be very useful when checking to see what happened to cause the event trigger.

Check the box to enable the pre-trigger buffer, enter the desired total length in seconds, minutes or hours, and specify the required image frequency.

- **Post-event:** This function is the counterpart to the pre-trigger buffer described above and contains images from the time immediately after the trigger. Configure as for pre-event.
- **Prefix file name:** This name will be used for all the image files saved. If suffixes are also used, the file name will take the form <prefix>,<suffix>,<extension>.
- **Additional suffix:** Add either a date/time suffix or, a sequence number - with or without a maximum value.

③ HTTP Server

The screenshot shows a web browser window titled "Network PTZ Camera". The interface has a sidebar on the left with a tree view containing: Basic Configuration, Video & Image, Audio, Event (selected), Event In, Event Out (expanded), SMTP(E-Mail), FTP & JPEG, HTTP Server (highlighted), Alarm Out, Audio Alert, PTZ Preset, Event Map, System, and About. The main content area is titled "Event Out - HTTP Server". It contains two sections: "HTTP Server Setting" with an unchecked checkbox for "Enable HTTP server", and three input fields for "- URL", "- User name", and "- Password"; and "HTTP Server Test" with a "Send message" input field, a "Test" button, and "Save" and "Reset" buttons at the bottom. A faint alarm bell icon is visible in the bottom right corner of the main area.

When the network camera detects an event, HTTP Server is used to receive uploaded image files and/or notification messages. Check the box to enable the service.

- **HTTP Server Setting:**

- **Name:** The name of the HTTP event server. Use a descriptive name.
- **URL:** The network address to the server and the script that will handle the request.

For example: <http://192.168.12.244/cgi-bin/upload.cgi>

- **User name/Password:** Provide your log-in information.

- **HTTP Server Test:**

When the setup is complete, the connection can be tested by clicking the Test button.

④ Alarm Out

Network PTZ Camera

Event

Basic Configuration

Video & Image

Audio

Event

Event In

Event Out

- SMTP(E-Mail)
- FTP & JPEG
- HTTP Server
- Alarm Out
- Audio Alert
- PTZ Preset

Event Map

System

About

Event Out - Alarm Out

Alarm Out Port Setting

☐ Enable alarm out

Save Reset

When the network camera detects an event, it can control external equipment connected to its alarm output port. Check the box to enable and then select either:

- **Enable:** When you select “**Enable alarm out**”, the output will be activated for as long as the event is active.

⑤ Audio Alert

Network PTZ Camera

Event

Basic Configuration

Video & Image

Audio

Event

Event In

Event Out

- SMTP(E-Mail)
- FTP & JPEG
- HTTP Server
- Alarm Out
- Audio Alert
- PTZ Preset

Event Map

System

About

Event Out - Audio Alert

Audio Alert Setting

☐ Enable audio alert

- Audio file 1 Browse Upload

- Audio file 2 Browse Upload

- Audio file 3 Browse Upload

Audio Alert Test

No.	File Name	File Size	Play Time	Bitrate
-----	-----------	-----------	-----------	---------

Test Remove

Save Reset

When the network camera detects an event, it can output a predefined audio data to external speaker. Check the box to enable the service.

- **Audio Alert Setting:**

To use the audio alert with the Network Camera, an audio data file made by user must be uploaded from your PC. Provide the path to the file directly, or use the Browse button to locate it. Then click the Upload button.

An audio file for Audio Alert can be made by Audio Recorder tool in the NCTitanium software.

- **Audio Alert Test:**

When the setup is complete, the audio output can be tested by clicking the Test button.


To remove an audio file, select index and click the Remove button.

Note: For a proper operation of Audio Alert, you must enable “full duplex” in Audio setting page.





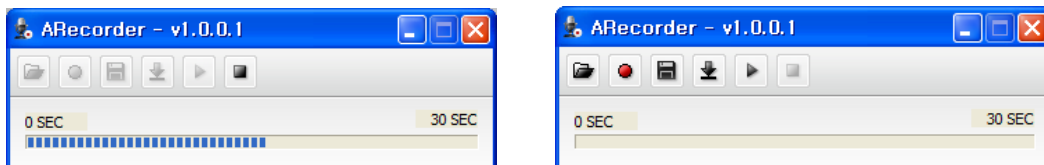

⑥ Audio Recorder

To use Audio Recorder tool to make an audio file for Audio Alert function, you must install the NCTitanium on the installation CD at first.

The NCTitanium program (Start > All Programs > NCTitanium > Tools > ARecorder) in your PC, the main window will be displayed as below.



The description of each button in the ARecorder window follows.

-  **Open:** Open an audio file.
-  **Capture:** Capture audio from the microphone in your PC.
-  **Save:** Save a captured file to your PC. (PCM format)
-  **Encode:** Encode a current capture file or opened PCM file to G.711 file for Audio Alert.
-  **Play:** Play a current audio file.
-  **Stop:** Stop playing audio.


Procedures to make an audio file in G.711 format for Audio Alert.

1. Connect the microphone in your PC.
2. Click the Capture button and talk to the microphone to record the audio or voice.
You can record up to 30 seconds. Click the Stop button to stop on capturing.
3. Click the Save button and then set the file name to save a current capture file with PCM format.

If you don't need to make any PCM file, skip this step and then go to the step 5 directly.


4. Click the Open button and then select the file name to open an audio file in PCM format.
5. Click the Encode button to encode a current audio file to G.711 format for Audio Alert.

Set the file name and encode parameters.

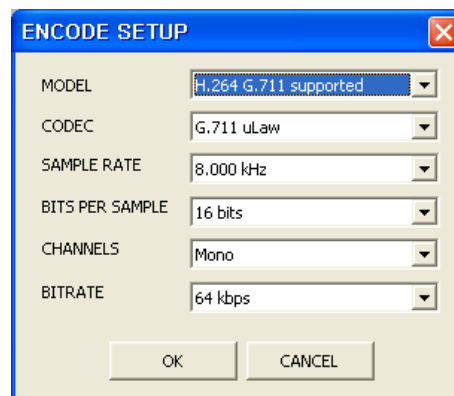

Caution: All parameters must be synchronized with ones in audio setting page of network devices for a proper operation.

⑦ PTZ Preset

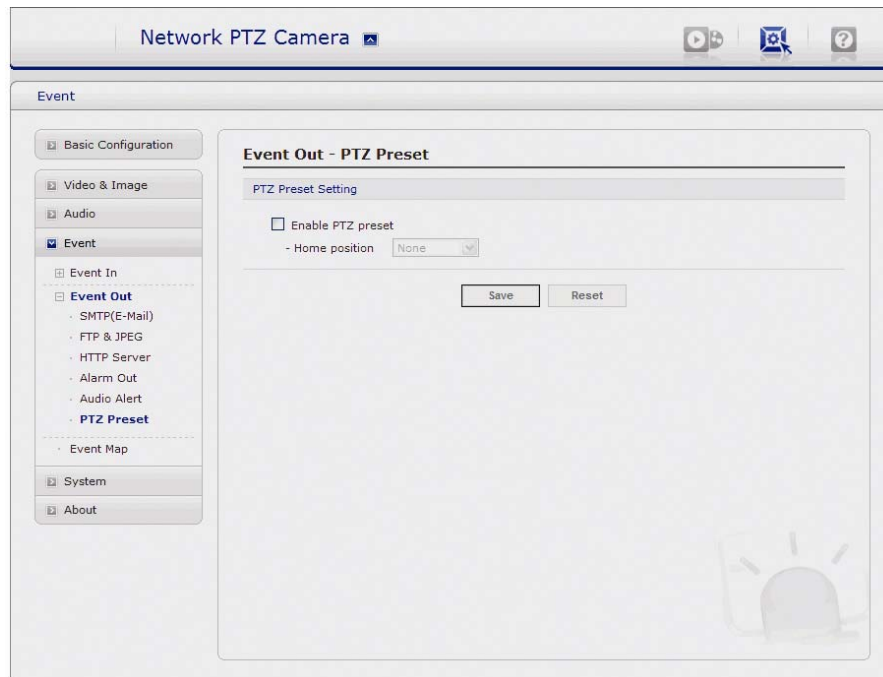

When the Network Transmitter detects an event, you can make a PTZ camera connected to its RS485 port to move to a predefined preset position. Check the box to enable the service and return to the Home position once the event has ended.

3) Event Map



The event map allows you to change the settings and establish a schedule for each event trigger from the network camera. You can register the event map up to max. 15.

Click Add button to make a new event map and you can see a popup window as below.

Add Event Map

General

· Name

Event In

· Type

Event Out

☐ E-Mail

☐ To e-mail address 1 ☐ To e-mail address 2

☐ To e-mail address 3 ☐ To e-mail address 4

☐ To e-mail address 5 ☐ To e-mail address 6

☐ To e-mail address 7 ☐ To e-mail address 8

Subject

Additional info

☐ FTP

☐ HTTP server

Message

☐ Alarm out

☐ Audio alert

☒ Audio file 1 ☐ Audio file 2 ☐ Audio file 3

☐ PTZ preset

☐ Return to home position after event

- **General:** Enter the name for a new event map.
- **Event In:** Select an event type in the drop down list.
- **Event Out:**
 - **E-mail:** Select email addresses you want to send via email that an event has occurred.
 - **FTP:** Select checkbox beside FTP to record and saves images to an FTP server when an event has occurred.
 - **HTTP Server:** It sends notification messages to an HTTP server that listens for these. The destination server must first be configured on the Event In page. Enter a message you want to send.
 - **Audio Alert:** Select a Audio alert file the Network Transmitter output when audio alert event triggered. The Audio alert file must first be configured on the Event In page.

4.5.5 System

1) Information

You can enter the system information. This page is very useful when you refer device information after installation.

The screenshot shows the 'System' configuration page for a 'Network PTZ Camera'. The left sidebar lists various configuration categories: Basic Configuration, Video & Image, Audio, Event, System (selected), Information (selected), Security, Date & Time, Network, Language, Maintenance, Support, and About. The main content area is titled 'Information' and contains two sections: 'Device Name Configuration' and 'Location Configuration'. In the 'Device Name Configuration' section, the 'Device name' field is set to 'H.264 Network PTZ Camera'. The 'Location Configuration' section has four fields: 'Location1' (set to 'Lobby'), 'Location2', 'Location3', and 'Location4'. At the bottom of the main content area are 'Save' and 'Reset' buttons.

- **Device Name Configuration:** Enter the device name.
- **Location Configuration:** Enter the location information. You can enter that by four.

2) Security

① Users

The screenshot shows the 'Security - Users' configuration page. The left sidebar is the same as the previous page, but 'Security' is selected, and 'Users' is highlighted under the 'Security' category. The main content area is titled 'Security - Users' and contains two sections: 'User Setting' and 'User List Setting'. In the 'User Setting' section, the 'Enable anonymous viewer login' checkbox is checked. The 'User List Setting' section displays a table with the following data:

User Name	User Group	Authority
admin	administrator	live, setup, system, ptz

Below the table are 'Add', 'Modify', and 'Remove' buttons. At the bottom of the main content area are 'Save' and 'Reset' buttons.


User access control is enabled by default, when the administrator sets the root password on first access. New users are authorized with user names and passwords, or the administrator can choose to allow anonymous viewer login to the Live View page, as described below:

- **User Setting:**

Check the box to enable anonymous viewer login to the network camera without the user account. When using the user account, users have to try log-in at every access.


- **User List Setting:**

This section shows a registered user account. Enter a user name and password to be added, and register them by pressing the Add button. You can see the pop-up window as below.

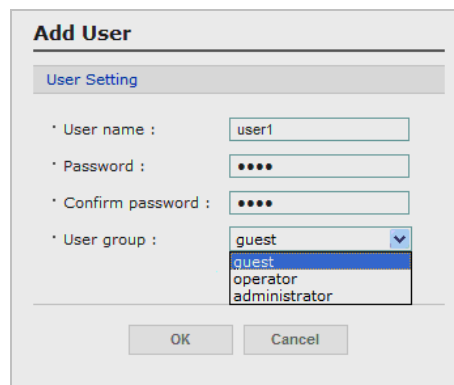

The 'Add User' dialog box contains a 'User Setting' section with the following fields: 'User name' (text input with 'user1'), 'Password' (password input with four dots), 'Confirm password' (password input with four dots), and 'User group' (dropdown menu with 'guest' selected and a list showing 'guest', 'operator', and 'administrator'). At the bottom are 'OK' and 'Cancel' buttons.

② HTTPS

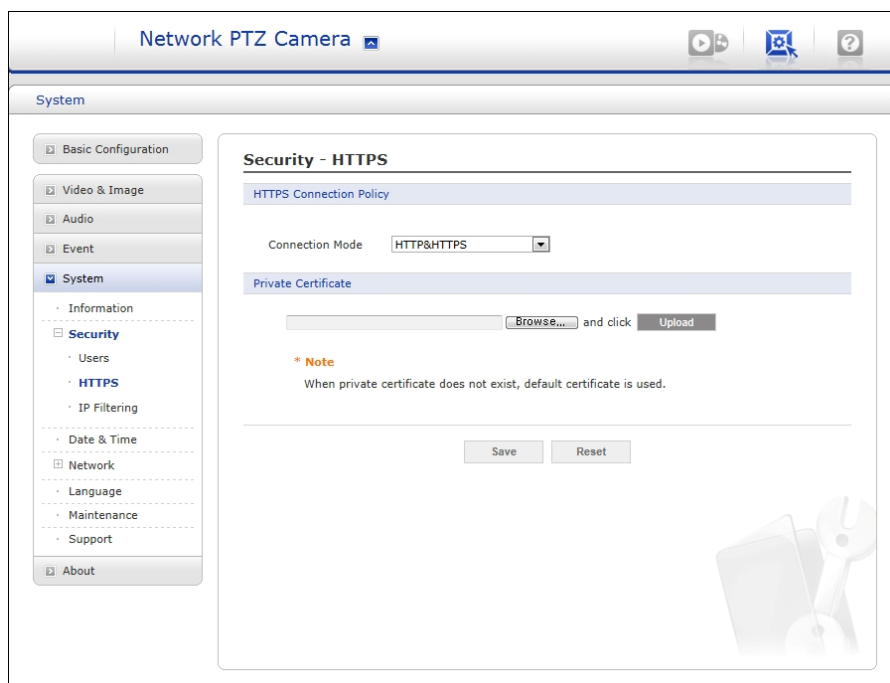

The screenshot shows the 'Security - HTTPS' configuration page of a 'Network PTZ Camera'. The left sidebar lists configuration categories: Basic Configuration, Video & Image, Audio, Event, System (selected), Information, Security (expanded), Users, HTTPS (selected), IP Filtering, Date & Time, Network, Language, Maintenance, Support, and About. The main content area has a 'Security - HTTPS' title and a 'HTTPS Connection Policy' section. Under 'Connection Mode', a dropdown menu is set to 'HTTP&HTTPS'. Below this is a 'Private Certificate' section with a 'Browse...' button and an 'Upload' button. A note states: '* Note: When private certificate does not exist, default certificate is used.' At the bottom are 'Save' and 'Reset' buttons. A faint watermark of a camera and tools is visible in the bottom right corner.

For greater security, the network camera can be configured to use HTTPS (Hypertext Transfer Protocol over SSL (Secure Socket Layer)). That is, all communication that would otherwise go via HTTP will instead go via an encrypted HTTPS connection.

- **HTTPS Connection Policy:**

Choose the form of connection you wish to use from the drop-down list for the administrator, Operator and Viewer to enable HTTPS connection (set to HTTP by default).

- HTTP
- HTTPS
- HTTP & HTTPS

- **Upload Certificate:**

To use HTTPS for communication with the network camera, An official certificate issued by a CA (Certificate Authority) must be uploaded from your PC. Provide the path to the certificate directly, or use the **Browse** button to locate it. Then click the **Upload** button.

Please refer to the home page of your preferred CA for information on where to send the request. For more information, please see the online help.

③ IP Filtering

On/Off	Priority	Policy	Start IP	End IP
<input type="checkbox"/>	1	ALLOW	0 . 0 . 0 . 0	0 . 0 . 0 . 0
<input type="checkbox"/>	2	ALLOW	0 . 0 . 0 . 0	0 . 0 . 0 . 0
<input type="checkbox"/>	3	ALLOW	0 . 0 . 0 . 0	0 . 0 . 0 . 0
<input type="checkbox"/>	4	ALLOW	0 . 0 . 0 . 0	0 . 0 . 0 . 0
<input type="checkbox"/>	5	ALLOW	0 . 0 . 0 . 0	0 . 0 . 0 . 0

Checking the **Enable IP address filtering** box enables the IP address filtering function. Up to 256 IP address entries may be specified (a single entry can contain multiple IP addresses). Click the **Add** button to add new filtered addresses.

When the IP address filter is enabled, addresses added to the list are set as allowed **or** denied addresses. All other IP addresses not in this list will then be allowed or denied access accordingly, that is, if the addresses in the list are allowed, then all others are denied access, and vice versa. Please see also the online help for more information.

Note that users from IP addresses that will be allowed must also be registered with the appropriate access rights (Guest, Operator or Administrator). This is done from Setup > System > Security > Users, on “4.5.5 System > 2) Security > ① Users”.

3) Date & Time

Network PTZ Camera

System

Basic Configuration

Video & Image

Audio

Event

System

Information

Security

Date & Time

Network

Language

Maintenance

Support

About

Date & Time

Current Server Time

Date : 2001-01-02 Time : 01:58:40

New Server Time

Time zone

(GMT) Greenwich Mean Time : Dublin, Edinburgh, Lisbon, London

☐ Automatically adjustment for daylight saving time changes

Time mode

☒ Synchronize with computer time

Date : 2010-07-27 Time : 12:24:01

☐ Synchronize with NTP server

NTP server : time.nist.gov NTP Interval : 12 [hour]

☐ Set manually

Date : 2001-01-02 Time : 01:58:37

Date & Time Format

Date Format : YYYY-MM-DD

Time Format : 24 Hour

Save Reset

- **Current Server Time:**

It displays the current date and time (24h clock). The time can be displayed in 12h clock format in the overlay (see below).

- **New Server Time:**

Select your time zone from the drop-down list. If you want the server clock to automatically adjust for daylight savings time, select “Automatically adjustment for daylight saving time changes”.

From the Time Mode section, select the preferred method to use for setting the time:

- **Synchronize with computer time:** sets the time from the clock on your computer.
- **Synchronize with NTP Server:** the video encoder will obtain the time from an NTP server every 60 minutes.
- **Set manually:** this option allows you to manually set the time and date.

Note: Note that if using a host name for the NTP server, a DNS server must be configured under TCP/IP settings.

4) Network

The screenshot displays the 'Network PTZ Camera' web interface. On the left is a sidebar menu with categories: System, Video & Image, Audio, Event, and About. The 'System' category is expanded, showing sub-items like Information, Security, Date & Time, Network (selected), Basic (selected), DDNS, RTP, UPnP, QoS, NAT Traversal, Language, Maintenance, and Support. The main content area is titled 'Network - Basic' and contains several configuration sections: 'IP Address Configuration' with radio buttons for 'Obtain IP address via DHCP' and 'Use the following IP address' (selected), and input fields for IP address (192.168.10.17), Subnet mask (255.255.255.0), and Default router (192.168.10.1); 'IPv6 Address Configuration' with an 'Enable IPv6' checkbox and an IPv6 address field; 'DNS Configuration' with radio buttons for 'Obtain DNS server via DHCP' and 'Use the following DNS server address' (selected), and input fields for Domain name, Primary DNS server (168.126.63.1), and Secondary DNS server (0.0.0.0); 'Host Name Configuration' with a 'Host Name' field containing 'HNCV3-F1FDZ1H180007DBAA'; 'Services' with input fields for HTTP port (80), HTTPS port (443), and RTSP port (554); and 'ARP/Ping setting' with a checked 'Enable ARP/Ping setting' checkbox. At the bottom right are 'Save' and 'Reset' buttons.

Setting in regard to network can be executed. Settings for IP, DNS, Host Name, Port, and ARP/Ping can be established, along with setting for DDNS, uPnP, QoS, and SNMP.

① Basic

• IP Address Configuration:

- **Obtain IP address via DHCP:** Dynamic Host Configuration Protocol (DHCP) is a protocol that lets network administrators centrally manage and automate the assignment of IP addresses on a network. DHCP is enabled by default. Although a DHCP server is mostly used to set an IP address dynamically, it is also possible to use it to set a static, known IP address for a particular MAC address.
- **Use the following IP address:** To use a static IP address for the network camera, check the radio button and then make the following settings:
 - * **IP address:** Specify a unique IP address for your network camera.
 - * **Subnet mask:** Specify the mask for the subnet the network camera is located on.
 - * **Default router:** Specify the IP address of the default router (gateway) used for connecting devices attached to different networks and network segments.

- **IPv6 Address Configuration:**

Check this box to enable IPv6. Other settings for IPv6 are configured in the network router.

- **DNS Configuration:**

DNS (Domain Name Service) provides the translation of host names to IP addresses on your network.

- **Obtain DNS Server via DHCP:** Automatically use the DNS server settings provided by the DHCP server. Click the View button to see the current settings.

- Use the following DNS server address to enter the desired DNS server by specifying the following:

- * **Domain name:** enter the domain(s) to search for the host name used by the network camera. Multiple domains can be separated by semicolons (;). The host name is always the first part of a Fully Qualified Domain Name, for example, myserver is the host name in the Fully Qualified Domain Name myserver.mycompany.com where mycompany.com is the Domain name.

- * **DNS servers:** enter the IP addresses of the primary and secondary DNS servers.

- **Host Name Configuration:**

- **Host Name:** enter the host name to be used as device information in the client software or SmartManager.

- **Services:**

- **HTTP port:**

Enter a port to receive a service through the HTTP. Default Port Number is '80'.

- **RTSP port:**

Enter a port to receive a service through the RTSP. Default Port Number is '7070'.

- **PTZ port:**

Enter a port to control the Pan/Tilt/Zoom. Default Port Number is '7000'.

- **ARP/Ping Setting:**

- **Enable ARP/Ping setting of IP address:** The IP address can be set using the ARP/Ping method, which associates the unit's MAC address with an IP address. Check this box to enable the service. Leave disabled to prevent unintentional resetting of the IP address.

② DDNS

The screenshot shows the 'Network - DDNS' configuration page of a 'Network PTZ Camera'. The left sidebar contains a tree view with categories: System, Video & Image, Audio, Event, and System. Under 'System', there are sub-items: Information, Security, Date & Time, Network (selected), RTP, UPnP, QoS, NAT Traversal, Language, Maintenance, Support, and About. The 'Network' section is expanded, showing 'Basic', 'DDNS' (selected), 'RTP', 'UPnP', 'QoS', and 'NAT Traversal'. The main content area is titled 'Network - DDNS' and contains the 'Internet DDNS (Dynamic Domain Name Service)' configuration. It includes a checkbox for 'Enable DDNS', a note about configuring a primary DNS server, and fields for 'DDNS Server' (set to 'cctv-network.co.kr'), 'Registered host', 'User name', 'Password', 'Confirm password', and 'Maximum time interval' (set to '1 hour'). There is also a checkbox for 'Register local network IP address' and a 'Registered IP address' field. 'Save' and 'Reset' buttons are at the bottom.

• Internet DDNS(Dynamic Domain Name Service):

When using the high-speed Internet with the telephone or cable network, users can operate the network camera even on the floating IP environment in which IPs are changed at every access.

Users should receive an account and password by visiting a DDNS service like <http://www.dyndns.com/> or <http://www.cctv-network.co.kr/>.

- **Enable DDNS:** Check to get DDNS service to be available.

* **DDNS Server:** Select the DDNS server.

* **Registered host:** Enter an address of the DDNS server.

* **Username:** Enter an ID to access to the DDNS server.

* **Password:** Enter a password to be used for accessing the DDNS server.

* **Confirm:** Enter a password again to confirm it.

* **Maximum time interval:** Set a time interval to synchronize with the DDNS server.
Select an item in the interval drop-down list.

* **Register local network IP address:** Register a Network Video Server IP address to the DDNS server.

③ RTP

The screenshot shows the 'Network PTZ Camera' web interface. On the left is a sidebar menu with categories: System, Video & Image, Audio, Event, and System. Under the 'System' category, there are sub-items: Information, Security, Date & Time, Network (selected), Basic, DDNS, RTP (highlighted), UPnP, QoS, NAT Traversal, Language, Maintenance, Support, and About. The main content area is titled 'Network - RTP'. It contains two sections: 'Port Range' and 'Multicast'. The 'Port Range' section has 'Start port' set to 30000 and 'End port' set to 30040. The 'Multicast' section has an unchecked 'Enable multicast' checkbox, 'Multicast destination IP' set to 231.1.128.20, 'RTP port' set to 40000, and 'RTP TTL' set to 1. There are 'Save' and 'Reset' buttons at the bottom right of the configuration area.

Have a setting for sending and receiving an audio or video on a real-time basis. These settings are the IP address, port number, and Time-To-Live value to use for the media stream(s) in multicast H.264 format. Only certain IP addresses and port numbers should be used for multicast streams. For more information, please see the online help.

- **Port Range:**

- **Start port:** Enter a value between 1024 and 65532.

- **Multicast:**

This function is for sending Video and Audio to Multicast group.

- **Enable Multicast:** Check the box to enable multicast operation.
- **Multicast destination IP:** Enter an IP between 224.0.0.0 and 239.255.255.255. Although it is empty, an IP will be entered automatically.
- **RTP port:** Enter a value between 1024 and 65532.
- **RTP TTL:** Enter a value between 1 and 255. If a network status is smooth, enter a lower value. On the other hand, if a network status is poor, enter a higher value. When there are many network cameras or users, a higher value may cause a heavy load to the network. For a detailed setting, please consult with a network manager.

④ UPnP



The network camera includes support for UPnP™. UPnP™ is enabled by default, and the network camera then is automatically detected by operating systems and clients that support this protocol.


Note: UPnP™ must be installed on your workstation if running Windows XP. To do this, open the Control Panel from the Start Menu and select Add/Remove Programs. Select Add/Remove Windows Components and open the Networking Services section. Click Details and then select UPnP™ as the service to add.

⑤ QoS

Quality of Service (QoS) provides the means to guarantee a certain level of a specified resource to selected traffic on a network. Quality can be defined as a maintained level of bandwidth, low latency, and no packet losses.

The main benefits of a QoS-aware network are:

- The ability to prioritize traffic and thus allow critical flows to be served before flows with lesser priority.
- Greater reliability in the network, thanks to the control of the amount of bandwidth an application may use, and thus control over bandwidth races between applications.

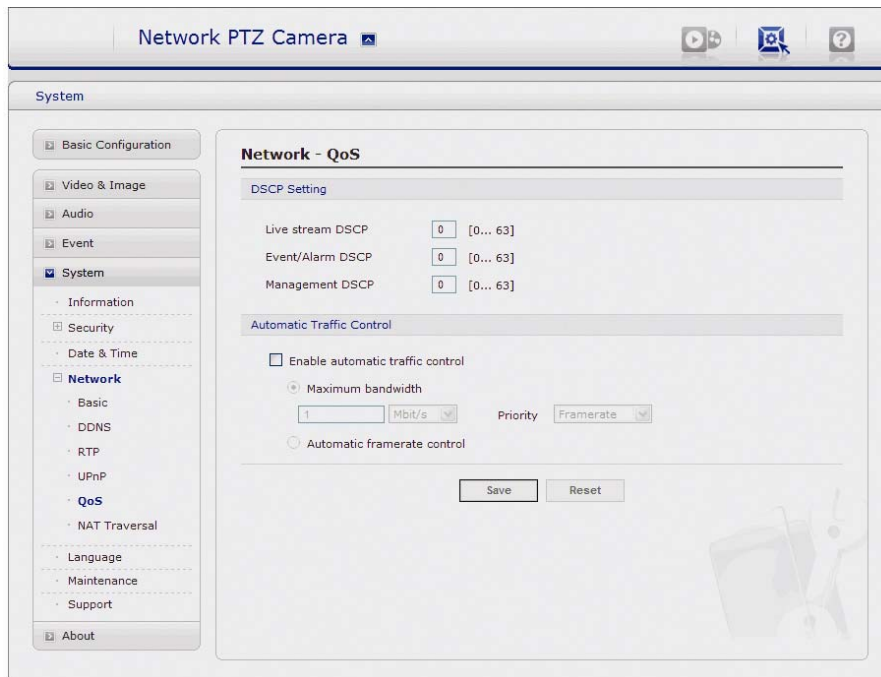

• DSCP Settings:

For each type of network traffic supported by your network video product, enter a DSCP (Differentiated Services Code Point) value. This value is used to mark the traffic's IP header. When the marked traffic reaches a network router or switch, the DSCP value in the IP header tells the router or switch which type of treatment to apply to this type of traffic, for example, how much bandwidth to reserve for it. Note that DSCP values can be entered in decimal or hex form, but saved values are always shown in decimal.

The following types of traffic are marked:

- **Live Stream DSCP:**
- **Event/Alarm DSCP:**
- **Management DSCP:**

• Auto Traffic Control:


Set a limitation on user network resources by designating the maximum bandwidth.

- **Maximum bandwidth:** In case of sharing other network programs or equipment, it is possible to set a limitation on the maximum bandwidth in the unit of Mbit/s or kbit/s.
- **Auto frame rate:** Selected if not influenced by a network-related program or equipment without a limitation on the network bandwidth.

⑥ NAT Traversal

A broadband router allows devices on a private network (LAN) to share a single connection to the Internet. This is done by forwarding network traffic from the private network to the “outside”, that is, the Internet. Security on the private network (LAN) is increased since most broadband routers are pre-configured to stop attempts to access the private network (LAN) from the public network/Internet.


Use **NAT Traversal** when your network cameras are located on an intranet (LAN) and you wish to make it available from the other (WAN) side of a NAT router. With NAT traversal properly configured, all HTTP traffic to an external HTTP port in the NAT router is forwarded to the network camera.

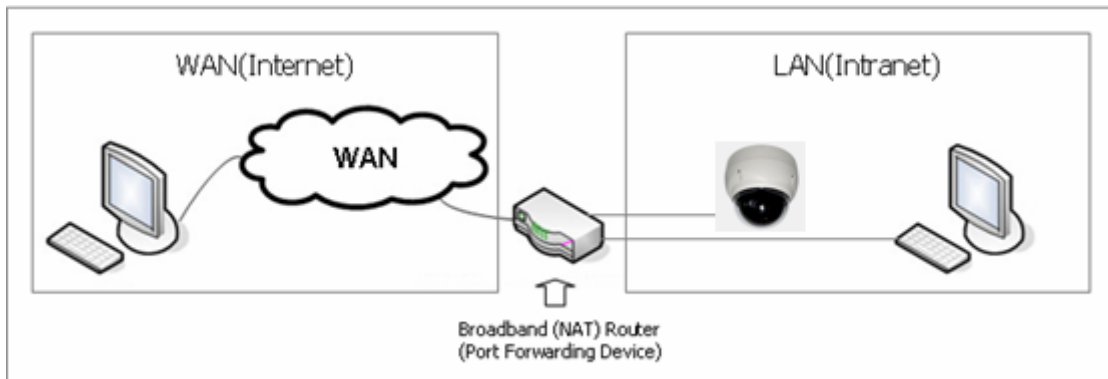

Notes:

- For NAT traversal to work, this must be supported by the broadband router.
- The broadband router has many different names:

“NAT router”, “Network router“, “Internet Gateway”, “Broadband sharing device” or “Home firewall” but the essential purpose of the device is the same.

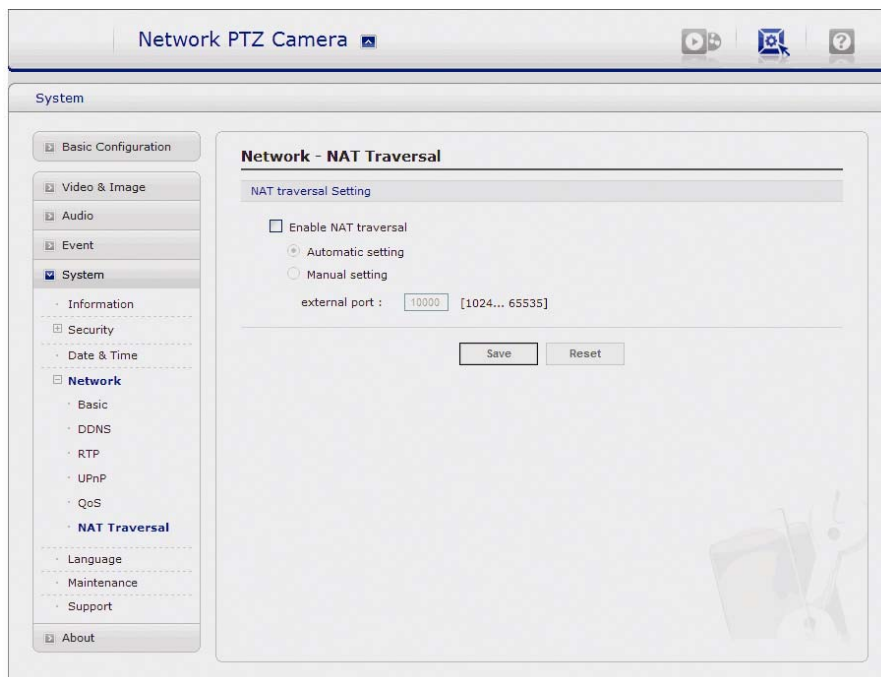

• NAT traversal Settings:

- **Enable:** when enabled, the Network Transmitters attempt to configure port mapping in a NAT router on your network, using UPnP™. Note that UPnP™ must be enabled in the network camera. (Please see Setup > System > Network > UPnP, on “4.5.5 System > 4) Network > ④ UPnP”).

* **automatic setting:** The network camera automatically search for NAT routers on your network.

* **manual setting:** Select this option to manually select a NAT router and enter the external port number for the router in the field provided.


Notes:

- If you attempt to manually enter a port that is already in use, an alert message will be displayed.
- When the port is selected automatically it is displayed in this field. To change this enter a new port number and click Save.

5) Language

It will be able to select a user language. The type of language it will be able to select is the English, the French, the German, the Spanish and the Italian.

6) Maintenance

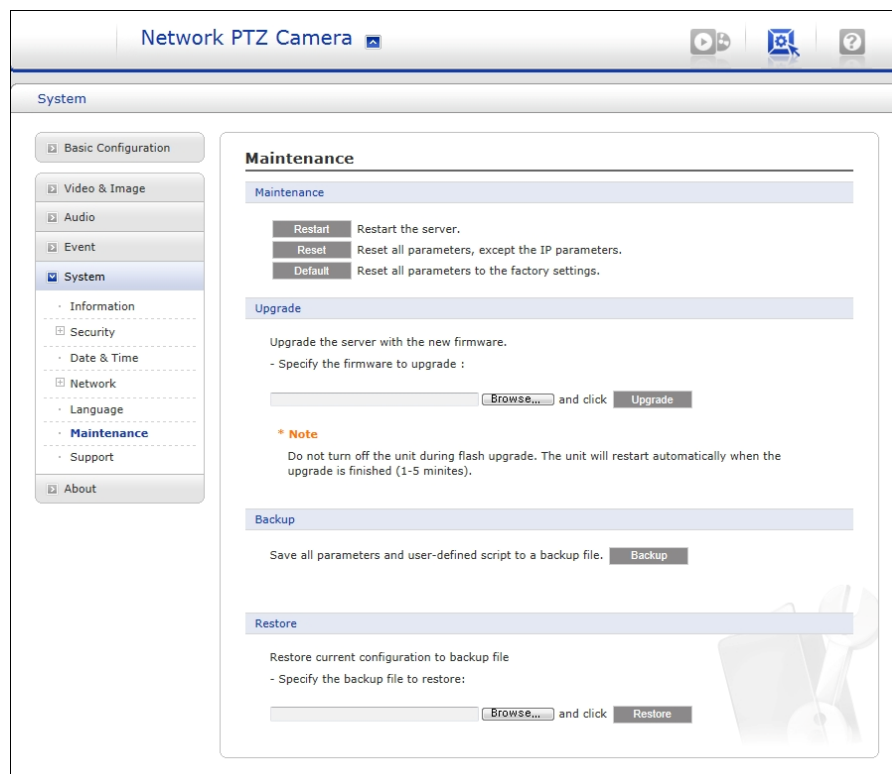


• Maintenance Server:

- **Restart:** The unit is restarted without changing any of the settings. Use this method if the unit is not behaving as expected.
- **Restore:** The unit is restarted and most current settings are reset to factory default values. The settings that are not affected are:

- the boot protocol (DHCP or static)
 - the static IP address
 - the default router
 - the subnet mask
 - the system time
 - **Default:** The default button should be used with caution. Pressing this will return all of the network camera's settings to the factory default values (including the IP address).
 - **Update Server:** Carry out the upgrade by importing an upgrade file and pressing the Upgrade button. During the upgrade, do not turn off the power of the network camera. And try an access again after waiting five minutes or longer.
 - **Backup:** Save a setting value that users enter to the network camera, to a user PC.
 - **Restore:** Import and apply a setting value saved to a user PC.
- Note:** Backup and Restore can only be used on the same unit running the same firmware. This feature is not intended for multi-configurations or for firmware upgrades.

7) Support

The support page provides valuable information on troubleshooting and contact information, should you require technical assistance.

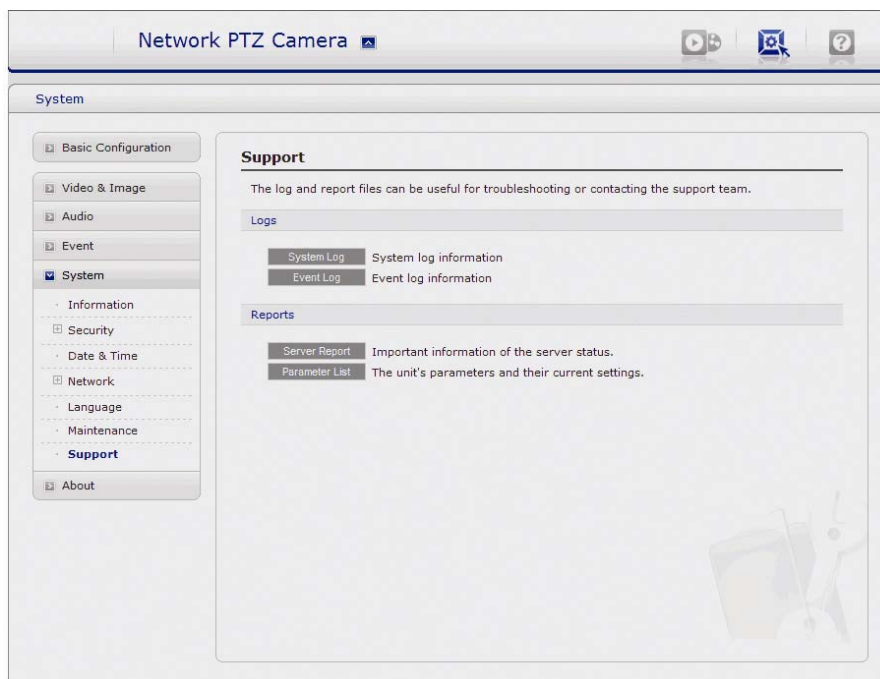


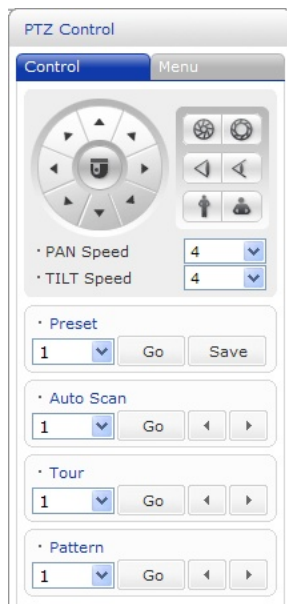
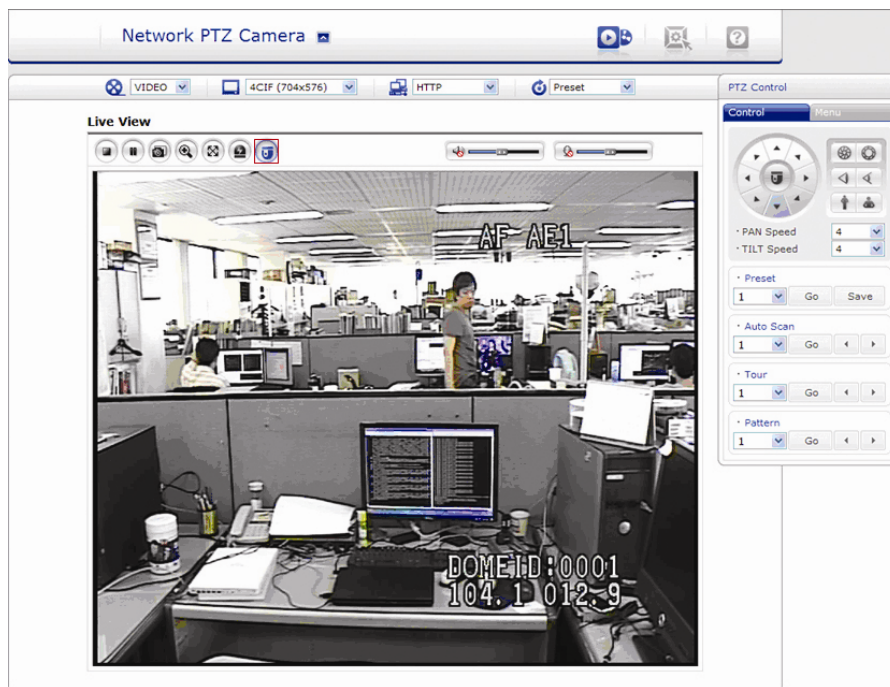
- **Logs:** The network camera support system log information. Click the System Log button to get the log data.
- **Update Server:**
 - **Server Report:** Click the Server Report button to get the important information about the server's status and should always be included when requesting support.
 - **Parameter List** – Click the Parameter List button to see the unit's parameters and their current settings.

4.5.6 About


The following website will provide the support information for the network camera information and operation.

4.6 PTZ Control

You can control a PTZ in the live screen. Press the  button on the left top in the live screen to activate the PTZ control panel.




PTZ Control Panel

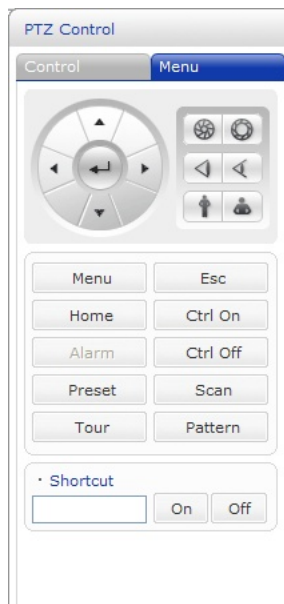

PTZ Menu Panel



Direction Buttons

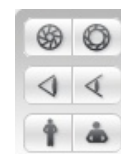

Iris/Focus/Zoom Buttons


• Control Panel:

- **Left/Right button:** Go into the sub-menu items. Execute the command (exit). Change value. Navigate through the menu items.

- **Up/Down button:** Navigate through the menu items
- **PAN/TILT Speed:** It sets a speed when adjusting the PTZ Camera. The higher a value is, the faster a speed will be.
- **Focus:** Overrides auto focus. Moving the Zoom handle reactivates Auto Focus mode.
- **Iris:** Overrides auto iris. Moving the joystick reactivates Auto Iris mode.
- **Zoom:** Zoom control.
- **Menu Panel:**
 - **Menu:** Enters programming menu.
 - **Esc:** Cancels current inputs. Exits from currently running functions or menu, error status, etc.
 - **Home:** Immediately calls Home function. Deletes selected value or function in programming mode.
 - **Ctrl Off:** Control function.
ex) CTRL + Up, Down, Right, Left Button > Operated turbo mode.
 - **Preset:** Pressing the Preset will bring up the preset programming menu.
 - **Auto Scan:** Pressing the Scan will bring up the Auto Scan programming menu.
 - **Tour:** Pressing the Tour button will bring up the tour programming menu directly.
 - **Pattern:** Pressing the Pattern button will bring up the pattern programming menu directly.

4.7 Help

The Help information window will be provided as a popup window so that users can open and read it without a need for log-in. It will offer a description on setting and Help page by which users can manipulate the network camera without a reference to the manual.

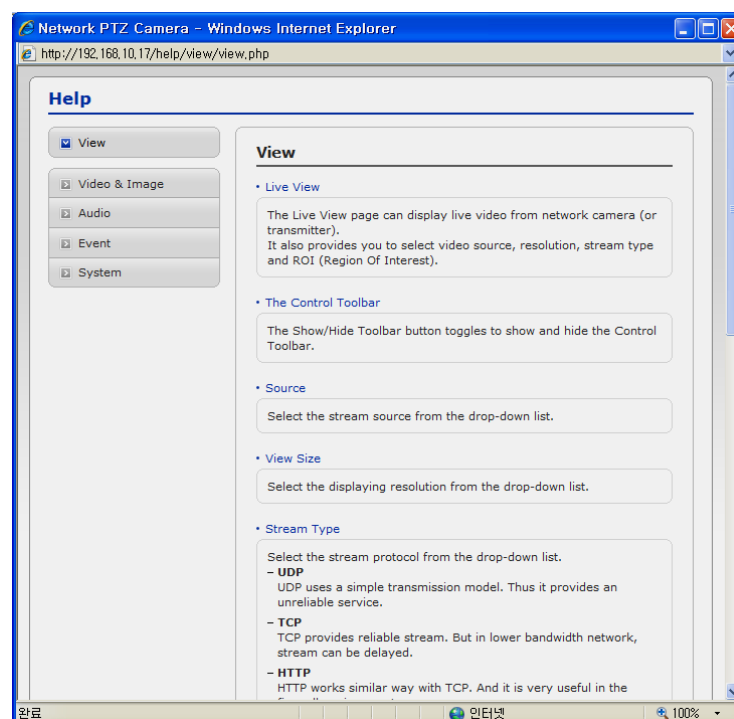

4.8 Resetting to the factory default settings

To reset the network camera to the original factory settings, go to the Setup > System > Maintenance web page or use the control button on the network camera, as described below:

• Using the Reset Button

Follow the instructions below to reset the network camera to the factory default settings using the Reset Button.

1. Switch off the network camera by disconnecting the power adapter.
2. Open the lens cover.
3. Press and hold the Control Button (SW1) on the board with your finger while reconnecting the power.
4. Keep the Control button (SW1) pressed during about 2 seconds.
5. Release the Control Button (SW1).
6. The network camera resets to factory defaults and restarts after completing the factory reset.
7. Close the lens cover.

CAUTION: When performing a Factory Reset, you will lose any settings you have saved.

4.9 System Requirement for Web Browser

Operating System: Microsoft Windows 98, Microsoft Windows ME, Microsoft Windows 2000, Microsoft Windows XP, or Microsoft Windows Vista

CPU: Over Pentium IV 2.4GHz, 512MB RAM, 10GB free disk or higher

VGA: AGP, Video RAM 32MB or higher (1024x768, 24bpp or higher)

Appendix A — Specifications

IPSDMV22D1 Dome Camera


MODEL	22X
MODULE	
CCD Type	1/4" Type EXview HAD CCD
Optical / Digital Zoom	22X / 16X
Resolution	580 TVL
Focal length	f = 3.9mm ~ 85.8mm
Angle of view	3.9mm – 49.5° (H) 85.8mm – 2.4° (H)
F-Number	F1.6 ~ F3.7
Min. Illumination	
- Normal	0.5 Lux
- ICR on & Slow Shutter	0.001 Lux
ICR on (Day & Night)	YES
WDR	YES
Motion Detection (in PRESET)	YES
DOME	
Tilt angle	0° ~ 180° (Digital Flip)
Image Flip	YES
Auto Calibration	0.1° ~ 6°
Panning angle	360 continuous rotation
Auto Scan	1 auto pan & 4 auto scan capability
Preset	120 presets with individual camera AE setup
Pattern	4 patterns (recording up to 200 sec.)
Tour	4 tours (consist of 42 functions / 1 tour)
Max Speed	380° /sec.
Area Title	it can be divided 8 areas with 12 characters of title
Privacy Zone	4 privacy zone masking (2 methods selectable : Block / video off)
Electrical	
Power Source	12VDC ± 10%
Power Consumption	without Heater : 12W (1.0A) with Heater : 22W (2.0A)
Control	RS-485, baud rate: 2400~19.2k bps (default: 9600 bps)
ID (Camera Address)	1 ~ 255

* Specifications are subject to change without notice *


NETWORK	
Video Compression	Motion JPEG MPEG-4 Part2 H.264 (MPEG-4 Part 10) Profiles: H.264 MP and BP, MPEG-4 ASP and SP
Video Resolutions	160X120 ~ 704X480 : NTSC 160X120 ~ 704X576 : PAL
Frame Rate	Up to 30/25fps[NTSC/PAL] @ all resolutions
Video Streaming	Simultaneously H.264(or MPEG-4) and MJPEG Controllable Frame Rate and Bandwidth VBR/CBR H.264 and MPEG-4
Audio Compression	G.711 ADPCM 40kbps~16kbps
Audio Streaming	2 Way
Protocol	TCP/IP, UDP, IPv4/v6, HTTP, HTTPS, QoS, FTP, SNMP, uPnP, RTP, RTSP, RTCP, DHCP, ARP
Security	Multi-user authority, HTTPS, IP Filtering, Privacy Zone
Max. Connection	10
API Programming Interface	API Supported, Open Platform Compatible: Milestone, ONVIF
Alarm Triggers	Motion Detection, External Input, Manual Trigger
Alarm Events	File upload via FTP and HTTP Notification via E-mail, HTTP and TCP External Output activation Audio Alert activation
Video Buffering	Pre and Post Alarm
Motion Detection	Yes, max. 8 programmable zone
Network Time Synchronization	Yes
Software Reset	Yes
Factory Reset	Yes, Button/Web browser
Auto Recovery	Yes
Installation Tool	Yes, SmartManager
Upgrade	Yes, Web browser/SmartManager
Alarm Input/Output	1 input , 1 output
Mechanical	
Dimension	See dimension
Weight	Approx. 1.6 kg for dome
Environment	
Operating temperature	without Heater : 0°C to 45°C (32°F to 113°F) with Heater : -20°C to 40°C (-4°F to 104°F)
Operating humidity	0 to 90%RH (non-condensing)
Storage temperature	-20°C to 60°C (-4°F to 140°F)

* Specifications are subject to change without notice *


UNIT : mm

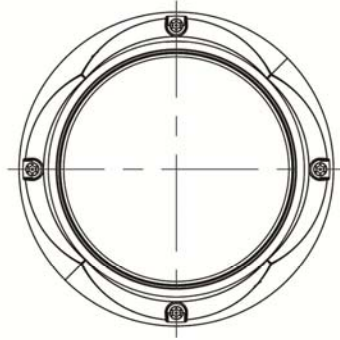

Top View

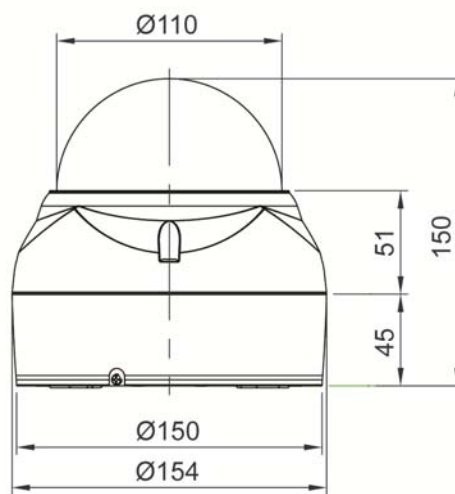

Front View

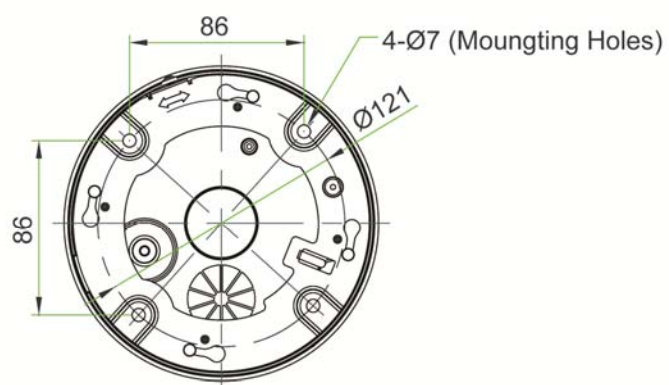

Bottom View

Figure – Dimension

Appendix B — Troubleshooting

If problems occur, verify the installation of the camera with the instructions in this manual and with other operating equipment. Isolate the problem to the specific piece of equipment in the system and refer to the equipment manual for further information.

Problem	Possible Solution
No video.	Verify that power is connected to all pieces of equipment in the system. Verify that the power switches are in the ON position. Check the video connections.
Poor video quality.	Check that the BNC connectors are inserted properly. Check the voltage level of the dome camera. Cable for video is shielded.
Dome cameras lose their positions.	Reset the cameras using the Dome configuration menus. Check that the dome cameras are inserted properly in the base. Check the voltage level of the dome camera.
Camera number does not match the multiplexer number.	Check the camera ID and insert the BNC cable into the proper input of the multiplexer.
Frame rate decrease.	Change current value more lower resolution, compression rate and frame rate.
A connection is cut-off at short intervals.	Check network traffic and contact with network administrator.

Appendix C — Glossary

Alarm Action

The assigned responses for the dome camera when input change from normal to abnormal states. The dome may run a Preset, Pattern, or have no assigned action for 1 dome input. The dome may also send alarm state to the host controller for processing. See also Input Alarm and Normal Input State.

Area

Programmed start and end points of the dome's field of view around its pan axis. Each area is a part of a circular viewing area that extends around the dome. The areas can be different sizes. Up to 8 areas can be programmed for the dome.

Automatic Gain Control (AGC)

Allows for the amplification of the video signal in scenes with minimal ambient light. Many low-light scenes result in picture noise. As gain is increased, the picture noise is also amplified. When AGC is enabled, the value of the gain setting is based on feedback from the camera. When AGC is disabled, the camera uses the value set for the manual gain setting. The trade-off between picture level and noise may be adjusted when AGC is disabled.

On-screen Menu

The text overlay menu system used for setting dome features. The utility is accessed using a keystroke combination. The utility provides settings for camera functions, zoom, alarm, text display, and password protection.

Flip

Allows the dome to automatically turn 180 degrees when the camera tilts to its lower limit and stays in that position for a brief delay. When the dome flips (rotates), the camera starts moving upward as long as the tilt control is kept in the down position. Once the control is released, the tilt control returns to its normal operational mode. The flip feature is useful when you need to track someone who walks directly beneath the dome and continues on the other side.

Home Position

The default position to which the dome camera returns after an assigned period of inactivity passes. The default position may be a Preset, Tour, Pattern, or No Action.

Input Alarm

A connection point on the dome camera that enables the system to monitor Input Devices. There is 1 input available for the dome camera.

Input Device

External devices that provide information about the condition of system components that connect to the input on the dome camera. Typical input devices include door contacts, motion detectors and smoke detectors.

IR Mode

A feature of the camera that permits manual or automatic switching between color and IR (black-and-white) operation. When IR mode is active, clearer images may be obtained under low-light conditions.

Name Information

Relates to the display the dome name, the area where the dome is pointing, the name of the Preset or Pattern that is running, and alarm name. The display of each type of name setting can be enabled or disabled. When the display of camera or area title(name) is enabled, the information appears on the screen continuously. Preset, Tour and Pattern titles(names) appear only while they are active.

Normal Input State

Describes the expected state of a device connected to dome camera's input. The normal state may be open or closed. When a device is not in its normal input state, an alarm is issued.

North Position

User-definable setting that may correspond to magnetic north or some well-known landmark. Used to approximate the camera dome's pointing direction when Direction Indicators are enabled.

Slow Shutter

Setting used to improve the quality of video obtained in extreme low-light situations. When the Slow Shutter setting is enabled, low-light information is collected over multiple fields based on the Shutter Limit setting. As a result, video may appear blurred or choppy in extreme low-light situations. This setting does not effect camera operation in normal lighting situations.

Pattern

A series of pan, tilt, zoom and focus movements from a single programmable dome. Up to 4 Patterns may be programmed for the dome camera.

Preset

Programmed video scene, based on a specific pan, tilt, zoom, and focus settings. Up to 120 Presets may be programmed for the dome camera.

Privacy Zone

Masked areas of the dome camera's viewing area. These masks prevent operators of the surveillance system from viewing these designated zones. The Privacy Zones move in relation to the dome camera's pan/tilt position. In addition, the apparent size of the Privacy Zone adjusts automatically as the lens zooms in or out. Up to 4 Privacy Zones may be established for a dome camera.

Vector Scan

Move from start point to end point including tilt and zoom simultaneously and linearly.

White balance

Adjustments in the color hue(red and blue) gains for a camera so that true white appears white in the image. It is normally compensated for by the automatic gain control. In some lighting conditions, you may need to manually adjust the red and blue settings for optimal viewing. When Automatic White Balance is enabled, the camera measures the image and automatically adjusts the red and blue settings to balance white. When Automatic White Balance is disabled, the camera uses the values set for the red and blue settings to balance white.

Appendix D — Short Cut Key

Short Cut Key		Function	
PRST		Pop up Preset setup menu	
TOUR		Pop up Tour setup menu	
PTRN		Pop up Pattern setup menu	
SCAN		Pop up Auto Scan setup menu	
No. + CTRL + PRST		Store the current view at the selected number	
Short Cut Key	Function	Short Cut Key	Function
7 + ON	Change FOCUS to AUTO	7 + OFF	Change FOCUS to manual
8 + ON	Change AE to AE1	8 + OFF	Change AE to manual
9 + ON	Change Night Shot to AUTO		
10 + ON	Night Shot on	10 + OFF	Night Shot off
11 + ON	BLC on	11 + OFF	BLC off
12 + ON	Digital Zoom on (According to digital zoom setting)	12 + OFF	Digital Zoom off
13 + ON	Dome OSD on	13 + OFF	Dome OSD off
14 + ON	Dome Area Title Display on	14 + OFF	Dome Area Title Display off
15 + ON	View Direction on	15 + OFF	View Direction off
104 + ON	WDR ON (AE auto1 mode)	104 + OFF	WDR off (AE auto1 mode)
150 + ON	Image Flip ON	150 + OFF	Image Flip off
151 + ON	Origin Check		
152 + ON	Place the camera in the 0° area horizontally.		
153 + ON	Go to the slow speed mode	153 + OFF	Go to the normal speed mode
154 + ON	Display System Information		
155 + ON	Flip the camera in the 180° area horizontally.		
250 + PRST	Factory setup menu (Tour dwell time, Answer delay)		
888 + ENTER	Night Shot on (in the global mode only)		
999 + ENTER	Night Shot off (in the global mode only)		

IPSDMV22D1 DOME CAMERA

Rev.B