

Congratulations on the purchase of your new **MyLife webcam kit**. This product comes with a limited lifetime warranty.

Before using your product, please thoroughly read and follow the instructions inside this manual.


If you still need help, see the back page for other support options.


If you want to know more about our products, visit us online at **www.life-works.com**.

system requirements

- Windows® XP Service Pack 2 or Windows Vista®
- USB port (a USB 2.0 port is required for optimal performance)
- CD-ROM drive



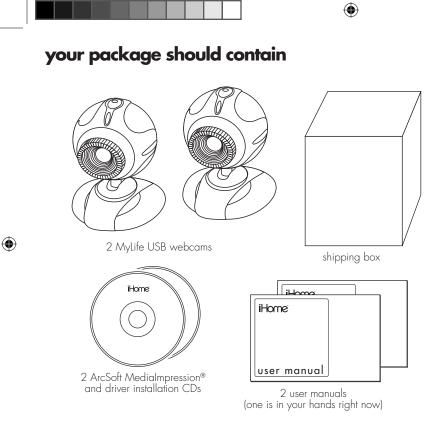

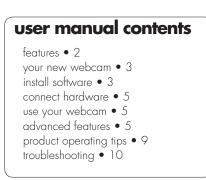


features

- keep a camera, send a camera to a loved one
- includes a shipping box and FedEx[®] pre-paid mailer
- video chat with friends and family over the internet
- 1.3 megapixel maximum resolution
- built-in microphone



your new webcam

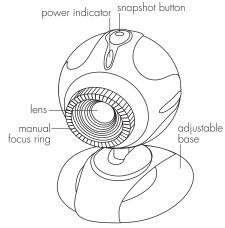

note You must install the driver software before connecting your webcam to your computer.

This webcam kit is designed to let you share the joy of video conferencing with someone else. You can use the enclosed shipping box to ship it anywhere in the continental United States. For instructions on how to print the pre-paid FedEx shipping label, go to www.life-works.com/mailer.

install software

•

to install the advanced webcam driver

1. Insert the installation CD into your computer. On the screen that appears, click **install driver**.



- 2. An InstallShield Wizard dialog box displays. Click Next.
- After the driver has been installed, an InstallShield Wizard Complete dialog box displays. Click Finish.

The main software installation screen displays again.

 (\bullet)

()

to install the included webcam application

1. On the main software installation screen, click ArcSoft Medialmpression.



- $\mathbf{2.}$ Select a setup language, then click $\mathbf{OK}.$
- 3. An InstallShield Wizard dialog box displays. Click Next.
- 4. Click Yes to accept the license agreement, then Next to accept the default installation location.
- 5. A Select Program Folder dialog box displays. Click Next.

6. After the application has been installed, an Associated File Formats dialog box displays. Click Next.

(

7. An InstallShield Wizard Complete dialog box displays. Click Finish.

 
The main software installation screen displays again. Click **exit**. When the **USB PC Camera Setup Complete** dialog box displays, choose to restart your computer now and click **OK**.

()


 (\bullet)

connect hardware

1. Connect the USB cable to a USB port on your computer.



2. Place the webcam on a desk or mount it on your computer monitor or other convenient object.

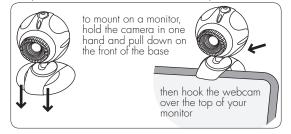

note Mount the webcam approximately 3 ft. (1 m) from where you sit at your computer. This ensures the picture is not distorted and that the microphone can easily pick up your voice.

use your webcam

You can start using your webcam immediately for video conferencing with one of the many video conferencing services available over the internet. Additional features are available through the ArcSoft MediaImpression software.

advanced features

Click Start > All Programs > ArcSoft MediaImpression > MediaImpression to open the Start Page.




Access all advanced features from this menu.

 (\bullet)

capture still shots or videos

1. From the **Start Page**, click **WebCam**. The **Capture** window displays.

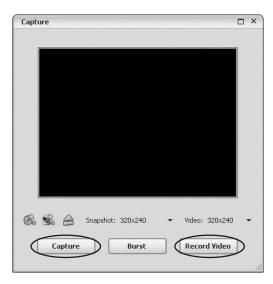

 For a still shot, click Capture. (You can also take a still shot by pressing the snapshot button on top of the webcam.)

(

- To record a video clip, click **Record Video**. When done, click **Stop Recording**. (To improve the quality of your videos see "change video settings" on page 8)
- When capture is complete, close the Capture window. The Media Browser displays, showing all stills and video captured, and the directory in which they were saved.

ledia Browser			
fedia Browser lease select media files and select an action.		4 Go to Star	t Pag
ihow Al Media Files 🔹 🖻	☆ @ @		_
Folders 🗮 >	C:\Documents and Settings\David\My Documents	/WebCam Capture Media\ - 1 file(s) - 1 file(s) selected	
Oracle Documents Defaulter to have pricket Defaulter	Vdeo1.mpg		
144 AG E		· R	

()

()

 To turn a video clip into a movie, click Make Movie. The Make Movie screen displays.

Quickly and easily produce	professional-looking mo	vies featuring your own photo and vid	eo files.		≪… Go to S	arc r'age
Show All Media Files		⊴ ⊾ 🔤• 🟠 🏦		- Az		_
Folders	15 N	C:\Documents and Settings\Davi	d My Documents\WebCam Captu	re Media\ - 1 file(s) -	1 file(s) selected	
Dowid's Docume Devide S Docume Devide S Docume Downloads My elocite My elocite My ficture My ficture My ficture My ficture My ficture My videos WebCan Re Downloads D	obions sums plure Media ris	Wdeo1.mpg				
- 😨 My Computer		Make Movie				
			Transition: Fade In & Cul	Ŀ		100
		Kultura 1	ing);			
		C Prev			Save As	rn to Disc

4. Add and remove video and still shots as desired to compose your movie.

Change the movie options as desired.

Click **Preview** to view the movie.

5. When done and ready to publish, save the project by clicking **Project > Save**.


To save a copy of the final movie, click Save As.

(

To burn your movie to a DVD or VCD, click **Burn to Disc**.

change video settings

To change video settings and access other webcam settings, click the **webcam settings** button in the Capture window.

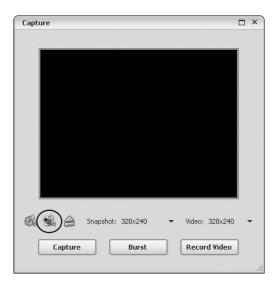

The **webcam properties** dialog box displays.

Video Proc Amp Camera Co	Introl	
<u>Brightness</u>		128
<u>C</u> ontrast		25 □
Hue		0 -
Saturation		155 □
Shargness		6 1
Gamma		75 Г
White Balance		5000
Backlight Comp	J	0 1
Color <u>E</u> nable 🗖	Default	Auto

Here you can change image, video and camera settings.

zoom

۲

Your webcam can zoom in as much as 3×. To change the zoom level:

- Click the webcam settings button in the Capture window (see "change video settings" in the previous column).
- 2. The webcam properties dialog box displays. Select the Camera Control tab.

3. Click and drag the **Zoom** slider to change the zoom level, left to zoom out and right to zoom in.

Zoom	-		0	\supset
<u>E</u> xposure Iris				
	-			
Bol		Default	- I	Auto

4. Click OK.

۲

product operating tips

(

- Turn the ring on the front of the webcam to manually focus the image.
- Press the button on top of the webcam to take a still shot.
- Click Extras > Help in ArcSoft Medialmpression for more details on how to use the application with your webcam.

troubleshooting

situation try this

- no video is displayed
- Check that the webcam is connected to the computer.
- Use a different USB port.
- Connect the webcam to a USB port on the computer, not a USB hub.

 \bigcirc

 (\mathbf{r})

- Uninstall and reinstall the driver. To uninstall the driver, click Start > Control Panel > Add or Remove Programs, select MyLife Webcam Kit and click Change/Remove.
- video stutters Disconnect and reconnect the webcam.
 - or stops Ensure the webcam is connected to a USB 2.0 port (not a slower USB 1.1 port).

()

(

FCC Statement

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction guide, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult a service representative for help.

Properly shielded and grounded cables and connectors must be used in order to comply with FCC emission limits. LifeWorks is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

Responsible party:

LifeWorks Technology Group LLC 1412 Broadway New York, NY 10018



()

Tested To Comply With FCC Standards FC FOR HOME OR OFFICE USE

A Warnina

Improper setup, use and care of this product can increase the risk of serious injury, death or device damage. Read and keep this guide and all other printed guides for future reference. For updated guides or replacements, go to www.life-works.com

(

Do Not Attempt Repairs

Do not attempt to take apart, open, repair, service or modify the device(s). Doing so may risk electric shock or other hazard. Evidence of any attempt to open or modify the device, including any peeling, puncture or removal of labels, will void the Limited Lifetime Warranty.

Printed in China © 2008 LifeWorks Technology Group LLC. iHome™ is a trademark of SDI Technologies Inc. used under license. Windows Vista® is a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. All other brands and logos are trademarks of their respective companies.

technical support

for technical support please visit www.life-works.com or call (877) LIFE-540 (877-543-3540)

lifetime warranty

for warranty information, please visit www.life-works.com/warranty

for model numbers IH-W305DB IH-W306DW

document version number 0811-0

IH-W305-306_UM.indd 12

