3.5 Inch High Definition Digital Peephole Viewer


User Manual

Model: DP-18

1



Doorbell Interviewers

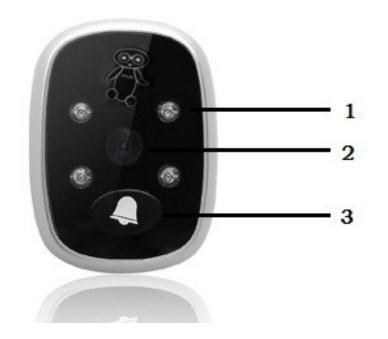

2

- **1.** 4pcs IR LED Night Viewing Lights
- $\ \ \mathbf{2.} \quad \text{OV industrial sensor, } \mathbf{120}^\circ \, \text{Wide Angle Lens} \\$
- **3.** Doorbell Button

Indoor Host Device Interviewers



- 1. 3.5 Inch LCD Screen
- 2. Power Switch ""
- 3. Video Recording Button "
- 4. Video& Photos Reviewing Button """
- 5. Menu Setting Button "
- 6. Up Button "
- 7. Down Button "
- 8. Micro SD Card Slot
- 9. 6V DC Connector
- 10. Speaker





Product Specifications

Display	3.5 inch TFT LCD screen
Sensor	OV industrial high definition color sensor, 120° lens, very clear image
Doorbell	Doorbell function, 32 types ringtone for choosing
Micro SD	Support external micro SD up to 32G
Don't Disturb	The doorbell won't ring when this function is enable
Infrared	4pcs IR LEDs, clear night vision LEDs will turn on automatically under poor light
Zoom	3x digital zoom
Photo Taking	Automatically taking and saving photos on micro SD, when visitor press doorbell button
Video Recording	Press " • button, device will record video, to stop the recording anytime if you re-press " • button
Review	Press "D' button to review video and photos on device directly
Menu Setting	Press " 🔯' button to enter to the menu settings (Menu introduce, pls read page 8)
Language	Support 8 languages
Power	4pcs AA batteries or DC adapter
Date and Time	yy/mm/dd, mm/dd/yy, dd/mm/yy mode Date and time is marked on the photo and video
Low Voltage	Power icon will twinkle when battery voltage is low
Barrel Diameter	14-22mm
Door Thickness	35-90mm
Product Size	138x76x23mm

Operation Introduction of DPV (Digital Peephole Viewer=DPV)

- 1. When visitor press " button, indoor host device will ring "Ding Dong" and screen will be turn on automatically, indoor user can see who is outside the door
- 2. Indoor user press "" button, the screen will turn on and show outdoor environment, at this time you can press "" button again to snap a outdoor photo
- 3. The DPV will automatically take and save photo to micro SD card when visitor press the doorbell button, the photos will be marked with date and time.
- 4. Press "^{III}" button, device will record and save video to micro SD card, to stop the recording anytime if you re-press "^{III}" or "^(I)" button
- 5. User can review recorded photos and video on DPV directly by pressing "**○**" button, and press " **○**" or "**○**" button to view previous ones or current ones. If you choose a video, when you press "**○**" button, the video will play.
- 6. Under "D" mode, user can delete photo or video on DPV directly by pressing "
- 7. Press " button to enter to menu settings

Introduction of Menu

1. Don't Disturb

The speaker won't ring when this function is turned on, you can cancel this function when select "off"

2. Language

8 languages for selecting: English, Français, español, Italiano, برطالستنا الاستنا الربيل , Türk, Русский, 中文,

press " \square " or " \square " button to select a language, then press "" button to save the selection.

3. Ring Type

32 types ringtone for selecting, you can select the one you like by pressing "¹ or "¹ button,

then press "O" button to save the selection.

4. Ring Volume

"High", "Medium", "Low": 3 levels for selecting, select one by pressing " \square " or " \square " button, then press "O" button to save the selection. In order to save AA power, we recommend you to select "Medium".

5. Auto Power off Time

"10s", "20s", "30s": 3 selections, select by pressing " \square " or " \square " button, then press "O" button to save it, in order to save battery's power, we recommend you to select "10s". For example, if select "10s", LCD screen will turn off automatically after 10 seconds.

6. Format Disk

"Yes", "Cancel" for selecting, If select "yes", the micro SD card will be formatted.

7. Date and Time

Press "
"
"
button to select year/month/ date / time.

Press " \square " or " \square " button to adjust the value.

Press "^(C)" button to save the setting and exit

8. LCD Frequency

"50Hz", "60Hz" for selecting, we recommend "60Hz", press "^(C)" button to save the selection.

9. LCD Contrast

"High", "Medium", "Low": 3 selections, we recommend you to select "Medium", press "^(C)" button to save the selection.

10. Software Version. This item can't be changed.

Installation Process of DPV

Step 1. Rip off double-sided adhesive tape paper on the back of outdoor part and stick the outdoor part on door. Insert the outdoor part barrel together with the FPCB data cable to the peephole of door



Step 2. Rip off double-sided adhesive tape paper on the back of the metal bracket and fix the metal bracket on the door as following:



Step 3. Put the screw go through the hole on metal bracket, and screw up it to the inner screw hole on the outdoor part barrel, until fasten the outdoor part to the metal bracket

Step 4. Please put 4pcs AA batteries into the batteries cell of indoor host device, then buckle the data cable's connector to the indoor host device



9

6tep 5. Please keep metal bracket hook upward, and fasten indoor host device on the hook.



Package Include

Outdoor device	1pc
Indoor host device	1pc
Metal bracket	1pc
DC 6V power adapter	1pc (optional)
Screw	3pcs
User manual	1pc

10