GV-101 User Manual

ver 1.16 Eng



Table of Content

1. Features and Specification	
1.1 Features	5
1.2 Specification	6
1.2.1 Hardware	6
1.2.2 Software	7
2. Introduction	
2.1 Overview	8
2.2 Detailed Hardware Functions	
3. Download Software to Memory Card	
4. Download Map Data to the Memory Card	
4.1 Europe Map to the Memory Card	
4.1.1 Install Europe Map Loader Software	
4.1.2 Upload Europe Map to the Memory Card	
4.2 American Map to the Memory Card	
4.2.1 Install American Map Loader Software	20
4.2.2 Upload American Map to the Memory Card	
5. Setup GV-101 in Car	
5.1 Attach GV-101 and Car Holder on the Car	26
5.2 Removing the GV-101 with the Car Holder	
5.3 Connecting the Car Cigarette Charger to the GV-101	
5.4 Powering the GV-101 On and Off	
5.4.1 Powering the GV-101 Off	
5.4.2 Powering the GV-101 On.	
5.5 Reset	
5.5.1 Soft Reset	
5.5.2 Hard Reset	
5.6 Screen Alignment	
6. Changing the Battery	
7. Software	
7.1 The Main Application Screen	33
7.2 Detail Software Functions	
7.2.1 Car Navigation System	
7.2.1.1 Window Overview	
7.2.1.1 Main Menu	34
7.2.1.1.2 Map Display	
7.2.1.1.2 Map Display	
7.2.1.1.4 GPS Status Display	
7.2.1.2 Selecting Your Destination	
7.2.1.2 Selecting Tour Destination 7.2.1.2.1 If You Have Selected "Street First"	
7.2.1.2.2 If You Have Selected "City First"	
7.2.1.3 To Enter a Destination from Intersection	
7.2.1.3.1 If You Have Selected "Street First"	
7.2.1.3.2 If You Have Selected "City First" 7.2.1.4 To Enter a Destination from Points of Interest	
7.2.1.4 To Enter a Destination from Forms of Interest 7.2.1.4.1 If You Have Selected "Alphabetical"	
7.2.1.4.1 If You Have Selected "Appliabetical 7.2.1.4.2 If You Have Selected "By Distance"	
7.2.1.5 To Enter a Destination from Favorites	
1.2.1.3 TO Effect a Destination from Favorites	

7.2.1.6 To Enter a Destination from Recent	59
7.2.1.7 To Enter the Center of City to Find the Destination.	
7.2.1.7.1 If You Have Selected "Alphabetical".	
7.2.1.7.2 If You Have Selected "By Distance".	
7.2.1.7.3 If You Have Selected "List ALL"	
7.2.1.8 To Set the Route Options	
7.2.1.9 To Set the Region Options	
7.2.1.10 To Set the Display Options	
7.2.1.11 To Create or Add to the Favorites List	73
7.2.1.12 To Add a Label to Your Favorites	
7.2.1.13 To Demo a Navigation	
7.2.1.14 Use GPS Info	
7.2.2 Photo View	79
7.2.3 Movie Playback	
7.2.4 MP3 Player	
7.2.4.1 Creating a Play List	
7.2.4.2 Basic Operation	
Play the Created Play List	
Change the Playback Mode of the Play List	
7.2.4.3 The Equalizer	
7.2.5 Optional Blue tooth HandsFree Carkit	85
7.2.5.1 How to Use the Hands Free Carkit	85
7.2.5.2 How to Set Up Blue tooth HandsFree Carkit with a	86
Mobile Phone	
7.2.5.3 Blue tooth Mobile Phone Settings	88
7.2.5.3.1 Adding and Delete Phone Settings	89
7.2.5.3.2 Connecting to a Phone	89
7.2.5.3.3 Disconnecting the Mobile Phone	
7.2.5.3.4 Adding "+" before the Setup Number	
7.2.5.4 Answering Calls	
7.2.5.5 Hang Up the Calls	
7.2.5.6 Direct Dialing	
7.2.5.7 List All Calls the Incoming Calls	94
7.2.5.7.1 Adding Calls to the Phonebook	
7.2.5.7.2 Deleting All the Received and Missed C	
7.2.5.7.3 Direct Dialing	
7.2.5.8 Phonebook	
7.2.5.8.1 Add A Number to the Phonebook	
7.2.5.8.2 Edit A Number in the Phonebook	
7.2.6 Setting Mode	102
7.2.6.1 System Information	
7.2.6.2 Power Setting	
7.2.6.3 Backlight Adjustment	
7.2.6.4 Language Selection	
7.2.6.5 About	
7.2.6.6 Screen Correction	106
8. Index	
8.1 Index A – Blue tooth HandsFree Carkit Installation	
8.1.1 Introduction	107

	<i>J</i> /
8.1.2 Blue tooth HandsFree Carkit Installation (Optional)10)8

8.2 Index B FM Transmitter (Optional)	
8.2.1 Introduction	
8.2.2 FM Transmitter Installation	
9. Troubleshooting	
10. FCC	

1. Features and Specification 1.1 Features

[•]Complete car navigation solution in one box including car mount [•]Touch panel LCD with 65000 colors

Smart and easy:

- Attach, switch it on and go
- Large Function icons design for easy touched
- User-Friendly keypad
- Clear, high quality voice-guided instruction
- Powered by cigarette lighter or long-life rechargeable battery
- Easy to be mounted and removed

[•]Built-in antenna; MMCX-type connector for optional external antenna [•]SD and CF storage card expansion slots

[•]Supports MP3, Movie Player (dat and mpg format) & Playback Function

[·]Supports Photo View

[•]Senses lighting conditions for automatic backlight dimming

Optional FM transmitter for re-directing MP3 output and voice guidance to car audio system (not legal in some countries)

[•]Optional Blue-tooth Module for HandsFree Operation

1.2 Specification

1.2.1 Hardware:

Processor:	Samsung S3C2410 266Mhz
Screen:	3.6", 320_240 pixel, color TFT LCD
Memory:	64 MB SDRAM, 32MB flash memory
Battery:	Replaceable and rechargeable 1650 mAh Li-ion battery
GPS Receiver:	SiRF Star_ high sensitivity chipset
	20-channel "All-In-View" tracking
	Built-in active antenna
	MMCX-type connector for optional external antenna
Sound:	Internal stereo loud speaker
Output Audio: H	eadphone x 1
Power:	Cigarette plug or universal adapter
USB Port: US	SB x 1 supports FM transmitter
SD Expansion Slot	t: SD x 1 supports SD or Multi Media Card

CF Interface Slot: CF x 1 supports Compact Flash Card Blue tooth Expansion Slot: Blue tooth module for handsfree operation x 1 Physical Size: 140 mm (H) * 92 mm (W) * 35 mm (D)

1.2.2 Software

- Microsoft Windows CE.Net 4.2 Core version
 SD card or CF card with Global View Software and Maps (Memory Card Optional)
- CD-ROM with maps for Europe or North America
- SD card or CF card download the maps data from PC (CD-ROM) via the card reader (optional)
- Solutions_

Car Navigation Mp3 Player Movie Playback (AVI Divx 3.11) Function Photo View Carkit (Blue tooth HandsFree)

Languages

- Available in English, German, French, Italian, Spanish, and Dutch.

2. Introduction

2.1 Overview



Figure 1.1









2.2 Detailed Hardware Functions

(1) Status Indicators

GPS LED: If it is a SOLID green, it means that GPS has not located its position. A BLINKING green means it has located a fix.

POWER LED: Please check if the Power LED is lit in orange. (If lit in red, the battery is not fully charged. If this is the case, please charge the battery and the orange LED will start to blink).

(2) Power Button

Turn it on and then turn it off again.

(3) Main Control Buttons



a.Zoom Out (Car Navigation Only)

b.Zoom In (Car Navigation Only)c.Volume Downd. Volume Upe. Mutef. Set Destination (Car Navigation Only)g.Main Menu

(4) USB Interface Connector

Enable to insert FM transmitter to deliver the quality of sound to car speakers.

(5) Power Connector

Connect the external power connector by using car charger or AC Adaptor.

(6) Stereo Speaker (each on the both sides)

Allow the MP3 and Voice Navigation through the two built-in speakers in the front and back.

The Blue tooth Carkit also enables to substitute the speakers.

(7) Memory Card Slot – SD

The PC applications and map data can be stored and be used along with the CF memory card simultaneously.

Note: "GlobalView Application Software" and **"Map"** must be on the same memory card before use.

(8) Memory Card Slot - CF

The PC applications and map data can be stored and be used along with the SD memory card simultaneously.

Note: "GlobalView Application Software" and **"Map"** must be on the same memory card before use.

(9) Blue tooth Expansion Connector (Blue tooth HandsFree Module Selective)



(10) System Reset Switch

Press down the "reset" button to reset the system.

(11) Battery Cover

Open the battery cover for new battery replacement.

(12) Car Mount Slots

Attach the GV-101 holder to the memory slots.

3. Download Software to Memory Card

After inserted the flash memory card into the card reader, execute the software application and map data through the PC system then store all of the applications and map data to the flash memory.

Step 1:

Make sure the flash memory (USB) card reader is connected to PC and the memory card (SD or CF) is inserted.

Note: "GlobalView Application Software" and **"Map"** must be on the same memory card before use.

Step 2:

Insert the PC application CD ("GlobalView American application installer" or "GlobalView Europe application installer") into the CD ROM drive. The installation will automatically start. When the application has loaded, click "Make System Disk" on the start menu.



Step 3:

On the install menu, click "Refresh" to show the Device List and select select which means

the CD has inserted into the flash memory card; however, shows no memory card installed. Click "Start" to start the CD copy to the selected memory card.

free space	
142.2 MB	Memory card inside
0 KB	No memory card
0 KB	
0 KB	
	142.2 MB 0 KB 0 KB



Step 4:

The correct window is shown below after the CD copy is completed.



4. Download Map Data to the Memory Card 4.1 Europe Map to the Memory Card

4.1.1 Install Europe Map Loader Software

Step 1:

Make sure the flash memory (USB) card reader is connected to PC and the system memory card is inserted.

Note: "GlobalView Application Software" and **"Map"** must be on the same memory card before use.

Step 2:

Insert the **"GlobalView Europe Map Loader CD1"** into the CD ROM, and then run the CD-ROM *driver://setup/setup.exe*. Choose a Setup Language window and click OK.

Choose Set	tup Language 🔀
2	Select the language for this installation from the choices below.
	English
	OK Cancel

Step 3:

Click "Next" on the InstallShieldf Wizard.



Step 4: Click "Yes" on the License Agreement.

InstallShield Wizard		×
License Agreement		
Please read the following license agreement	carefully.	
Press the PAGE DOWN key to see the rest of	of the agreement.	
END-USER LICENSE AGREEMENT		-
your personal, internal use only and not for m subject to the following terms and conditions hand, and Globalsat ("LICENSEE") and its li suppliers) on the other hand. If you do not a exit the install program do not install the Soft License will terminate automatically without r the License.	s which are agreed to by you, on the one licensors (including their licensors and agree to the terms of this agreement, promptly	•
setup will close. To install Netropa IntelliNav		
	< <u>B</u> ack <u>Y</u> es <u>N</u> o	

Step 5: Click "Next" on the Select Components.

stallShield Wizard		
Select Components Select components to install		124
Select the components you want to i	install, clear the components you	do not want to install.
✓ Program Files (English)		16073 K
Destination Folder		
Destination Folder C:\Program Files\Netropa\IntelliNa	v Europe	Browse
	v Europe	Bīowse

Step 6:

Click "Finish" to finish installing.

InstallShield Wizard	
	InstallShield Wizard Complete Setup has finished installing Netropa IntelliNav Europe on your computer.
	KBack Finish Cancel

4.1.2 Upload Europe Map to the Memory Card Step 1:



of Desktop, and click "OK" on the welcome menu.



Step 2:



Choose both a country and the CD ROM for download then click "Generate Map".

Step 3:

The download (the map data) is now running and storing into the flash memory card.

Giobal car navigator	View
Copying File (5 of 16): Ifoidx.bin	
Overall Progress	
Map Location (E:\Netropa IntelliNav Eu	rope/Maps)

4.2 American Map to the Memory Card

4.2.1 Install American Map Loader Software

Step 1:

Make sure the flash memory (USB) card reader is connected to PC and the system memory card is inserted.

Note: "GlobalView Application Software" and "Map" must be on the same memory card before use.

Step 2:

Insert the **"GlobalView American Map Loader CD1"** into the CD ROM, and then run the CD-ROM *driver://setup/setup.exe*. Then show the Choose Setup Language window and click OK.

Step 3:

Click "Next" on the InstallShieldf Wizard.

InstallShield Wizard		×
	Welcome to the InstallShield Wizard for Netropa IntelliNav Europe The InstallShieldR Wizard will install Netropa IntelliNav Europe on your computer. To continue, click Next.	
	< Back [Next>] Cancel	

Step 4: Click "Yes" on the License Agreement.

installShield Wizard			×
License Agreement Please read the following license agreement	carefully.		24
Press the PAGE DOWN key to see the rest (of the agreement.		
END-USER LICENSE AGREEMENT			-
The mapping and navigation software ("Soft your personal, internal use only and not for ri- subject to the following terms and conditions hand, and Globalsat ("LICENSEE") and its I suppliers) on the other hand. If you do not a exit the install program do not install the Soft License will terminate automatically without ri- the License.	esale. It is protecte s which are agreed icensors (including agree to the terms o ware and/or Data.	ed by copyright, a to by you, on the their licensors an f this agreement, Your rights unde	ind is one d promptly er this
Do you accept all the terms of the preceding setup will close. To install Netropa IntelliNav InstallShield			
	< <u>B</u> ack	Yes	No

Step 5: Click "Next" on the Select Components.

elect Components			and and a second second
Select components to install		1	
Select the components you want to inst	tall, clear the components	s you do not war	nt to install.
✓ Program Files (English)			16073 K
_ Destination Folder			
Destination Folder C:\Program Files\Netropa\IntelliNav E	Europe		Browse
	Europe		B <u>r</u> owse

Step 6: Click "Finish" to finish installing.

InstallShield Wizard	InstallShield Wizard Complete Setup has finished installing Netropa IntelliNav Europe on your computer.
	< Back Finish Cancel

4.2.2 Upload American Map to the Memory Card

Step 1:

Click the icon deliver Map of Desktop, and click"OK" on the welcome menu.



Step 2: Choose both a country and the CD ROM for download then

click "Generate Map".



Step 3:

The download (the map data) is now running and storing into the flash memory card.

<section-header></section-header>
Copying File (5 of 16): Ifoidx.bin
Overall Progress
Map Location (E:\Netropa IntelliNav Europe\Maps)

5. Setup GV-101 in Car 5.1 Attach GV-101 and Car Holder on the Car Step 1:

Attach the car holder to the card slot in the back of the device by following the red arrow shown in figure 5.1, and in figure 5.2 after it is completed.









Step 2:

Attach the car holder to the card slot on the bottom of the device by following the red arrow shown in figure 5.3, and in figure 5.4 after it is completed.





Figure 5.4

Step 3:

Attach the suction mount (1) to the windshield and have the base (2) of the device stabilizes on the dashboard as shown in figure 5.5.



Figure 5.5

5.2 Removing the GV-101 from the Car Holder

To remove the GV-101 from the car mount place two fingers in the position shown by the red arrows in figure 5.6 and squeeze them together. Slide the holder downward in the direction of the red arrow shown in figure 5.7.





Figure 5.6

Figure 5.7

5.3 Connecting the Car Cigarette Charger to the GV-101

Connect the car cigarette charger (small plug) to the right side of the device in the power-in socket and then insert the other end of the car charger to the vehicle's car accessory socket as shown in figure 5.8.



Figure 5.8

5.4 Powering the GV-101 On and Off



Figure 5.9

5.4.1 Powering the GV-101 Off

When GV-101 is on press the power button once. It will automatically close any open windows and enter a power saving mode.

5.4.2 Powering the GV-101 On

When GV-101 is in the standby mode press the power button once. It will automatically turn back up to its normal operating state.

Note: Do not intend to turn the device on and off repeatedly for any technical problems that might occur during the operation.

5.5 Reset

Should your GV-101 encounter an unexpected error, or if it locks up then the unit can be reset. There are two types of reset: a hard reset and a soft reset. The reset switch is shown in figure 5.10; you will need to use a stylus or pencil to activate the reset button.



Figure 5.10

5.5.1 Soft Reset

Press the Reset Button as shown in figure 5.10. This will restart the system retaining all the information stored on the device.

5.5.2 Hard Reset

A hard reset will re-initialize the GV-101 back to the factory settings. You should not need to use this under normal operating conditions. To start a hard reset, you need to press and hold the reset button as shown in figure 5.10 meanwhile pressing down the power switch, as shown in figure 5.9.

Note: A hard reset will delete some of the information stored on the device and revert to its original factory settings. All data stored on the memory card, such as music files and phone book in the carkit will be retained.

5.6 Screen Alignment

When the system has been hard reset, the screen needs to be aligned before it can be used. This will start automatically.

Step 1:

Using the stylus tap on the cross in the middle of the screen as shown in figure 3.11.



Figure 5.11

Step 1:

The cross will now move to the upper left corner. Tap it in the center again. Repeat this for the remaining 3 corners, as it shown in figure 5.12.



Figure 5.12

Step 3:

When the screen has been aligned successfully, it will be shown as in figure 5.13. If this failed, please repeat steps 1 and 2. After all the steps are finished, touch the screen and the main menu will appear on the display.

New calibration settings have been measured. To touch the LCD to accept the new settings.

Figure 5.13

6. Changing the Battery

GV-101 contains a replaceable battery. A flip-up battery lid makes it easy for battery removal by following the steps below.

Step 1:

Open the battery cover as shown in Figure 6.1.





Step 2:

Remove the battery by using a finger as shown in figure 6.2.





Step 3:

Figure 6.2 shows the battery replacement process following the red arrow and figure 6.3 shows it correctly replaced.



Figure 6.3

7. Software

7.1 The Main Application Screen The main application screen controls the GV-101. All the main features are accessed from a menu with six icons.



Figure 7.1.1

- Car Navigation
 Photo View
- 3. Movie Playback (AVI, MPEG) Functions
- 4. Setup
- 5. MP3 Player
- 6. Blue tooth HandsFree

7.2 Detail Software Functions7.2.1 Car Navigation System7.2.1.1 Window Overview7.2.1.1.1 Main Menu



7.2.1.1.2 Map Display



7.2.1.1.3 Navigation Display



7.2.1.1.4 GPS Status Display

Date Time	UTC Time	Location Lat: 24.996532N Lon: 121.487694E	Latitude Longitude
	Local Time – 2005/06/21 19:51:28	Alt: 112 m Speed: 0 km/h Satellite: 5/9	Altitude Speed
Satellite state —		09 06 20 35 21 35 23 30 10 32 13 30 12 27 15 27 12 27	Exit Button

7.2.1.2 Selecting Your Destination from Street First Step 1:



Step 2:



7.2.1.2.1 If You Have Selected "Street First", follow the steps below: Step 1:

Enter street name and tap

Enter Street Name											
PADRUSWEG											
PAFÄDER PAFÄDERWEG PAGUGGIWEG ▼											
1	2	3	4	5	6	7	8	9	0	<-	
Q	w	E	R	Т	Y	U	I	0	Р	-	
A	S	D	F	G	Н	J	к	L	Ó	к	
Z	x	С	۷	в	N	м			1	х	

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 2:

Enter the house number and tap



Step 3:

From the match list, select the desired address.



Step 4:



to navigate to this location or;



Step 5:

Tap

Fay to add this location to your Favorites List or;

C	Add To Favourites
	2 PÄDERGROSS BALZERS (BALZERS), LI
	OK Edit Cancel

Step 6:

Мар to set this location as your starting point and see the location on the map. Тар



7.2.1.2.2 If You Selected "City First", then follow the steps below: Step 1:

Enter city name and tap	ЭК
Enter City Name	
PAGRÜEG	
PARPAN PASPELS	

PFÄ	FERS	5								•
1	2	3	4	5	6	7	8	9	0	<-
Q	w	E	R	Т	Y	U	I	0	Р	
A	S	D	F	G	н	J	к	L	0	ĸ
z	х	С	v	в	N	м			1	x

Step 2:

Enter the street name and tap

Enter Street Name s SCHWARZ STRÄSSLE										
										•
1	2	3	4	5	6	7	8	9	0	<-
Q	w	E	R	Т	Y	U	I	0	Р	-
A	S	D	F	G	Н	J	к	L	Ø	К
z	х	C	۷	В	N	м			1	х

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 3:

Enter the house number and tap



Step 4:

From the match list, select the desired address.



Step 5:



to navigate to this location or;



Step 6:




Step 7:

Тар

Map to set this location as your starting point and see the location on the map.



(i) Information - If a large number of records are found by the "Street First" method, the program will automatically revert to "City First" method.

7.2.1.3 To Enter a Destination from Intersection Step 1:





Step 2:

Tap



Street First to enter the street name first or **City First** to enter the city name first.



7.2.1.3.1 If You Selected "Street First", then follow the steps below: **Step 1:**

Enter the street name and tap

Ent C	er S	tree	t Na	me						
CAS	TELL	WEG								
cha Chu	LBER RER IMWE	RÜT STR	I	E						-
1	2	3	4	5	6	7	8	9	0	<-
Q	W	E	R	Т	Y	U	I	0	Р	-
A	S	D	F	G	н	J	к	L	Ó	к
Z	х	С	v	в	N	м			1	х

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 2:

Enter the name of the Cross Street and tap

Ento	er 2	nd S	tree	et Na	ame					
	HWE		ASSI	Ę						
1	2	3	4	5	6	7	8	9	Π	Z-
Q	w	E	R	Т	Y	U	I	0	P	-
A	S	D	F	G	Н	J	к	L	ОК	
z	х	С	v	в	N	м				х

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 3:

From the match list, select the desired intersection.

Select A	ddress		
CASTELLWEG BACHWEG, ESCHEN	I (NENDELI	V), LI	
			-
Nav	Fav	Мар	2

Step 4:



to navigate to this location or;



Step 5:

Tap

Fave to add this location to your Favorites List or;

C	Add To Favourites
	CASTELLWEG BACHWEG, ESCHEN (NENDELN), LI
	OK Edit Cancel

Step 6:

Tap Map to set this location as your starting point and see the location on the map.



7.2.1.3.2 If You Selected "City First", then follow the steps below: **Step 1:**

Enter the name of the city and tap

Ent F	er C	ity N	lam	е						
FIDE	DIS/			ı						▲ ▼
1	2	3	4	5	6	7	8	9	0	<-
Q	W	E	R	Т	Y	U	I	0	Р	-
A	S	D	F	G	Н	J	к	L	ОК	
z	x	С	v	в	N	м				х

Step 3:

Enter the street name and tap



Ento	er St	tree	t Na	me						
PLATZ										
										-
1	2	3	4	5	6	7	8	9	0	<-
Q	w	E	R	Т	Y	U	I	0	Р	-
A	s	D	F	G	н	J	к	L	0	К
Z	x	С	۷	В	N	м			1	х

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 4:

Enter the name of the Cross Street and tap

Ento	er 2	nd S	tree	et Na	ame					
	.CHG :Hga		A							▲
1	2	3	4	5	6	7	8	9	0	<-
Q	W	E	R	Т	Y	U	I	0	Р	-
A	S	D	F	G	Н	J	к	L	ОК	
z	x	С	۷	в	N	м				x

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 5:

From the match list, select the desired intersection.

Select A	ddress		
PLATZ CHILCHGASSA, FAN	IAS (FANA:	5), CH	
			-
Nav	Fav	Мар	*

Step 6:



to navigate to this location or;



Step 7:

Tap

Fav to add this location to your Favorites List or;

C	Add To Favourites
	PLATZ CHILCHGASSA, FANAS (FANAS), CH
	OK Edit Cancel

Step 8:

Tap **Map** to set this location as your starting point and see the location on the map.



(i) Information - If a large number of records are found by the Street First method, the program will automatically revert to City First method.

7.2.1.4 To Enter a Destination from Points of Interest Step 1:



Step 2:

Tap one of the categories for Points of Interest.



Step 3:



7.2.1.4.1 If You Selected "Alphabetical", then follow the steps below: **Step 1**:

By City

Enter the name of the destination.

List All

Ent	er P	1 10	Nam	е						
LANDESKRANKENHAUS FELDKIRCH LANDESKRANKENHAUS GAISBÜHEL LANDESKRANKENHAUS RANKWEIL LIECHTENSTEINISCHES LANDESSPITAL										•
1	2	3	4	5	6	7	8	9	0	<-
Q	w	E	R	Т	Y	U	I	0	Р	
A	S	D	F	G	Н	J	к	L	Ó	к
z	х	С	v	в	N	м			1	х

Step 2:

Select a matching POI location from the list.

Step 3:

Tap to accept the location. The location details will be shown.



Step 4:



to navigate to this location or;



Step 5:

Tap

Fav to add this location to your Favorites List or;

C	Add To Favourites
	LANDESKRANKENHAUS FELDKIRCH
	OK Edit Cancel

Step 6:

Tap **Map** to set this location as your starting point and see the location on the map.



7.2.1.4.2 If You Selected "By Distance", then follow the steps below: **Step 1:**

Select POI List.



Step 2:

Tap **Nav** to navigate to this location or;



Step 3:

Тар Бау

to add this location to your Favorites List or;

C	Add To I	avourite		
L	IECHTENS	TEINISCHE	S LANDESS	PITAL
	OK	Edit	Cancel	~

Step 4:

Тар

Map to set this location as your starting point and see the location on the map.

Panning Ma	p - Click on (X) to Re	eturn
	_28	X
	-1 λ	
$ - \mathcal{I} $		
Menu	NV 1	
	1	44

7.2.1.5 To Enter a Destination from Favorites Step 1:



Step 2:

Select a destination from the list if you have already created one. **Step 3:**





Step 4:





Step 5:

Tap **Edit** to create a label such as HOME for this destination or change the label if one already exists or;

KAN	TON	Vour Ales	- diaria	TAL	APPI	ENZE	LL			
1	2	3	4	5	6	7	8	9	0	<-
Q	w	E	R	т	Y	U	I	0	Р	-
Ŷ				-						-
A	S	D	F	G	н	J	К	L	0	ĸ

Step 6:

Tap Del to delete this location from your Favorites List.

Favo	urites		<u></u>	
MASCHLINA				
NO NAME TRIESEN (), LI				
PADRUSWEG FLÄSCH (), CH				-
+ + Nav	Edit	Мар	Del	2

7.2.1.6 To Enter a Destination from Recent Step 1:



Step 2:

Select the destination.

Step 3:

Tap **Nav** to navigate to this location or;



Step 4:

Tap to set this location as your starting point and see the location on the map or;



Step 6:

Tap Del to delete this location from your Recent List.



7.2.1.7 To Enter a Destination from City Centre Step 1:



Step 2: Tap Change enter the state name.

Ente	er St	tate	Nai	me						
TEN	NESS	GEE ((TN)							
1	2	3	4	5	6	7	8	9	0	<-
Q	w	Е	R	Т	Y	U	I	0	Р	- e st
A	S	D	F	G	н	J	к	L	0	ĸ
Z	x	С	v	в	N	м			2	х

Step 3:





7.2.1.7.1 If You Selected "Alphabetical", then follow the steps below: Step 1:

Enter city name and tap

Ento S	er C	ity N	lam	e						
SAN	KT A	NTÖ	NIEN	I ASC	CHAR	RINA				
SAN	KT L	UZIS	TEIG	ì						
SAN	KT M	IARG	RET	HENE	BERG	i				-
1	2	3	4	5	6	7	8	9	0	<-
Q	w	Е	R	Т	Y	U	I	0	Р	
A	S	D	F	G	Н	J	к	L	Ó	к
Z	Х	С	۷	В	N	м			8	х

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 2:

From the match list, select the desired intersection.



Step 3:





Step 4:

Тар Бау

to add this location to your Favorites List or;

C	Add To Favourites	
	SALEZ	
	OK Edit	Cancel

Step 5:

Тар

Map to set this location as your starting point and see the location on the map.



7.2.1.7.2 If You Selected "By Distance", then follow the steps below: Step 1:



Step 2:





Step 3:



C	Add To Fa	vourites		
		TRIESEN		
	ОК	Edit	Cancel	5

Step 4:

Tap

Map to set this location as your starting point and see the location on the map.



7.2.1.7.3 If You Selected "List ALL", then follow the steps below: Step 1:

Enter city name and tap

Ento V	er C UZ	ity N	lam	e						▲ ▼
1	2	3	4	5	6	7	8	9	0	<-
Q	W	E	R	Т	Y	U	I	0	Р	-
A	S	D	F	G	Н	J	к	L	Ó	К
z	Х	C	۷	В	N	м			8	х

(!) Advisory - DO NOT ENTER STREET TYPE. For Main Street just enter Main.

Step 2:

From the match list, select the desired intersection.



Step 3:





Step 4:

Тар Бау

to add this location to your Favorites List or;

C	Add To Favourites	
	VADUZ	
	OK Edit (ancel

Step 5:

Тар

Map to set this location as your starting point and see the location on the map.

Panning Ma	ap - Click on (X) to	Return
	VANIZ	
Menu	28 	

7.2.1.8 To Set the Route Options Step 1:



Step 2:

Select the desired options

Ferries	Toll Roads	Turns
Include	Include	Less
Exclude	Exclude	More
	Include	Include Include

Step 3:

Method: Select the method of routing. The quickest route, shortest route, route that favors major roads, or route that favors local roads.

Toll Roads: Select whether toll roads should be included or excluded in the route calculation.

Ferries: Select whether carpool lanes (High Occupancy Vehicle Lanes) should be included or excluded in the route calculation.

Turns: Select whether the turns is more or less.



7.2.1.9 To Set the Region Options Step 1:



Localisation		
TimeZone	Units	
GMT	Mi/Ft	
GMT+01	Mi/Yd	
	KM	

Or,



Step 2:

Select the desired options.

Step 3:

Time Zone: Choose to use the sunlight time or current time zone setting.

Units: Choose different units and change.

Tap to accept or Cancel to reject changes.

7.2.1.10 To Set the Display Options Step 1:

Step 1.



Dis	POI Icon			
			Default	
Orientation	3D View	Color	Off	
Heading	2D	Yellow		
North	1	Grey	Custom	
Horan	20	Grey	Guidance	
Day/Night	2	White	Auto	
Auto	3	Fuschia	Muto	
	3	Fuschia	Manual	
Night			-	
Day	-	Cancel	(

Step 2:

Select the desired option(s).

Step 3:

Map Orientation: Orient the Map Screen so that the driving direction is pointing up or North is pointing up.

Color Scheme: Set color scheme to Day or Night mode. Auto setting changes from Day to Night mode automatically at approximately sunrise and sunset.

Guidance Screen: Set the Guidance Screen to automatically switch when getting closer to a turn maneuver, or have it appear only when manually selected.

POI Icons: You can select the Default or Custom or Off.

3D VIEW: Users can choose to use 2D or 3D mode for navigation.



7.2.1.11 To Create or Add to the Favorites List

Step 1:



Step 2:

Select a recent destination.



Step 3:



C	Add To Fa	vourites		
		db dem Si Vos Woi	e Egang), Ch	
	ОК	Edit	Cancel	

Step 4:



7.2.1.12 To Add a Label to Your Favorites Step 1:



Step 2:

Select a destination.

Step 3:

Tap Edit and enter a label using the keypad.



Step 4:



Favourites	
KANTONALES SPITAL APPENZELL	
MASCHLINA	
6 NEUSANDWEG TRIESEN (TRIESEN), LI	
+ + Nay Edit Map Del	22

7.2.1.13 To Demo the Navigation Step 1:

Press and hold your finger on the screen to show the option menu. Tap

Set Start Location

and then place and hold the finger on the desired starting point.



Step 2: Tap Set Destination to end the option menu.







7.2.1.14 Use GPS Info Step 1:





7.2.2 Photo View

All the files on the GV-101's memory cards are scanned searching for images. Any pictures found will be displayed as thumbnails as shown in figure 7.2.1.

On the image window, tapping the 🖜 button shows the previous page, tapping the button shows the next page, and tapping the button will close the Photo View.



Figure 7.2.1

To show an image in full screen mode simply select the picture by tapping on it as shown in figure 7.2.2, and then tap on the 🖾 button as the enlarged image is shown in figure 7.2.3.



Figure 7.2.2



Figure 7.2.3

7.2.3 Movie Playback Overview:

The movie on the GV-101 can be played back from either of the memory cards. The supported movie files must be encoded in AVI Divx 3.11 and mpg format.

The GV-101 has a full function media player, which has play, pause, forward and rewind functions in the movie player control as shown in figure 7.2.4.



Tap to take you back to the main GV-101 system menu.

Figure 7.2.4

Movie Display

Tap to open and select the required files to play in the movie display as shown in



Figure 7.2.5a

Tapping allows you to play the movie whereas tapping will stop playing.

Tapping will show you the display as shown in figure 7.2.5b.



Figure 7.2.5b

7.2.4 MP3 Player Overview The GV-101 scans the memory cards for MP3 audio recordings. Play lists can be created from the audio files. All the songs are played sequentially from a play list.

7.2.4.1 Creating a Play List

Step 1:

Tap on the main player control, after you have selected Music, the result will be shown as in figure 7.2.6. Then tap to show the play list as shown in figure 7.2.7.



Figure 7.2.6

Step 2:

When you open the play list, the system will look for the MP3 files and create a play list from

SD or CF memory card. You can easily tap for the previous page or for the next page as shown in figure 7.2.7.



Figure 7.2.7

Step 3:

During the creation of the play list, you can tap 🔯 to add more songs. Your new selections

will be added to the play list and the name will be shown in red. Tap 🔊 to delete the

selected song. Tap to cancel all the display songs. Tap to select all and tapping will go back to the MP3 Player Control as shown in figure 7.2.8.



Figure 7.2.8

7.2.4.2 Basic Operation



There are two modes of playback: sequential and random. Tapping will change the
songs to play randomly from the play list. When this occurs, a button will appear which will change back to play sequential mode.

Normally the player will stop at the end of the play list. You can select repeat mode to

continually replay the play list. Tapping enables the repeat mode. If you tap \bigotimes , this will cancel the repeat mode, as shown in figure 7.2.9.

7.2.4.3 The Equalizer

The GV-101 has 4 equalizer settings to suit the style of the music. To select the style simply

tap and *M*. There are four types of style: Default, Classical, Rock and Metal as shown in figure 7.2.10.



Figure 7.2.10

7.2.5 Optional Blue tooth HandsFree CarKit

Blue tooth handsfree carkit is an external connector. Once installed on the GV-101, it will become a blue tooth handsfree car phone enabling you to make and receive calls without touching the mobile phone.

Note: See 8.1 Index A for the "Blue tooth HandsFree Carkit Installation" before use.

7.2.5.1 How to Use the HandsFree Carkit

Instruction: Tap on the main menu then tap to enter the handsfree application as shown in figure 7.2.11.



Screen Overview:

Initiates an outgoing call or accepts an incoming call.
Terminates the current call.
Redials the last used number.
Displays the phone book.
Clear calls
Displays the setup options screen as shown in photo 7.2.11.

7.2.5.2 How to Set Up Blue tooth HandsFree Carkit with a Mobile Phone

Prior to linking the mobile phone to the GV-101, you need to ensure that you have a mobile phone equipped with a blue tooth headset or handsfree profile. Consult your phone manual or phone provider if you are not sure.

Step 1:

After tapping the key from the main phone display as shown in figure 7.2.11, the settings screen is displayed as in figure 7.2.12.



Figure 7.2.12

Step 2:

Tap

to enter the blue tooth setup mode as shown in figure 7.2.13.





Step 3:

Tap to start pairing the phone. The screen will show "Pairing…" as shown in figure 7.2.14. At the meantime, look for the name "HandsFree" on your mobile phone and enter the pass code "0000" if it is requested. The carkit will go back to its main function screen once the pairing has been done successfully.

Note:

1. The carkit in GV-101 only supports handsfree profile. Most of the blue tooth mobile phones on the market support this profile. Make sure all your Blue tooth mobile phones support the handsfree profile before attempting to pair the devices.

2. For some mobile phones like T610, you can easily change the device name from the option menu. (All the device names have to be in English otherwise the error message "Unknown Device" will appear on the GV-101).

3. When the pairing is completed, "Unknown Device" will appear on the GV-101. After the blue tooth is fully connected with the GV-101, the selected device name will be shown on the device.

Blue tooth is a standard for connecting devices together to perform certain functions. However, different companies implement the standard in different ways and incompatibilities could occur.



Figure 7.2.14

7.2.5.3 Blue tooth Mobile Phone Settings

The GV-101 is capable of connecting with up to five different mobile phones. The example in figure 7.2.15 shows two mobile phones configured.



Figure 7.2.15

7.2.5.3.1 Adding and Deleting Phone Settings

You can add a new mobile phone by tapping was shown in figure 7.2.5.2.



If a phone is no longer required, it can be deleted by selecting the phone and tapping

7.2.5.3.2 Connecting to a Phone

You need to manually select which of the configured mobile phones is the active one by following these steps:

Step 1:

Select the required mobile phone from the paired phones as shown in figure 7.2.16. For example, select T610 then tap to make the connection as shown in figure 7.2.17.



Figure 7.2.16



Figure 7.2.17

Step 2:

If the connection is successful, it will show \checkmark in the window indicating that the connection between carkit and the mobile phone is active as shown in photo 7.2.18.



7.2.5.3.3 Disconnecting the Mobile Phone

To disconnect the phone follow the steps below:

Step 1:

Select the in

icon as shown in figure 7.2.19.



Figure 7.2.19

Step 2:

Enter the configuration screen as shown in figure 7.2.20. You can see the current mobile connection is T610, then tap to disconnect it.





Step 3:

After disconnecting the icon will change to *(indicating that the phone has been disconnected as shown in figure 7.2.21.)*





7.2.5.3.4 Adding "+" Before the Setup Numbers

There are some numbers that require adding a "+" before dialing. If you cannot dial out properly through the carkit, it could be because some telephone providers require this number format. The setup steps to correct this are shown below:

Step 1:





Step 2:

This will display the dial prefix screen with the current setting of phone number add "+" as shown in figure 7.2.23. indicates the "+" is added automatically to the number setting. After placing the number you desired, tapping \checkmark to complete the setting.



Figure 7.2.23

7.2.5.4 Answering Calls

The available caller ID will identify the incoming calls as shown in figure 7.2.24. If you have associated an identifying image with the number this will be displayed along with the caller ID. Tapping will answer the call.



Figure 7.2.24

7.2.5.5 Hanging Up the Calls

If you do not want to answer the call, tapping

will refuse the connection.

7.2.5.6 Direct Dialing

When the GV-101 is connected to your mobile phone, you can dial directly from the GV-101 without having to use the phone using the dial screen in the GV-101. The dialing process is shown in figure 7.2.25. After it is connected, you can simply talk to the other person through the external microphone and built-in speakers.



Figure 7.2.25

7.2.5.7 Listing All the Incoming Calls

All calls are automatically stored after incoming calls. Numbers can either be saved in the phonebook, deleted, or dialed directly without having to be saved, as shown in figure 7.2.26.



Figure 7.2.26

7.2.5.7.1 Adding Calls to the Phonebook

Step 1:

On the main menu, tap the \square key as shown as in figure 7.2.27. Then select one of the numbers and tap \bowtie key to enter it to the phonebook.



Figure 7.2.27

Step 2:

In the editing menu, select column to enter the associated name as shown in figure 7.2.28.





Step 3:

When the input box appears on the top of the screen, enter the name as shown in figure 7.2.29.

Î		2							JOI	
1	2	3	4	5	6	7	8	9		
Q	W	E	R	Т	Y	U	I	0	P	-
A	S	D	F	G	н	J	к	L	ОК	
Z	X	C	۷	В	N	м			Ŀ	x

Step 4:

Tap **Edit** to open the image files. Select a file from the list and tap **V** to confirm as shown in figure 7.2.30.



Figure 7.2.30

Step 5:

After it is finished, tap \checkmark to complete the setting as shown in figure 7.2.31.



Figure 7.2.31

7.2.5.7.2 Deleting All the Received and Missed Calls

Tap to delete all calls as shown in figure 7.2.32.



Figure 7.2.32

7.2.5.7.3 Direct Dialing from the Call Log

Select a phone number as shown in figure 7.2.33. Tap and proceed dialing as shown in figure 7.2.34.



Figure 7.2.33



Figure 7.2.34

7.2.5.8 Phonebook

The carkit contains a phonebook facility allowing you to add, delete, edit or dial entries.

7.2.5.8.1 Add a Number to the Phonebook

Step 1:

Tap 🐑 to insert new information in the phonebook as shown in step 7.2.5.7.1 for instructions.



Figure 7.2.35

Step 2:

After Step 1 is finished, it will appear as shown in figure 7.2.36.



Figure 7.2.36

7.2.5.8.2 Edit a Number in the Phonebook

Step 1:

Select a number you desire to be edited, then tap 🙆 to enter the editing menu.





Step 2:

In the editing menu, select the \bigcirc icon, as shown in figure 7.2.38.



Figure 7.2.38

Step 3:

Open the editing menu as shown in figure 7.2.39. You can easily insert the names of

your desire by using the keyboard. After inputting the data, you can either tap

 $\overset{\circ}{\overset{\circ}}$ to confirm or $\overset{\bullet}{\overset{\bullet}}$ to cancel.

ŕ	•	2	-							
0		100111							JOE	
			4	5					0	
1 Q	2 W	3 E	R	T	6 Y	U	8	9	P	<- -
A	S	D	F	G	н	1	к	L	ок	
z	X	С	۷	в	N	м			Ŀ	x

Step 4:

If selecting the Edit key as shown in figure 7.2.38, the photo selections will appear in the setting as shown in figure 7.2.40. You can select one of the images and tap it to confirm.



Figure 7.2.40

Step 5:

After the editing is completed as shown in figure 7.2.41, tap \checkmark to confirm.



7.2.6 Setting Mode

The GV-101 contains six setting modes. To enter the main menu as shown in figure 7.2.42,





Figure 7.2.42

7.2.6.1 System Information

Tapping system will present data on the total and free memory capacities.

Memory (Free/Total): Remaining/Overall CF Card (Free/Total): CF remaining/CF Overall PCB Version: MANTA_REV_3_PCB Version No. Firmware Version: 0.21/0.23/DEV2 Firmware: Version No.



7.2.6.2 Power Setting

Step 1:

On the main menu, tap **W** to show the setting screen.

Step 2:

The power setting will appear as shown in figure 7.2.43.



Figure 7.2.43

Figure 7.2.44 shows the battery capacity.



Figure 7.2.44

In figure 7.2.45 shows the screen saver setting. For example, if you tap on the empty box, the system will shut down after 30 sec of inactivity.



7.2.6.3 Backlight Adjustment

Step 1:

On the main menu, select Brightness to enter the backlight setting.

Step 2:

The backlight setting is shown in figure 7.2.46.



Figure 7.2.46

In figure 7.2.47, the backlight setting is adjusted to automatic light sensor.



The setting in figure 7.2.48 is for backlight adjustment. Tapping will darken the



will lighten the backlight. backlight and tapping



Figure 7.2.48

Once the desired setting is selected, you can either tap \checkmark to confirm or \checkmark to cancel.

7.2.6.4 Language Selection

Step 1: 7

On the main menu, select **Regional** to enter the language setup mode.

Step 2:

The language setting appears as in figure 7.2.49. For example: for Dutch, you can easily pull down from the language selections, then either tap to confirm or to cancel.

•///	-0
Dutch	
Select Language:	
English	
\checkmark	

Figure 7.2.49

7.2.6.5 About

This setting will show the language selection version.



7.2.6.6 Screen Correction

This setting will show the screen correction.

Step 1:

On the main menu, tap to show the setting.

Step 2:

Using the stylus tap on the cross in the middle of the screen as shown in figure 3.5.1. Please see step 3.6 for complete instructions.



Figure 3.5.1

8. Index 8.1 Index A – Blue tooth HandsFree Carkit Installation 8.1.1 Introduction

Blue tooth HandsFree CarKit is an external connector. Once installed to the GV-101, it will become a blue tooth handsfree car phone enabling you to make and receive calls without touching the mobile phone as shown in figure 8.1.5. Figure 8.1.6 shows the complete set.

Blue tooth LED Status:

Standby: flash once every 3 seconds Connecting: flash twice every 3 seconds Under Connection: flash three times every 3 seconds Talking: flash four times every 3 seconds.



Figure 8.1.5



Figure 8.1.6

8.1.2 Blue tooth HandsFree Carkit Installation (Optional)

Step 1:

Figure 8.1.7 shows the external microphone that connects to the audio output on the handsfree module. Figure 8.1.8 shows it correctly plugged.



Figure 8.1.7



Figure 8.1.8

Step 3:

Insert the blue tooth carkit in the GV-101's expansion slot as shown in figure 8.1.9.



Figure 8.1.9

Step 4:

Mount the microphone on the dashboard using the double-sided tape. Figure 8.1.10 shows that the microphone which has to face the user.



Figure 8.1.10

Step 5: You can place the handsfree carkit in the car as shown in figure 8.1.11. 1 = Blue tooth HandsFree Carkit Module 2 = The Microphone on the Dashboard



Figure 8.1.11 8.2 Index B - FM Transmitter (Optional) 8.2.1 Introduction

The GV-101 can use an FM Transmitter as an optional accessory. The main purpose for the FM Transmitter is to adapt the wireless channels from voice source to the FM wireless frequency. Simply apply this option by using your FM radio in the car to hear the voice from your car speakers. There are two parts shown in figure 8.2.1, one is the FM Stereo Transmitter converter, and the other one is the Audio Adaptor Lead.



8.2.2 FM Transmitter Installation

Step 1:

Connect the FM Stereo Transmitter to the USB of the device and then insert one end of the audio adapter lead to the back of the FM Stereo Transmitter Socket.



Figure 8.2.2

	Control-data	Frequency	
14	2₽	3₽	ę.
Lø	Lø	L₽	88.0MHZ#
Lø	Lø	H₽	88.2MHZ#
La	H₽	L^{μ}	88.4MHZ~
Lø	H₽	H₊⊃	88.6MHZ#
H₽	Lø	L₽	88.8MHZ#
H₽	Lø	H₽	89.0MHZ~
H₽	H₽	L₽	89.2MHZ₽
H₽	H₽	H₽	NO USE -

Default Setting LLL 88.0 MHZ+

Table 8.1

Step 2:

Insert the other end of the audio adapter lead into the headphone socket on the left side of the device as shown in figure 8.2.3.



Figure 8.2.3

Step 3:

Figure 8.2.2 shows the FM Channel. For more information about the FM Channel and Speakers adjustments, see Table 8.1.

Troubleshooting:

If the GV-101 did not boot up successfully or does not function properly:

- 1. Please refer to Ch. 3 of the user manual to see if the SD card is properly installed in the driver.
- 2. Please refer to Ch. 2.2, Section (7) of the user manual to confirm the SD memory card is inserted into the SD expansion slot.
- 3. Please refer to Ch. 2.2, Section (1) of the user manual regarding the Status Indicators. Please check if the Power LED is lit in orange. (If lit in red, the battery is not fully charged. If this is the case, please charge the battery and the orange LED will start to blink.)
- 4. Please refer to Ch. 5.5.1 of the user manual with section entitled "Soft Reset" and follow the steps accordingly. If this doesn't solve the problem, continue onto Step 5.
- 5. Please refer to "Hard Reset" under Ch. 5.5.2. Performing a Hard Reset should solve the majority of problems.

When the GPS cannot locate a fix: 7.2.1.14 Use GPS Info:

- 1. Please refer to 7.2.1.14 Info regarding the Status Indicators. Confirm the GPS LED is lit in Green. If it's a SOLID green, it means that GPS has not located its position. A BLINKING green means it has located a fix.
- 2. Please test the unit in the outdoor field beginning with Step 1.

When the GPS Status Display is shown incorrectly in GPSinfo:

- Please refer to Ch. 2.2, Section 2 of the user manual under the heading "Status Display". If GPSinfo indicates the incorrect time, please check the Status Indicator of Ch. 2.2 to see if it shows the GPS LED is in BLINKING green or not. If it's in SOLID green, it means GPS has not found its fix yet.
- If the GPS has found its fix but the time display is still incorrect, please refer to Ch. 7.2.1.9 of the user manual. Go to "To Set the Region Options" and adjust the "Time Zone" setting.

When the battery light turns red:

A red light indicates the battery requires charging. An orange light blinks when it's charging and solid when it is fully charged.

When the HandsFree operation cannot be executed:

- 1. Please refer to Ch. 2.2, Section (9) to make sure the HandsFree Carkit Module is properly installed.
- 2. If not, please refer to "Index A Blue tooth HandsFree Carkit Installation" in the user manual to install the application.
- 3. After the HandsFree Carkit Module is fully installed, please refer to Ch. 8.1.1 of the user manual for the blue tooth LED Status.

Standby: flash once every 3 seconds

Connecting: flash twice every 3 seconds

Under Connection: flash three times every 3 seconds

Talking: flash four times every 3 seconds

4. Please check to see if the blue tooth LED is functioning normally.

When the Map Data is not showing in the GV-101:

In some cities, if the map is not displayed on the monitor, it may be because it has not been downloaded into the memory card. Please refer to Ch. 5 in the user manual for map upgrade.

FCC Notices

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC RF Exposure requirements:

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS

EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

8. Trouble Shooting:

If the GV-101 did not boot up successfully or does not function properly:

- 6. Please refer to Ch. 2 to see if the SD card is properly installed the GlobalView software.
- 7. Please refer the GV-101 LED status to confirm the SD memory card is inserted into the SD expansion slot.

- **POWER LED:** Please check if the Power LED is lit in orange. (Note: if lit in red, the battery is not fully charged. If this is the case, please charge the battery and the orange LED will start to blink).
- 8. Please refer to the GV-101 LED status. Please check if the Power LED is lit in orange. (Note: if lit in red, the battery is not fully charged. If this is the case, please charge the battery and the orange LED will start to blink).

GPS LED: If it is a SOLID green, it means that GPS has not located its position. A BLINKING green means it has located a fix.

- **POWER LED:** Please check if the Power LED is lit in orange. (If lit in red, the battery is not fully charged. If this is the case, please charge the battery and the orange LED will start to blink).
- 9. Please refer to 4.5.1 with section entitled "**Soft Reset**" and follow the steps accordingly. If this doesn't solve the problem, continue onto Step 5.
- 10. Please refer to **"Hard Reset"** under 4.5.2. Performing a Hard Reset should solve the majority of problems.

When the GPS cannot locate a fix.

- 3. Confirm the GPS LED is lit in Green. If it's a SOLID green, it means that GPS has not located its position. A BLINKING green means it has located a fix.
- 4. Please test the unit in the outdoor field beginning with Step 1.

When the GPS Status Display is shown incorrectly in GPSinfo:

3. If GPS info indicates the incorrect time, please check the Status to see if it shows the GPS LED is in BLINKING green or not. If it's in SOLID green, it means GPS has not found its fix yet.

GPS LED: If it is a SOLID green, it means that GPS has not located its position. A BLINKING green means it has located a fix.

4. If the GPS has found its fix but the time display is still incorrect. Go to "To Set the Region Options" and adjust the "Time Zone" setting of CarNavigation software.

When the battery light turns red:

A red light indicates the battery requires charging. An orange light blinks when it's charging and solid when it is fully charged.

When the HandsFree operation cannot be executed:

- 4. Please make sure the HandsFree Carkit Module is properly installed.
- 5. If not, please refer to "7.1.2 Index A Blue tooth HandsFree Carkit Installation" to install the application.
- 6. After the HandsFree Carkit Module is fully installed, please check to see if the Blue tooth LED is functioning normally.

Standby: flash once every 3 seconds

Connecting: flash twice every 3 seconds

Under Connection: flash three times every 3 seconds

Talking: flash four times every 3 seconds

When the Map Data is not showing in the GV-101:

In some cities, if the map is not displayed on the monitor, it may be because it has not been downloaded into the memory card. Please refer to Ch. 3 for map upgrade.