



ac200w

Action Camcorder
Quick Start Guide

For the full version of the ac200w product user manual go to:
www.hp.com/support

Preface

About this Quick Start Guide

This QSG is designed to demonstrate the features of your HP ac200w Action Camcorder. All information presented is as accurate as possible but is subject to change without notice. HP shall not be liable for technical or editorial errors or omissions contained herein. For the latest reversion, visit www.hp.com/support.

Copyright

This manual contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer. © Copyright 2013

Federal Communications Commission notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Modifications:

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by HP may void the user's authority to operate the equipment.

Trademark Recognition

Windows XP/Vista/Windows 7/Windows 8 are registered trademarks of Microsoft Corporation in the United States and/or other countries. Macintosh and Mac OS are registered trademarks of Apple Inc. In addition, all other companies or product names are trademarks or registered trademarks of their respective companies.

Safety and Handling Precautions

WARNING:


Follow these instructions to prevent damage to the camcorder:

- DO NOT USE UNPROTECTED IN RAIN OR WATER. PREVENT CONTACT WITH ANY KIND OF LIQUIDS
- USE RECOMMENDED ACCESSORIES ONLY
- DO NOT DISASSEMBLE OR ATTEMPT REPAIRS ON YOUR OWN. DISASSEMBLING THE CAMCORDER MAY VOID THE WARRANTY
- THERE ARE NO PARTS OR COMPONENTS INSIDE THAT NEED TO BE MAINTAINED
- REPAIRS WILL BE MADE BY AUTHORIZED SERVICE CENTERS ONLY
- Do not touch the camcorder lens
- Do not use abrasive chemicals, cleaning solvents or strong detergents to clean the product. Wipe the product with a clean slightly damp soft cloth.

ATTENTION!


- ELECTROSTATIC DISCHARGE OR STRONG ELECTROMAGNETIC FIELDS CAN AFFECT THE CAMCORDER. RESTART THE CAMCORDER IN THIS CASE.

Top and Front view

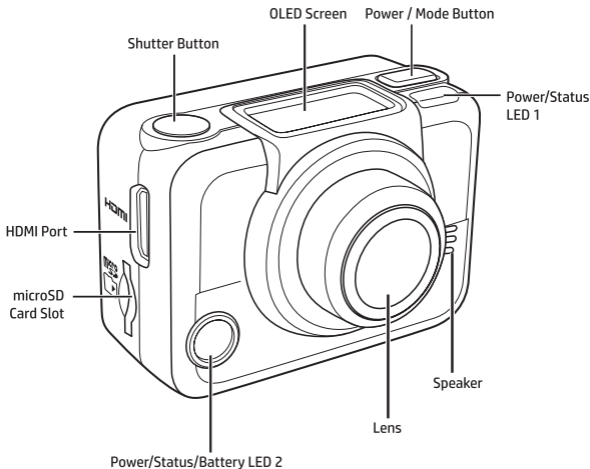






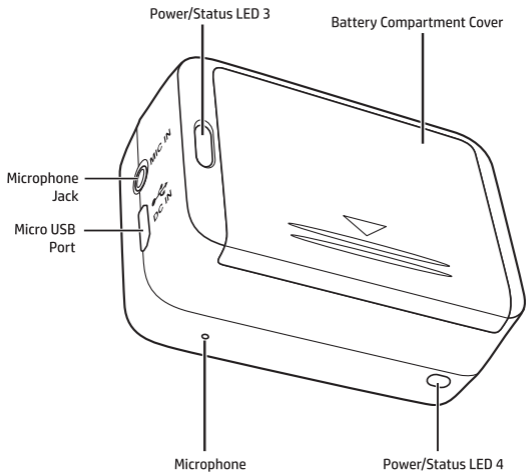


LED	Color	Description
Power / Status LED	Green	Power is on.
	Green Blinking	Taking photos.
	Red Blinking	Video recording in progress / RF control in progress.
	Red Blinking Rapidly	Self-timer
Battery LED	Red Blinking	Battery is charging.
	Off	Full charge.

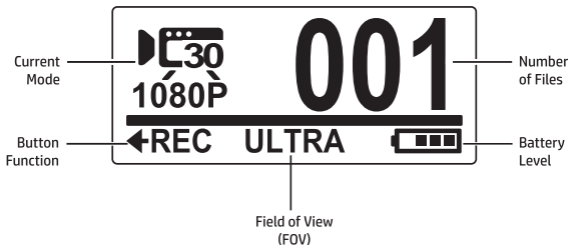

Back and Bottom View



The OLED Screen



Mode	
 Video Mode	 Time Lapse mode
 Photo Mode	 Self-timer Mode
 WiFi Mode	 Setting Mode
 Burst Mode	

Button Function	
 Record video	 Capture photo

Step 1: Unpack

Check if the following items are included in your package.



**HP ac200w
Action Camcorder**



Li-ion Battery



Micro USB Cable



AC Adapter



Quick Start Guide



CD-ROM



Lens Cap



Anti-fog Inserts



Waterproof Case



**Vented Housing
Backdoor**



**Waterproof
Housing Backdoor**



T Tip Adapter



Secure Tether



Velcro Strap



**Flat Adhesive
Socket**



**Curved Adhesive
Socket**




Swivel T Tip




**RF Wrist Strap
Remote Control
(optional)**

Step 2: Install Battery


1. Push down the battery compartment cover to open it.

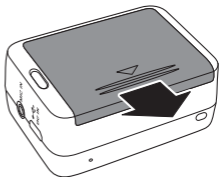

2. Align the battery contacts and then insert the battery into the compartment with the ribbon underneath the battery.

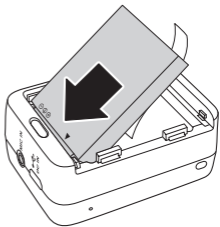


2. Close the battery compartment cover.

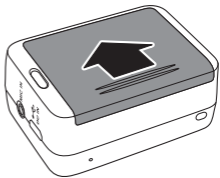


Step 3: Install microSD Card

With the gold contacts facing the front of the device, insert the microSD card into the slot and push it until it clicks into place.

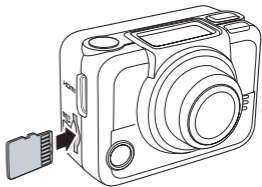


Step 4: Charge the Battery

1. Plug the micro-USB connector to the micro-USB port of your device.
2. Plug the other end of the USB cable into a USB port of your computer or use the AC adapter included.

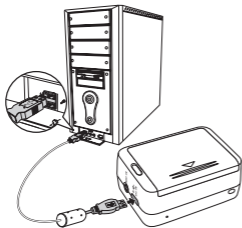


or

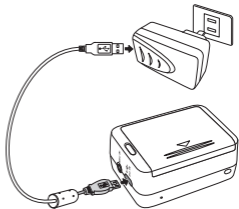

Battery LED red = Battery charging
Battery LED off = Battery fully charged


Step 5: Turn On Camcorder

Press the Power button to turn on the camcorder.

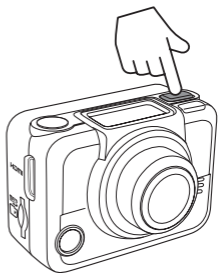

Changing Modes

Press the Mode button repeatedly to switch modes.

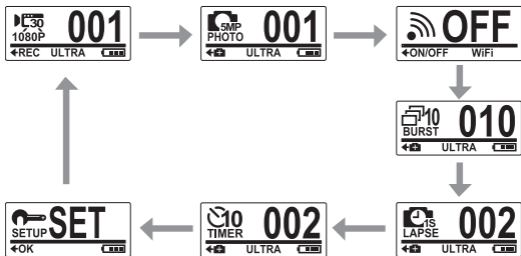

Step 6: Set Date and Time

1. Press the **Mode** button repeatedly until you reach **Set** mode.
2. Press the **Shutter** button to enter **Set** mode.



 
3. Press the **Shutter** button to enter the **MORE** menu.




4. Press the **Mode** button to highlight **TIME**.



5. Press the **Shutter** button to enter the **TIME** submenu. The year field is highlighted.
6. Press the **Shutter** button repeatedly to adjust the year.




 7. When done, press the **Mode** button to go to the month field.
8. Press the **Shutter** button repeatedly to adjust the month, and then press the **Mode** button to go to the day field.



9. Press the **Shutter** button repeatedly to adjust the day, and then press the **Mode** button to go to the hour field.
10. Press the **Shutter** button repeatedly to adjust the hour, and then press the **Mode** button to go to the minute field.

 11. Press the **Shutter** button repeatedly to adjust the minute, and then press the **Mode** button to highlight **OK**.
12. Press the **Shutter** button to complete the setting.
13. To exit the menu, press the **Mode** button repeatedly until the **EXIT** screen appears.
14. Press the **Shutter** button to exit the **Set** mode.



Step 7: Record Videos

1. By default, the camcorder is automatically in **Video** mode when turned on.



2. Press the **Shutter** button to start recording.
3. Press the **Shutter** button to stop recording.

Step 8: Shoot Photos

1. Press the **Mode** button to switch to **Photo** mode.
2. Press the **Shutter** button to take a photo.



Shoot Photos By Burst Mode

Shoot photos by burst mode to take 10 photos with one press of the **Shutter** button.

1. Press the **Mode** button repeatedly to switch to **Burst** mode.
2. Press the **Shutter** button to take photos.



Shoot Photos By Time Lapse Mode

This feature allows you to continuously capture photos with one press of the Shutter button at the preset interval time (1/3/5/10/30/60 seconds). Shooting only stops when the Shutter button is pressed again. Those continuous shots are combined and saved into one video automatically. The recorded video is played back in fast motion (faster than the normal playback speed). You can use this feature to record videos such as evolution of a construction project, weather changes, or flower blossom.

1. Press the **Mode** button repeatedly to switch to **Time Lapse** mode.
2. Press the **Shutter** button to start taking photos.
3. Press the **Shutter** button again to stop taking photos.



Shoot Photos By Self-timer Mode

Shoot photos by self-timer mode to take a photo after a 10-second delay.


1. Press the **Mode** button repeatedly to change to **Self-timer** mode.



2. Press the **Shutter** button. The photo is taken after 10 seconds.


Step 9: View Videos/Photos

Connect your camcorder to a PC or TV to view captured photos and videos.

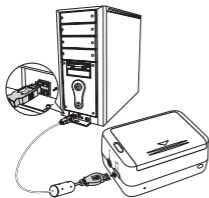

Note: Use USB cable for PC.

or

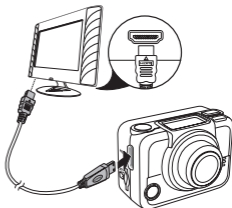

*Note: Use HDMI cable for TV.
HDMI cable is an optional item.*

View Videos/Photos on Smartphones

Connect your camcorder to a smartphone using Wi-Fi connection to view videos/photos from your camcorder on your smartphone.

Note: Before using this feature, download the **HP Xcam** app from AppStore (iOS) or Google Play (Android OS) on your smartphone.

1. Press the **Mode** button repeatedly to switch to **WiFi** mode.



2. Press the **Shutter** button to toggle WiFi to **ON**.




3. Press the **Mode** button to exit the **WiFi** mode screen.
4. Switch to **Video** mode and wait for 30 seconds until the LED flashes to indicate Wi-Fi connection is established.
5. On your smartphone, enable Wi-Fi connection, then search and connect to the Wi-Fi network **HP Xcam**.
6. When prompted, enter the password "1234567890".
7. Use the **HP Xcam** app to view videos and photos from your camcorder.


Step 10: How to Use the Accessories

Waterproof Case

1. Release the case lock and flip it open.

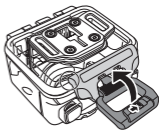

2. Install the camcorder inside the case.

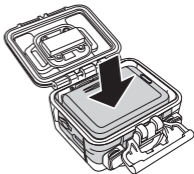


3. Secure the case lock.




T Tip Adapter

Depending on the accessories that you will use, detach or attach the T tip for use with the accessory of your choice.

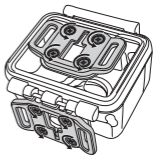


Housing Back Door

1. Open the back door completely.
2. Pull to detach the back door from the case.
3. Install the T tip adapter to the back door you want to use.
4. Re-install the back door.

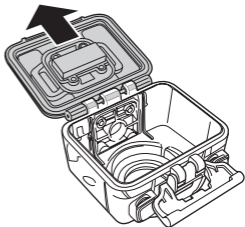


Velcro Strap

You can insert the Velcro strap through the strap holes of the T tip adapter.

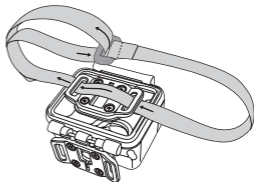

Other Accessories

Lock the T tip adapter to the T tip of the accessories you wish to use.

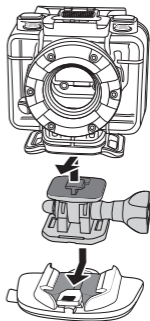


RF Wrist Strap Remote Control


1. Press the **Mode** button repeatedly until you reach **Set** mode.
2. Press the **Shutter** button to enter **Set** mode.
3. Press the **Shutter** button to enter the **MORE** menu.



 4. Press the **Mode** button to highlight **BINDING**.
5. Press the **Shutter** button to enter the **BINDING** submenu. The camcorder RF antenna is enabled and ready for pairing.



6. On your RF wrist strap remote control, press the **Photo** and **Video** buttons at the same time. When the Red LED flash once, pairing is complete.

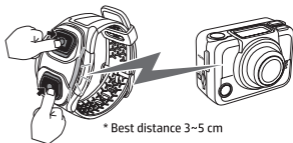

7. Press the **Video** button on your RF wrist strap remote control to start and stop video recording. To take photos, press the **Photo** button.

Note:

- To shoot photos by burst mode, time lapse or self-timer, switch to the respective mode on your camcorder and then press the **Photo** button of your RF wrist strap remote control. However, only one photo can be taken in time lapse mode when using the RF wrist strap remote control.
- Even if the camcorder is in Video mode, you can still take photos by pressing the **Photo** button on your RF wrist strap remote control.

P/N: 8PHP040206