

User's Manual



APPLICATIONS: Laboratory, Electron workshop, Glasses shop, Jewelry shop, Clocks and Watches shop, Mobilephone repair shop, Hospital Dentistry, Office and Family etc.

- ☐ PLEASE READ AND UNDERSTAND THIS INTRODUCTION BEFORE USING
- ☐ KEEP THIS MANUAL FOR REFERENCE

PRODUCT DRAWING & INDICATION




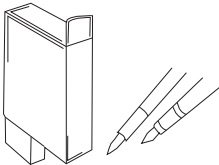
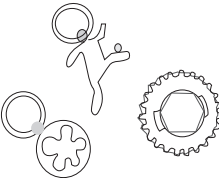



1 LID 2 VIEW WINDOW 3 STAINLESS STEEL TANK 4 HOUSING 5 "MAX" MARK
 6 PLASTIC BASKET 7 PLASTIC WATCH STAND 8 INDICATION LIGHT
 9 "ON" BUTTON 10 "OF" BUTTON 11 "RESET" BUTTON 12 PLUG AND CORD


SPECIFICATIONS :

NAME	ULTRASONIC CLEANER	POWER SUPPLY	AC100 ~ 120V 60Hz AC220 ~ 240V 50Hz
MODEL	800	POWER	35W
OVERALL SIZE	210X150X140mm	FREQUENCY	40KHz
TANK SIZE	155X95X52mm	TIME SETTING	3 minutes auto cut-off
VOLUME	600ml	G.W	905±5g

AVAILABLE FOR

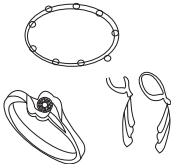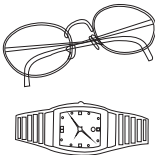Jewellery	Glasses and Timepieces	Commodities
		
Necklaces, Rings, Earrings, Bracelets etc.	Glasses, Sun Glasses, Watch Chains, Waterproof watches etc.	Electric shaver heads, Razor blades, Dentures, Combs, Toothbrushes etc.
Stationery	Metal Articles	Metal Dishware
		
Pen-heads, Printer-heads, Inkjet cartridges, Seals etc.	Watch Parts, Ancient coins, Badges, Machine nozzles etc.	Forks, Knives, Spoons, etc.

 DIRT ELIMINATION PROCESS THROUGH ULTRASONIC TECHNOLOGY

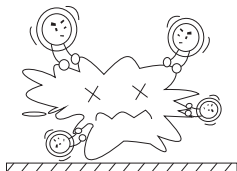

As ultrasonic wave through the solution in the tank, cause alternating high and low pressures in the solution.

 


During the low pressure stage, millions of microscopic bubbles form and grow. This process is called "CAVITATION"



During the high pressure stage, the bubbles implode releasing enormous amounts of energy. They work in all directions, attacking surface and invading all recesses and openings.

FOUR WAYS OF CLEANING

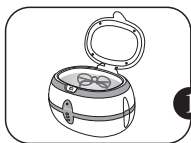


GENERAL CLEANING

Use only tap water for general cleaning. The water should immerge the article to be cleaned, but not exceed "MAX" mark and below "MIN" mark.




ENHANCED CLEANING

 Attention:
When the article is smeary or extraordinary dirty, add about 5-10ml of detergent into water to enhance cleaning result.

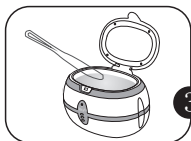

CLEANING BY PARTS

 
For large article, partly cleaning as shown.

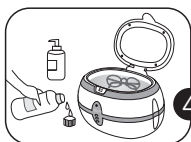

EXTENSIVE CLEANING


When the item needs extensive cleaning or disinfecting, use "ENHANCED CLEANING" first, then replace the water and add about 5-10ml ordinary detergent ,restart cleaning about 3 minutes.

 OPERATION INSTRUCTIONS

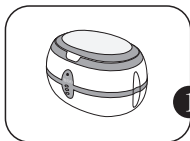

Open the lid, and fill stainless steel tank with water.

 
Running without water may damage the cleaner!

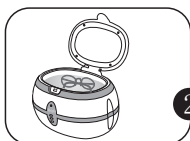


Place the article into water.

The article should be immerged well into the water. However, the water do not exceed "MAX".

 
OPERATION INSTRUCTIONS

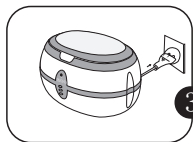

Plug the cleaner into outlet.

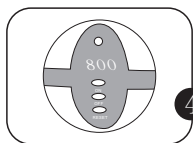 


 Press the "ON" button for 180 seconds working time, and the red indication light is on. When reach the time, the light will turn off and the cleaner stop working.

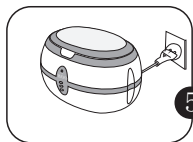


During cleaning, if you want to stop, just press "OFF" button.

 During cleaning, you can hear the "ZIZI" voice, it means the cleaner is working.

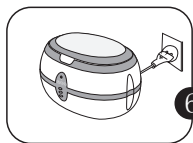

 
Press the "RESET" button, the cleaner restart working for 180 seconds.

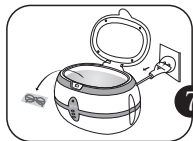


When cleaning is finished, unplug it and open the lid, then take out the article. At last, pour the water from stainless steel tank and wipe it up.

IMPORTANT SAFETY INSTRUCTIONS

 
 **WARNING**-To reduce the risk of burns, electrocution, fire or injury to persons

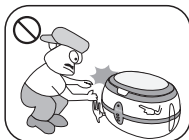

 Do not disassemble the cleaner except for the authorized serviceman.

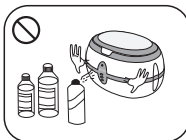

 
Do not fill the tank with abrasives or corrosive chemicals.

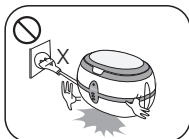


Unplug the cleaner before filling, Do not exceed the MAX mark.



 
Do not immerse the cleaner in water to reduce the risk of electrocution.

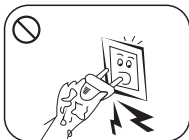

 
Do not touch the socket with wet hand to reduce the risk of electrocution.

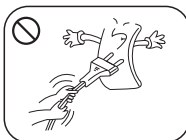

 Do not use this cleaner when sleeping or drowsy.

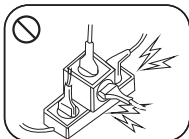

 Use this cleaner properly as per its instruction manual. Do not use attachments not recommended by the manufacturer.

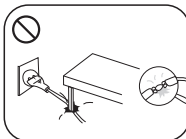

Never operate this cleaner if cord or plug is damaged. If it is not working properly, damaged or has been dropped into water, return the damaged cleaner to a service center for examination and repair.



Any unfirm inlaid article may become loose.

 
Articles that easy to be discolored are not recommended for ultrasonic cleaning.

For example: textiles, leather products, woodware, etc.


IMPORTANT SAFETY INSTRUCTIONS




DANGER-TO reduce the risk of electrocution:

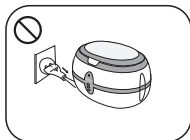

 
Unplug this cleaner immediately after using.

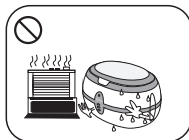

 
Keep the cleaner away from heat, and place it in a dry and level surface.

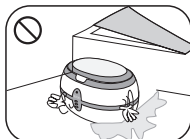

 Keep the cleaner in a safe place to avoid falling into water or other liquid.

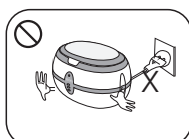

 The cleaner should never be left unattended when plugged in.

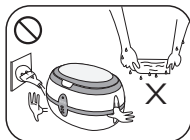

Do not use while bathing.



Do not immerse the cleaner into water or other liquid.

 


Do not reach for the cleaner that has fallen into water. Unplug immediately.




Do not put mobile phone or watch which is not waterproof into the tank for cleaning. Do not put any spectacles frame or art ware which is made from shell or hawksbill into the tank for cleaning.

USER MAINTENANCE

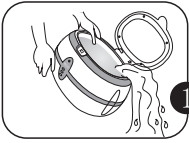


Unplug and empty the cleaner after using.

 Do not keep water in the tank for a long time.

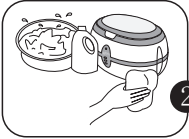

Wipe the tank and housing with dry towel.

 Do not wash the cleaner with water to avoid electric shock.

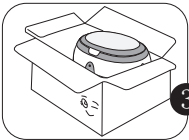

Keep the cleaner in cool and dry place.

USAGE OF OPTIONAL ACCESSORIES

PLASTIC BASKET

When small item is to be cleaned, put the item into plastic basket, then put the basket into the tank. In this way, frictions between the item and the tank can be reduced.

Pay attention:

The plastic basket is only for cleaning small items, because it absorbs about 30% of ultrasonic energy and reduce the cleaning result. In this case, when using the plastic basket, please refer to the instruction of “ENHANCED CLEANING” in this manual.

WATCH STAND

Ultrasonic osmosis is strong. Do not put the ordinary waterproof watch (water proofing capability less than 30 meters) into the tank and cleaning directly. Do that may cause watch damage. It is recommended to use the watch stand ,immerse the watchband in water. Similar to plastic basket, the watch stand will absorbs ultrasonic energy. When using it, please refer to the “ENHANCED CLEANING”.



UCP-800 ULTRASONIC CLEANER