

Relative Inductance Analyzer (RIA) User's Manual

▲ Integral Solutions Int'l

- RIA-2008 version 1.2.2 -

March 31, 2010

Copyright ©2009-2010 Integral Solutions Int'l
All rights reserved
Integral Solutions Int'l
3000 Olcott St
Santa Clara, CA 95054

Phone: (408) 653-0300 Fax: (408) 653-0309 Web: http://www.us-isi.com/
E-mail: isi@us-isi.com

While every effort has been made to verify the accuracy of the information contained in this publication, this publication may contain technical and/or typographical errors. Please contact Integral Solutions Int'l to report any errors in this publication.

Contents

1	IN	TRODUCTION	6
	1.1	RELATED DOCUMENTATION	7
2	INS	STALLATION	8
	2.1	REQUIREMENTS	S
	2.2	ARRIVAL CHECKLIST	
	2.3	CONNECTIONS	
	2.4	CONNECTION DIAGRAM	
	2.5	RUNNING 1 ST TIME	
	2.6	Installing RIA Upgrade	
3	TE	ESTER BASICS	18
	3.1	STARTING SOFTWARE	20
	3.2	INSTALLING HGAS	21
	3.3	RUNNING TESTS	22
	3.4	WRITER SPECIFIC TESTS	23
	3.5	RIA-2008 CUSTOM STRESS	24
	3.6	RUNTIME LICENSE	
	3.7	RUNNING RIA ON BLAZERX6 AND WAFER	26
4	RI	A-2008 SETUP	28
	4.1	SETUP PARAMETERS	28
	4.2	RESULTS	29
5	LS	AT – INDUCTANCE SATURATION TEST	30
	5.1	SETUP PARAMETERS	30
	5.2	RESULTS	31
	5.3	Example Printout	31
6	LS	ATI – INDUCTANCE SATURATION I-BIAS TEST	32
	6.1	SETUP PARAMETERS	32
	6.2	RESULTS	33
	6.3	Example Printout	33
7	LS	ATF – INDUCTANCE SATURATION FIELD TEST	34
	7.1	SETUP PARAMETERS	
	7.2	RESULTS	
	7.3	Example Printout	
8	CY	CET – COIL-YOKE COUPLING EFFICIENCY TEST	
Ū	8.1	SETUP PARAMETERS	
	8.2	RESULTS	
	8.3	EXAMPLE PRINTOUT	
9		DT – YOKE DEFECT TEST	
y			
	9.1	SETUP PARAMETERS	
	9.2 9.3	RESULTSEXAMPLE PRINTOUT	
_			
1() TM	MFT – TILTED MAGNETIC FIELD TEST	
	10.1	SETUP PARAMETERS	
	10.2	RESULTS	
	10.3	Example Printolit	43

11	YA	T – YOKE ANISOTROPY TEST	44
1	1.1	SETUP PARAMETERS	44
1	1.2	RESULTS	
1	1.3	EXAMPLE PRINTOUT	45
12	YA	T SWEEP - YOKE ANISOTROPY BIAS SWEEP TEST	46
13	2.1	SETUP PARAMETERS	46
12	2.2	RESULTS	
13	2.3	EXAMPLE PRINTOUT	47
13	YH	IDFT – YOKE HYSTERESIS-DOMAIN FIELD TEST	48
1.	3.1	SETUP PARAMETERS	
	3.2	RESULTS	
	3.3	EXAMPLE PRINTOUT	
14	YH	IDIT – YOKE HYSTERESIS-DOMAIN I-BIAS TEST	50
14	4.1	SETUP PARAMETERS	
	4.2	RESULTS	
14	4.3	EXAMPLE PRINTOUT	51
15	MN	MT – MAGNETIC MEMORY TEST	52
1:	5.1	SETUP PARAMETERS	52
1:	5.2	RESULTS	
1:	5.3	EXAMPLE PRINTOUT	53
16	WI	RITER_RES – WRITER RESISTANCE TEST	54
10	6.1	SETUP PARAMETERS	54
10	6.2	RESULTS	
10	6.3	EXAMPLE PRINTOUT	55
17	CA	LIBRATION	56
1′	7.1	INDUCTANCE	56
	7.2	Magnet	
1'	7.3	MAGNET ALIGNMENT	59
18	TO	OLS	60
13	8.1	QPS SPLITTER OPTION	60
13	8.2	ISI2010 DIAGNOSTICS	61
	8.3	HALL EFFECT CARTRIDGE	
13	8.4	QUAD-POLE MAGNET CALIBRATION ADAPTOR	
19	TR	OUBLESHOOTING	63
19	9.1	FAQ	63
20	AP	PENDIX A – RIA MEASUREMENTS	64
20	0.1	PERPENDICULAR WRITE HEAD STRUCTURE	64
	0.2	INDUCTANCE SATURATION USING DC WRITE CURRENT - LSATI TEST	
	0.3	INDUCTANCE SATURATION IN MAGNETIC FIELD – LSATF TEST (PATENT PENDING)	
	0.4 0.5	CYCET: COIL-YOKE COUPLING EFFICIENCY TEST (PATENT PENDING)	
	0.5 0.6	YDT: YOKE DEFECT TEST (PATENT PENDING)	
	0.7	MMT – MAGNETIC MEMORY TEST (PATENT PENDING)	
	0.8	YHDFT AND YHDIT: YOKE DOMAIN TESTS (FIELD AND WRITE CURRENT) (PATENT PENDING)	
20	0.9	APPENDIX	84

21	APPENDIX B - RIA FAQ	.85
22	APPENDIX C – GEN3 PROBE CARD RIA COMPATIBILITY	.89
23	LIMITED WARRANTY	.90

Figures

FIGURE 1-1 – TESTER FOOTPRINT	6
FIGURE 1-2 – COMPLETE SYSTEM	
FIGURE 2-1 – RIA SYSTEM CONNECTIONS	12
FIGURE 3-1 – RIA CONFIGURATION (CH0 vs CH1)	19
FIGURE 3-2 – SYSTEM MENU SELECTION	20
Figure 3-3 – Add-Ins → Selected Modules	20
FIGURE 3-4 – INSTALLING AN HGA	
FIGURE 3-5 – INSTALLING AN HGA	21
Figure 3-6 – Head Selection	21
FIGURE 3-7 – RUNNING THE TESTS	
Figure 3-8 – Add-Ins	23
FIGURE 3-9 – ADAPTIVE PARAMETERS	23
FIGURE 3-10 – RIA-2008 CUSTOM STRESS.	
FIGURE 3-11 – RIA-2008 RUNTIME LICENSE	
FIGURE 3-12 – RIA2008 SERIAL NUMBER	
FIGURE 3-13 – RIA2008 EVALUATION	
FIGURE 3-14 – RIA ON BLAZER	
FIGURE 3-15 – ALTERNATIVE TEST SITE	
FIGURE 3-16 – RIA ON BLAZERX5 PRODUCTION TEST.	
FIGURE 3-17 – RIA AND BARCONT	
FIGURE 4-1 – RIA-2008 SETUP	
FIGURE 5-1 – LSAT TEST	
FIGURE 5-2 – LSAT EXAMPLE	
FIGURE 6-1 – LSATI PARAMETERS	
FIGURE 6-2 – LSATI Example Printout	
FIGURE 7-1 – LSATF PARAMETERS	
FIGURE 7-2 – LSATF Example Printout	36
FIGURE 8-1 – CYCET PARAMETERS	37
FIGURE 8-2 – CYCET EXAMPLE PRINTOUT	
FIGURE 9-1 – YDT PARAMETERS	
FIGURE 9-2 – YDT EXAMPLE PRINTOUT	
FIGURE 10-1 – TMFT PARAMETERS	42
FIGURE 10-2 – TMFT Example Printout	43
FIGURE 11-1 – YAT PARAMETERS	44
FIGURE 11-2 – YAT EXAMPLE PRINTOUT	
FIGURE 12-1 – YAT SWEEP PARAMETERS	46
FIGURE 12-2 – YAT SWEEP EXAMPLE PRINTOUT	47
FIGURE 13-1 – YHDFT PARAMETERS	48
FIGURE 13-2 – YHDFT EXAMPLE PRINTOUT	49
FIGURE 14-1 – YHDIT PARAMETERS	
FIGURE 14-2 – YHDIT EXAMPLE PRINTOUT	51
FIGURE 15-1 – MMT PARAMETERS	52
FIGURE 15-2 – MMT Example Printout	53
FIGURE 16-1 – WRITER_RES PARAMETERS	54
FIGURE 16-2 – WRITER_RES EXAMPLE PRINTOUT	
FIGURE 18-1 – ISI2010 DIAGNOSTICS MENU	
FIGURE 18-2 – HALL-EFFECT CARTRIDGE	61
FIGURE 18-3 – QUAD-POLE MAGNET CALIBRATION ADAPTOR	62
Every 19 4 CANGO GETTE PROPE	62

1 Introduction

The Relative Inductance Analyzer utilizes high resolution inductance measurement to characterize the write head statically. The writer can be analyzed by applying programmable current, magnetic field and magnetic field angle. The principle of the RIA measurement suite is characterization of the magnetic part of write head inductance and changes of inductance while applying specific combinations of external multidirectional magnetic fields and DC write currents. The system includes the RIA module, 4-pole magnet and QST-2002 system.

The QST-2002 system performs standard measurements on the read head, including transfer curve, resistance and noise. Typically on QST2002 writer is used for stressing the read/write head. QST2002 can enable DC or high frequency writing for any duration of time. For RIA measurements, the writer connection from the cartridge is diverted to the RIA module, which is responsible for resistance and inductance measurements.

The RIA module is responsible for supplying the write current and measuring inductance of the writer. This module is connected to the computer via USB port. In HGA configuration, the module has a satellite daughter board that is installed on the 2xHGA Gen2 base. In Bar/Wafer configuration, the RIA module connects to the probe card directly (special configuration may be needed – see Appendix C).

The Quad-pole magnet option includes the magnet, the longitudinal coil power supply QMS-1050B, and the QPS splitter module. The option can change the field angle from 0 (transverse) to 90 (longitudinal), to 180 degrees (opposite transverse).



Figure 1-1 - Tester Footprint

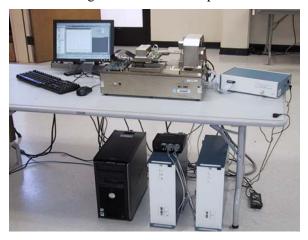


Figure 1-2 - Complete System

The option includes complete test suite of software, including:

- Quasi97 field proven test environment, that includes logging, grading, production mode etc.
- RIA-2008 module contains the collection of tests for Quasi97 software
- QPS Splitter module for manually setting and rotating the field
- RIA module for manual inductance measurement

The system is running Windows XP. The computer communicates to all devices on the tester through the USB interface and serial port interface.

Bar/Wafer Level: The option is also available for Bar configuration, on high frequency FMR option or low frequency probe card. When using RIA with 2xBar Gen3 LF (standard) probe cards the capacitors C38, C39, C42, C43, C46, C47, C50, C51 will need to be removed. This will disable the feature 'MR Clamp During Write'.

On wafer LF probe card (FAB 114730), capacitors C31, C50, C42, C43 should be removed. For RIA usage the probe card should only use 2pt probing for WR connection.

1.1 Related Documentation

This manual concentrates on the RIA option, and the tests it introduces. It can be used as a reference to look up the test algorithms, meaning of test parameters and test results. In addition to this, the following literature is recommended:

Quasi97 Software User's Manual	Contains detailed description of all menus in Quasi97 software, along with procedures on how to set up test parameters, log data, and run the QST in production and engineering modes.
QST External Modules User's Manual	Description of additional tests provided with the QST and Quasi97 software.
RIA Measurements	A comprehensive guide on how to interpret results from various tests. See Appendix A.
RIA FAQ	Common questions and answers about RIA system
Configuring BlazerX6 Options BlazerX6 User's Manual Supplement	If RIA is used on Blazer, refer to this manual on how to set it up.

2 Installation


2.1 Requirements

- 115VAC +/- 9%, 50-60Hz, Single Phase
- 11.5A peak current, 7A RMS
- The tester can only run on Windows XP. This is installed on the PC, but if the PC is provided by the customer this requirement must be taken care of.

RIA is powered through an external power supply (included), while QPS splitter option uses only power provided through USB. QMS-1050B also requires separate power. Complete system uses 5AC outlets (computer, monitor, QPS-1050, QMS-1050B, RIA-2008) and 5USB ports on the computer (keyboard, mouse, QST-2002, RIA-2008, QPS Splitter).

RIA-2008 is considered an add-on, QST-2002 and other hardware that this option will be installed with may have additional requirements. Refer to the documentation provided with that equipment for more information. The system is designed to be assembled on a desk.

Nominal dimensions:

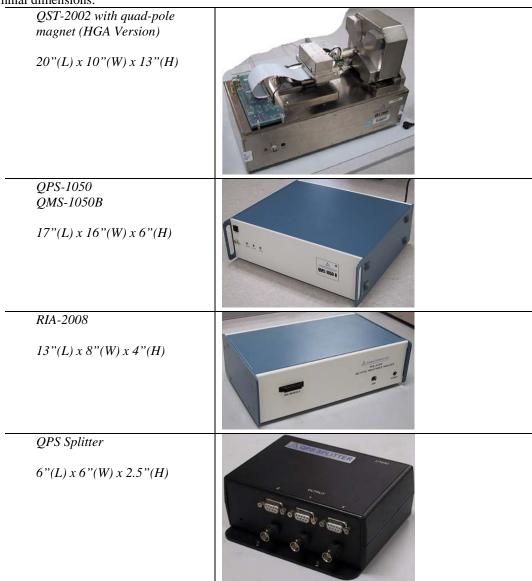

The magnet does not require cooling. The QPS-1050, QMS-1050B and QST-2002 have slots on the bottom for air intake, which should not be blocked. RIA and QPS Splitter box do not require any cooling.

2.2 Arrival Checklist

The RIA System is an add-on, so the items included in the shipment may differ from the list below. The following list is a guide of what items should be present in order for the RIA system to work properly:

- 1) QST-2002 Electronics
 - a. USB Cable Type A (flat)
 - b. M-F 14-pin Round Cable
 - c. BNC Field Control Cable
 - d. M-M DB9 Cable
- 2) QPS-1050 Power Supply
 - a. AC Power Cable
 - b. 9pin round to 2-pin flat Transverse Coil Cable
- 3) QMS-1050B Magnet Power Supply
 - a. AC Power Cable
 - b. BNC Field Control Cable (transverse field)
 - c. M-M DB9 Cable (transverse field)
 - d. BNC Field Control Cable (longitudinal field)
 - e. M-M DB9 Cable (longitudinal field)
 - f. 9pin round to 3-pin flat Longitudinal Coil Cable
- 4) QPS Splitter
 - a. USB Cable Type B (square)
- 5) RIA-2008 Controller
 - a. USB Cable Type B (square)
 - b. 40-pin Ribbon cable
- 6) RIA Module
- 7) Quad-pole Magnet

2.3 Connections

OST-2002	_		_		_
	$^{\prime}$	СТ	7	α	\sim
		. T	- //		1 /.

2002	
USB	To computer (digital IO)
14-pin round	To QPS-1050 (DC power for QST-2002)
Air Inlet	To compressed air inlet (for pneumatic actuator)
BNC (Field 1)	To QPS Splitter Input BNC (field output control)
DB9	To QPS Splitter Input DB9 (QPS communication)
050	
3pin AC Power	To 115VAC outlet
14-pin round	To QST-2002 (DC power for QST-2002)
9-pin round	To quad-pole magnet 2-pin Female connector for Transverse coils
BNC	To QPS Splitter Output BNC X (field output control)
DB9	To QPS Splitter Output DB9 X (QPS communication)
1050B	
3pin AC Power	To 115VAC outlet
9-pin round	To quad-pole magnet 2-pin Male connector for Longitudinal coils
BNC	To QPS Splitter Output BNC Y (field output control)
DB9	To QPS Splitter Output DB9 Y (QPS communication)
plitter	
USB	To computer (digital IO)
DC Power Inlet	No Connect
Input BNC	To QST-2002 Field 1 output
	USB 14-pin round Air Inlet BNC (Field 1) DB9 050 3pin AC Power 14-pin round 9-pin round BNC DB9 1050B 3pin AC Power 9-pin round BNC DB9 plitter USB DC Power Inlet

-	Input DB9	To QST-2002 DB9
-	Output BNC X	To QPS-1050 BNC
-	Output DB9 X	To QPS-1050 DB9
-	Output BNC Y	To QMS-1050B BNC
-	Output DB9 Y	To QMS-1050B DB9
-	Output BNC Z	No Connect
-	Output DB9 Z	No Connect
RIA	Controller	
	DC Power Inlet	To 48V power supply (included)
-	USB	To Computer (digital IO)
-	40pin Ribbon	To RIA Module, mounted on 2xHGA Cartridge
RIA	Module	
	40pin Ribbon	To RIA Controller
-	SMA	To 2xHGA Cartridge
Quad	l-pole Magnet	
_	2-pin Female	To QPS-1050 9-pin round connector
-	2-pin Male	To QMS-1050B 9-pin round connector

2.4 Connection Diagram

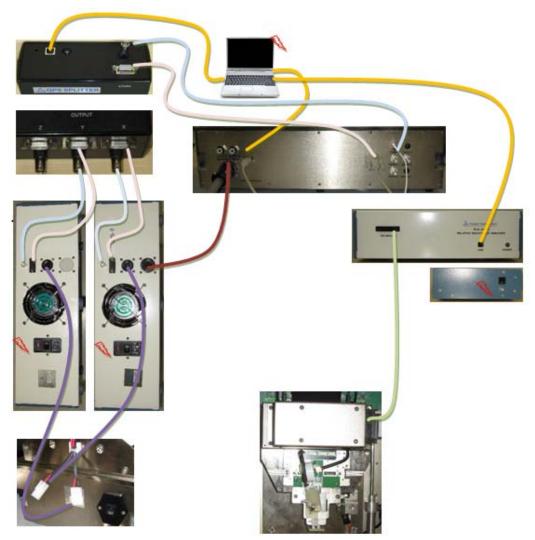


Figure 2-1 – RIA System Connections

2.5 Running 1st Time


- 1) Turn ON the PC, monitor.
- 2) Check that the operating system boots up with no problems.
- 3) Turn ON the QPS-1050, ensure that the Power LED is ON.
- 4) Turn ON the QMS-1050B, ensure that the Power LED is ON.
- 5) Turn ON the QST-2002, ensure that the LED on the front panel is ON.
- 6) Turn ON the RIA module. Ensure that the LED on the front panel is ON.
- 7) Check the LED in the back of the QPS Splitter box (next to USB port) is on.
- 8) Start Quasi97, select a setup file.
- 9) In the system menu select 2xHGA G2.
- 10) In the Add-Ins→Available Modules, add item "RIA-2008.Application".
- 11) In the Add-Ins→Selected Modules, add a new item and selection "RIA-2008.Application". Close the dialog box. At this point the software should detect RIA module and the QPS Splitter option.
- 12) In the System menu, change the maximum field to 3500 Oe.
- 13) The RIA system is single channel, even though the cartridge can have two HGA connector boards installed, only one of them can be connected to the RIA Module. To avoid confusion it may make sense to disable the other channel in the Tools→Options menu.
 - Note: You may need to repeat steps 11, 12 and 13 every time you create a new setup file.
- 14) Click START in Quasi97. Add an instance of LSATF test and run it. This will check the that the hardware is operating properly. The outcome of the test will depend on the head installed, so at this step it only matters if there are any errors. Check the Active LED on the QPS-1050 it should turn on for a short time and then go off before the test is over.
- 15) Change the Field Angle parameter in LSATF test to 90 degrees and run the test. Now the Active LED on the QMS-1050B should turn on and off.
- 16) Mount a real head on the HGA cartridge.
- 17) Run Transverse Test with default parameters check amplitude and resistance reading.
- 18) Run SMAN test; check that the average noise amplitude is higher than 30uV. The actual noise level will be higher and will depend on the head. If the noise is lower, then some connection is missing.
- 19) In Writer Resistance test, set the current to 40mA and run the test. The test should show correct writer resistance.

Once this checklist is complete the tester is operational and is ready for use. If there are any problem, review the connections or contact ISI support.


2.6 Installing RIA Upgrade


If RIA upgrade was ordered, then user will have to install additional components before the system can be used. This is not required is the complete RIA system was ordered.

1. Remove the old magnet from QST-2002 baseplate, by removing the 4 screws on each side of the magnet.

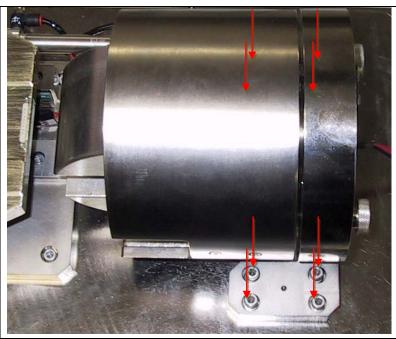


- 2. Put on the new magnet.
- 3. The quad-pole magnet is mounted by 4 screws (2 on each side). Use the outside holes for this. To install the magnet insert one pair of screws first, then shift the magnet to the back of the tester and install the second pair. Use the short shoulder wrench supplied with the tester.
- 4. Push the magnet towards the tooling and tighten the screws lightly. The Y position of the magnet will depend on the type of cartridge installed (UP or DOWN).

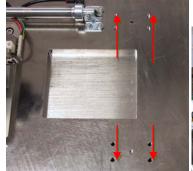


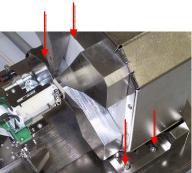


5. Remove the 2xHGA G2 tooling from the QST-2002.

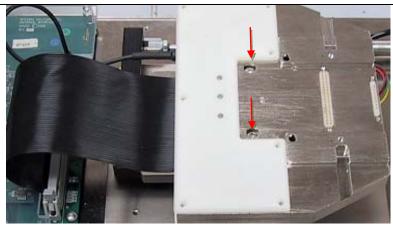


6. Install the quad-pole tooling adapter on the baseplate.

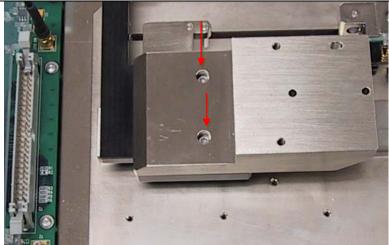


- 7. Substitute the 50pin ribbon cable with the longer one supplied in the upgrade kit
- supplied in the upgrade kit.
 8. Install the 2xHGA G2 tooling back on QST.
- 9. Remove the white pomalux cover from the 2xHGA tooling.

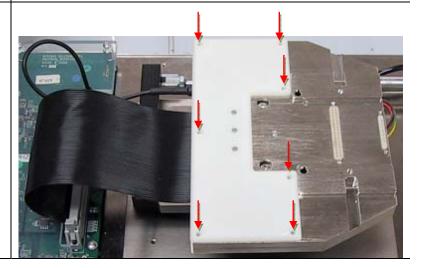


- 10. Install the new cartridge onto the 2xHGA base
- 11. Connect the SMA cable from RIA Module to the HGA Cartridge (screw on the connector, until tight).

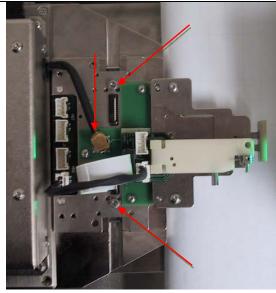


12. Install the RIA module onto the 2xHGA board. The 40pin ribbon connector should point to the back of the QST-2002.

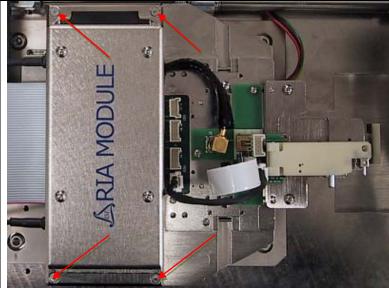


- 13. Loosen the hardstop (refer to QST-2002 manual for hardstop adjustment)
- 14. Move the cartridge all the way towards the magnet. The cartridge should be as close as possible to the magnet but not touching the poles.
- 15. Tighten the hardstop at this position.

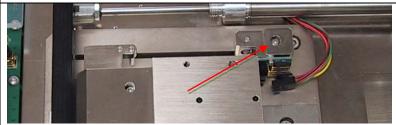

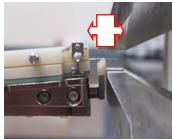

- 16. Adjust the position of the magnet, so that the head is in the center spot between the 4 poles.
- 17. Connect the RIA module to the RIA controller box, using a 40pin ribbon cable supplied. Note that the RIA controller has to be off, plugging it in while the power is on may result in equipment damage.

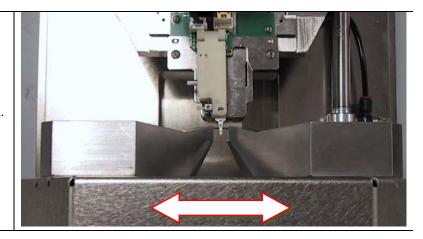

3 Tester Basics

In order to turn on the RIA system, all of its components must be powered on, including RIA Controller, QMS-1050B, QPS-1050, QST-2002. All of those and the QPS Splitter modules have an LED indicating of whether the power is on.

The system consists of three functional components. The first, QST-2002, is test electronics module, that is responsible for supplying reader bias current, measuring reader resistance, amplitude, noise characteristics and so on. The QST-2002 needs QPS-1050 to work and the transverse field magnet. The magnet can be connected directly to the QPS-1050 or through the QPS Splitter box. Originally QST-2002 is connected to the writer to apply write stress and measure writer resistance, but it could not measure writer inductance.

The second component is the RIA module, which is responsible for measuring inductance. The RIA component connects to the specially modified cartridge via SMA cable. There is a separate software module that controls it, which is automatically loaded with RIA-2008 test suites, and is available through Add-Ins→Peripherals menu in Quasi97.

Third component is the quad-pole magnet, which includes the second magnet power supply and the QPS Splitter module. The QPS Splitter is responsible for setting the field angle, but it can also set fixed (static) fields. The QPS Splitter module is controlled by QPS Splitter.exe application. This application is automatically loaded with RIA-2008 test suite.

The main software module to run the tester is Quasi97. In order to enable RIA capability, user must add "RIA-2008.Application" to the Add-Ins→Selected Modules. This adds a suite of writer tests to the setup file, as well as the field angle and writer specific stress options. Adding "RIA-2008.Application" is required for every new setup file

The system also uses 2xHGA Gen2 base for standard reader measurement, so System Tester Configuration must be set to 2xHGA G2. The maximum field setting in the System menu must be set higher to about 3000-3500 Oe in order for the tests to work.


Add-Ins Peripherals gives you access to RIA controller and QPS Splitter application menu. These menus are primarily for diagnostics, but can be used to manually set field vectors, calibrate inductance values and so on. This user's manual contains two sections describing these options in more detail.

User can also start QPS Splitter.exe application on its own - to control the field and angle outside of Quasi97. The "QPS Splitter.Application" can also be added to the Quasi97→Add-Ins→Selected Modules to enable field angle stress without activating RIA software. Without RIA-2008.Application module or QPS Splitter.Application modules, the quad-pole magnet can still be used and will apply transverse field.

RIA system is used to characterize the writer, and the a few QST-2002 capabilities were removed due to electronics hardware design. When working with RIA, the high frequency tests, such as SMAN, Popcorn and others are not functional. User can still run tests utilizing the low frequency channel, such as Transverse and Quasi-Static test. At any time the system can be converted back to restore full reader measurement functionality.

RIA module can be connected only to one channel at a time. User has a choice of installing UP or DOWN HGA connector board. For one type of board, the reader will need to be connected to channel 0 (closest to the front of the machine) and for the other type – reader will be connected to channel 1. Both 3pin cable and ribbon cable need to connect to the same channel. The RIA Module SMA cable stays in the same place. Refer to the figure below for details.

Warning! The 4pin writer cable on the 2xHGA cartridge should be disconnected for all RIA tests. 2xHGA writer preamp chip, if connected to the writer, will interfere with inductance measurement.

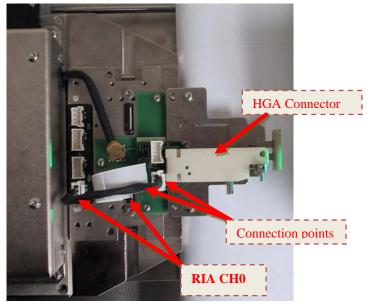

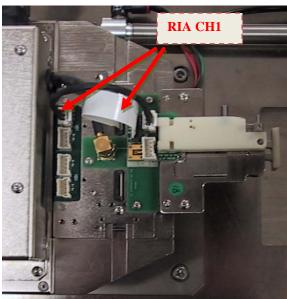


Figure 3-1 – RIA configuration (CH0 vs CH1)

3.1 Starting Software

Full (Typical) installation of Quasi97 is required for the tester to work. In addition to Quasi97, the RIA-2008 module should be installed. The RIA-2008 software requires runtime license, refer to runtime license section for more details.

To start the software, double click on Quasi97 icon on the desktop. Next step is to select a setup file from the list (click "Select Setup" button). If there is no setup, refer to Quasi97 User's manual on how to create or add a setup to the list. After opening a setup file, check the system menu. In the setup file, the tester configuration should be set to "2xBAR Gen2 / 2xHGA Gen2". If the setup file is adapted from other tester configuration, then change tester configuration to "2xHGA Gen2".

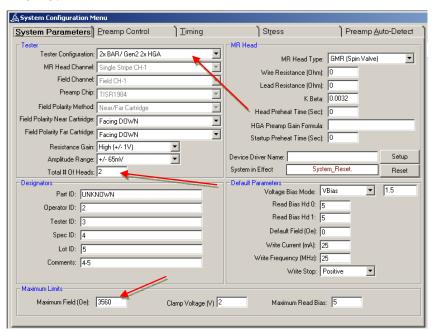


Figure 3-2 - System Menu Selection

The next step is to add RIA2008.Application to the setup file. This will add a group of writer related tests to the test tree.

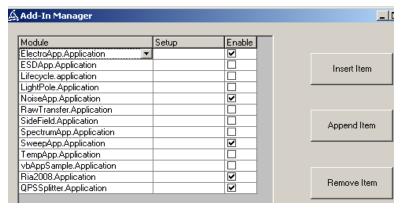


Figure 3-3 – Add-Ins → Selected Modules

The Total # of Heads should be set to 2 in the system menu. Also the maximum field might need to be changed to about 3000 Oe. The actual maximum field that the system can go to depends on the magnet. To determine that value, go to Calibration menu, and check field gain. FieldGain*10 is the maximum field in Oe that the system can support.

3.2 Installing HGAs

Once the hardware detection is complete and setup file is open, it is now safe install HGAs on the tester. The cartridge cannot be removed from the 2xHGA base, so an HGA has while cartridge is on the tester. Slide the 2xHGA board away from the magnet until it hits hard stop. If the air is connected to QST-2002, then simply click "STOP" and let actuator move the tooling away from the magnet. At this point the bias is turned off and it is safe to open the HGA connector lid and put in the new head.

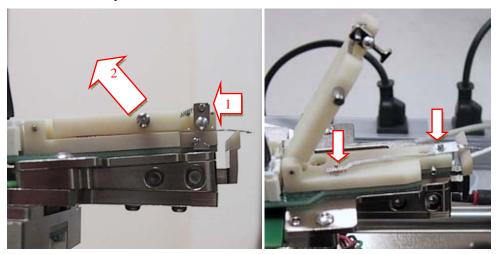


Figure 3-4 – Installing an HGA

For easier placement, the HGA should be placed on the pole and then pivot the tale to the pogo-pins. After placing the HGA, close the lid (pull the locking lever back again to close the lid). The cartridge should be installed while the bias is off. Click START button in Quasi97 to turn on the read bias to the head. Note that the write bias will be off by default until user runs the test.

User has to select appropriate channel in order to get valid results. The picture above shows HGA connector installed on CH0. CH1 position is the furthest from the front of the machine. To choose a different head, simply switch the head selector on the lower right corner of the screen to a different number.



Figure 3-5 – Installing an HGA

If the software cannot select one of the heads, then the head is disabled in the options menu (under Heads). It could be disabled by the operator or by the HGA Reliability driver. The driver can disable heads if it does not detect one of the boards. The channel must be enabled in the Tools \rightarrow Options menu.

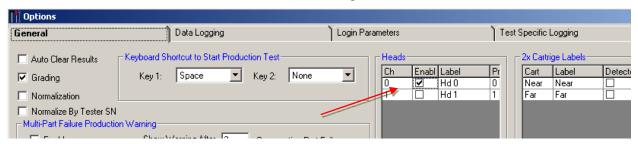


Figure 3-6 - Head Selection

3.3 Running Tests

To run the test, click "START" button. Select the head that you would like to run the test on. Select the test from the button toolbar or the test tree (refer to Quasi97 manual for more information), then click Run Test. The test will run and show the results on its menu. You can select a different test and click "Run Test" again. The required condition to run a test is that the bias is turned on ("START" button is pressed).

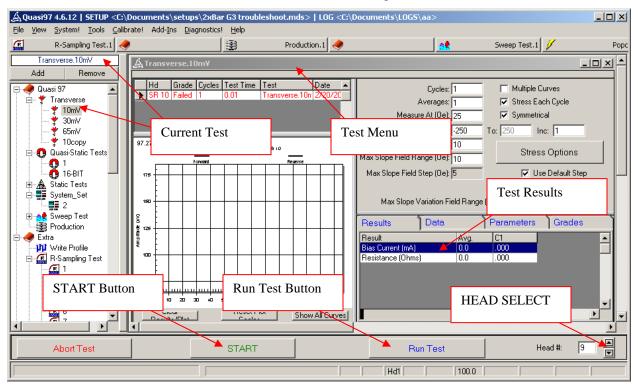


Figure 3-7 – Running the Tests

To log results, open the log file (File→Open Log File) and set up the data logging options. Statistics, Raw Data, Plots are some of the options available for logging. You can run multiple tests at once, by using the Production Test. The production test will run a sequence of tests defined on the production menu on each enabled channel. Refer to "External Tests Users Manual" for more information on the test details.

3.4 Writer Specific Tests

The RIA-2008 adds more tests to the test tree. The tests include LSAT, LSATF, YHDFT, YDT, MMT etc. These modules are described in more details in the sections to follow.

All writer tests, except for Writer_Res, require measuring writer inductance at high magnetic field, where the writer inductance is saturated. All inductance measurements will be normalized to this value (LSATOffset). This is achieved by using parameters from "RIA-2008 Setup" module. Unlike other tests, "RIA-2008 Setup" cannot have multiple setups, and is automatically added to adaptive parameters for every new instance of the test. Every RIA-2008 test measures saturation value at the beginning and then uses this value to calculate inductance results. In the production sequence, the LSATOffset will be calculated only once for the sequence of tests.

All of RIA-2008 tests support adaptive parameters, and sweep test. User can change one or more of its parameters prior to running, based on some formula from the user. For example:

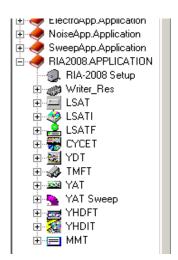


Figure 3-8 – Add-Ins

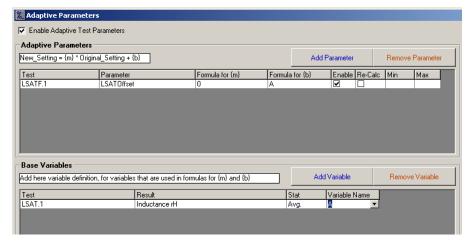


Figure 3-9 – Adaptive Parameters

Many standard Quasi97 tests will show "Write Current", "Write Enable" or "Write DC (mS)" and so on. These writer related stress options and parameters are not used. For all RIA measurements, writer is disconnected from the QST-2002 and connected to the RIA module. Writer resistance can be measured only through the Writer_Res test, available in RIA-2008 software.

3.5 RIA-2008 Custom Stress

RIA-2008 module also adds a few stress options that can be used to control the quad-pole magnet and the writer during any test. These stress options allow to enabling write current output, setting write current, setting field angle, setting fixed field on one of the axis.

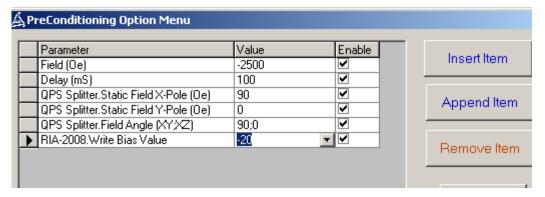


Figure 3-10 - RIA-2008 Custom Stress

Field Control.Field Angle(XY;XZ)

This stress option allows to set field vector angle on the quad-pole magnet. The stress expects two values, separated by semicolon. The first is XY angle, which is the angle in transverse-longitudinal plane. Valid settings include -180 to +180 degrees. For example "90;0" will change to longitudinal field output.

The XZ angle is reserved for future use and should be set to 0. The Field Angle stress will remain for the duration of the test, unless the test has field angle as a parameter.

Field Control.Static Field X-Pole (Oe)

This sets the transverse coil set to a fixed field output. Whether the setting will be applied or not, depends on "static field overrides angle" setting in the QPS Splitter application and is described in more detail there. X-pole is the transverse output, Y-pole is the longitudinal and the Z-pole is not supported. The static field can be set to any value from negative to positive max field.

RIA-2008.Write Bias Enable

Use this stress to turn on write current to the writer. Valid settings include 0 – to turn off write current, and 1 – to turn on write current.

RIA-2008.Write Bias Value

Use this stress to change the write current value. If the write current is turned off (write bias enable = 0), this stress will not do anything. Write current can be positive, negative or zero. The maximum value for the write current is 125mA.

3.6 Runtime License

The RIA-2008 software needs a runtime license to operate. The license is stored in the RIA-2008.lic file, located in the c:\program files\integral solutions int'l\RIA-2008. The license is locked to the serial number of the RIA controller module and RIA-2008 software version. So each RIA system will have its own .lic file, and some software upgrades will also require purchasing a new run time license. Once the runtime license is purchased, it does not expire for that particular RIA-2008 version and RIA system.

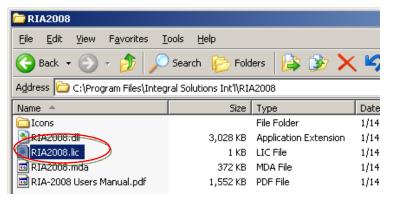


Figure 3-11 – RIA-2008 Runtime License

To purchase the run-time license, you need to contact ISI sales, and provide the application name ("RIA-2008"), the version of the application (for example "1.1.8"), and the serial number of the RIA module. The version of the application can be found in the Windows→Control panel→add/remove modules→RIA-2008. Another way is to right click "RIA-2008.dll" file, then click properties and check the version number.

The serial number of the RIA module is outside of the box, next to the power connector. The serial number can also be found when opening the ISI2010 Diagnostics menu. To do this, select Quasi97 \rightarrow Add-ins \rightarrow Peripherals. The following menu will be shows, with the serial number of the RIA circled:



Figure 3-12 - RIA2008 Serial Number

This information can be submitted to ISI, and ISI will send out the RIA-2008.lic file. At that point user should overwrite the file with the new one in c:\program files\integral solutions int'l\RIA-2008. Note that the older RIA-2008.lic file should be moved to a safe location in case there is a need to downgrade to previous version of software. Obtaining a two-week evaluation license is possible. Contact ISI sales for more information.



Figure 3-13 - RIA2008 Evaluation

3.7 Running RIA on BlazerX6 and Wafer

The option is also available for Bar configuration, on high frequency FMR option or low frequency probe card. When using RIA with 2xBar Gen3 LF (standard) probe cards the capacitors C38, C39, C42, C43, C46, C47, C50, C51 will need to be removed. This will disable the feature 'MR Clamp During Write'.

On wafer LF probe card (FAB 114730), capacitors C31, C50, C42, C43 should be removed.

For RIA usage the probe card should only use 2pt probing for WR connection.

There are two modes of running the RIA on Blazer: one using the normal test location with either the HF probe card or LF probe card; and the second method is using the stress location or ESD bridge. The first method is straight forward – conventional probe card is used, but instead of the preamp chip, the RIA is connected to the writer probes. The LF probe card set up requires a special writer intermediate board with SMC connectors, while HF probe card already has SMC connector that can be used by RIA. Although in the later case user must ensure that the HF probe card is aligned to writer pads and not the reader – alignment is not automatic.

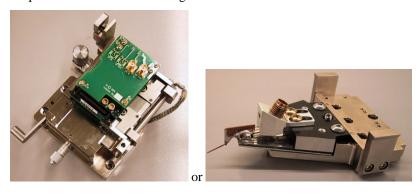


Figure 3-14 – RIA on Blazer

The second method requires installation of the second probe card just above the trays. See "Aligning Stress Probe card" in BlazerX5-X6 user's manual for more details on how to set this up. In this case reader testing is not compromised, because standard 2 channel read/write probe card can be used. However, the test set up is more complicated, where the user has to align the stress probe card and in Quasi97 enable "Alternative Test Site".

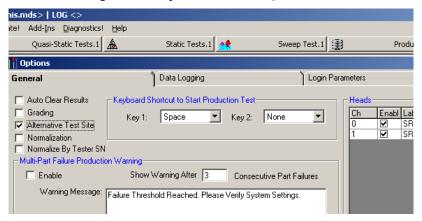


Figure 3-15 – Alternative Test Site

With this setting, production test will have two test sequences, for test site and stress site. User should add RIA tests to the alternative test site. When running production test, the system will go through all heads on the bar at the test site and will then switch to stress site, where it will run RIA tests on all the heads that have passed grading so far.

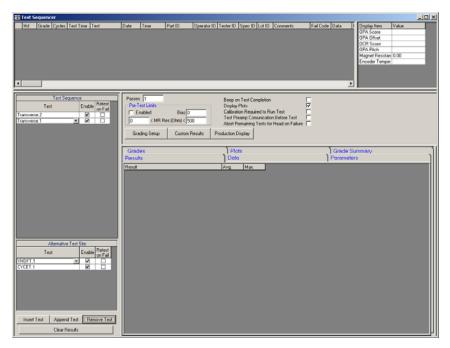


Figure 3-16 – RIA on BlazerX5 Production Test

In engineering mode, through Barcont, user can switch to stress location and then select heads through Quasi97 and run RIA tests on each head individually.

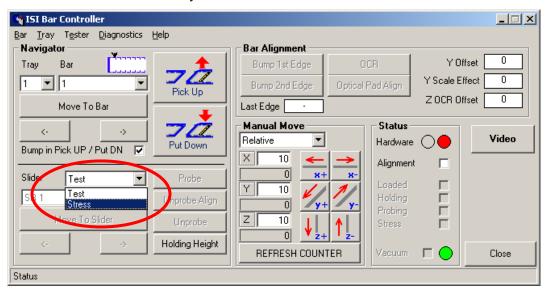


Figure 3-17 - RIA and Barcont

In wafer application, operator should use special intermediate board assembly, with SMC connector going to writer pogo-pins. The RIA should be connected to the SMC connector on the intermediate board and RIA2008.application should be enabled in Quasi97 Add-ins Selected Modules. User would then be able to align the probes to the writer pads and commence testing as usual.

4 RIA-2008 Setup

RIA-2008 Setup contains the setup parameters for measuring baseline inductance of the head. The purpose of this test is to measure raw inductance of the write head while it is saturated. It cannot run on its own, but other RIA-2008 tests will use it to calculate the LSATOffset parameter. LSATF and other test will subtract the LSATOffset from the inductance value before reporting the results.

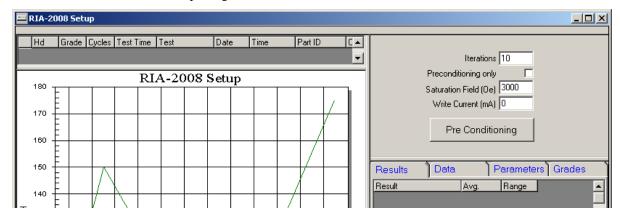


Figure 4-1 - RIA-2008 Setup

In the background, the RIA-2008 Setup is added as a variable to the "Dependent Parameters" in Quasi97, which works almost the same way as Adaptive Parameters; but is not visible to user and cannot be turned off by the user. So every time user runs RIA-2008 test, Quasi97 will measure LSATOffset by setting write current, field and number of iterations as they are defined in this menu. In production sequence the LSATOffset is measured only once.

4.1 Setup Parameters

Iterations	The number of measurements to take to calculate AVG inductance. Minimum is 1 and maximum is 1000, with the default set to 10. Each measurement will be shown under the DATA tab, and on the plot. The LSATOffset will be the average of those measurements.
Saturation Field (Oe)	The field in Oe at which all tests should measure the saturated writer inductance. This is limited to maximum field, specified in the system menu. Writer inductance changes with external field, but the response is not linear. At higher fields the response (inductance vs field) is almost flat – this is where the head is saturated. This field value should be used to for LSATOffset calculation.
Write Current (mA)	The write current to be applied during the test. Typically this is not necessary, the field alone is enough to get the saturation value.
Preconditioning Only	This option allows user to define more complex stress and use that instead of Saturation field and Write Current parameters. If this option is enabled, the preconditioning will run first, then the test will measure inductance using specified number of iterations, then the test will restore field and write current parameters to whatever it was before the test.

4.2 Results

The test generates Inductance rH result, which is then used as LSATOffset in other test.		
Inductance rH	Inductance value, which should be similar to nH.	

5 LSAT – Inductance Saturation Test

LSAT simply presets field and write current and measures inductance of the head several times. Then statistics are calculated from raw data and added to the results. Each data point in this test is relative inductance value – one compared to the inductance of the saturated writer. For example RIA-2008 Setup defines 3000 Oe as the saturation field for inductance measurement (LSATOffset). If LSAT test measures at 1000 Oe field, each data point in the LSAT test will be the difference in inductance value between 1000Oe field and 3000Oe field.

If LSAT test is set up to measure to 3000Oe, then the results will be centered around 0 rH. This is because in our example, the saturation value is also measured at 3000 Oe. This test maybe useful for sweep test.

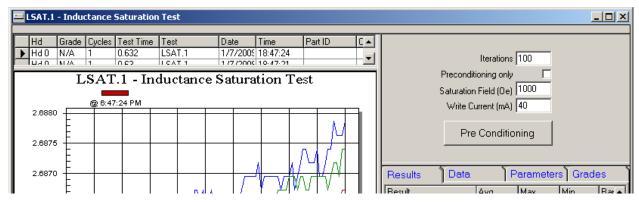


Figure 5-1 - LSAT Test

This test is multi-setup capable, which means that user can create more than one setup of this test in one MDS file. LSAT also does not clear results automatically, which allows user to see different runs superimposed on the plot.

5.1 Setup Parameters

Iterations	The number of measurements to take to calculate AVG inductance. Minimum is 1 and maximum is 1000, with the default set to 10. Each measurement will be shown under the DATA tab, and on the plot.
Field (Oe)	The field in Oe at which the test should measure the writer inductance. This is limited to maximum field, specified in the system menu. Writer inductance changes with external field, but the response is not linear. At higher fields the response (inductance vs field) is almost flat – this is where the head is saturated. This field value should be used to for LSATOffset calculation.
Write Current (mA)	The write current to be applied during the test. Typically this is not necessary, the field alone is enough to get the saturation value. However, this test is also the place where user can measure writer resistance. If write current value is set to 0, then the write resistance result will be invalid.
Preconditioning Only	This option allows user to define more complex stress and use that instead of Saturation field and Write Current parameters. If this option is enabled, the preconditioning will run first, then the test will measure inductance using specified number of iterations, then the test will restore field and write current parameters to whatever it was before the test.

5.2 Results

Inductance rH	The change in inductance from the value measured in with RIA-
	2008 Setup parameters.

5.3 Example Printout

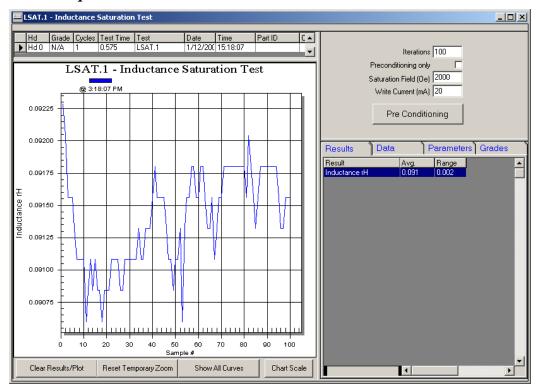


Figure 5-2 – LSAT Example

6 LSATI – Inductance Saturation I-Bias Test

The LSATI is Inductance Saturation I-Bias Test. The test sweeps write current (hence the I in the name) and measures inductance at each write current value. Before displaying the results, the test subtracts the LSATOffset from each data point, which is inductance measured with "RIA-2008 Setup" parameters.

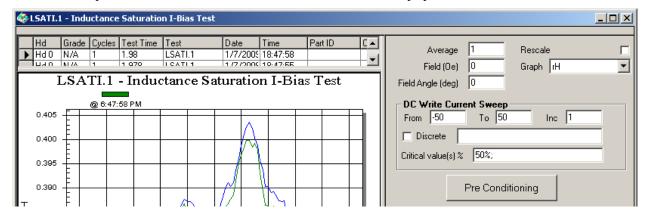


Figure 6-1 – LSATI Parameters

Write current can be negative, positive and zero. The sweep pattern can be set by specifying from, to and increment, or by setting discrete values. The sweep pattern can go from negative to positive or back. The test can extract the write current where the inductance value reaches certain value. This is called critical value, and the threshold or thresholds are user-defined. For example the test can return the write current where inductance is 50%. To do this, the test will find the maximum and minimum inductances measured during the test, scale the difference as 100% and will find the write current where inductance is closest to 50%.

More than one critical value can be specified, but the need to be separated by semicolon. If the critical value number has "%" sign next to it, then the software will determine the value to look for first (using min and max inductance). If there is no percent sign, then the software will look for the actual inductance value. For example 0.5 would indicate 0.5rH to the software, while 30% would indicate (Lmin+0.3*(Lmax-Lmin)).

6.1 Setup Parameters

Average	This is how many measurements to take at each write current. Note that this parameter does not apply to LSATOffset calculation (extracted from LSATOffset).
Field (Oe)	The DC field to be applied during the whole test.
Field Angle (deg)	The angle of the field to be applied during the test. 0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).
Write Current From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter can not be set to 0mA.
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -50;-25;0;1;2;3;4;5;6;10;12;16.
	Avoid using the same write current twice. The software will allow it and the data generated will be valid, but the plot may have extra lines in it.
Critical Value(s) %	Semicolon separated critical values. The values can be numeric, or a number followed by the "%" symbol. The difference is explain the introduction for this test.

Rescale	An option scale all results, considering minimum inductance measured during the test as 0 and maximum as 1.
Graph (rH)	This option allows to user to choose whether to plot the Slope or the Inductance. This has no effect on the statistical results or Data.

6.2 Results

Inductance rH	Relative Inductance value, which should be similar to nH. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. The rH in raw data is the relative inductance at each write current. Each data point is the delta between the inductance measured and the LSATOffset parameter.
rH Slope	The relative inductance slope. This is the statistical results from RH slope at each write current.
Critical Bias <#>	For each critical value, the test will add a "Critical Bias <#>" result. For example the first critical value will be "Critical Bias 1". The returned result will be in mA.
	The <#> does not depend on the critical value parameter, but on the placement in the string. For example for critical values "0.5;20%;", "Critical Bias 1" is the write current where rH=0.5; and "Critical Bias 2" is the write current where rH=20% of the range.

6.3 Example Printout

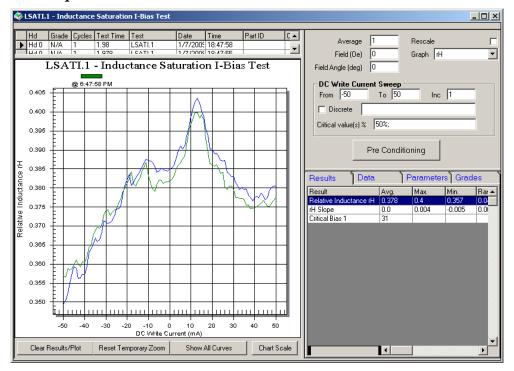


Figure 6-2 – LSATI Example Printout

7 LSATF – Inductance Saturation Field Test

The LSATF is Inductance Saturation Field Test. The test sweeps magnetic field and measures inductance at each field value. Before displaying the results, the test subtracts the LSATOffset from each data point, which is inductance measured with "RIA-2008 Setup" parameters.

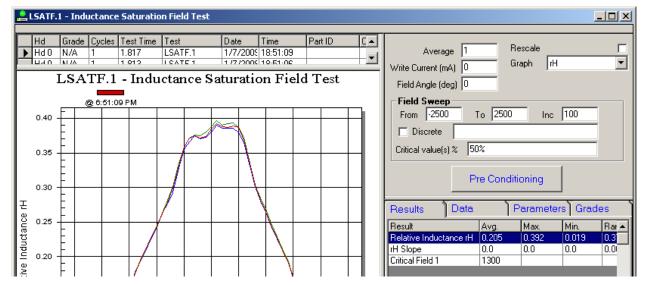


Figure 7-1 – LSATF Parameters

The field can be negative, positive and zero. The sweep pattern can be set by specifying from, to and increment, or by setting discrete values. The sweep pattern can go from negative to positive or back. The test can extract the field where the inductance value reaches certain value. This is called critical value, and the threshold or thresholds are user-defined. For example the test can return the field (Oe) where inductance reaches 50%. To do this, the test will find the maximum and minimum inductances measured during the test, scale the difference as 100% and will find the field where inductance was closest to 50%.

More than one critical value can be specified, but they need to be separated by semicolon. If the critical value number has "%" sign next to it, then the software will determine the value to look for first (using min and max inductance). If there is no percent sign, then the software will look for the actual inductance value. For example 0.5 would indicate 0.5rH to the software, while 30% would indicate (Lmin+0.3*(Lmax-Lmin)).

7.1 Setup Parameters

Average	This is how many measurements to take at each field. Note that this parameter does not apply to LSATOffset calculation (extracted from LSATOffset).
Write Current (mA)	The write current to be applied during the test. Note that the head may start to heat up with high enough current. The heating process is somewhat slow and as a result this may be interpreted as a change due to field. To avoid this, use preconditioning parameters to preset current and delay and allow the head to reach its operating temperature.
Field Angle (deg)	The angle of the field to be applied during the test. 0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).
Field From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter can not be set to 0Oe.

Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -2000;-2500;0;100;200;300;400;500;.
	Avoid using the same field twice. The software will allow it and the data generated will be valid, but the plot may have extra lines in it.
Critical Value(s) %	Semicolon separated critical values. The values can be numeric, or a number followed by the "%" symbol. The difference is explain the introduction for this test.
Rescale	An option to scale all results, considering minimum inductance measured during the test as 0 and maximum as 1.
Graph (rH)	This option allows to user to choose whether to plot the Slope or the Inductance. This has no effect on the statistical results or Data.

7.2 Results

Inductance rH	Relative Inductance value, which should be similar to nH. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. The rH in raw data is the relative inductance at each write current. Each data point is the delta between the inductance measured and the LSATOffset parameter.
rH Slope	The relative inductance slope. This is the statistical results from rH slope at each write current.
Critical Field <#>	For each critical value, the test will add a "Critical Field <#>" result. For example the first critical value will be "Critical Field 1". The returned result will be in Oe.
	The <#> does not depend on the critical value parameter, but on the placement in the string. For example for critical values "0.5;20%;", "Critical Field 1" is the field current where rH=0.5; and "Critical Field 2" is the magnetic field where rH is 20% of the range.

7.3 Example Printout

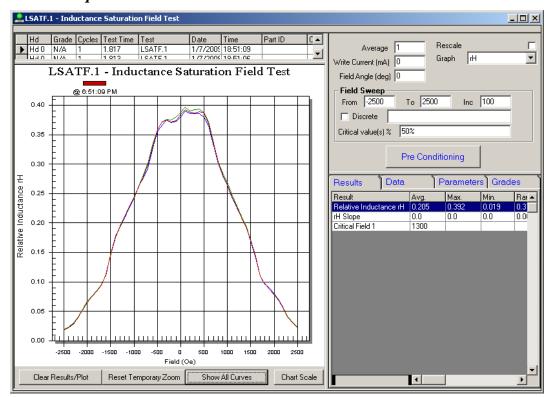


Figure 7-2 – LSATF Example Printout

8 CYCET – Coil-Yoke Coupling Efficiency Test

The CYCET test is a combination of LSATF and LSATI tests. The test sweeps transverse magnetic field and measures inductance at each field value. Then the test determines the field where the inductance value reached "Critical Value" threshold. Then the test sets that critical field and sweeps write current at that field, according to user setup. Before displaying the results, the test subtracts the LSATOffset from each data point, which is inductance measured with "RIA-2008 Setup" parameters.

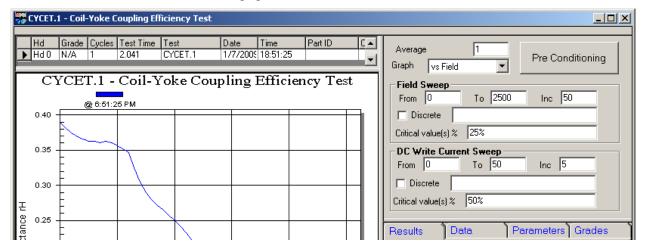


Figure 8-1 – CYCET Parameters

The sweep pattern for the field can be set by specifying from, to and increment, or by setting discrete values. The sweep pattern can go from negative to positive or back. The test can extract the field where the inductance value reaches critical value. The critical field value is set by user.

More than one critical value can be specified, but they need to be separated by semicolon. If the critical value number has "%" sign next to it, then the software will determine the value to look for first (using min and max inductance). If there is no percent sign, then the software will look for the actual inductance value. For example 0.5 would indicate 0.5rH to the software, while 30% would indicate (Lmin+0.3*(Lmax-Lmin)).

If there is more than one critical value in the field sweep, only the very first one in the list will be used to run the second stage of the test (write current sweep). However, all critical values will be found by the test and added as results "Critical Field <#>".

The write current sweep will occur at the "Critical Field 1" found by software. Write current sweep pattern can also be set by through from, to and increment; or by setting discrete values. The sweep pattern can go from negative to positive or back, the increment can remain positive all the time.

Write sweep critical values can also be set. These will be used to calculate Critical Bias <#> results. The critical value returned will be the closest point found on the curve, no matter if it occurred first or second. So if the one point is 40% and the second point is 48%, while critical value is at 45%, then the second point will be considered critical value at 45%. This is especially important to understand for cases where the waveform changes direction (not just the slope).

The test generates two sets of data: at 0mA write current and various fields; and at critical field but various write currents. Under the raw data tab, both of these will appear. To see the field sweep portion user can select "vs Field" in the "Graph" combo box. To see the write current sweep, user can select "vs Bias" in the "Graph" combo box. The Inductance statistical result shown under the "Results" tab, will be calculated only from the second set of data (write current sweep at critical field value).

8.1 Setup Parameters

-	
Average	This is how many measurements to take at each field (during the first
	stage of the test) and then at each write current (during the second
	stage of the test).

Graph vs Field / vs Bias	This option allows user to choose whether to plot the first stage of the test (field sweep) or the second stage (write current sweep). Note that this value is saved to the setup file, so even though this has no effect on raw data and statistics – it does have an impact on what kind of plot will be saved.
Field From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to 0Oe.
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -2000;-2500;0;100;200;300;400;500;.
	Avoid using the same field twice. The software will allow it and the data generated will be valid, but the plot may have extra lines in it.
Field Critical Value(s) %	Semicolon separated critical values. The values can be numeric, or a number followed by the "%" symbol.
	The second stage of the test (write current sweep), will be done at the Critical Field 1.
Write Current From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to 0mA. This controls the second stage of the test, after the critical field value is determined.
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -50;-25;0;1;2;3;4;5;6;10;12;16.
	Avoid using the same write current twice. The software will allow it and the data generated will be valid, but the plot may have extra lines in it.
Critical Value(s) %	Semicolon separated critical bias values. The values can be numeric, or a number followed by the "%" symbol.

8.2 Results

Inductance rH	Relative Inductance value, which should be similar to nH. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. The rH in raw data is the relative inductance at each write current. Each data point is the delta between the inductance measured and the LSATOffset parameter.
Critical Field <#>	For each critical field value, the test will add a "Critical Field <#>" result. For example the first critical value will be "Critical Field 1". The returned result will be in Oe.
	The <#> does not depend on the critical value parameter, but on the placement in the string. For example for critical values "0.5;20%;", "Critical Field 1" is the field current where rH=0.5; and "Critical Field 2" is the magnetic field where rH is 20% of the range.
Critical Bias <#>	For each critical write current value, the test will add a "Critical Bias <#>" result. For example the first critical value will be "Critical Bias 1". The returned result will be in mA.

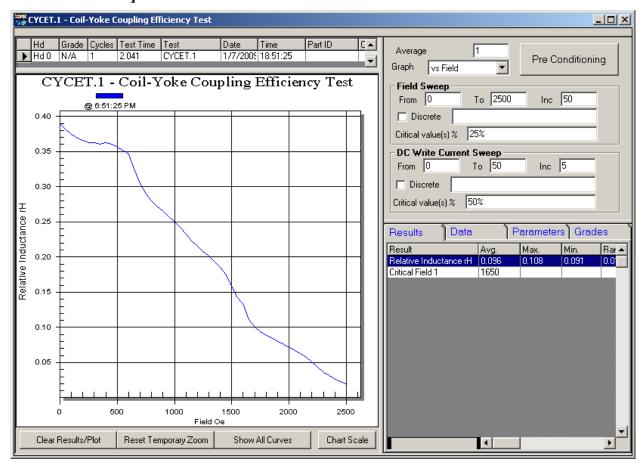


Figure 8-2 – CYCET Example Printout

9 YDT - Yoke Defect Test

The Yoke Defect Test is similar to LSATF test, but takes two curves: at Transverse and Longitudinal orientations. The test also shows the delta between the two curves, calculates statistics on the delta and shows it on the plot.

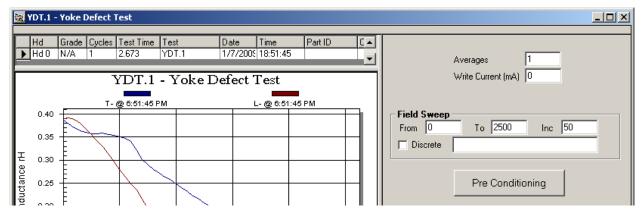


Figure 9-1 - YDT Parameters

The field can be negative, positive and zero. The sweep pattern can be set by specifying from, to and increment, or by setting discrete values. The sweep pattern can go from negative to positive or back, the increment can stay positive.

9.1 Setup Parameters

Average	This is how many measurements to take at each field.
Write Current (mA)	The write current to be applied during the test. Note that the head may start to heat up with high enough current. The heating process is somewhat slow and as a result this may be interpreted as a change due to field. To avoid this, use preconditioning parameters to preset current and delay and allow the head to reach its operating temperature.
Field From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to 0Oe.
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -2000;-2500;0;100;200;300;400;500;.
	Avoid using the same field twice. The software will allow it and the data generated will be valid, but the plot may have extra lines in it.

9.2 Results

field sweep. The rH in raw data is the relative inductance at each transverse field. Each data point is the delta between the inductance measured and the LSATOffset parameter.		
---	--	--

L-Inductance rH	Relative Inductance statistics measured while running longitudinal field sweep. The rH in raw data is the relative inductance at each longitudinal field. Each data point is the delta between the inductance measured and the LSATOffset parameter.
Delta-Inductance rH	At each raw data point, the delta between T-Inductance and L-Inductance is calculated and added as a third column (delta inductance). The statistical results from delta-inductance are added as Delta-Inductance rH result.
Hysteresis	Hysteresis is the area between transverse and longitudinal curves, calculated using Riemann sum method. The units are rH*Oe.

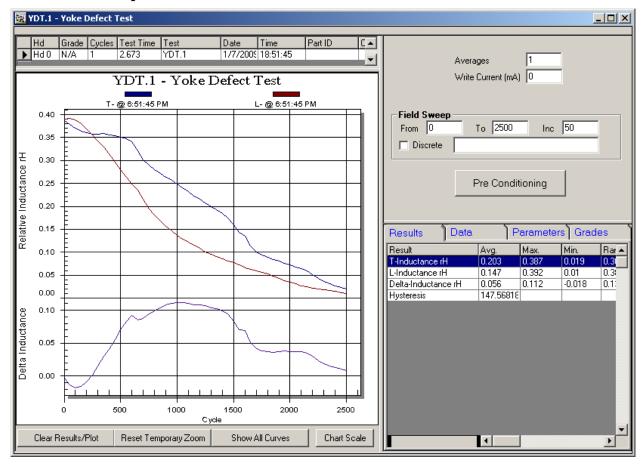


Figure 9-2 – YDT Example Printout

10 TMFT - Tilted Magnetic Field Test

The TMFT measures inductance at two user specified field angles. The write current, magnetic field, and the field angle can be specified in the test. The plot shows two points: positive and negative, for inductance measurement at positive angle and at negative angle.

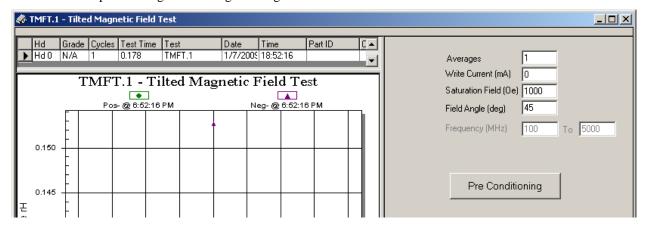


Figure 10-1 - TMFT Parameters

The frequency sweep is not supported by the RIA system, and these parameters cannot be enabled.

10.1 Setup Parameters

Average	This is how many measurements to take at each field. Note that this parameter does not apply to LSATOffset calculation (extracted from LSATOffset).
Write Current (mA)	The write current to be applied during the test.
Field Angle (deg)	The angle of the field to be applied during the test. 0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side). The test will apply +/- field angle. So if the value is 30, then one value will be measured at +30 degrees and another at -30degrees.
Saturation Field	This is the field magnitude to be used in the test.
(Oe)	

10.2 Results

Pos Tilt rH	Relative Inductance value at positive field angle, which should be similar to nH units. This point is a difference between the inductance measured at the positive field angle and the LSATOffset parameter measured with "RIA-2008 Setup" parameters.
Neg Tilt rH	Relative Inductance value at negative field angle, which should be similar to nH units. This point is a delta between the inductance measured at the negative field angle and the LSATOffset parameter measured with "RIA-2008 Setup" parameters.
Delta Tilt rH	The difference between Pos Tilt rH and Neg Tilt rH.

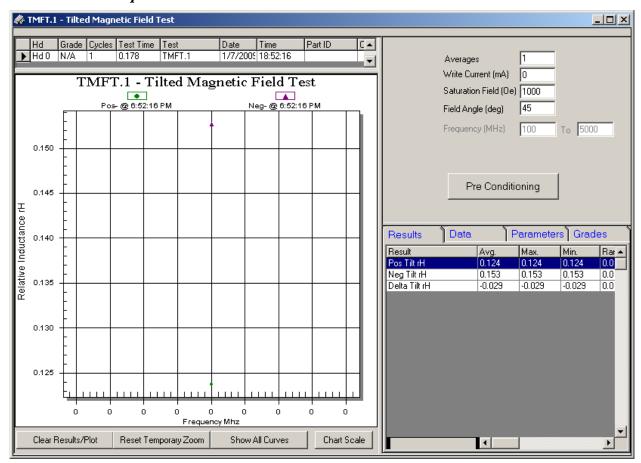


Figure 10-2 – TMFT Example Printout

11 YAT – Yoke Anisotropy Test

The YAT test rotates the field, while keeping the same field magnitude and measures inductance of the writer at each field angle. Before displaying the results, the test subtracts the LSATOffset from each data point, which is inductance measured with "RIA-2008 Setup" parameters.

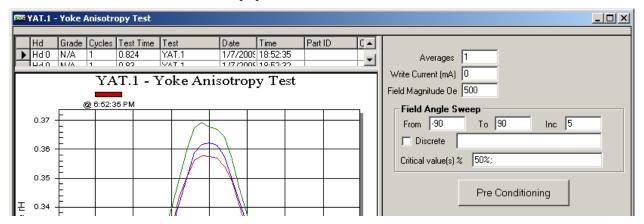


Figure 11-1 - YAT Parameters

The field angle can be negative, positive and zero. The sweep pattern can be set by specifying from, to and increment, or by setting discrete values. The sweep pattern can go from negative to positive or back. The test can extract the field angle where the inductance value reaches critical value. The critical value threshold or thresholds are user-defined. For example the test can return the field angle where inductance reaches 50%. To do this, the test will find the maximum and minimum inductances measured during the test, scale the difference as 100% and will find the field where inductance was closest to 50%.

More than one critical value can be specified, but they need to be separated by semicolon. If the critical value number has "%" sign next to it, then the software will determine the value to look for first (using min and max inductance). If there is no percent sign, then the software will look for the actual inductance value. For example 0.5 would indicate 0.5rH to the software, while 30% would indicate (Lmin+0.3*(Lmax-Lmin)).

11.1 Setup Parameters

Average	This is how many measurements to take at each field. Note that this parameter does not apply to LSATOffset calculation (extracted from LSATOffset).
Write Current (mA)	The write current to be applied during the test. Note that the head may start to heat up with high enough current. The heating process is somewhat slow and as a result this may be interpreted as a change due to field. To avoid this, use preconditioning parameters to preset current and delay and allow the head to reach its operating temperature.
Field Magnitude Oe	The magnitude of the field vector to be applied during the test.
Field Angle Sweep	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to 0Oe.
	0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -90;-45;0;10;20;30;40;50.

Critical Value(s) %	Semicolon separated critical values. The values can be numeric, or a
	number followed by the "%" symbol. The difference is explain the
	introduction for this test.

11.2 Results

Relative	Inductance value, is the statistical result (Ave, Max, Min etc) from
Inductance rH	the rH in raw data. The rH in raw data is the relative inductance at
	each field angle. Each data point is the delta between the inductance
	and the LSATOffset parameter.
Critical Field Pos	The field angle where the critical value was found. The software
<#>	discriminates between positive and negative angles – this result
	reports the value found among positive field angles, including 0.
	For each critical value, the test will add a "Critical Field Pos <#>"
	result. For example the first critical value will be "Critical Field Pos
	1". The returned result will be in degrees.
Critical Field Neg	The field angle where the critical value was found. The software
<#>	discriminates between positive and negative angles – this result
	reports the value found among negative field angles, including 0.
	For each critical value, the test will add a "Critical Field Pos <#>"
	result. For example the first critical value will be "Critical Field Pos
	1". The returned result will be in degrees.
	1

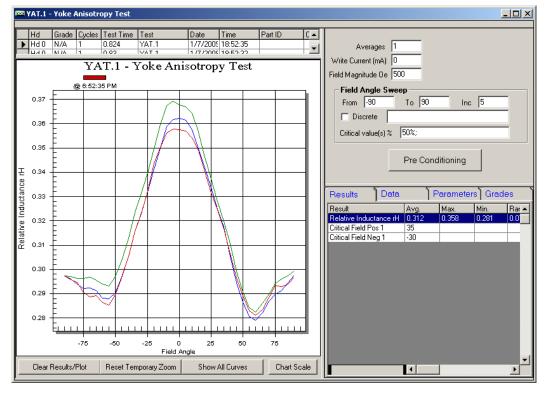


Figure 11-2 – YAT Example Printout

12 YAT Sweep – Yoke Anisotropy Bias Sweep Test

This is a implementation of YAT test which also sweeps write current. At each field angle during the sweep, the test will sweep through write currents. At each write current, the test measures the width of the waveform at a user defined threshold.

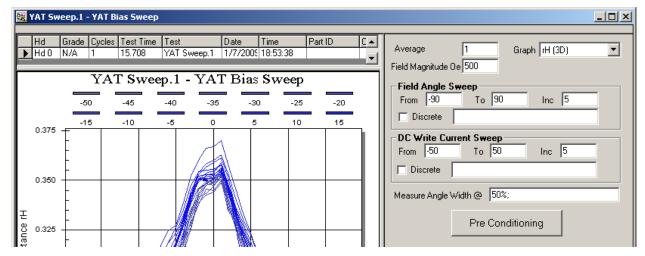


Figure 12-1 - YAT Sweep Parameters

The test can plot all field angle curves superimposed, if graph rH (3D) is selected, or just plot the angle width. This plotting option can be changed after the test runs. With the 3D option, inductance waveforms are plotted using different accent of the same color. The test also supports displaying multiple results. With this the new result will be plotted using a different color.

12.1 Setup Parameters

Average	This is how many measurements to take at each field.
Field Magnitude (Oe)	The magnitude of the field vector to apply during the test.
Field Angle Sweep	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to OOe.
	0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -90;-45;0;10;20;30;40;50.
Field Angle Critical Value(s) %	Semicolon separated critical values. The values can be numeric, or a number followed by the "%" symbol.
Write Current From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to 0mA. Write current sweep occurs at each field angle.
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -50;-25;0;1;2;3;4;5;6;10;12;16.

Graph rH(3D) / Angle	User can select to plot the full set of data: rH(3D) vs field vs write current); or Angle Width vs Write Current.
Measure Angle Width @	This is the inductance threshold, which will be used to find two field angles: positive and negative. The field angle width result, is the delta between positive and negative field angles.
	More than 1 field angle width threshold can be specified, which simply generate more results: Angle Width 2, Angle Width 3, etc. The first field angle width will be used to calculate "Critical Field Angle" result.

12.2 Results

Critical Field Angle	This is the difference between positive and negative angles in degrees, where the threshold crossed "measure angle width @" parameter. This value will be calculated for each write current sweep and placed into raw data. Then the statistics of "Critical Field Angle" result will be calculated.
Angle Width <#>	The second and subsequent "Measure Angle Width @" parameters will generate "Angle Width 2", "Angle Width 3" and so on results. This results cannot be displayed on the plot.

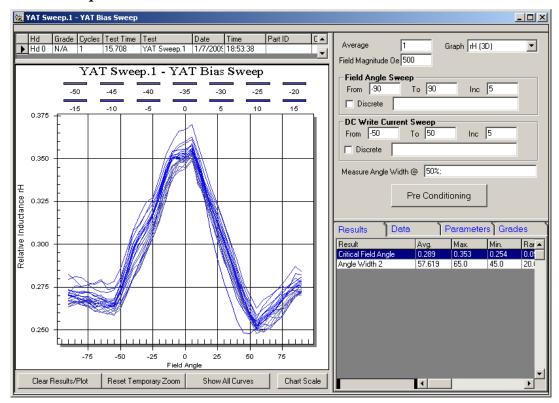


Figure 12-2 – YAT Sweep Example Printout

13 YHDFT - Yoke Hysteresis-Domain Field Test

The YHDFT applies positive and negative fields for a specified number of cycles and monitors writer inductance. The test reports writer inductance at positive field, negative field and the difference between them. Fixed write current value can be applied during this test. User can also specify field angle and the number of measurements to take an average from in each cycle.

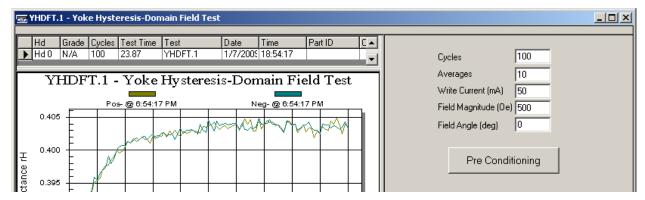


Figure 13-1 – YHDFT Parameters

13.1 Setup Parameters

1	
Cycles	The number of times to toggle the field (one cycle is set positive field and then set negative field).
Average	This is how many measurements to take an average from at each cycle and field. Each point on the plot will represent an average of several measurements.
Write Current (mA)	The write current to be applied during the test. Default value is 0mA.
	Note that the head may start to heat up with high enough current. The heating process is somewhat slow and as a result this may be interpreted as a change due to field. To avoid this, use preconditioning parameters to preset current and delay and allow the head to reach its operating temperature.
Field Magnitude	The magnitude of the field to apply in each cycle. This value must be
(Oe)	positive.
Field Angle (deg)	The angle of the field to be applied during the test. 0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).

13.2 Results

Inductance Pos rH	Relative Inductance value at positive field. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. Each data point is the delta between the inductance measured and the LSATOffset parameter. This is plotted in yellow color.
Inductance Neg rH	Relative Inductance value at negative field. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. Each data point is the delta between the inductance measured and the LSATOffset parameter. This is plotted in blue color.

Inductance Delta rH	The difference between inductance value measured at positive field and negative field. This is also plotted in red color.
Hysteresis	The area between the positive and negative inductance curves.

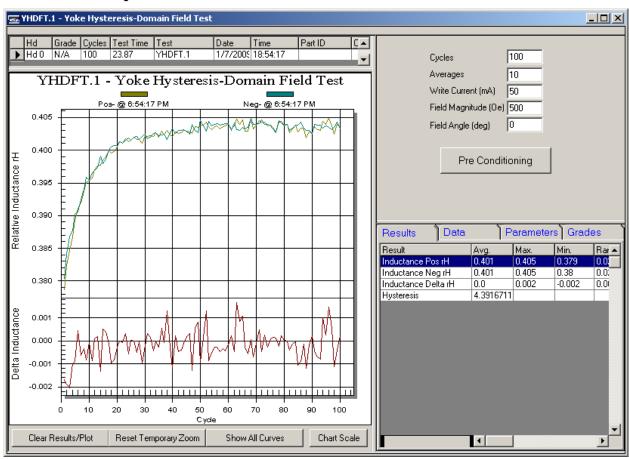


Figure 13-2 - YHDFT Example Printout

14 YHDIT - Yoke Hysteresis-Domain I-Bias Test

The YHDIT applies positive and negative write current for a specified number of cycles and monitors writer inductance. The test reports writer inductance at positive, negative write current and the difference between them. Fixed field can be applied during this test. User can also specify field angle and the number of measurements to take an average from in each cycle.

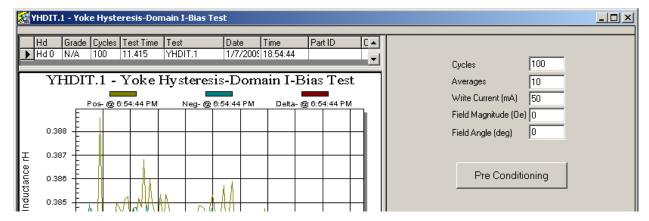


Figure 14-1 – YHDIT Parameters

14.1 Setup Parameters

Cycles	The number of times to toggle the field (one cycle is set positive field and then set negative field).
Average	This is how many measurements to take an average from at each cycle and field. Each point on the plot will represent an average of several measurements.
Write Current (mA)	The write current to be applied during the test. Default value is 50mA. This value must be positive.
Field Magnitude (Oe)	The magnitude of the field to apply in each cycle. Default value is 0.
Field Angle (deg)	The angle of the field to be applied during the test. 0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).

14.2 Results

Inductance Pos rH	Relative Inductance value at positive write current. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. Each data point is the delta between the inductance measured and the LSATOffset parameter. This is plotted in yellow color.
Inductance Neg rH	Relative Inductance value at negative write current. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. Each data point is the delta between the inductance measured and the LSATOffset parameter. This is plotted in blue color.
Inductance Delta rH	The difference between inductance value measured at positive write current and negative write current. This is also plotted in red color.
Hysteresis	The area between the positive and negative inductance curves.

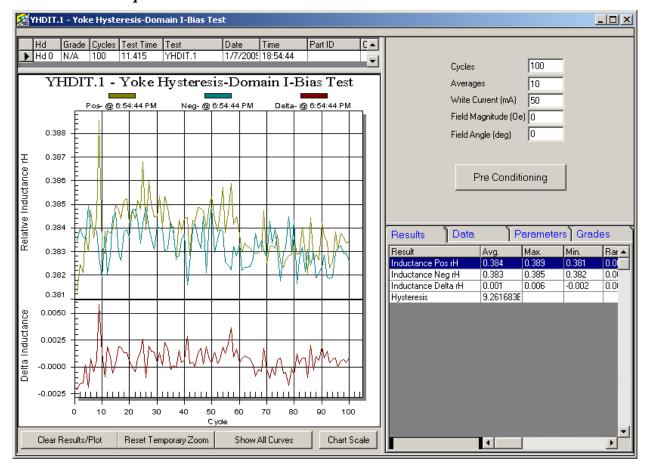


Figure 14-2 - YHDIT Example Printout

15 MMT – Magnetic Memory Test

The MMT sweeps field, field angle or write current in one direction and then in the opposite direction, and shows if there is any difference between the two sweeps. The test helps expose residual inductance value caused by applying field, angle or write current.

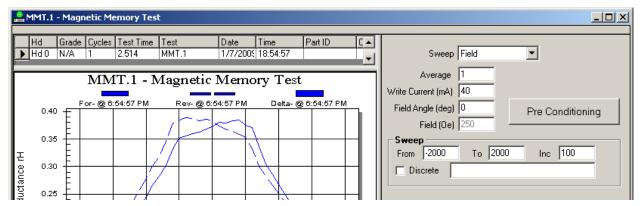


Figure 15-1 – MMT Parameters

Test can only sweep one parameter at a time. The sweep parameter is selected by the user. There are write current, field angle and field settings, but one of those will not be used depending on what sweep parameter is selected. For example if field sweep is selected, then "Field (Oe)" will not be used.

The sweep pattern can be set by specifying from, to and increment, or by setting discrete values. The sweep pattern can go from negative to positive or back, the increment can stay positive all the time. As a result the test will show forward sweep as a solid medium thickness line; reverse sweep as a dashed medium thickness line, and the difference between the two as a thick solid line.

The test supports multiple setups, so if for example user needs to sweep both the field and the angle, then another setup of the test can be added and different sweep parameter selected there. Test also supports display of multiple results on the same plot. Different runs will be discriminated by color.

15.1 Setup Parameters

1	
Sweep Field/ Angle/WriteCurrent	This tells the test which parameter user would like to sweep. Choices are Field, Angle or Write Current. For the parameter that is being swept, but single setting will be grayed out.
Average	This is how many measurements to take at each field. Note that this parameter does not apply to LSATOffset calculation (extracted from LSATOffset).
Write Current (mA)	The write current to be applied during the test.
Field Angle (deg)	The angle of the field to be applied during the test. 0 degrees is considered Transverse; 90 degrees is considered Longitudinal (counter-clockwise if looking at the magnet from the tooling side).
Field (Oe)	The field magnitude to be used in the test.
Sweep From, To and Increment	The sweep parameters for the test. The From can be positive negative or zero, and so is To parameter. Increment parameter cannot be set to 0. Depending on the sweep option chosen, then units will be in Oe, degrees or mA.
Discrete	If this option is turned ON, then the From To and Inc are ignored, and the semicolon separated values from the adjacent textbox are used. For example -2000;-2500;0;100;200;300;400;500;.
Graph (rH)	This option allows to user to choose whether to plot the Slope or the Inductance. This has no effect on the statistical results or Data.

15.2 Results

Inductance Pos rH	Relative Inductance value measured in forward sweep. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. Each data point is the delta between the inductance measured and the LSATOffset parameter. This is plotted in medium thickness solid line.
Inductance Neg rH	Relative Inductance value measured in reverse sweep. This is the statistical result (Ave, Max, Min etc) from the rH in raw data. Each data point is the delta between the inductance measured and the LSATOffset parameter. This is plotted in medium thickness dashed line.
Inductance Delta rH	The difference between the Inductance Pos and Inductance Neg results.
Hysteresis	The area between the forward and reverse inductance curves.

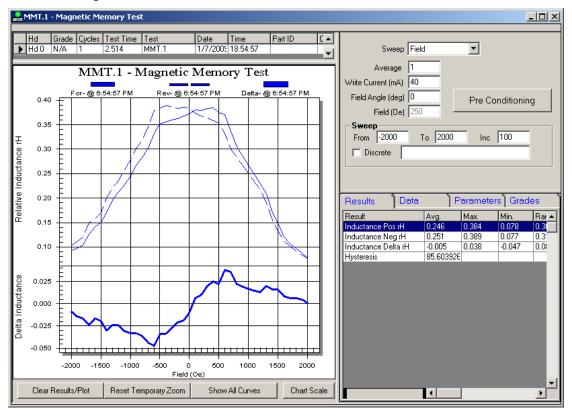


Figure 15-2 – MMT Example Printout

16 Writer_Res - Writer Resistance Test

The Writer_Res test measures resistance of the writer by using RIA-2008 hardware. User can set write current, field and the number of iterations.

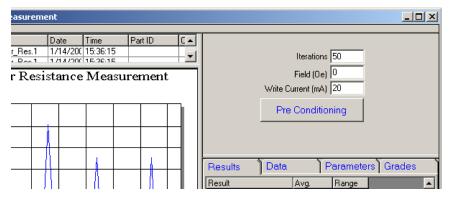


Figure 16-1 – Writer_Res Parameters

16.1 Setup Parameters

Iterations	The number of measurements to take to calculate AVG resistance. Minimum is 1 and maximum is 1000, with the default set to 3. Each measurement will be shown under the DATA tab, and on the plot.
Field (Oe)	The field in Oe at which the test should measure the writer resistance. This is limited to maximum field, specified in the system menu.
Write Current (mA)	The write current to be applied during the test.

16.2 Results

Resistance (ohm)	Writer resistance.
------------------	--------------------

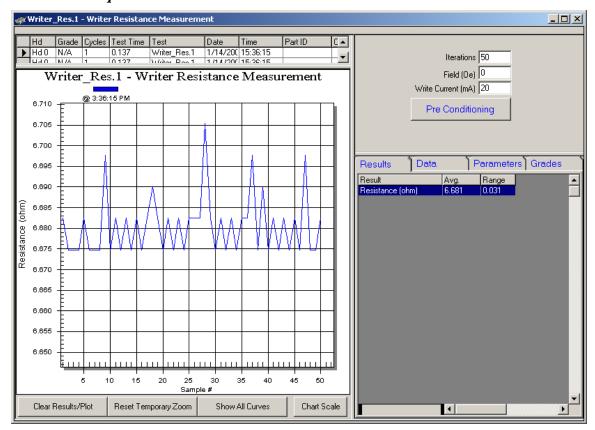


Figure 16-2 - Writer_Res Example Printout


17 Calibration

17.1 Inductance


Inductance calibration is performed at the factory and does not need to be recalibrated by user. Even though the absolute value may differ from tester to tester, the RIA-2008 tests produce relative inductance results which correlate from system to system. If additional normalization is needed, it is recommended to use custom results, or normalization parameters in Quasi97. The following brief explanation of the calibration process is for reference only.

The inductance calibration involves mounting two inductors (3nH and 4nH) of known value to the end of the SMA cable. There is a button "Calibrate Inductance" in the ISI2010 software, that runs the calibration procedure. To calibrate:

- 1) Mount one 3nH inductor
- Open ISI2010→ 2xMB16→RIA diagnostics menu

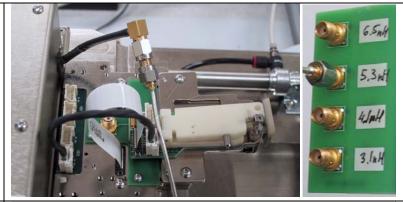

- 3) Click Calibrate Inductance button
- 4) Click OK button
- 5) Mount the 6.5nH inductor
- 6) Click OK button
- Click "Write to eeprom" to save the calibration values.

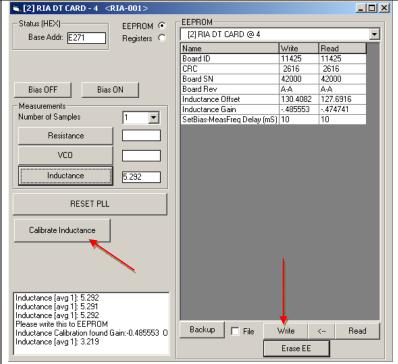


17.2 Magnet

The magnet has two calibration factors: one for transverse coil and the other one for longitudinal. The calibration factors can be found on a sticker outside of the magnet. These are stored in the QPS Splitter eeprom and are set in Quasi97 automatically.


When receiving the upgrade, it may be necessary to update the field gain factor in the QST-2002→Mainboard eeprom. This will help avoid "Maximum Field out of range" error message during loading of a setup file. To do this:

- 1) Go to Quasi97→Diagnostics
- 2) Double click in the center of the menu and enter the password: "Quasi97"
- 3) In the mainboard eeprom (on the left), change the "Magnet Gain" to 350, or whatever it says on the the quad-pole magnet sticker.
- 4) Also change magnet resistance to 0.
- 5) Click Write EEPROM button to save this.


Field calibration for the Quad-pole magnet cannot be done in Quasi97 - use QPS Splitter software instead. To access QPS Splitter menu, run QPS Splitter application by itself, or go to Quasi97→Add-Ins→Peripherals→Field Splitter. Then go to "Diagnostics" menu from there to calibrate the magnet.

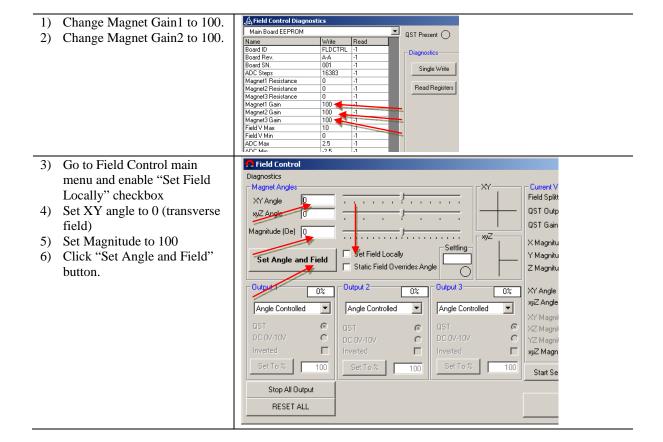

- 7) Insert the special gaussmeter tool into the magnet in the transverse field orientation.
- 8) Note the measurement on the gaussmeter (A).
- 9) Set the XY Angle to 180 degrees.
- 10) Click "Set Field and Angle"
- 11) Note the measurement on the gaussmeter (B).
- 12) Calculate (abs(A)+abs(B))/2 and put the result into the field splitter Diagnostics menu → Magnet1 Gain.

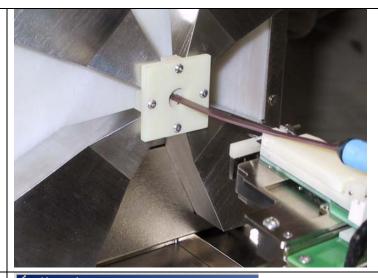


- 13) Insert the gaussmeter probe in the longitudinal orientation
- 14) Set XY Angle to 90 degrees
- 15) Click "Set Field and Angle"
- 16) Note the readout on the gaussmeter (C)
- 17) Set XY Angle to -90 degrees.
- 18) Click "Set Field and Angle"
- 19) Note the measurement on the gaussmeter (D).20) Calculate (abs(A)+abs(B))/2
- 20) Calculate (abs(A)+abs(B))/2 and put the result into the field splitter Diagnostics menu → Magnet2 Gain.
- 21) Click "Write EEPROM" in the field Splitter Diagnostics Menu.
- 22) Restart the software.

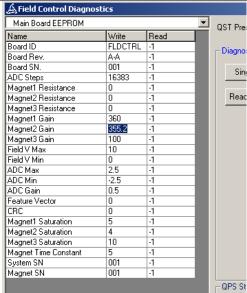

17.3 Magnet Alignment

The magnet position will depend on the type of cartridge installed: UP or DOWN. The height of the magnet is also adjustable. The following procedure shows how to adjust the magnet:


1) The magnet is held by 4 screws at the base. Loosen all 4 screws as shown on the picture.

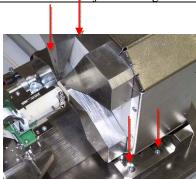


- 2) Move the magnet such that the head in the tooling is in the midpoint between the 4 poles.
- Tighten the screws. One of the screws may be hard to access, use a shorter wrench to access it



- 4) On the back of the magnet loosen the 4 screws.
- 5) Use the Vertical alignment screwn (V) to move the magnet UP and DOWN.

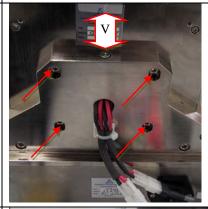

- 6) Use the HGA to determine the best height of the magnet.
- 7) After the magnet alignment is done, secure the 4 screws on the back of the magnet.

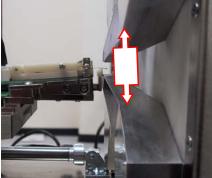

18 Tools

18.1 QPS Splitter Option

Refer to External Tests manual for more information on this option.

18.2 ISI2010 Diagnostics

The RIA Controller module diagnostics can be engaged in standalone mode by using ISI2010 Diagnostics shortcut. This will bring up a menu where RIA eeproms and control register can be found. Navigate to ISI2010 \rightarrow 2xMB16 to open its diagnostics menu.

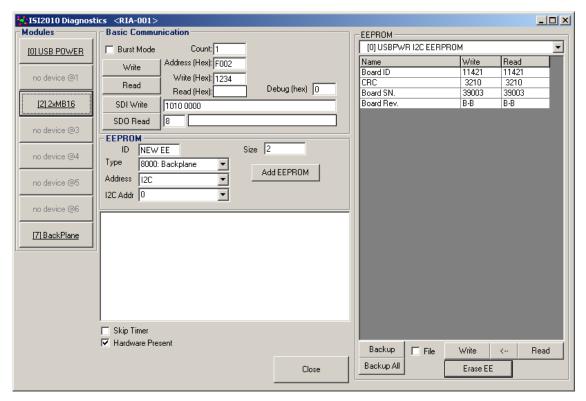


Figure 18-1 - ISI2010 Diagnostics Menu

18.3 Hall Effect Cartridge

The standard hall effect cartridge will not work with the new magnet, because the gap is much smaller than on standard HSA magnet.



Figure 18-2 - Hall-Effect Cartridge

18.4 Quad-Pole Magnet Calibration Adaptor

This tooling helps position the gaussmeter probe at the center of the uniform field and at the right angle to the generated field. This adaptor is made especially for HGA quad-pole magnet. The gausmeter probe can be inserted in transverse or longitudinal directions.

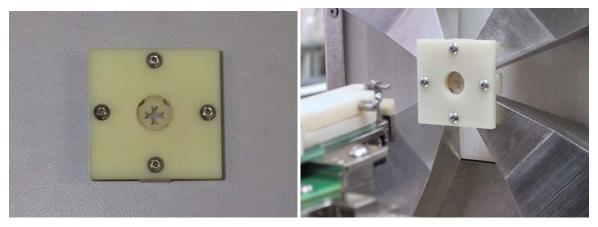


Figure 18-3 – Quad-pole Magnet Calibration Adaptor



Figure 18-4 – Gaussmeter Probe

19 Troubleshooting

19.1 FAQ

XXXXX Board not detected	During Initialization the QST 2002 reads all board EEPROM's and verifies board communications. No system has every board we have built so it is to be expected that some boards will not be detected during startup. If the board not detected is a board you believe you have please contact ISI.
The inductance level at higher write currents becomes higher	This can occur if the 4-pin writer cable is connected on the cartridge. In this case the preamp chip will interfere with RIA measurements. The 4-pin writer cable on the 2xHGA cartridge should not be connected when running RIA tests.

20 Appendix A – RIA Measurements

Introduction to RIA Measurements

Integral Solutions International Revision 10/28/2008

ISI Confidential Information

20.1 Perpendicular Write Head Structure

A simplified sketch of perpendicular head is shown in Fig. 1.

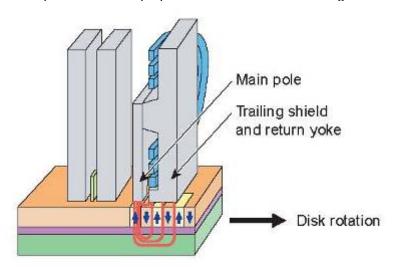


Figure 1. Perpendicular write head structure

The Read sensor is located in the left part of this figure and the Write head is on the right. The Write head can be represented as a coil wrapped around the magnetic yoke. As write current is applied to the coil magnetic flux is induced in the yoke. This flux propagates to the recording pole and generates perpendicular magnetic field at the pole surface, adjacent to the magnetic media. This field has perpendicular direction. Modern write heads generate more than 10000 Oe (1 Tesla) field at the ABS of the pole. This field is sufficient to exceed coercivity and to reverse magnetization of recording media (transition recording). Magnetic flux propagates to the media through the soft underlayer (green layer) to the return pole (right region of write head).

A more detailed cross-section structure of the typical perpendicular recording head is shown in the next figure. The write coil is wrapped around the main pole (main yoke) – a massive piece of magnetic material above the recording pole. The main pole is usually recessed from the ABS. In some designs the coil is wrapped around the upper (horizontal layer of the) yoke, closing the gap between the trailing,

main, and return poles. In some head designs the trailing and return poles are not magnetically connected to the main pole (floating poles).

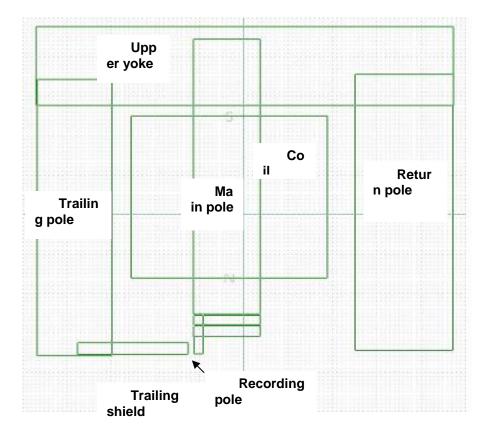


Figure 2. Perpendicular write head cross-section structure

The trailing pole is connected to the trailing shield. The trailing shield edge is adjacent to the recording pole with pole-shield separation ranging from 30 to 200 nm. The trailing shield closes part of the magnetic flux from the recording pole to the trailing pole. As a result, the effective field in the media is tilted from perpendicular direction which can be advantageous for media switching.

Approximate cross-track geometry of the main pole, coil, and recording pole is shown in the figure below. The transition between the wide main pole and narrow recording pole is provided by the triangular flare region. The function of the flare is to concentrate magnetic flux in the recording pole. Flare shape, angle, and dimensions vary for different head designs. Many heads feature double flare angles which optimize flux conduction to the recording pole region.

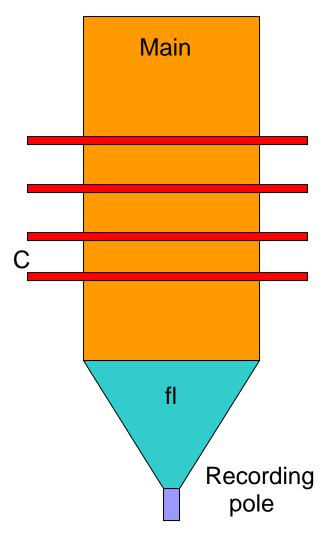


Figure 3. Simplified cross-track geometry section of recording pole

20.2 Inductance Saturation using DC Write Current – LSATI test

DC write current supplied to the write coil generates magnetic flux in the yoke and saturates the head. As the write current value is increased, higher saturation is achieved and inductance is decreased. This basic effect is demonstrated using LSATI RIA test, shown below.

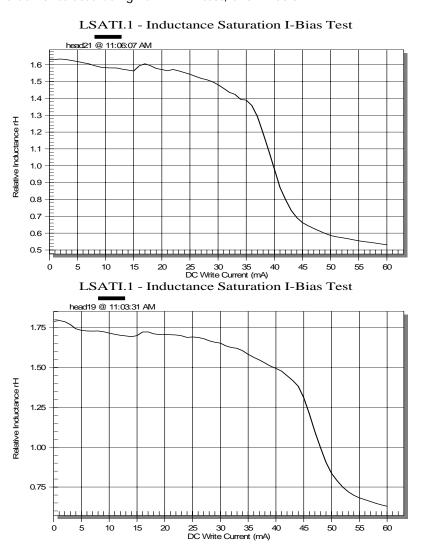


Figure 4. LSATI current sweep for efficient (top) and less efficient (bottom) sliders of the same design. The DC current required to achieve a 50% decrease of inductance varies from 40 mA (top) to 47 mA (bottom)

For smaller DC currents the change of inductance is small and noisy. This is related to multi-layer magnetic structures in the pole/flare regions and random changes of domain configuration. For larger currents inductance roll-off is more pronounced. Highly efficient write head saturates faster. For example, the top graph shows significant drop of inductance for I=40 mA, while the bottom graph requires approximately 47.5 mA for the same change of inductance. This indicates that the head, shown

on the top graph, is more efficient – it develops larger yoke flux for the same amount of write current and, therefore is capable of generating stronger field.

Some heads have significant yoke hysteresis, resulting in non-repeatable inductance measurements. This is caused by domain "lock-up" in the yoke. An example of such domain problem is shown below; multiple sweeps of write current from -60 to +60 mA result in non-repeatable inductance values within the range between -40 and - 20 mA. Domain lock-up problem can translate into non-repeatable transition recording for a certain polarity and write current range, and result in BER degradation.

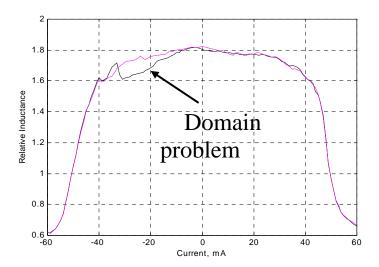


Figure 5. Example of Yoke domain LSATI sweeps.

The LSATI test can be exercised together with the application of an external magnetic field of arbitrary orientation to the write head. This method generates a number of write head signatures that can be important for write head diagnostics, such as enhanced coil—yoke coupling sensitivity, preferable domain orientation in the yoke, and others.

20.3 Inductance Saturation in Magnetic Field – LSATF test (patent pending)

External magnetic field applied to the write head penetrates the yoke and causes multiple effects – shifting domain walls, rotation of magnetization, and yoke saturation. The LSATF measurement is different from the DC current saturation described in the previous section. Yoke saturation caused by DC current is localized in the main pole area, while in this test the entire head is exposed to a uniform magnetic field. The LSATF test provides a higher level of details related to head saturation.

An example of LSATF transverse magnetic field sweep from -2500 to 2500 Oe is shown below.

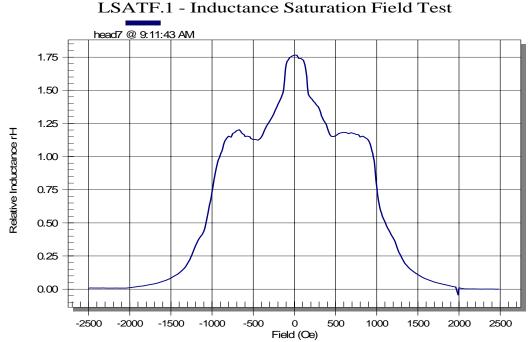


Figure 6. Example of LSATF transverse field sweep, range -2500 to + 2500 Oe.

As seen, inductance peaks at 0 Oe and roll-off is reasonably symmetrical for positive and negative field values. This is not always the case, as will be shown later. A number of inductance kinks can be clearly seen in this figure. The first kink (drop of inductance) occurs at approximately 150 Oe, followed by gradual saturation up to 500 Oe and a flat shoulder between 500-900 Oe.

The first inductance kink corresponds to reconfiguration of the flare region magnetization, mainly due to shift and rotation of flare domains. Gradual saturation is explained by rotation of magnetization in the flare and lower main pole regions. The flat shoulder region corresponds to the field range when the flare region is saturated, while the massive main pole is not reversing its magnetization. Some edge domain rotation occurs in this region, followed by a sharp decrease of inductance in 950-1300 Oe field range. This field range corresponds to main pole region saturation.

The typical LSATF plot described above varies for different head designs. Location of kinks, shape, slope, and inductance level are design-dependent and are unique for each particular head type. The

next graph demonstrates an LSATF plot for two different head designs having longer and shorter yoke length. As seen, the short yoke head has smaller inductance and different kink locations.

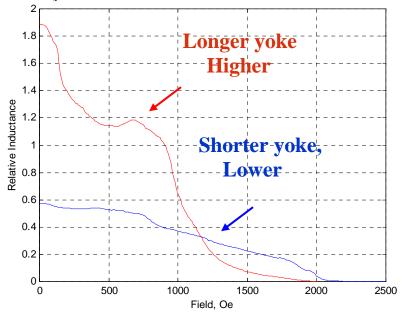


Figure 7. Comparison of LSATF plots for two different head designs. Longer yoke head has higher inductance.

When sliders of the same design are analyzed (e.g. on the bar level) a variation of magnetic properties becomes evident. The next figure shows LSATF plots taken on the same type of heads. Relative inductance levels are similar; however the position of the second kink (shown by oval area) varies from head to head in the range of approximately 150 Oe. These shifts correspond to variation of the yoke permeability, which can be caused by different reasons (material properties, stress etc). For this type of write heads the kink position correlates with head performance – the "stiffer" the yoke (larger field kink) the smaller the overwrite and track width. One particular head has a pronounced difference of inductance and LSATF plot shape (red plot). This slider qualified as "no writing" in dynamic test.

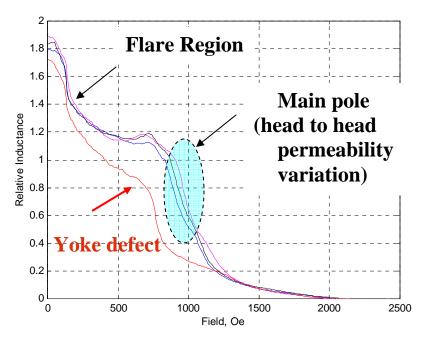


Figure 8. Variation of LSATF test results on sliders from the same bar.

The next graph illustrates write head with strong field polarity asymmetry.

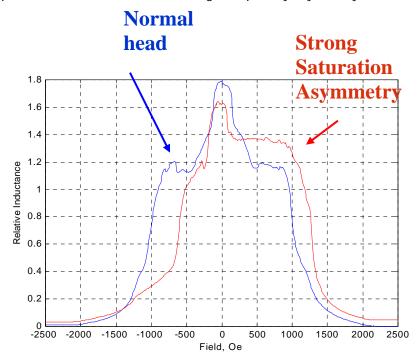


Figure 9. Asymmetrical head response

This asymmetrical LSATF signature indicates strong tilt of yoke/flare magnetization and possibly a special type of magnetic defect, where yoke inductance kinks occur at -600 Oe and +1300 Oe. This results in strong polarity-dependent asymmetry of recorded transitions: one particular direction of write current is preferable for stronger field generation, while the opposite polarity is not favorable.

The LSATF test combines the field-inductance saturation curve with DC current excitation. Polarity of DC current determines direction of the flux, generated in the yoke. For one polarity of the write current combined with transverse magnetic field saturation this flux direction coincides with the external field direction, causing stronger yoke saturation. For the opposite polarity magnetic flux, generated by DC current is opposite to the external field and yoke saturation is decreased.

Additional flux generated by DC current causes shifts of the LSATF saturation curve. An example of such test is shown in the next figure.

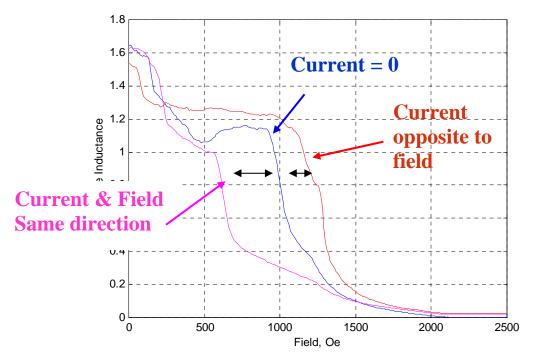


Figure 10. LSATF test with two different polarities of DC current

When DC current is disabled, the inductance kink occurs at 1000 Oe. This field is called the "critical field" in RIA terminology. However, when 30 mA DC current is applied in a direction coincidental with the magnetic field direction the kink occurs at 600 Oe external field. The opposite DC current polarity shifts the kink of inductance to 1200 Oe.

The amount of flux generated by DC current is determined by coil quality and coil-yoke coupling efficiency (i.e. how effective is magnetic interaction between the write coil and the yoke). This test is very sensitive to coil defects: changes of coil geometry, effective number of turns, coil-yoke spacing, and position variations cause differences in inductance kink locations. In many cases this test correlates with dynamic write head performance: parts with larger kink shifts are more effective writers with better overwrite performance and vice versa. The RIA test software determines and reports LSATF critical field shifts for parts screening and diagnostics.

20.4 CYCET: Coil-Yoke Coupling Efficiency Test (patent pending)

This test is designed for analysis of write coil-yoke interactions. The LSATF test sweeps external magnetic field, while CYCET test sweeps DC write current when the magnetic field amplitude and angle are fixed. A simple explanation of the CYCET test is shown in the next figure.

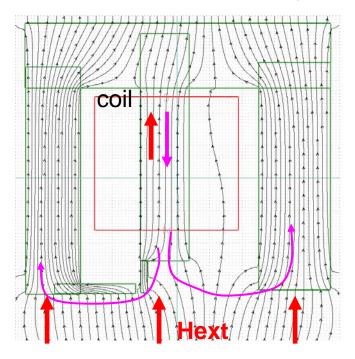


Figure 11. Illustration of CYCET test principle

When the write head is placed in transverse external magnetic field the yoke is partially saturated (magnetization direction is shown by red arrows). The write coil generates magnetic flux which opposes the external field and the main pole saturation is determined by two competing factors: external field and write current. When DC current is swept from smaller to larger values the yoke saturation is decreased and inductance value becomes larger. The CYCET test reports inductance changes for different DC current values. An example of CYCET test for two heads is shown in the next figure.

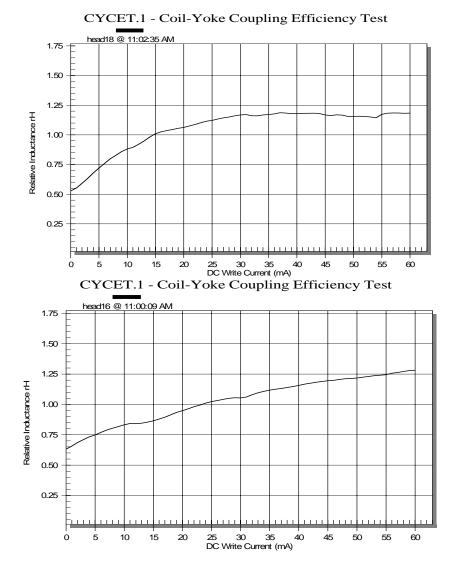


Figure 12. CYCET plots for good (top) and low efficiency (bottom) write heads

The top graph corresponds to write head with good coil-yoke efficiency. Relative inductance is increased by 50% at 10 mA current. The graph at the bottom corresponds to a low efficiency write head: the same level of relative inductance is achieved at 18 mA. The CYCET plot typically correlates with dynamic testing results, in that the smaller values of DC current required to achieve a given inductance level correspond to heads with better OW.

20.5 YDT: Yoke Defect Test (patent pending)

This YDT test is complimentary to the LSATF test and reports two inductance field-saturation sweeps, taken for transverse and longitudinal (cross-track) magnetic field orientations.

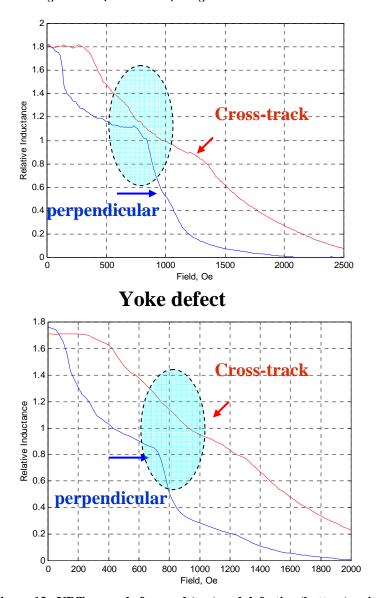


Figure 13. YDT example for good (top) and defective (bottom) write heads

Depending on the write head design and yoke magnetic properties, perpendicular and longitudinal saturation modes generate specific LSATF-type signatures. Perpendicular mode is more natural for write heads (after all this head is designed to generate strong perpendicular field component). Details of longitudinal saturation depend on yoke domain structure (orientation, tilt, etc.) and dimensions. For example, smaller cross-track main pole dimensions result in a stronger demagnetization factor and smaller saturation for the same magnetic field magnitude compared to perpendicular direction.

For a given head design the difference of inductance for transverse and longitudinal magnetic field directions is stable. However, yoke defects, such as variation of yoke dimensions, cavities, and domain structures result in changes of relative inductance levels. The signature of defect types has to be established for different head designs. In extreme cases the longitudinal field saturation is almost non-existent. An example of defective and normal YDT tested heads is shown above. The magnetic field magnitude of 600-1000 Oe has a certain signature for a normal head, such that both inductance values are very close at 800 Oe. However, the defective slider has a large inductance gap in this region. Dynamic testing of this slider resulted in failed OW test and small write signal amplitude.

20.6 YAT: Yoke Anisotropy Test (patent pending)

This test is based on unique multidirectional magnetic field capability of the ISI RIA tester. This test is described below.

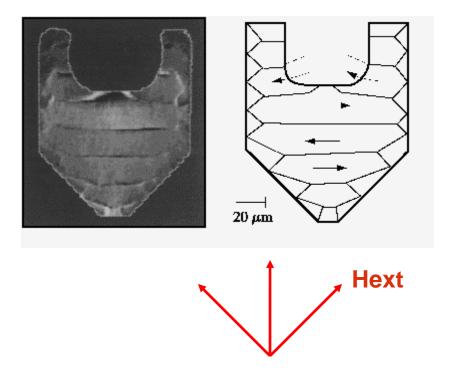


Figure 14. Demonstration of YAT test principle: multiple angle inductance measurement in external magnetic field.

The YAT test provides relative inductance measurements by sweeping the magnetic field angle, where the magnitude of magnetic field is fixed. This provides angle dependence of yoke saturation as the magnetization mode changes from transverse (perpendicular) to cross-track (longitudinal).

The YAT result depends on the magnitude of external magnetic field (refer to the LSATF test description previously described). If the magnitude is selected in the range which corresponds to the flare region saturation, but is lower than the main pole saturation, then the magnetic response of the flare region is highlighted in the test output.

Changes of flare region magnetization have strong dependence on the external magnetic field angle. As the field angle coincides with the characteristic flare angle the saturation mode changes from transverse to cross-track. This change of saturation mode is detected by the steep dependence of the inductance value.

A typical example of YAT test is shown below.

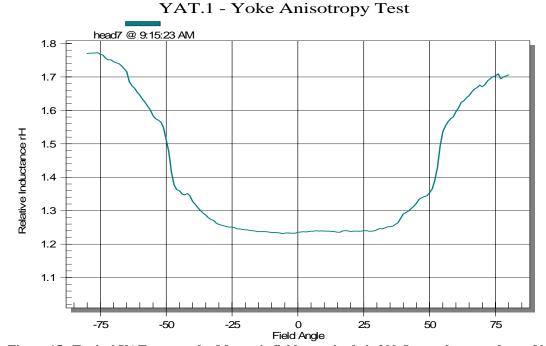


Figure 15. Typical YAT test result. Magnetic field magnitude is 300 Oe; angle sweep from -80 to +80 degrees; transverse field direction corresponds to 0 degrees.

As seen, relative inductance changes are small for the range of angles from -30 to +30 degrees. A steep jump of inductance occurs at -50 and +55 degrees. The nominal flare angle design for this type of write head was 60 degrees; changes of flare angles are observed on individual sliders and correspond to manufacturing variations.

The next figure illustrates YAT tests comparison for different head flare design angles ranging from 25 to 60 degrees. As seen, the typical flare angles are consistently reflected in YAT test result.

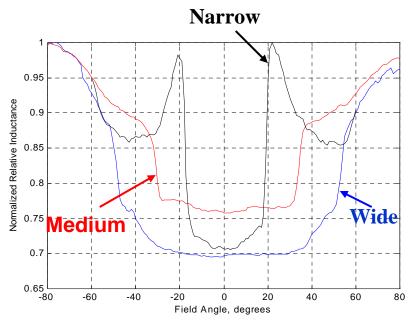


Figure 16. YAT test comparison for 3 different head flare angle designs.

YAT measurements of write heads reveal considerable variations of flare geometry: angles, flare asymmetry, and double-angle features. An example is shown below, comparing two write heads from the same wafer.

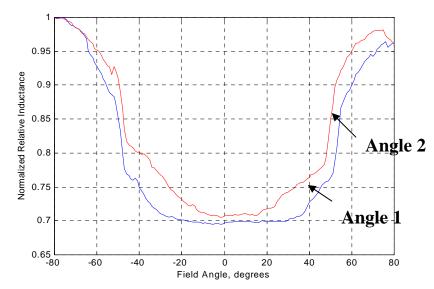


Figure 17. Slider to slider YAT test variation example

As seen, the top trace YAT plot reveals double-angle flare geometry, which is less obvious for the bottom trace. Application of YAT test for production control can become an important diagnostic tool for detection of defective flare samples with degraded performance.

Another application of the YAT test is related to finding preferable magnetization orientation of the flare region (yoke anisotropy). Different head designs may have complicated distribution of yoke anisotropy direction in the flare region. Parallel to the ABS domain orientation shown in Figure 14 is considered to be preferable for optimal head performance, however more complicated transverse-parallel configurations are possible, as well as edge domains may be present.

In some cases magnetic properties of the flare region demonstrate strong angle-dependent asymmetry, indicating effective tilt of anisotropy. An example of asymmetrical head is shown below.

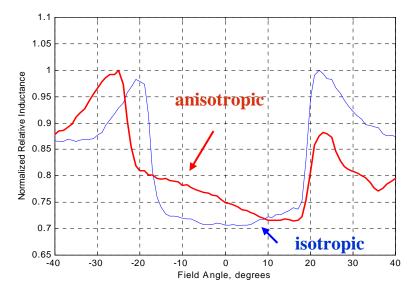


Figure 18. YAT test comparison for isotropic and anisotropic flare region

The red trace (anisotropic head) demonstrates considerable tilt of inductance measurements for positive field angles, while the isotropic slider is symmetrical for both positive and negative field angles. This result demonstrates that the effective magnetization of the flare region is tilted relative to the ABS. This tilt causes write head asymmetry, resulting in different field strength (amplitude, pulse width) for transitions of opposite polarity.

20.7 MMT – Magnetic Memory Test (patent pending)

Some write heads demonstrate considerable hysteretic effects caused by yoke domains lock-up. In some cases the hysteretic effect is caused by coupled multi-layer structures in the pole/flare regions. Excessive hysteresis degrades head performance. The MMT test checks the effect of head memory by sweeping the magnetic field or DC current in two opposite directions and reporting the difference of two inductance measurements. An example of this test is shown below.

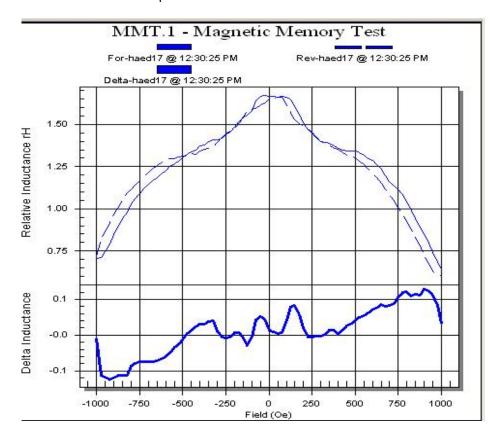


Figure 19. Example of MMT test output. Transverse magnetic field is swept in two directions. The bottom trace is the delta inductance between two sweeps.

Transverse magnetic field is first swept from -1000 to \pm 1000 Oe, and the second sweep is from +1000 to \pm 1000 Oe. The inductance traces are shown on the top, the bottom trace reports the difference of inductance between two measurements. The noisy delta signals in the small field range (-250 to \pm 250 Oe) is caused by multilayer lamination of the pole structure. The maximum delta inductance would be used for head diagnostics, whereas if it exceeds an acceptable level the write head is reported as hysteretic.

20.8 YHDFT and YHDIT: Yoke Domain Tests (Field and write current) (patent pending)

These tests are also looking at the hysteresis effects and domain lock-ups in the yoke. In order to detect hysteresis effects, multiple cycles of inductance measurements are run at a remanent state after consecutive application of DC write current and/or magnetic field.

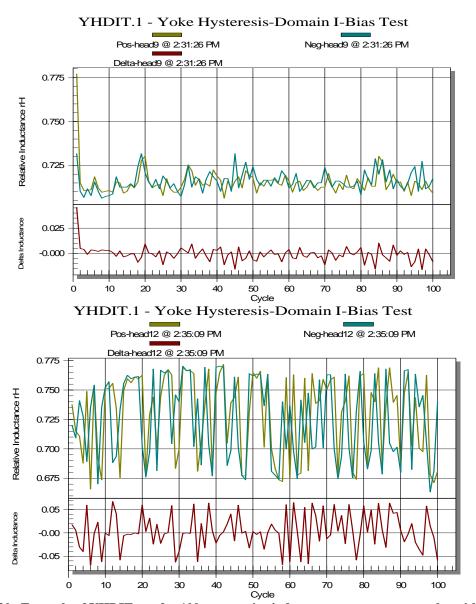


Figure 20. Example of YHDIT test for 100 consecutive inductance measurement cycles with 45 mA write current. Top graph – normal head; bottom – strong hysteresis sample. Two traces are shown in each graph window, bottom trace – inductance difference for two opposite polarities of DC current.

In the above example inductance was measured for 100 consecutive cycles of applying +45 and - 45 mA DC current. The top graph shows normal write head with moderate (10-15 pH) inductance variations

after current stress. The bottom graph is an example of hysteretic head, inductance variation on the order of 0.1 nH.

The next figure illustrates random domain lock-ups in some sliders. This head switches between noisy and quite states during the current stress exercise.

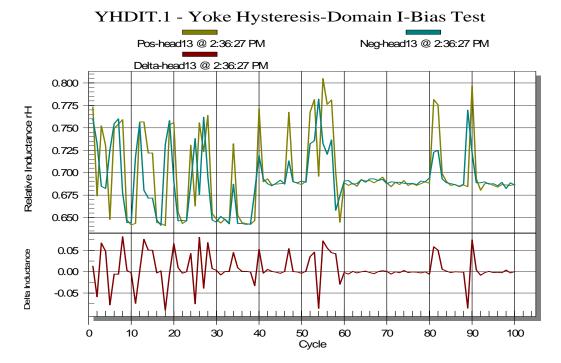


Figure 21. Example of YHDIT test for randomly switching domain in the write head.

Page 83

20.9 Appendix

While every effort has been made to verify the accuracy of the information contained in this document, this document may contain technical as well as typographical errors. This document contains descriptions of products and tests that will evolve over time. Changes and additional information will be incorporated into new editions of this document over time.

The material discussed in this document is considered Confidential Information of Integral Solutions International.

For more information on this material please contact:

Integral Solutions Int'l 3000 Olcott Street Santa Clara, CA 95054 Ph: 408-653-0300 Fax: 408-653-0300

Email: Sales@us-isi.com
Web: www.us-isi.com

21 Appendix B - RIA FAQ

RIA FAQ

Integral Solutions International Revision 10/28/2008

Q: What is RIA?

A: RIA stands for Relative Inductance Analyzer. This is a new device, designed by Integral Solutions International (ISI) for static write head testing and characterization, without need of flying the head. The principle of the RIA measurement suite is characterization of the magnetic part of write head inductance and changes of inductance while applying specific combinations of external multi-directional magnetic fields and DC write currents.

Q: What is write head inductance?

A: Inductance is a basic physical property of the write head. A simplified write head structure is a coil wrapped around magnetic material (yoke). If the yoke is removed (e.g. saturated by magnetic field, or defective) then the write head inductance is decreased. If the yoke dimensions are larger than nominal, the write head inductance will increase compared to nominal. The value of inductance is determined by many factors: yoke magnetic material (permeability), domain structure, geometry, etc. Head inductance changes when DC current and/or magnetic field is applied to the write head. RIA tests measure these small inductance variations and extract information relevant to write head defects and performance.

Q: What is relative inductance?

A: Magnetic write head inductance is extremely small. For most modern write head designs this inductance is lower than 1 nH (nano Henry = 10^{-9} Henry). For comparison, parasitic electrical inductance of interconnect and cables is orders of magnitude higher. Even slight misplacement of the interconnect cabling can change inductance by several nH.

In order to discriminate between the head inductance and parasitic inductances due to such things as cabling the parasitic inductance has to be removed. This is achieved by saturating the write head in a sufficiently strong magnetic field (2500 Oe for ISI RIA system). When the magnetic field is applied, the write head yoke saturates, and its inductance drops to zero value. The residual measured inductance value determines the measurement baseline and equals to the total electrical inductance of cabling, interconnect, probe and the write coil. RIA measurements are taken by subtracting this baseline from the write head measurement (relative measurement), and thus corresponds to the magnetic inductance contribution of the write head.

To measure this small write head inductance contribution the RIA provides an extremely high resolution (+/- 1 pH = 1/1000 nH) relative inductance measurement. This is achieved by applying a small (about 1 mA) 250 MHz tickling signal to the write head coil and using a proprietary ISI circuitry for discriminating parasitic and magnetic contributions to inductance.

Q: Can RIA measure absolute inductance?

A: Standard RIA tests report relative inductance values. In a general sense there is a possibility to calibrate the ISI RIA system to report absolute inductance values. This requires a fixed setup configuration and a known calibrated sample with small (several nH) inductance value. The calibration

should be done with extreme care, keeping in mind that any minor change of the system, such as disconnecting and connecting cables or replacing the probe will cause baseline shift equal to, or exceeding the calibration value.

Q: What is the frequency of ISI RIA Measurement? Can this frequency be changed?

A: Standard ISI RIA system measures a single frequency inductance value at approximately 250 MHz. This is the only frequency point for RIA analysis; the frequency can not be swept. This measurement frequency was carefully selected based on extensive research:

- Inductance frequency response of modern write heads is practically uniform from near-DC to 300-400 MHz range. This means that 250 MHz measurement is similar to inductance measured at lower or higher frequencies.
 - This frequency is within the typical write head operating range of the disk drive.
- 250 MHz frequency provides a high measurement resolution while still allowing the usage of conventional probes for Wafer/Bar/Slider testing and conventional pogo-pin interconnects for HGA testing, and also is well within the operating bandwidth of the HGA flexure.

Some frequency modifications (210-380 MHz) are possible, but require hardware redesign by ISI.

Q: What new information can be obtained using RIA testing?

A: The short answer is: almost all information obtained with the RIA system is new. Currently write heads are not tested statically on Bar/HGA level with the exception of basic resistance and, in some cases, wafer-level inductance. Resistance and wafer-level inductance testing allow the user to discriminate major electrical interconnect and coil defects, such as defective (electrically open) or shorted writers. Otherwise, dynamic spinstand testing remains the only way to characterize write head performance.

RIA testing provides detailed information about magnetic properties of write heads. A number of advanced RIA tests are based on inductance changes caused by DC write current and multi-directional magnetic field. This allows detailed characterization of yoke magnetic properties and defects (permeability variations, domain and stress-induced anisotropy, hysteresis, magnetostriction) and coilyoke interactions (efficiency of head magnetic circuit). Slider-to-slider variations of RIA measurements usually correlate to results of dynamic tests (magnetic write width, overwrite, write asymmetry). A unique feature of the ISI RIA system is multi-directional magnetic field testing, which allows characterization of yoke magnetic anisotropy and flare geometry and magnetic response. All these features allow early bar-level, or perhaps wafer-level, production detection of write head defects.

Q: Can recording pole defects be characterized using RIA testing?

A: Recording pole defects (such as corrosion), nose length and pole width variations have strong impact on write head performance. However, RIA measurements mainly provide information about the yoke, flare, and write coil. The recording pole is too small (100 nm or less) to be detected using an inductance method. A rough analogy of inductance is object mass (weight). The typical scale of yoke, trailing and return poles is comparable to multi-story building, while the recording pole itself is similar to a tiny TV antenna on the building's roof. Measurement of this antenna weight vs. the entire building is virtually impossible (especially taking into account that total head inductance is about 1 nH or less).

While the pole signatures in RIA measurements are extremely small, the issue of pole defect detection with RIA is still under investigation. In some cases (such as strong pole corrosion) certain

inductance-field saturation changes can be detected. Similarly, nose length variations often correlate with head saturation, however a most plausible interpretation of these results is that the correlation is mainly caused by changes of domain configuration in the flare region, dependent on the actual pole nose length.

Q: Can RIA measurements characterize write head rise time and data rate performance?

A: No. Write head rise time is related to frequency roll-off of inductance, which typically occurs in 1-3 GHz range. This roll-off can be measured with a wide bandwidth network analyzer and high frequency probes. The ISI RIA system is designed for a single 250 MHz frequency and is not capable of frequency sweep.

Q: How to setup RIA tests for selecting good/defective write heads?

A: Inductance changes caused by DC current and magnetic field generate a specific head signature. This signature contains a number of features, such as inductance kinks, corresponding to saturation of different yoke regions and their shifts depending on DC current and external field angle. These signatures are determined by specific head designs – yoke dimensions, material properties, coil design and others. Understanding and interpreting these detected features often require detailed knowledge of the head design and micro-magnetic modeling.

Major yoke and coil defects can be usually detected comparing changes of relative inductance with or without nominal DC current, DC field, or exercising the write coil with simultaneous external field bias. More detailed analysis (e.g. selecting "weak" writers with insufficient overwrite) requires a well-established baseline. This baseline can be generated by comparing a set of normal and defective structures and exercising standard RIA tests, such as inductance-current saturation, current-field saturation, coil-yoke coupling, hysteresis, yoke anisotropy, and others. Once a "normal" head signature is established the defective sliders can be detected by comparing a set of measurements of any test sample vs. the established baseline.

Once again, remember to compare apples with apples: design modifications of write head material and geometry will likely require generating a new baseline.

Q: How does the ISI RIA system compare to commercial LCR meter and Network Analyzers? What are advantages and disadvantages of ISI RIA compared with network analyzer measurements?

A: RIA provides fast (<5ms) and ultra high resolution (about 1 pH = 1/1000 nH) relative inductance measurement with accuracy of +/- 10 pH. This is far beyond the specs of most LCR meters or Network analyzers (typical resolution is higher than 0.1 nH). Another advantage of the RIA system is hardware integration of RIA with standard ISI QST measurements, tooling, and quadrupole magnet control. These unique features provide highly detailed and fast write head inductance characterization.

One "on paper" disadvantage of ISI RIA implementation is that it provides relative measurements. However, in reality most of inductance measurements at less than 1 nH level are not absolute. For example, absolute inductance measurement with Network Analyzer requires special calibration procedures, such as using special probes and calibration substrates. Further, simply changing the setup

from calibration mode to an actual write head measurement may introduce an error comparable to at least 0.2-0.5 nH or more.

Q: Can RIA testing be performed at Headstack (HSA) or Drive (HDD) level?

A: No. RIA testing requires a precise connection between the RIA system and the write head under test. The HSA preamplifier chip is physically placed within the pathway of the head, so there is no direct connection available. This limits RIA functionality to Wafer, Bar, Slider, or HGA level testing.

Q: Can I install the RIA system to my existing ISI QST-2002 HGA System?

A: Yes. The HGA version of the RIA system requires the Quadrupole Magnet and RIA-specific HGA tooling, but these components can be purchased as an add-on kit to be installed by the customer onto any (USB-style) QST-2002 System in the field. To install the RIA system the QST-2002 System must already be equipped with the Gen2 2xHGA Base and Board Assembly, which can be purchased separately.

Q: I know the RIA system works with the new ISI BlazerX6 Bar system. Is the RIA system compatible with my existing ISI BlazerX5 Bar System?

A: No. The Bar version of the RIA system requires the BlazerX6 tester platform. The BlazerX6 platform can be user-converted between standard Gen3 Bar Testing or Quadrupole Magnet bar testing. The Bar version of the RIA system can be user-installed, but requires both the BlazerX6 platform and the Quadrupole Magnet configuration.

Q: What additional RIA test capability is ISI working on?

A: RIA write head testing is a new area of research, and many aspects of the inductance measurements are still under investigation. The ISI research team is pioneering advanced write head inductance characterization research, and working on new test applications and measurements. We have developed new methods for measurement of flare geometry and magnetic response, yoke anisotropy, coil-yoke coupling and others (Patents Pending). As the new ISI RIA system moves to head engineering and development areas, new test applications will continue to be developed.

22 Appendix C – Gen3 Probe Card RIA compatibility

Gen3 Probe card (p/n 112830) needs to be reworked to become compatible with RIA operation. Please contact ISI for more details.

QM G3 Probe card (p/n 114650) and Wafer Probe Card (p/n 114730) do not require additional reworks.

23 LIMITED WARRANTY

Integral Solutions Int'l, a California Corporation, having its principal place of business at 3000 Olcott St, Santa Clara, CA 95054 ("Manufacturer") warrants its Quasi-Static Tester model QST-2001 products (the "Products") as follows:

Limited Warranty

Manufacturer warrants that the Products sold hereunder will be free from defects in material and workmanship for a period of six (6) months from the date of purchase. If the Products do not conform to this Limited Warranty during the warranty period (as herein above specified), Buyer shall notify Manufacturer in writing of the claimed defects and demonstrate to Manufacturer satisfaction that said defects are covered by this Limited Warranty. If the defects are properly reported to Manufacturer within the warranty period, and the defects are of such type and nature as to be covered by this warranty, Manufacturer shall, at its own expense, furnish, replacement Products or, at Manufacturer's option, replacement parts for the defective Products. Shipping and installation of the replacement Products or replacement parts shall be at Buyer's expense.

Other Limits

THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. Manufacturer does not warrant against damages or defects arising out of improper or abnormal use of handling of the Products; against defects or damages arising from improper installation (where installation is by persons other than Manufacturer), against defects in products or components not manufactured by Manufacturer, or against damages resulting from such non-Manufacturer made products or components.

Manufacturer passes on to Buyer the warranty it received (if any) from the maker thereof of such non-Manufacturer made products or components. This warranty also does not apply to Products upon which repairs have been effected or attempted by persons other than pursuant to written authorization by Manufacturer.

Exclusive Obligation

THIS WARRANTY IS EXCLUSIVE. The sole and exclusive obligation of Manufacturer shall be to repair or replace the defective Products in the manner and for the period provided above. Manufacturer shall not have any other obligation with respect to the Products or any part thereof, whether based on contract, tort, strict liability or otherwise. Under no circumstances, whether based on this Limited Warranty or otherwise, shall Manufacturer be liable for incidental, special, or consequential damages.

Other Statements

Manufacturer's employees or representatives' ORAL OR OTHER WRITTEN STATEMENTS DO NOT CONSTITUTE WARRANTIES, shall not be relied upon by Buyer, and are not a part of the contract for sale or this limited warranty.

Entire Obligation

This Limited Warranty states the entire obligation of Manufacturer with respect to the Products. If any part of this Limited Warranty is determined to be void or illegal, the remainder shall remain in full force and effect.