


# Analog Watches with alarm

---

## User's Manual

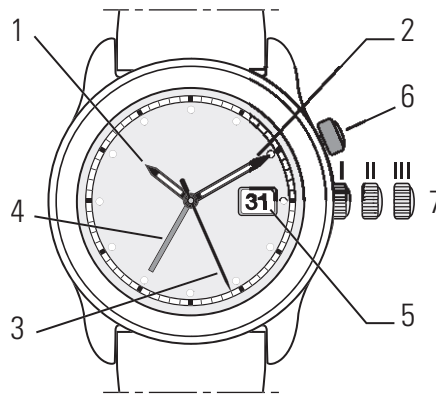

### Display and functions

- ❶ Hour hand
- ❷ Minute hand
- ❸ Seconds hand
- ❹ Alarm hand
- ❺ Date indicator
- ❻ Alarm switch

#### **Crown with 3 positions (7):**

- I Neutral position (not pulled out)
- II Position for adjusting date, month and moon phase (unscrewed\*, half pulled out)
- III Position for setting time and day of the week (unscrewed\*, completely pulled out).

#### **\* Models with a screwed crown:**



- IA** Initial position (screwed down, not pulled out)
- IB** Neutral position (unscrewed, not pulled out)

## Congratulations

We would like to congratulate you on having chosen a watch from TISSOT®, one of the most highly renowned Swiss brands in the world. Meticulously designed, using only the highest quality materials and components, your watch is protected against shock loads, variations in temperature, water and dust.

Unusually easy to set and use, your watch is fitted with a quartz movement with an hours-minutes-seconds-date display and a rare and refined alarm function.

To ensure that your watch operates with perfect precision for many years to come, we advise you to pay very careful attention to the advice provided hereafter. This user's manual is applicable to all analog quartz watches **TISSOT® fitted with an alarm**.



## Setting the time

### Crown in position III

To set the time forwards or backwards, simply turn the crown in the appropriate direction. The date changes just after midnight is reached.

#### Notes:

The seconds hand is stopped whenever the crown is in position III.

The crown **must not** be left in position III: this increases power consumption!



## Rapid correction of the date

### Crown in position II

The date can be corrected rapidly by turning the crown backwards (counter-clockwise).



## Setting the alarm time

### Crown in position II

The alarm time is set by turning the crown forwards (clockwise).



## Switching ON / OFF the alarm

### Crown in position I

#### OFF

Neutral position: alarm off.

#### ON

Pulled out position: alarm on (confirmed by a beep).

## Care and maintenance

We would advise you to clean your watch regularly (except for the leather strap) using a soft cloth and warm soapy water. After immersion in salty water, rinse it in fresh water and leave it to dry completely.

Do not leave it anywhere where it might be subjected to major variations in temperature or humidity, in direct sunlight or near strong magnetic fields.

To benefit from the highest standards of service and to ensure your guarantee remains in force, please always contact an approved TISSOT® representative or retailer.

TISSOT® Quartz watches benefit from the incomparable precision of quartz. Their power reserve usually enables them to operate for more than 2 years in continuous use. If you envisage not wearing your watch for several weeks or months, we would advise you to put it to one side with the crown pulled out into position II. This cuts the electrical power supply to the motor, thereby extending battery life considerably.

### Replacing the battery

Once the battery has run flat, it must be replaced without delay by an approved TISSOT® representative or retailer.

Type : Renata 396 / Service life : about 3 years.